

Contents

The Quick Guide is not intended as substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Entering and Exiting

- 1 Keys ▶P.7
- 1 Theft Deterrent System ▶P.8



Topic 2

Before Driving

- 1 Seats ▶P.11
- 1 Seat Position Memory System ▶P.12
- 1 Front Head Restraints ▶P.13
- 1 Seat Belts ▶P.13
- 1 Outside Rear View Mirrors ▶P.14
- 1 Anti-glare Inside Rear View Mirror ▶P.15
- 1 Steering Column ▶P.15

Topic 3

When Driving

- 1 Starting ▶P.17
- 1 Automatic Transmission ▶P.19
- 1 Parking Brake ▶P.20
- 1 Turn Signal Lever ▶P.20
- 1 Emergency Flasher Switch ▶P.21
- 1 ECT Switch ▶P.21
- 1 TRAC/VSC Off Mode ▶P.21
- 1 Cruise Control ▶P.22
- 1 Trip Information Display ▶P.23



Specifications, features, equipment, technical data, and options are based upon information available at the time of printing, are subject to change without notice, may differ from region to region. Optional equipment shown may not be available separately or in all regions.



Topic 4

Rain and Night Driving

- 1 Headlights ▶P.25
- 1 Fog Lights ▶P.25
- 1 Headlight Cleaner ▶P.26
- 1 Windshield Wipers and Washers ▶P.26
- 1 Rear Window and Outside Mirror Defoggers ▶P.26
- 1 Instrument Panel Light Control ▶P.27

Topic 5

Driving Comfort

- 1 Audio System ▶P.29
- 1 Climate Control ▶P.32
- 1 Seat Heater Switches ▶P.33
- 1 Console Box ▶P.34
- 1 Coin Box ▶P.35
- 1 Cup Holder ▶P.35
- 1 Cigarette Lighter and Ashtray ▶P.35
- 1 Glove Box ▶P.36
- 1 Auxiliary Box ▶P.36



Topic 6

Opening and Closing

- 1 Doors ▶P.39
- 1 Power Windows ▶P.40
- 1 Retractable Hardtop ▶P.40
- 1 Fuel Tank Cap ▶P.41
- 1 Hood ▶P.42
- 1 Trunk ▶P.42

What to do if ...

● Responding to warning/indicator lights and other problems that may arise.


Customizing Your Lexus

● A list of features that can be customized according to owner preference.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

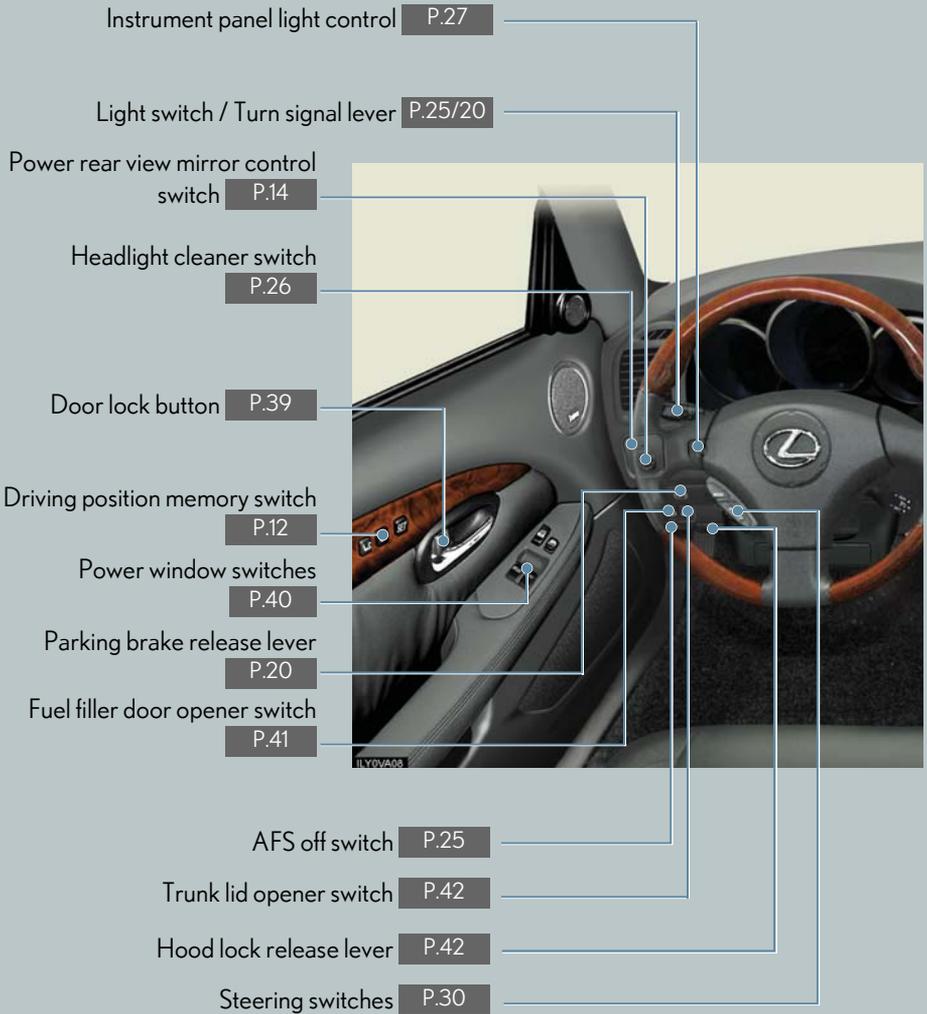



Windshield wipers and washer switch P.26

Emergency flasher switch P.21

Navigation system*
See "Navigation System Owner's Manual"

Climate control P.32

Glove box P.36

Cigarette lighter/Ashtray
P.35

Cup holder P.35

Vehicle stability control off
switch P.21

Coin box P.35

Driving pattern selector switch P.21

Audio system P.29

Cruise control switch P.22

* : If equipped



Topic 1

Entering and Exiting

Keys 7
Theft Deterrent System..... 8



Keys

n Keys



- 1** Master keys
- 2** Valet key
- 3** Key number plate
- 4** Flat key

n Wireless remote control



- 1** **LOCK button** : Locks doors
- 1** **PANIC button** : Sounds alarm
(Push and hold)
(Use this function if you notice anyone suspicious near the vehicle)
- 2** **UNLOCK button** : Unlocks doors
- 3** **Trunk button** : Unlocks trunk
(Push and hold)

Holding down the LOCK button will sound an alarm.
Holding down the UNLOCK button will open the side windows.

Theft Deterrent System

This system is designed to help protect your vehicle from theft.

n Engine immobilizer



This system only allows the engine to start if a registered key is used.

This deters theft caused by the use of unauthorized keys.

n Alarm



Forcibly unlocking the doors, trunk, or hood without the key or wireless remote control causes the horn to blow and the exterior lights to flash, alerting those in the surrounding area.

n Steering lock



The steering wheel is locked when the ignition switch is turned to OFF.

If the security indicator light is flashing when you leave the vehicle, the engine immobilizer and alarm are set.

To stop the alarm, unlock the doors or trunk with the key or wireless remote control, or turn the ignition switch to the ON position.





Topic 2

Before Driving

| | |
|---|----|
| Seats | 11 |
| Seat Position Memory System | 12 |
| Front Head Restraints | 13 |
| Seat Belts..... | 13 |
| Outside Rear View Mirrors | 14 |
| Anti-glare Inside Rear View Mirror..... | 15 |
| Steering Column | 15 |



Seats

n Adjusting seat position



- 1 Moves seat forward
- 2 Moves seat back

n Adjusting seatback angle



- 1 Incline
- 2 Recline

n Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire cushion

n Adjusting firmness



The lumbar support can be adjusted.

- 1 Firmer
- 2 Softer

Inclining front seat



1 Incline

Seat Position Memory System

With the push of a button, you can adjust the seat to a set customized position. The steering column and outside rear view mirrors are adjusted along with the driver's seat. Positions can be conveniently recorded for drivers and frequent passengers.

Setting positions



While holding down the SET button, push and hold one of the memory buttons (1 or 2) until you hear a beep.

Recalling positions



Push one of the memory buttons (1 or 2).



Front Head Restraints

n Height adjustment



To raise: pull upward

To lower: depress the button and push down

n Angle adjustment



Move forward and backward.

Seat Belts

n Seat belt guides



To use the seat belt guide, unattach the hook, let the seat belt run under the guide and then reattach the hook.

n Rear seat belt holders



Hold the rear seat belt with the holder when not in use.

Outside Rear View Mirrors

n Adjustment



1 Use the master switch to select which mirror to adjust (L or R).

2 Adjust the angle using the control switch.

Auto tilt:

Move the master switch to “L” or “R”, Mirrors automatically tilt down when shifting into reverse. To deactivate, move the master switch to middle position.

n Folding rear view mirror



1 Push backward

Anti-glare Inside Rear View Mirror

The auto-dimming function reduces glare from the headlights of vehicles behind you.

n Setting AUTO mode




Push the AUTO button.

The indicator light comes on when AUTO mode is selected.


Steering Column

n Raising and lowering

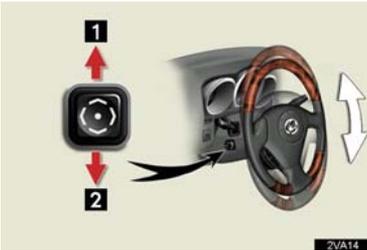

- 1 Up
- 2 Down

n Adjusting forward/back

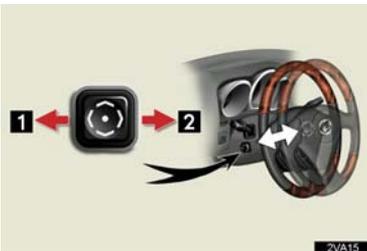

- 1 Away from the driver
- 2 Toward the driver

When the ignition key is removed, the steering column moves to provide easy exit and entry. When the ignition key is inserted, the steering column returns to its previously set position.



Topic 3

When Driving

| | |
|-------------------------------|----|
| Starting | 17 |
| Automatic Transmission..... | 19 |
| Parking Brake..... | 20 |
| Turn Signal Lever..... | 20 |
| Emergency Flasher Switch..... | 21 |
| ECT Switch..... | 21 |
| TRAC/VSC Off Mode | 21 |
| Cruise Control | 22 |
| Trip Information Display..... | 23 |



Starting

n Starting the engine



- 1 Make sure the parking brake is engaged and the selector lever is in "P".



- 2 Depress the brake pedal.



- 3 Turn the ignition switch to START.
The engine will start.

n Turning the engine off




- 1 Depress the brake pedal and move the selector lever to "P".



- 2 Turn the ignition switch to OFF.

n Ignition switch

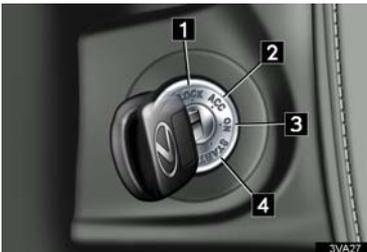

- 1 LOCK
- 2 ACC
The audio system and other accessories can be used.
- 3 ON
- 4 START

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus



Automatic Transmission

Shift range positions

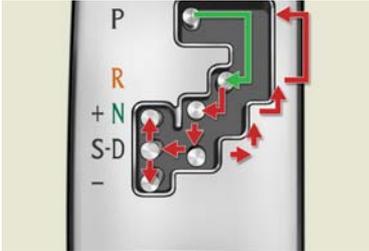


- P Parking and engine starting
- R Reverse position
- N Neutral position
- D Normal driving position
- S Sequential mode driving

Switching out of "P" position can only be performed while the brake pedal is depressed.

Sequential mode

Sequential mode allows the driver to select gears based on driving conditions.

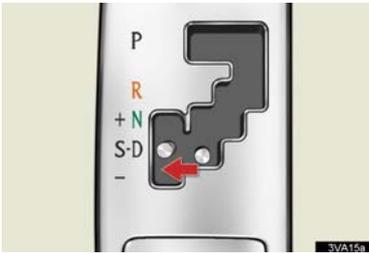

Move the shift lever to the "S" position.



Upshifting : move the lever to the "+" side

Downshifting : move the lever to the "-" side
1st through 6th gear can be selected.

The selected shift range is displayed on the instrument cluster.

NOTE: Downshifting increases power going uphill, or increases engine braking going downhill or stopping.

During normal driving conditions, always drive in "D" position for best fuel economy.

Parking Brake

n Setting the parking brake




Firmly depress the parking brake pedal.

n Releasing the parking brake



Pull the lever.

Turn Signal Lever

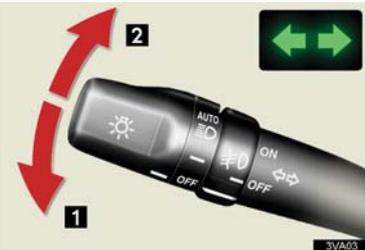

- 1 Left turn
- 2 Right turn

Lane changes can be signaled by moving and holding the lever partway.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Emergency Flasher Switch




All the turn signal lights will flash.

The emergency flashers will work even when the engine is off.

ECT Switch

Use to select a mode suitable to driving and road conditions.

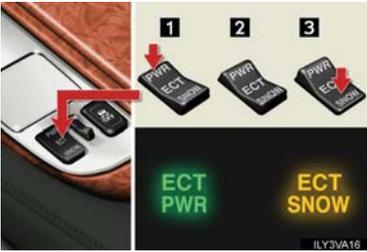

- 1 "Power" mode
For more powerful acceleration and sporty driving
- 2 "Normal" mode
For ordinary driving
- 3 "Snow" mode
For slippery road surfaces and slower acceleration

The indicator light comes on when in "Power" or "Snow" mode.

TRAC/VSC Off Mode

This switch turns off the traction control system or the vehicle stability control system. Use this switch if the wheels get stuck in snow, mud, etc.



- 1 To turn off TRAC: Push the VSC OFF switch briefly. The slip indicator light will come on.

To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip indicator light and VSC OFF indicator light will come on.


Press the switch again to turn the system back on.

Cruise Control

The cruise control allows the vehicle to be driven at a fixed speed without using the accelerator pedal.

Use for highway driving or when traveling at the same speed for long periods of time.

n Setting the speed

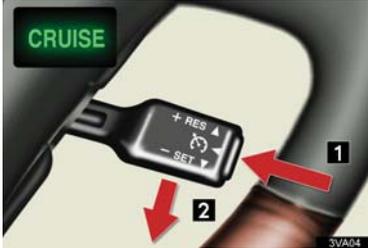

- 1 Press the "ON-OFF" button
The system will turn on.
- 2 Push the lever down while traveling at the desired speed
This sets the vehicle at that speed.

n Canceling



Pull the lever to temporarily cancel the preset speed.

Press the "ON-OFF" button to turn the system off.

n Resetting the speed



Using the lever.

To increase speed: raise the lever

To decrease speed: lower the lever

Release the lever when the desired speed is reached.

Using the acceleration/brake pedal.

Push the lever down after accelerating/decelerating to the desired speed.

Depressing the brake pedal cancels the preset speed. To return to the preset speed, raise the lever.



Trip Information Display

The following information concerning your vehicle is displayed.

n Display information




Trip information

- Available driving distance
- Average fuel consumption
- Average vehicle speed

n Changing trip information display



The display changes each time the "TRIP INFO" button is pressed.

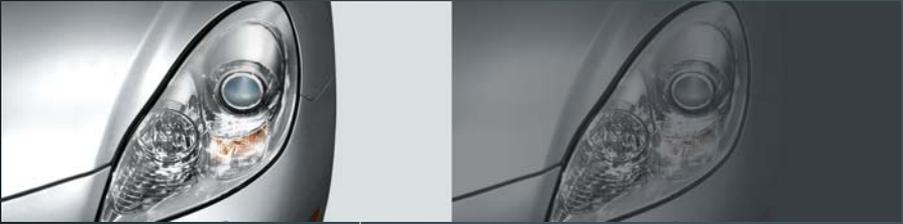


Topic 4

Rain and Night Driving

| | |
|--------------------------------------|----|
| Headlights..... | 25 |
| Fog Lights..... | 25 |
| Headlight Cleaner | 26 |
| Windshield Wipers and Washers | 26 |
| Rear Window and Outside Mirror | |
| Defoggers..... | 26 |
| Instrument Panel Light Control | 27 |

Headlights

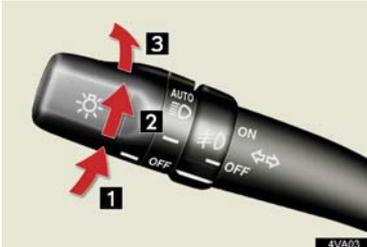

- 1 Parking lights, license plate lights, tail lights, side marker
- 2 Parking lights, license plate lights, tail lights, side marker and headlights
- 3 Headlights come on automatically according to the surrounding light level



Push the lever forward to activate the high beams. Pull and hold the lever to temporarily activate the high beams.


Adaptive Front Lighting System (AFS)



The headlights are set to automatically move left or right to match the turning angle of the vehicle. Press the "AFS OFF" button to cancel the system.

The indicator light comes on when the system is off.

Fog Lights

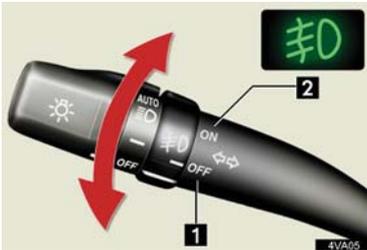

- 1 OFF
- 2 ON

Headlight Cleaner



Can be used when the headlights are on and the ignition switch is in the "ON" position.

Windshield Wipers and Washers

n Variable intermittent wipers



"MIST" Single wipe (pull lever to activate)


"INT" Intermittent operation (interval can be adjusted by twisting the knob)

"LO" Low speed operation

"HI" High speed operation

Push the button on the end of the lever to spray washer fluid.

Rear Window and Outside Mirror Defoggers

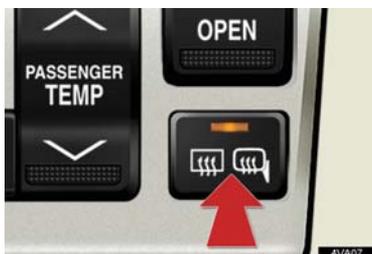

Press the switch to defog the outside mirrors and rear window.

Press again to cancel.

The system will automatically turn off after 15 minutes.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Instrument Panel Light Control

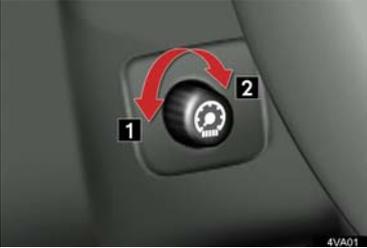

- 1** Darker
- 2** Brighter



Topic 5

Driving Comfort

| | |
|------------------------------------|----|
| Audio System..... | 29 |
| Climate Control..... | 32 |
| Seat Heater Switches..... | 33 |
| Console Box..... | 34 |
| Coin Box..... | 35 |
| Cup Holder..... | 35 |
| Cigarette Lighter and Ashtray..... | 35 |
| Glove Box..... | 36 |
| Auxiliary Box..... | 36 |

Audio System

n Basic operation



1 Power ON/OFF, volume adjustment

2 Mode selectors

3 Changing sound quality modes

4 Adjusting sound quality

• Switching modes

AM Radio mode (AM)

TAPE Tape mode

FM Radio mode (FM)

DISC CD mode

n Audio remote control (steering switches)

It is possible to operate the audio system without removing your hands from the steering wheel.




- 1 Volume adjustment
- 2 RADIO mode - select station / tuner
TAPE mode - fast forward / rewind
CD mode - select disc or track
- 3 Switch modes

n Audio door



Push the button to open or close.

n Radio mode

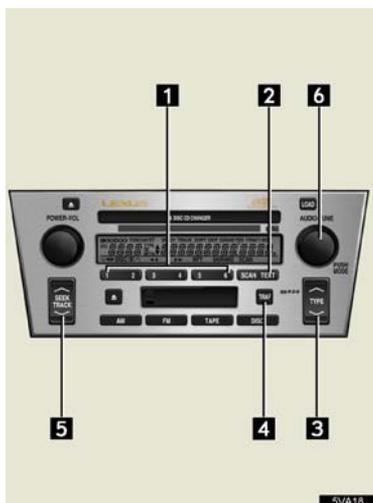


- 1 Enter or select preset stations
- 2 Receive radio text messages
- 3 Display selected programs
- 4 Receive traffic information
- 5 } Tuning
- 6 }

• Entering station presets

- 1 Turn the power on
- 2 Switch to radio mode
- 3 Push  or turn  to select the desired station.
- 4 Hold down one of the buttons **1** through **6** until you hear a beep.




n Tape mode

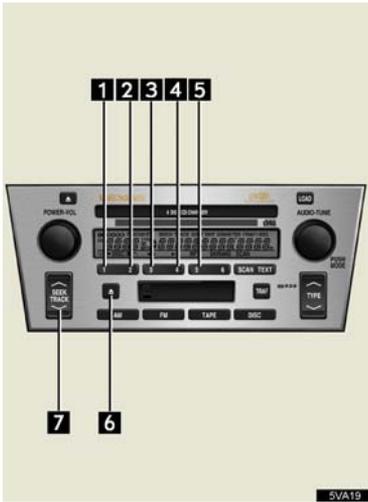

- 1 Reverse playback direction
- 2 DOLBY NR ON/OFF
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
- 6 Eject
- 7 Skip tracks

n Disc mode (CD player)

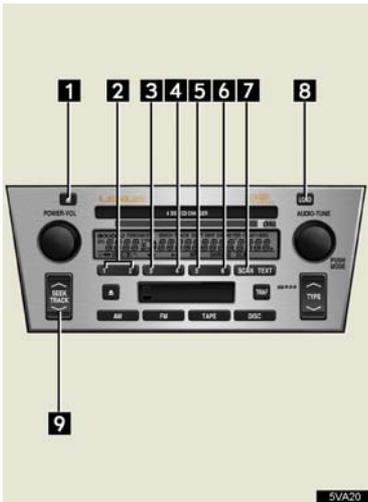

- 1 Eject disc
- 2 Select disc
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
Repeat current disc (push and hold)
- 6 Current disc random playback
All disc random playback
(push and hold)
- 7 Play beginning of each track on current disc
Play beginning of the first track of each disc
(Push and hold)
- 8 Load disc
- 9 Select track

• Loading a single CD

- 1 Press the **LOAD** button.
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert the disc.

- Loading multiple CDs


- 1 Hold down **LOAD** until you hear a beep.
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert one disc.
- 3 Once the disc is inserted, “WAIT” appears again on the display.
- 4 Repeat steps **2** and **3**.

Climate Control




- | | |
|---|---|
| 1 Driver side temperature display | 7 Air flow controls |
| 2 Passenger side temperature display | 8 Fan speed controls |
| 3 Switch to “DUAL” mode | 9 “OFF” button |
| 4 Passenger side temperature control | 10 Switch to “AUTO” mode |
| 5 “A/C” switch | 11 Driver side temperature control |
| 6 Air intake controls | 12 Windshield defog/defrost |

n “AUTO” mode

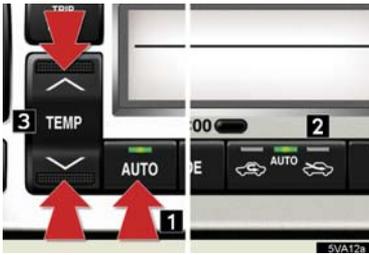

- 1 Push the “AUTO” button
- 2 Push the air intake controls a few times until the “AUTO” indicator turns on.
- 3 Adjust the temperature with the “TEMP” button.

n “DUAL” mode

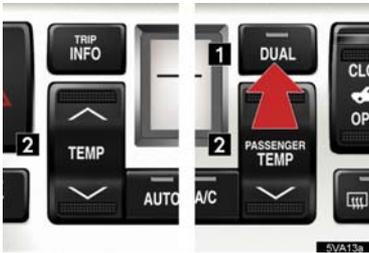

In “DUAL” mode, driver and passenger side temperature settings can be controlled separately.

- 1 Push the “DUAL” button.
- 2 Adjust the driver side temperature with the “TEMP” button, and the passenger side temperature with the “PASSENGER TEMP” button.

When the outside temperature is low, the windshield may fog up more easily. In this case, push the air intake controls to select the outside air mode.


Seat Heater Switches



- 1 ON
Turn the dials to the left.
- 2 OFF
Turn the dials to the right until they stop.

Console Box

n Upper box

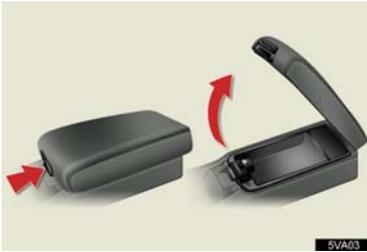


Press the button to release the lock.
Lift armrest to open.

n Lower box



Pull up on lower tab.
Lift to open.

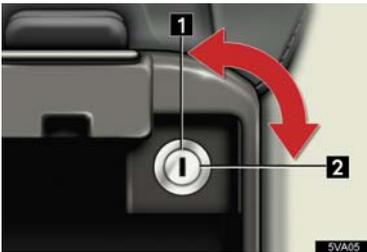

- 1 Unlock the lower box
- 2 Lock the lower box

There is an accessory 12 V / 10 A power outlet located inside the console box.



Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Coin Box

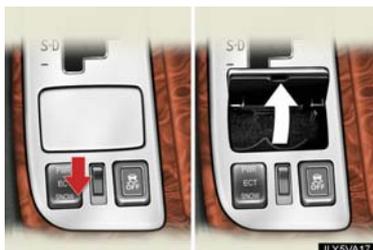

Slide the switch backward.

Cup Holder




Push the cup holder lid to open.



- 1 Push in the cup holder
- 2 Close the lid

Cigarette Lighter and Ashtray

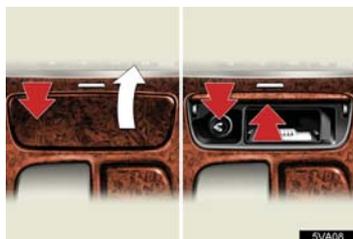


Push the lid to open.

Push the cigarette lighter down.

To remove the ashtray, pull it out.


Glove Box

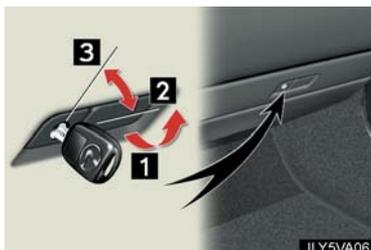

- 1 Open
- 2 Lock
- 3 Unlock

To lock, insert the master key and turn it clockwise.

Auxiliary Box

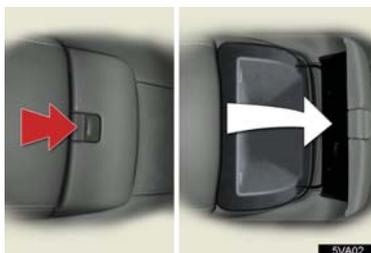

Push the tab to open.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus





Topic 6

Opening and Closing

| | |
|--------------------------|----|
| Doors..... | 39 |
| Power Windows..... | 40 |
| Retractable Hardtop..... | 40 |
| Fuel Tank Cap..... | 41 |
| Hood..... | 42 |
| Trunk..... | 42 |

Doors

n Using the lock button




- 1** Lock
- 2** Unlock

n Using the power door lock switch



- 1** Lock
- 2** Unlock

n Using the key

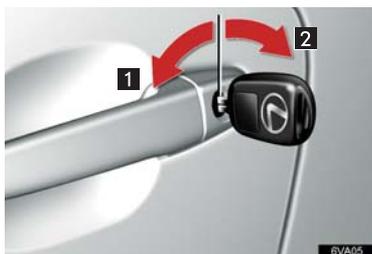

- 1** Lock
- 2** Unlock

Power Windows



1 Power window switches

To lower the window, push the switch down.
To raise the window, pull the switch up.


2 Window lock switch

When the window lock switch is pressed in, only the driver's window can be raised or lowered.

Fully lifting or pressing the power window switch make the window raise fully or lower fully automatically.

Retractable Hardtop

n Opening and Closing

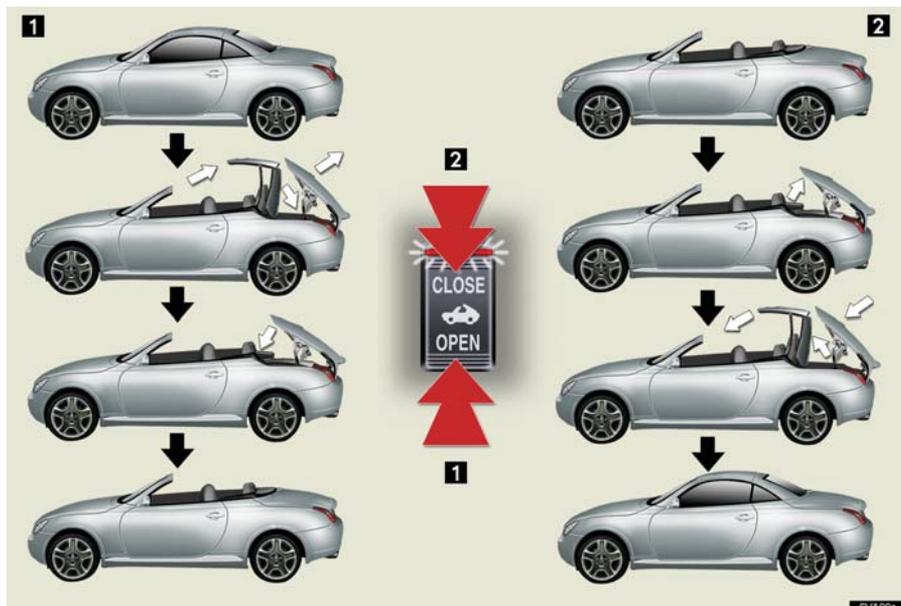

1 Hold down the switch on the "OPEN" side.

2 Hold down the switch on the "CLOSE" side.

The indicator remains on while the retractable hardtop is operating. When the retractable hardtop is fully opened or closed, the indicator goes off and a beep sounds.

Fuel Tank Cap



1 Push the fuel filler door opener switch.



2 Remove the cap by slowly turning it counter-clockwise. The removed cap can be stored on the fuel filler door.

The display indicates that the fuel filler door is on the left side of the vehicle.



Hood



- 1 Pull the hood lock release lever under the instrument panel.



- 2 Inserting your fingers under the hood, push up the auxiliary catch lever and lift.

Trunk

n Trunk lid opener switch



- 1 Make sure the main switch located in the glove box is on.



- 2 Push and hold the trunk lid opener switch for about 1 second.

The trunk can also be opened with the wireless remote control. See page 7.

What to do if ...

If the following warning light comes on ...



ILY7VA03a

Stop the vehicle immediately



Brake system warning light
(U.S.A.)



Low engine oil pressure warning light



Brake system warning light
(Canada)



Charging system warning light

Have the vehicle inspected by your Lexus dealer immediately



Malfunction indicator lamp
(U.S.A.)



ABS warning light
(U.S.A.)



Malfunction indicator lamp
(Canada)



ABS warning light
(Canada)



SRS warning light



Adaptive front lighting system off indicator (When flashing)



Tire pressure warning light



Rear light failure warning light



VSC OFF indicator (When flashing)

Have the malfunction repaired immediately



Low engine oil level warning light



Open door warning light



Low fuel level warning light



Low washer fluid warning light



Driver's seat belt reminder warning light



Front passenger's seat belt reminder warning light



Engine oil replacement reminder light (U.S.A.)

See the owner's manual



Turn signal indicator



ECT SNOW indicator



Headlight high beam indicator



ECT PWR indicator



Headlight indicator (U.S.A.)



Cruise control indicator



Tail light indicator (Canada)



VSC OFF indicator



Front fog light indicator



Slip indicator



Shift position indicator



Adaptive front lighting system off indicator



Shift range position indicator




Front passenger airbag on-off indicator

For further information, refer to the owner's manual.

Location of Emergency Equipment

n Jack, tools, and spare tire

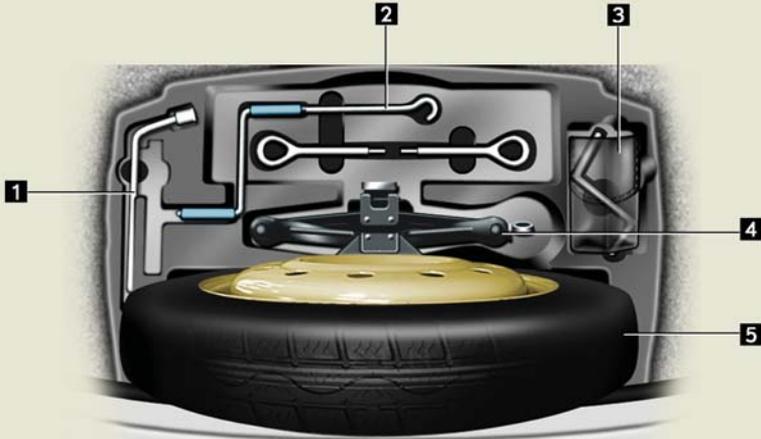

7VA01

- 1 Wrench
- 2 Jack handle
- 3 Tool bag
- 4 Jack
- 5 Spare tire (if equipped)


Removing the spare tire



7VA02

- 1 Remove the tire cover.
- 2 Loosen the bolt and remove the spare tire.

If the retractable hardtop does not close

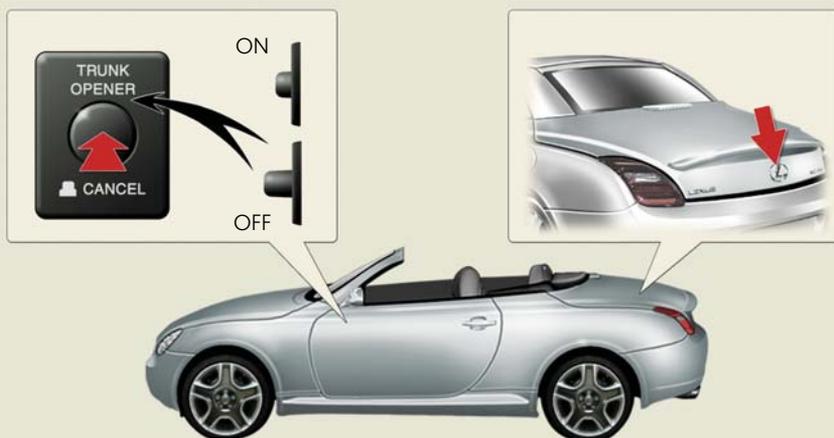

First, check the following:

Is the trunk lid opener main switch ON?

Is the trunk lid closed?

If the retractable hardtop still does not close, see the owner's manual for more information or contact your Lexus dealer.

If the ignition switch does not turn easily



Turn the ignition switch while lightly moving the steering wheel from left to right.

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

| Item | Description | Setting (default setting at left) |
|----------------------------|---|--|
| Wireless remote control | Wireless remote control function | Enable/Disable |
| | Door unlock function | One push unlocks the driver's door, second push unlocks passenger's door/ Ask your Lexus dealer |
| | Operation indicator buzzer | Enable/Disable |
| | Operation indicator buzzer volume | Ask your Lexus dealer |
| | Open door warning function | Enable/Disable |
| | Automatic door locking function (if a door is not opened after being unlocked) | 60 seconds/Ask your Lexus dealer |
| | Trunk unlock function | Push for about 1 second/ Ask your Lexus dealer |
| | Lock/Unlock turn signal light confirmation | Enable/Disable |
| Door lock | Unlock function | One turn unlocks the driver's door, second turn unlocks passenger's door/ Ask your Lexus dealer |
| | Speed-detecting automatic door lock function | Disable/Enable |
| | Opening driver's door unlocks all doors | Disable/Enable |
| | Shift the shift lever to "P" unlocks all doors | Enable/Disable |
| | Shift the shift lever to position other than "P" locks all doors | Enable/Disable |
| Power windows | Integrated door key operation | Enable/Disable |
| | Wireless remote control integrated operation | Open/Disable |
| Alarm | Wireless remote control theft deterrent buzzer | Enable/Disable |
| Headlights ("AUTO" mode) | Ambient light sensor sensitivity | Ask your Lexus dealer |
| | Time period before lights turn off | 30 seconds/Ask your Lexus dealer |
| Windshield wiper operation | Automatic shift from LO speed to intermittent when the vehicle is stopped | Enable/Disable |
| | Automatic wipe during mist operation | Enable/ Disable |
| Steering column | Automatic tilt-away function | Enable/ Disable |



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

n U.S. OWNERS

I In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

I In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

n CANADIAN OWNERS

I In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

I The U.S. mainland: www.lexus.com

I Hawaii: www.servcolexus.com

I Canada: www.lexus.ca

©2006 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.