

Contents

The Quick Guide is not intended as substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Entering and Exiting

- Keys ▶ P.7
- Theft Deterrent System ▶ P.8



Topic 2

Before Driving

- Seats ▶ P.11
- Seat Position Memory System ▶ P.12
- Front Head Restraints ▶ P.13
- Seat Belts ▶ P.13
- Outside Rear View Mirrors ▶ P.14
- Anti-glare Inside Rear View Mirror ▶ P.15
- Steering Column ▶ P.15

Topic 3

When Driving

- Starting ▶ P.17
- Automatic Transmission ▶ P.18
- Parking Brake ▶ P.19
- Turn Signal Lever ▶ P.19
- Emergency Flasher Switch ▶ P.20
- ECT Switch ▶ P.20
- TRAC/VSC Off Mode ▶ P.20
- Cruise Control ▶ P.21
- Trip Information Display ▶ P.22



Specifications, features, equipment, technical data, and options are based upon information available at the time of printing, are subject to change without notice, may differ from region to region. Optional equipment shown may not be available separately or in all regions.



Topic 4 Rain and Night Driving

- Headlights ▶ P.25
- Fog Lights ▶ P.26
- Headlight Cleaner ▶ P.26
- Windshield Wipers and Washers ▶ P.27
- Rear Window and Outside Mirror Defoggers ▶ P.28
- Instrument Panel Light Control ▶ P.28

Topic 5 Driving Comfort

- Audio System ▶ P.31
- Climate Control ▶ P.34
- Seat Heater Switches ▶ P.35
- Console Box ▶ P.36
- Coin Box ▶ P.37
- Cup Holder ▶ P.37
- Cigarette Lighter and Ashtray ▶ P.37
- Glove Box ▶ P.38
- Auxiliary Box ▶ P.38



- Garage Door Opener ▶ P.38



Topic 6 Opening and Closing

- Doors ▶ P.41
- Power Windows ▶ P.42
- Retractable Hardtop ▶ P.42
- Fuel Tank Cap ▶ P.43
- Hood ▶ P.44
- Trunk ▶ P.44

What to do if ...

- Responding to warning/indicator lights and other problems that may arise.

Customizing Your Lexus

- A list of features that can be customized according to owner preference.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...


Customizing Your Lexus

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

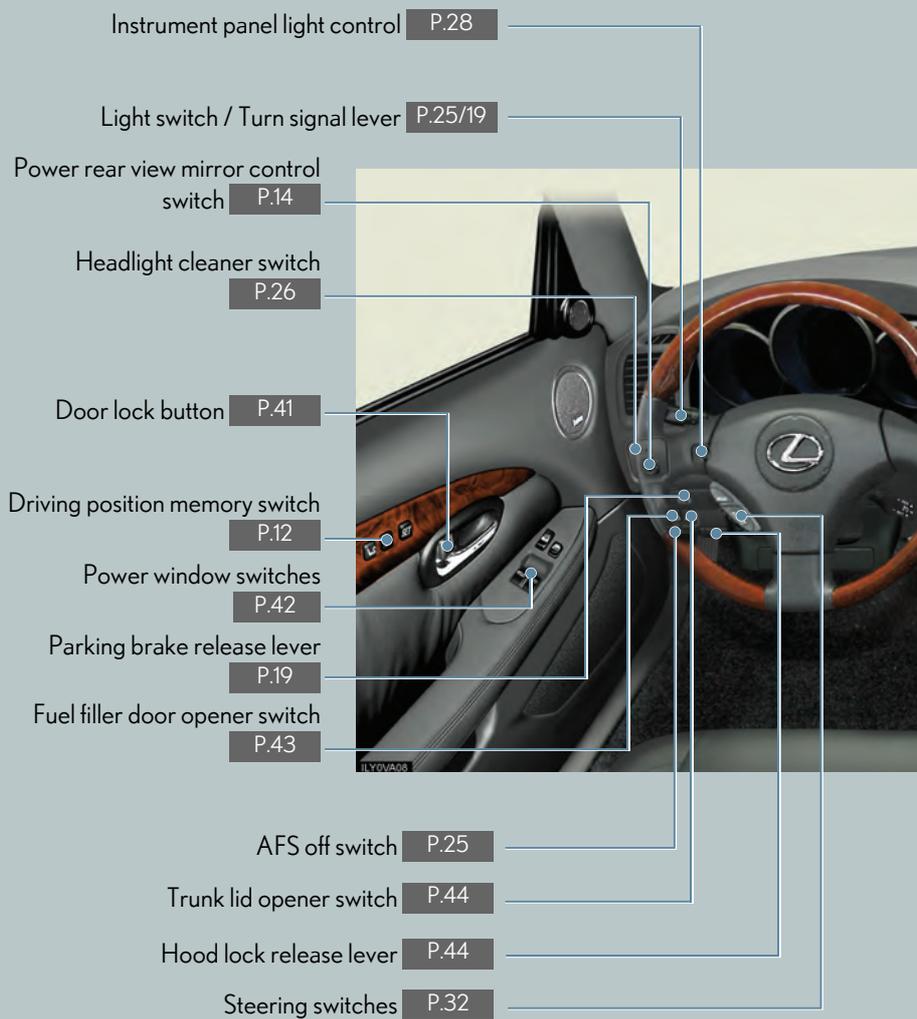

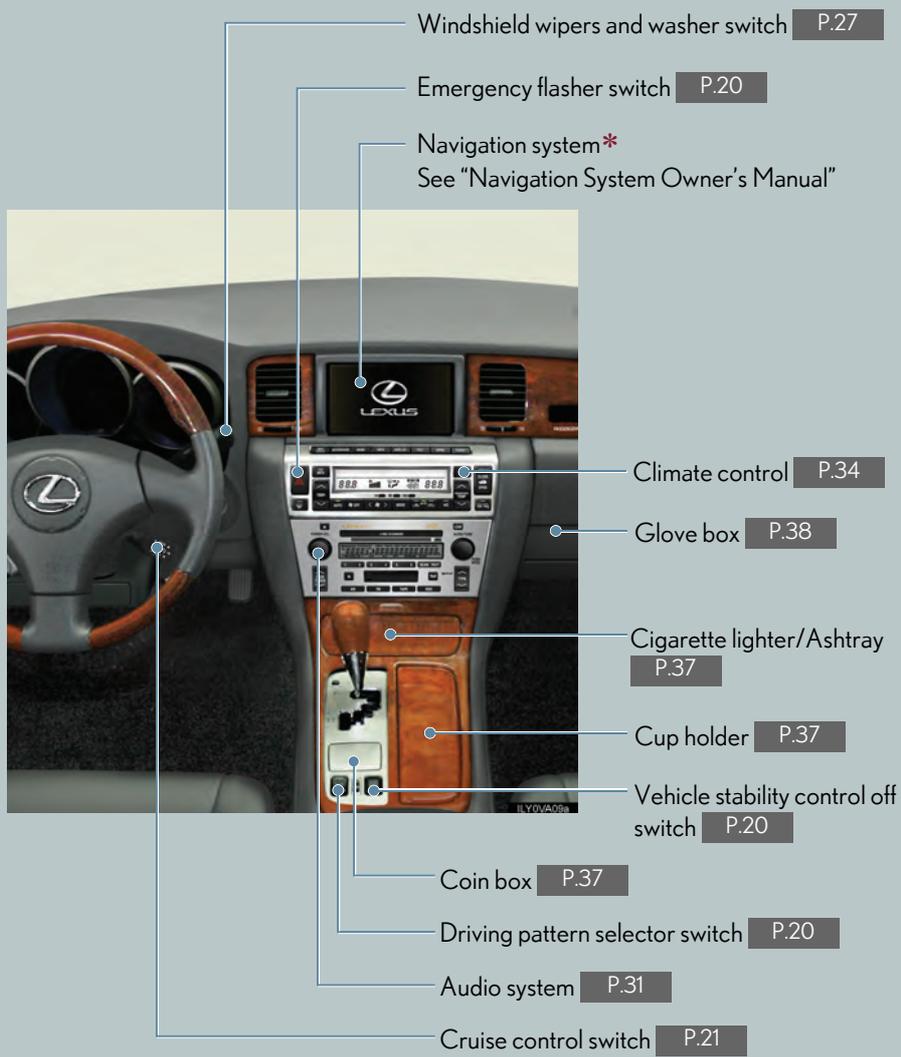

* : If equipped



Topic 1

Entering and Exiting

Keys	7
Theft Deterrent System	8

Keys

■ Keys



- 1 Master keys
- 2 Valet key
- 3 Key number plate
- 4 Flat key

■ Wireless remote control



- 1 **LOCK button** : Locks doors
PANIC button : Sounds alarm
(Push and hold)
(Use this function if you notice anyone suspicious near the vehicle)
- 2 **UNLOCK button** : Unlocks doors
- 3 **Trunk button** : Unlocks trunk
(Push and hold)

Holding down the LOCK button will sound an alarm.
Holding down the UNLOCK button will open the side windows.



Theft Deterrent System

This system is designed to help protect your vehicle from theft.

■ Engine immobilizer



This system only allows the engine to start if a registered key is used.

This deters theft caused by the use of unauthorized keys.

■ Alarm

Forcibly unlocking the doors, trunk, or hood without the key or wireless remote control causes the horn to blow and the exterior lights to flash, alerting those in the surrounding area.

■ Steering lock



The steering wheel is locked when the engine switch is turned off.

If the security indicator light is flashing when you leave the vehicle, the engine immobilizer and alarm are set.

To stop the alarm, unlock the doors or trunk with the key or wireless remote control, or turn the engine switch to the ON position.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 1
Entering and Exiting





Topic 2

Before Driving

Seats	11
Seat Position Memory System	12
Front Head Restraints	13
Seat Belts	13
Outside Rear View Mirrors	14
Anti-glare Inside Rear View Mirror	15
Steering Column	15



Seats

■ Adjusting seat position



- 1 Moves seat forward
- 2 Moves seat back

■ Adjusting seatback angle



- 1 Incline
- 2 Recline

■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire cushion

■ Adjusting firmness



The lumbar support can be adjusted.

- 1 Firmer
- 2 Softer



Inclining front seat



- 1 Incline

Seat Position Memory System

With the push of a button, you can adjust the seat to a set customized position. The steering column and outside rear view mirrors are adjusted along with the driver's seat. Positions can be conveniently recorded for drivers and frequent passengers.

Setting positions



- 1 Push the "SET" button.
- 2 Within 3 seconds after the "SET" button is pushed, push button "1" or "2" until the signal beeps. This operation is also available while pushing and holding the "SET" button.

Recalling positions



Push one of the memory buttons (1 or 2).

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Front Head Restraints

Height adjustment



- 1 To raise: pull upward
- 2 To lower: depress the button and push down

Angle adjustment



Move forward and backward.

Seat Belts

Seat belt guides



To use the seat belt guide, detach the hook, let the seat belt run under the guide and then reattach the hook.

■ Rear seat belt holders



Hold the rear seat belt with the holder when not in use.

Outside Rear View Mirrors

■ Adjustment



- 1 Use the master switch to select which mirror to adjust (L or R).
- 2 Adjust the angle using the control switch.

Auto tilt:

Move the master switch to "L" or "R", Mirrors automatically tilt down when shifting into reverse. To deactivate, move the master switch to middle position.

■ Folding rear view mirror



- 1 Push inward

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus



Anti-glare Inside Rear View Mirror

The auto-dimming function reduces glare from the headlights of vehicles behind you.

■ Setting AUTO mode




Push the AUTO button.

The indicator light comes on when AUTO mode is selected.


Steering Column

■ Raising and lowering

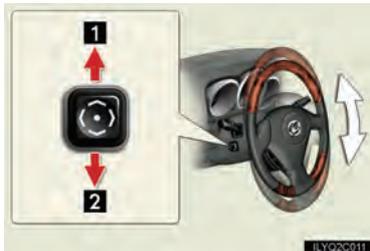

- 1 Up
- 2 Down

■ Adjusting forward/back

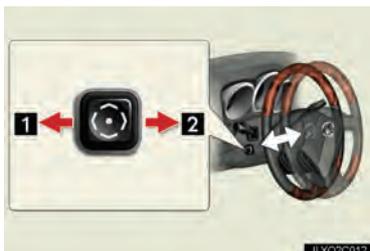

- 1 Away from the driver
- 2 Toward the driver

When the key is removed, the steering column moves to provide easy exit and entry. When the key is inserted, the steering column returns to its previously set position.



Topic 3

When Driving

Starting	17
Automatic Transmission.....	18
Parking Brake.....	19
Turn Signal Lever.....	19
Emergency Flasher Switch	20
ECT Switch.....	20
TRAC/VSC Off Mode	20
Cruise Control	21
Trip Information Display.....	22



Starting

Starting the engine

Make sure the parking brake is engaged and the shift lever is in "P".



- 1 Depress the brake pedal.



- 2 Turn the engine switch to START.
The engine will start.

Stopping the engine

- 1 Depress the brake pedal and move the shift lever to "P".
- 2 Turn the engine switch to OFF.

Engine (ignition) switch




- 1 LOCK
- 2 ACC
The audio system and other accessories can be used.
- 3 ON
- 4 START



Automatic Transmission

Shift range positions

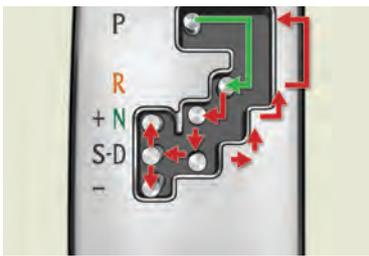

- P Parking and engine starting
- R Reverse position
- N Neutral position
- D Normal driving position
- S Sequential mode driving

Switching out of "P" position can only be performed while the brake pedal is depressed.

Sequential mode

Sequential mode allows the driver to select gears based on driving conditions.



Move the shift lever to the "S" position.



Upshifting : move the lever to the "+" side

Downshifting : move the lever to the "-" side
1st through 6th gear can be selected.

The selected shift range is displayed on the instrument cluster.

NOTE: Downshifting increases power going uphill, or increases engine braking going downhill or stopping.
During normal driving conditions, always drive in "D" position for best fuel economy.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Parking Brake

■ Setting the parking brake



Firmly depress the parking brake pedal.

■ Releasing the parking brake



Pull the lever.

Turn Signal Lever



- 1 Left turn
- 2 Right turn

Lane changes can be signaled by moving and holding the lever partway.



Emergency Flasher Switch



All the turn signal lights will flash.

The emergency flashers will work even when the engine is off.

ECT Switch

Use to select a mode suitable to driving and road conditions.



- 1 **"Power" mode**
For more powerful acceleration and sporty driving
- 2 **"Normal" mode**
For ordinary driving
- 3 **"Snow" mode**
For slippery road surfaces and slower acceleration

The indicator light comes on when in "Power" or "Snow" mode.

TRAC/VSC Off Mode

This switch turns off the traction control system or the vehicle stability control system. Use this switch if the wheels get stuck in snow, mud, etc.



To turn off TRAC: Push the VSC OFF switch briefly. The slip indicator light will come on.

To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip indicator light and VSC OFF indicator light will come on.

Press the switch again to turn the system back on.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Cruise Control

The cruise control allows the vehicle to be driven at a fixed speed without using the accelerator pedal.

Use for highway driving or when traveling at the same speed for long periods of time.



- 1 Indicator
- 2 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button
The system will turn on.
- 2 Push the lever down while traveling at the desired speed
This sets the vehicle at that speed.

Canceling




Pull the lever to temporarily cancel the preset speed.

Press the "ON-OFF" button to turn the system off.



■ Resetting the speed

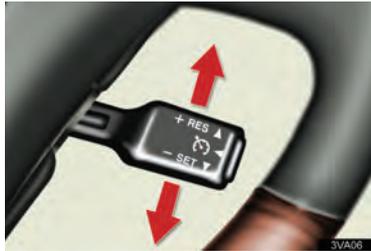

Using the lever.

To increase speed: raise the lever

To decrease speed: lower the lever

Release the lever when the desired speed is reached.

Using the acceleration/brake pedal.

 
 
Push the lever down after accelerating/decelerating to the desired speed.

Depressing the brake pedal cancels the preset speed. To return to the preset speed, raise the lever.

■ Trip Information Display

The following information concerning your vehicle is displayed.

■ Display information



Trip information

- Available driving distance
- Average fuel consumption
- Average vehicle speed

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 3
When Driving



■ Changing trip information display



The display changes each time the “TRIP INFO” button is pressed.




Topic 4

Rain and Night Driving

Headlights.....	25
Fog Lights.....	26
Headlight Cleaner	26
Windshield Wipers and Washers	27
Rear Window and Outside Mirror	
Defoggers.....	28
Instrument Panel Light Control	28

Headlights

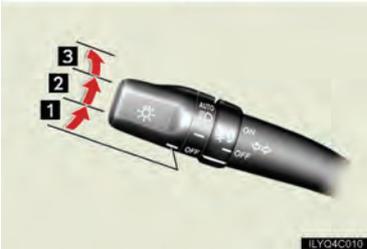

- 1 Parking lights, license plate lights, tail lights, side marker
- 2 Parking lights, license plate lights, tail lights, side marker and headlights
- 3 Headlights come on automatically according to the surrounding light level

Push the lever forward to activate the high beams. Pull and hold the lever to temporarily activate the high beams.

Adaptive Front Lighting System (AFS)




The headlights are set to automatically move left or right to match the turning angle of the vehicle. Press the "AFS OFF" button to cancel the system.

The indicator light comes on when the system is off.

Fog Lights



- 1** OFF
- 2** ON

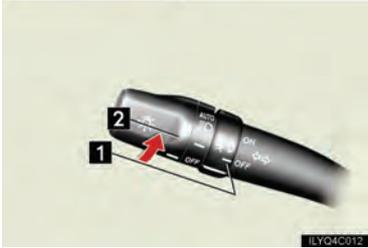

Headlight Cleaner



Can be used when the headlights are on and the engine switch is in the "ON" position.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus

Windshield Wipers and Washers

Variable intermittent wipers



- 1 Intermittent operation
- 2 Low speed
- 3 High speed
- 4 Washer fluid



Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.



Rear Window and Outside Mirror Defoggers



Press the switch to defog the outside mirrors and rear window.

Press again to cancel.

The system will automatically turn off after 15 minutes.

Instrument Panel Light Control



- 1 Darker
- 2 Brighter

- Entering and Exiting
- Before Driving
- When Driving
- Rain and Night Driving
- Driving Comfort
- Opening and Closing
- What to do if ...
- Customizing Your Lexus

Topic 4

Rain and Night Driving





Topic 5

Driving Comfort

Audio System.....	31
Climate Control.....	34
Seat Heater Switches.....	35
Console Box.....	36
Coin Box.....	37
Cup Holder.....	37
Cigarette Lighter and Ashtray.....	37
Glove Box.....	38
Auxiliary Box.....	38
Garage Door Opener.....	38

Audio System

Basic operation



- 1 Power ON/OFF, volume adjustment
- 2 Mode selectors
- 3 Changing sound quality modes
- 4 Adjusting sound quality

• Switching modes

	Radio mode (AM)		Tape mode
	Radio mode (FM)		CD mode



■ Audio remote control (steering switches)

It is possible to operate the audio system without removing your hands from the steering wheel.




- 1 Volume adjustment
- 2 RADIO mode - select station / tuner
TAPE mode - fast forward / rewind
CD mode - select disc or track
- 3 Switch modes

■ Audio door



Push the button to open or close.

■ Radio mode

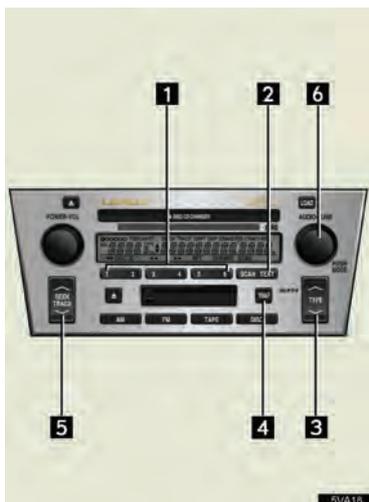

- 1 Enter or select preset stations
- 2 Receive radio text messages
- 3 Display selected programs
- 4 Receive traffic information
- 5 } Tuning
- 6 }

• Entering station presets

- 1 Turn the power on
- 2 Switch to radio mode
- 3 Push  or turn  to select the desired station.
- 4 Hold down one of the buttons **1** through **6** until you hear a beep.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus

■ Tape mode

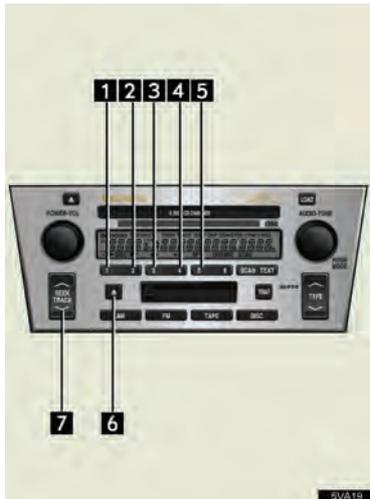

- 1 Reverse playback direction
- 2 DOLBY NR ON/OFF
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
- 6 Eject
- 7 Skip tracks

■ Disc mode (CD player)

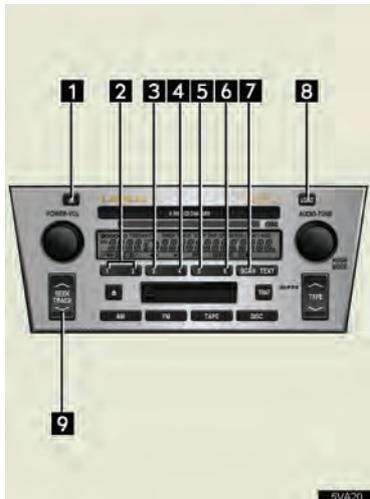

- 1 Eject disc
- 2 Select disc
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
Repeat current disc (push and hold)
- 6 Current disc random playback
All disc random playback
(push and hold)
- 7 Play beginning of each track on current disc
Play beginning of the first track of each disc
(Push and hold)
- 8 Load disc
- 9 Select track


• Loading a single CD

- 1 Press the **LOAD** button.
"WAIT" appears on the display.
- 2 When the "WAIT" display changes to "LOAD", insert the disc.



• Loading multiple CDs

- 1 Hold down **LOAD** until you hear a beep.
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert one disc.
- 3 Once the disc is inserted, “WAIT” appears again on the display.
- 4 Repeat steps 2 and 3.

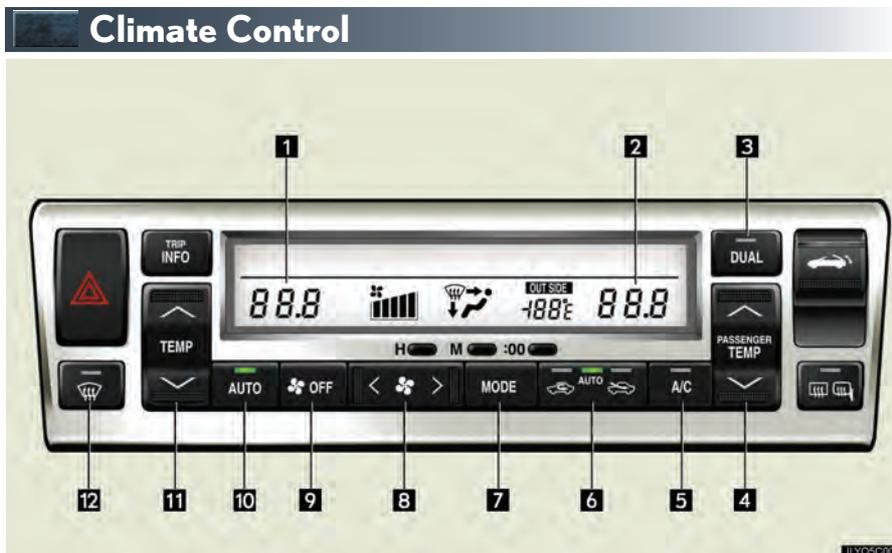

- | | |
|--------------------------------------|------------------------------------|
| 1 Driver side temperature display | 7 Air flow controls |
| 2 Passenger side temperature display | 8 Fan speed controls |
| 3 Switch to “DUAL” mode | 9 “OFF” button |
| 4 Passenger side temperature control | 10 Switch to “AUTO” mode |
| 5 “A/C” switch | 11 Driver side temperature control |
| 6 Air intake controls | 12 Windshield defog/defrost |

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus

■ "AUTO" mode

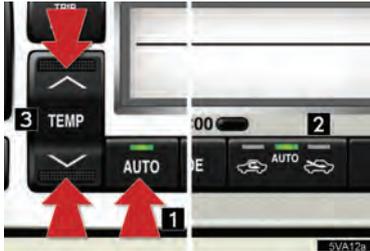

- 1 Push the "AUTO" button
- 2 Push the air intake controls a few times until the "AUTO" indicator turns on.
- 3 Adjust the temperature with the "TEMP" button.

■ "DUAL" mode

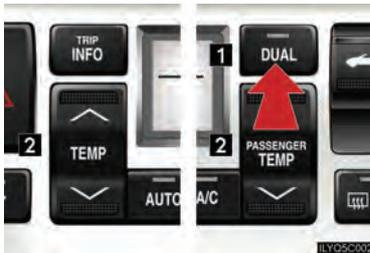

In "DUAL" mode, driver and passenger side temperature settings can be controlled separately.

- 1 Push the "DUAL" button.
- 2 Adjust the driver side temperature with the "TEMP" button, and the passenger side temperature with the "PASSENGER TEMP" button.

When the outside temperature is low, the windshield may fog up more easily. In this case, push the air intake controls to select the outside air mode.

Seat Heater Switches



- 1 ON
Turn the dials to the left.
- 2 OFF
Turn the dials to the right until they stop.

Console Box

Upper box




Press the button to release the lock.
Lift armrest to open.

Lower box



Pull up on lower tab.
Lift to open.

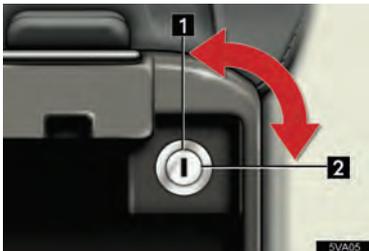

- 1 Unlock the lower box
- 2 Lock the lower box

There is an accessory 12 V / 10 A power outlet located inside the console box.



Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Coin Box

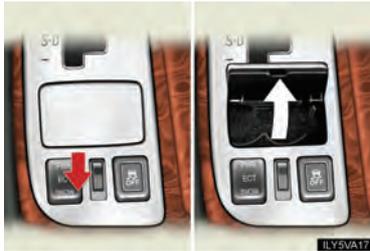

Slide the switch backward.

Cup Holder




Push the cup holder lid to open.



- 1 Push in the cup holder
- 2 Close the lid

Cigarette Lighter and Ashtray

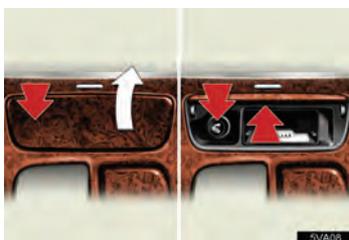


Push the lid to open.

Push the cigarette lighter down.

To remove the ashtray, pull it out.


Glove Box

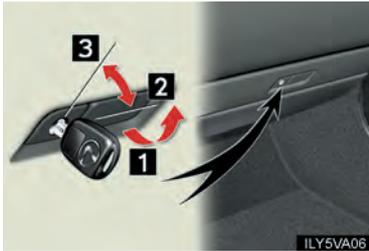

- 1 Open
- 2 Lock
- 3 Unlock

To lock, insert the master key and turn it clockwise.

Auxiliary Box

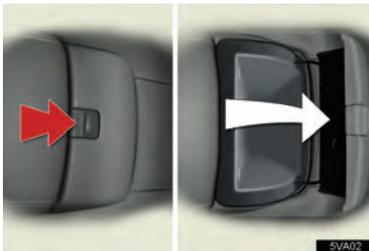

Push the tab to open.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

■ Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:
While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the learn button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

- To program an entry gate, see the Owner's Manual.
- To program other devices, contact your Lexus dealer.

For Canadian owners:

- To program all devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button. The indicator light should come on.




Topic 6

Opening and Closing

Doors.....	41
Power Windows.....	42
Retractable Hardtop.....	42
Fuel Tank Cap.....	43
Hood.....	44
Trunk.....	44

Doors

■ Using the lock button

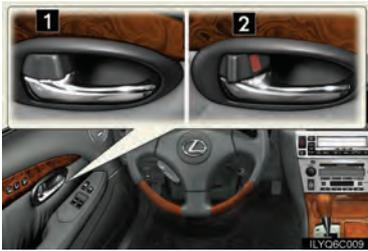


- 1 Lock
- 2 Unlock

■ Using the power door lock switch



- 1 Lock
- 2 Unlock

■ Using the key

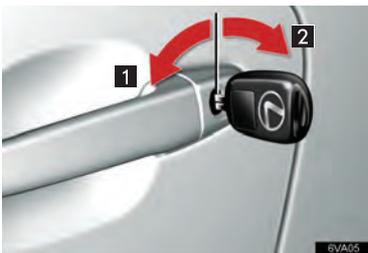

- 1 Lock
- 2 Unlock



Power Windows




- 1 Power window switches**
To lower the window, push the switch down.
To raise the window, pull the switch up.
- 2 Window lock switch**
When the window lock switch is pressed in, only the driver's window can be raised or lowered.

Fully lifting or pressing the power window switch make the window raise fully or lower fully automatically.

Retractable Hardtop

Opening and Closing

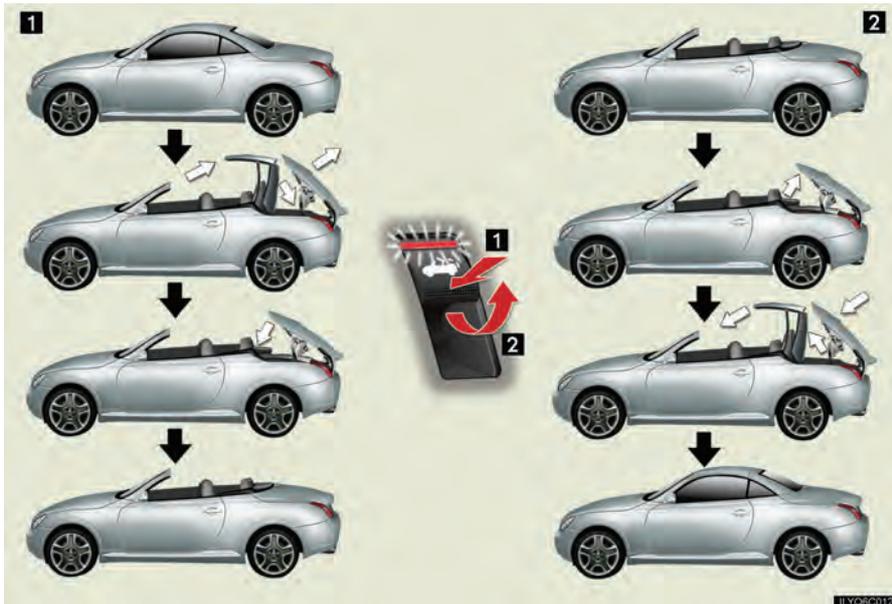

- 1** Hold down the switch.
- 2** Pull up the switch.

The indicator remains on while the retractable hardtop is operating. When the retractable hardtop is fully opened or closed, the indicator goes off and a beep sounds.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus

Fuel Tank Cap



- 1 Push the fuel filler door opener switch.



- 2 Remove the cap by slowly turning it counter-clockwise.
The removed cap can be stored on the fuel filler door.

The display indicates that the fuel filler door is on the left side of the vehicle.



Hood



- 1 Pull the hood lock release lever under the instrument panel.



- 2 Inserting your fingers under the hood, push up the auxiliary catch lever and lift.

Trunk

Trunk lid opener switch



- 1 Make sure the main switch located in the glove box is on.



- 2 Push and hold the trunk lid opener switch for about 1 second.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

The trunk can also be opened with the wireless remote control. See page 7.

What to do if ...

If the following warning light comes on . . .



ILY7VA03a

Stop the vehicle immediately

	Brake system warning light (U.S.A.)		Low engine oil pressure warning light
	Brake system warning light (Canada)		Charging system warning light

Have the vehicle inspected by your Lexus dealer immediately

	Malfunction indicator lamp (U.S.A.)		ABS warning light (U.S.A.)
	Malfunction indicator lamp (Canada)		ABS warning light (Canada)
	SRS warning light		Adaptive front lighting system off indicator (When flashing)
	Tire pressure warning light		Rear light failure warning light
	VSC OFF indicator (When flashing)		

Have the malfunction repaired immediately



Low engine oil level warning light



Open door warning light



Low fuel level warning light



Low washer fluid warning light



Driver's seat belt reminder warning light



Front passenger's seat belt reminder warning light



Engine oil replacement reminder light (U.S.A.)

See the owner's manual



Turn signal indicator



ECT SNOW indicator



Headlight high beam indicator



ECT PWR indicator



Headlight indicator (U.S.A.)



Cruise control indicator



Tail light indicator (Canada)



VSC OFF indicator



Front fog light indicator



Slip indicator



Shift position indicator



Adaptive front lighting system off indicator



Shift range position indicator



Front passenger airbag on-off indicator

For further information, refer to the owner's manual.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus

What to do if ...

Location of Emergency Equipment

Jack, tools, and spare tire

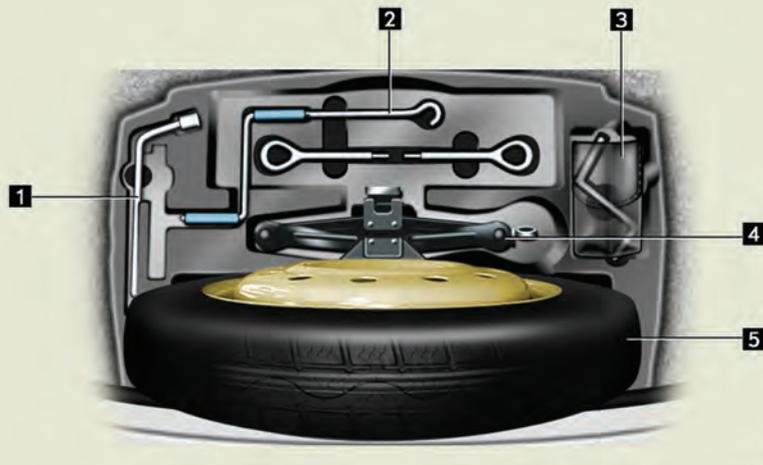


- 1 Wrench
- 2 Jack handle
- 3 Tool bag
- 4 Jack
- 5 Spare tire (if equipped)

Removing the spare tire



- 1 Remove the tire cover.
- 2 Loosen the bolt and remove the spare tire.

If the retractable hardtop does not close

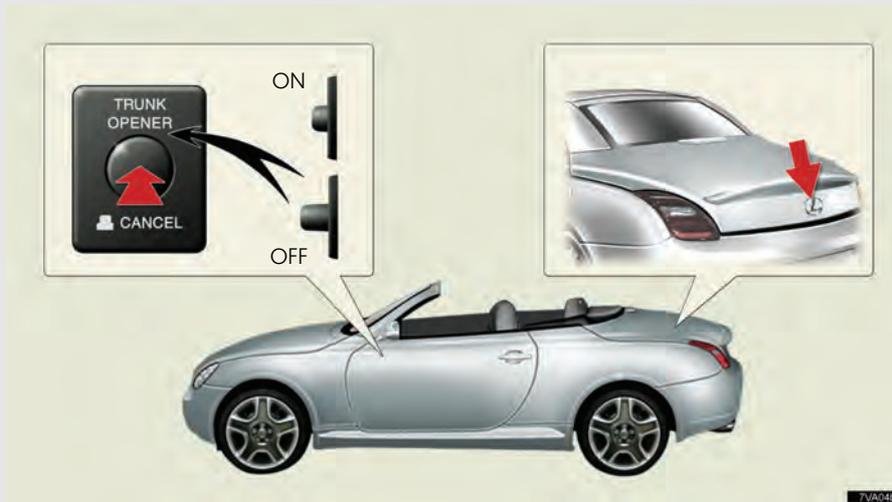

First, check the following:

Is the trunk lid opener main switch ON?

Is the trunk lid closed?

If the retractable hardtop still does not close, see the owner's manual for more information or contact your Lexus dealer.

If the engine (ignition) switch does not turn easily



Turn the engine switch while lightly moving the steering wheel from left to right.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Item	Description	Setting (default setting at left)
Wireless remote control	Wireless remote control function	Enable/Disable
	Door unlock function	One push unlocks the driver's door, second push unlocks passenger's door/ Ask your Lexus dealer
	Operation indicator buzzer	Enable/Disable
	Operation indicator buzzer volume	Ask your Lexus dealer
	Open door warning function	Enable/Disable
	Automatic door locking function (if a door is not opened after being unlocked)	Enable/Disable 60 seconds/Ask your Lexus dealer
	Trunk unlock function	Push for about 1 second/ Ask your Lexus dealer
	Lock/Unlock turn signal light confirmation	Enable/Disable
Door lock	Unlock function	One turn unlocks the driver's door, second turn unlocks passenger's door/ Ask your Lexus dealer
	Speed-detecting automatic door lock function	Disable/Enable
	Opening driver's door unlocks all doors	Disable/Enable
	Shift the shift lever to "P" unlocks all doors	Enable/Disable
	Shift the shift lever to position other than "P" locks all doors	Enable/Disable
Power windows	Integrated door key operation	Enable/Disable
	Wireless remote control integrated operation	Open/Disable
Alarm	Wireless remote control theft deterrent buzzer	Enable/Disable

Item	Description	Setting (default setting at left)
Headlights ("AUTO" mode)	Ambient light sensor sensitivity	Ask your Lexus dealer
	Time period before lights turn off	30 seconds/Ask your Lexus dealer
Windshield wiper operation	Automatic shift from LO speed to intermittent when the vehicle is stopped	Enable/Disable
	Automatic wipe during mist operation	Enable/ Disable
Steering column	Automatic tilt-away function	Enable/ Disable

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:
Lexus Roadside Assistance
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)
- In Hawaii:
Servco Automotive Roadside Assistance/Customer Services
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:
Lexus Roadside Assistance/Customer Service
1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2008 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.