

Contents


The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.


Anti-Glare Inside Rear View Mirror	12
Audio System (without navigation system)	
Basic operation	31
Remote control (steering wheel switches).....	32
Audio door	32
Radio	33
Tape.....	33
CD player.....	34
Audio System (with navigation system)	
Basic operation	25
Remote control (steering wheel switches).....	29
Audio door	29
Radio	26
DVD player/CD player	26
Operating an iPod®	28
Automatic Transmission	15
Auxiliary Box.....	39
Cigarette Lighter and Ashtray	38
Climate Control.....	35
Coin Box	38
Console Box.....	37
Cruise Control	18
Cup Holder	38
Defoggers-Rear Window and Outside Mirror Defoggers.....	24
Doors.....	41
ECT Switch	17
Emergency Flasher Switch.....	17
Fog Lights	22
Fuel Tank Cap	44
Garage Door Opener	39
Glove Box	39
Headlight Cleaner.....	22
Headlights	21
Hood.....	45
Instrument Panel Light Control	24

Keys.....	6
Outside Rear View Mirrors	12
Parking Brake.....	16
Portable Audio Device Adapters.....	30
Power Windows.....	42
Retractable Hardtop.....	43
Seat Belts	11
Seats-Front.....	8
Seats-Front Head Restraints	10
Seats-Seat Heater Switches	36
Seats-Seat Position Memory System	10
Starting	14
Steering Column	13
Theft Deterrent System	7
TRAC/VSC Off Mode.....	18
Trip Information Display.....	20
Trunk	46
Turn Signal Lever	16
Windshield Wipers and Washer	23

Overview

Instrument Panel

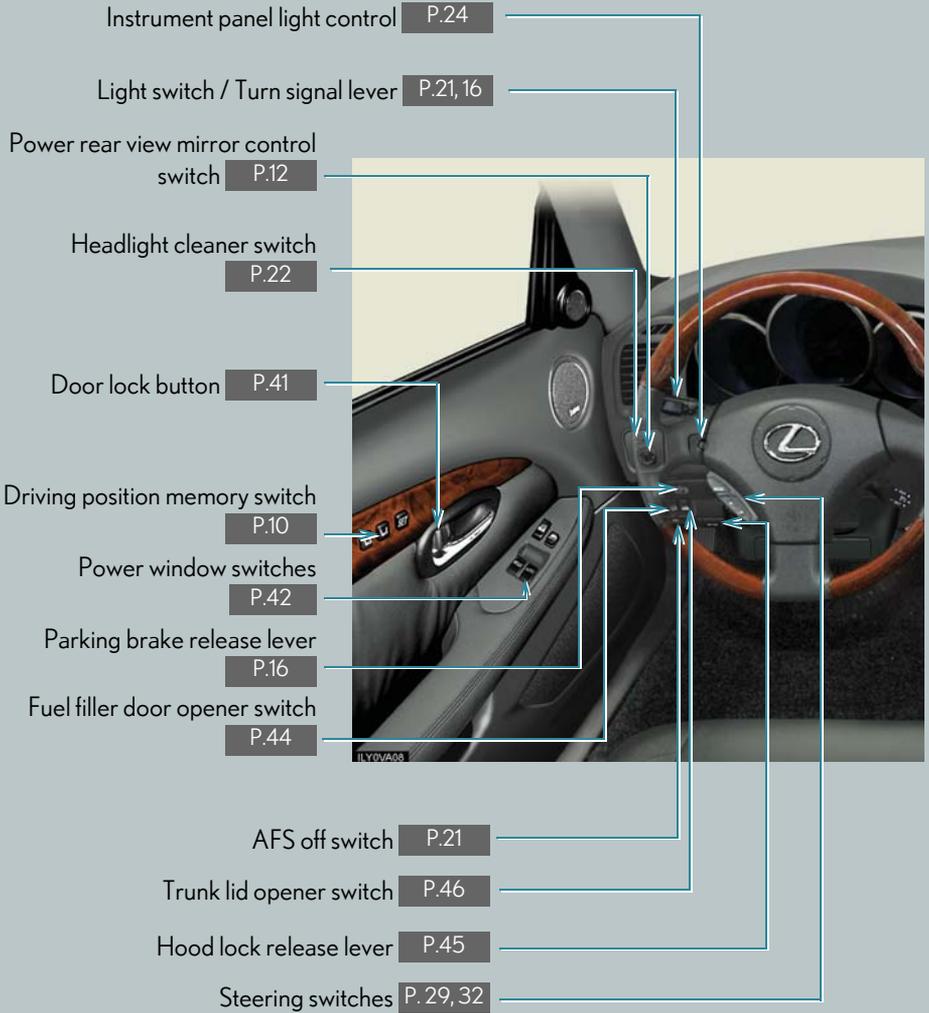

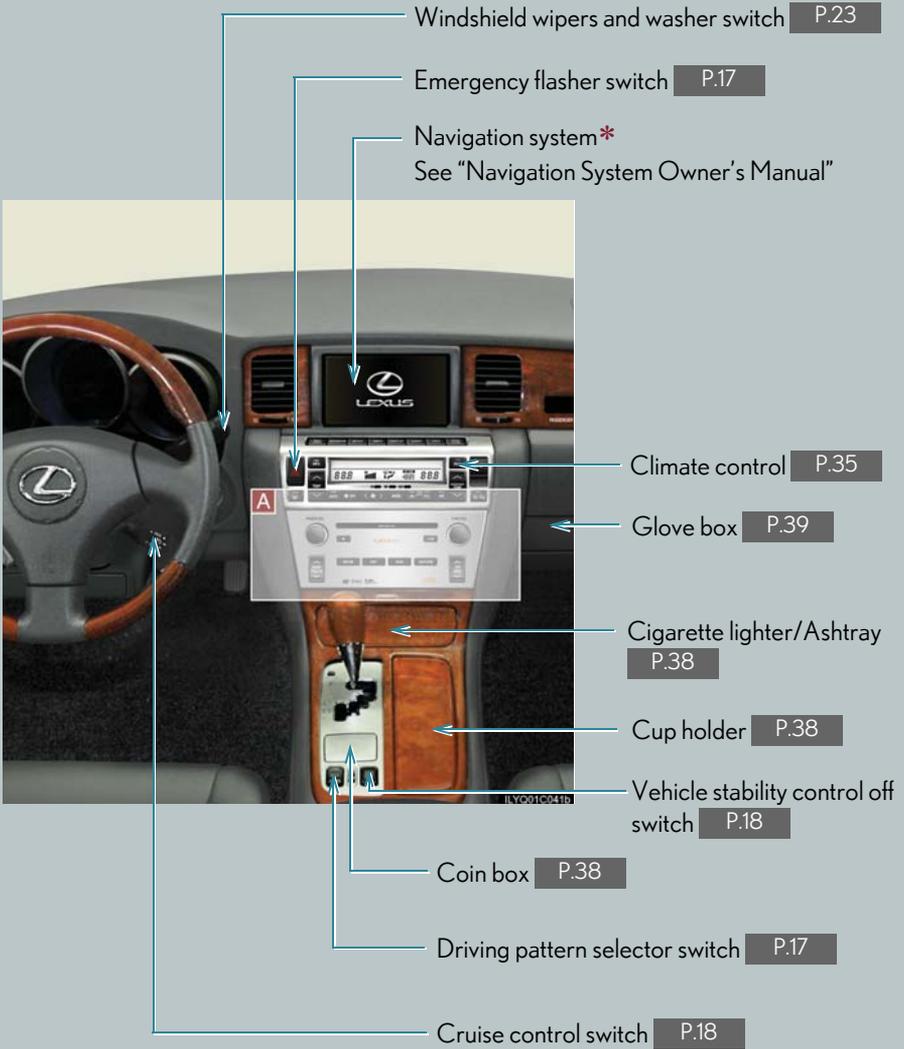

* : If equipped

A

▶ With navigation system

Audio system P. 25



▶ Without navigation system

Audio system P. 31



Keys

Keys



- 1 Master keys
- 2 Valet key
- 3 Key number plate
- 4 Flat key

Wireless remote control



- 1 **LOCK button** : Locks doors
- PANIC button** : Sounds alarm
(Push and hold)
(Use this function if you notice anyone suspicious near the vehicle)
- 2 **UNLOCK button** : Unlocks doors
- 3 **Trunk button** : Unlocks trunk
(Push and hold)

Holding down the LOCK button will sound an alarm.
Holding down the UNLOCK button will open the side windows.

Theft Deterrent System

This system is designed to help protect your vehicle from theft.

Engine immobilizer



This system only allows the engine to start if a registered key is used.

This deters theft caused by the use of unauthorized keys.

Alarm

Forcibly unlocking the doors, trunk, or hood without the key or wireless remote control causes the horn to blow and the exterior lights to flash, alerting those in the surrounding area.

Steering lock



The steering wheel is locked when the engine switch is turned off.

If the security indicator light is flashing when you leave the vehicle, the engine immobilizer and alarm are set.

To stop the alarm, unlock the doors or trunk with the key or wireless remote control, or turn the engine switch to the ON position.

Seats

■ Adjusting seat position



- 1 Moves seat forward
- 2 Moves seat back

■ Adjusting seatback angle



- 1 Incline
- 2 Recline

■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire cushion

■ Adjusting firmness



The lumbar support can be adjusted.

- 1** Firmer
- 2** Softer

■ Inclining front seat



- 1** Incline

Seat Position Memory System

With the push and hold of a button, you can adjust the seat to a set customized position. The steering column and outside rear view mirrors are adjusted along with the driver's seat. Positions can be conveniently recorded for drivers and frequent passengers.

Setting positions



- 1 Push the "SET" button.
- 2 Within 3 seconds after the "SET" button is pushed, push button "1" or "2" until the signal beeps.
This operation is also available while pushing and holding the "SET" button.

Recalling positions



Push and hold one of the memory buttons (1 or 2) for more than 1 second.

Front Head Restraints

Height adjustment



- 1 To raise: pull upward
- 2 To lower: depress the button and push down

■ Angle adjustment



Move forward and backward.

■ Seat Belts

■ Seat belt guides



To use the seat belt guide, detach the hook, let the seat belt run under the guide and then reattach the hook.

■ Rear seat belt holders



Hold the rear seat belt with the holder when not in use.

Outside Rear View Mirrors

Adjustment



1 Use the master switch to select which mirror to adjust (L or R).

2 Adjust the angle using the control switch.

Auto tilt:

Move the master switch to “L” or “R”, Mirrors automatically tilt down when shifting into reverse. To deactivate, move the master switch to middle position.

Folding rear view mirror



1 Push inward

Anti-glare Inside Rear View Mirror

The auto-dimming function reduces glare from the headlights of vehicles behind you.

Setting AUTO mode




Push the AUTO button.


The indicator light comes on when AUTO mode is selected.

Steering Column

Raising and lowering

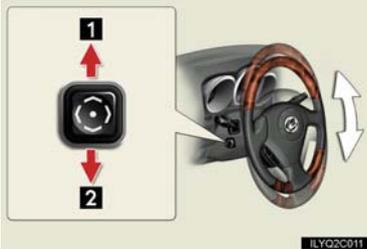

Adjusting forward/back

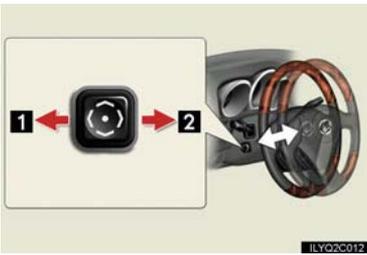

When the key is removed, the steering column moves to provide easy exit and entry. When the key is inserted, the steering column returns to its previously set position.

Starting

Starting the engine

Make sure the parking brake is engaged and the shift lever is in "P".



1 Depress the brake pedal.



2 Turn the engine switch to START.
The engine will start.

Stopping the engine

1 Depress the brake pedal and move the shift lever to "P".

2 Turn the engine switch to OFF.

Engine (ignition) switch



1 LOCK

2 ACC


The audio system and other accessories can be used.

3 ON

4 START

Automatic Transmission

Shift range positions

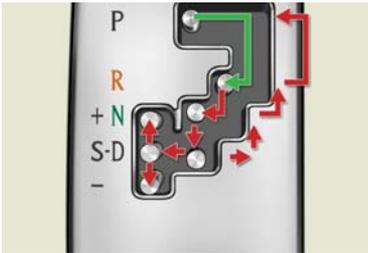


- P Parking and engine starting
- R Reverse position
- N Neutral position
- D Normal driving position
- S Sequential mode driving

Switching out of "P" position can only be performed while the brake pedal is depressed.

Sequential mode

Sequential mode allows the driver to select gears based on driving conditions.

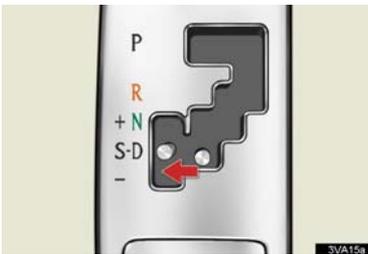

Move the shift lever to the "S" position.



Upshifting : move the lever to the "+" side

Downshifting : move the lever to the "-" side
1st through 6th gear can be selected.

The selected shift range is displayed on the instrument cluster.

NOTE: Downshifting increases power going uphill, or increases engine braking going downhill or stopping.

During normal driving conditions, always drive in "D" position for best fuel economy.

Parking Brake

Setting the parking brake



Firmly depress the parking brake pedal.

Releasing the parking brake



Pull the lever.

Turn Signal Lever



- 1 Left turn
- 2 Right turn

Lane changes can be signaled by moving and holding the lever partway.

Emergency Flasher Switch



All the turn signal lights will flash.

The emergency flashers will work even when the engine is off.

ECT Switch

Use to select a mode suitable to driving and road conditions.



- 1 "Power" mode**
For more powerful acceleration and sporty driving
- 2 "Normal" mode**
For ordinary driving
- 3 "Snow" mode**
For slippery road surfaces and slower acceleration

The indicator light comes on when in "Power" or "Snow" mode.

TRAC/VSC Off Mode

This switch turns off the traction control system or the vehicle stability control system. Use this switch if the wheels get stuck in snow, mud, etc.



To turn off TRAC: Push the VSC OFF switch briefly. The slip indicator light will come on.

To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip indicator light and VSC OFF indicator light will come on.

Press the switch again to turn the system back on.

Cruise Control

The cruise control allows the vehicle to be driven at a fixed speed without using the accelerator pedal.

Use for highway driving or when traveling at the same speed for long periods of time.



- 1 Indicator
- 2 Cruise control switch

■ Setting the speed



- 1 Press the “ON-OFF” button
The system will turn on.
- 2 Push the lever down while traveling at the desired speed
This sets the vehicle at that speed.

■ Canceling



Pull the lever to temporarily cancel the preset speed.

Press the “ON-OFF” button to turn the system off.

■ Resetting the speed



Using the lever.

To increase speed: raise the lever

To decrease speed: lower the lever

Release the lever when the desired speed is reached.

Using the acceleration/brake pedal.

 
 
Push the lever down after accelerating/ decelerating to the desired speed.

Depressing the brake pedal cancels the preset speed. To return to the preset speed, raise the lever.

Trip Information Display

The following information concerning your vehicle is displayed.

Display information



Trip information

- Available driving distance
- Average fuel consumption
- Average vehicle speed

Changing trip information display




The display changes each time the "TRIP INFO" button is pressed.

Headlights



- 1 Parking lights, license plate lights, tail lights, side marker
- 2 Parking lights, license plate lights, tail lights, side marker and headlights
- 3 Headlights come on automatically according to the surrounding light level

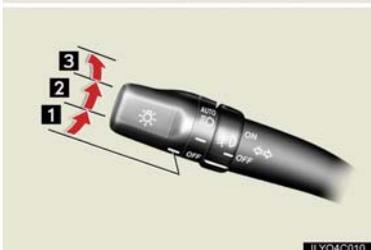

Push the lever forward to activate the high beams.
Pull and hold the lever to temporarily activate the high beams.



Adaptive Front Lighting System (AFS)




The headlights are set to automatically move left or right to match the turning angle of the vehicle.
Press the "AFS OFF" button to cancel the system.

The indicator light comes on when the system is off.

Fog Lights



- 1 OFF
- 2 ON

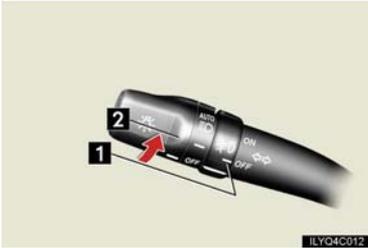

Headlight Cleaner



Can be used when the headlights are on and the engine switch is in the "ON" position.

Windshield Wipers and Washers

Variable intermittent wipers



- 1 Intermittent operation
- 2 Low speed
- 3 High speed
- 4 Washer fluid



Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

Rear Window and Outside Mirror Defoggers



Press the switch to defog the outside mirrors and rear window.

Press again to cancel.

The system will automatically turn off after 15 minutes.

Instrument Panel Light Control



- 1 Darker
- 2 Brighter

Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

Basic operation



- 1 Displays the audio control screen
- 2 Sound quality modes
- 3 Audio sources
 - AM·FM: AM·FM radio mode
 - SAT: Satellite Radio* mode
 - DISC: DVD changer mode
 - AUX·USB: Auxiliary audio device/
Bluetooth® audio player/USB
memory/iPod®
- 4 Power/Volume

*: The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM® Satellite Radio broadcasts. (Subscription and installation of the antenna is required. For detailed information, see the navigation system Owner's Manual.)

Radio



- 1 Displays the audio control screen
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Station select
- 6 Seek

• Entering station presets

- 1 Select the desired station by using the tuner, seek or scan function.
- 2 Press and hold one of the preset switches (1-6) until you hear a beep, indicating that the station is set.

DVD player/CD player

• Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Eject
- 8 Track select/rewind/fast-forward

• Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

• Playing a DVD



- 1 Displays the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Eject
- 7 Chapter select/rewind/fast-forward

• Loading a disc

- 1 Press the “LOAD” button.
- 2 When the indicator changes from flashing orange to green, insert a disc after the disc slot door opens.

• Loading multiple discs

- 1 Press and hold the “LOAD” button until you hear a beep.
- 2 When the indicator change from flashing orange to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing orange to green, then insert the next disc after the disc slot door has opened.

Repeat steps 2 and 3 until you have inserted all discs.

To cancel the operation, press the “LOAD” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ Operating an iPod®



- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random play
- 6 Track list
- 7 Track select
- 8 Track select/rewind/fast-forward

■ Audio remote control (steering switches)

It is possible to operate the audio system without removing your hands from the steering wheel.



- 1 Volume adjustment
- 2 RADIO mode: select station/tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod® mode: song select
- 3 Power on/change mode: press
Power off: press and hold

■ Audio door




Push the button to open or close.

Portable Audio Device Adapter

This adapter can be used to connect a portable audio device and listen to it through the vehicle's speakers.

Display information

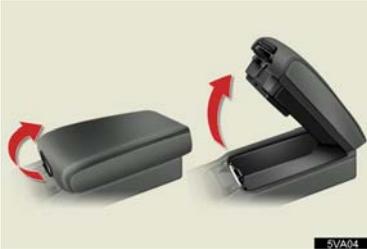

Pull up on lower tab.
Lift to open.



Open the cover and connect a USB memory or iPod® using an iPod® cable.

Audio System (without navigation system)

Basic operation



5VA10

1 Power ON/OFF, volume adjustment

2 Mode selectors

3 Changing sound quality modes

4 Adjusting sound quality

• Switching modes

AM Radio mode (AM)

TAPE Tape mode

FM Radio mode (FM)

DISC CD mode

■ Audio remote control (steering switches)

It is possible to operate the audio system without removing your hands from the steering wheel.




- 1** Volume adjustment
- 2** RADIO mode - select station / tuner
TAPE mode - fast forward / rewind
CD mode - select disc or track
- 3** Switch modes

■ Audio door



Push the button to open or close.

Radio mode

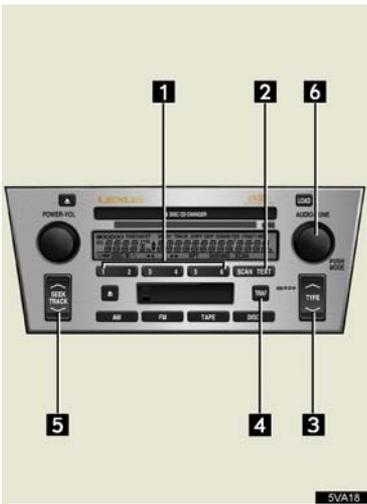


- 1 Enter or select preset stations
- 2 Receive radio text messages
- 3 Display selected programs
- 4 Receive traffic information
- 5 } Tuning
- 6 }

• Entering station presets


- 1 Turn the power on
- 2 Switch to radio mode
- 3 Push  or turn  to select the desired station.
- 4 Hold down one of the buttons  through  until you hear a beep.

Tape mode

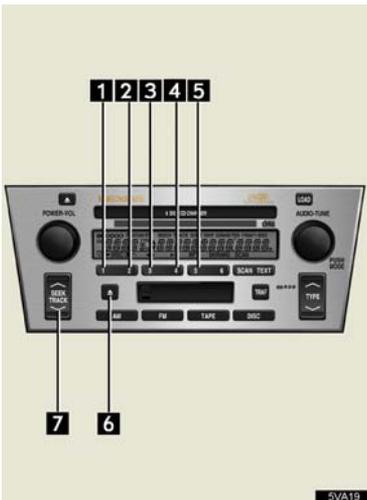

- 1 Reverse playback direction
- 2 DOLBY NR ON/OFF
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
- 6 Eject
- 7 Skip tracks

■ Disc mode (CD player)

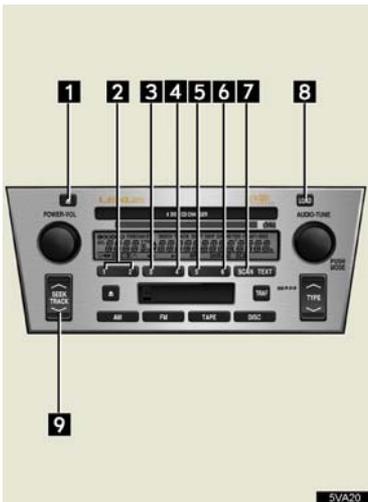

- 1 Eject disc
- 2 Select disc
- 3 Rewind
- 4 Fast forward
- 5 Repeat current track
Repeat current disc (push and hold)
- 6 Current disc random playback
All disc random playback
(push and hold)
- 7 Play beginning of each track on current disc
Play beginning of the first track of each disc
(Push and hold)
- 8 Load disc
- 9 Select track


• Loading a single CD

- 1 Press the **LOAD** button.
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert the disc.

• Loading multiple CDs


- 1 Hold down **LOAD** until you hear a beep.
“WAIT” appears on the display.
- 2 When the “WAIT” display changes to “LOAD”, insert one disc.
- 3 Once the disc is inserted, “WAIT” appears again on the display.
- 4 Repeat steps 2 and 3.

Climate Control

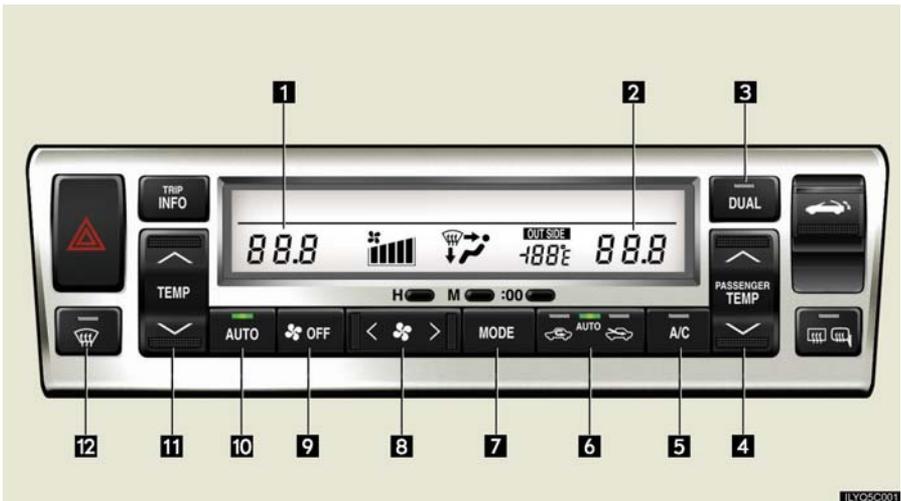


- | | |
|--------------------------------------|------------------------------------|
| 1 Driver side temperature display | 7 Air flow controls |
| 2 Passenger side temperature display | 8 Fan speed controls |
| 3 Switch to "DUAL" mode | 9 "OFF" button |
| 4 Passenger side temperature control | 10 Switch to "AUTO" mode |
| 5 "A/C" switch | 11 Driver side temperature control |
| 6 Air intake controls | 12 Windshield defog/defrost |

“AUTO” mode

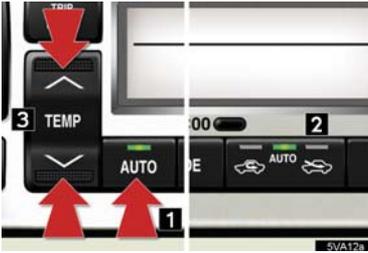

- 1 Push the “AUTO” button
- 2 Push the air intake controls a few times until the “AUTO” indicator turns on.
- 3 Adjust the temperature with the “TEMP” button.

“DUAL” mode

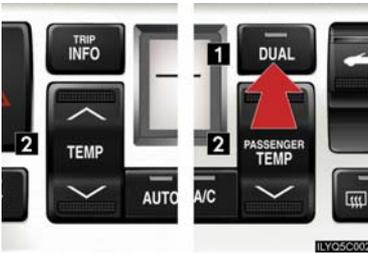

In “DUAL” mode, driver and passenger side temperature settings can be controlled separately.

- 1 Push the “DUAL” button.
- 2 Adjust the driver side temperature with the “TEMP” button, and the passenger side temperature with the “PASSENGER TEMP” button.

When the outside temperature is low, the windshield may fog up more easily. In this case, push the air intake controls to select the outside air mode.

Seat Heater Switches



- 1 ON
Turn the dials to the left.
- 2 OFF
Turn the dials to the right until they stop.

Console Box

Upper box




Press the button to release the lock.
Lift armrest to open.

Lower box



Pull up on lower tab.
Lift to open.

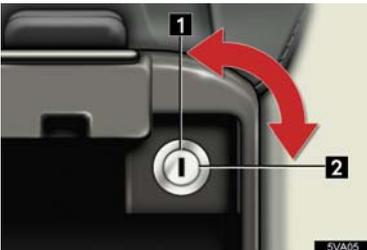


- 1 Unlock the lower box
- 2 Lock the lower box

There is an accessory 12 V / 10 A power outlet located inside the console box.



Coin Box

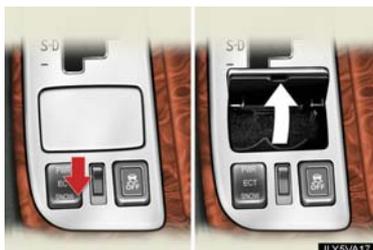

Slide the switch backward.

Cup Holder




Push the cup holder lid to open.



- 1 Push in the cup holder
- 2 Close the lid

Cigarette Lighter and Ashtray

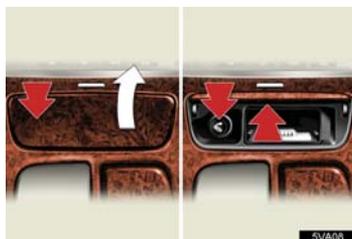

Push the lid to open.

Push the cigarette lighter down.

To remove the ashtray, pull it out.


Glove Box



- 1 Open
- 2 Lock
- 3 Unlock

To lock, insert the master key and turn it clockwise.

Auxiliary Box

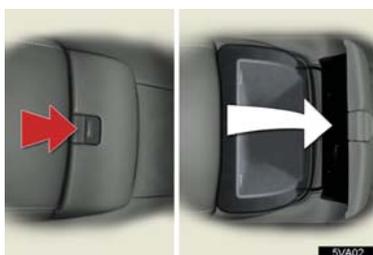

Push the tab to open.

Garage Door Opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

■ Programming HomeLink®

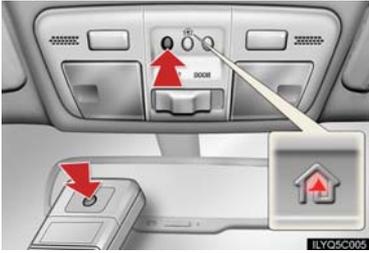

- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.

- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the learn button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all devices, follow the same procedure as for garage door programming.


■ Operating HomeLink®



Press the appropriate HomeLink® button. The indicator light should come on.

Doors

■ Using the lock button

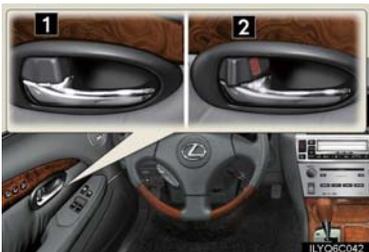


- 1 Lock
- 2 Unlock

■ Using the power door lock switch



- 1 Lock
- 2 Unlock

■ Using the key

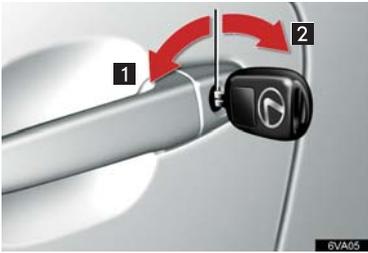

- 1 Lock
- 2 Unlock

Power Windows




- 1 **Power window switches**
To lower the window, push the switch down.
To raise the window, pull the switch up.
- 2 **Window lock switch**
When the window lock switch is pressed in, only the driver's window can be raised or lowered.

Fully lifting or pressing the power window switch make the window raise fully or lower fully automatically.

Retractable Hardtop

Opening and Closing

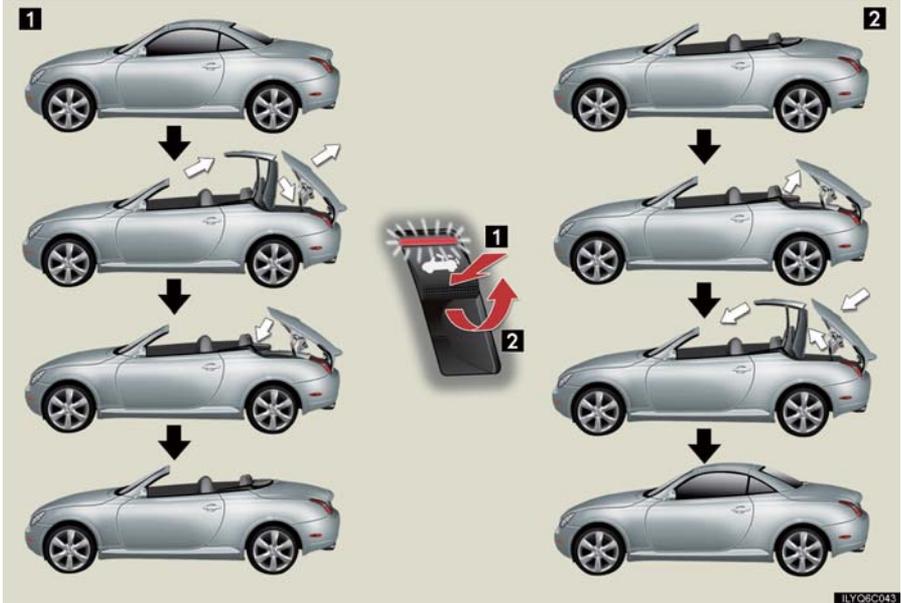

- 1 Hold down the switch.
- 2 Pull up the switch.

The indicator remains on while the retractable hardtop is operating. When the retractable hardtop is fully opened or closed, the indicator goes off and a beep sounds.

Fuel Tank Cap



- 1 Push the fuel filler door opener switch.



- 2 Remove the cap by slowly turning it counter-clockwise.
The removed cap can be stored on the fuel filler door.

The display indicates that the fuel filler door is on the left side of the vehicle.



Hood




- 1 Pull the hood lock release lever under the instrument panel.



- 2 Inserting your fingers under the hood, push up the auxiliary catch lever and lift.

Trunk

Trunk lid opener switch

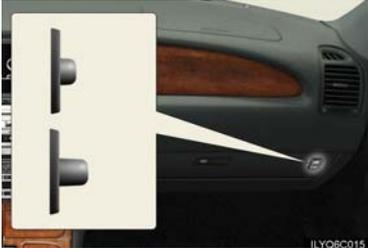

1 Make sure the main switch located in the glove box is on.



2 Push and hold the trunk lid opener switch for about 1 second.

The trunk can also be opened with the wireless remote control. See page 6.

What to do if ...

If the following warning light comes on ...



ILY7VA03a

Stop the vehicle immediately



Brake system warning light
(U.S.A.)



Low engine oil pressure warning light



Brake system warning light
(Canada)



Charging system warning light

Have the vehicle inspected immediately



Malfunction indicator lamp
(U.S.A.)



ABS warning light
(U.S.A.)



Malfunction indicator lamp
(Canada)



ABS warning light
(Canada)



SRS warning light



Adaptive front lighting system off indicator (When flashing)



(Flashing and then continuously on)

Tire pressure warning light



Rear light failure warning light



VSC OFF indicator (When flashing)

For further information, refer to the Owner's Manual.

Follow the correction procedures



Low engine oil level warning light



Open door warning light



Low fuel level warning light



Low washer fluid warning light



Driver's seat belt reminder warning light



Front passenger's seat belt reminder warning light



Engine oil replacement reminder light (U.S.A.)



(Illuminate no flashing)

Tire pressure warning light*

See the Owner's Manual



Turn signal indicator



ECT SNOW indicator



Headlight high beam indicator



ECT PWR indicator



Headlight indicator (U.S.A.)



Cruise control indicator



Tail light indicator (Canada)



VSC OFF indicator



Front fog light indicator



Slip indicator



Shift position indicator



Adaptive front lighting system off indicator



Shift range position indicator




Front passenger airbag on-off indicator

For further information, refer to the Owner's Manual.

*: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire (excluding compact spare tire). Adjust the tire inflation pressure.


Location of Emergency Equipment

Jack, tools, and spare tire

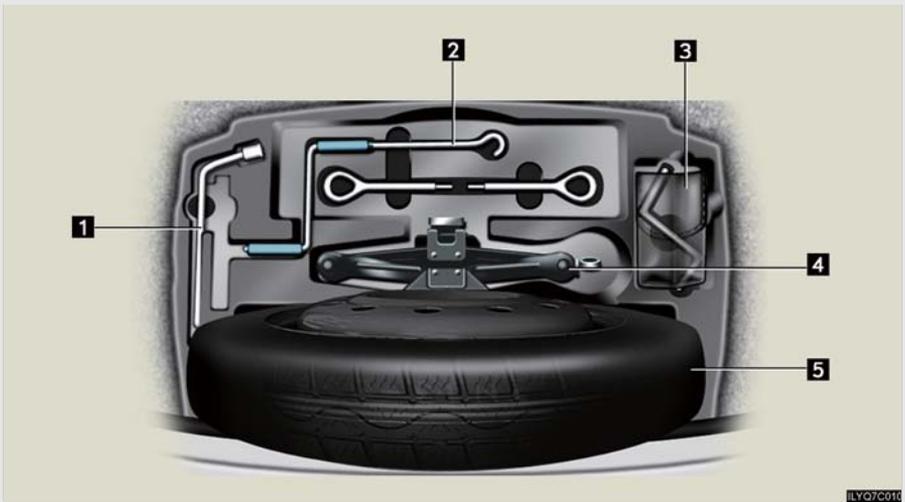


- 1 Wrench
- 2 Jack handle
- 3 Tool bag
- 4 Jack
- 5 Spare tire (if equipped)

Removing the spare tire

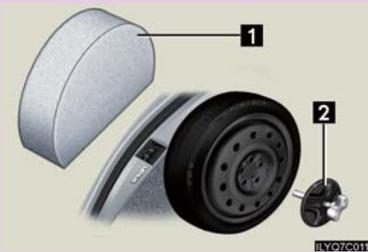

- 1 Remove the tire cover.
- 2 Loosen the bolt and remove the spare tire.

If the retractable hardtop does not close

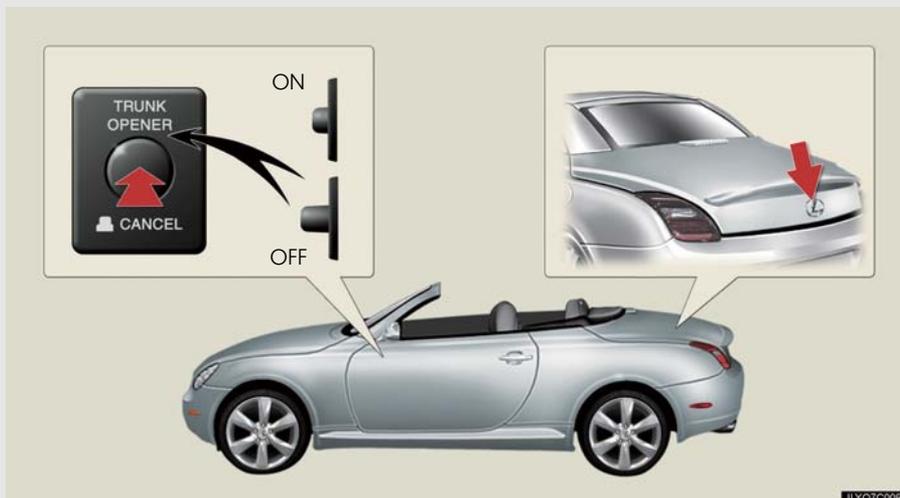

First, check the following:

Is the trunk lid opener main switch ON?

Is the trunk lid closed?

If the retractable hardtop still does not close, see the owner's manual for more information or contact your Lexus dealer.

If the engine (ignition) switch does not turn easily



Turn the engine switch while lightly moving the steering wheel from left to right.

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Item	Description	Setting (default setting at left)
Wireless remote control	Wireless remote control function	Enable/Disable
	Door unlock function	One push unlocks the driver's door, second push unlocks passenger's door/ Ask your Lexus dealer
	Operation indicator buzzer	Enable/Disable
	Operation indicator buzzer volume	Ask your Lexus dealer
	Open door warning function	Enable/Disable
	Automatic door locking function (if a door is not opened after being unlocked)	Enable/Disable 60 seconds/Ask your Lexus dealer
	Trunk unlock function	Push for about 1 second/ Ask your Lexus dealer
	Lock/Unlock turn signal light confirmation	Enable/Disable
Door lock	Unlock function	One turn unlocks the driver's door, second turn unlocks passenger's door/ Ask your Lexus dealer
	Speed-detecting automatic door lock function	Disable/Enable
	Opening driver's door unlocks all doors	Disable/Enable
	Shift the shift lever to "P" unlocks all doors	Enable/Disable
	Shift the shift lever to position other than "P" locks all doors	Enable/Disable
Power windows	Integrated door key operation	Enable/Disable
	Wireless remote control integrated operation	Open/Disable
Alarm	Wireless remote control theft deterrent buzzer	Enable/Disable

Item	Description	Setting (default setting at left)
Headlights ("AUTO" mode)	Ambient light sensor sensitivity	Ask your Lexus dealer
	Time period before lights turn off	30 seconds/Ask your Lexus dealer
Windshield wiper operation	Automatic shift from LO speed to intermittent when the vehicle is stopped	Enable/Disable
	Automatic wipe during mist operation	Enable/ Disable
Steering column	Automatic tilt-away function	Enable/ Disable
Illumination	Time elapsed before lights turn off	15 seconds/Ask your Lexus dealer
	Operation after the engine switch is turned OFF	Enable/Disable
	Outer foot lights	15 seconds/Ask your Lexus dealer



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.