

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

| | |
|---|----|
| Air Conditioning System* | |
| Adjusting the temperature | 62 |
| Air conditioning control screen | 63 |
| Using automatic mode..... | 64 |
| Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)..... | 64 |
| ASC (Active Sound Control) | 32 |
| Audio System (with Lexus Display Audio)* | |
| Lexus Display Audio operation buttons | 58 |
| Using the steering wheel switches to change audio sources | 58 |
| Audio menu screen | 59 |
| Operating the audio system using the steering wheel switches | 61 |
| Audio System (with navigation system)* | |
| Audio control screen | 48 |
| Remote control (steering wheel switches)..... | 48 |
| Basic operation | 49 |
| Radio..... | 50 |
| DVD player/CD player..... | 50 |
| Operating an iPod | 52 |
| Automatic High Beam | 17 |
| BSM (Blind Spot Monitor) | 29 |
| Cruise Control | 23 |
| Dynamic Radar Cruise Control | 25 |
| Floor Mat Installation | 11 |
| Garage Door Opener | 72 |

*: This feature may be operated by Voice command (See P.66)

| | |
|---|----|
| Hands-free System For Cellular Phone (with Lexus Display Audio)* | |
| How to register a Bluetooth® phone..... | 55 |
| Registering favorites..... | 55 |
| Dialing..... | 55 |
| Dialing from the phonebook..... | 55 |
| When the phonebook is empty..... | 56 |
| Dialing from favorites..... | 56 |
| To answer the phone..... | 57 |
| To refuse a call..... | 57 |
| Operating a telephone using the steering wheel switches..... | 57 |
| Hands-free System For Cellular Phone (with navigation system)* | |
| Bluetooth® phone pairing..... | 43 |
| Contacts transfer..... | 44 |
| Registering the contacts in the favorites list..... | 45 |
| Calling by name..... | 46 |
| Calling by favorites list..... | 46 |
| Calling using e-mail/SMS/MMS message..... | 47 |
| Receiving a call..... | 47 |
| Steering switches..... | 47 |
| Headlights | 16 |
| Intuitive Parking Assist | 29 |
| LDA (Lane Departure Alert) | 28 |
| Lexus Display Audio Controller | 53 |
| Lexus Enform | 76 |
| Lexus Enform Safety Connect | 74 |
| Multi-information Display | 13 |

*: This feature may be operated by Voice command (See P.66)

| | |
|---|----|
| Navigation System* | |
| Register home | 37 |
| Destination input — Search by address | 38 |
| Destination input — Search points of interest by name | 40 |
| Destination input — Search points of interest by category | 41 |
| Destination input — Search points of interest by telephone number | 42 |
| Voice Command System..... | 66 |
| Portable Audio Device Ports | 72 |
| Remote Touch | 33 |
| Seat Heaters/Seat Ventilators | 65 |
| Tire Pressure Warning System | 31 |
| Turn Signal Lever | 12 |
| Voice Command System* | |
| Basic operation | 66 |
| Command list..... | 67 |
| Windshield Wipers and Washer | 19 |
| XM Satellite Radio | 79 |

*: This feature may be operated by Voice command (See P.66)



Overview

Instrument Panel

Windshield wiper and washer switch P.19

Multi-information display P.13


Turn signal lever P.12

Headlight switch P.16

Fog light switch**

See P.8

See P.7

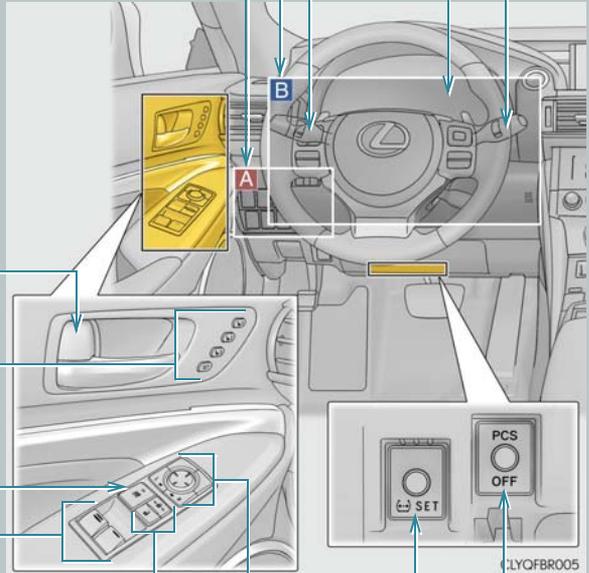

Inside lock buttons *

Driving position memory switches**

Window lock switch *


Power window switches *

Door lock switches *

Outside rear view mirror switches *

Tire pressure warning reset switch P.31

PCS OFF switch**

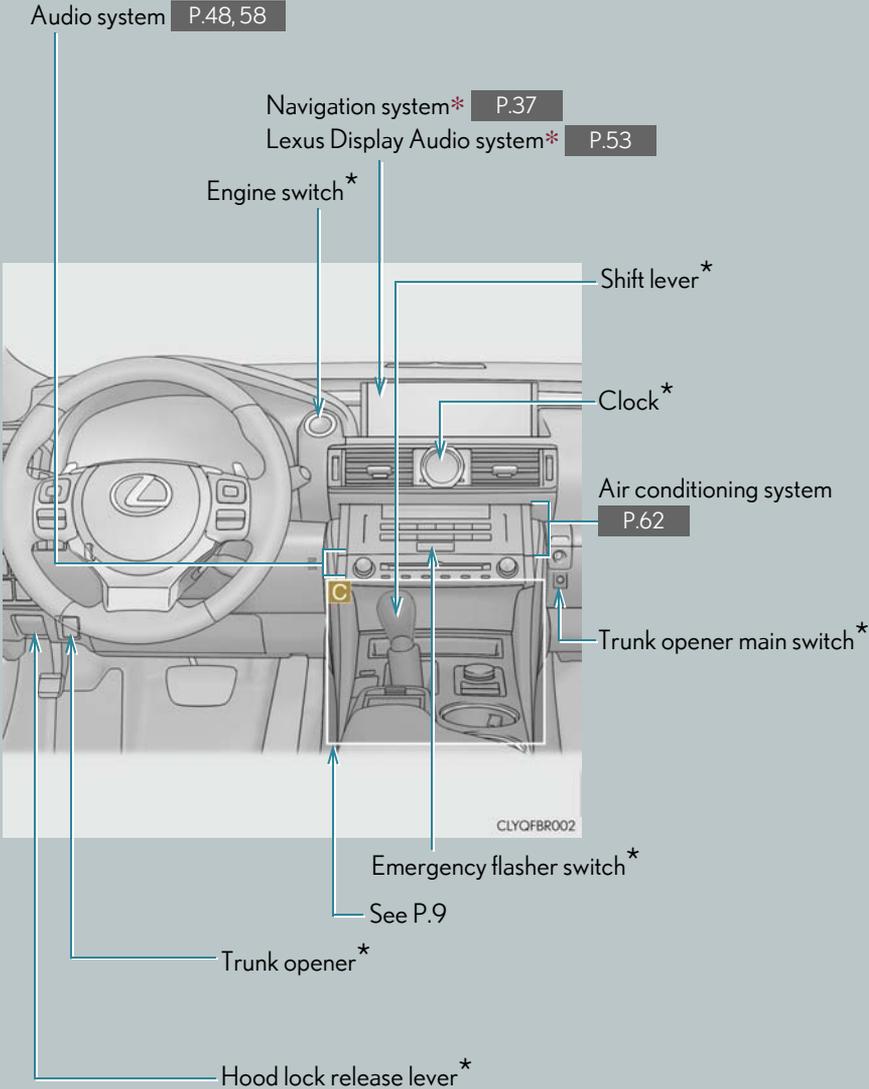

*: If equipped
 *: Refer to "OWNER'S MANUAL".

Overview

Instrument Panel

A


ASC switch* P.32

Windshield wiper de-icer switch* *

Automatic high beam switch* P.17

Odometer/trip meter/trip meter reset button*

Instrument panel light control switches*

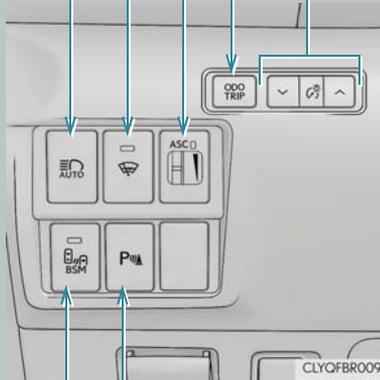

Intuitive parking assist switch* P.29


BSM (Blind Spot Monitor) main switch* P.29

B

Meter control switches P.15

Audio remote control switches
P.48, 61

Paddle shift switches*

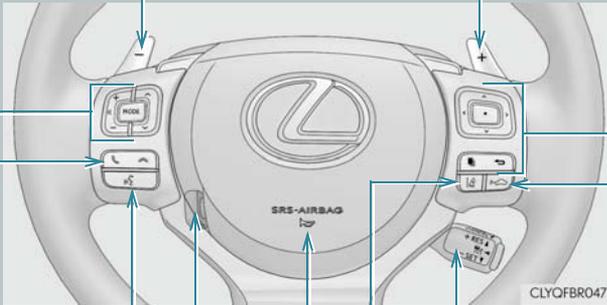

Talk switch
P.47, 57

Horn*

Cruise control switch
P.23, 25

Tilt and telescopic
steering control switch*^{*}

Telephone switches
P.47, 57


LDA (Lane Departure Alert)
switch* P.28

Vehicle-to-vehicle distance button* P.26

*: If equipped


*: Refer to "OWNER'S MANUAL".

C

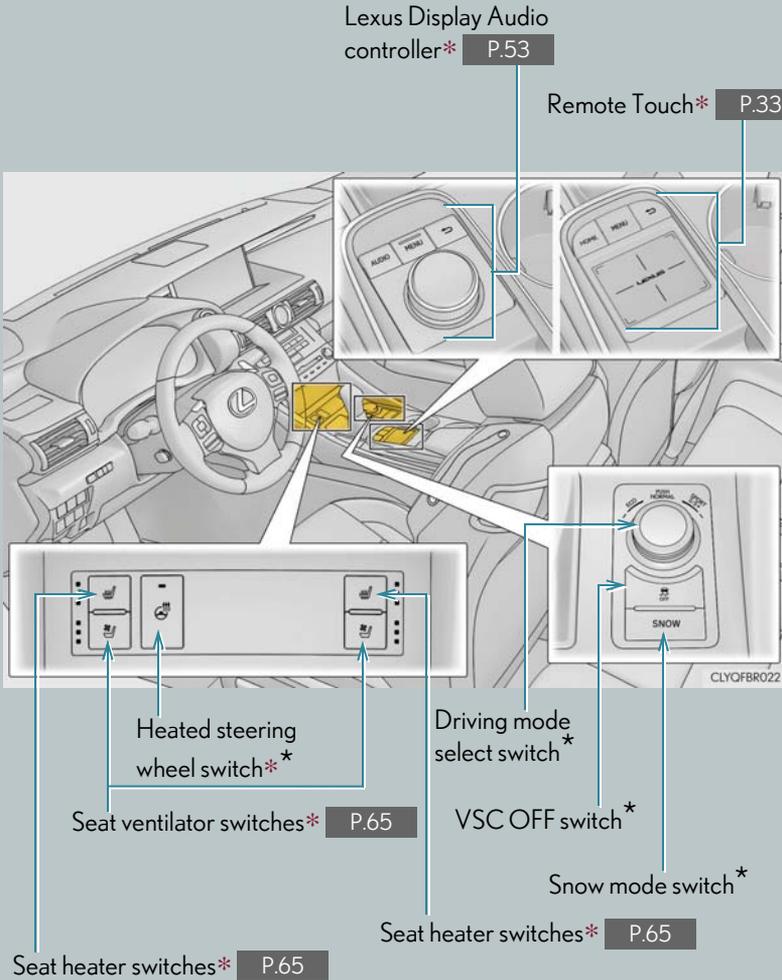

*: If equipped

*: Refer to "OWNER'S MANUAL".

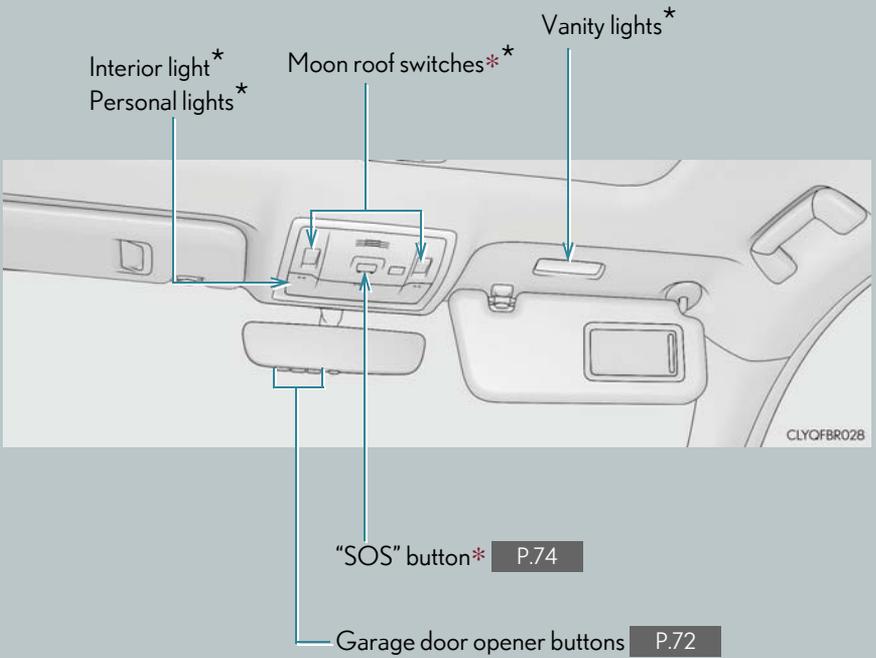


*: If equipped


*: Refer to "OWNER'S MANUAL".

Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

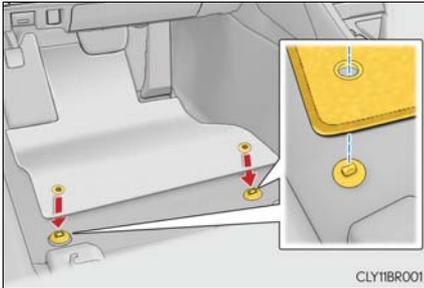

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

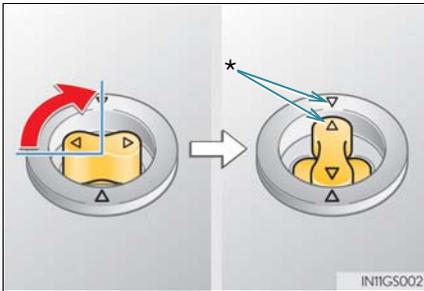


- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the \triangle marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Turn Signal Lever

The lever will return to its original position immediately after operation.

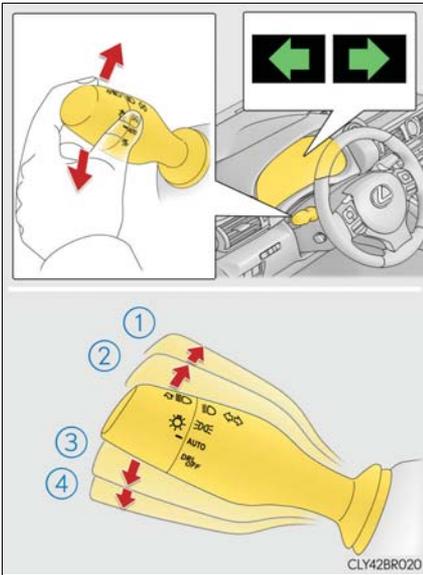

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing

Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.


■ Customization

The number of times the turn signals flash during a lane change can be changed.

Multi-information Display

Display content

▶ Except F SPORT models

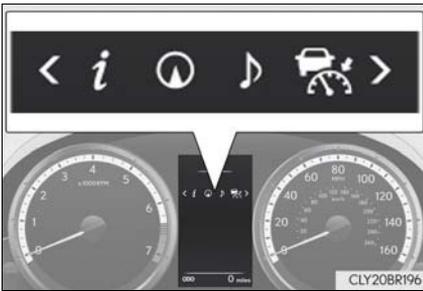

Selecting a menu icon displays a variety of vehicle data or allows vehicle settings to be customized.

▶ F SPORT models

● Main meter in center position:

Displays various drive information on the main meter.

Content displayed is the same as those which are displayed when the main meter is moved to the right.



● Main meter moved to the right: Selecting a menu icon displays a variety of vehicle data or allows vehicle settings to be customized.

Menu icons

Displays the following information when an icon is selected.



Drive information

Select to display various drive data.



Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the meter using the meter control switches.



Dynamic radar cruise control operation guide (vehicles with dynamic radar cruise control)

- Select to display operation procedures of the dynamic radar cruise control. (→P. 25)
- When the vehicle is in constant speed control mode (→P. 27), the menu icon will change to .
- Vehicles with LDA (Lane Departure Alert): If the LDA system is activated, its operational status will also be displayed.



LDA (Lane Departure Alert) operational status (vehicles with LDA but without a dynamic radar cruise control)

Select to display the operational status of the LDA system.



Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.

 


Settings display

Select to change the meter display settings.

■ Operating the meter control switches

The multi-information display is operated using the meter control switches.



- ① < > : Switch menu
- &^ &v : Change displayed content, scroll up/down the screen and move the cursor up/down
- ② Press: Enter/Set
Press and hold: Reset
- ③ Return to the previous screen

▶ Except F SPORT models

- ④ Press: Displays the screen registered to 
When no screen has been registered, the drive information screen will be displayed.
Press and hold: Registers the currently displayed screen to 
When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.


▶ F SPORT models

- ④ Move the main meter
When the main meter moves to the right, the menu icons will be displayed on the left side.

- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.
- Move the main meter (F SPORT models)
Moves between center and right-side positions.




Headlights

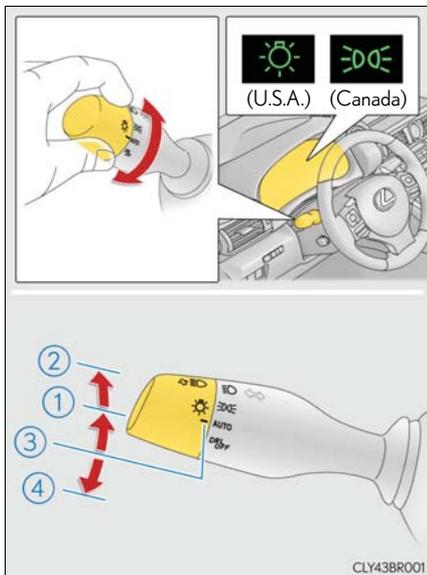

- ① The side marker, tail, license plate and instrument panel lights turn on.
- ② The headlights and all lights listed above turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the engine switch is in IGNITION ON mode.)
- ④ **DRL OFF** (U.S.A.)
○ The daytime running lights turn (Canada) on.

Turning on the high beam headlights

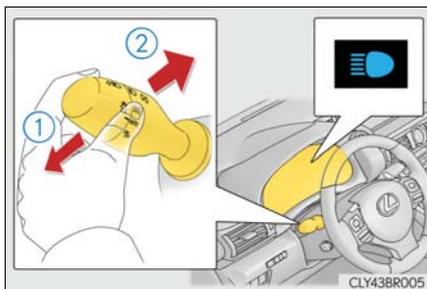


- ① With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


Automatic High Beam (if equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns the high beam on or off as necessary.

■ Activating the Automatic High Beam system

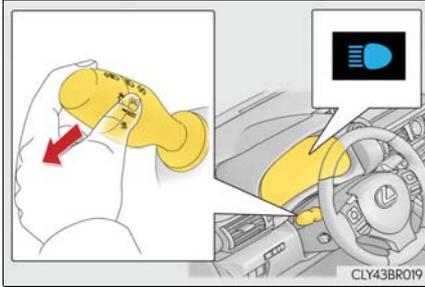


- 1** Push the lever away from you with the headlight switch in the **AUTO** or  position.

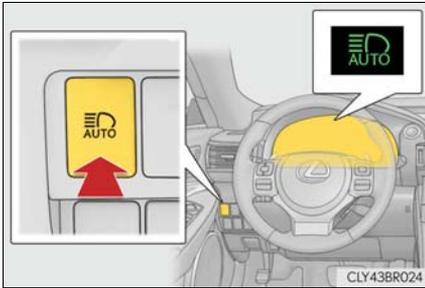

- 2** Press the Automatic High Beam switch. The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

■ Turning the high beam on/off manually

● Switching to low beam

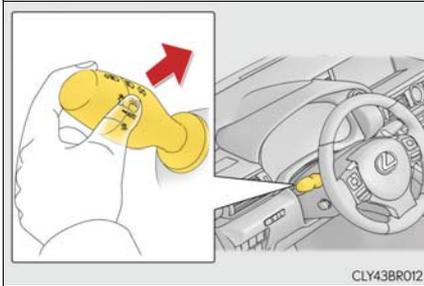


Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

● Switching to high beam

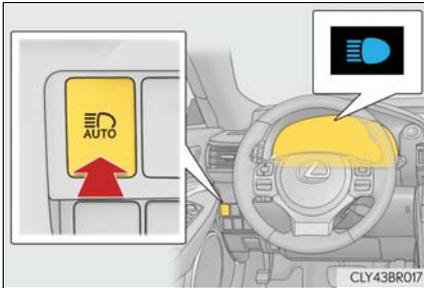

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

Windshield Wipers and Washer


The lever will return to its original position after operation.

► Intermittent windshield wipers with interval adjuster




- ① OFF (U.S.A.) or (Canada)
Move the lever up by 2 levels
- ② Move the lever up by 1 level
- ③ (U.S.A.) or (Canada)
Move the lever down by 1 level
- ④ HI (U.S.A.) or (Canada)
Move the lever down by 2 levels

| Operation Status before operation | OFF or | | or | HI or |
|--|---------------------|------------------------|------------------------|----------------------|
| Off | Temporary operation | Temporary operation | Intermittent operation | High speed operation |
| Intermittent operation | Off | Off | Low speed operation | High speed operation |
| Low speed operation | Off | Intermittent operation | High speed operation | High speed operation |
| High speed operation | Off | Low speed operation | No change | No change |

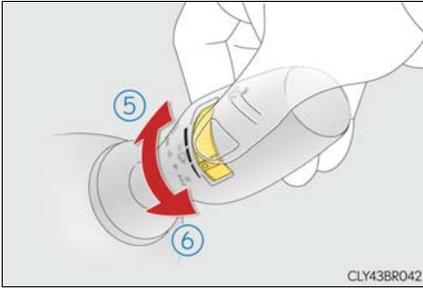

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

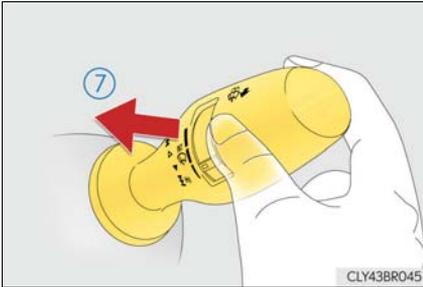


- ⑦ Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Rain-sensing windshield wipers

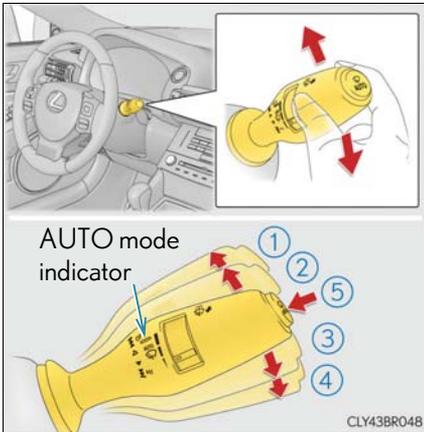

- ① OFF (U.S.A.) or (Canada)
Move the lever up by 2 levels
- ② Move the lever up by 1 level
- ③ (U.S.A.) or (Canada)
Move the lever down by 1 level
- ④ HI (U.S.A.) or (Canada)
Move the lever down by 2 levels
- ⑤ AUTO AUTO mode on/off switch


With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The AUTO mode indicator will turn on when AUTO mode is selected.

| Status before operation \ Operation | | OFF or | | or | HI or |
|-------------------------------------|------------------------|---------------------|------------------------|------------------------|-------------------------|
| | | Off | Temporary operation | Temporary operation | Low speed operation |
| Low speed operation | Off | Off | High speed operation | High speed operation | |
| High speed operation | Off | Low speed operation | No change | No change | |
| AUTO mode | Intermittent operation | Off | Temporary operation *1 | Low speed operation *2 | High speed operation *2 |
| | Continuously | | No change | | |


*1: After temporary operation, the mode will return to AUTO mode.

*2: AUTO mode will be canceled.

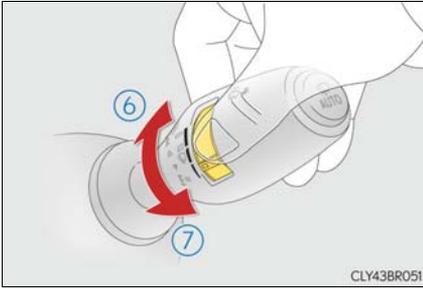

When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity

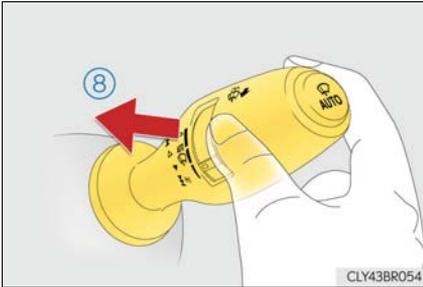


- ⑧ Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:
When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.


Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

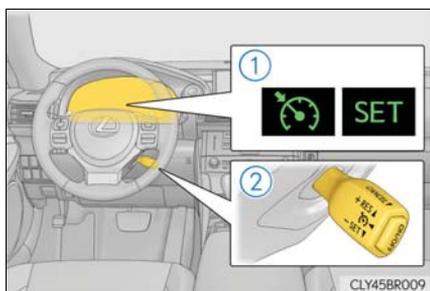


- 1 Indicators
- 2 Cruise control switch

Setting the vehicle speed

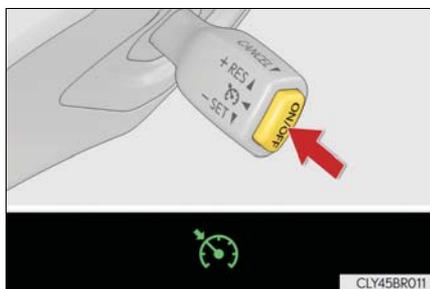


- 1 Press the "ON/OFF" button to activate the cruise control. Cruise control indicator will come on. Press the button again to deactivate the cruise control.

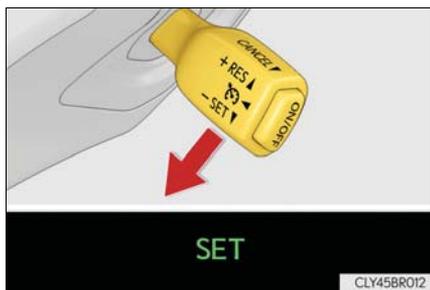

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 25 mph [40 km/h]) and push the lever down to set the speed. Cruise control "SET" indicator will come on. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

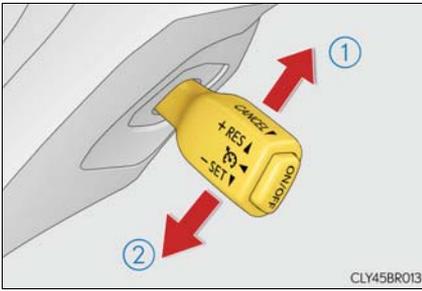


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

■ Canceling and resuming the constant speed control

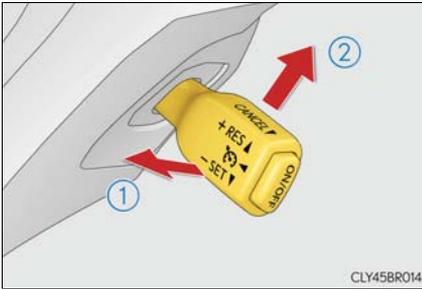

① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brake pedal is depressed.


② Pushing the lever up resumes the constant speed control.

However, resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Dynamic Radar Cruise Control (if equipped)


Without accelerator pedal operation by the driver, in vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates in accordance to the changes in speed of the preceding vehicle. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control on freeways and highways.

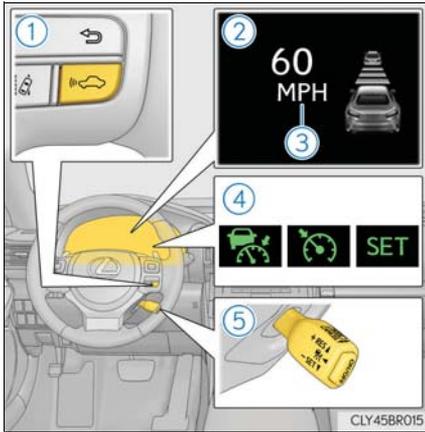


- 1 Vehicle-to-vehicle distance button
- 2 Display
- 3 Set speed
- 4 Indicators
- 5 Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

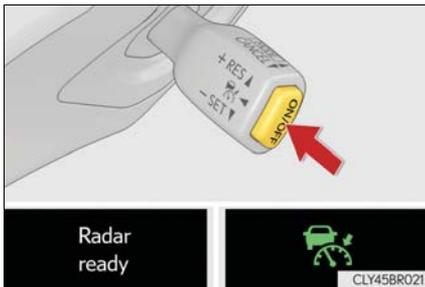


 - 1 Press the "ON/OFF" button to activate the cruise control. Radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the button again to deactivate the cruise control.



- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed. Cruise control "SET" indicator and set speed will be displayed. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

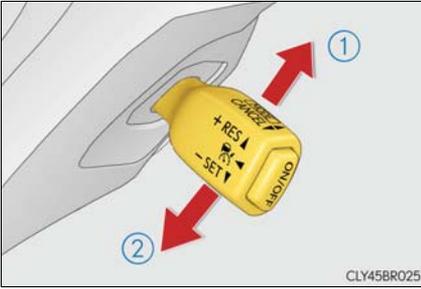


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

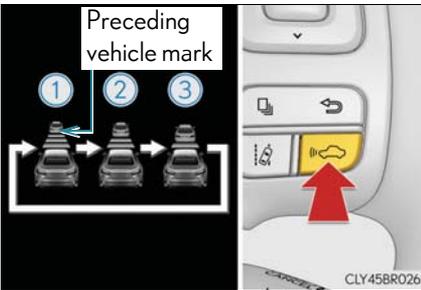

Pressing the button changes the vehicle-to-vehicle distance as follows:

① Long

② Medium


③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ Canceling and resuming the speed control

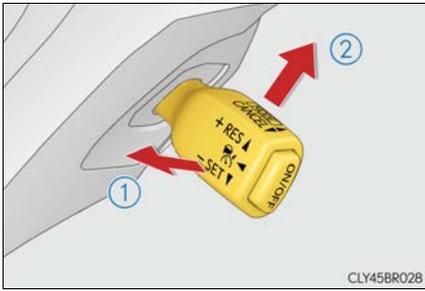

- ① Pulling the lever toward you cancels the speed control.
The speed setting is also canceled when the brake pedal is depressed.
- ② Pushing the lever up resumes the speed control and returns vehicle speed to the set speed.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

■ Selecting constant speed control mode

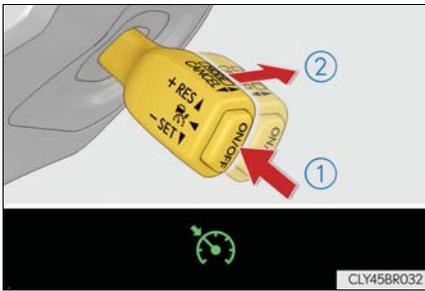


- ① Press the "ON/OFF" button to activate the cruise control.
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.
(Push the lever forward and hold for approximately 1 second.)
Cruise control indicator will come on.
When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

LDA (Lane Departure Alert) (if equipped)

While driving on a road that has lane markers, this system recognizes the lane markers using a camera as a sensor to alert the driver when the vehicle deviates from its lane. If the system judges that the vehicle has deviated from its lane, it alerts the driver using a buzzer and indications on the multi-information display.

Turning the LDA system on

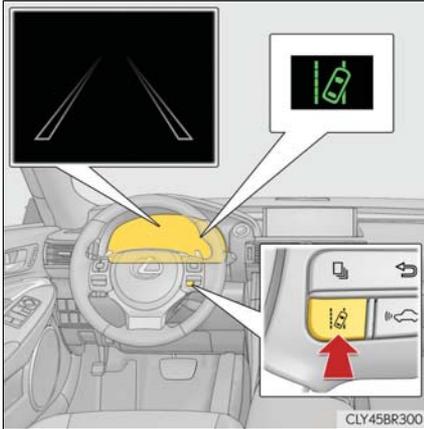

Press the LDA switch to activate the system.

The LDA indicator and lane lines will come on.


Press the switch again to turn the LDA system off.

The LDA system will remain on or off even if the engine switch is turned to IGNITION ON mode.

Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the display and a buzzer. Always check the surrounding area when using this system.

Turning the system on and off

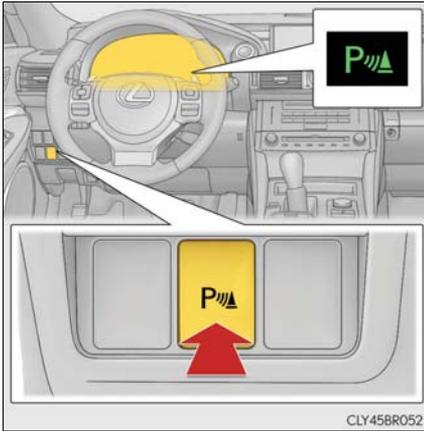


Turns the intuitive parking assist on/off
When on, the indicator light comes on to inform the driver that the system is operational.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions:

- The BSM (Blind Spot Monitor) function
Assists the driver in making a decision when changing lanes
- The RCTA (Rear Cross Traffic Alert) function
Assists the driver when backing up

These functions use same sensors.

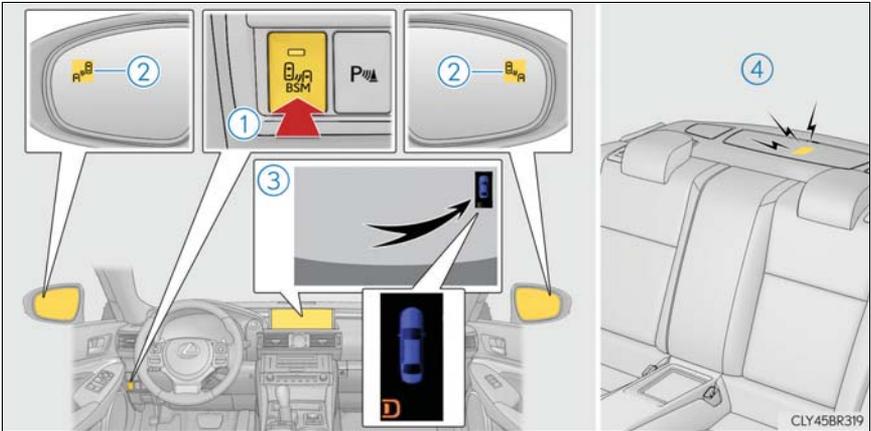

- ① **BSM main switch**
 This switch is for both the BSM function and RCTA function.
 Pressing the switch turns the system on or off. When the switch is turned on, the indicator on the switch illuminates.
- ② **Outside rear view mirror indicators**
BSM function:
 When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.
RCTA function:
 When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.
- ③ **Monitor screen display (RCTA function only) (if equipped)**
 If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon for the detected side will be displayed on the monitor screen.
 This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.
- ④ **RCTA buzzer (RCTA function only)**
 If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM main switch is operated to turn the system on.

Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

Initializing the tire pressure warning system



Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

ASC (Active Sound Control) (if equipped)

The ASC system is an electronic sound system that generates engine sound, conveying the kinetic situations of the vehicle's acceleration and deceleration to the driver through the speakers inside the instrument panel.

The vehicle's response to the driver's acceleration behavior and shift operations are also conveyed in sound.

When sport mode is selected, the sound conveyed to the driver will be louder.

Controlling volume



① Louder

② Lower

The indicator comes on when the ASC system is on.

When the dial is turned to the lowest volume, the ASC system will be turned off and the indicator will go off.

Remote Touch (with navigation system)

The Remote Touch can be used to operate the navigation system screen.

Basic operation



- ① "HOME" button
Press to display the home screen.
- ② "MENU" button
Press to display the "Menu" screen.
- ③ Back button
Press to display the previous screen.
- ④ Touchpad
Slide your finger on the touchpad and move the pointer to select a function, letter and screen button.
Press the touchpad to enter the selected function, letter or screen button.
Certain finger movements on the touchpad can perform functions, such as changing map scalings and scrolling list screens.

Menu



Press the “MENU” button on the Remote Touch to display the “Menu” screen.

- ① “Climate” (→P. 62)
- ② “Nav” (→P. 37)
- ③ “LEXUS App Suite”
- ④ “Info”
- ⑤ “Radio” (→P. 50)
- ⑥ “Media” (→P. 48)
- ⑦ “Phone” (→P. 43)
- ⑧ “Setup”
- ⑨ “Display”

Home

▶ Three-way split screen



Press the “HOME” button on the Remote Touch to display the home screen.


The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth® connection
- ② Select to change the display items/area and the home screen layout.

▶ Two-way split screen



Screen scroll operation

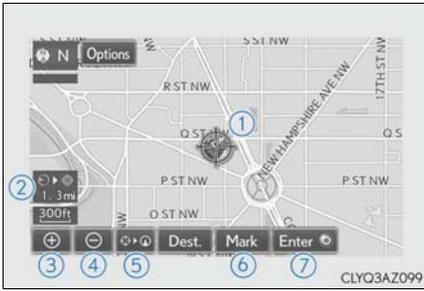

To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.


- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

Setting a route


While route guidance is operating, you can change the route using the following method.



- 1 Select "Options".

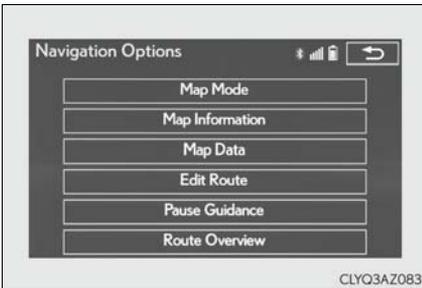

- 2 Select "Edit Route".

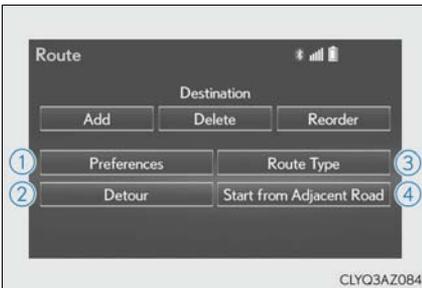

- 3 Select the item to be set.
 - 1 Set route preferences
 - 2 Set detours
 - 3 Change route type
 - 4 Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".


Navigation System (if equipped)

Register home




- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.


- 2 Select "Setup".
- 3 Select "Navigation".

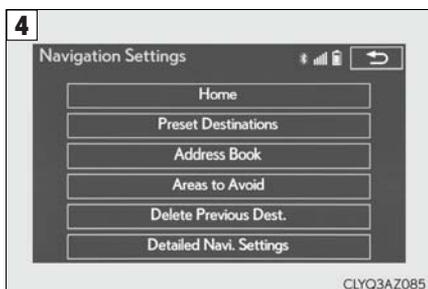

- 4 Select "Home".

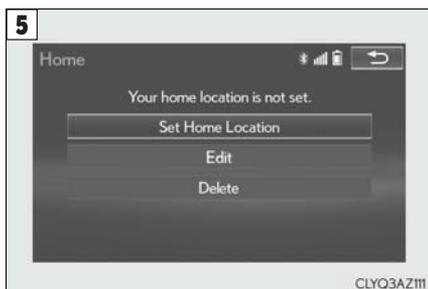



- 5 Select "Set Home Location".
- 6 Select "Address".

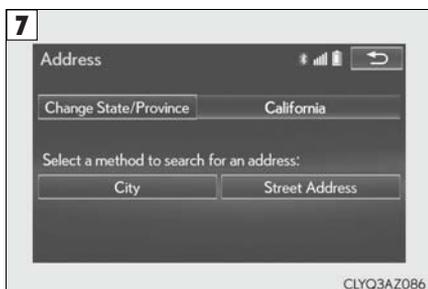

- 7 Select "City".
- 8 Enter a city name and select "OK".
- 9 Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 10 Enter a street name and select "OK".
- 11 When the desired street name is found, select the corresponding screen button.
- 12 Enter a house number and select "OK".
- 13 Select "OK".


Destination input — Search by address

Select by city name

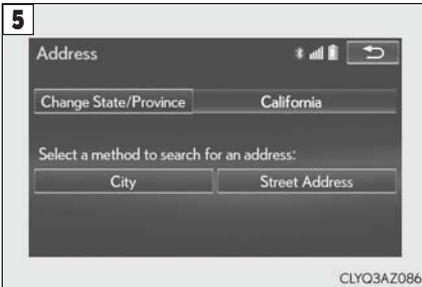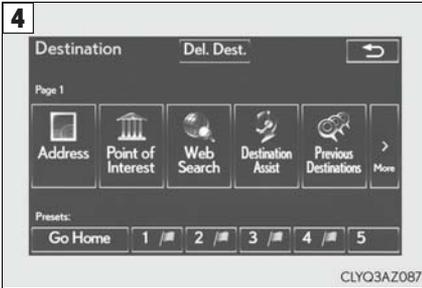

- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.
- 2** Select “Nav”.
- 3** Select “Dest.”.
- 4** Select “Address”.
- 5** Select “City”.
- 6** Enter a city name and select “OK”.
- 7** Select the screen button of the desired city name from the displayed list.
- 8** Enter a street name and select “OK”.
- 9** When the desired street name is found, select the corresponding screen button.
- 10** Enter a house number and select “OK”.
- 11** Select “Go”.
- 12** Select “OK”.

Select by street address

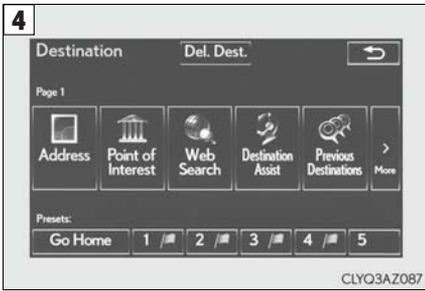

1 Press the “MENU” button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.

2 Select “Nav”.

3 Select “Dest.”.

4 Select “Address”.

5 Select “Street Address”.

6 Enter a house number and select “OK”.

7 Enter a street name and select “OK”.

8 When the desired street name is found, select the corresponding screen button.



9 Enter a city name and select “OK”.

10 Select the screen button of the desired city name from the displayed list.

11 Select “Go”.




12 Select “OK”.

Destination input — Search points of interest by name

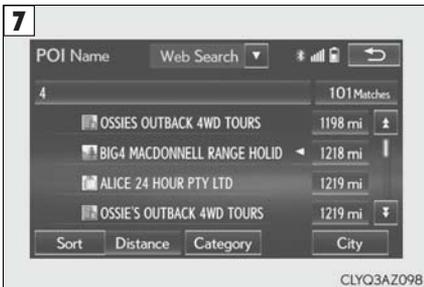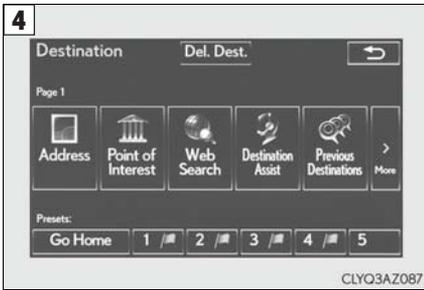

- 1** Press the "MENU" button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.
- 2** Select "Nav".
- 3** Select "Dest".
- 4** Select "Point of Interest".
- 5** Select "Name".
- 6** Enter a POI name and select "OK".
- 7** Select the screen button of the desired POI.
- 8** Select "Go".
- 9** Select "OK".

  Destination input — Search points of interest by category

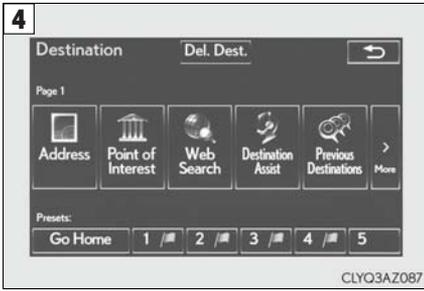

1 Press the "MENU" button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.

2 Select "Nav".

3 Select "Dest..".

4 Select "Point of Interest".

5 Select "Category".

6 Select "Near a Destination".

7 Select the desired POI category from the displayed list.

8 Select the screen button of the desired POI.

9 Select "Go".

10 Select "OK".

Destination input — Search points of interest by telephone number






- 1** Press the "MENU" button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.
- 2** Select "Nav".
- 3** Select "Dest".
- 4** Select "Point of Interest".
- 5** Select "Phone #".
- 6** Enter a phone number and select "OK".
- 7** Select "Go".
- 8** Select "OK".

Hands-free System For Cellular Phone (with navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.

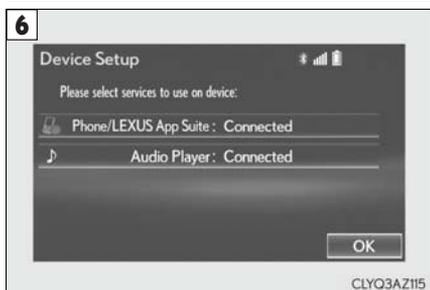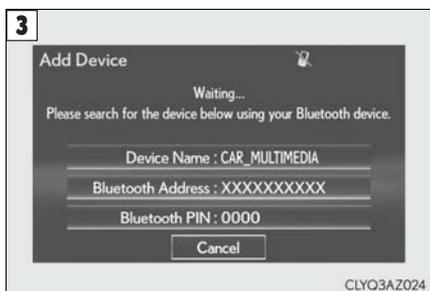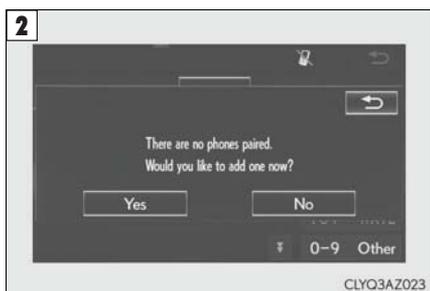

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press  on the steering wheel.

2 Select "Yes" or "OK".

3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

 
Refer to the cellular phone user's manual for cellular phone operation.

4 Register the Bluetooth® device using your Bluetooth® device.

5 Check that the following screen is displayed when registration is complete.

6 Select "OK" when the connection status changes from "Connecting..." to "Connected".

■ Contacts transfer



1 Press the “MENU” button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Phone”.

4 Select “Contact/Call History Settings”.

5 Select “Update Contacts from Phone”.

6 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

■ Registering the contacts in the favorites list



1 Press the “MENU” button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Phone”.



4 Select “Contact/Call History Settings”.



5 Select “Add Favorite”.




6 Select the desired contact to add to the favorites list.

7 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name


You can call by giving a name registered in the contacts. For details, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.

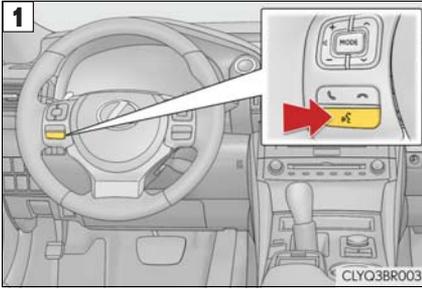


- 1** Press the talk switch.
- 2** Say “Call <contacts> <phone types>”.

Pressing the talk switch turns the voice command system on. Say a command after the beep.

■ Calling by favorites list

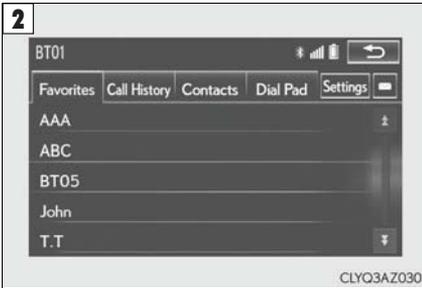

- 1** Press  on the steering wheel.
- 2** Select the “Favorites” tab and select the desired contact.

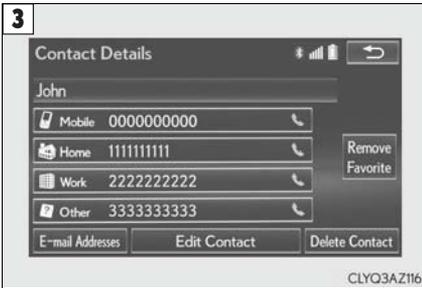

- 3** Select the desired number.
- 4** Check that the “Call” screen is displayed.

■ Calling using e-mail/SMS/MMS message



- 1 Press  on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the “Call” screen is displayed.

The tab display may vary depending on the type of cellular phone.

 
■ Receiving a call



- 1 When a call is received, this screen is displayed with a sound.
- 2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

■ Steering switches



- ① Increases/decreases volume
- ② Sending/Receiving/“Phone” screen display
- ③ End call/Refuse call
- ④ Start the voice command system

Audio System (with navigation system)

Audio control screen


Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 33 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.


Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

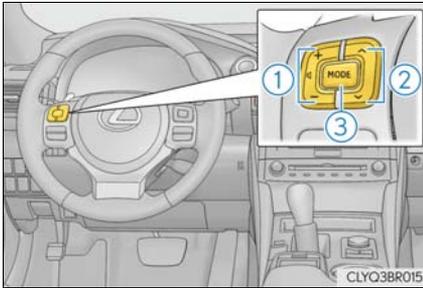

- 1 Increases/decreases volume
- 2 Radio mode: Selects a radio station/channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
iPod mode: Selects a track/file
- 3 Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

Basic operation

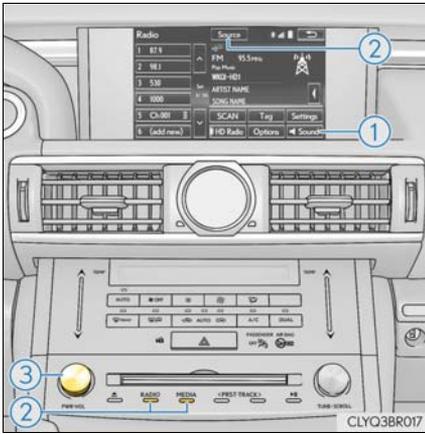

① Sound settings

② Audio sources

“RADIO” button:

AM: AM radio

FM: FM radio

SAT: Satellite radio*¹

APPS (if equipped):

Internet radio broadcast

“MEDIA” button:

DISC: DVD player/CD player

iPod: iPod

USB: USB memory

Bluetooth*²: Bluetooth[®] audio


AUX: Auxiliary audio device

③ Power/Volume

*¹: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 79)

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Radio

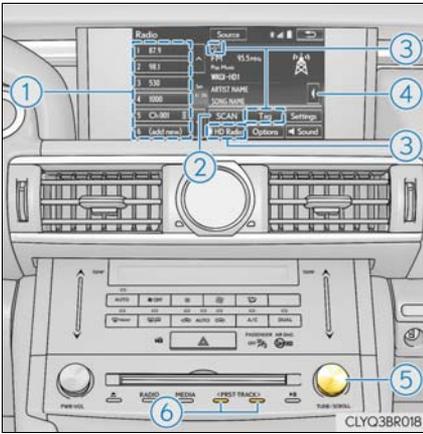

- 1 Tuning to preset stations/channels
- 2 Scanning for receivable stations
- 3 Using HD Radio™ Technology (for U.S.A., if equipped)
- 4 Cache radio operation buttons
- 5 Adjusting the frequency
- 6 Press: Selects a preset station
Press and hold: Seeks for a station


Entering station presets

- 1 Tune in the desired station.
- 2 Select "add new".
- 3 Select "Yes" on the confirmation screen.
- 4 Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


DVD player/CD player

Playing an audio CD

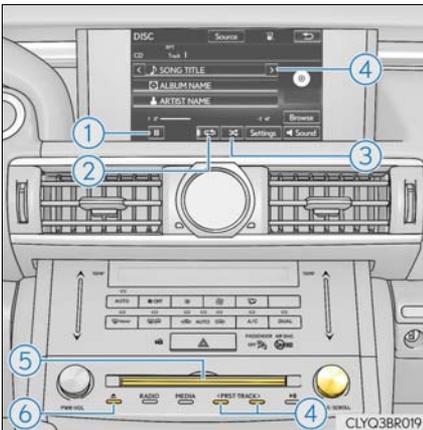


- 1 Playback/pause
- 2 Repeat playback
- 3 Random playback
- 4 Selecting a track
- 5 Disc slot
- 6 CD eject

■ Playing a CD with MP3/WMA/AAC files

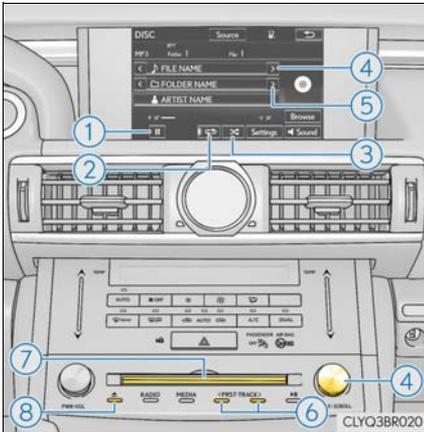

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a file
- ⑤ Selecting a folder
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Disc slot
- ⑧ CD eject


■ Playing a DVD

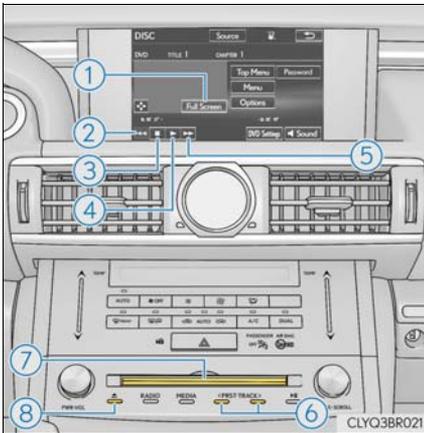

- ① Image display (full screen)
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Selecting a chapter
- ⑦ Disc slot
- ⑧ DVD eject


■ Operating an iPod

■ Playing an iPod audio

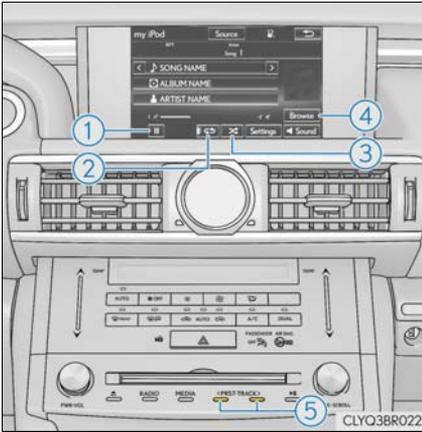

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a play mode
- ⑤ Selecting a track/fast forward/rewind

■ Playing an iPod video

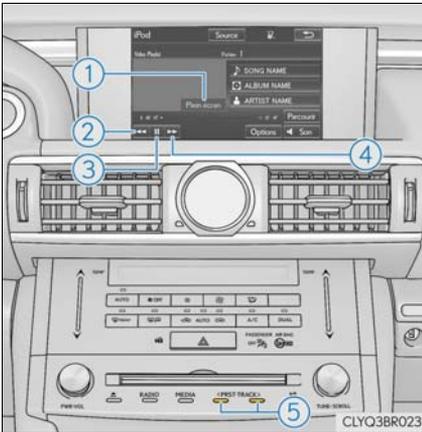


- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

Lexus Display Audio Controller (with Lexus Display Audio)

By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.


Basic operation

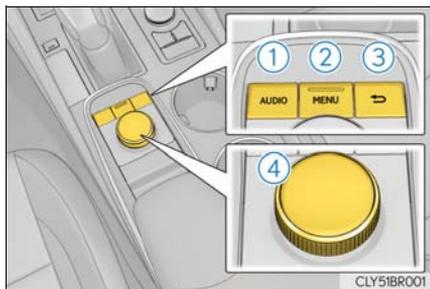

- ① Display the “Source” screen or audio top screen
- ② Display the “Menu” screen (→P. 54)
- ③ Display the previous screen
- ④ Turn or move the controller to select a function and number.
Move the controller to display the left or right side of screen.
Push the controller to enter the selected function and number.

■ “Menu” screen

To display the “Menu” screen, press the “MENU” button on the Lexus Display Audio controller.

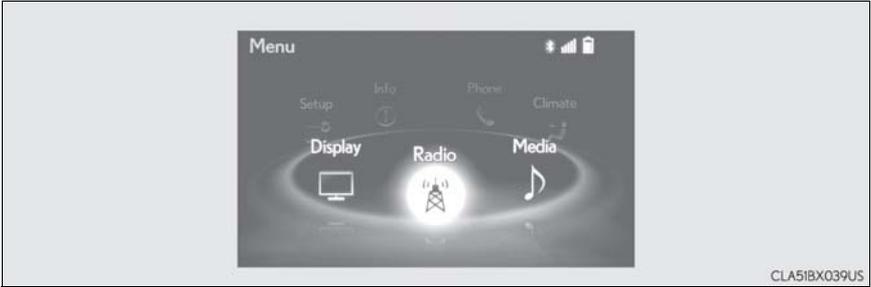

| Button | Function |
|-------------------|---|
| “Radio” | Display the radio top screen |
| “Media” | Display the media top screen |
| “Climate” | Display the air conditioning control screen (→P. 62) |
| “Phone” | Display the phone top screen |
| “Connected Navi”* | If a turn-by-turn navigation application has been downloaded to a connected phone, the application will be displayed and can be used. |
| “Info” | Display the “Information” screen |
| “Setup” | Display the “Setup” screen |
| “Display” | Display the display settings screen |

*: Available in the 48 states, D.C. and Alaska

■ Screen for display settings

Go to “Display”: “MENU” button → “Display”



- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the Lexus parking assist monitor camera.
- ④ Change to day mode.

Hands-free System For Cellular Phone (with Lexus Display Audio)

How to register a Bluetooth® phone

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to “Bluetooth* Setup”: “MENU” button → “Setup” → “Bluetooth*”
- 3 Move the controller to the left and then select “Add Device”.



- 4 When this screen is displayed, search for the device name displayed on this screen on your Bluetooth® device.
- 5 Register the Bluetooth® device using your Bluetooth® device.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to “Add Favorite”: “MENU” button → “Setup” → “Phone” → “Contacts/Call History” → “Add Favorite”
- 2 Choose the contact to register.

Dialing

- 1 Go to “Dial Pad”: “MENU” button → “Phone” → “Dial Pad”
- 2 Input a phone number.
- 3 Press the off-hook switch on the steering wheel or select .

Dialing from the phonebook

- 1 Go to “Contacts”: “MENU” button → “Phone” → “Contacts”
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

■ When the phonebook is empty

You can transfer the phone numbers in a Bluetooth® phone to the system.

Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.

- 1** Press the off-hook switch on the steering wheel.
If the phonebook is empty, a message will be displayed.
- ▶ **For a PBAP compatible Bluetooth® phone and “Automatic Transfer” is off**
- 2** To enable automatic transfer of new contacts from a cellular phone every time it is connected, select “Always”.
Select “Once” if you want to transfer new contacts from a cellular phone.
- ▶ **For a PBAP incompatible and OPP compatible Bluetooth® phone**
- 3** Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.
Select “Add” if you want to add a new contact manually.

■ Dialing from favorites

You can make a call using numbers registered in the favorites.

- 1** Go to “Favorites”: “MENU” button → “Phone” → “Favorites”
- 2** Choose the desired contact to call from the list.
- 3** Choose the number and then press the off-hook switch on the steering wheel or press the controller.

■ To answer the phone




Press the off-hook switch on the steering wheel or select .

■ To refuse a call

Press the  switch on the steering wheel or select .


■ Operating a telephone using the steering wheel switches

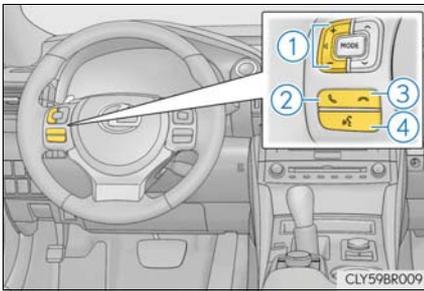

- ① Volume switch
During an incoming call: Adjusts the ring tone volume
During speaking on the phone: Adjusts in call volume
The voice guidance volume cannot be adjusted using this button.
- ② Off hook switch
 - Start call
 - Receiving
 - Phone top screen display
- ③ On hook switch
 - End call
 - Refuse call
- ④ Talk switch
Press: Turns the voice command system on
Press and hold: Turns the voice command system off

Audio System (with Lexus Display Audio)

Lexus Display Audio operation buttons

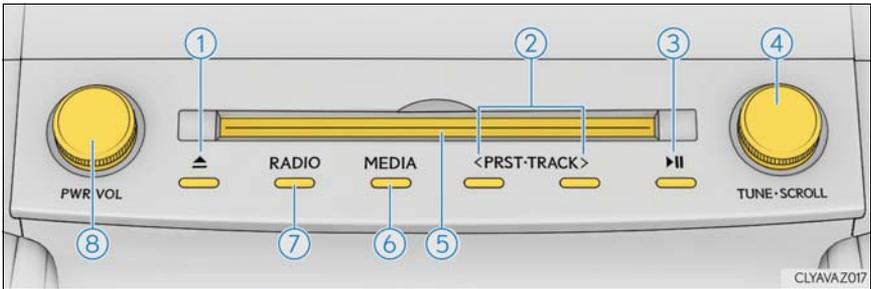

- ① Eject a disc.
- ② Select a radio station band, track or file.
- ③ Except radio and A/V mode: Pause or resume playing a track.
Radio and A/V mode: Turn mute on/off.
- ④ Seek up or down for a radio station, or to access a desired track or file.
- ⑤ Disc slot
- ⑥ Display the media top screen.
- ⑦ Display the radio top screen.
- ⑧ Press to turn the audio system on/off, and turn to adjust the volume.

Using the steering wheel switches to change audio sources

Press the “MODE” switch when the audio system is turned on. The audio source changes each time the “MODE” switch is pressed.

■ Audio menu screen


To display the audio menu screen, move the controller to the left while on an audio top screen.

► Radio mode




| Button | Function | Target radio mode |
|------------------|--|-------------------|
| "SCAN" | Scans for receivable stations | AM, FM |
| "SEEK" | Seeks a station of the nearest frequency (stops when a station is found) | AM, FM |
| "Tag" | Captures the song title and artist name information for potential purchase (when the "HD") indicator on the selected station is appears) | FM |
| "Multicast" | Changes the channel of HD Radio (HD2, HD3, HD4 where applicable) | FM |
| "Traffic" | Seeks a station of the traffic announcement | FM |
| "HD Radio" | Selects to set the station list shows of HD radio on/off | AM, FM |
| "Radio Settings" | Changes radio settings | All mode |
| "Sound Settings" | Changes sound settings | All mode |

► Media mode

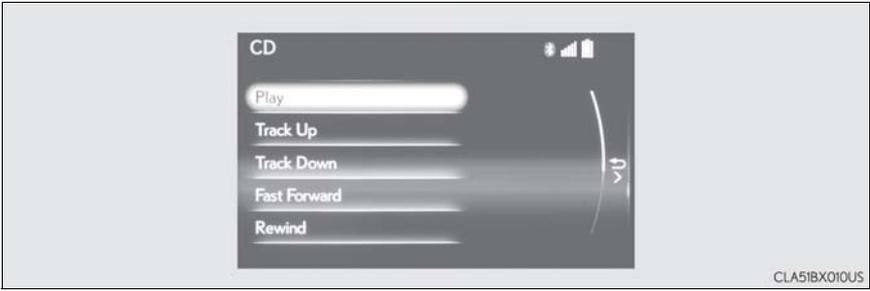


| Button | Function | Target audio source |
|---------------------------|---|------------------------|
| "Play" | Plays or pauses a track/file | All media (except A/V) |
| "Pause" | | |
| "Track Up" | Selects a track/file | All media (except A/V) |
| "Track Down" | | |
| "File Up" | | |
| "File Down" | | |
| "Folder Up" | Selects a folder/album | MP3/WMA/AAC disc, USB |
| "Folder Down" | | |
| "Fast Forward" | Selects and hold: Fast-forward or rewind a track/file | All media (except A/V) |
| "Rewind" | | |
| "Repeat" | Selects a repeat mode | All media (except A/V) |
| "Random" | Selects a random/shuffle play mode | All media (except A/V) |
| "Shuffle" | | |
| "Full Screen" | Selects a full screen mode | iPod, A/V |
| "Connect" | Connects a Bluetooth® device | Bluetooth® |
| "Cover Art Settings" | Changes the cover art settings | CD, MP3/WMA/AAC disc |
| "iPod Settings" | Changes iPod settings | iPod |
| "USB Settings" | Changes USB settings | USB |
| "External Video Settings" | Changes A/V settings | A/V |
| "Sound Settings" | Changes sound settings | All media |

■ Operating the audio system using the steering wheel switches

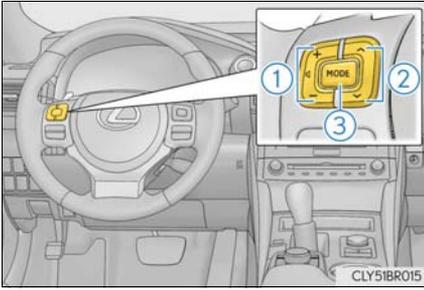


- ① Volume switch
 - Increases/decreases volume
 - Press and hold: Continuously increases/decreases volume
- ② Radio mode:
 - Press: Select a radio station
 - Press and hold: Seek up/down CD, MP3/WMA/AAC disc, Bluetooth[®], iPod or USB mode:
 - Press: Select a track/file/video
 - Press and hold: Continuously tracks/files/videos up/down. (MP3/WMA/AAC disc, iPod or USB)
- ③ "MODE" switch
 - Turns the power on, selects audio source
 - Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.

Air Conditioning System

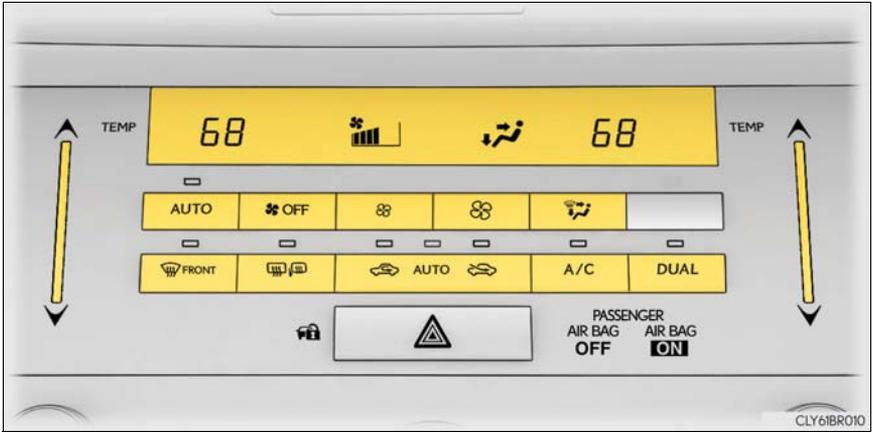

Adjusting the temperature

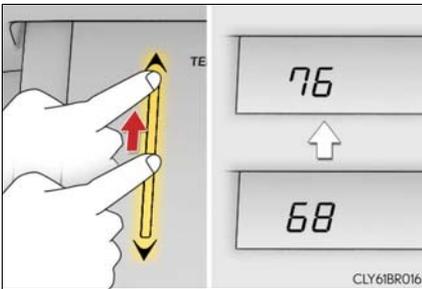

To adjust the temperature setting, touch and slide your finger up or down on the sensor. The temperature setting can also be adjusted by touching on the sensor. When the temperature setting is changed, a buzzer sounds.

Air conditioning control screen

► With a Lexus Display Audio



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select to set auto mode on/off
- ④ Select to set cooling and dehumidification function on/off
- ⑤ Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ⑥ Display the option control screen
- ⑦ Select the air flow mode
- ⑧ Adjust the right-hand side temperature setting

► With a navigation system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen (→P. 64)
- ⑥ Turn the fan off
- ⑦ Select to set automatic mode on/off

■ Option control screen

Select  or  on the air conditioning control screen to display the option control screen. The functions can be switched on and off.

▶ With a Lexus Display Audio



- ① Removing pollen from the air (Micro dust and pollen filter)

▶ With a navigation system



- ① Cooling and dehumidification function
② Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)
③ Removing pollen from the air (Micro dust and pollen filter)

■ Using automatic mode

Press the automatic mode button to turn on the airflow and adjust the temperature setting.

■ Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)

In dual mode, driver and passenger side temperature settings can be adjusted separately.

 
To turn on the "DUAL" mode, perform any of the following procedures:

- Press "DUAL".
- Select "DUAL" on the air conditioning control screen.
- Adjust the passenger's side temperature setting.

The indicator comes on when the "DUAL" mode is on.

Seat Heaters (if equipped)/ Seat Ventilators (if equipped)

■ Seat heaters



Each time the switch is pressed, the intensity of the seat heater changes and the level indicator lights (amber) light as follows:
Hi (3 segments lit) → Mid (2 segments lit)
→ Lo (1 segment lit) → Off

■ Seat ventilators



Each time the switch is pressed, the intensity of the seat ventilator changes and the level indicator lights (green) light as follows:
Hi (3 segments lit) → Mid (2 segments lit)
→ Lo (1 segment lit) → Off

■ Seat heater timer control


To enable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time when the vehicle is stopped until a buzzer sounds once. If a seat heater is turned on while seat heater timer control is enabled, the intensity of the seat heater will automatically change from Hi→Mid→Lo.

The timing of the change in seat heater intensity differs depending on the temperature inside the cabin, etc. when the seat heater is operating.

To disable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds twice.

Voice Command System

Basic operation

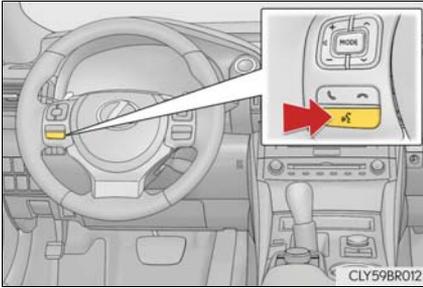

- 1** Press the talk switch.
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.
On the list screen, you can select the desired command.

Continue on to pages 67-71 for a detailed list of Voice Commands for the following categories:

| | |
|-------------|---------|
| Basic | page 67 |
| Apps | page 67 |
| Navi..... | page 68 |
| Phone | page 68 |
| Radio..... | page 69 |
| Audio | page 69 |
| Info..... | page 70 |
| Other | page 71 |

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

▶ Basic (vehicles with a Lexus Display Audio System)

| Command | Action |
|---------------|---|
| "Help" | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back" | Returns to the previous screen |
| "Go to <tab>" | Displays the command list of the selected tab |

▶ Basic (vehicles with a navigation system)

| Command | Action |
|---------------|---|
| "Help" | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back" | Returns to the previous screen |
| "Go to <tab>" | Displays the command list of the selected tab |
| "More Hint" | Displays more commonly used commands |
| "Cancel" | Cancels the voice command system |

▶ Apps (vehicles with a navigation system) (for U.S.A., if equipped)

| Command | Action |
|-----------------|---|
| "Launch <apps>" | Activates the LEXUS App Suite application |

► Navi (vehicles with a navigation system)

| Command | Action |
|------------------------|--|
| "Find <POI category>" | Displays a list of <POI category* ¹ > near the current position* ² |
| "Enter an Address" | Enables setting a destination by saying the address |
| "Go Home" | Displays the route to home |
| "Pause Guidance" | Stops the route guidance |
| "Resume Guidance" | Resumes the route guidance |
| "Show <POI> icons" | Displays the specified POI icons |
| "Delete Destination" | Deletes the destination |
| "Previous Destination" | Displays previous destinations |

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

| Command | Action |
|---------------------------------|--|
| "Redial" | Places a call to the phone number of the latest outgoing call |
| "Call Back" | Places a call to the phone number of latest incoming call |
| "Show Recent Calls" | Displays the call history screen |
| "Dial <phone number>" | Places a call to the said phone number |
| "Call <contacts> <phone types>" | Place a call to the said phone type of the contact from the phone book |

► **Radio (vehicles with a navigation system)**

| Command | Action |
|--------------------------------------|--|
| "Tune to <frequency> AM" | Changes the radio to the specified AM frequency |
| "Tune to <frequency> FM" | Changes the radio to the specified FM frequency |
| "Play <genre> station" | Changes the radio to an FM station of the specified genre |
| "Tune to FM <frequency> HD <number>" | Changes the radio to the specified HD radio station |
| "Tune to preset <number>" | Changes the radio to the specified preset radio station |
| "Tune to <name>" | Changes the radio to the satellite radio channel with the specified name |
| "Tune to channel <number>" | Changes the radio to the specified satellite radio channel number |
| "Play <genre> satellite station" | Changes the radio to a satellite radio channel of the specified genre |

► **Audio (vehicles with a Lexus Display Audio System)**

| Command | Action |
|-----------------------------|---|
| "Play Playlist <playlists>" | Plays tracks from the selected playlist |
| "Play Artist <artist>" | Plays tracks from the selected artist |
| "Play Song <songs>" | Plays the selected track |
| "Play Album <albums>" | Plays tracks from the selected album |
| "Turn Music On/Off" | Turns the audio system on/off |
| Audio source name | Selects audio source |

► **Audio (vehicles with a navigation system)**

| Command | Action |
|------------------------|---|
| "Play Playlist <name>" | Plays tracks from the selected playlist |
| "Play Artist <name>" | Plays tracks from the selected artist |
| "Play Song <name>" | Plays the selected track |
| "Play Album <name>" | Plays tracks from the selected album |

► **Info (vehicles with a Lexus Display Audio System)**

| Command | Action |
|-----------------|------------------------------|
| "Show Forecast" | Displays weather information |
| "Show Traffic" | Displays traffic information |

► **Info (vehicles with a navigation system) (for U.S.A., if equipped)**

| Command | Action |
|----------------------|--|
| "Destination Assist" | Connects the system to the Lexus response center |
| "Show Forecast" | Displays weather information |
| "Show Traffic" | Displays traffic information |
| "Lexus Insider" | Displays the Lexus insider list |

► Other (vehicles with a navigation system)

| Command | Action |
|---------------------------------|---|
| "Turn Climate Control On" | Turns air conditioning system on |
| "Turn Climate Control Off" | Turns air conditioning system off |
| "Warmer" | Increases the temperature of the air conditioning system |
| "Cooler" | Decreases the temperature of the air conditioning system |
| "<#> degrees" | Changes the set temperature of the air conditioning system to <#> degrees* ¹ |
| "Turn Music On" | Turns the audio system on |
| "Turn Music Off" | Turns the audio system off |
| "AM Radio" | Selects AM radio mode |
| "FM Radio" | Selects FM radio mode |
| "Sirius XM" | Selects satellite radio mode |
| "Disc" | Selects the selected disc mode |
| "USB" | Selects USB audio mode |
| "iPod" | Selects iPod audio mode |
| "Bluetooth* ² Audio" | Selects Bluetooth® audio mode |
| "A.V." | Selects VTR mode |
| "Auxiliary" | Selects AUX audio mode |

*¹: Only within the possible temperature range of the air conditioning system

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Portable Audio Device Ports

This ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.




Open the cover and connect the portable audio device.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

Programming the HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

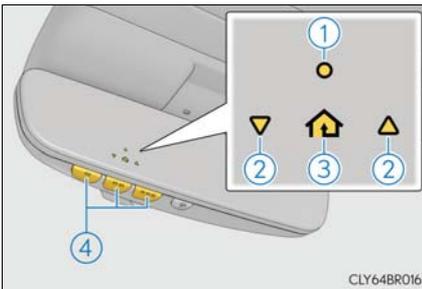

① HomeLink® indicator light

② Garage door operation indicators

③ HomeLink® icon

 
Illuminates while HomeLink® is operating.

④ Buttons

■ Programming HomeLink®


- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

Perform **3** within 60 seconds of **1**, or the indicator light will stop flashing and programming will not be able to be completed.



Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons. Keep the HomeLink® indicator light in view while programming.

 ► For U.S.A. owners



Press and hold the handheld transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

- 3** Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).
- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
 - Device with fixed code: If the indicator light is solid/continuous, programming has been completed and your garage door or other device should operate when the HomeLink® button is pressed and released.
 - Device with rolling code: If the indicator light flashes rapidly, your garage door opener motor (or other device) is equipped with a rolling code. Complete the programming process by firmly pressing and holding the programmed HomeLink® button for 2 seconds and then release the button.
 - If the garage door or other device does not operate, proceed to "If your garage door is of the rolling code type".

- 5** Repeat the steps above to program another device for any of the remaining HomeLink[®] buttons.

If your garage door is of the rolling code type:

- 6** Press the training button on the motor-head unit in your garage.
- 7** Press and hold the vehicle's programmed HomeLink[®] button for 2 seconds and release it. Repeat this step once again.
If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink[®]


Press the appropriate HomeLink[®] button. The HomeLink[®] indicator light should turn on.

Lexus Enform Safety Connect (for U.S.A., if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

■ System components

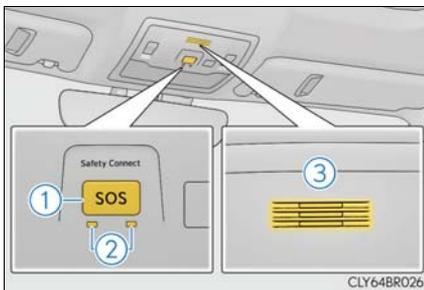

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform (for U.S.A., if equipped)

Lexus Enform is a service that includes Safety Connect, Service Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Function achieved by using a cellular phone (with navigation system)

Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● LEXUS App Suite

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system (with navigation system)

Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● eDestination

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ Function achieved by using DCM

■ Services

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 74)

■ LEXUS Enform Remote

■ Services

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

■ Subscription

→P. 77

■ LEXUS Enform Service Connect

■ Services

Lexus Enform Service Connect uses embedded telematics hardware to collect and transmit vehicle data that allows Lexus to provide:

- Vehicle Health Report (VHR)
(Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- Maintenance Notifications
- Vehicle Alert Notifications

For details about this service and how to register, refer to

<http://www.lexus.com/enform/>.

The Lexus Enform Service Connect is achieved by using a Data Communication Module (DCM) built in the vehicle.

■ Subscription

→P. 77

XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the “OWNER’S MANUAL” and “NAVIGATION SYSTEM OWNER’S MANUAL”.

Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

- ▶ U.S.A. Customers:
Visit www.siriusxm.com or call 1-877-515-3987
- ▶ Canadian Customers:
Visit www.xmradio.ca or call 1-877-438-9677

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



(Flashes)

Pre-collision system warning light (if equipped)



Slip indicator



Automatic headlight leveling system warning light



(Blinking and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light*



Seat belt reminder light

See the Owner's Manual



Turn signal indicator



Intuitive parking assist indicator (if equipped)



Headlight indicator (U.S.A.)



(Flashes)

Slip indicator



Tail light indicator (Canada)



VSC OFF indicator



Headlight high beam indicator



(Flashes quickly)

Pre-collision system warning light (if equipped)



Automatic High Beam indicator (if equipped)



BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)



Front fog light indicator (if equipped)



Security indicator



Cruise control indicator



Low outside temperature indicator



Dynamic radar cruise control indicator (if equipped)



Eco Driving Indicator Light



Cruise control "SET" indicator



"AIR BAG ON/OFF" indicator



LDA (Lane Departure Alert) indicator (if equipped)

What to do if...

● Drive mode indicators

▶ Except F SPORT models

| | | | |
|--|--------------------------|---|-------------------|
|  ECO | Eco drive mode indicator |  SPORT | "SPORT" indicator |
|  SNOW | Snow mode indicator | | |

▶ F SPORT models

| | | | |
|--|--------------------------|---|---------------------|
|  ECO MODE | Eco drive mode indicator |  SPORT S | "SPORT S" indicator |
|  SPORT S+ | "SPORT S+" indicator |  SNOW | Snow mode indicator |

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal


Make sure that the brake pedal is firmly depressed when attempting to start the engine.

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.


What to do if...

If the electronic key does not operate properly

Unlocking the door

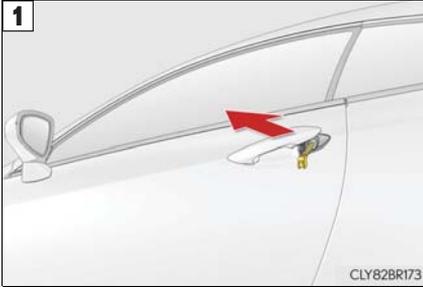


Insert the mechanical key while pulling on the driver's door handle.

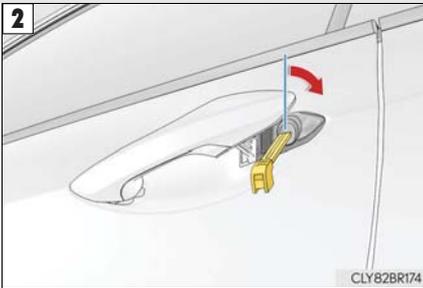

Unlocking the door.

3 Remove the key, return the handle, and then pull the handle again.

Locking the door

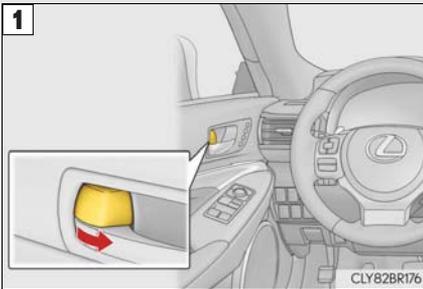


Move the inside lock button to the lock position.

2 Close the door.


What to do if...

Opening the trunk

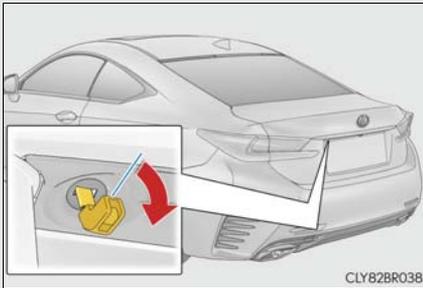

Turn the mechanical key clockwise to open.

Starting the engine

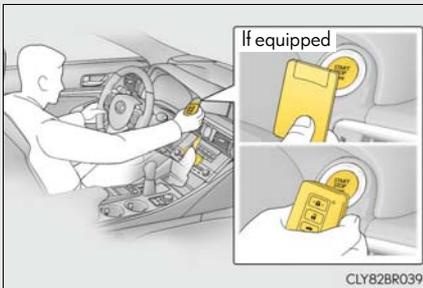

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch. When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2016 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.