

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System*	
Adjusting the temperature	52
Air conditioning control screen	53
Using automatic mode.....	54
Adjusting the temperature for driver and passenger seats separately ("DUAL" mode).....	54
ASC (Active Sound Control)	31
Audio System*	
Audio control screen.....	46
Selecting an audio source	46
Steering switch operation.....	47
Radio.....	48
CD.....	49
DVD.....	50
iPod	51
Automatic High Beam	17
BSM (Blind Spot Monitor).....	29
Center Display	33
Dynamic Radar Cruise Control	24
Floor Mat Installation	9
Fuel Consumption Information	36
Garage Door Opener	63
Hands-free System For Cellular Phone*	
Registering/connecting a Bluetooth® device.....	42
Contacts transfer	43
Registering the contacts in the favorites list.....	44
Calling by favorites list	44
Calling the message sender	44
Receiving a call.....	45
Steering switches	45
Headlights.....	16

*: This feature may be operated by Voice command (See P.56)


Intuitive Parking Assist.....	28
LDA (Lane Departure Alert with steering control)	27
Lexus Enform Remote.....	71
Lexus Enform Safety Connect	68
Lexus Enform Service Connect.....	72
Lexus Safety System+	23
Multi-information Display	11
Navigation System*	
Registering home	38
Destination search.....	38
Voice Command System.....	56
Portable Audio Device Ports	63
Remote Touch	32
Seat Heaters/Seat Ventilators	55
SiriusXM Satellite Radio.....	73
Tire Pressure Warning System	30
Turn Signal Lever	10
Voice Command System*	
Basic operation.....	56
Command list.....	57
Windshield Wipers and Washer.....	19

*: This feature may be operated by Voice command (See P.56)


Overview

Instrument Panel

- Windshield wiper and washer switch P.19
- Multi-information display P.11
- Turn signal lever P.10
- Headlight switch P.16
- Fog light switch**
- See P.6
- See P.5

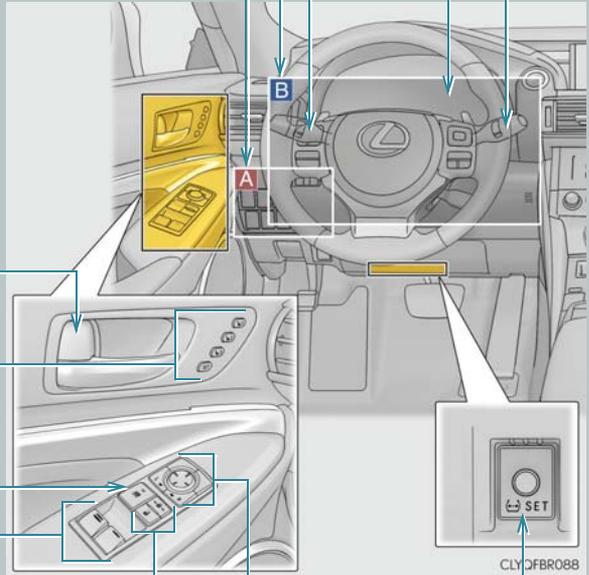

- Inside lock buttons *
- Driving position memory switches**
- Window lock switch *
- Power window switches *
- Door lock switches *
- Outside rear view mirror switches *
- Tire pressure warning reset switch P.30

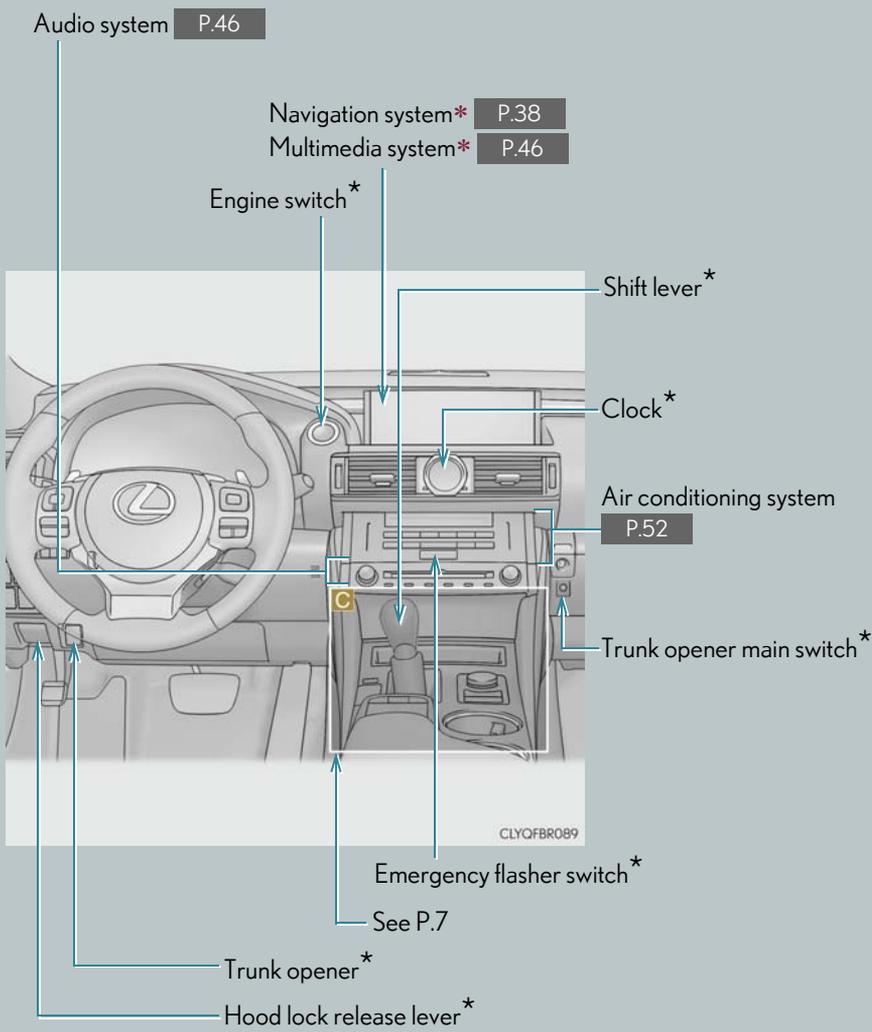

*: If equipped

*: Refer to "OWNER'S MANUAL".

A


ASC switch* P.31

Windshield wiper de-icer switch* *

Automatic High Beam switch P.17

Odometer/trip meter/trip meter reset button P.14

Instrument panel light control switches *

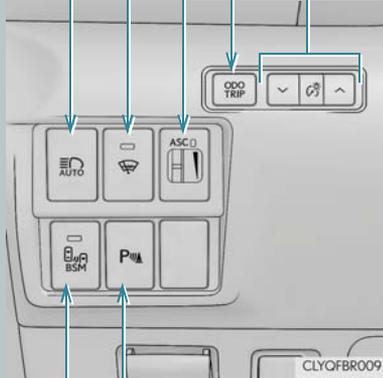

Intuitive parking assist switch* P.28


BSM (Blind Spot Monitor) main switch* P.29

B

Audio remote control switches P.47

Paddle shift switches*

Meter control switches P.14

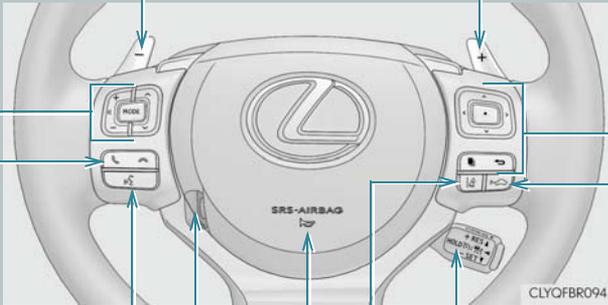

Talk switch P.45

Horn*

Cruise control switch P.24

Tilt and telescopic steering control switch**

Telephone switches P.45


LDA (Lane Departure Alert with steering control) switch P.27

Vehicle-to-vehicle distance button P.25

*: If equipped


** : Refer to "OWNER'S MANUAL".

C

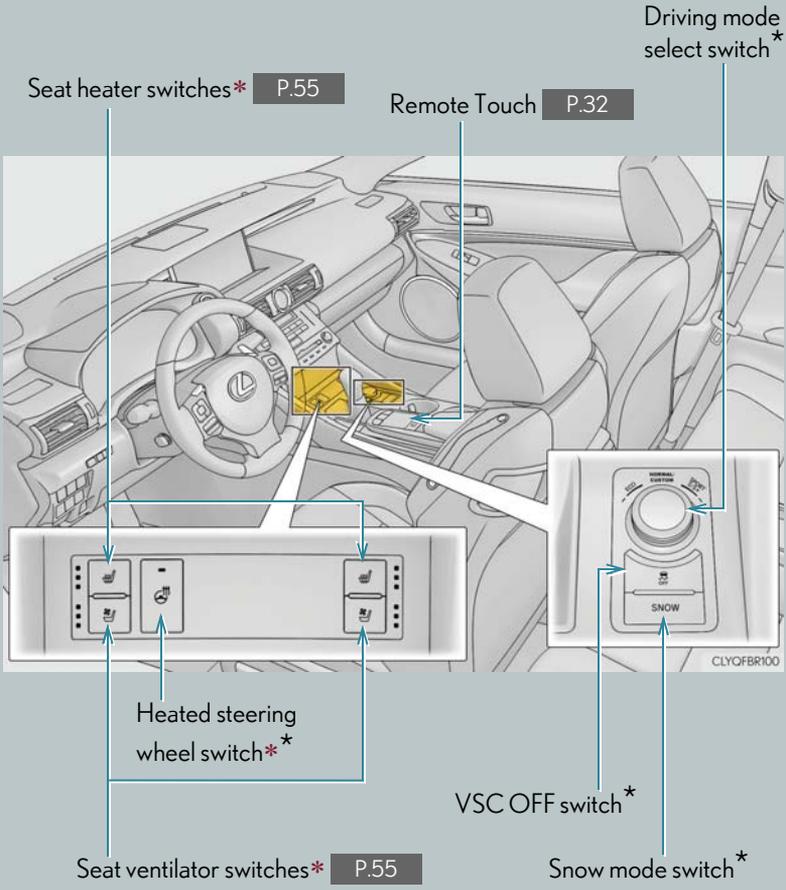

*: If equipped

*: Refer to "OWNER'S MANUAL".

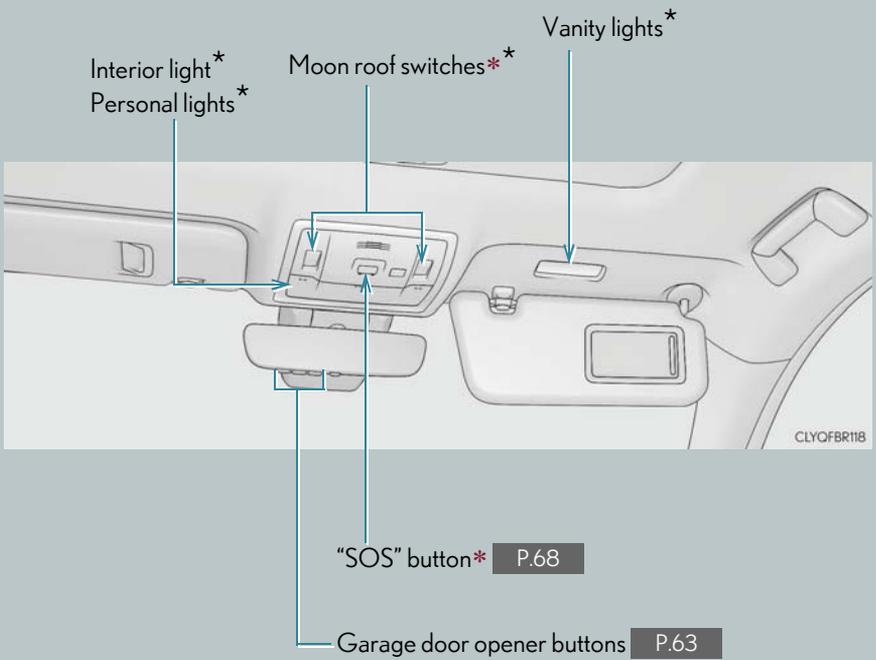


*: If equipped


*: Refer to "OWNER'S MANUAL".

Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

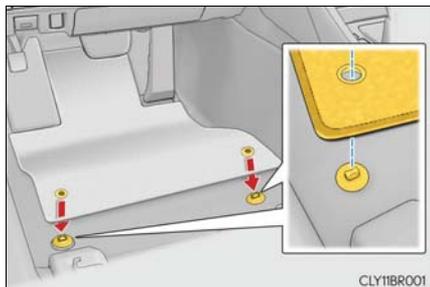

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

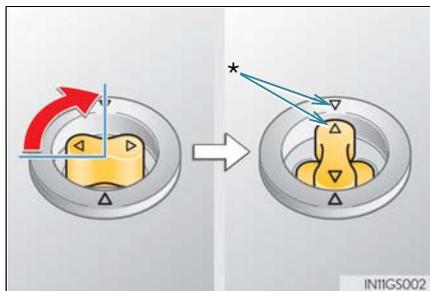


- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Turn Signal Lever

The lever will return to its original position immediately after operation.

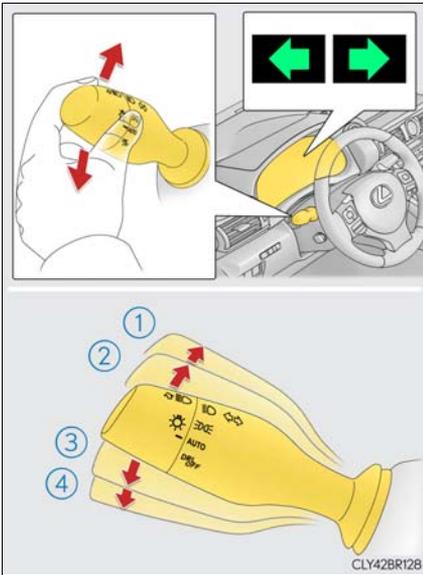

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing

Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.


■ Customization

The number of times the turn signals flash during a lane change can be changed.

Multi-information Display

The multi-information display presents the driver with a variety of driving-related data, such as the current outside temperature. The multi-information display can also be used to change the display settings and other settings.


Except F SPORT models

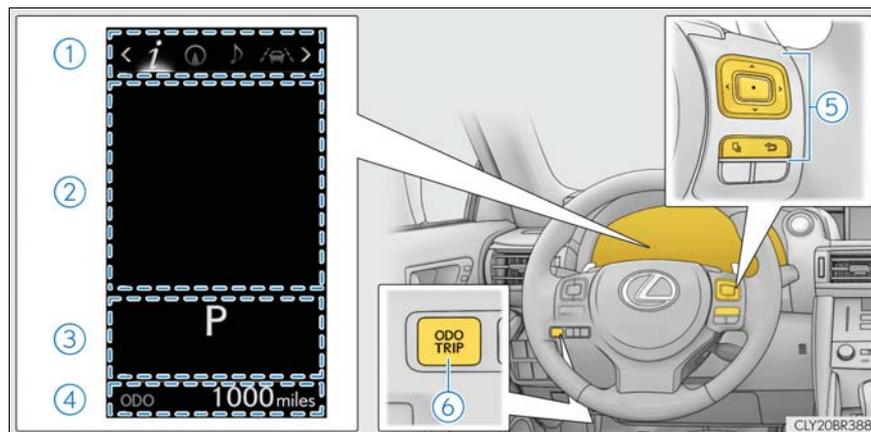


- ① Menu icon display area (→P. 15)
Displays the following items.
When a menu icon is not selected, the outside temperature and clock are displayed.
 - Menu icons
 - Outside temperature
 - Clock
- ② Content display area
A variety of information can be displayed by selecting a menu icon. Additionally, warning or advice pop-up displays will be displayed in some situations.
 - Menu icon content
 - Warning message
- ③ Indicator/shift position display area
Displays the following items:
 - Indicators
 - Shift position display
- ④ Odometer/trip meter display area
Displays the following items:
 - Odometer/trip meter
 -  Distance until next engine oil change
- ⑤ Meter control switches (→P. 14)
- ⑥ Odometer/trip meter and trip meter reset button (→P. 14)

F SPORT models

► Main meter in center position

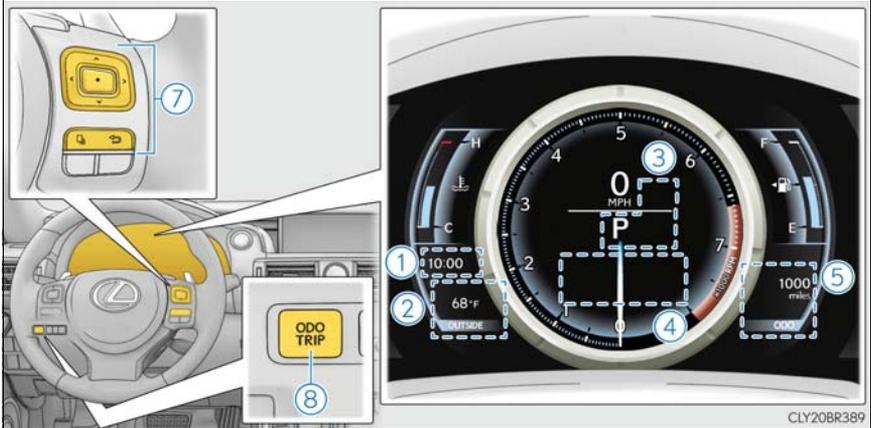

► Main meter moved to the right

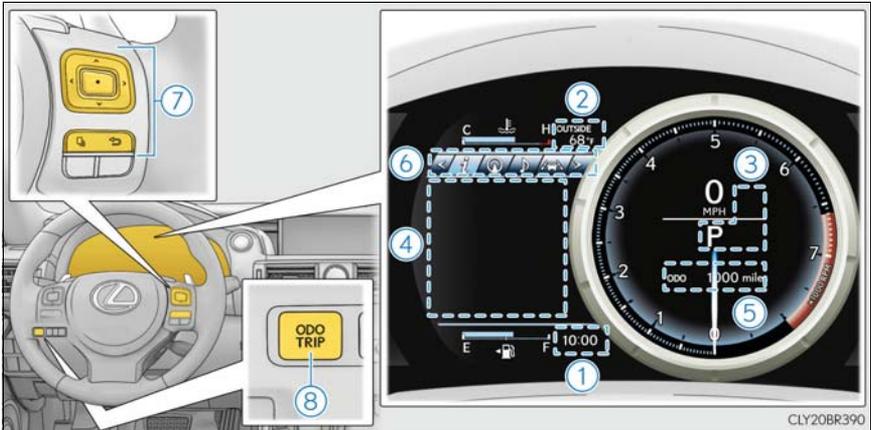


- ① Clock
- ② Outside temperature
- ③ Indicator/shift position display area
Displays the following items:
 - Indicators
 - Shift position display
- ④ Content display area
Main meter in center position:
Displays various drive information on the main meter. Additionally, warning or advice pop-up displays will be displayed in some situations.
 - Drive information
 - Warning messageMain meter moved to the right:
A variety of information can be displayed by selecting a menu icon. Additionally, warning or advice pop-up displays will be displayed in some situations.
 - Menu icon content
 - Warning message
- ⑤ Odometer/trip meter display area
Displays the following items:
 - Odometer/trip meter
 -  Distance until next engine oil change
- ⑥ Menu icons (→P. 15)
- ⑦ Meter control switches (→P. 14)
- ⑧ Odometer/trip meter and trip meter reset button (→P. 14)

■ Using the multi-information display

■ Using the content display area

The content display area is operated using the meter control switches.

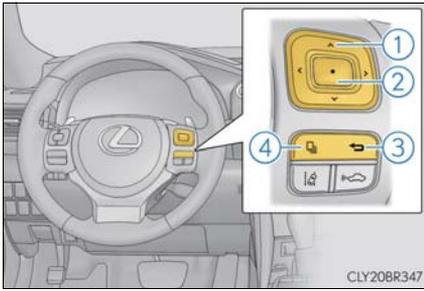

- ①   : Select menu icons
  : Change displayed content, scroll up/down the screen and move the cursor
- ② Press: Enter/Set
Press and hold: Reset
- ③ Return to the previous screen
Pressing and holding the switch will display the first screen of the selected menu icon.

▶ Except F SPORT models

- ④ Press: Display the top screen
Press and hold: Register current screen as the top screen

▶ F SPORT models


- ④ Move the main meter
When the main meter moves to the right, the menu icons will be displayed on the left side.

- Move the main meter (F SPORT models)
Moves between center and right-side positions.



■ Using the odometer/trip meter display area

Items in this area are operated using the odometer/trip meter and trip meter reset button.

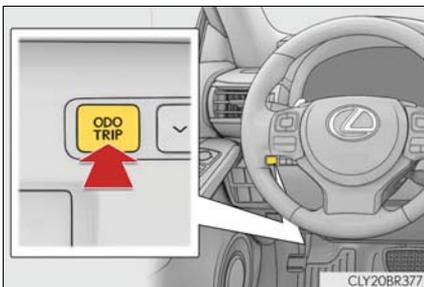

- Press: Change displayed item
Each time the button is pressed, the displayed item will be changed.
- Press and hold: Reset
Display the desired trip meter and press and hold the button to reset the trip meter.

■ Menu icons

Select a menu icon to display its content.



Drive information

Select to display various drive data.



Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the meter using the meter control switches.



Driving assist system information

Select to display the operational status of the following systems:

- Dynamic radar cruise control
- LDA (Lane Departure Alert with steering control)



Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.




Settings display

Select to change the meter display settings and other settings.


If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Headlights

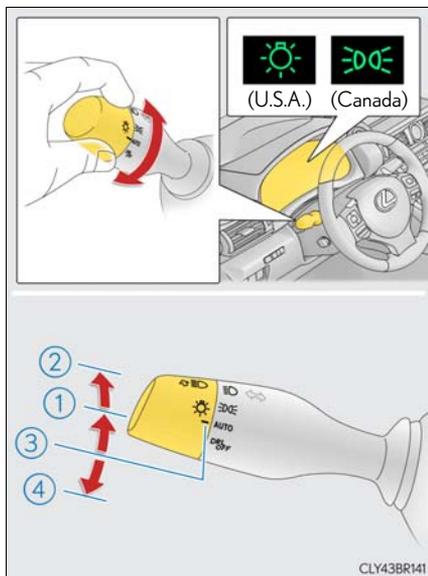

- ① The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- ② The headlights and all lights listed above (except daytime running lights) turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the engine switch is in IGNITION ON mode.)
- ④ **DRL OFF (U.S.A.)** Off
○ The daytime running lights turn (Canada) on.

Turning on the high beam headlights

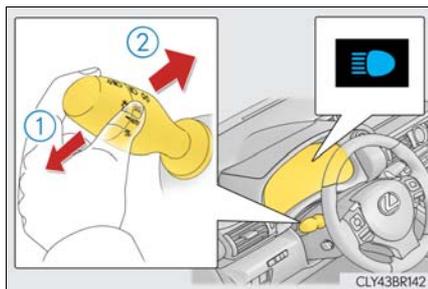


- ① With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


Automatic High Beam

The Automatic High Beam uses a camera sensor located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically turns the high beams on or off as necessary.

■ Activating the Automatic High Beam

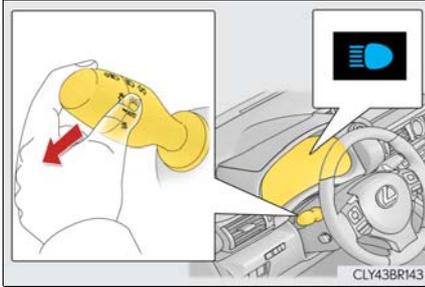


- 1** Push the lever away from you with the headlight switch in the  or AUTO position.

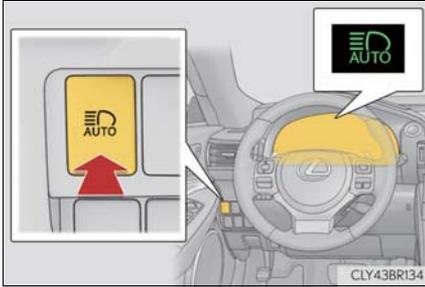

- 2** Press the Automatic High Beam switch. The Automatic High Beam indicator will come on when the system is operating.

■ Turning the high beams on/off manually

● Switching to the low beams

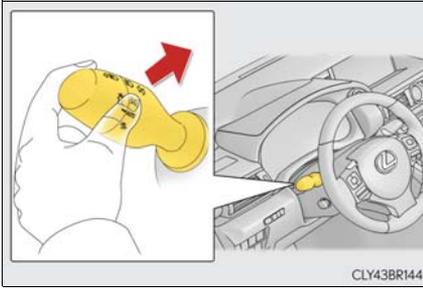


Pull the lever to its original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

● Switching to the high beams

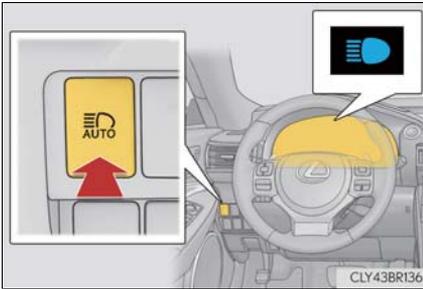

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

Windshield Wipers and Washer


The lever will return to its original position after operation.

► Intermittent windshield wipers with interval adjuster




- ① OFF (U.S.A.) or (Canada)
Move the lever up by 2 levels
- ② Move the lever up by 1 level
- ③ (U.S.A.) or (Canada)
Move the lever down by 1 level
- ④ HI (U.S.A.) or (Canada)
Move the lever down by 2 levels

Operation Status before operation	OFF or		or	HI or
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change

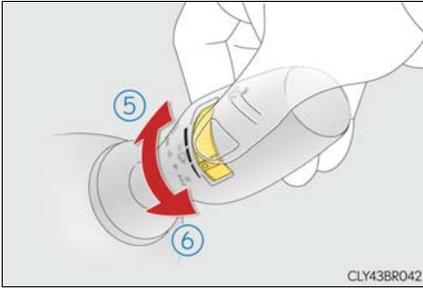

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

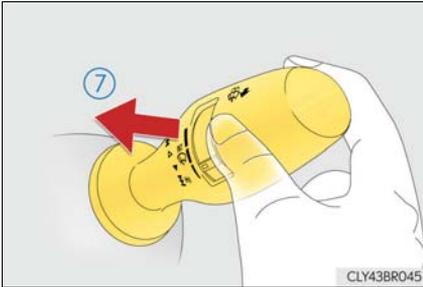


- ⑦ Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Rain-sensing windshield wipers

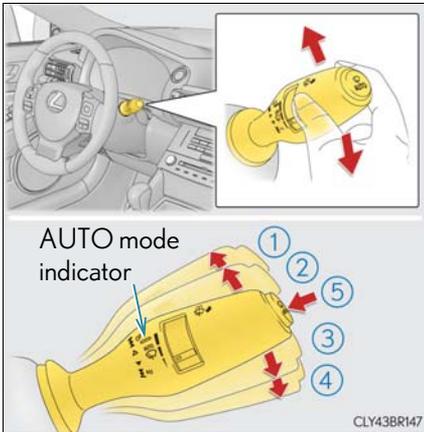

- ① OFF (U.S.A.) or (Canada)
Move the lever up by 2 levels
- ② Move the lever up by 1 level
- ③ (U.S.A.) or (Canada)
Move the lever down by 1 level
- ④ HI (U.S.A.) or (Canada)
Move the lever down by 2 levels
- ⑤ AUTO AUTO mode on/off switch


With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The AUTO mode indicator will turn on when AUTO mode is selected.

Status before operation \ Operation		OFF or		or	HI or
		Off	Temporary operation	Temporary operation	Low speed operation
Low speed operation	Off	Off	High speed operation	High speed operation	
High speed operation	Off	Low speed operation	No change	No change	
AUTO mode	Intermittent operation	Off	Temporary operation *1	Low speed operation *2	High speed operation *2
	Continuously		No change		

*1: After temporary operation, the mode will return to AUTO mode.

*2: AUTO mode will be canceled.

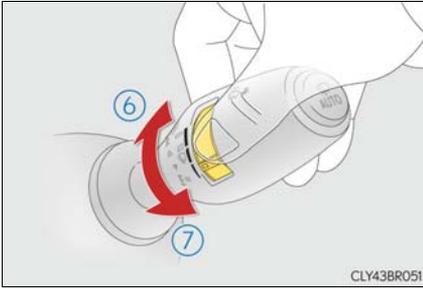

When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity



- ⑧ Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:
When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

Lexus Safety System+

The Lexus Safety System+ consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

■ PCS (Pre-Collision System)

The pre-collision system uses a radar sensor and camera sensor to detect vehicles and pedestrians in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

■ LDA (Lane Departure Alert with steering control)

→P. 27

■ Automatic High Beam


→P. 17

■ Dynamic radar cruise control

→P. 24


Dynamic Radar Cruise Control

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed. Use the dynamic radar cruise control on freeways and highways.

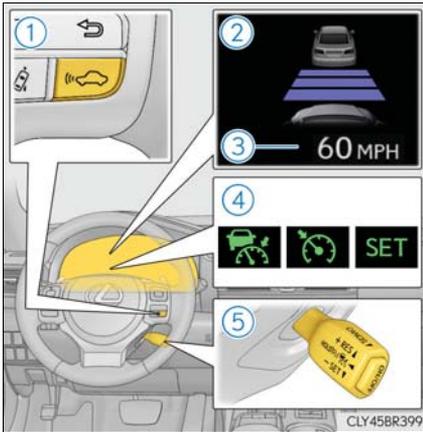


- 1 Vehicle-to-vehicle distance switch
- 2 Display
- 3 Set speed
- 4 Indicators
- 5 Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

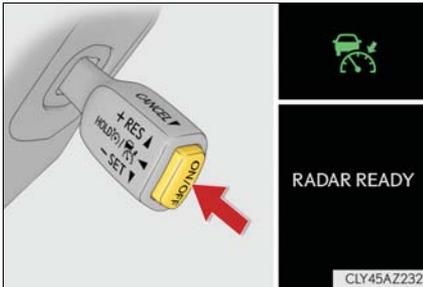


- 1 Press the "ON/OFF" button to activate the cruise control. Radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the button again to deactivate the cruise control.

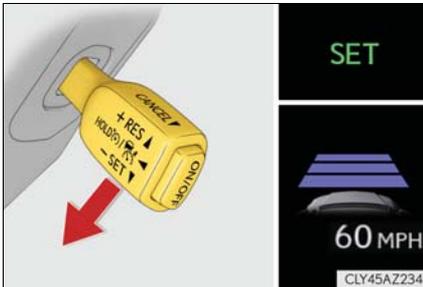

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed. Cruise control "SET" indicator will come on. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

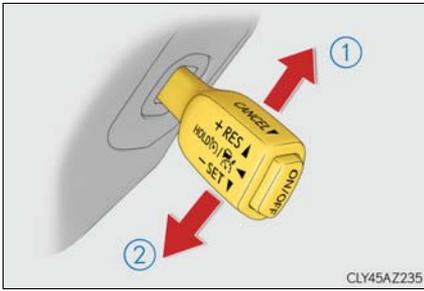


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

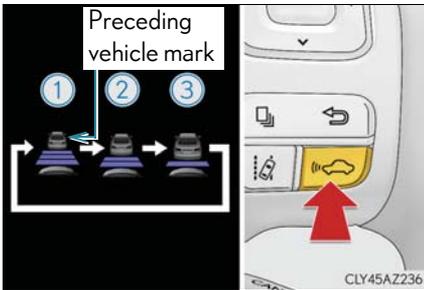

Pressing the switch changes the vehicle-to-vehicle distance as follows:

① Long

② Medium


③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ Canceling and resuming the speed control

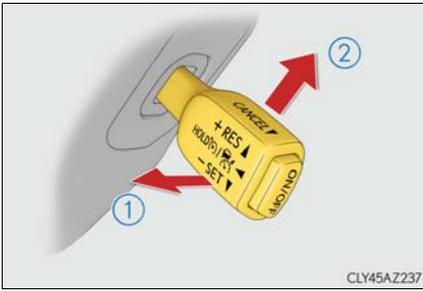

- 1 Pulling the lever toward you cancels the speed control.
The speed control is also canceled when the brake pedal is depressed.
- 2 Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.
However, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.

■ Selecting constant speed control mode

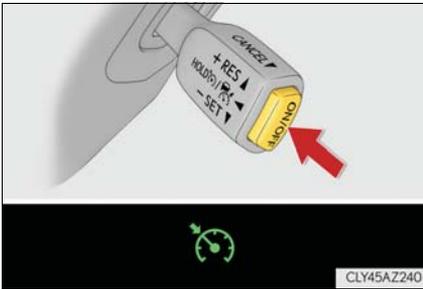

- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.
Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator. Switching to constant speed control mode is only possible when operating the lever with the cruise control off.



- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.
Cruise control "SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

LDA (Lane Departure Alert with steering control)

When driving on highways and freeways with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane.

Turning LDA system on



Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates and a message is displayed on the multi-information display.


Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Center Display and a buzzer. Always check the surrounding area when using this system.

Turning the system on and off

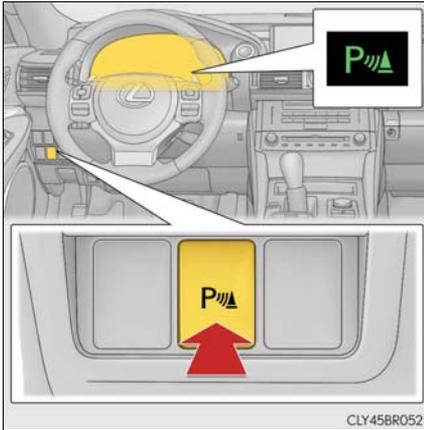

Turns the intuitive parking assist on/off


When on, the indicator light comes on to inform the driver that the system is operational.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions:

- The BSM (Blind Spot Monitor) function
Assists the driver in making a decision when changing lanes
- The RCTA (Rear Cross Traffic Alert) function
Assists the driver when backing up

These functions use same sensors.

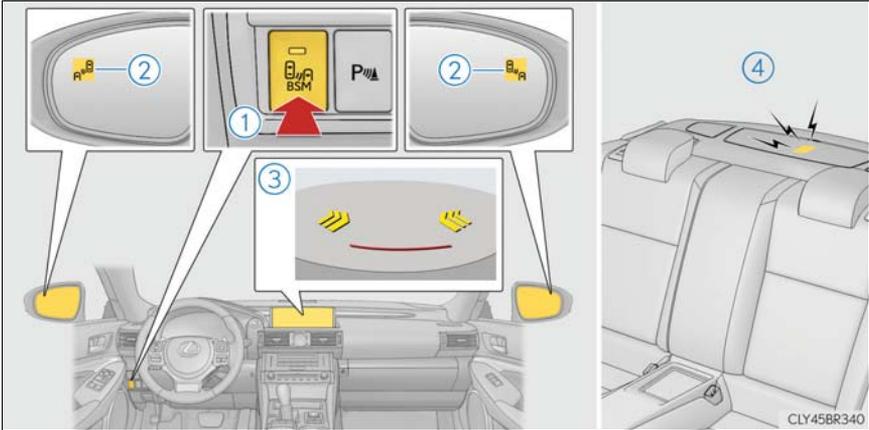

① BSM main switch

This switch is for both the BSM function and RCTA function.

Pressing the switch turns the system on or off. When the switch is turned on, the indicator on the switch illuminates.

② Outside rear view mirror indicators

BSM function:

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.

RCTA function:

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

③ Center Display

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon for the detected side will be displayed on the Center Display.

This illustration shows an example of a vehicle approaching from both sides of the vehicle.

④ RCTA buzzer

If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM main switch is operated to turn the system on.

Tire Pressure Warning System


Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

Initializing the tire pressure warning system

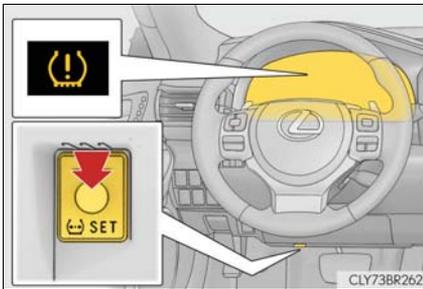

Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

ASC (Active Sound Control) (if equipped)

The ASC system is an electronic sound system that generates engine sound, conveying the kinetic situations of the vehicle's acceleration and deceleration to the driver through the speakers inside the instrument panel.

The vehicle's response to the driver's acceleration behavior and shift operations are also conveyed in sound.

When sport mode is selected, the sound conveyed to the driver will be louder.

Controlling volume



① Louder

② Lower

The indicator comes on when the ASC system is on.


When the dial is turned to the lowest volume, the ASC system will be turned off and the indicator will go off.

Remote Touch

The Remote Touch can be used to operate the Center Display.

Remote Touch is the name for the device that includes the “MAP” button, “HOME” button, “MENU” button, back button, touchpad and sub function button.

Names and operations of each part

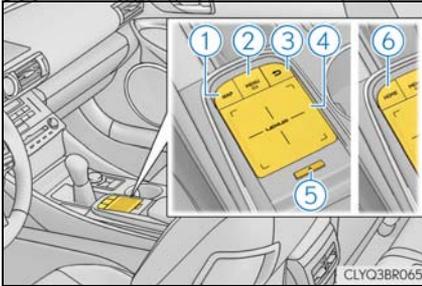

- ① Vehicles with a 10.3-inch display:
“MAP” button
Press this button to display the vehicle’s current position.

- ② “MENU” button

Press this button to display the menu screen.

- ③ Back button

Press this button to display the previous screen.

- ④ Touchpad

Slide your finger on the touchpad and move the pointer to select a function, letter and screen button.

Press the touchpad to enter the selected function, letter or screen button. Certain finger movements on the touchpad can perform functions, such as changing map scalings and scrolling list screens.

- ⑤ Sub function button

When  is displayed on the screen, a function screen assigned to the screen can be displayed.

- ⑥ Vehicles with a 7-inch display:

“HOME” button

Press this button to display the home screen.

Center Display


Menu screen

Press the "MENU" button on the Remote Touch to display the menu screen.

▶ With a 10.3-inch display



▶ With a 7-inch display

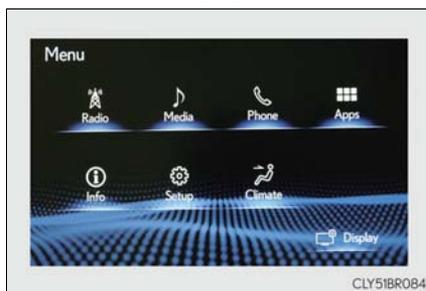


Switch	Function
	Select to display the "Destination" screen. (→P. 38)
	Select to display the radio control screen. (→P. 48)
	Select to display the media control screen. (→P. 49, 50, 51)
	Select to display the hands-free control screen. (→P. 44)
	Select to display the "Apps" screen. *1,2
	Select to display the information screen. (→P. 36)
	Select to display the setup screen. *2
	Select to display the air conditioning control screen. (→P. 53)
	Select to adjust the contrast and brightness of the screens, turn the screen off, etc. *1,2

*1: This function is not made available on some models.


*2: Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

■ Split-screen display (with a 10.3-inch display)

Different information can be displayed on the left and right sides of the screen. For example, air conditioning system screen can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

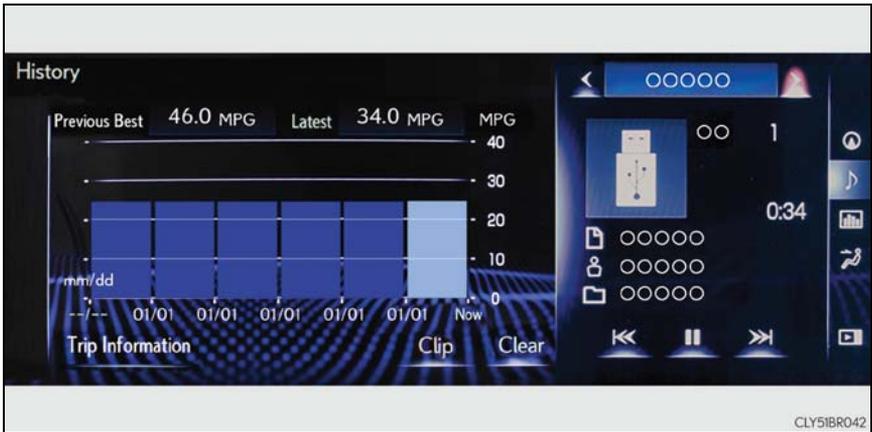

■ Side display

 

The following functions can be displayed and operated on the side display.

- ① Navigation system (→P. 38)
- ② Audio (→P. 48, 49, 50, 51)
- ③ Vehicle information (→P. 37)
- ④ Air conditioning system (→P. 54)
- ⑤ Show/hide the side display

Screen scroll operation



Select the desired point on the map screen. Move the desired point on the center of the map screen.


- 1 Cursor mark
- 2 Distance from the current position to the cursor mark
- 3 Select to register as a memory point.
- 4 Select to set as a destination.

Press the "MAP" button on the Remote Touch to return to the current position.

Editing route

While route guidance is operating, you can change the route using the following method.

- 1 Select  on the map screen.

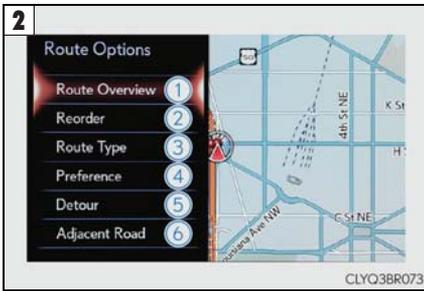

- 2 Select the desired item to be set.
 - 1 Select to display the overview of the entire route.
 - 2 Select to reorder destinations.
 - 3 Select to change route type.
 - 4 Select to set route preferences.
 - 5 Select to set detours.
 - 6 Select to start from adjacent road.

- 3 Check that the route overview is displayed.

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

Fuel Consumption Information

Fuel consumption information can be displayed on the Center Display.


The fuel consumption information can be displayed and operated on the side display. For details, refer to the "OWNER'S MANUAL".

Consumption

Press the "MENU" button on the Remote Touch, then select "Info" on the menu screen.

Trip information


If a screen other than "Trip Information" is displayed, select "Trip Information".

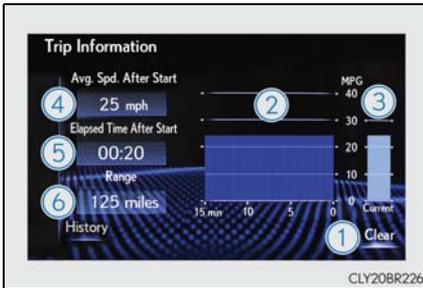

- 1 Resetting the consumption data
- 2 Fuel consumption in the past 15 minutes
- 3 Current fuel consumption
- 4 Average vehicle speed since the engine was started
- 5 Elapsed time since the engine was started
- 6 Cruising range

History

If a screen other than "History" is displayed, select "History".

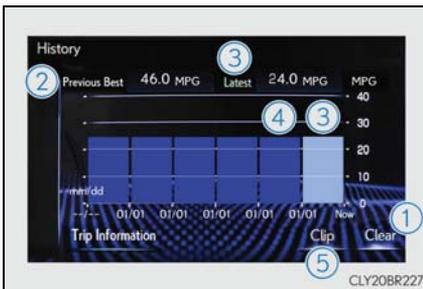

- 1 Resetting the history data
- 2 Best recorded fuel consumption
- 3 Latest fuel consumption
- 4 Previous fuel consumption record
- 5 Updating the latest fuel consumption data

Side display

 
Display the vehicle information on the side display, and then select **<** or **>** to display the desired screen.



- Trip information (type A/type B)
- History

Navigation System (if equipped)

Registering home



- 1 Press the "MAP" button on the Remote Touch.
Please refer to P. 32 for the Remote Touch operation.
- 2 Select .
- 3 Select .
- 4 Select "Yes".
- 5 Select "OK".
Registration of home is complete.

Destination search

Searching by address

There are 2 methods to search for a destination by address.

- 1 Display the destination search screen by either operation:
 - "MAP" button → 
 - "MENU" button → "Destination"
- 2 Select "Address".



- 3 Select the desired search method.
 - 1 Select to change the search area.
 - 2 Select to search by city.
 - 3 Select to search by street address.

► **Searching by city (2)**

4 Select "City".

5 Enter a city name and select "Search".

"Last 5 Cities": Select the desired city name from the list of the last 5 cities.

6 Select the desired city name.

7 Enter a street name and select "Search".

8 Select the desired street name.

9 Enter a house number and select "Search".

► **Searching by street address (3)**

4 Select "Street Address".

5 Enter a house number and select "Search".

6 Enter a street name and select "Search".

7 Select the desired street name.

8 Enter a city name and select "Search".

9 Select the desired city name.

■ Searching by point of interest

There are 3 methods to search for a destination by Point of Interest.

1 Display the destination search screen by either operation:

- “MAP” button → 
- “MENU” button → “Destination”

2 Select “Point of Interest”.



3 Select the desired search method.

- ① Select to change the search area.
- ② Select to search by name.
- ③ Select to search by category.
- ④ Select to search by phone number.

► Searching by name (②)

4 Select “Name”.

5 Enter a POI name and select “Search”.

6 Select the desired POI.

► Searching by category (③)

4 Select "Category".



5 Select the desired search point.

① Select to search for POIs near your current position.

② Select to search for POIs along the set route.

③ Select to search for POIs near a specific city center.

④ Select to search for POIs near a destination. When more than 1 destination has been set, a list will be displayed on the screen. Select the desired destination.

6 Select the desired POI category.

7 Select the desired POI.

► Searching by phone number (④)

4 Select "Phone #".

5 Enter a phone number and select "OK".

Hands-free System For Cellular Phone


■ Registering/connecting a Bluetooth® device

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> to find approved Bluetooth® phones for this system.

- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the "MENU" button on the Remote Touch.
Please refer to P. 32 for the Remote Touch operation.
- 3 Select "Phone".
 - Operations up to this point can also be performed by pressing the  switch on the steering wheel.
- 4 Select "Yes" to register a phone.



- 5 Select the desired Bluetooth® device.
- 6 Register the Bluetooth® device using your Bluetooth® device.
- 7 Check that the following screen is displayed, indicating pairing was successful.

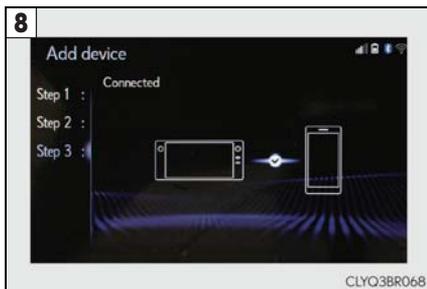

- 8 Check that "Connected" is displayed and registration is complete.

■ Contacts transfer

- 1** Press the “MENU” button on the Remote Touch.
Please refer to P. 32 for the Remote Touch operation.
 - 2** Select “Setup”.
 - 3** Select “Phone” on the sub menu.
 - 4** Select “Contacts/Call History”.
 - 5** Select “Transfer Contacts from Device”.
 - 6** Select “From Phone (Bluetooth^{*})”.
 - 7** Transfer the contact data to the system using a Bluetooth[®] phone.
 - 8** Check that a confirmation screen is displayed when the operation is complete.
- *: The Bluetooth[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Contacts transfer may not be possible depending on the type of phone.

■ Registering the contacts in the favorites list

- 1** Press the “MENU” button on the Remote Touch.
Please refer to P. 32 for the Remote Touch operation.
- 2** Select “Setup”.
- 3** Select “Phone” on the sub menu.
- 4** Select “Contacts/Call History”.
- 5** Select “Add Favorite”.
- 6** Select the desired contact to add to the favorites list.
- 7** Check that a confirmation screen is displayed when the operation is complete.

■ Calling by favorites list

- 1** Press the “MENU” button on the Remote Touch.
Please refer to P. 32 for the Remote Touch operation.
- 2** Select “Phone”.
- 3** Select “Favorites” on the sub menu and select the desired contact.
- 4** Select the desired number.
- 5** Check that the dialing screen is displayed.

 
■ Calling the message sender

- 1** Press the “MENU” button on the Remote Touch.
Please refer to P. 32 for the Remote Touch operation.
- 2** Select “Phone”.
- 3** Select “Message” on the sub menu.
- 4** Select a desired account name that is displayed on the left side of screen.
- 5** Select the desired message from the list.
- 6** Select , or press the  switch on the steering wheel.
- 7** Check that the dialing screen is displayed.

■ Receiving a call

- 1 Select "Answer"/ or press the  switch on the steering wheel to talk on the phone.

▶ Main display




▶ Side display (with a 10.3-inch display)



"Decline"/: Select to refuse to receive the call.

 ■ Steering switches



- ① Volume control switch
 - Press the "+" side to increase the volume.
 - Press the "-" side to decrease the volume.
- ② Off hook switch
 - Press to start talking.
- ③ On hook switch
 - Press to end talking/dialing.
- ④ Talk switch
 - Press the talk switch to start the speech command system.
 - To cancel voice recognition, press and hold the talk switch.
- ⑤ Cursor switch
 - Select and enter the item on the multi-information display.

Audio System

Audio control screen

Follow the procedure below to display the audio control screen.

► Using the audio control switch

Press the "RADIO" or "MEDIA" button.


► Using the Remote Touch

Press the "MENU" button on the Remote Touch, then select "Radio" or "Media".

Please refer to P. 32 for the Remote Touch operation.

Selecting an audio source

► Using the audio control switch

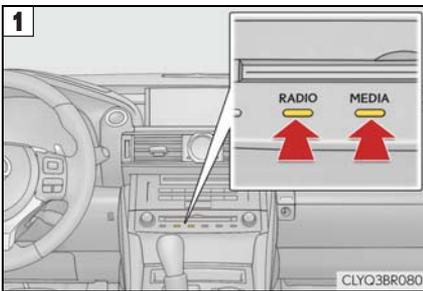

- 1 Press the "RADIO" or "MEDIA" button.

"RADIO" button: Press to change radio modes.

"MEDIA" button: Press to change media modes.

 
- Each time the "RADIO" or "MEDIA" button is pressed, the audio source changes.

► From the audio source selection screen

- 1 Display the audio control screen.
- 2 Select "Source" on the sub menu.
- 3 Select the desired source.

Steering switch operation


Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.



- ① Increases/decreases volume
- ② Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation
- ③ AM, FM, HD mode: Selects a radio station
SXM mode: Selects a channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
USB mode: Selects a file/track
iPod mode: Selects a track/file
Bluetooth[®] audio mode: Selects a track


Radio

 Audio control switch



- 1 Press to seek up/down.
Press and hold for continuous seek.
- 2 Press to turn mute on/off.
Cache radio only: Press to play/pause.
- 3 Turn to step up/down frequencies/
channels.

Control screen

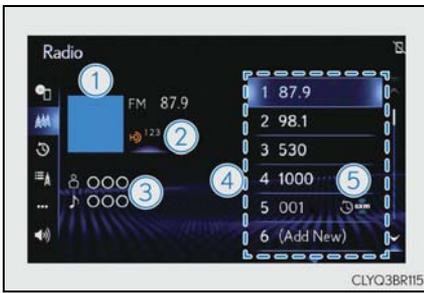


- 1 Displays cover art.
- 2 Select to display HD) multicast channels available.
- 3 Displays the artist info and song title or album and genre.
- 4 Select to tune to preset stations/channels.
- 5 Display items on the channels registered to smart favorites.

Presetting a station

- 1 Tune in the desired station.
- 2 Select and hold "(Add New)".

■ CD

■ Audio control switch

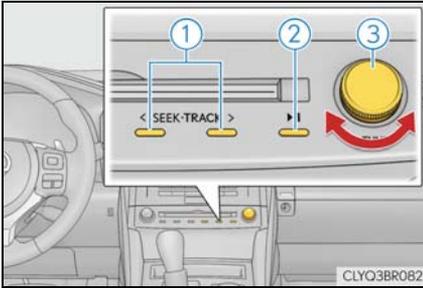

- ① Press to select a track/file.
Press and hold to fast forward/rewind.
- ② Press to pause/play.
- ③ Turn to select a track/file.


■ Control screen

▶ Audio CD



- ① Displays cover art.
- ② Select to set repeat playback.
- ③ Select to change the track.
Select and hold to fast rewind.
- ④ Select to play/pause.
- ⑤ Select to change the track.
Select and hold to fast forward.
- ⑥ Select to set random playback.


▶ MP3/WMA/AAC disc

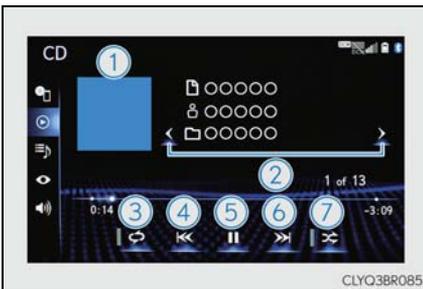

- ① Displays cover art.
- ② Select to change the folder.
- ③ Select to set repeat playback.
- ④ Select to change the file.
Select and hold to fast rewind.
- ⑤ Select to play/pause.
- ⑥ Select to change the file.
Select and hold to fast forward.
- ⑦ Select to set random playback.


DVD

 Audio control switch



- ① Press to select a chapter.
Press and hold to fast forward/rewind.
- ② Press to pause/play.
- ③ Turn to select a chapter.


Control screen

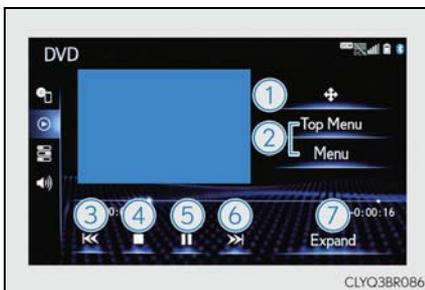

- ① Select to display the menu control key.
- ② Select to display the menu screen.
- ③ Select to change the chapter.
Select and hold to fast rewind.
- ④ Select to stop the video screen.
- ⑤ Select to play/pause.
- ⑥ Select to change the chapter.
 - During playback: Select and hold to fast forward.
 - During a pause: Select and hold to slow forward.
- ⑦ Select to display expanded screen video.


■ iPod

■ Audio control switch

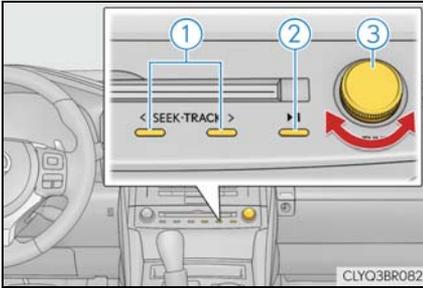


- ① Press to select a track.
Press and hold to fast forward/rewind.
- ② Press to pause/play.
- ③ Turn to select a track.

■ Control screen

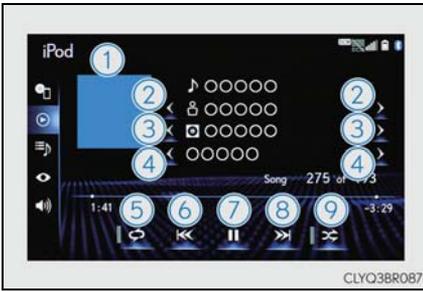


- ① Displays cover art.
- ② Select to change the artist.
- ③ Select to change the album.
- ④ Select to change the playlist.
- ⑤ Select to set repeat playback.
- ⑥ Select to change the track.
Select and hold to fast rewind.
- ⑦ Select to play/pause.
- ⑧ Select to change the track.
Select and hold to fast forward.
- ⑨ Select to set random playback.

Air Conditioning System

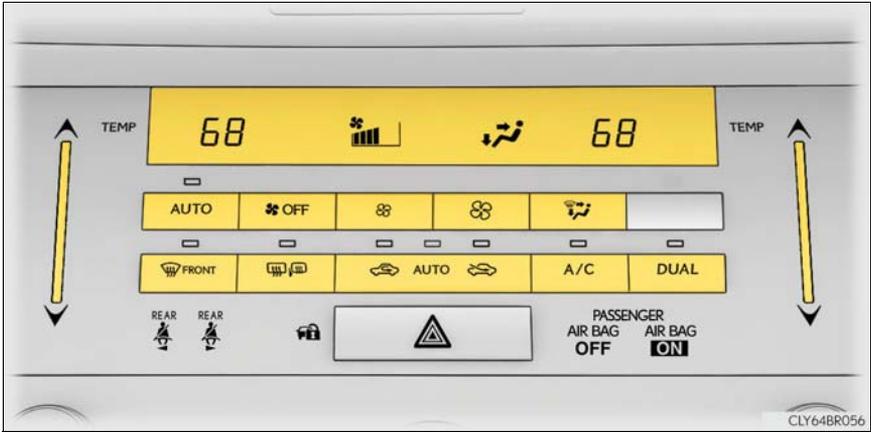

Adjusting the temperature

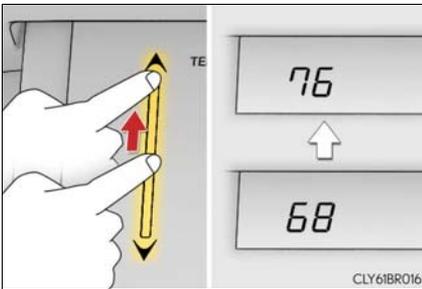

To adjust the temperature setting, touch and slide your finger up or down on the sensor. The temperature setting can also be adjusted by touching on the sensor. When the temperature setting is changed, a buzzer sounds.

If is not pressed, the system will blow ambient temperature air or heated air.

 
Air conditioning control screen



- 1 Display the air conditioning control screen
- 2 Display the option control screen (→P. 53)
- 3 Adjust the left-hand side temperature setting
- 4 Adjust the fan speed setting
- 5 Select the air flow mode
- 6 Adjust the right-hand side temperature setting
- 7 Function on/off indicators
When the function is on, the indicator illuminates on the control screen.
- 8 Display the sub function menu (→P. 54)

Option control screen

The functions can be switched on and off.



- 1 Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)
- 2 Select to set eco mode on/off
- 3 Set cooling and dehumidification function on/off
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- 4 Removing pollen from the air (Pollen removal mode)

Sub function menu

When the sub function button on the Remote Touch is pressed, the following functions can be switched on and off.



- 1 Set automatic mode on/off
- 2 Turn the fan off
- 3 Set cooling and dehumidification function on/off
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- 4 Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- 5 Select to set eco mode on/off

Side display (vehicles with a 10.3-inch display)



- 1 Adjust the left-hand side temperature setting
- 2 Adjust the fan speed setting
- 3 Adjust the right-hand side temperature setting
- 4 Set cooling and dehumidification function on/off
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- 5 Adjust the temperature for the driver's and front passenger's seats separately ("DUAL" mode)
- 6 Select the air flow mode operation

Using automatic mode

Press the automatic mode button to turn on the airflow and adjust the temperature setting.

Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)

In dual mode, driver and passenger side temperature settings can be adjusted separately.

 
To turn on the "DUAL" mode, perform any of the following procedures:

- Press "DUAL".
- Select "DUAL" on the air conditioning control screen.
- Adjust the passenger's side temperature setting.

The indicator comes on when the "DUAL" mode is on.


Seat Heaters (if equipped)/ Seat Ventilators (if equipped)

■ Seat heaters



Each time the switch is pressed, the intensity of the seat heater changes and the level indicator lights (amber) light as follows:
Hi (3 segments lit) → Mid (2 segments lit)
→ Lo (1 segment lit) → Off

 ■ Seat ventilators



Each time the switch is pressed, the intensity of the seat ventilator changes and the level indicator lights (green) light as follows:
Hi (3 segments lit) → Mid (2 segments lit)
→ Lo (1 segment lit) → Off

■ Seat heater timer control


To enable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time when the vehicle is stopped until a buzzer sounds once. If a seat heater is turned on while seat heater timer control is enabled, the intensity of the seat heater will automatically change from Hi→Mid→Lo.

The timing of the change in seat heater intensity differs depending on the temperature inside the cabin, etc. when the seat heater is operating.

To disable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds twice.

Voice Command System

Basic operation

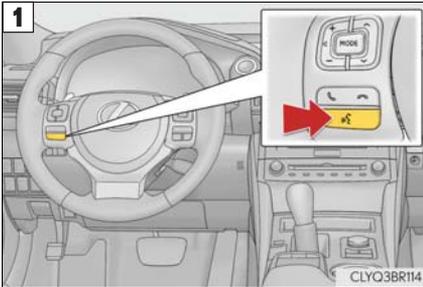

- 1** Press the talk switch.
To cancel the voice command system, press and hold the talk switch.
- 2** If “Getting Started with Voice” screen is displayed, select “OK” or press the talk switch.
- 3** After hearing a beep, say a supported command.
 - To display sample commands of the desired function, say the desired function or select the desired function button. To display more commands, select “More Commands”.
 - Selecting “Help” or saying “Help” prompts the voice command system to offer examples of commands and operation methods.

Continue on to pages 57-62 for a detailed list of Voice Commands for the following categories:

Common.....	page 57
Top menu	page 57
Navi.....	page 58
Phone	page 59
Radio.....	page 60
Audio	page 60
Info.....	page 61
Apps.....	page 61
Climate.....	page 62

- Important voice commands information and tips
 - Voice commands can be used while driving.
 - You must wait until after the beep to say a command.
 - If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

▶ Common

Command	Action
"Help"	Displays examples of some of the available commands
"Go Back"	Returns to the previous screen
"Cancel"	Cancels the voice command system
"Start over"	Returns to top menu screen
"Pause"	Temporarily pauses a voice session until it is resumed by pressing the talk switch again.

▶ Top menu

Command	Action
"Show command examples for <menu>"	Displays the command list of the selected menu
"More Commands"	Displays more commonly used commands
"Voice Settings"	Displays Voice Setting screen
"Train my voice"	Displays Train Voice Recognition screen [*]

^{*}: Vehicle must be parked

► Navigation *1

Command	Action
"Get directions to <house #, street, city, state>"*2	Enables setting a destination by saying the address *3,4
"Find a <POI category/POI name>"	Displays a list of <POI category>*5/<POI name>*6 near the current position
"Find a <POI> near my destination"	Displays a list of <POI> near the destination
"Find a <POI category> in a city"*2	Displays a list of <POI> in a specified city and state *4
"Go Home"	Displays the route to home
"Go to Favorite <1-5>"	Sets the location registered to the corresponding favorite number as the destination
"Show Recent Destinations"	Displays recent destinations. Selecting a number from the list will start navigation to the selected recent destination.
"Cancel Route"	Cancels the route guidance
"Delete destinations"	Displays a list of destination to delete *7
"Show <POI category> icons"	Displays the specified point of interest category *5 icons on the map
"Destination Assist"	Connects the system to the Lexus response center

*1: With a 10.3-inch display

*2: English and French only

*3: Best recognition results occur when saying the full address without the zipcode

*4: When the language is set to French, the supported area is only Quebec Province in Canada

*5: For example; "Gas stations", "Restaurants", etc.

*6: Major national brands are always supported. Local brands are also supported with a subscription to the Lexus Enform. Contact your Lexus dealer for details.

*7: Used when multiple destinations are set on a route

► Phone

Command	Action
"Call <contact>"*	Places a call to the specified contact from the phone book
"Call <contact> <phonetype>"*	Places a call to the specified phone type of the contact from the phone book
"Dial <phone number>"	Places a call to the specified phone number
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Send a message to <contacts>"	Sends a text message to specified contact from the phone book

*: If the system does not recognize the name of a contact, create a voice tag. The name of a contact can also be recognized by adding a voice tag.

► While in a phone call

Command	Action
"Send <digits>"	Sends DTMF tones has specified
"Mute"	Mutes the microphone (far side cannot hear the conversation)
"Unmute"	Unmutes the microphone

► While incoming message notification is displayed*

Command	Action
"Read Message"	Reads the incoming message over the vehicle speakers
"Ignore"	Ignores the incoming message notification
"Reply"	Initiates sending a reply to the incoming message
"Call"	Places a call to the phone number of incoming message

*: Full screen message notification must be turned on within the phone settings

► Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play a <genre> station"	Changes the radio to an FM station of the specified genre ^{*1}
"Tune to preset <1-36>"	Changes the radio to the specified preset radio station
"Tune to a <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre ^{*2}
"Tune to <satellite channel name>"	Changes the radio to the satellite radio channel with the specified name ^{*2}
"Tune to channel <number> on XM"	Changes the radio to a satellite radio channel of the specified number ^{*2}

*1: A station list must be built first using the radio screen

*2: Requires a satellite radio subscription

► Audio^{*}

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Play Genre <name>"	Plays tracks from the selected genre
"Play Composer <name>"	Plays tracks from the selected composer
"Play Podcast <name>"	Plays tracks from the selected podcast
"Play Audiobook <name>"	Plays tracks from the selected audiobook
"Audio On"	Turns the audio system on
"Audio Off"	Turns the audio system off
"Change the audio source to <source name>"	Sets the source to the specified audio mode

*: The audio device must be connected via a USB cable to use the functionality in this section

► Info*1

Command	Action
"Get the Forecast"	Displays weather information
"Get the Forecast for <city>"*2	Displays weather for the specified city
"Show Traffic"	Displays traffic information
"Show Traffic near here"	Displays traffic information near your current location
"Get traffic along my route"	Displays traffic information along your current route
"Show Traffic on this street"	Displays traffic information along road you are currently driving on
"Show Traffic for saved route"	Displays traffic information for a saved route
"Show Predictive Traffic"	Displays the predictive traffic map

*1: With a 10.3-inch display

*2: Only major US cities are supported by voice

► Apps

Command	Action
"Launch <apps>"*	Activates the Lexus Enform App Suite 2.0 application

*: When an application is opened and is in full screen mode, pressing the talk switch will start the voice command system and commands for the currently displayed application will be available

► Climate

Command	Action
"Turn the AC on/Turn the AC off"	Turns air conditioning system on or off
"Change the Fan speed to <#>"	Changes the set fan speed of the air conditioning system to <#>
"Set temperature to <#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees*
"Increase Temperature/Decrease Temperature"	Increases or decreases the temperature of the air conditioning system
"Increase Fan speed/Decrease Fan Speed"	Increases or decreases the fan speed of the air conditioning system

*: Only within the possible temperature range of the air conditioning system

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

Portable Audio Device Ports

This ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



 
Open the cover and connect the portable audio device.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

Programming the HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.




- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ HomeLink® icon
Illuminates while HomeLink® is operating.
- ④ Buttons

■ Programming HomeLink®


Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

 1 Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).



Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons. Keep the HomeLink® indicator light in view while programming.

► For U.S.A. owners

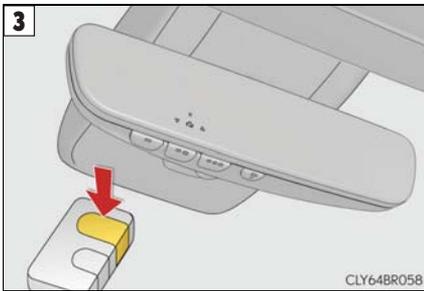

Program a device.

► Programming a device other than an entry gate (for U.S.A. owners)

Press and hold the handheld transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.


► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).


- 4** Test the HomeLink[®] operation by pressing the newly programmed button and observing the indicator light:
- Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink[®] button is pressed and released.
 - Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink[®] button for 2 seconds then release it.
 - If the garage door or other device does not operate, proceed to “Programming a rolling code system”.
- 5** Repeat the steps above to program another device for any of the remaining HomeLink[®] buttons.

■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

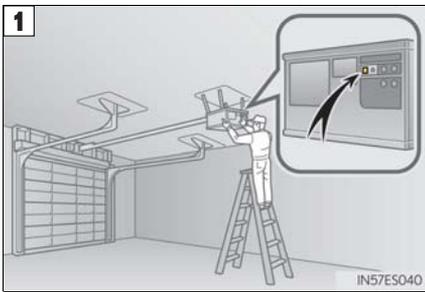


Locate the “Learn” or “Smart” button on the garage door opener motor in the garage. This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

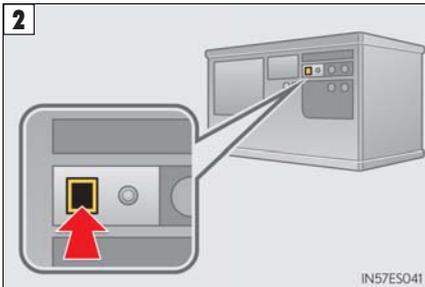

Press and release the “Learn” or “Smart” button.

Perform **3** within 30 seconds after performing **2**.

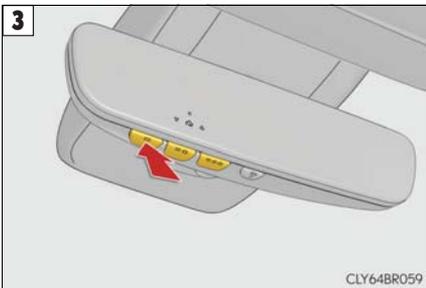

Press and hold the desired HomeLink[®] button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor operates when the HomeLink[®] button is pressed, the garage door opener motor recognizes the HomeLink[®] signal.

■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to www.HomeLink.com.)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink[®], both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform **2** and **3** within the first 10 presses of the HomeLink[®] button after programming has been completed.

- 2 Press a programmed HomeLink[®] button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink[®] button, after the garage door operation has stopped, press the “Learn” or “Smart” button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

■ Reprogramming a single HomeLink[®] button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink[®] button.
- 2 When the HomeLink[®] indicator starts flashing (orange), continue to hold the HomeLink[®] button and perform “Programming HomeLink[®]” **1** (it takes 20 seconds for the HomeLink[®] indicator to start flashing).

■ Operating HomeLink[®]


Press the appropriate HomeLink[®] button. The HomeLink[®] indicator light should turn on.

Lexus Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

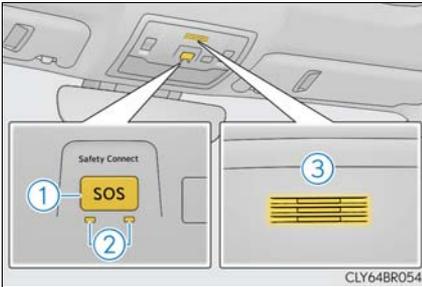

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification**

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) in the United States (1-877-539-8777 in Puerto Rico, 1-800-26-LEXUS in Canada) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform Remote (if equipped)

Lexus Enform Remote is a smart phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>.

Function of the Lexus Enform Remote is achieved by using DCM (Data Communication Module).

Subscription

After you sign the Telematics Subscription Service Agreement, download the Lexus Enform Remote app from your smart phone's app store, and register within the app (or enroll and complete registration at the dealer), you can begin using these services.

A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) for further subscription details.



Lexus Enform Service Connect (if equipped)

Lexus Enform Service Connect uses DCM (Data Communication Module) to collect and transmit vehicle data that allows Lexus to provide:

- Vehicle Health Report (VHR) (Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- Maintenance Notifications
- Vehicle Alert Notifications

For details about this service and how to register, refer to <http://www.lexus.com/enform/>.

The Lexus Enform Service Connect is achieved by using a DCM (Data Communication Module) built in the vehicle.

SiriusXM Satellite Radio

A SiriusXM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

■ Subscription

For SiriusXM Services requiring a subscription (such as SiriusXM Satellite Radio), the following paragraph shall be included.

Required SiriusXM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

- ▶ U.S.A. Customers:
Visit www.siriusxm.com or call 1-877-447-0011
- ▶ Canadian Customers:
Visit www.siriusxm.ca or call 1-877-438-9677

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light (if equipped)

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction
indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering
system warning light



(flashes or
illuminates)

PCS warning light



Slip indicator



(Blinking
and then
continuously
on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.

- | | | | |
|--|---|---|--|
|  | (U.S.A.)
Parking brake warning light |  | Low fuel level warning light |
|  | (Canada)
Parking brake warning light |  | Seat belt reminder light |
|  | LDA (Lane Departure Alert) indicator |  | Rear passenger's seat belt reminder lights |
|  | PCS warning light
(flashes or illuminates) |  | Master warning light |
|  | Open door warning light |  | Tire pressure warning light*
(Illuminates without blinking) |

See the Owner's Manual

- | | | | |
|--|--|---|--|
|  | Turn signal indicator |  | VSC OFF indicator |
|  | Headlight indicator (U.S.A.) |  | LDA (Lane Departure Alert) indicator |
|  | Tail light indicator (Canada) |  | LDA (Lane Departure Alert) indicator |
|  | Headlight high beam indicator |  | LDA (Lane Departure Alert) indicator
(Flashes) |
|  | Automatic High Beam indicator |  | PCS warning light |
|  | Front fog light indicator (if equipped) |  | BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped) |
|  | Cruise control indicator |  | Security indicator |
|  | Dynamic radar cruise control indicator |  | Low outside temperature indicator |
|  | Cruise control "SET" indicator |  | Eco Driving Indicator Light |
|  | Intuitive parking assist indicator (if equipped) |  | "AIR BAG ON/OFF" indicator (U.S.A.) |
|  | Slip indicator
(Flashes) |  | "AIR BAG ON/OFF" indicator (Canada) |

What to do if...

● Drive mode indicators

▶ Except F SPORT models

 ECO	Eco drive mode indicator	 SPORT	"SPORT" indicator
 SNOW	Snow mode indicator		

▶ F SPORT models

 ECO MODE	Eco drive mode indicator	 CUSTOM	"CUSTOM" indicator
 SPORT S+	"SPORT S+" indicator	 SNOW	Snow mode indicator
 SPORT S	"SPORT S" indicator		

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

 
Make sure that the brake pedal is firmly depressed when attempting to start the engine.

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.


What to do if...

If the electronic key does not operate properly

Unlocking the door



 
Insert the mechanical key while pulling on the driver's door handle.



Unlocking the door.

3 Remove the key, return the handle, and then pull the handle again.

 Locking the door




Move the inside lock button to the lock position.

2 Close the door.


What to do if...

Opening the trunk

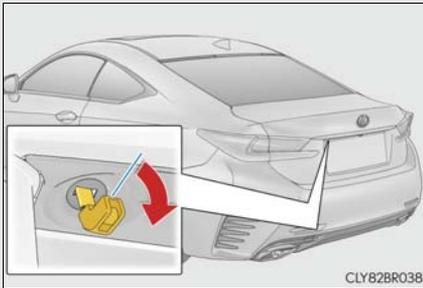

Turn the mechanical key clockwise to open.

Starting the engine

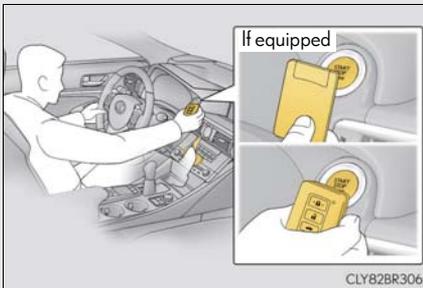

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch. When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2017 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.