

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Entering and Exiting

- 1 Keys ▶P.7
- 1 Smart Access System with Push-button Start ▶P.8
- 1 Anti-theft System ▶P.9



Topic 2

Before Driving

- 1 Seats ▶P.11
- 1 Driving and Seat Position Memory System ▶P.12
- 1 Head Restraints ▶P.13
- 1 Seatbelts ▶P.13
- 1 Outside Rear View Mirrors ▶P.14
- 1 Inside Rear View Mirror ▶P.14
- 1 Steering Wheel ▶P.15
- 1 Odometer/Trip Meter and Trip Meter Reset Buttons ▶P.15

Topic 3

When Driving

- 1 Starting ▶P.17
- 1 Transmission ▶P.18
- 1 Parking Brake ▶P.18
- 1 Multi-information Display ▶P.19
- 1 Turn Signal Lever ▶P.20
- 1 Emergency Flasher Switch ▶P.20
- 1 Mode Select Switch ▶P.20
- 1 Intuitive Parking Assist ▶P.21
- 1 Cruise Control ▶P.22



- 1 Dynamic Radar Cruise Control ▶P.23
- 1 AVS (Adaptive Variable Suspension) ▶P.24
- 1 TRAC/VSC Off Mode ▶P.24



Topic 4

Rain and Night Driving

- 1 Headlights ▶P.27
- 1 Fog Lights ▶P.28
- 1 Windshield Wipers and Washers ▶P.28
- 1 Headlight Cleaner ▶P.29
- 1 Rear Window and Outside Rear View Mirror Defoggers ▶P.29
- 1 Instrument Panel Light Control ▶P.29

Topic 5

Driving Comfort

- 1 Touch Screen ▶P.31
- 1 Air Conditioning System ▶P.32
- 1 Audio System ▶P.34
- 1 Hands-free System ▶P.36
- 1 Ashtrays ▶P.37
- 1 Seat Heaters/Seat Heaters and Ventilators ▶P.38
- 1 Console Box ▶P.39
- 1 Glove Box ▶P.40
- 1 Cup Holders ▶P.40



- 1 Interior Lights ▶P.41
- 1 Rear Sunshade ▶P.41
- 1 Compass ▶P.41
- 1 Luggage Mat ▶P.42
- 1 Lexus Link System ▶P.42



Topic 6

Opening and Closing

- 1 Door Locks ▶P.45
- 1 Power Windows ▶P.46
- 1 Moon Roof ▶P.46
- 1 Fuel Tank Cap ▶P.47
- 1 Hood ▶P.47
- 1 Trunk ▶P.48

What to do if ...

● Responding to warning/indicator lights and other problems that may arise.

Customizing Your Lexus

● A list of features that can be customized.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

Headlight switch P.27
Turn signal lever P.20
Fog light switch P.28

Windshield wipers and washer switch P.28

Multi-information display P.19

See P.5

Driving and seat position memory switches * P.12

Inside door lock button P.45

Window lock switch P.46

Power window switches P.46

Door lock switch P.45

Parking brake pedal P.18


Tilt and telescopic steering control switch P.15


Telephone switch P.36

"DISP" switch P.19

Cruise control switch P.22, 23

Distance switch* P.23

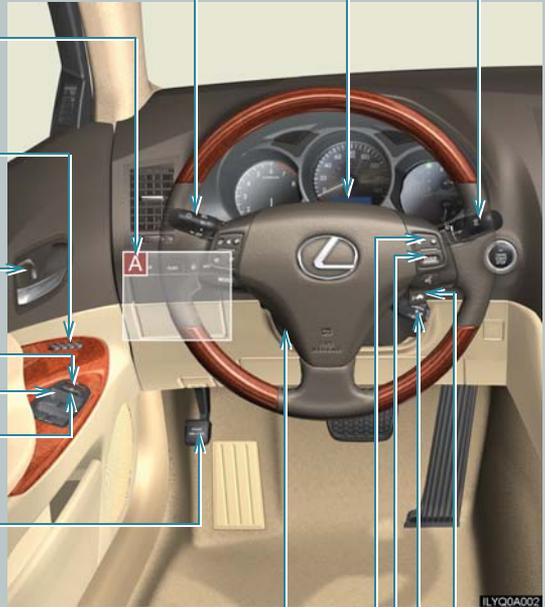


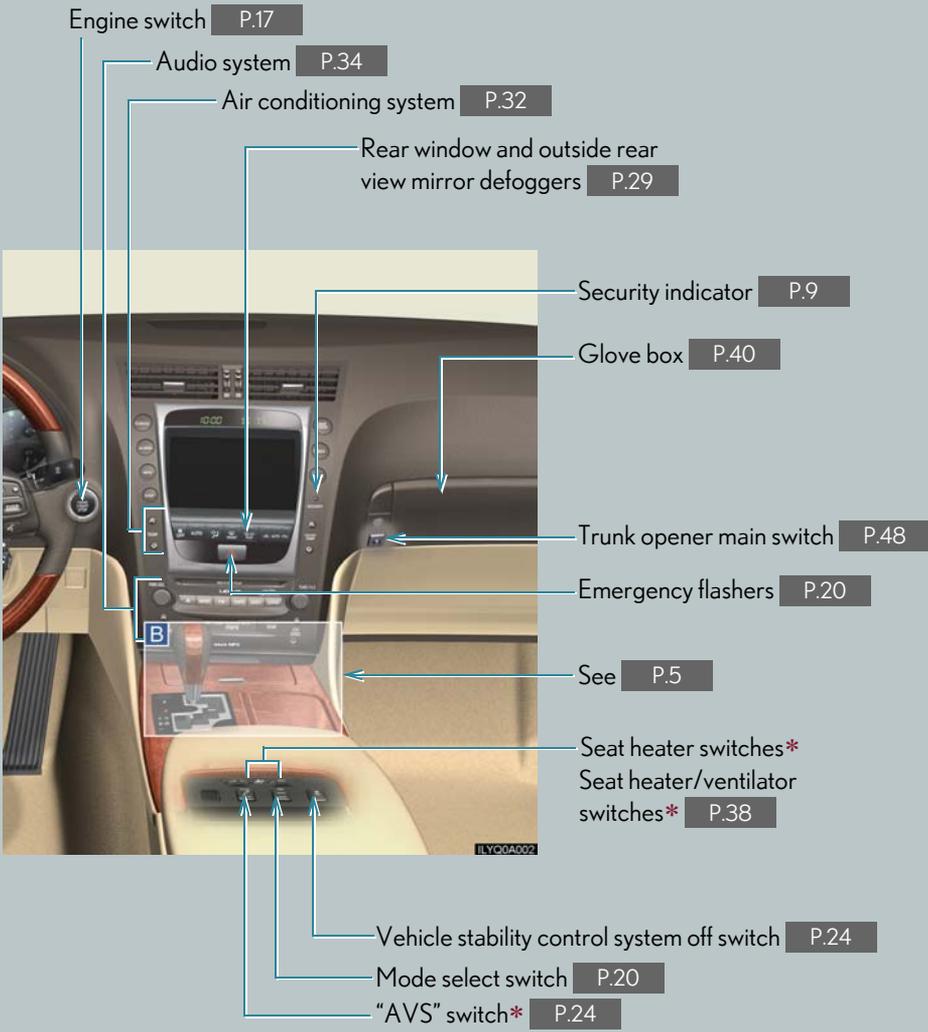

* : If equipped

Overview

Instrument Panel

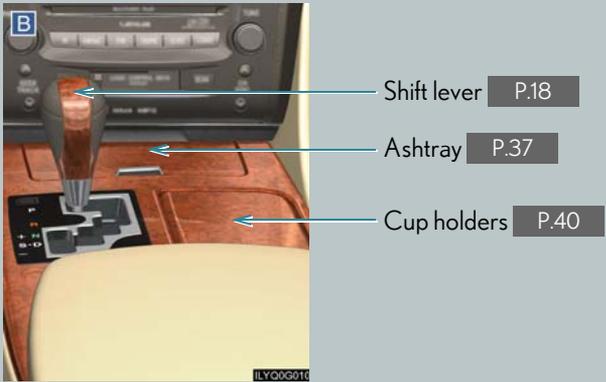

* : If equipped



Topic 1

Entering and Exiting

Keys	7
Smart Access System with Push-button	
Start	8
Anti-theft System.....	9

Keys

n Electronic key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Starts and stops the engine

n Mechanical key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull.

n Wireless remote control



- 1 Locks the doors
- 2 Unlocks the doors
- 3 Opens the trunk
- 4 Sounds the alarm
(To stop the alarm, push any button on the wireless remote control.)

The wireless remote control can also be used to open the windows and moon roof. To do so, simply press and hold  button.

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 17.

n Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

n Exiting the vehicle



To lock the vehicle, press the button on the door handle.

n Opening the trunk



To open the trunk, press the button.

For details on what to do when the electronic key battery becomes discharged, see page 52.

Anti-theft System

The anti-theft system includes the following features to help protect your vehicle from theft.

n Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

n Alarm

When forcible entry is detected, the alarm attracts attention to the vehicle by sounding the horn and flashing the exterior lights.

When all the doors are locked, the security indicator light comes on and begins to flash after approximately 30 seconds to indicate that the system is armed.

To stop the alarm, start the engine or unlock the doors or trunk using the entry function or the wireless remote control. (The alarm will stop after several seconds.)

n Steering lock



The steering lock is engaged when the driver's door is opened with the engine switch OFF.




Topic 2

Before Driving

Seats	11
Driving and Seat Position Memory System...	12
Head Restraints	13
Seatbelts.....	13
Outside Rear View Mirrors	14
Inside Rear View Mirror.....	14
Steering Wheel.....	15
Odometer/Trip Meter and Trip Meter Reset Buttons	15


Seats

n Adjusting seat position

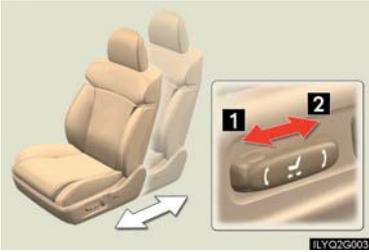


- 1 Moves the seat forward
- 2 Moves the seat backward

n Adjusting seatback angle

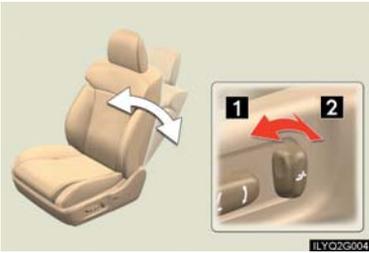


- 1 Tilts the seatback forward
- 2 Reclines the seatback

n Adjusting the seat cushion

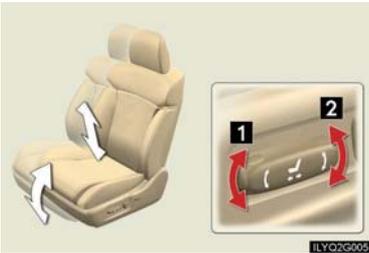

- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

n Adjusting the lumbar support

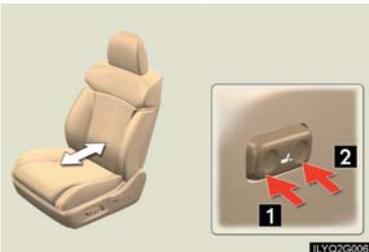

- 1 Firmer
- 2 Softer

Driving and Seat Position Memory System (If Equipped)

The seats can be returned to a previously set position by simply pressing a button.

The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat.

Positions can be conveniently stored for the vehicle's primary drivers and passengers.

Setting memory positions



While holding down the SET button, press and hold one of the memory buttons (1, 2, or 3) until you hear a beep.

The current position of the driver's or front passenger's seat, the outside rear view mirror and the steering wheel (driver's side only) are stored.

Recalling memory positions



Press one of the memory buttons (1, 2, or 3).

Linking driving position memory with door unlock operation (driver's seat only)




While holding down the desired memory button, press and hold either the  or  button on the wireless remote control until you hear a beep.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)


Head Restraints

n Driver's seat

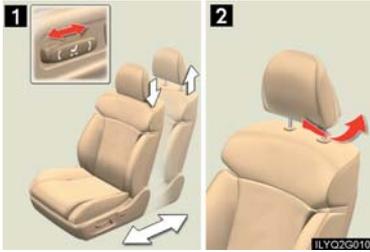

- 1 Height adjustment: head restraint height can be adjusted automatically along with the seat position adjustment. (→ P.11)
- 2 Horizontal adjustment: grip head restraint and twist to tilt forward or backward.

n Front and rear passenger's seat

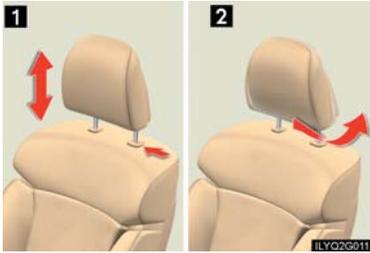

- 1 Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.
- 2 Horizontal adjustment (Except rear center seat): grip head restraint and twist to tilt forward or backward.

Seatbelts


n Adjusting shoulder belt height (front seats only)



To raise: pull the anchor upward.

To lower: depress the button and push the anchor down.


n Seatbelt comfort guides (outboard rear seats only)

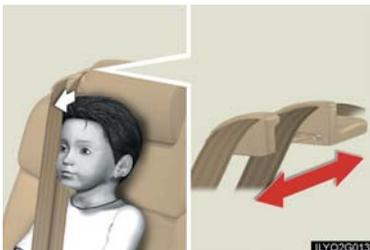

If the shoulder belt fits close to the neck, slide the comfort guide forward.

Outside Rear View Mirrors

n Adjusting the mirrors

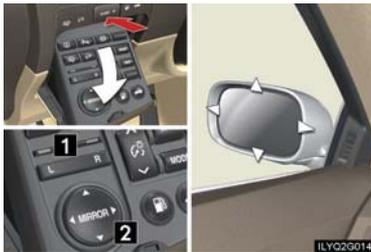

- 1 To select the mirror you wish to adjust (L or R), use the select switch.
- 2 To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing.
To disable this function, set the select switch in the neutral position (neither L nor R selected).


n Folding the mirrors



To fold the mirrors back, press the button. Press the button again to return them to the extended position.

Inside Rear View Mirror


The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.

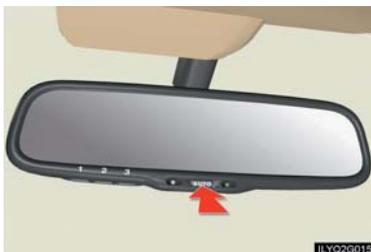

To turn AUTO mode ON/OFF, press the AUTO button.
The indicator comes on when AUTO mode is turned ON.



Steering Wheel

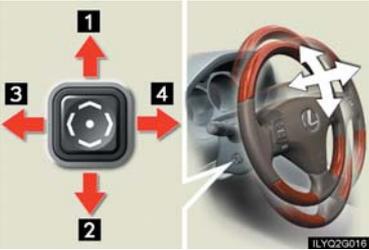

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the engine switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the engine switch is switched to ACC or IG-ON mode.

Odometer/Trip Meter and Trip Meter Reset Buttons



- 1 Changes the display.
- 2 Resets the trip meter driving range to 0.



Topic 3

When Driving


Starting	17
Transmission.....	18
Parking Brake.....	18
Multi-information Display.....	19
Turn Signal Lever	20
Emergency Flasher Switch	20
Mode Select Switch.....	20
Intuitive Parking Assist	21
Cruise Control	22
Dynamic Radar Cruise Control.....	23
AVS (Adaptive Variable Suspension).....	24
TRAC/VSC Off Mode	24



Starting

With the electronic key on your person, the engine can be started by simply pressing the engine switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

n Starting the engine

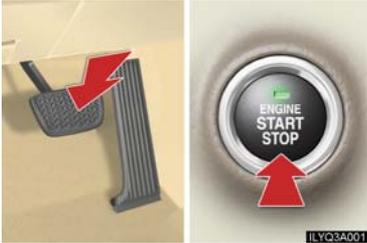

Make sure the parking brake is engaged and the shift lever is in P.


- 1 Depress the brake pedal.
The engine switch indicator light turns green.
- 2 Press the engine switch.

n Stopping the engine

- 1 Engage the parking brake and shift the shift lever to P.
- 2 Press the engine switch.


n Changing power modes

To change power modes without turning on the engine, press the engine switch without depressing the brake pedal. The modes can be changed in the following order:

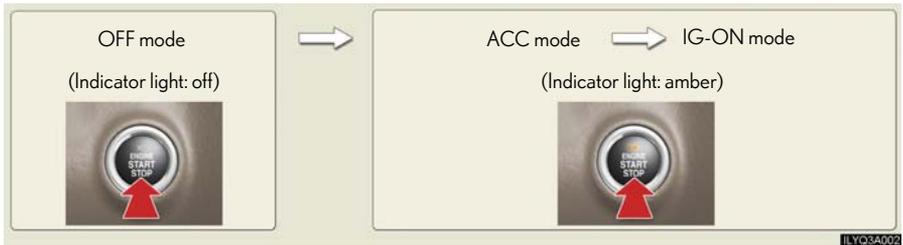

Transmission

n Shift positions

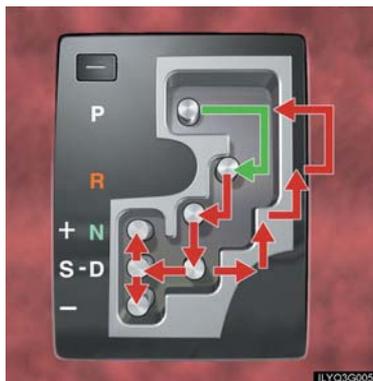


- P Park*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

*: The engine can only be started in P.

← The vehicle can only be shifted out of P when the engine switch is in IG-ON mode and the brake pedal is depressed.

n S mode

S mode allows the driver to select the shift range manually based on driving conditions.

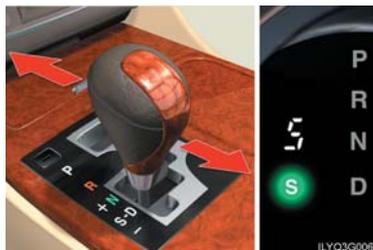

- 1 Shift the shift lever to S.
- 2 To **upshift**: shift the shift lever toward "+".
To **downshift**: shift the shift lever toward "-".

The selected shift range is displayed on the instrument cluster.

Parking Brake



To set: firmly depress the parking brake pedal.

To release: depress the parking brake pedal again.



Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

n Display information



- 1 Trip information
 - Outside temperature
 - Driving range
 - Average fuel consumption after refueling
 - Current fuel consumption
- 1 Intuitive parking assist information (if equipped)
- 1 Dynamic radar cruise control settings (if equipped)
- 1 Warning messages


n Changing the display



Trip information items can be switched by pressing the DISP switch.

- n When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- n If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Turn Signal Lever

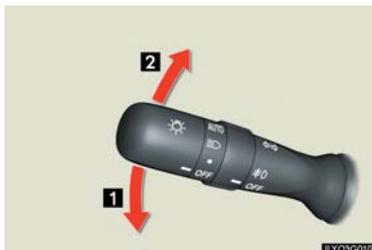

- 1 Left turn signal
- 2 Right turn signal

To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

Mode Select Switch

Use the mode select switch to select the driving mode that best suits the driving and road conditions.



- 1 **Power mode**
For more powerful acceleration and uphill driving.
- 2 **Normal mode**
- 3 **Snow mode**
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.



Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.


n Turning the system on and off



The system can be turned on and off using the intuitive parking assist switch.

n Screen display

► Multi-information display

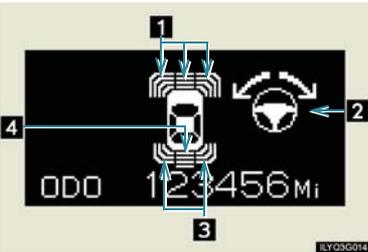

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the dual sensors
- 2 Indicates the steering maneuvers required to avoid an obstacle.
- 3 Indicates obstacles detected by the rear corner sensors
- 4 Indicates obstacles detected by the back sensors

► Touch screen



Cruise Control

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

n Setting the speed



- 1 Press the ON-OFF button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

n Adjusting the speed setting



- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

n Canceling



To temporarily cancel the cruise control, pull the lever.

To turn the system off, press the ON-OFF button.



Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.


n Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

n Vehicle-to-vehicle distance control mode

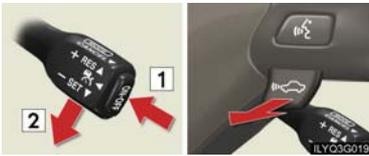

- 1 Press the ON-OFF button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Following distance can be adjusted using the vehicle-to-vehicle distance control switch.

n Conventional (constant speed) cruise control mode



- 1 Press the ON-OFF button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

n Adjusting the speed setting



- To increase speed: push the lever up.
- To decrease speed: push the lever down.

Release the lever when the desired speed is reached

n Canceling



To temporarily cancel the dynamic radar cruise control, pull the lever.

To turn the system off, press the ON-OFF button.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

AVS (Adaptive Variable Suspension) (If Equipped)

AVS controls the suspension and steering wheel operation according to the road and driving conditions.



1 Sports mode

Suitable for meandering mountainous driving or high speed driving.

2 Normal mode

Suitable for normal driving.

TRAC/VSC Off Mode

This switch turns off the traction control system or vehicle stability control system. Use this switch if the wheels get stuck in snow, mud etc.



To turn off TRAC: Push the VSC OFF switch briefly. The slip indicator light will come on.

To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip indicator light and VSC OFF indicator light will come on.

Push the button again to turn the system back on.






Topic 4

Rain and Night Driving

Headlights.....	27
Fog Lights.....	28
Windshield Wipers and Washers	28
Headlight Cleaner	29
Rear Window and Outside Rear View	
Mirror Defoggers.....	29
Instrument Panel Light Control	29

Headlights

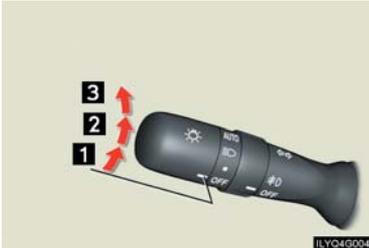

- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward. To flash the high beams, pull the lever and hold.


n AFS (Adaptive Front lighting System)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.



The system can be turned on and off using the AFS OFF switch.

Fog Lights

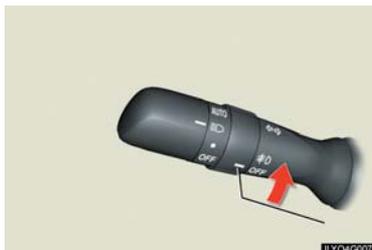

The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washers

■ Intermittent wiper with interval adjuster (if equipped)



MIST: operates once
INT: intermittent operation*
LO: low speed
HI: high speed

*: Wiper interval can be adjusted by turning the band.

To spray washer fluid, pull the lever.
 The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)



MIST: operates once
AUTO: automatic operation*
LO: low speed
HI: high speed

*: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever.
 The wipers will operate automatically

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Headlight Cleaner



The headlight cleaner can be used only when the engine switch is in IG-ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and outside mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



- 1 Brighter
- 2 Darker
- 3 Maximum brightness
- 4 Changes the cluster glass tint



Topic 5

Driving Comfort

Touch Screen.....	31
Air Conditioning System.....	32
Audio System.....	34
Hands-free System	36
Ashtrays.....	37
Seat Heaters / Seat Heaters and Ventilators	38
Console Box.....	39
Glove Box	40
Cup Holders.....	40
Interior Lights.....	41
Rear Sunshade	41
Compass.....	41
Luggage Mat.....	42
Lexus Link System	42

Touch Screen

By touching the screen with your finger, you can control the audio system, air conditioning and adjust the screen display, etc. For details, see the Owner's Manual.



When you press this button...	This display appears.
1 CLIMATE	Air conditioning operation screen
2 AUDIO	Audio control screen
3 INFO	Information screen
4 DISP	Display screen
5 Trip information	Trip information screen
6 Maintenance	Maintenance screen*
7 Telephone	Telephone screen
8 Adjust Clock	Adjust clock screen
9 Calendar	Calendar screen*
10 LEXUS Park Assist	LEXUS Park Assist setting screen
11 Language	Select language screen
12 Screen Setting	Screen setting screen

*: See Navigation System Owner's Manual.

Air Conditioning System

Press  to display the air conditioning operation screen. For details, refer to the Owner's Manual.

▶ Vehicles with navigation system



▶ Vehicles without navigation system



- 1 Air conditioning operation screen display button
- 2 Driver's side temperature control
- 3 Automatic mode
- 4 Dual operation switch
- 5 Passenger's side temperature control


n Using the automatic mode



1 Press  .

2 Adjust the temperature using  .

n Adjusting the temperature in DUAL mode

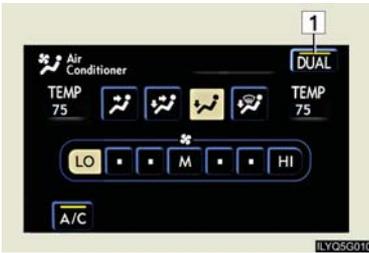

In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

1 Touch  on the operation screen.



2 Adjust the driver side temperature using  , and the passenger side temperature

using  .

Audio System

n Basic operation



- 1 Audio control screen display button*
- 2 FM radio mode button
- 3 AM•SAT radio mode button**
- 4 Power ON/OFF button, Volume adjustment knob
- 5 Disc eject button
- 6 Tape eject button
- 7 Disc slot
- 8 TAPE mode button
- 9 DISC mode button
- 10 DISC load button
- 11 Tape slot

*: Various adjustments can be made in each mode.

** : The optional Lexus genuine satellite tuner and antenna allows you to receive and play XM satellite radio broadcasts. (Subscription is required.)

For details, refer to the Owner's Manual.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

n Listening to the radio




- 1 Press **AM-SAT** or **FM** to choose an AM or FM band.
- 2 Tune to your desired station.
For tuning adjustment and further information, refer to the Owner's Manual.

n Playing the cassette player



- You have 2 methods to play your cassette player.
- 1 Insert a cassette tape into the tape slot.
 - 1 Press **TAPE** with the tape inserted.
For further information, refer to the Owner's Manual.

n Playing the CD/DVD player

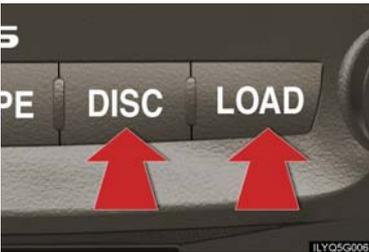

- You have 2 methods to play your CD/DVD player.
- 1 Press **LOAD** and insert a disc into the disc slot.
 - 1 Press **DISC** with the disc inserted.
For further information, refer to the Owner's Manual.

Hands-free System

To use the hands-free system, you must register your Bluetooth® phone in the system. For details, see the Owner's Manual.

n Making a call



1 Press .



2 Touch .



3 Inputting the phone number.
For another way of calling, see the Owner's Manual.



4 Touch  or press  on the steering switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus


n Hanging up the phone



Touch  or press  on the steering switch.


Ashtrays

► Front

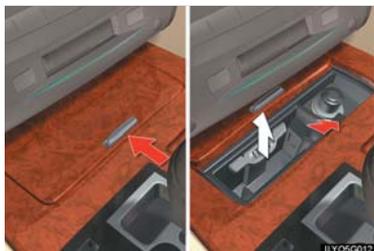

To remove the ashtray, push the release lever.

► Rear

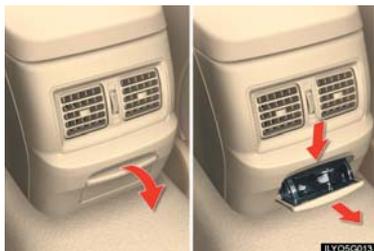

To remove the ashtray, press down on the plate and lift the ashtray out.

Seat Heaters / Seat Heaters and Ventilators (If Equipped)

► Seat heaters



Turn the dial toward **1**.

► Seat heaters and ventilators



Seat heaters: turn the dial toward **1**.

Ventilators: turn the dial toward **2**.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort


Opening and Closing

What to do if ...

Customizing
Your Lexus

Console Box

► Front console box

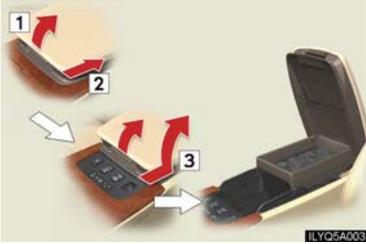

To open, slide and lift the armrest with the knob pulled up.

► Overhead console box




To open, press the lid.



There is a power outlet located in the front console box.

Glove Box

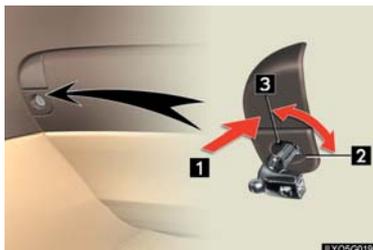


- 1 Open: press the button.
- 2 Lock
- 3 Unlock

The glove box can be locked and unlocked using the mechanical key.

Cup Holders

► Front

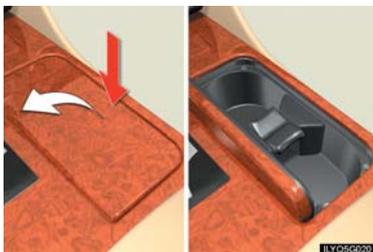

To open, press down on the front of the lid.

► Rear



To open, press in and release the rear cup holder on the rear center armrest.

Interior Lights



- 1 ON
- 2 OFF
- 3 The light comes on if a door is opened.

Rear Sunshade



To raise the rear sunshade, press the switch. Press the switch again to lower it.

The sunshade automatically lowers to ensure visibility when reversing.

Compass (If Equipped)



To display the compass, press and hold the AUTO button for 3 or more seconds.

To cancel the display, press and hold the AUTO button again for 3 or more seconds.

Luggage Mat



Pull the lever upwards when lifting the luggage mat up.



The lever can be hooked on the edge of the trunk.

Lexus Link System (If equipped)

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

n Buttons



- 1** Voice keypad button
Sends number tones to an automated phone system for example to access voicemail, during a phone call
- 2** Volume control
Adjusts your Lexus Link System audio volume
- 3** Phone button
 - Makes or answers a phone call using the hands-free personal calling service
 - Ends a call
- 4** SERVICES button
 - Contacts the Lexus Link Call Center for information, directions or other services
 - Records a conversation for later playback

5 Emergency button

Makes a priority call to the Lexus Link Call Center

n Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

1 Airbag deployment notification

If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.

1 Emergency assistance

When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.

1 Stolen vehicle location assistance

If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.

1 Remote horn/light and remote door lock/unlock

The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and select the option for Lexus Link.

1 Advisor record

You can record a conversation with the Lexus Link Advisor.

1 Personal calling

A hands-free personal calling feature can be added to the Lexus Link System as an option.

1 Other services

Press the SERVICES button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

The system is only operational in GPS (Global Positioning System) and cellular coverage areas.



Topic 6

Opening and Closing

Door Locks	45
Power Windows	46
Moon Roof	46
Fuel Tank Cap	47
Hood	47
Trunk	48

Door Locks


n Locking the vehicle from inside

► Inside lock button



- 1 Locks
- 2 Unlocks

► Door lock switch

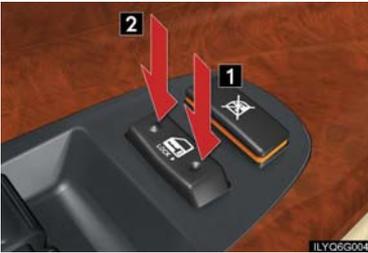

Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

► Using the entry function or wireless remote control (→ P.7, 8)

n Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof (If Equipped)

n Opening and closing



1 Open

Stops just before it is opened fully. Press the switch again to fully open.

2 Close

To stop partway, press the switch lightly.

n Tilt up and down



1 Tilt up

2 Tilt down

To stop partway, press the switch lightly.

Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

Hood



1 Pull the hood release lever.




2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Trunk

n Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

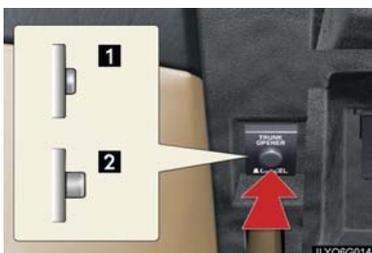

To disable the trunk opener, turn OFF the main switch in the glove box.

- 1** ON
- 2** OFF

When the trunk opener is disabled, the trunk cannot be opened using the entry function or the wireless remote control.

n Entry function and wireless remote control

→ P.7, 8

List of Warning/Indicator Lights



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



ECB*¹/VSC warning light



Electric power steering warning light



Pre-collision system warning light *²

*¹: Electronically Controlled Brake System

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



Tire pressure warning light



Master warning light

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Fog light indicator



ECT SNOW indicator



Shift position and shift range indicators



ECT PWR indicator



Cruise control indicator



Damping mode indicator*²



AFS OFF indicator



Intuitive parking assist indicator*²



Slip indicator



VSC off indicator

*²: If equipped

For further information, refer to the Owner's Manual.

Spare Tire and Tool Compartment (If Equipped)

n Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire


n Taking out the spare tire



- 1 Lift up the panel on the trunk floor, and remove the tool tray.
- 2 Loosen the center fastener and remove the spare tire.

If the electronic key battery becomes discharged

n Unlocking and locking the doors

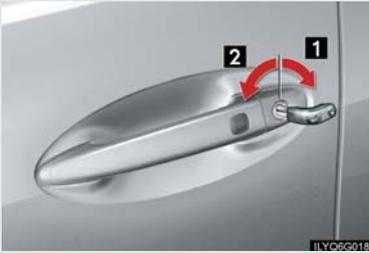

To unlock or lock the vehicle, use the mechanical key. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

n Starting the engine




- 1 Depress the brake pedal.
- 2 Hold the electronic key close to the engine switch (within 0.4 in. [10 mm]), making sure that the button side of the key is facing toward you.
- 3 Press the engine switch within 5 seconds after the buzzer sounds, keeping the brake pedal depressed.

For instructions on replacing the electronic key battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if ...

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

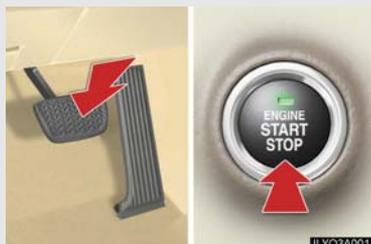

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→ P.17)



Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the engine switch. (→ P.9)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Tried to exit the vehicle with the electronic key and lock the doors without first turning the engine switch OFF	Turn the engine switch OFF and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm rings continuously	Switched to ACC mode while the driver's door is open (Opened the driver's door when the engine switch is in ACC mode.)	Turn the engine switch OFF and close the driver's door.
	Turned the engine switch OFF while the driver's door is still open	Close the driver's door.

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step.
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
	Operation indicator (Emergency flashers)	ON	OFF
	Operation indicator (Buzzer)	ON	OFF
	Trunk unlocking function	ON	OFF
	Trunk unlocking operation	Push and hold	Push twice
One short push			
Panic function	ON	OFF	

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step.
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shift the shift lever to P unlocks all doors.	ON	OFF
	Shift the shift lever to position other than P locks all doors.	ON	OFF
Power windows	Linked door lock operation	ON	OFF
	Linked door key operation	Open and close	Open only Close only
	Wireless remote control linked operation	ON	OFF
Moon roof	Linked door lock operation	ON	OFF
	Linked door key operation	Open and close	Open only Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	ON	OFF
	Linked operation of components when wireless remote control used	Slide only	Tilt only
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds 60 seconds 90 seconds
	Day time running light	ON	OFF*

*: Vehicles sold outside Canada

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Windshield wipers and washer	Switching operation when the vehicle is stationary	ON	OFF
	Drip prevention function	ON	OFF
	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the engine switch turned OFF	ON	OFF
	Foot lights	ON	OFF
	Shift lever light	ON	OFF
	Outer foot light	ON	OFF
Rear sunshade	Time elapsed before the reverse operation feature activates	0.7 seconds	0 seconds
			0.9 seconds
			1.2 seconds



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

n U.S. OWNERS

l In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

l In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

n CANADIAN OWNERS

l In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

l The U.S. mainland: www.lexus.com

l Hawaii: www.servcolexus.com

l Canada: www.lexus.ca

©2006 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.