

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

## Overview

### Topic 1

#### Entering and Exiting

- Keys ▶ P.9
- Smart Access System with Push-button Start ▶ P.10
- Theft Deterrent System ▶ P.11



- Inside Rear View Mirror ▶ P.18
- Steering Wheel ▶ P.18
- Odometer/Trip Meter and Trip Meter Reset Buttons ▶ P.18

### Topic 2

#### Before Driving

- Seats ▶ P.13
- Driving Position Memory System ▶ P.14
- Head Restraints ▶ P.15
- Seat Belts ▶ P.16
- Outside Rear View Mirrors ▶ P.17

### Topic 3

#### When Driving

- Starting ▶ P.21
- Transmission ▶ P.22
- Parking Brake ▶ P.22
- Multi-information Display ▶ P.23
- Turn Signal Lever ▶ P.24
- Emergency Flasher Switch ▶ P.24
- Mode Select Switch ▶ P.24
- Intuitive Parking Assist ▶ P.25
- Cruise Control ▶ P.26



- Dynamic Radar Cruise Control ▶ P.27
- AVS (Adaptive Variable Suspension System) ▶ P.28
- TRAC/VSC Off Mode ▶ P.29



#### Topic 4

### Rain and Night Driving

- Headlights ▶ P.31
- Fog Lights ▶ P.32
- Windshield Wipers and Washers ▶ P.33
- Headlight Cleaner ▶ P.35
- Rear Window and Outside Rear View Mirror Defoggers ▶ P.35
- Instrument Panel Light Control ▶ P.35

#### Topic 5

### Driving Comfort

- Touch Screen ▶ P.37
- Air Conditioning System ▶ P.38
- Audio System ▶ P.40
- Hands-free System ▶ P.42
- Ashtrays ▶ P.43
- Seat Heaters/Ventilators ▶ P.44
- Console Box ▶ P.45
- Glove Box ▶ P.46
- Cup Holders ▶ P.46
- Interior Lights ▶ P.47



- Rear Sunshade ▶ P.47
- Compass ▶ P.47
- Luggage Mat ▶ P.48
- Garage Door Opener ▶ P.48
- Lexus Link System ▶ P.50

#### Topic 6

### Opening and Closing

- Door Locks ▶ P.53
- Power Windows ▶ P.54
- Moon Roof ▶ P.54
- Fuel Tank Cap ▶ P.55
- Hood ▶ P.55
- Trunk ▶ P.56



**What to do if ...** ● Responding to warning/indicator lights and other problems that may arise.

**Customizing Your Lexus** ● A list of features that can be customized.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...


Customizing Your Lexus

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

## Overview

## Instrument Panel

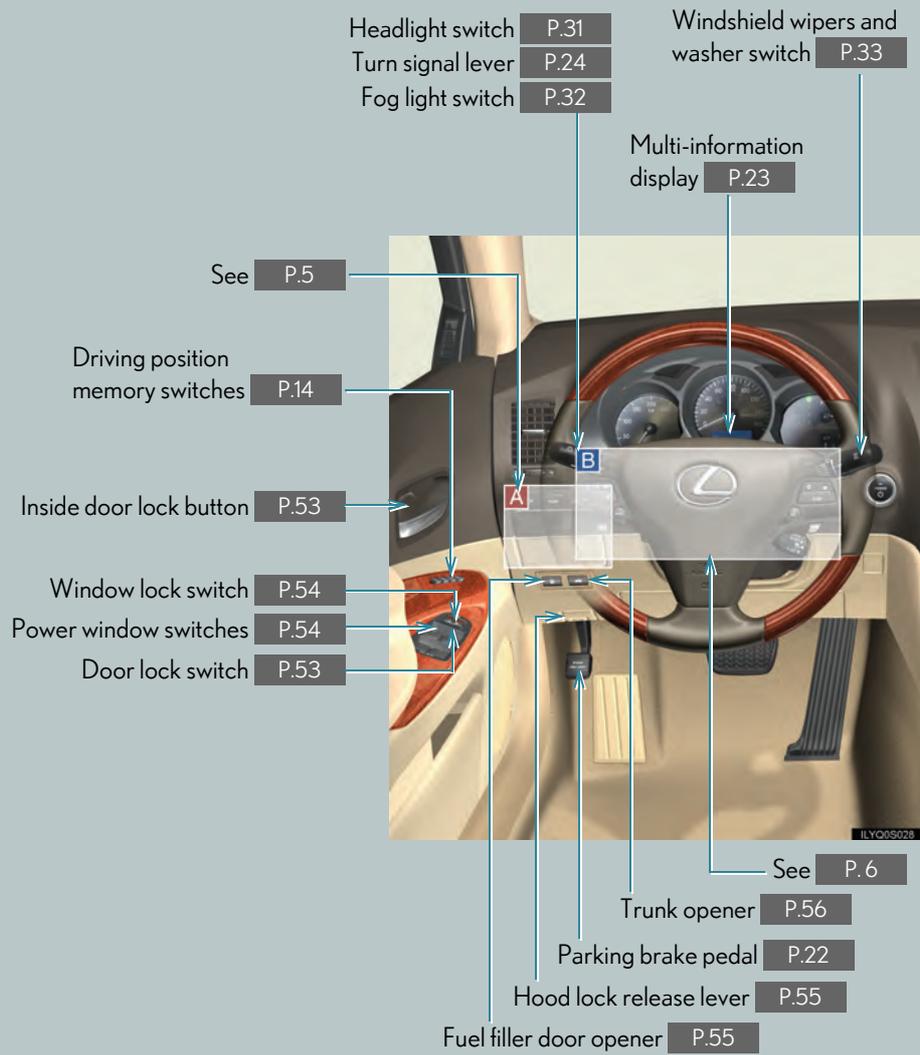

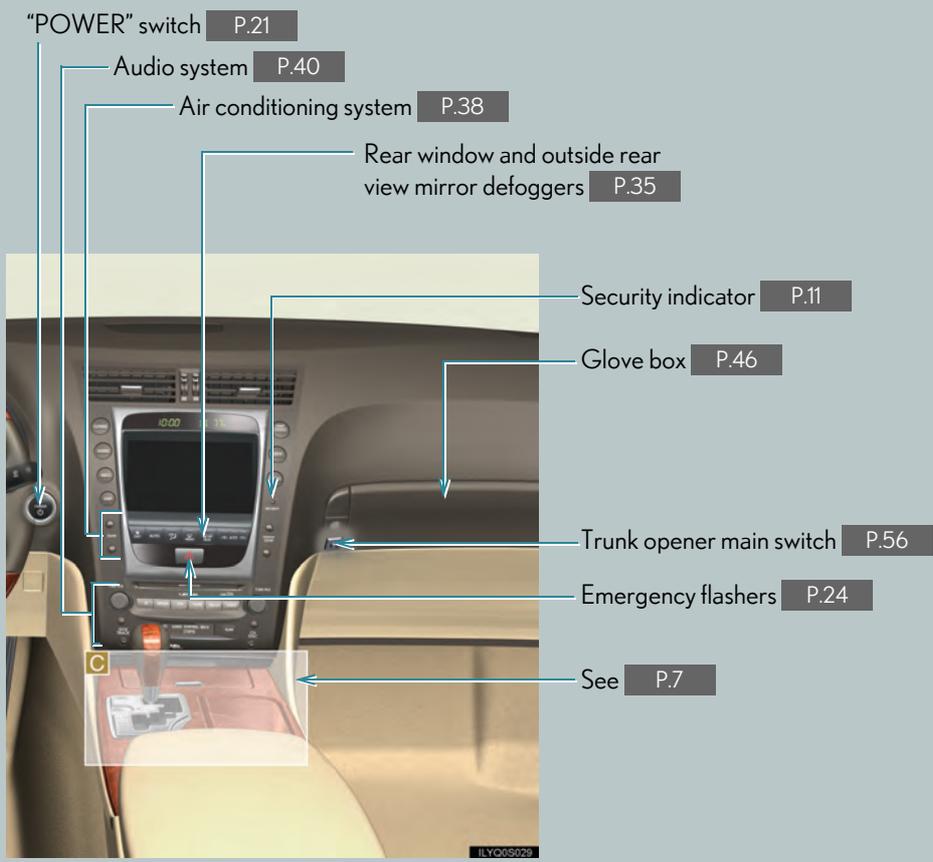

\* : If equipped

## Overview

## Instrument Panel

A

Headlight cleaner switch\* P.35

Rear sunshade switch P.47

Intuitive parking assist switch\* P.25

"AFS OFF" switch P.31




Instrument panel light control P.35

Odometer/trip meter and trip meter reset buttons P.18

Outside rear view mirror switches P.17

B

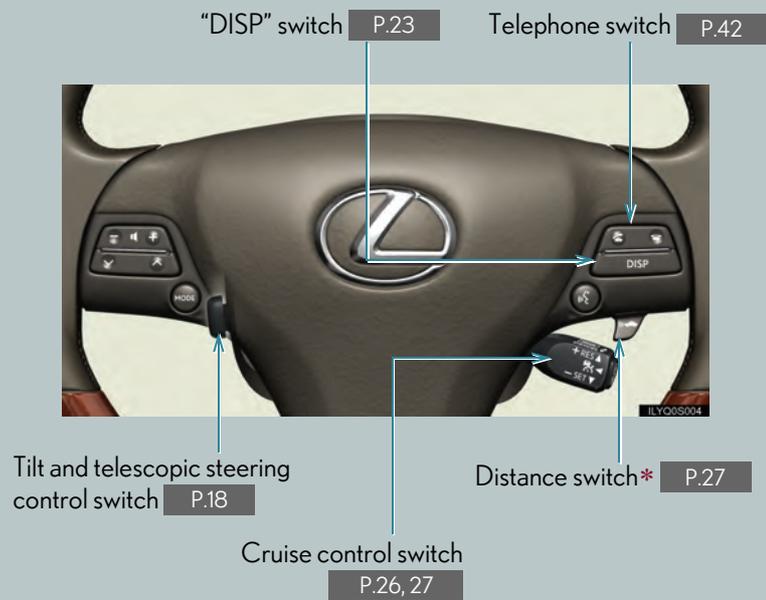

\* : If equipped

## Overview

## Instrument Panel

C

Seat heater/ventilator switches\* P.44

Cup holders P.46

Shift lever P.22

Ashtray P.43



AVS switch P.28

Mode select switch P.24

VSC OFF switch P.29

\* : If equipped



Topic 1

# Entering and Exiting

Keys .....	9
Smart Access System with Push-button Start .....	10
Theft Deterrent System.....	11



## Keys

### ■ Electronic key



Smart access system with push-button start  
(→P:10, 21)

\*: If equipped

### ■ Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

### ■ Wireless remote control



- 1 Locks the doors
- 2 Unlocks the doors
- 3 Opens the trunk
- 4 Sounds the alarm  
(To stop the alarm, push any button on the wireless remote control.)

The wireless remote control can also be used to open the windows and moon roof.  
To do so, simply press and hold  button.

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag. For details on starting the hybrid system, see page 21.

### ■ Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

### ■ Exiting the vehicle



To lock the vehicle, press the button on the door handle.

### ■ Opening the trunk



To open the trunk, press the button.

For details on what to do when the electronic key does not operate properly, see page 60.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### ■ Immobilizer system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### ■ Alarm

The system sounds the alarm and flashes light when an attempt to steal the vehicle is detected.

**To set the alarm:** close the doors, trunk and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** turn the "POWER" switch to the ACCESSORY or ON mode, or unlock the doors or trunk.

### ■ Steering lock



The steering lock is engaged when the driver's door is opened with the "POWER" switch OFF.



## Topic 2

# Before Driving

Seats .....	13
Driving Position Memory System.....	14
Head Restraints .....	15
Seat Belts.....	16
Outside Rear View Mirrors .....	17
Inside Rear View Mirror.....	18
Steering Wheel.....	18
Odometer/Trip Meter and Trip Meter Reset Buttons .....	18




## Seats

### ■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle

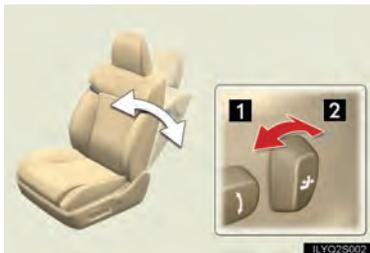

- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer



## Driving Position Memory System

The seats can be returned to a previously set position by simply pressing a button. The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat. Positions can be conveniently stored for the vehicle's primary drivers and passengers.

### Setting memory positions



While holding the "SET" button, press and hold one of the memory buttons ("1", "2", or "3") until you hear a beep.

The current position of the driver's or front passenger's seat, and the outside rear view mirror and steering wheel (driver's side switch only) are stored.

### Recalling memory positions



Press one of the memory buttons ("1", "2", or "3").

### Linking driving position memory with door unlock operation (driver's side only)



While holding the desired memory button, press and hold  button on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus



## Head Restraints


### ■ Driver's seat

#### ▶ Vertical adjustment

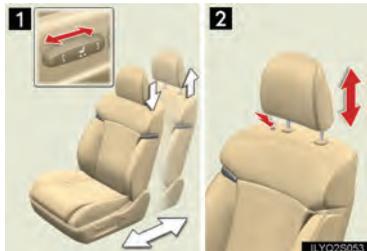


- 1 Automatically: head restraint height can be adjusted automatically along with the seat position adjustment. (→P.13)
- 2 Manually: push and hold the lock release button when lowering or raising the head restraint.

#### ▶ Horizontal adjustment

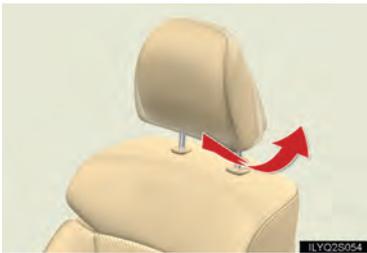


Grip the head restraint and twist to tilt forward or backward.

### ■ Front passenger's seat

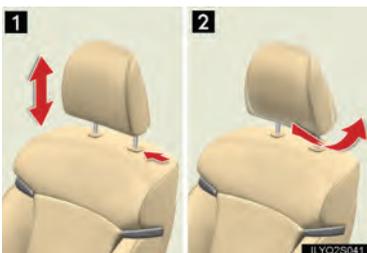

- 1 Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.
- 2 Horizontal adjustment: grip the head restraint and twist to tilt forward or backward.

### ■ Outside rear seats

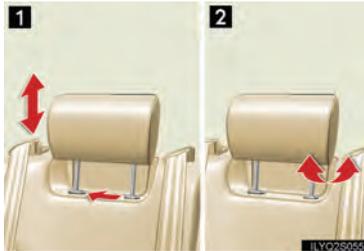

- 1** Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.
- 2** Horizontal adjustment: grip the head restraint and twist to tilt forward or backward.

### ■ Center rear seat



Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.

## Seat Belts

### ■ Adjusting shoulder belt height (front seats only)



**To raise:** pull the anchor upward.  
**To lower:** depress the button and push the anchor down.

### ■ Seat belt comfort guides (outboard rear seats only)



If the shoulder belt fits close to the neck, slide the comfort guide forward.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus



## Outside Rear View Mirrors

### ■ Adjusting the mirrors



**1** To select the mirror you wish to adjust (L or R), use the select switch.

**2** To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the select switch in the neutral position (neither L nor R selected).

### ■ Folding and extending the mirrors



To fold the mirrors, press the button. Press the button again to return them to the extended position.


### Inside Rear View Mirror

The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn auto mode on/off, press the auto button. The indicator comes on when auto mode is turned on.

### Steering Wheel

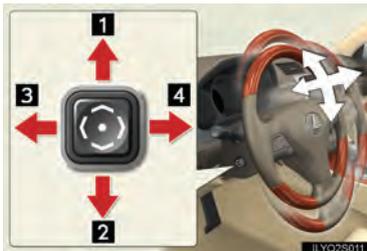

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "POWER" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "POWER" switch is switched to ACCESSORY or ON mode.

### Odometer/Trip Meter and Trip Meter Reset Buttons



- 1 Changes the display.
- 2 Resets the trip meter driving range to "0".

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 2  
**Before Driving**





### Topic 3

## When Driving

Starting .....	21
Transmission.....	22
Parking Brake.....	22
Multi-information Display.....	23
Turn Signal Lever .....	24
Emergency Flasher Switch.....	24
Mode Select Switch.....	24
Intuitive Parking Assist .....	25
Cruise Control .....	26
Dynamic Radar Cruise Control.....	27
AVS (Adaptive Variable Suspension System).....	28
TRAC/VSC Off Mode .....	29



## Starting

With the electronic key on your person, the hybrid system can be started by simply pressing the "POWER" switch, while depressing the brake pedal.  
(The mechanical key cannot be used to start the hybrid system.)

### Starting the hybrid system



Make sure the parking brake is engaged and the shift lever is in "P".

- 1 Depress the brake pedal.  
The "POWER" switch indicator light turns green.
- 2 Press the "POWER" switch.  
The "READY" light comes on, showing that's the vehicle is ready to drive.

### Stopping the hybrid system

- 1 Engage the parking brake and shift the shift lever to "P".
- 2 Press the "POWER" switch.

### Changing "POWER" switch modes

To change "POWER" switch modes without turning on the hybrid system, press the "POWER" switch without depressing the brake pedal. The modes can be changed in the following order:



## Transmission

### ■ Shift positions



- P Park\*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

\*: The hybrid system can only be started in "P".

← The vehicle can only be shifted out of "P" when the "POWER" switch is in ON mode and the brake pedal is depressed.

### ■ "S" mode

"S" mode allows the driver to select the shift range manually based on driving conditions.



- 1 Shift the shift lever to "S".
- 2 To **upshift**: shift the shift lever toward "+".  
To **downshift**: shift the shift lever toward "-".

The selected shift range is displayed on the instrument cluster.

## Parking Brake



**To set:** firmly depress the parking brake pedal.

**To release:** depress the parking brake pedal again.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus



## Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

### ■ Display information



- Energy monitor
- Trip information
  - Driving range
  - Average fuel consumption after refueling
  - Current fuel consumption
  - Average vehicle speed
- Intuitive parking assist information (if equipped)
- Dynamic radar cruise control settings (if equipped)
- Warning messages


### ■ Changing the display



Trip information items can be switched by pressing the "DISP" switch.

- When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Turn Signal Lever

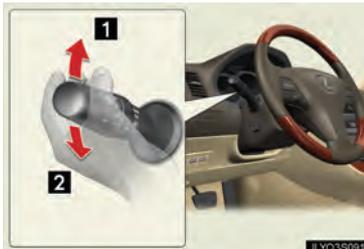

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and hold.

## Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

## Mode Select Switch

Use the mode select switch to select the driving mode that best suits the driving and road conditions.



- 1 **Power mode**  
For more powerful acceleration and uphill driving.
- 2 **Normal mode**
- 3 **Snow mode**  
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Intuitive Parking Assist\*

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.


### Turning the system on and off



The system can be turned on and off using the intuitive parking assist switch.

### Screen display

#### Multi-information display

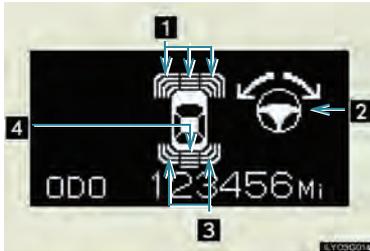

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the dual sensors
- 2 Indicates the steering maneuvers required to avoid an obstacle
- 3 Indicates obstacles detected by the rear corner sensors
- 4 Indicates obstacles detected by the back sensors

#### Touch screen



\*: If equipped



## Cruise Control\*

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Cruise control switch

### Setting the speed



- 1 Press the "ON-OFF" button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### Adjusting the speed setting



To increase speed: push the lever up.  
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

### Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

\*: If equipped



## Dynamic Radar Cruise Control\*

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator
- 2 Display
- 3 Cruise control switch
- 4 Vehicle-to-vehicle distance control switch

### Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

### Vehicle-to-vehicle distance control mode




- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Following distance can be adjusted using the vehicle-to-vehicle distance control switch.

### Conventional (constant speed) cruise control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

\*: If equipped

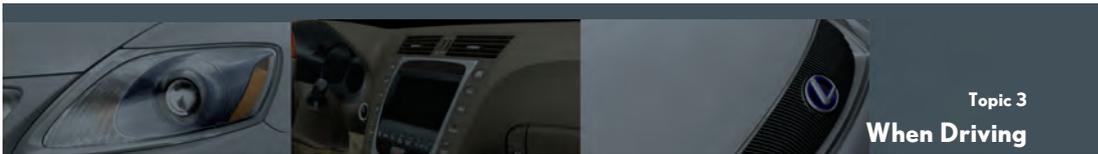

### ■ Adjusting the speed setting



**To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

### ■ Canceling



- 1** To temporarily cancel the dynamic radar cruise control, pull the lever. To resume the cruise control, push the lever up.
- 2** To turn the system off, press the “ON-OFF” button.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## ■ AVS (Adaptive Variable Suspension System)

AVS controls the suspension and steering wheel operation according to the road and driving conditions.



- 1 Sports mode**  
Suitable for meandering mountainous driving or high speed driving.
- 2 Normal mode**  
Suitable for normal driving.

- Entering and Exiting
- Before Driving
- When Driving
- Rain and Night Driving
- Driving Comfort
- Opening and Closing
- What to do if ...
- Customizing Your Lexus



## TRAC/VSC Off Mode

This switch turns off the traction control system or vehicle stability control system. Use this switch if the wheels get stuck in snow, mud etc.



To turn off TRAC: Push the VSC OFF switch briefly. The message "TRAC OFF" appears on the multi-information display.

To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip off indicator light should come on and the message "TRAC OFF" appears on the multi-information display.

Push the button again to turn the system back on.




#### Topic 4

## Rain and Night Driving

Headlights.....	31
Fog Lights.....	32
Windshield Wipers and Washers .....	33
Headlight Cleaner .....	35
Rear Window and Outside Rear View	
Mirror Defoggers.....	35
Instrument Panel Light Control .....	35



## Headlights

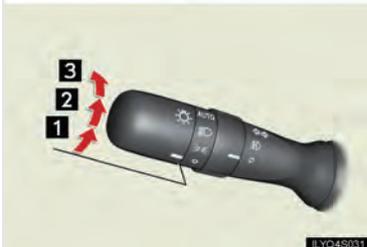

- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

### ■ AFS (Adaptive Front lighting System)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.



The system can be turned on and off using the "AFS OFF" switch.

## Fog Lights



The fog lights can be used only when the headlights (low beam) are on.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus




## Windshield Wipers and Washers

### ■ Intermittent wiper with interval adjuster (if equipped)



- 1 ○ Off
- 2  Intermittent operation
- 3 ▼ Low speed
- 4 ▽ High speed
- 5 △ Single wipe

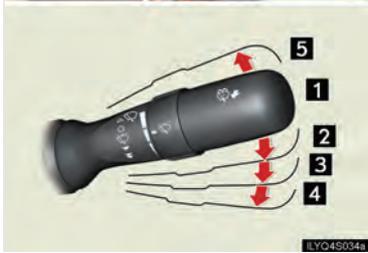

Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

**■ Rain-sensing windshield wipers (if equipped)**



- 1 ○ Off
- 2 AUTO Automatic operation
- 3 ▼ Low speed
- 4 ▽ High speed
- 5 △ Single wipe



Automatic operation: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever. The wipers will operate automatically.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 4  
Rain and Night Driving

### Headlight Cleaner\*



The headlight cleaner can be used only when the "POWER" switch is in ON mode and the headlights are on.

### Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and outside mirrors, press the button.

Press again to cancel.


The system turns off automatically after 15 minutes.

### Instrument Panel Light Control



- 1 Brighter
- 2 Darker
- 3 Maximum brightness
- 4 Changes the cluster glass tint

\*: If equipped

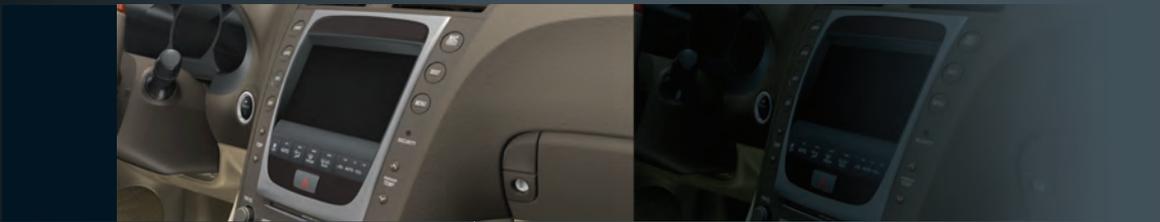

**Topic 5**


# Driving Comfort

Touch Screen.....	37
Air Conditioning System.....	38
Audio System.....	40
Hands-free System (For Cellular Phone) .....	42
Ashtrays.....	43
Seat Heaters/Ventilators .....	44
Console Box.....	45
Glove Box .....	46
Cup Holders.....	46
Interior Lights.....	47
Rear Sunshade .....	47
Compass.....	47
Luggage Mat.....	48
Garage Door Opener .....	48
Lexus Link System .....	50



## Touch Screen

By touching the screen with your finger, you can control the audio system, air conditioning and adjust the screen display, etc. For details, see the Owner's Manual.

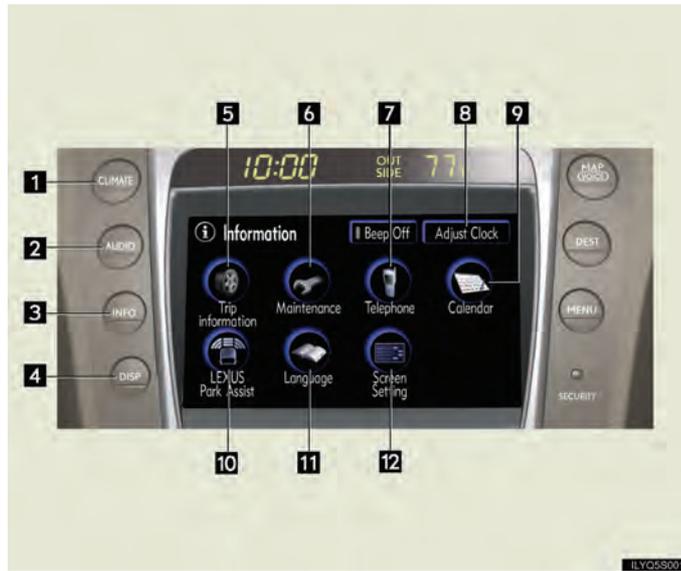

When you press this button...	This display appears.
1 "CLIMATE"	Air conditioning operation screen
2 "AUDIO"	Audio control screen
3 "INFO"	Information screen
4 "DISP"	Display screen
5 Trip information	Trip information screen
6 Maintenance	Maintenance screen*
7 Telephone	Telephone screen
8 Adjust Clock	Adjust clock screen
9 Calendar	Calendar screen*
10 "LEXUS Park Assist"	LEXUS Park Assist setting screen
11 Language	Select language screen
12 Screen Setting	Screen setting screen

\*: See Navigation System Owner's Manual.

## Air Conditioning System

Press  to display the air conditioning operation screen. For details, refer to the Owner's Manual.

### ► Vehicles with navigation system



### ► Vehicles without navigation system



- 1 Air conditioning operation screen display button
- 2 Driver's side temperature control
- 3 Automatic mode
- 4 Dual operation switch
- 5 Passenger's side temperature control

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



### ■ Using the automatic mode




1 Press **AUTO**.

2 Adjust the temperature using



### ■ Adjusting the temperature in DUAL mode

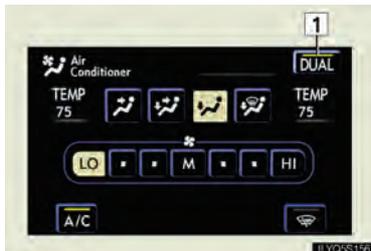

In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

1 Touch **DUAL** on the operation screen.



2 Adjust the driver side temperature using



using



## Audio System

### Basic operation




- 1** Audio control screen display button\*
- 2** FM radio mode button
- 3** AM•SAT radio mode button
- 4** Power ON/OFF button, Volume adjustment knob
- 5** Disc eject button
- 6** Tape eject button
- 7** Disc slot
- 8** TAPE mode button
- 9** DISC•AUX mode button
- 10** Disc load button
- 11** Tape slot

\*: Various adjustments can be made in each mode.  
For details, refer to the Owner's Manual.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus



### ■ Listening to the radio

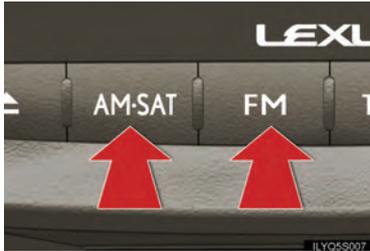

- 1 Press **AM-SAT** or **FM** to choose an AM or FM band.
- 2 Tune to your desired station.  
For tuning adjustment and further information, refer to the Owner's Manual.

### ■ Playing the cassette player



- You have 2 methods to play your cassette player.
- Insert a cassette tape into the tape slot.
  - Press **TAPE** with the tape inserted.
- For further information, refer to the Owner's Manual.

### ■ Playing the CD/DVD player



- You have 2 methods to play your CD/DVD player.
- Press **LOAD** and insert a disc into the disc slot.
  - Press **DISC-AUX** with the disc inserted.
- For further information, refer to the Owner's Manual.

## Hands-free System (For Cellular Phone)

To use the hands-free system, you must register your Bluetooth® phone in the system. For details, see the Owner's Manual.

### ■ Making a call



1 Press .



2 Touch .



3 Inputting the phone number.  
For another way of calling, see the Owner's Manual.



4 Touch  or press  on the steering switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 5  
Driving Comfort



### ■ Hanging up the phone



Touch  or press  on the steering switch.


### Ashtrays

#### ► Front



To remove the ashtray, push the release lever.

#### ► Rear

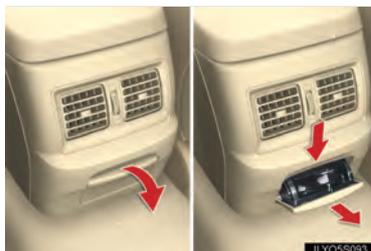

To remove the ashtray, press down on the plate and lift the ashtray out.

## Seat Heaters/Ventilators\*

### ► Seat heaters



Turn the dial toward **1**.

### ► Seat heaters and ventilators



Seat heaters: turn the dial toward **1**.

Ventilators: turn the dial toward **2**.

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus

\*: If equipped



## Console Box

### ► Console box



To open, slide and lift the armrest with the knob pulled up.

### ► Overhead console (if equipped)




To open, press the lid.



There are the power outlet and the AUX adapter located in the console box.

## Glove Box

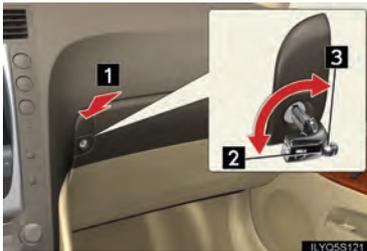


- 1 Open: press the button.
- 2 Unlock
- 3 Lock

The glove box can be locked and unlocked using the mechanical key.

## Cup Holders

### ► Front

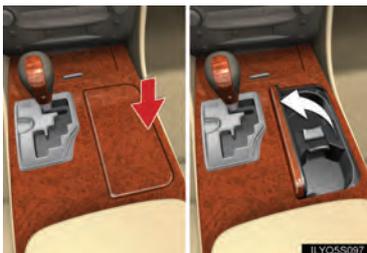

To open, press the lid.

### ► Rear



To open, press in and release the rear cup holder on the rear center armrest.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Interior Lights



- 1 ON
- 2 OFF
- 3 The light comes on if a door is opened.

## Rear Sunshade



To raise the rear sunshade, press the switch.  
Press the switch again to lower it.

The sunshade automatically lowers to ensure visibility when reversing.

## Compass\*



To display the compass, press and hold the "AUTO" for 3 or more seconds.

To cancel the display, press and hold the "AUTO" again for 3 or more seconds.

\*: If equipped

## Luggage Mat



Pull the lever upwards when lifting the luggage mat up.




The lever can be hooked on the edge of the trunk.

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.

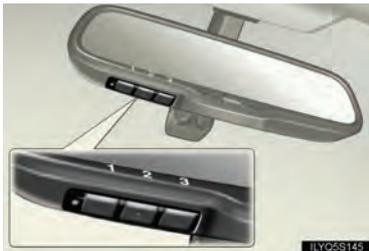

The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## ■ Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the learn button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the door does not open, press and release the same button once again.

## ■ Programming other devices

For U.S.A. owners:

- To program an entry gate, see the Owner's Manual.
- To program other devices, contact your Lexus dealer.

For Canadian owners:

- To program all devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink®



Press the appropriate HomeLink® button. The indicator light should come on.

## Lexus Link System\*

The Lexus Link System is a communication service that uses GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

## ■ Buttons



- 1** Voice keypad button  
Sends number tones to an automated phone system for example to access voicemail, during a phone call
- 2** Volume control  
Adjusts your Lexus Link System audio volume
- 3** Phone button
  - Makes or answers a phone call using the hands-free personal calling service
  - Ends a call
- 4** "SERVICES" button
  - Contacts the Lexus Link Call Center for information, directions or other services
  - Records a conversation for later playback
- 5** Emergency button  
Makes a priority call to the Lexus Link Call Center

\*: If equipped

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
<b>Driving Comfort</b>
Opening and Closing
What to do if ...
Customizing Your Lexus



## ■ Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification  
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance  
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.
- Stolen vehicle location assistance  
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- Remote horn/lights and remote door lock/unlock  
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- Advisor record  
You can record a conversation with the Lexus Link Advisor.
- Personal calling  
A hands-free personal calling feature can be added to the Lexus Link System as an option.
- Other services  
Press the "SERVICES" button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

The system is only operational in GPS (Global Positioning System) and cellular coverage areas.



Topic 6

## Opening and Closing

Door Locks .....	53
Power Windows .....	54
Moon Roof .....	54
Fuel Tank Cap .....	55
Hood .....	55
Trunk .....	56



## Door Locks

### ■ Locking the vehicle from inside

#### ▶ Inside lock button



- 1 Locks
- 2 Unlocks

#### ▶ Door lock switch



Operates all door locks.

- 1 Locks
- 2 Unlocks

### ■ Locking the vehicle from outside

#### ▶ Using the entry function or wireless remote control (→P:9, 10)

### ■ Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

## Power Windows



### 1 Power window switches

**To open:** press the switch.

**To close:** pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

## Moon Roof\*

### Opening and closing

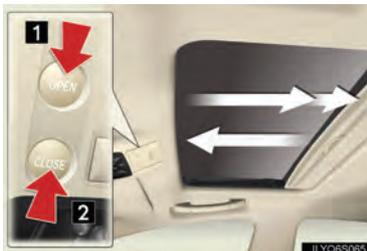

### 1 Open

Stops just before it is opened fully. Press the switch again to fully open.

### 2 Close

To stop partway, press the switch lightly.

### Tilt up and down



### 1 Tilt up

### 2 Tilt down

To stop partway, press the switch lightly.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

\*: If equipped

Topic 6  
Opening and Closing



## Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

## Hood



1 Pull the hood lock release lever.




2 Insert your fingers under the hood, pull the hood catch and lift the hood.

## Trunk

### ■ Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

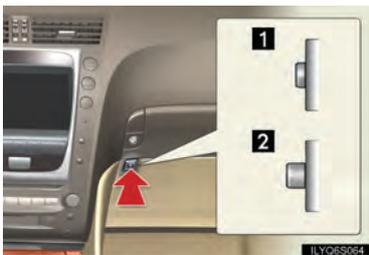

To disable the trunk opener, turn OFF the main switch in the glove box.

- 1** ON
- 2** OFF

When the trunk opener is disabled, the trunk cannot be opened using the entry function or the wireless remote control.

### ■ Entry function and wireless remote control

→P.9, 10

Entering and Exiting
Before Driving
When Driving
Rain and Night Driving
Driving Comfort
Opening and Closing
What to do if ...
Customizing Your Lexus

What to do if ...

## List of Warning/Indicator Lights



**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**

	(U.S.A.)	Brake system warning light
	(Canada)	

**Stop the vehicle immediately.**

	Charging system warning light
---	-------------------------------

**Have the vehicle inspected immediately.**

	(U.S.A.)	Malfunction indicator lamp		SRS warning light
	(Canada)			ECB*1 warning light
	(U.S.A.)	ABS warning light		Electric power steering warning light
	(Canada)			Pre-collision system warning light*2

For further information, refer to the Owner's Manual.

**Have the malfunction repaired immediately.**



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



Tire pressure warning light



Master warning light

**See the Owner's Manual**



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Fog light indicator



"Hybrid SNOW" indicator



"Hybrid PWR" indicator



Shift position and shift range indicators



Cruise control indicator



Damping mode indicator



"AFS OFF" indicator



Intuitive parking assist indicator<sup>\*2</sup>



Slip indicator



Slip off indicator



"AIR BAG ON" and "AIR BAG OFF" indicators



Driving ready indicator

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: Electronically Controlled Brake System

<sup>\*2</sup>: If equipped

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## What to do if ...

### Spare Tire and Tool Compartment (If Equipped)

#### Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire


#### Taking out the spare tire



- 1 Lift up the panel on the trunk floor, and remove the tool tray.
- 2 Loosen the center fastener and remove the spare tire.

## If the electronic key does not operate properly

### Unlocking and locking the doors

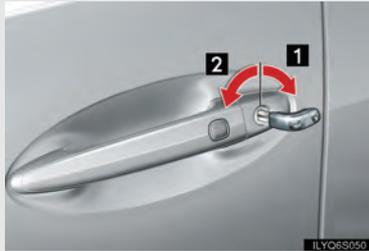

To unlock or lock the vehicle, use the mechanical key. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

### Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds after the buzzer sounds, keeping the brake pedal depressed.

\*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus

## What to do if ...

### If the hybrid system does not start

Make sure that the correct operating procedures have been followed.

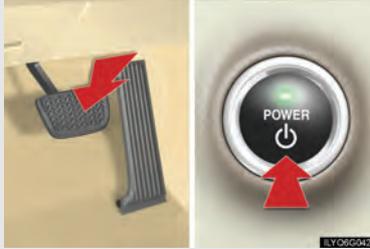

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.21)



#### Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the "POWER" switch. (→P.11)

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "POWER" switch OFF	Turn the "POWER" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to "P"	Shift the shift lever to "P".
Interior alarm rings continuously	Switched to ACCESSORY mode while the driver's door is open (Opened the driver's door when the "POWER" switch is in ACCESSORY mode.)	Turn the "POWER" switch OFF and close the driver's door.
	Turned the "POWER" switch OFF while the driver's door is open	Close the driver's door.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
Wireless remote control	Unlocking operation	Driver's door unlocked in 1-step, all doors unlocked in 2-steps	All doors unlocked in 1-step
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
	Trunk unlocking function	ON	OFF
	Trunk unlocking operation	Push and hold	Push twice One short push
	Panic function	ON	OFF
Buzzer sounds when pushing  with any door not closed	ON	OFF	

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in 1-step, all doors unlocked in 2-steps	All doors unlocked in 1-step
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shifting the shift lever to "P" unlocks all doors.	ON	OFF
	Shifting the shift lever to position other than "P" locks all doors	ON	OFF
Power windows	Linked door key operation	Open and close	Open only Close only
	Wireless remote control linked operation	ON	OFF
	Wireless remote control linked operation	Open and close	Open only Close only

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Moon roof	Linked door key operation	Open and close	Open only Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	ON	OFF
	Wireless remote control linked operation	Open and close	Open only Close only
	Linked operation of components when wireless remote control used	Slide only	Tilt only
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds 60 seconds 90 seconds
	Day time running light	ON	OFF*
Windshield wipers and washer	Switching operation when the vehicle is stationary	ON	OFF
	Drip prevention function	ON	OFF
	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds

\*: Vehicles sold outside Canada

Item	Function	Default setting	Customized setting
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds
			30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the "POWER" switch turned OFF	ON	OFF
	Front/rear personal lights turned on when a door is opened	Corresponding light only	All lights
			OFF
	Foot lights	ON	OFF
	Shift lever light	ON	OFF
Outer foot light	ON	OFF	
Front/rear personal lights turned on when the interior lights are switched "ON"	ON	OFF	
Rear sunshade	Time elapsed before the reverse operation feature activates	0.7 seconds	0 seconds
			0.9 seconds
			1.2 seconds

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...





**Memo**

Lined area for writing a memo.





#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2008 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.