

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.


Air Conditioning System	
Basic operation	33
Using the automatic mode	34
Adjusting the temperature in DUAL mode	34
Ashtrays	37
Audio System	
Basic operation	35
Listening to the radio	36
Playing the CD/DVD player	36
AVS (Adaptive Variable Suspension System).....	24
Compass.....	41
Console Box.....	39
Cruise Control	22
Cup Holders	40
Door Locks	49
Driving Position Memory System.....	12
Dynamic Radar Cruise Control.....	23
Emergency Flasher Switch.....	20
Fog Lights	27
Fuel Tank Cap	51
Garage Door Opener	43
Glove Box	40
Hands-free System (For Cellular Phone)	37
Headlight Cleaner	30
Headlights	26
Head Restraints.....	13
Hood.....	51
Inside Rear View Mirror	15


Instrument Panel Light Control.....	30
Interior Lights.....	41
Intuitive Parking Assist	21
Keys.....	8
Lexus Enform with Safety Connect.....	47
Luggage Mat.....	42
Mode Select Switch.....	20
Moon Roof.....	50
Multi-Information Display.....	19
Odometer/Trip Meter and Trip Meter Reset Buttons	16
Outside Rear View Mirrors	15
Overview.....	3
Parking Brake.....	18
Power (ignition) switch.....	17
Power Windows	50
Rear Sunshade	41
Rear Window and Outside Rear View Mirror Defoggers	30
Safety Connect	45
Seat Belts.....	14
Seat Heaters/Ventilators	38
Seats	11
Smart Access System with Push-button Start.....	9
Steering Wheel.....	16
Theft Deterrent System	10
Touch Screen.....	31
TRAC/VSC Off Mode.....	25
Transmission.....	18
Trunk	52
Turn Signal Lever	20
Windshield Wipers and Washers.....	28

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

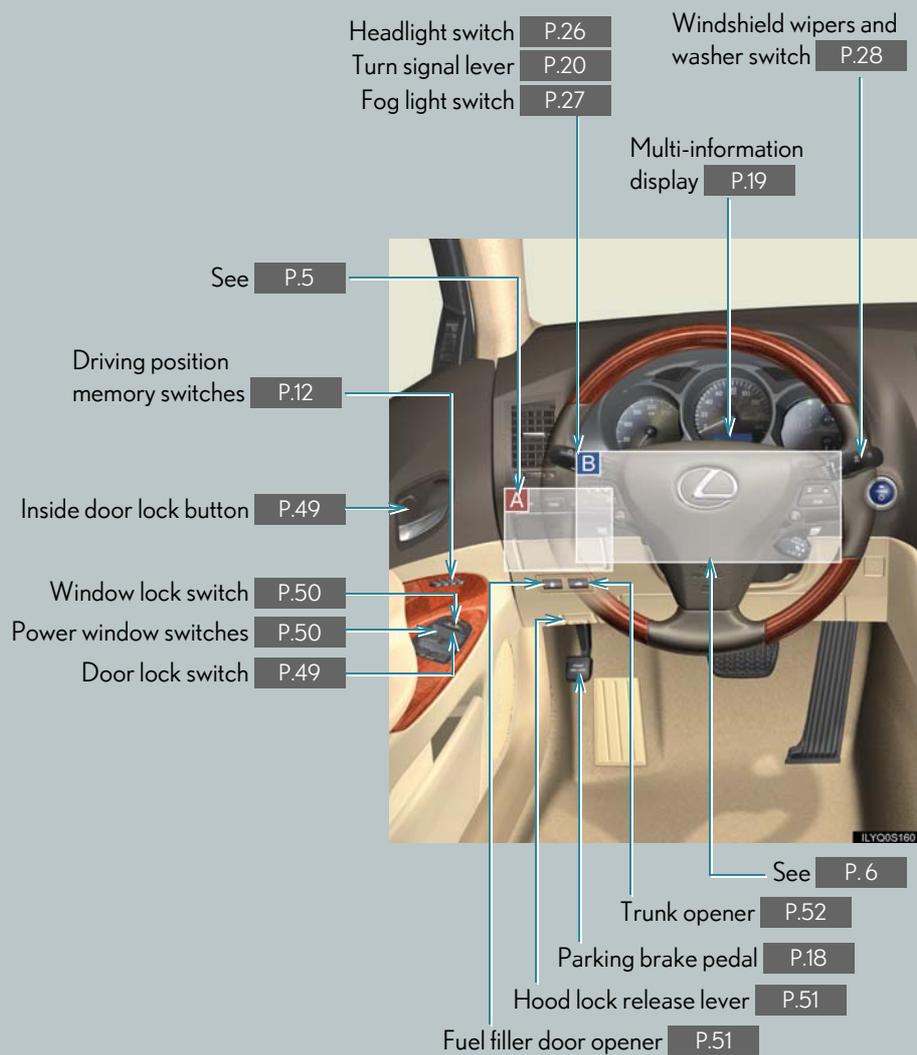

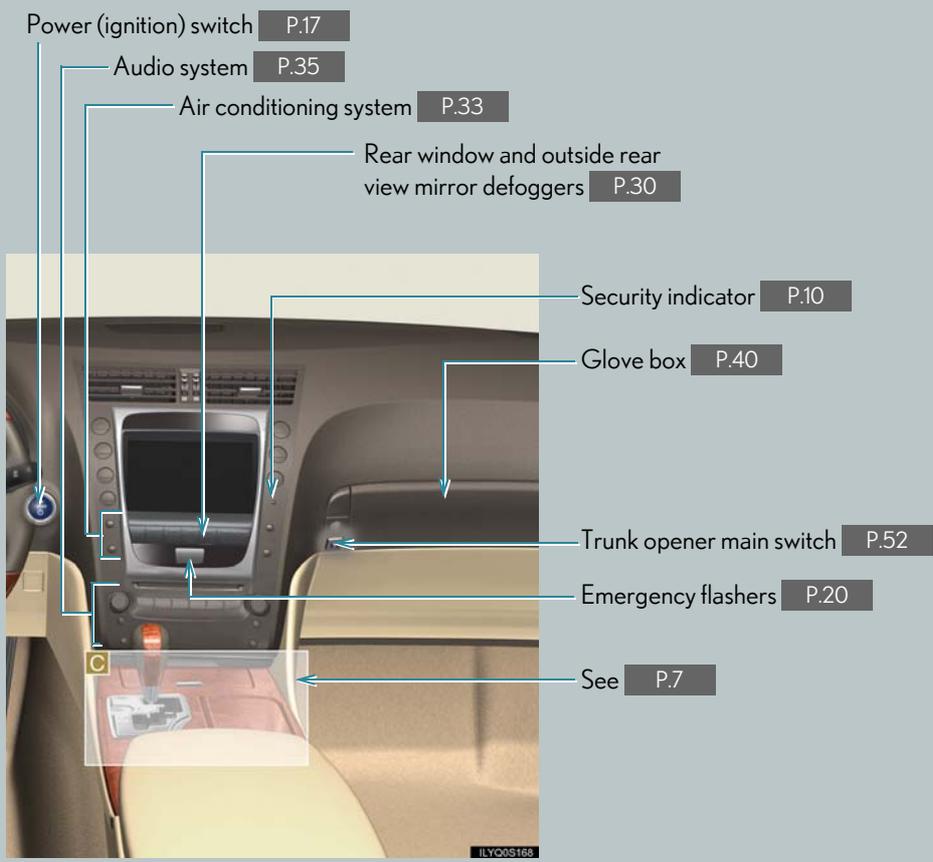

Overview

Instrument Panel

A

Headlight cleaner switch* P.30

Rear sunshade switch* P.41

Intuitive parking assist switch* P.21

"AFS OFF" switch P.26




Instrument panel light control P.30

Odometer/trip meter and trip meter reset buttons P.16

Outside rear view mirror switches P.15

B

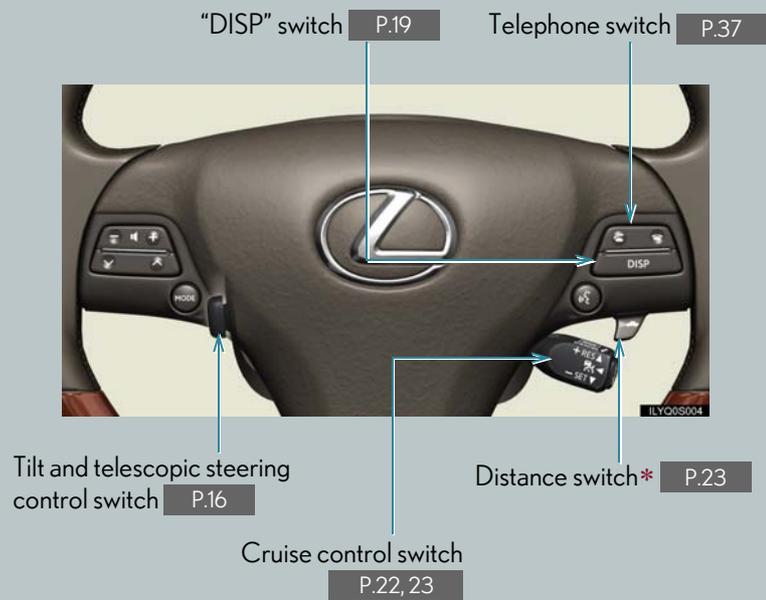

* : If equipped

Overview

Instrument Panel

C

Seat heater/ventilator switches* P.38

Cup holders P.40

Shift lever P.18

Ashtray P.37



AVS switch P.24


Mode select switch P.20

VSC OFF switch P.25

* : If equipped

Keys

■ Electronic key

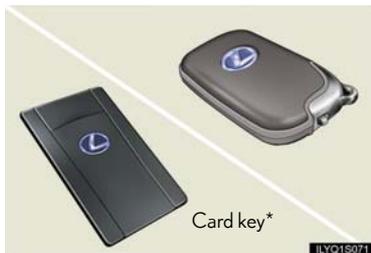

Smart access system with push-button start
(→P:9, 17)

*: If equipped

■ Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

■ Wireless remote control



- 1 Locks the doors
- 2 Unlocks the doors
- 3 Opens the trunk
- 4 Sounds the alarm
(To stop the alarm, push any button on the wireless remote control.)

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag. For details on starting the hybrid system, see page 17.

Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

Exiting the vehicle



To lock the vehicle, press the button on the door handle.

Opening the trunk



To open the trunk, press the button.

For details on what to do when the electronic key does not operate properly, see page 56.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

■ Immobilizer system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

■ Alarm

The system sounds the alarm and flashes light when an attempt to steal the vehicle is detected.

To set the alarm: close the doors, trunk and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the "POWER" switch to ACCESSORY or ON mode, or start the hybrid system, or unlock the doors or trunk.


■ Steering lock



The steering lock is engaged when the driver's door is opened with the "POWER" switch OFF.


Seats

■ Adjusting seat position

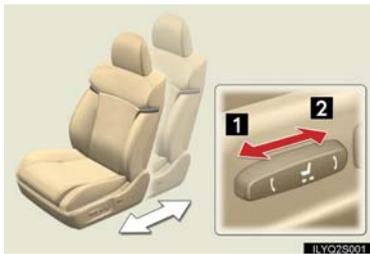

- 1 Moves the seat forward
- 2 Moves the seat backward

■ Adjusting seatback angle

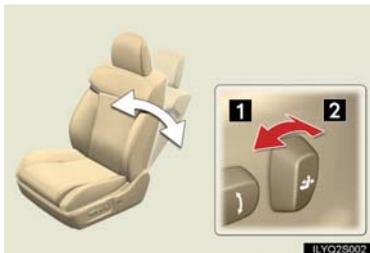

- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer

Driving Position Memory System

The seats can be returned to a previously set position by simply pressing a button. The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat. Positions can be conveniently stored for the vehicle's primary drivers and passengers (if equipped).

Setting memory positions



While holding the "SET" button, press and hold one of the memory buttons ("1", "2", or "3") until you hear a beep.

The current position of the driver's or front passenger's seat (if equipped), and the outside rear view mirror and steering wheel (driver's side switch only) are stored.

Recalling memory positions



Press one of the memory buttons ("1", "2", or "3").

Linking driving position memory with door unlock operation (driver's side only)




While holding the desired memory button, press and hold  button on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)


Head Restraints

■ Front seats

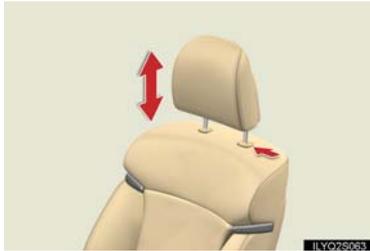

Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.

■ Outside rear seats

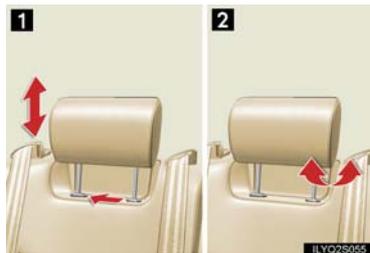

1 Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.

2 Horizontal adjustment: grip the head restraint and twist to tilt forward or backward.

■ Center rear seat



Height adjustment: to raise the head restraint, pull it upward. To lower the head restraint, push it down while pressing the lock release button.

Seat Belts


■ Adjusting shoulder belt height (front seats only)



To raise: pull the anchor upward.

To lower: depress the button and push the anchor down.


■ Seat belt comfort guides (outboard rear seats only)

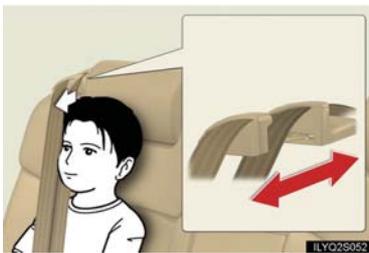

If the shoulder belt fits close to the neck, slide the comfort guide forward.

Outside Rear View Mirrors

■ Adjusting the mirrors

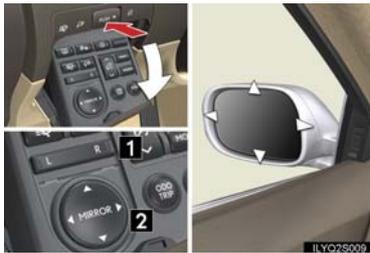

1 To select the mirror you wish to adjust (L or R), use the select switch.

2 To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the select switch in the neutral position (neither L nor R selected).

■ Folding and extending the mirrors




To fold the mirrors, press the button. Press the button again to return them to the extended position.

Inside Rear View Mirror

The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.


► Without navigation system

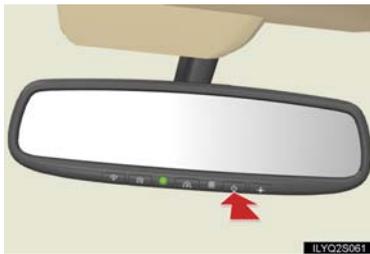

To turn auto mode on/off, press the auto button.

The indicator comes on when auto mode is turned on.


► With navigation system

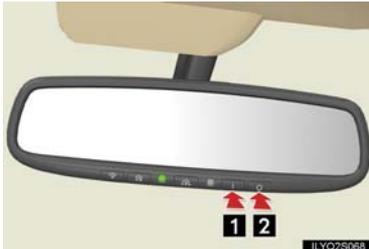

- 1 Turn auto mode on
- 2 Turn auto mode off

The indicator comes on when auto mode is turned on.

Steering Wheel

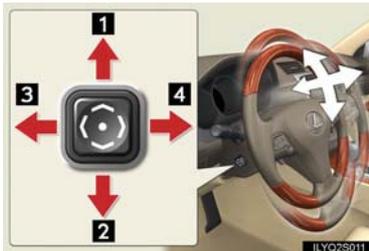

- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "POWER" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "POWER" switch is switched to ACCESSORY or ON mode.

Odometer/Trip Meter and Trip Meter Reset Buttons



- 1 Changes the display.
- 2 Resets the trip meter driving range to "0".

Starting

With the electronic key on your person, the hybrid system can be started by simply pressing the "POWER" switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the hybrid system.)

Starting the hybrid system



Make sure the parking brake is engaged and the shift lever is in "P".


- 1 Depress the brake pedal.
The "POWER" switch indicator light turns green.
- 2 Press the "POWER" switch.
The "READY" light comes on, showing that's the vehicle is ready to drive.

Stopping the hybrid system

- 1 Engage the parking brake and shift the shift lever to "P".
- 2 Press the "POWER" switch.

Changing "POWER" switch modes

To change "POWER" switch modes without turning on the hybrid system, press the "POWER" switch without depressing the brake pedal. The modes can be changed in the following order:

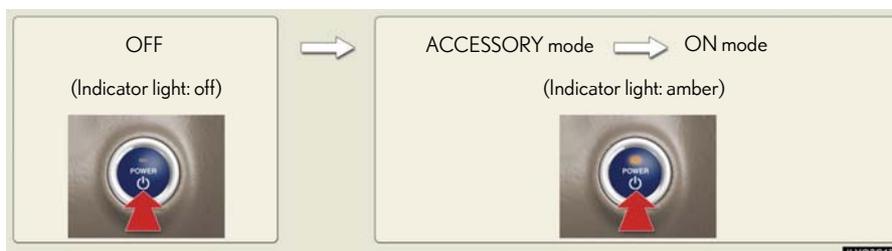

Transmission

Shift positions



- P Park*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

*: The hybrid system can only be started in "P".

← The vehicle can only be shifted out of "P" when the "POWER" switch is in ON mode and the brake pedal is depressed.

"S" mode

"S" mode allows the driver to select the shift range manually based on driving conditions.



- 1 Shift the shift lever to "S".
- 2 To upshift: shift the shift lever toward "+".
To downshift: shift the shift lever toward "S-D".

The selected shift range is displayed on the instrument cluster.

Parking Brake



To set: firmly depress the parking brake pedal.

To release: depress the parking brake pedal again.

Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

■ Display information



- Energy monitor
- Trip information
 - Driving range
 - Average fuel consumption
 - Current fuel consumption
 - Average vehicle speed
- Intuitive parking assist information (if equipped)
- Dynamic radar cruise control settings (if equipped)
- Warning messages


■ Changing the display



Trip information items can be switched by pressing the “DISP” switch.

- When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Turn Signal Lever

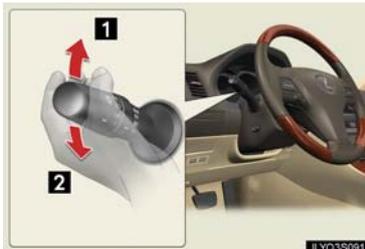

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

Mode Select Switch

Use the mode select switch to select the driving mode that best suits the driving and road conditions.



- 1 **Power mode**
For more powerful acceleration and uphill driving.
- 2 **Normal mode**
- 3 **Snow mode**
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.

Intuitive Parking Assist*

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.


Turning the system on and off



The system can be turned on and off using the intuitive parking assist switch.

Screen display

Multi-information display

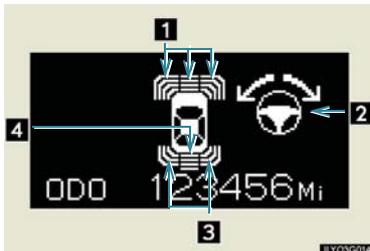

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the dual sensors
- 2 Indicates the steering maneuvers required to avoid an obstacle
- 3 Indicates obstacles detected by the rear corner sensors
- 4 Indicates obstacles detected by the back sensors

Touch screen



*: If equipped

Cruise Control*

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Adjusting the speed setting



To increase speed: push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

*: If equipped

Dynamic Radar Cruise Control*

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator
- 2 Display
- 3 Cruise control switch
- 4 Vehicle-to-vehicle distance control switch

Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Following distance can be adjusted using the vehicle-to-vehicle distance control switch.

Conventional (constant speed) cruise control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

*: If equipped

■ Adjusting the speed setting



To increase speed: push the lever up.

To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

■ Canceling



1 To temporarily cancel the dynamic radar cruise control, pull the lever. To resume the cruise control, push the lever up.

2 To turn the system off, press the "ON-OFF" button.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ AVS (Adaptive Variable Suspension System)

AVS controls the suspension and steering wheel operation according to the road and driving conditions.



1 Sports mode

Suitable for meandering mountainous driving or high speed driving.

2 Normal mode

Suitable for normal driving.

TRAC/VSC Off Mode

This switch turns off the traction control system or vehicle stability control system. Use this switch if the wheels get stuck in snow, mud etc.



To turn off TRAC: Push the VSC OFF switch briefly. The message "TRAC OFF" appears on the multi-information display.


To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip off indicator light should come on and the message "TRAC OFF" appears on the multi-information display.

Push the button again to turn the system back on.

Headlights



- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

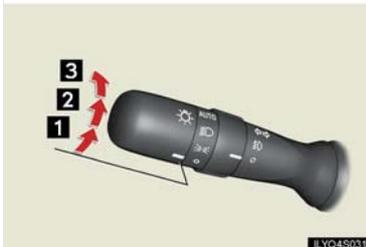

To engage the high beams, push the lever forward.
To flash the high beams, pull the lever and hold.



■ AFS (Adaptive Front lighting System)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.



The system can be turned on and off using the "AFS OFF" switch.

Fog Lights




The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washers


■ Intermittent wiper with interval adjuster (if equipped)



- 1 ○ Off
- 2 ☒ Intermittent operation
- 3 ▼ Low speed
- 4 ▽ High speed
- 5 △ Single wipe

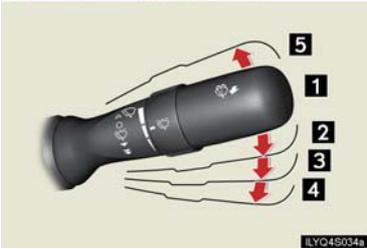

Intermittent operation: Wiper interval can be adjusted by turning the band.

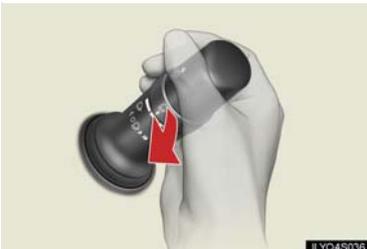

To spray washer fluid, pull the lever. The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)



- 1 ○ Off
- 2 AUTO Automatic operation
- 3 ▼ Low speed
- 4 ▽ High speed
- 5 △ Single wipe



ILYQ4S037A



ILYQ4S038

Automatic operation: Sensitivity can be adjusted by turning the band.



ILYQ4S039

To spray washer fluid, pull the lever. The wipers will operate automatically.

Headlight Cleaner*



The headlight cleaner can be used only when the "POWER" switch is in ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and outside mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 to 60 minutes.

Instrument Panel Light Control



- 1 Brighter
- 2 Darker
- 3 Maximum brightness
- 4 Changes the cluster glass tint


*: If equipped

Touch Screen

By touching the screen with your finger, you can control the audio system, air conditioning and adjust the screen display, etc. For details, see the Owner's Manual.

The illustrations below are for vehicles with navigation system.

The display and button positions will differ depending on the type of the system.

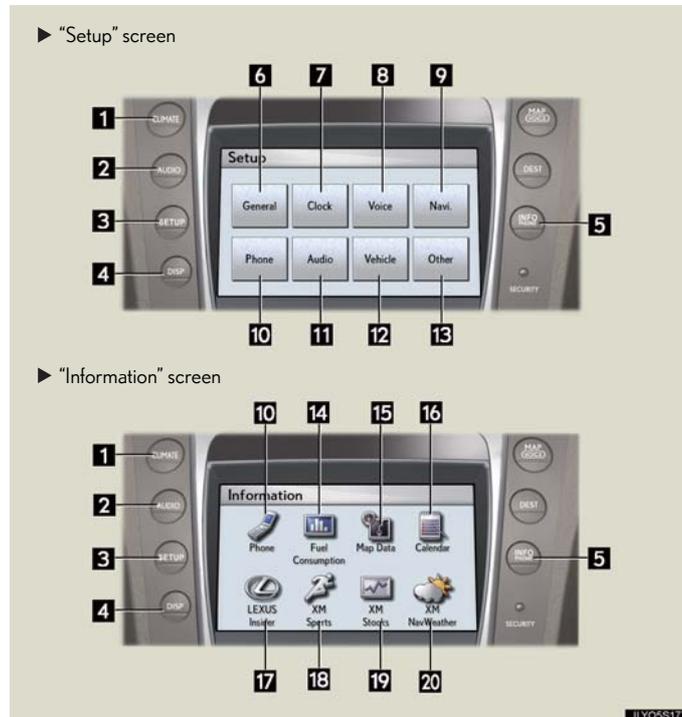

When you press this button...	This display appears.
1 "CLIMATE"	Air conditioning operation screen
2 "AUDIO"	Audio control screen
3 "SETUP"	Setup screen
4 "DISP"	Display screen
5 "INFO PHONE"	Information screen
6 "General"	General setting screen
7 "Clock"	Clock setting screen*
8 "Voice"	Voice setting screen*
9 "Navi."	Navigation System screen*
10 "Phone"	Phone setting screen/Phone screen
11 "Audio"	Audio setting screen
12 "Vehicle"	Vehicle setting screen*
13 "Other"	Other setting screen*
14 "Fuel Consumption"	Fuel consumption screen
15 "Map Data"	Map Date screen*
16 "Calendar"	Calendar screen*
17 "LEXUS Insider"	LEXUS Insider screen*
18 "XM Sports"	XM® Sports screen*
19 "XM Stocks"	XM® Stocks screen*
20 "XM NavWeather"	XM NavWeather™ screen*

*: See Navigation System Owner's Manual.

Air Conditioning System

Press  to display the air conditioning operation screen. For details, refer to the Owner's Manual.



- 1 Air conditioning operation screen display button
- 2 Driver's side temperature control
- 3 Automatic mode
- 4 Dual operation switch
- 5 Passenger's side temperature control


■ Using the automatic mode



1 Press .

2 Adjust the temperature using .

■ Adjusting the temperature in DUAL mode

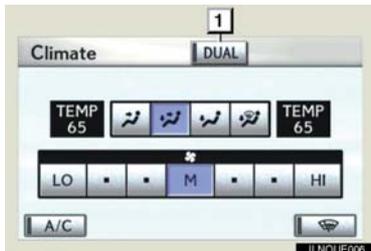

In DUAL mode, driver and passenger side temperature settings can be adjusted separately.

1 Touch "DUAL" on the operation screen.



2 Adjust the driver side temperature using ,

and the passenger side temperature using .

Audio System

Basic operation



- 1 Audio control screen display button*
- 2 SAT radio mode button
- 3 AM-FM radio mode button
- 4 Power ON/OFF button, Volume adjustment knob
- 5 Disc eject button
- 6 Disc slot
- 7 DISC mode button
- 8 AUX-USB mode button
- 9 Disc load button

*: Various adjustments can be made in each mode.
For details, refer to the Owner's Manual.


■ Listening to the radio



1 Press **AM-FM** or **SAT** to choose an AM or FM band.

2 Tune to your desired station.
For tuning adjustment and further information, refer to the Owner's Manual.

■ Playing the CD/DVD player

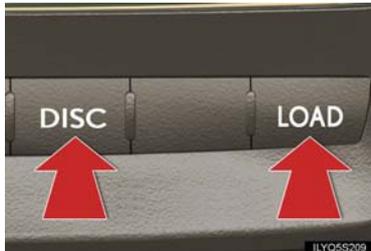

You have 2 methods to play your CD/DVD player.

● Press **LOAD** and insert a disc into the disc slot.


● Press **DISC** with the disc inserted.

For further information, refer to the Owner's Manual.

Hands-free System (For Cellular Phone)

To use the hands-free system, you must register your Bluetooth® phone in the system. For details, see the Owner's Manual.

■ Making a call

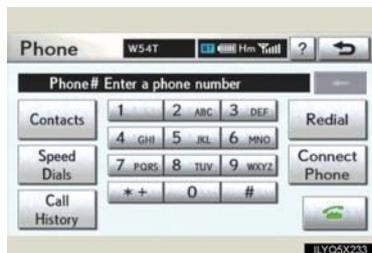

- 1 Press .
- 2 Touch "Phone" on the "Information" screen.
- 3 Inputting the phone number.
For another way of calling, see the Owner's Manual.
- 4 Touch  or press  on the steering switch.

■ Hanging up the phone

Touch  or press  on the steering switch.


Ashtrays

► Front



To remove the ashtray, push the release lever.

► Rear

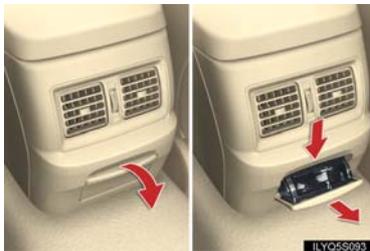

To remove the ashtray, press down on the plate and lift the ashtray out.


Seat Heaters/Ventilators*

► Seat heaters



Turn the dial toward **1**.

► Seat heaters and ventilators

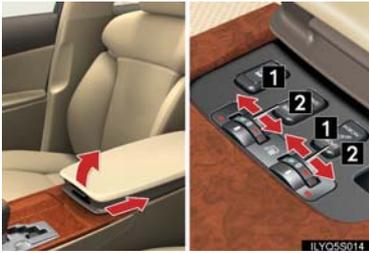

Seat heaters: turn the dial toward **1**.

Ventilators: turn the dial toward **2**.

*: If equipped


Console Box

► Console box




To open, slide and lift the armrest with the knob pulled up.

► Overhead console (if equipped)

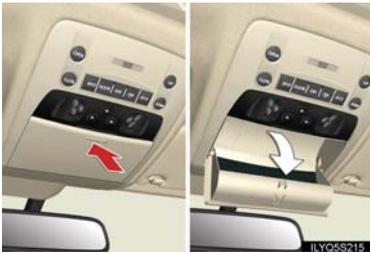


To open, press the lid.

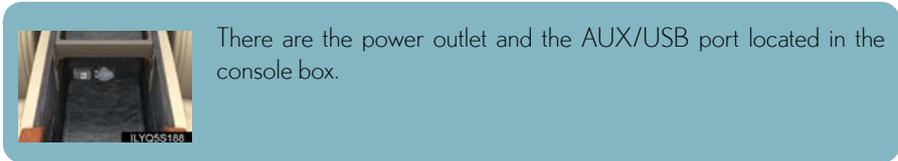

There are the power outlet and the AUX/USB port located in the console box.

Glove Box

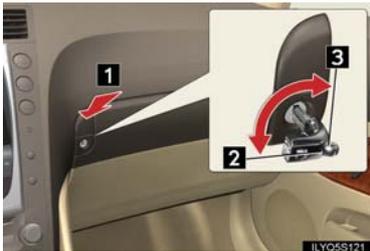


- 1 Open: press the button.
- 2 Unlock
- 3 Lock

The glove box can be locked and unlocked using the mechanical key.

Cup Holders

► Front

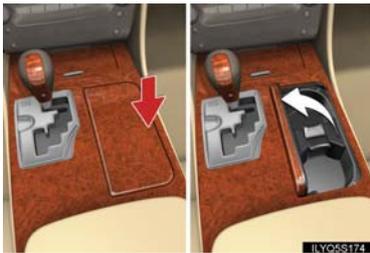

To open, press the lid.

► Rear



To open, press in and release the rear cup holder on the rear center armrest.

Interior Lights



- 1 ON
- 2 OFF
- 3 The light comes on if a door is opened.

Rear Sunshade*



To raise the rear sunshade, press the switch.
Press the switch again to lower it.

Compass*



To turn the compass on or off, press the button for more than 3 seconds.

*: If equipped

Luggage Mat



Pull the lever upwards when lifting the luggage mat up.




The lever can be hooked on the edge of the trunk.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.

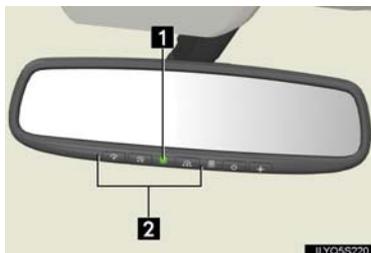

The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

- 1 Indicator
- 2 Buttons

Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.

- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the learn button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again. The garage door may open.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button. The indicator light should come on.

Safety Connect*

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week. Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components



- 1 "SOS" button
- 2 LED light indicators
- 3 Microphone

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

*: If equipped

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect*

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM® satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

■ Services

▶ With an active Lexus Enform subscription, the following features are available:

● **Safety Connect features** (→P.45)

- Automatic collision notification*¹
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

*: If equipped

- **XM® Sports and Stocks*2**

XM® Sports and Stocks is a service included with XM® satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeather™*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

- **XM® NavTraffic*3**

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio/video system, air conditioning system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or touch the "Destination Assist" button in your vehicle for further subscription details. XM® NavTraffic and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

Door Locks


■ Locking the vehicle from inside

▶ Inside lock button



- 1 Locks
- 2 Unlocks

▶ Door lock switch

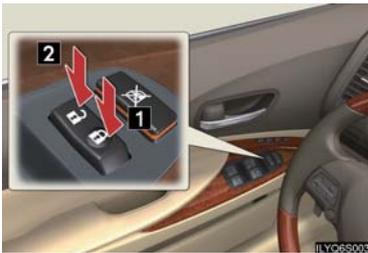

Operates all door locks.

- 1 Locks
- 2 Unlocks

■ Locking the vehicle from outside

▶ Using the entry function or wireless remote control (→P.8, 9)

■ Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof*

Opening and closing

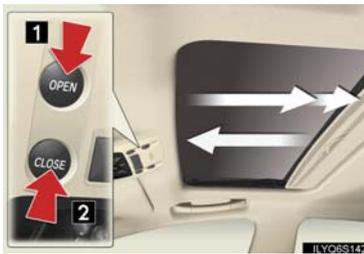


1 Open

Stops just before it is opened fully. Press the switch again to fully open.

2 Close

To stop partway, press the switch lightly.

Tilt up and down

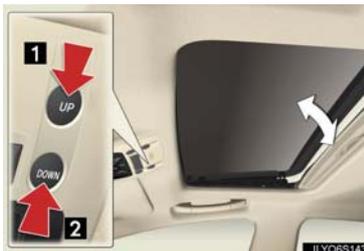

1 Tilt up

2 Tilt down

To stop partway, press the switch lightly.

*: If equipped

Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

Hood



1 Pull the hood lock release lever.




2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Trunk

Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

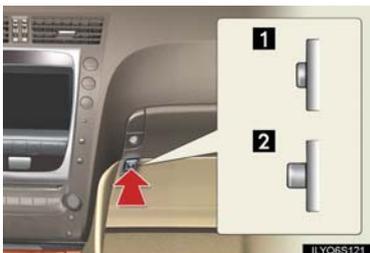

To disable the trunk opener, turn OFF the main switch in the glove box.

- 1 ON
- 2 OFF

When the trunk opener is disabled, the trunk cannot be opened using the entry function or the wireless remote control.

Entry function and wireless remote control

→P.8, 9

What to do if ...

List of Warning/Indicator Lights



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

-  (U.S.A.) Brake system warning light
-  (Canada)

Stop the vehicle immediately.

-  Charging system warning light

Have the vehicle inspected immediately.

- | | | |
|---|-----------------------------|--|
|  (U.S.A.) | Malfunction indicator lamp |  SRS warning light |
|  (Canada) | |  ECB*1 warning light |
|  (U.S.A.) | ABS warning light |  Electric power steering warning light |
|  (Canada) | |  PCS Pre-collision system warning light*2 |
|  (Flashing and then continuously on) | Tire pressure warning light | |

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminate no flashing)

Tire pressure warning light *3



Master warning light

See the Owner's Manual



Turn signal indicator



Cruise control indicator



Headlight high beam indicator



"SPORT" mode indicator



Headlight indicator (U.S.A.)



"AFS OFF" indicator



Tail light indicator (Canada)



Intuitive parking assist indicator *2



Fog light indicator



Slip indicator



"Hybrid SNOW" indicator



Slip off indicator



"Hybrid PWR" indicator



"AIR BAG ON" and "AIR BAG OFF" indicators



Shift position and shift range indicators



Driving ready indicator

For further information, refer to the Owner's Manual.

*1. Electronically Controlled Brake System

*2. If equipped

*3. Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature excluding compact spare tire. Adjust the tire inflation pressure.

What to do if ...

Spare Tire and Tool Compartment*

Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire

Taking out the spare tire




- 1 Lift up the panel on the trunk floor, and remove the tool tray.
- 2 Loosen the center fastener and remove the spare tire.

*: If equipped

If the electronic key does not operate properly

Unlocking and locking the doors

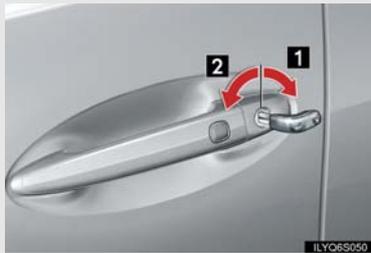

To unlock or lock the vehicle, use the mechanical key. The mechanical key is stored inside the electronic key.

- 1** Unlocks
- 2** Locks

Starting the hybrid system



- 1** Depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3** Press the "POWER" switch within 10 seconds after the buzzer sounds, keeping the brake pedal depressed.


*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if ...

If the hybrid system does not start

Make sure that the correct operating procedures have been followed.

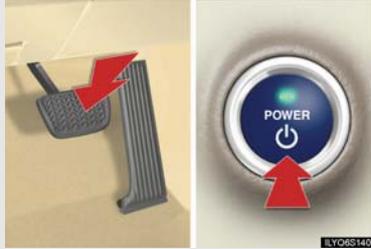

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.17)



Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the "POWER" switch. (→P.10)

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "POWER" switch OFF	Turn the "POWER" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously	Tried to open the door and exit the vehicle without shifting the shift lever to "P"	Shift the shift lever to "P".
Interior alarm rings continuously	Switched to ACCESSORY mode while the driver's door is open (Opened the driver's door when the "POWER" switch is in ACCESSORY mode.)	Turn the "POWER" switch OFF and close the driver's door.
	Turned the "POWER" switch OFF while the driver's door is open	Close the driver's door.

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
Wireless remote control	Unlocking operation	Driver's door unlocked in 1-step, all doors unlocked in 2-steps	All doors unlocked in 1-step
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
	Trunk unlocking function	ON	OFF
	Trunk unlocking operation	Push and hold	Push twice One short push
Panic function	ON	OFF	
Buzzer sounds when pushing  with any door not closed	ON	OFF	

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in 1-step, all doors unlocked in 2-steps	All doors unlocked in 1-step
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shifting the shift lever to "P" unlocks all doors.	ON	OFF
	Shifting the shift lever to position other than "P" locks all doors	ON	OFF
Power windows	Linked door key operation	Open and close	Open only Close only
	Wireless remote control linked operation	OFF	Open

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Moon roof	Linked door key operation	Open and close	Open only Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation*1	OFF	Open
	Linked operation of components when wireless remote control used*1	OFF	Slide only Tilt only
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds 60 seconds 90 seconds
	Daytime running light	ON	OFF*2
Windshield wipers and washer	Switching operation when the vehicle is stationary	ON	OFF
	Drip prevention function	ON	OFF
	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds

*1: This function cannot be customized unless power window operation using the wireless remote control is enabled.

*2: Vehicles sold outside Canada

Item	Function	Default setting	Customized setting
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the "POWER" switch turned OFF	ON	OFF
	Front/rear personal lights turned on when a door is opened	Corresponding light only	All lights OFF
	Foot lights	ON	OFF
	Shift lever light	ON	OFF
	Outer foot light	ON	OFF
	Front/rear personal lights turned on when the interior lights are switched "ON"	ON	OFF
Rear sunshade	Time elapsed before the reverse operation feature activates	0.7 seconds	0 seconds
			0.9 seconds
			1.2 seconds

A large rectangular area with a thick gray border. Inside the border, there are horizontal lines spaced evenly, creating a grid-like structure for writing or drawing. The lines are light gray and extend across the width of the inner rectangle.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2010 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.