

 
Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

12.3-inch Display	58
Audio System	
Audio control screen.....	71
Side Display (vehicles with a navigation system).....	71
Remote control (steering wheel switches).....	71
Basic operation.....	72
Radio.....	73
DVD player/CD player.....	74
Operating an iPod.....	76
Brake Hold	27
BSM (Blind Spot Monitor)	47
Cruise Control	37
Driving Mode Select Switch	50
Driving Position Memory	19
Dynamic Radar Cruise Control	39
Dynamic Radar Cruise Control With Full-Speed Range	42
Energy Monitor/Consumption Screen	14
EV Drive Mode	24
Floor mat installation	11
Front Air Conditioning System	
Control screen.....	78
Option control screen.....	79
Side display.....	80
Using the automatic mode.....	81
Adjusting the temperature for the driver's and front passenger's seats separately (DUAL mode) (vehicles without rear air conditioning system)	81
Adjusting the temperature for the driver's, front passenger's and rear seats separately (3-ZONE mode) (vehicles with rear air conditioning system)	81
Using the S-FLOW mode.....	81


Front Seats	18
Fuel Tank Cap	96
Garage Door Opener	89
Hands-free System For Cellular Phone	
Bluetooth® phone pairing	66
Contacts transfer	67
Registering the contacts in the favorites list.....	68
Calling by name (vehicles with navigation system)	69
Calling by favorites list	69
Calling using e-mail/SMS/MMS message	70
Receiving a call	70
Steering switches	70
Headlights	31
Head-up Display	30
Hybrid System	12
Intuitive Parking Assist	46
Lexus Enform.....	93
Lexus Enform Safety Connect	91
Lexus Night View.....	51
LKA (Lane-Keeping Assist)	48
Multi-information Display	28
Navigation System	
Register home	60
Destination input - Search by address	61
Destination input - Search points of interest by name.....	63
Destination input - Search points of interest by category.....	64
Destination input - Search points of interest by telephone number	65


Parking Brake	26
Portable Audio Device Ports	89
Power (Ignition) Switch.....	21
Rear Air Conditioning System	
Front controller	82
Remote Touch.....	54
Seat Heaters/Seat Ventilators.....	83
Smart Access System with Push-button Start	17
Tire Pressure Warning System	53
Turn Signal Lever	25
Voice Command System	
Basic operation.....	84
Command list	85
Windshield Wipers and Washer.....	33
XM Satellite Radio	95

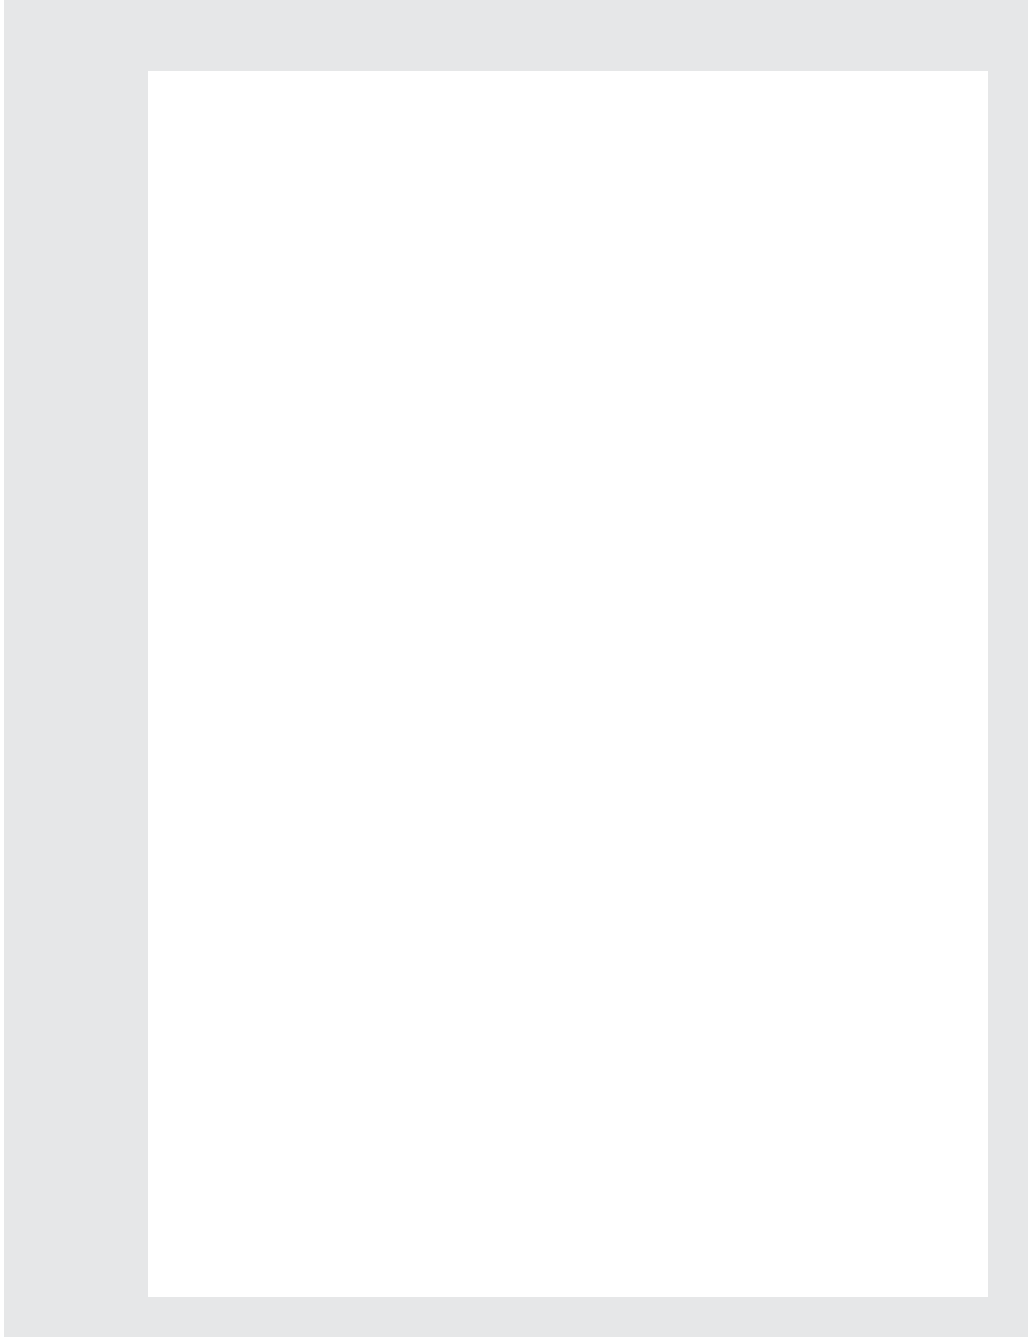

Overview

  Instrument Panel

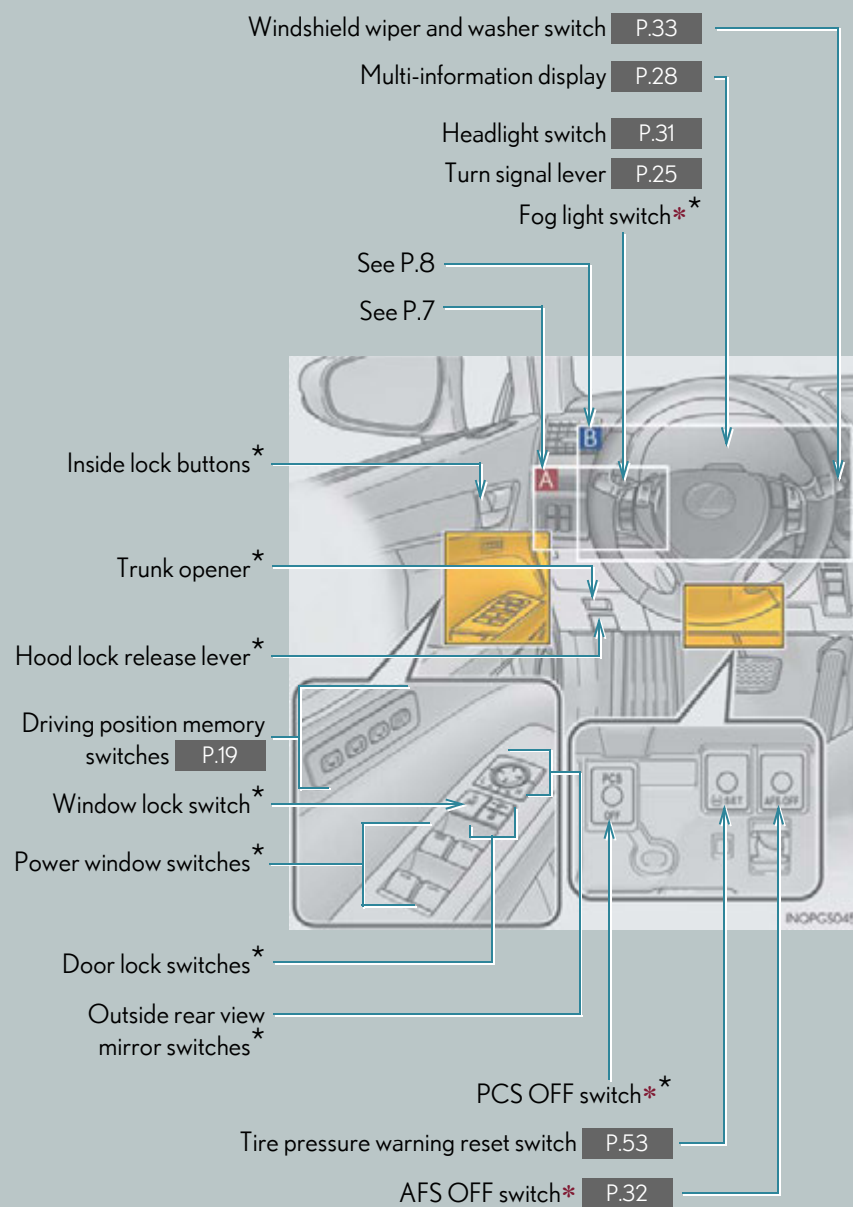

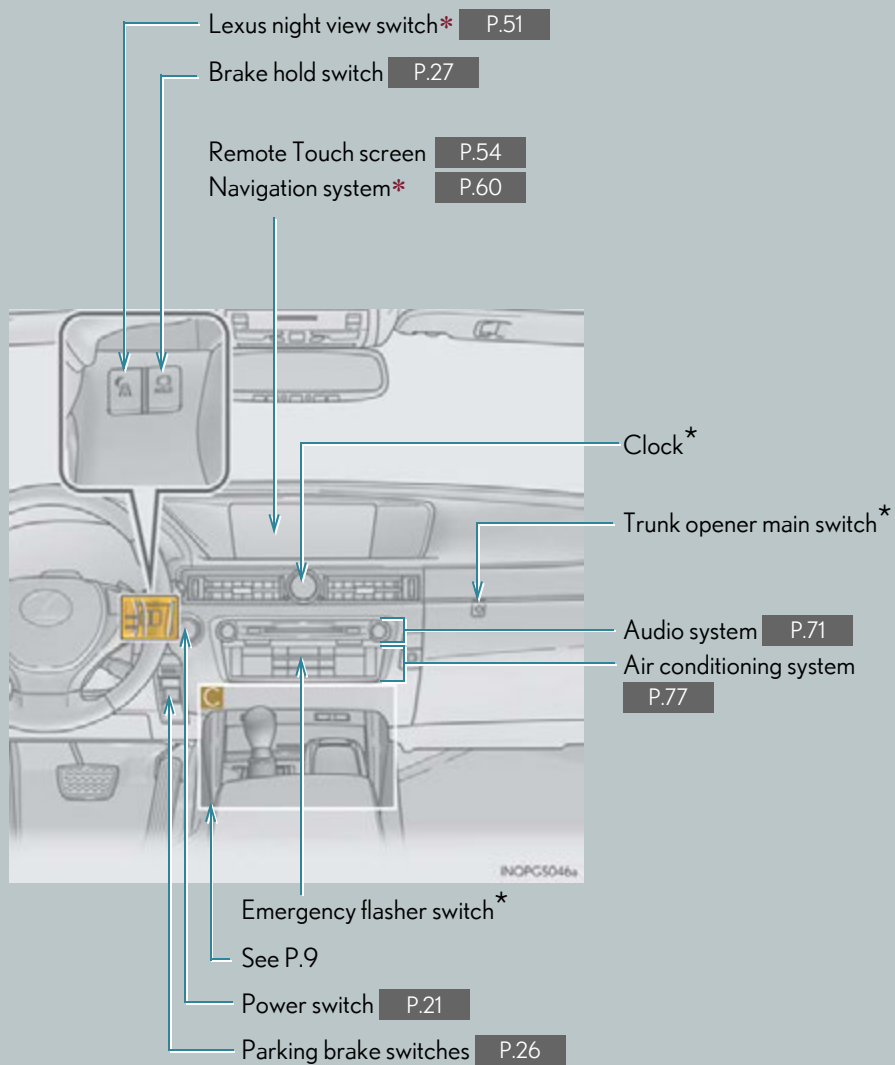

*: If equipped

*: Refer to "OWNER'S MANUAL".

Overview

Instrument Panel

A

Odometer/trip meter and trip meter reset button *

Instrument panel light control switches *

Headlight cleaner switch **

VSC OFF switch *

 


HUD (Head-up display) switches* P.30

Heated steering wheel switch* *

BSM (Blind Spot Monitor) main switch* P.47

B

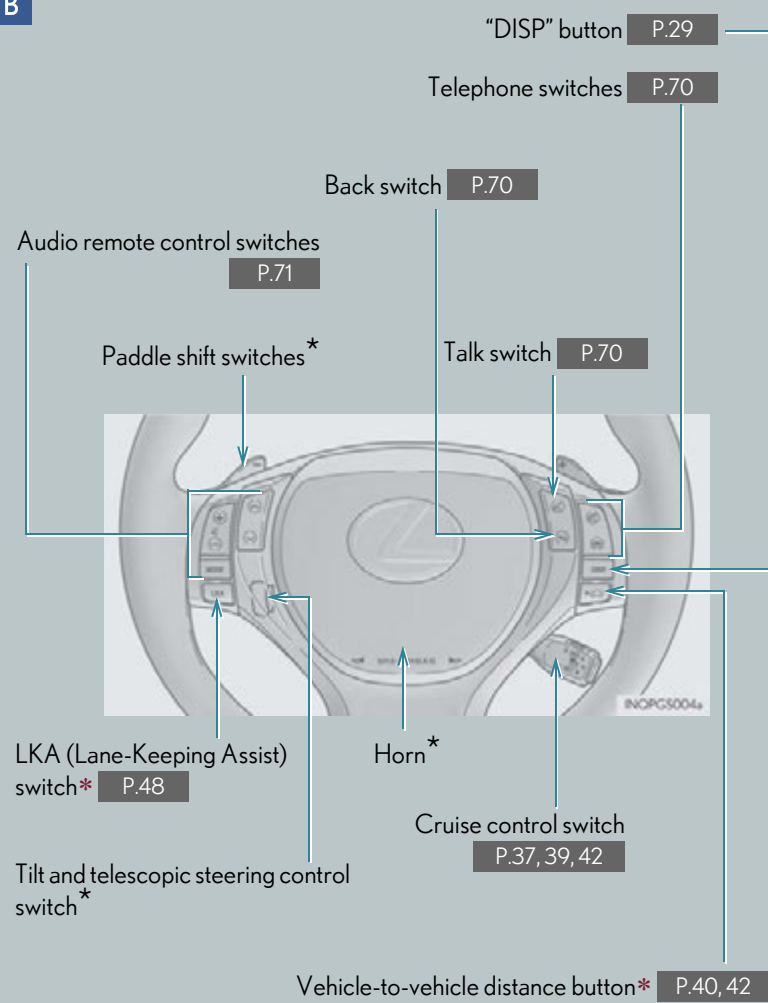


*: If equipped

*: Refer to "OWNER'S MANUAL".

Overview

 Instrument Panel

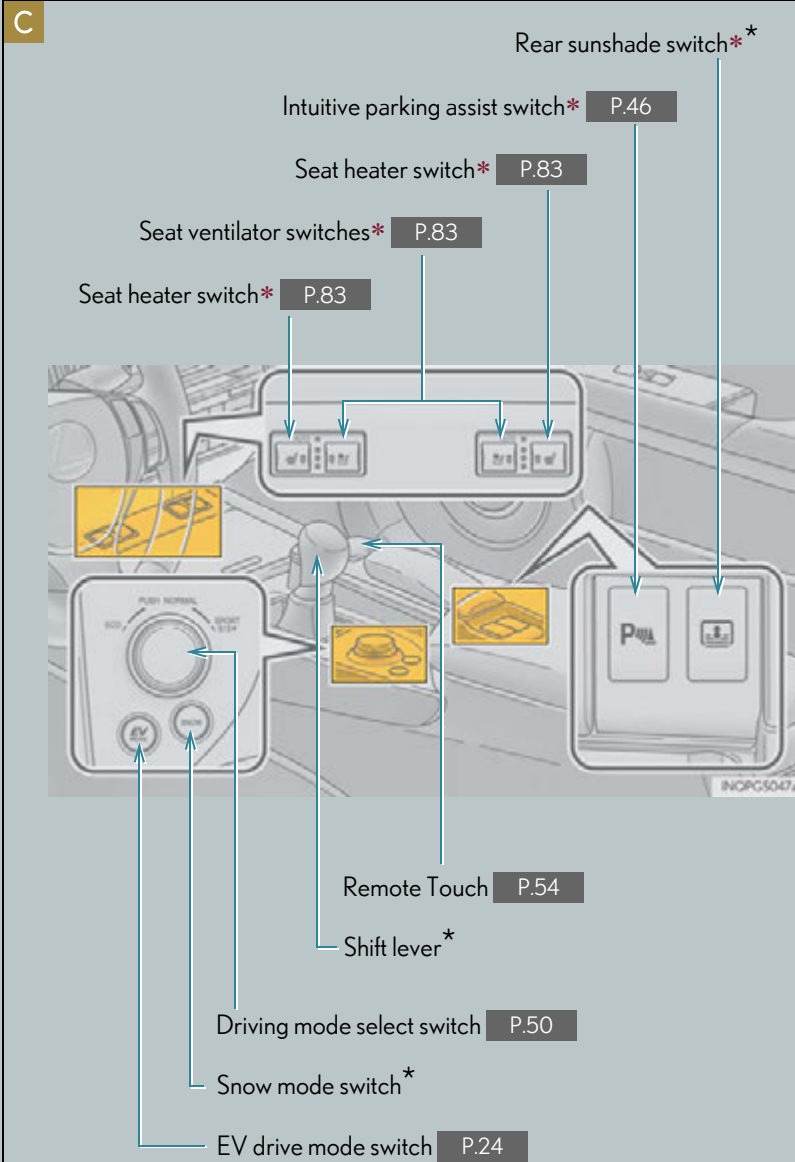


Overview

Roof

Interior light*

Moon roof switches*

 Vanity lights*

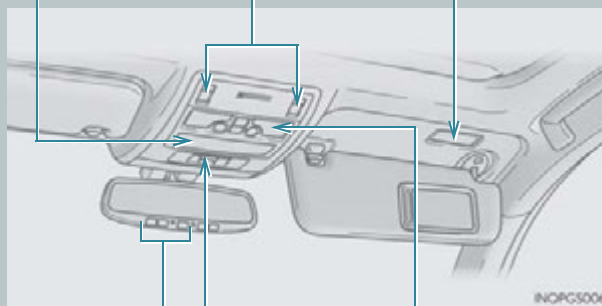

Personal lights*

"SOS" button* P.91

 
Garage door opener switches P.89

*: If equipped


*: Refer to "OWNER'S MANUAL".

Floor mat installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.



 - 1 Insert the retaining hooks (clips) into the floor mat eyelets.

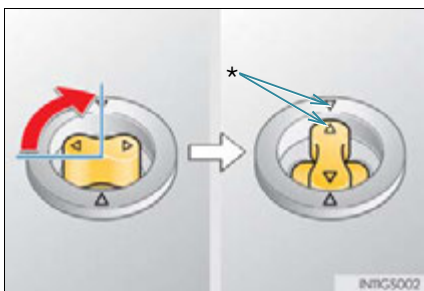

- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the $\triangle$ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

 
Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "OWNER'S MANUAL".

Hybrid System Indicator

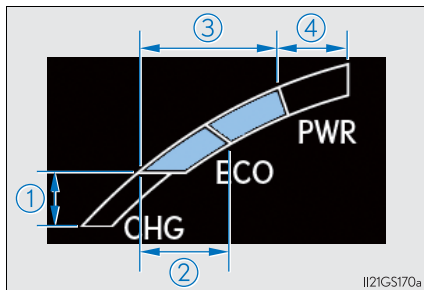

- ① Charge area
Shows regenerative charging.
- ② Hybrid Eco area
Shows that gasoline engine power is not being used very often.
The gasoline engine will automatically stop and restart under various conditions.
- ③ Eco area
Shows that the vehicle is being driven in an Eco-friendly manner.
- ④ Power area
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration* status. Regenerated energy will be used to charge the battery.

*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ Charging the hybrid battery (traction battery)

If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.

■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift position in D or S.
- The brake pedal is depressed while driving with the shift position in D or S.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibration even though the vehicle is able to move. For safety, apply the parking brake and make sure to shift the shift position to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the trunk lid is open.
- Sounds may be heard from the hybrid transmission when the hybrid system starts or stops.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents on the both sides of the rear seatback.

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 2.6 gal. [10.0 L, 2.2 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

Energy Monitor/Consumption Screen

You can view the status of your hybrid system on the multi-information display and the Remote Touch screen.

Vehicles with a 12.3-inch display: The energy monitor or consumption screen can be displayed on the side display.

■ Energy monitor

- How to display on the Remote Touch screen

Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen, and then select "Fuel Consumption".

If the "Trip Information" or "Past Record" screen is displayed, select "Energy".



The flow of energy is displayed on the Remote Touch screen.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the multi-information display

Press the "DISP" button on the steering wheel several times to select the energy monitor display.



The flow of energy is indicated by the movement of the arrows on the multi-information display.

 
The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

■ Consumption

Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen, and then select "Fuel Consumption".

● Trip information

If the "Energy Monitor" or "Past Record" screen is displayed, select "Trip Information".



- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Regenerated energy in the past 15 minutes
- ⑤ Average vehicle speed since the hybrid system was started.
- ⑥ Elapsed time since the hybrid system was started.
- ⑦ Cruising range

● Past record

 
If the "Energy Monitor" or "Trip Information" screen is displayed, select "Past Record".



- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

■ Side display (if equipped)

Vehicle information can be displayed on the side display




- Fuel consumption
- Past record
- Trip information
- Energy monitor

The image is an example only, and may vary slightly from actual conditions.

■ Hybrid warning message

 A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

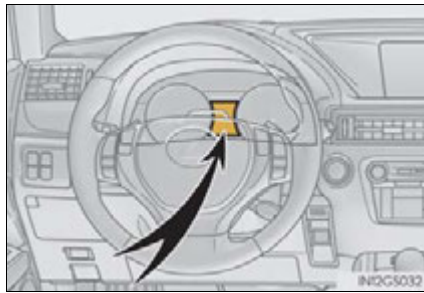


If a warning message is shown on the multi-information display, read the message and follow the instructions.

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)
For details on starting the hybrid system, see page 21.

 ■ Entering the vehicle

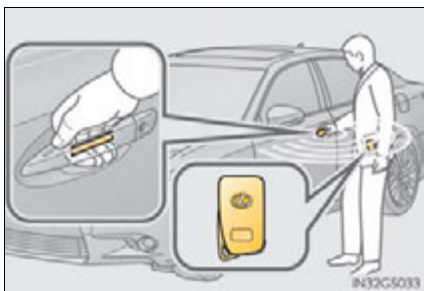


Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

 
■ Exiting the vehicle

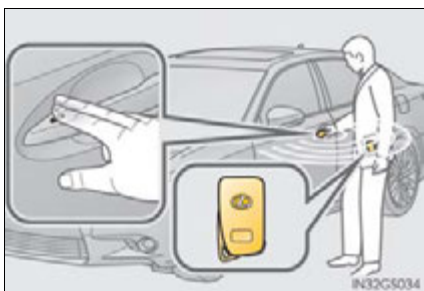

Touch the lock sensor (the indentation on the upper part of the door handle) to lock all the doors.

Check that the door is securely locked.

 ■ Opening the trunk

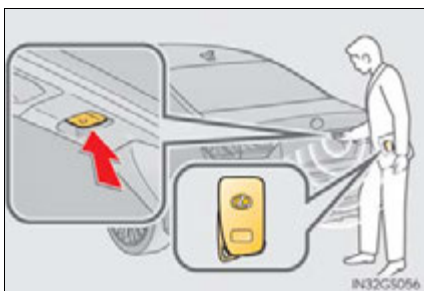

Press the button.

 
If the vehicle is equipped with power trunk opener and closer, the trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 100.


Front Seats

■ Adjustment procedure

► Type A

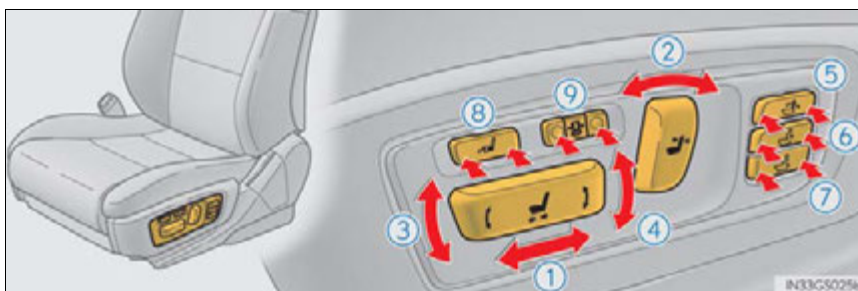

► Type B

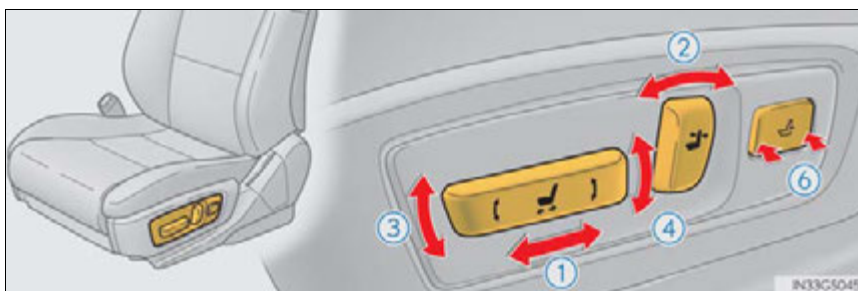 

- | | |
|--|---|
| ① Seat position adjustment switch | ⑥ Lumbar support adjustment switch |
| ② Seatback angle adjustment switch | ⑦ Pelvic support adjustment switch (if equipped) |
| ③ Seat cushion (front) angle adjustment switch | ⑧ Seat cushion length adjustment switch (if equipped) |
| ④ Vertical height adjustment switch | ⑨ Seatback side support adjustment switch (if equipped) |
| ⑤ Seatback upper angle adjustment switch (if equipped) | |

 
Driving Position Memory

This feature automatically adjusts the front seats, steering wheel and outside rear view mirrors to suit your preferences.

■ Driving position memory

■ Recording procedure

- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON mode.
- 3 Adjust the driver's seat, steering wheel, and outside rear view mirrors to the desired positions.

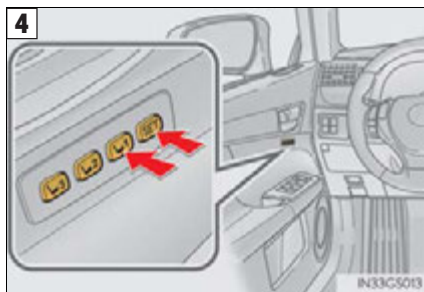


While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.

■ Recall procedure

 - 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON mode.

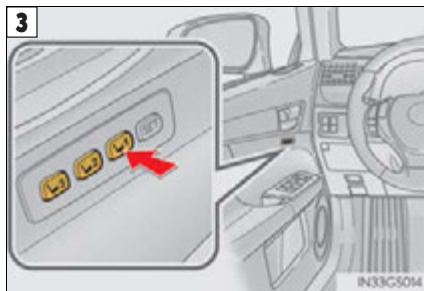


Press one of the buttons for the driving position you want to recall until the buzzer sounds.

■ Memory recall function (driver's side only)

Each electronic key can be registered to recall your preferred driving position.

■ Registering procedure

 - 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON mode.
- 3 Recall the driving position that you want to record.

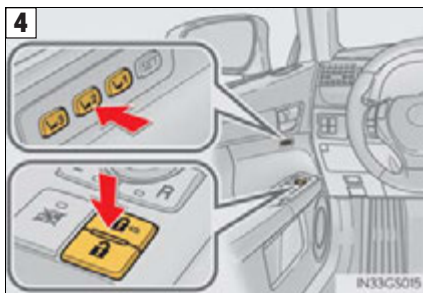

While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

Starting the hybrid system



 
- 1** Check that the parking brake is set.
- 2** Check that the shift lever is set in P.
- 3** Firmly depress the brake pedal.
 will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.
- 4** Press the power switch.
Continue depressing the brake pedal until the hybrid system is completely started.
The hybrid system can be started from any power switch mode.
- 5** Check that the "READY" indicator is on.
The vehicle will not move when the "READY" indicator is off.

■ Stopping the hybrid system

- 1 Stop the vehicle.
- 2 Shift the shift lever to P.
- 3 Set the parking brake.
- 4 Press the power switch.
- 5 Release the brake pedal and check that "POWER ON" on the multi-information display is off.

■ Changing power switch modes

Modes can be changed by pressing the power switch with the brake pedal released. (The mode changes each time the switch is pressed.)

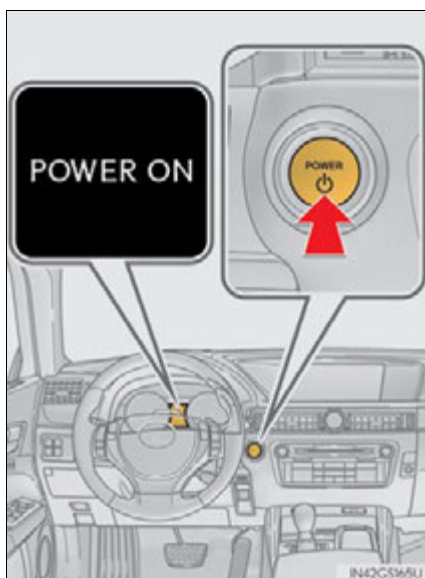

Off*

The emergency flashers can be used.
The multi-information display will not be displayed.

ACCESSORY mode

Some electrical components such as the audio system can be used.
"POWER ON" will be displayed on the multi-information display.

ON mode

 
All electrical components can be used.
"POWER ON" will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACCESSORY mode, not to off.

■ If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.
► If the shift lever is shifted to N
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the hybrid system.
► If the shift lever cannot be shifted to N
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

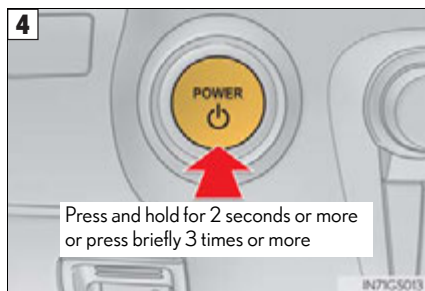


To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

EV Drive Mode

 In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

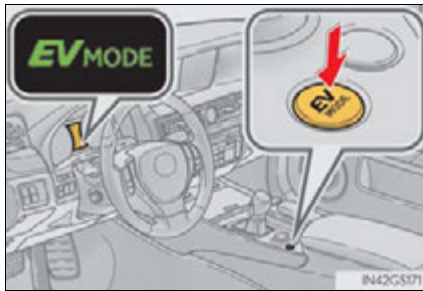


Turns EV drive mode on/off

When EV drive mode is turned on, "EV MODE" will be displayed on the multi-information display. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

Turn Signal Lever

 The lever will return to its original position immediately after operation.

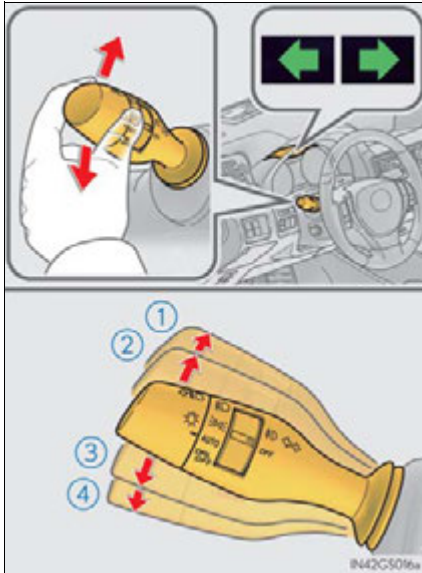

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing

 
Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.

■ Customization

The number of times the turn signals flash during a lane change can be changed.

Parking Brake

Manual mode

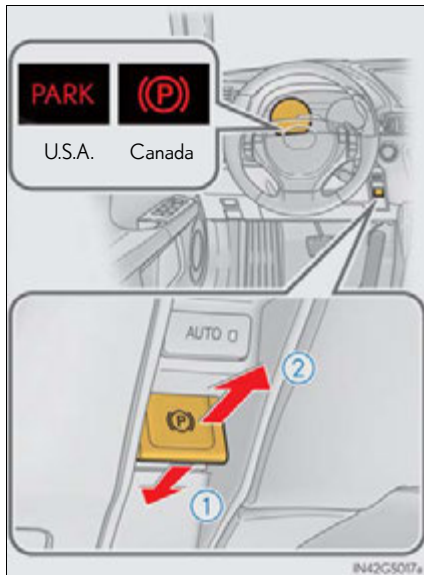

- ① Sets the parking brake
- ② Releases the parking brake
Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

Automatic mode

The parking brake is set or released automatically according to shift lever operation.



Turns automatic mode on/off

- When the shift lever is moved out of P, the parking brake will be released.
- When the shift lever is moved into P, the parking brake will be set.
Operate the shift lever with the brake pedal depressed.

Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.



 
Turns the brake hold system on

The brake hold standby indicator (green) comes on. While the system is holding the brake, the brake hold operated indicator (yellow) comes on.

Multi-information Display

The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

■ Display contents

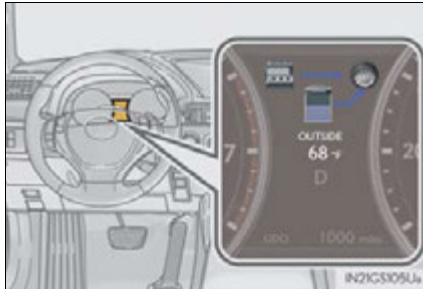

- Trip information
 - Energy monitor
 - Outside temperature
 - Current fuel consumption
 - Average fuel consumption after refueling
 - Average fuel consumption
 - Average vehicle speed
 - Driving range
 - Tire inflation pressure (if equipped) (→P.53)
- Drive monitor
 - Outside temperature
 - Average fuel consumption after refueling
 - Driving range
- Intuitive parking assist display* (if equipped)
- Dynamic radar cruise control display* (if equipped)
- Dynamic radar cruise control with full-speed range* (if equipped)
- LKA (Lane-Keeping Assist) display* (if equipped)
- Warning messages

*: Automatically displayed when the system is used. Display can be switched by pressing the "DISP" button.

■ Switching the display of trip information

 


Items displayed can be switched by pressing the “DISP” button.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Head-up Display (if equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.

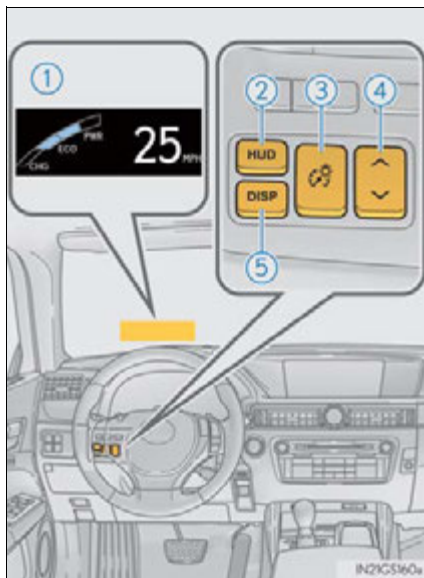


- ① Head-up display
- ② "HUD" button
- ③ Display brightness adjustment switch
- ④ Display position adjustment switch
- ⑤ "DISP" button

Head-up display contents


- Vehicle speed
- Hybrid System Indicator
- Tachometer
- Shift position and shift range
- Audio display
- Route guidance display (vehicles with navigation system)
- Lexus Enform (if equipped)
- Lane departure warning display (LKA [Lane-Keeping Assist]) (if equipped)
- Approach warning display (dynamic radar cruise control, dynamic radar cruise control with full-speed range) (if equipped)
- Pre-collision braking warning message (pre-collision system) (if equipped)

 Headlights

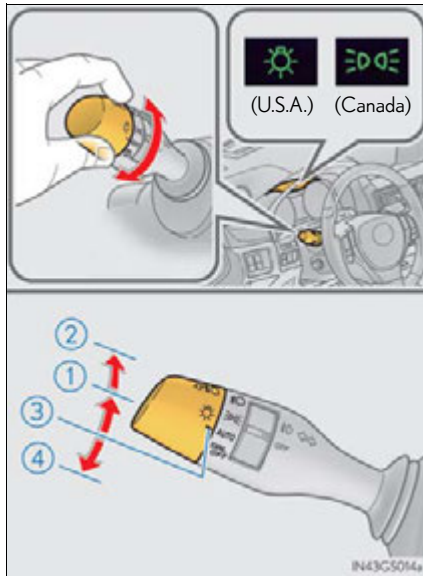

- ① The side marker, parking, tail, license plate and instrument panel lights turn on.
- ② The headlights and all the lights listed above turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the power switch is in ON mode.)
- ④ **DRL OFF**
(U.S.A.) Off
○ The daytime running lights turn on.
(Canada)

 ■ Turning on the high beam headlights

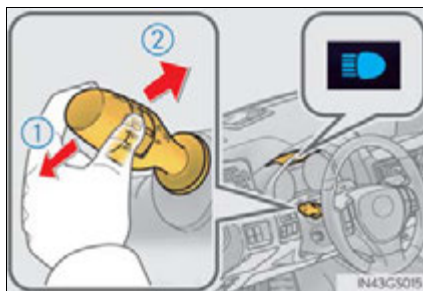

- ① With the headlights on, push the lever away from you to turn on the high beams.
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.

■ AFS (Adaptive Front-lighting System) (if equipped)

AFS (Adaptive Front-lighting System) secures excellent visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire's angle as controlled by steering input.

 


Turns the AFS on/off

The indicator turns on when the AFS is deactivated.

Windshield Wipers and Washer

The lever will return to its original position immediately after operation.

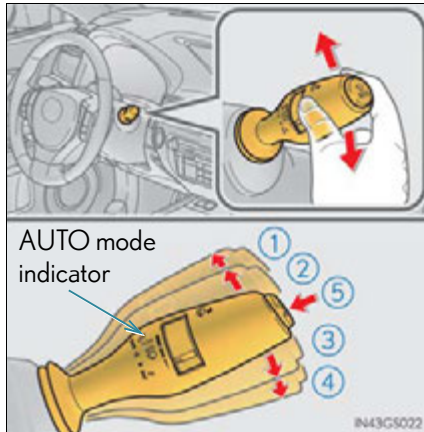

- ① OFF (U.S.A.) or (Canada)
Move the lever up 2 levels
- ② Move the lever up 1 level
- ③ (U.S.A.) or (Canada)
Move the lever down 1 level
- ④ HI (U.S.A.) or (Canada)
Move the lever down 2 levels
- ⑤ AUTO AUTO mode on/off switch

With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

AUTO mode indicator will turn on when AUTO mode is selected.

Operation		OFF or		or	HI or
Status before operation					
Off		Temporary operation	Temporary operation	Low speed operation	High speed operation
Low speed operation		Off	Off	High speed operation	High speed operation
High speed operation		Off	Low speed operation	No change	No change
AUTO mode	Intermittent operation	Off	Temporary operation ^{*1}	Low speed operation ^{*2}	High speed operation ^{*2}
	Continuously		No change		

^{*1}: After temporary operation, the mode will return to AUTO mode.

 
^{*2}: AUTO mode will be canceled.



When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

⑥ Increases the sensitivity


⑦ Decreases the sensitivity

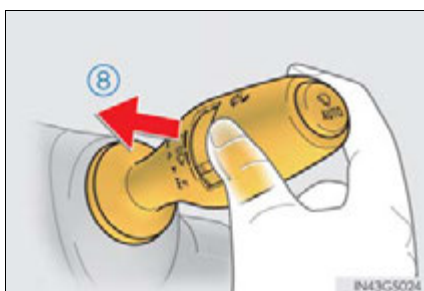

⑧ Washer/wiper dual operation

Wipers will automatically operate a couple of times after the washer squirts.

 
■ Switching to the intermittent windshield wipers

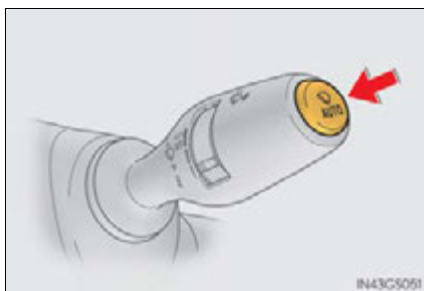

Press and hold  until the AUTO mode indicator stops flashing.

If  is pressed and held until the AUTO mode indicator stops flashing again, it will return to its previous state.

 ■ Operating the intermittent windshield wipers

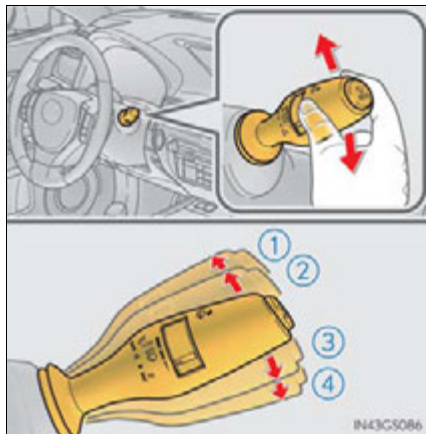


- ① **⬆ OFF** (U.S.A.) or **○** (Canada)
Move the lever up 2 levels
- ② **△** Move the lever up 1 level
- ③ **▼** (U.S.A.) or **▽** (Canada)
Move the lever down 1 level
- ④ **⬇ HI** (U.S.A.) or **⬇** (Canada)
Move the lever down 2 levels

Operation Status before operation	⬆ OFF or ○	△	▼ or ▽	⬇ HI or ⬇
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change



Wiper intervals can be adjusted when intermittent operation is selected.

 
- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

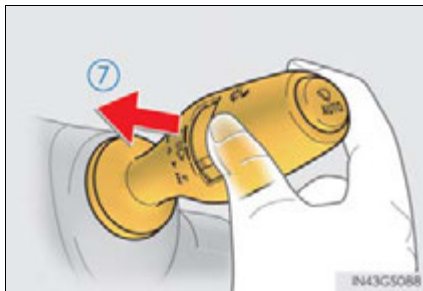

- ⑦ Washer/wiper dual operation
Wipers will automatically operate a couple of times after the washer squirts.


Cruise Control (if equipped)

 Use the cruise control to maintain a set speed without depressing the accelerator pedal.

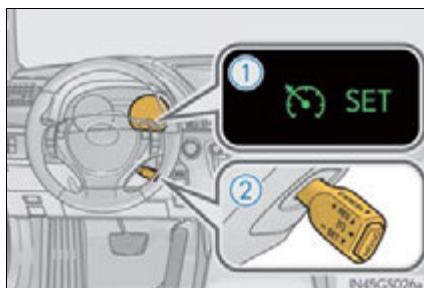


- ① Indicators
- ② Cruise control switch

 Setting the vehicle speed

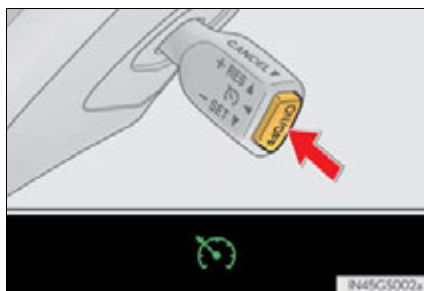


 - 1 Press the "ON/OFF" button to activate the cruise control.
Cruise control indicator will come on.
Press the button again to deactivate the cruise control.

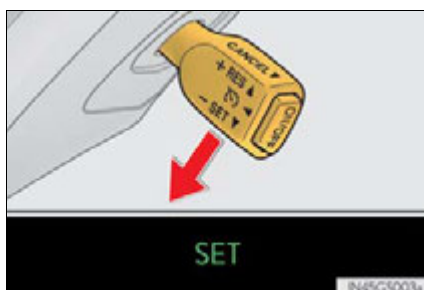


- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
"SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

 ■ Adjusting the set speed

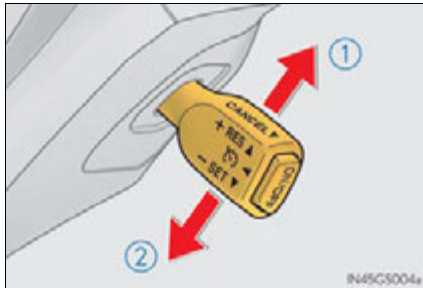

- ① Increases the speed
 - ② Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

 
■ Canceling and resuming the constant speed control

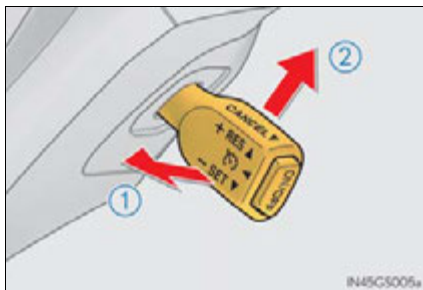

- ① Pulling the lever toward you cancels the constant speed control. The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Dynamic Radar Cruise Control (if equipped)

 Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

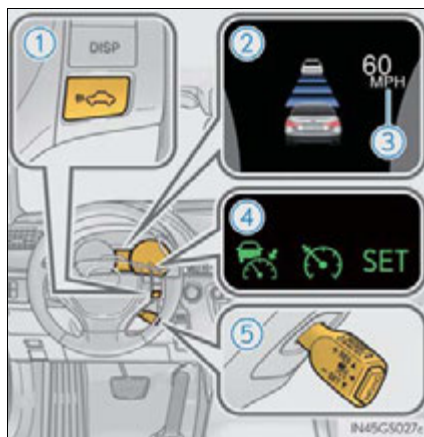


- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)




 - 1 Press the "ON/OFF" button to activate the cruise control.
Radar cruise control indicator will come on.
Press the button again to deactivate the cruise control.

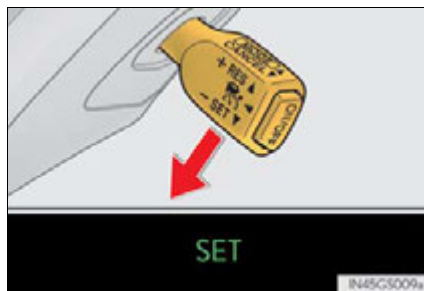


- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
"SET" indicator will be displayed.
The vehicle speed at the moment the lever is released becomes the set speed.

 ■ Adjusting the set speed

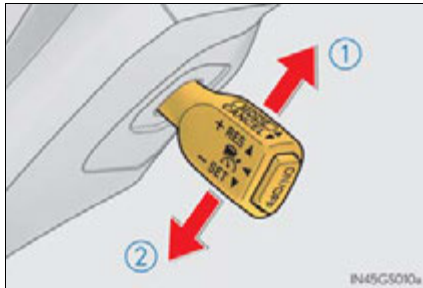

- ① Increases the speed
 - ② Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

 ■ Changing the vehicle-to-vehicle distance

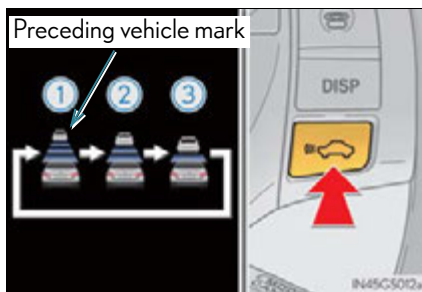


Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
 - ② Medium
 - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode.
If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

 ■ Canceling and resuming the speed control

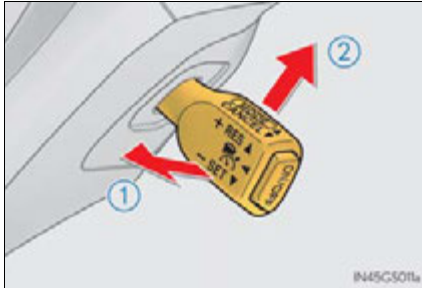

- ① Pulling the lever toward you cancels the cruise control.
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the cruise control.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

 
■ Selecting conventional constant speed control mode

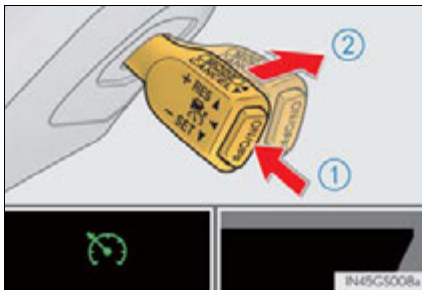

- ① Press the "ON/OFF" button to activate the cruise control.
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.
(Push the lever forward and hold for approximately one second.)
Cruise control indicator will come on.
When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

Dynamic Radar Cruise Control With Full-Speed Range (if equipped)

 Dynamic Radar Cruise Control with full-speed range supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates or stops in order to maintain a set following distance from vehicles ahead.

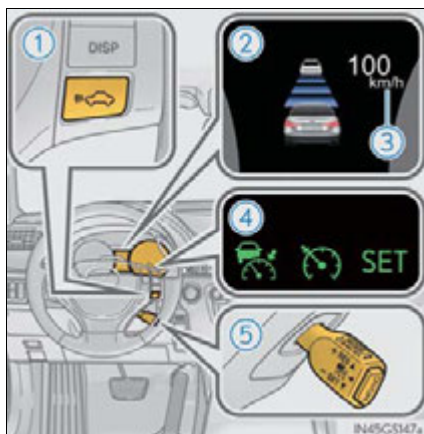

- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

 
■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)



- 1** Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on.

Press the button again to deactivate the cruise control.

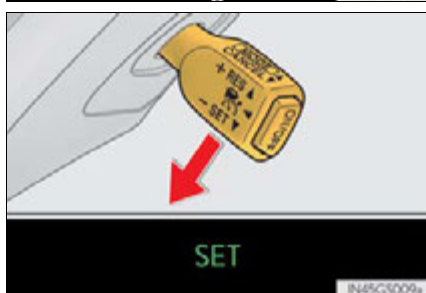


- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" indicator will be displayed.


The vehicle speed at the moment the lever is released becomes the set speed.

 ■ Adjusting the set speed

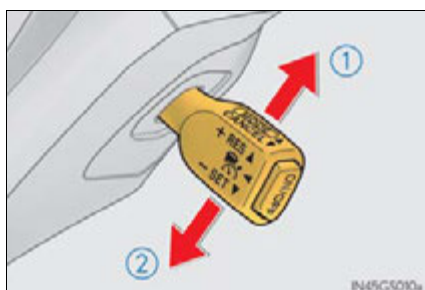

- ① Increases the speed
(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

 
■ Changing the vehicle-to-vehicle distance

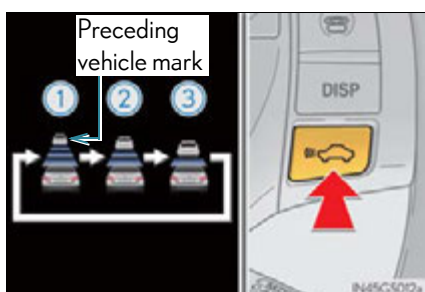

Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
 - ② Medium
 - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode.
If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

 
■ Resuming follow-up cruising when the vehicle has been stopped by system control

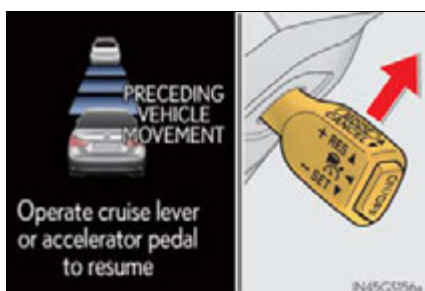

After the vehicle ahead of you starts off, push the lever up.


Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

 ■ Canceling and resuming the speed control

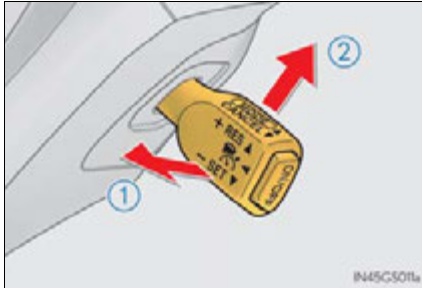

- ① Pulling the lever toward you cancels the cruise control.
The setting is also canceled when the brake pedal is depressed while driving. (When the vehicle has been stopped by system control, applying the brakes does not cancel the setting.)
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

 ■ Selecting conventional constant speed control mode

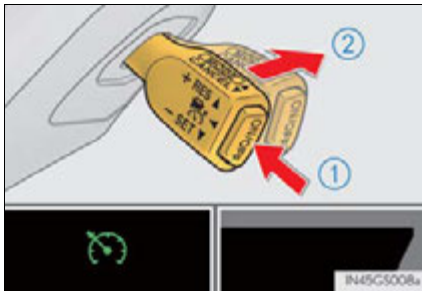


- ① Press the "ON/OFF" button to activate the cruise control.
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.
(Push the lever forward and hold for approximately 1 second.)
Cruise control indicator will come on.

Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Remote touch screen and a buzzer. Always check the surrounding area when using this system.

 ■ Turning the system on and off

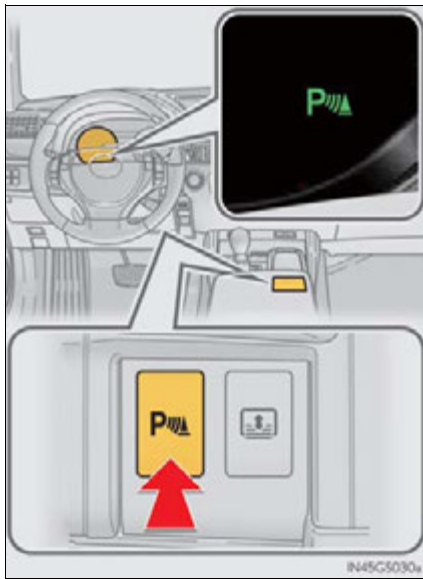

Turns the intuitive parking assist on/off

 
When on, the indicator light comes on to inform the driver that the system is operational.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function
Assists the driver when backing up


These functions use same sensors.

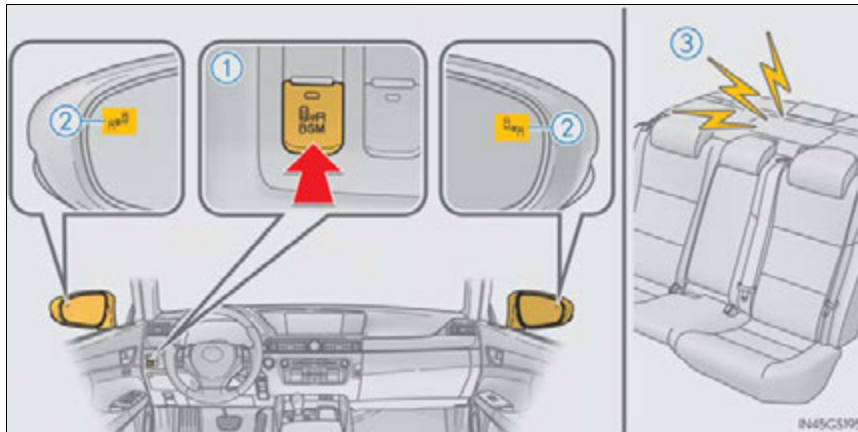

- ① BSM main switch
Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. Common switch for Blind Spot Monitor function and Rear Cross Traffic Alert function.
- ② Outside rear view mirror indicators
Blind Spot Monitor function:
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.
Rear Cross Traffic Alert function:
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

LKA (Lane-Keeping Assist) (if equipped)

 While driving on a freeway or motor highway that has lane markers and no sharp curves, the system recognizes the lanes using a camera located above the inside rear view mirror as a sensor to assist the driver with staying in the lane. The LKA system has two functions.

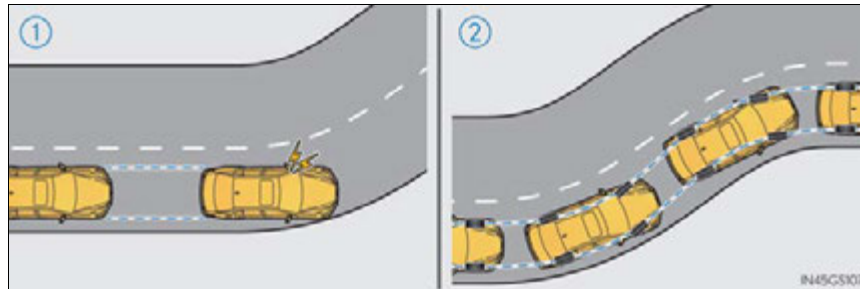

① Lane departure warning function

 
If the system judges that the vehicle may deviate from its lane, it alerts the driver using beeping, screen displays and a sensory warning^{*} given via the steering wheel.

^{*}: A slight steering torque is applied for a short period of time in the direction of the center of the lane.

② Lane keeping assist function

- This function will be active when the vehicle-to-vehicle distance control mode of the cruise control is set with vehicle speed above approximately 45 mph (72 km/h) and while the lane departure warning function is active.
- When the lane keeping assist function is active, a slight steering torque will be applied, to help the driver maintain the vehicle inside the lane.

■ Turning the LKA system on

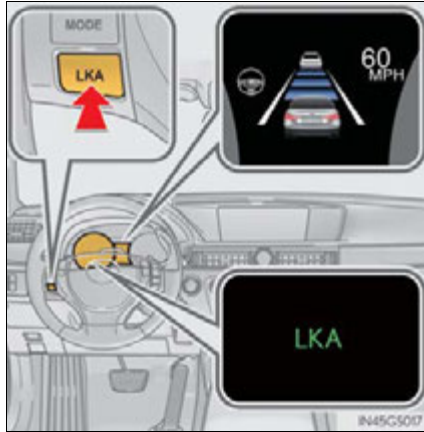

Press the "LKA" switch to activate the system.

 
"LKA" indicator will come on.

Press the switch again to turn the LKA system off.

The LKA system will revert to off each time the power switch is turned to ON mode.

■ Indication on the multi-information display

When the LKA system is on, the lane line display and steering wheel display are shown.

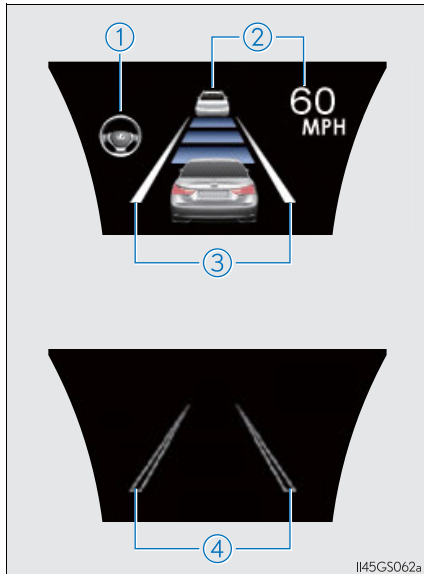

- ① Lane keeping assist function operation indication

Steering wheel displayed:

Indicates that the function is currently operating.

Steering wheel not displayed:

Indicates that the function is not currently operating.

- ② Dynamic radar cruise control display

- ③ Lane departure warning function indication (when the inside of the white line is white):

 
The function has recognized lane markers.

- ④ Lane departure warning function indication (when the inside of the white line is black):

A lane marker is not recognized by the system, or the LKA system functions are temporarily canceled.

Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

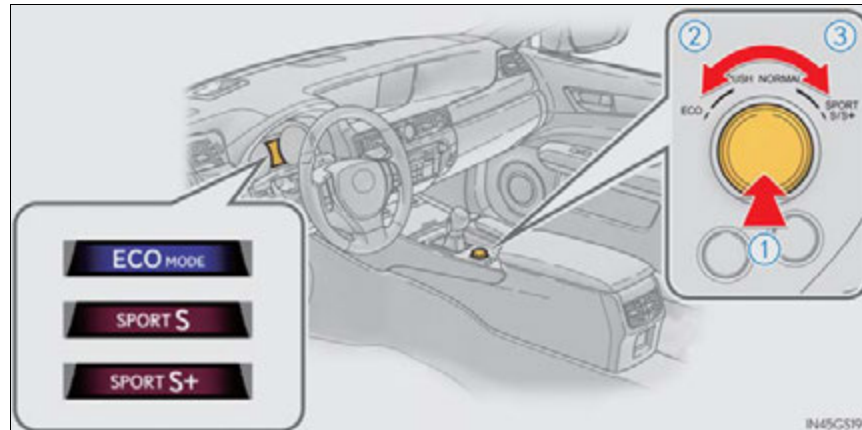

- ① Normal mode
For normal driving.
Press the switch to change the driving mode to normal mode when selected to Eco drive mode or sport mode.
- ② Eco drive mode
Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.
When not in Eco drive mode and the driving mode select switch is turned to the left, the "ECO MODE" indicator comes on in the multi-information display.
- ③ Sport mode
 - SPORT S mode
Assists acceleration response by controlling the hybrid system.
When not in SPORT S mode and the driving mode select switch is turned to the right, the "SPORT S" indicator comes on in the multi-information display, and the Hybrid System Indicator changes to the tachometer.
 - SPORT S+ mode
Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the hybrid system. Suitable for sporty driving.
When in SPORT S mode and the driving mode select switch is turned to the right, the "SPORT S+" indicator comes on in the multi-information display, and the Hybrid System Indicator changes to the tachometer.

Lexus Night View (if equipped)

Lexus night view is a system which assists with nighttime driving. Near-infrared rays are irradiated forward and an image converted from the irradiated light is shown on the Remote Touch screen. The image shows pedestrians, obstacles, and road conditions ahead of the vehicle, which are difficult to see at nighttime with the naked eye.

■ Displaying the Lexus night view

- 1 Turn the power switch to ON mode.
- 2 Turn the headlights on.



Press the Lexus night view switch.

The Lexus night view is displayed on the Remote Touch screen.

To return the screen to its previous state, press the switch again.

When the light sensor determines that it is currently night time from the brightness of the surrounding area, the Lexus night view can be operated by pressing the Lexus night view switch while the headlights are on.

■ The Lexus night view display

● When displaying on the main display



- ① Lexus night view screen
 - ② Side display switching button
 - ③ Brightness adjustment button
- When displaying on the side display



When another screen is displayed on the main display while the Lexus night view is being shown on the main display, the Lexus night view screen will be displayed on the side display.

- ① Lexus night view screen
- ② Main display switching button

Tire Pressure Warning System

 
Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

■ The tire inflation pressure display function (if equipped)



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

■ Initializing the tire pressure warning system

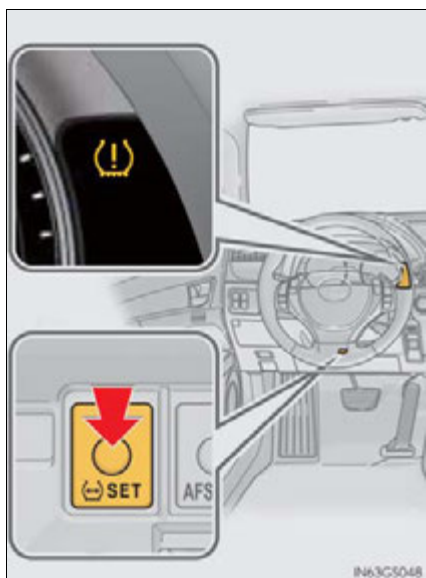


Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.
Refer to the "OWNER'S MANUAL" and "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

 Basic operation

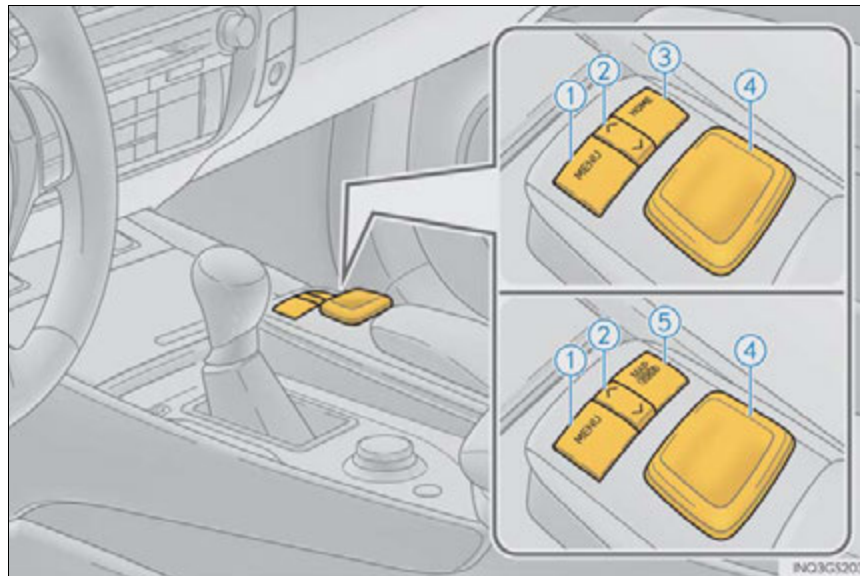

- ① "MENU" button
Press to display the "Menu" screen.
- ② "^•v" button
Press to change the scale of the map and to scroll the list screen.
- ③ "HOME" button (For 8-inch display)
Press to display the home screen.
- ④ Remote Touch knob
Move in the desired direction to select a function, letter and screen button.
Press to enter the selected function, letter or screen button.
- ⑤ "MAP/VOICE" button (For 12.3-inch display)
Press to repeat a voice guidance, cancel the screen scroll, start guidance, and display the current position.

Menu

► For 8-inch display



► For 12.3-inch display



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Climate" (→P.77)
- ② "Compass"
- ③ "Info"
- ④ "Radio" (→P.73)
- ⑤ "Media" (→P.71)
- ⑥ "Phone" (→P.66)
- ⑦ "Setup"
- ⑧ "Display"
- ⑨ "Destination" (→P.60)
- ⑩ "LEXUS App Suite"

■ Home (for 8-inch display)

► Three-way split screen



► Two-way split screen

 


Press the "HOME" button on the Remote Touch to display the home screen.

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth® connection
- ② Select to change the display items/area and the home screen layout.

■ Screen scroll operation

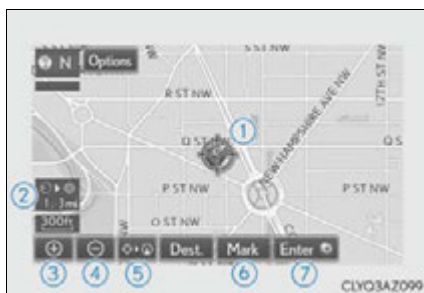

To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

 
- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

■ Setting a route

While route guidance is operating, you can change the route using the following method.



1 Select "Options".

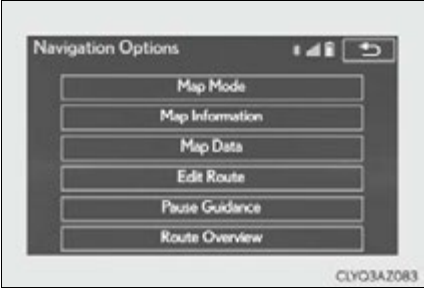

2 Select "Edit Route".



3 Select the item to be set.

- ① Set route preferences
- ② Set detours
- ③ Change route type
- ④ Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

12.3-inch Display (if equipped)

The 12.3-inch display has a display area which is 1.5 times wider than that of the 8-inch display.

■ Full screen display

The initial screen and "Menu" screen fill the entirety of the display area.

■ Split-screen display



Different information can be displayed on the left and right of the screen. For example, air conditioning system or audio screens can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

■ Selecting the operation screen

When selecting the side display, move the Remote Touch knob to the right until  is displayed at the boundary between the main display and the side display, and then move it further to the right. When selecting the main display, move the Remote Touch knob to the left until  is displayed at the boundary between the main display and the side display, and then move it further to the left.

■ Display the side display

► Basic screens

The following functions can be displayed and operated on the side display.



- ① Audio (→P.71)
- ② Air conditioning system (→P.77)
- ③ Vehicle information

► Interruption screens

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist (if equipped) (→P.46)
- Phone (→P.66)
- Destination Assist
- Driving mode (→P.50)
- Lexus night view (if equipped) (→P.51)

 
 
■ To display on the main display

Detailed information that is not shown on the side display can be set to display on the main display.

Select ,  or .

Navigation System

Register home

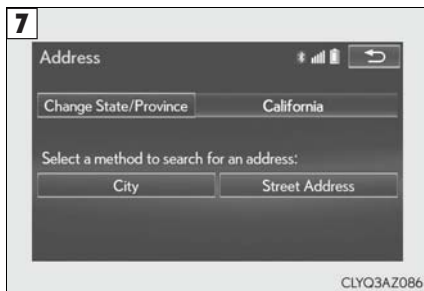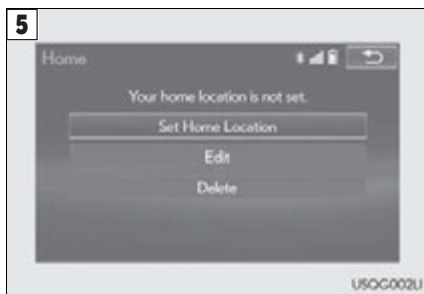

1 Press the "MENU" button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.

2 Select "Setup".

3 Select "Navigation".

4 Select "Home".

5 Select "Set Home Location".

6 Select "Address".

7 Select "City".

8 Enter a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.

10 Enter a street name and select "OK".

 
 
11 When the desired street name is found, select the corresponding screen button.

12 Enter a house number and select "OK".

13 Select "OK".

■ Destination input — Search by address

■ Select by city name

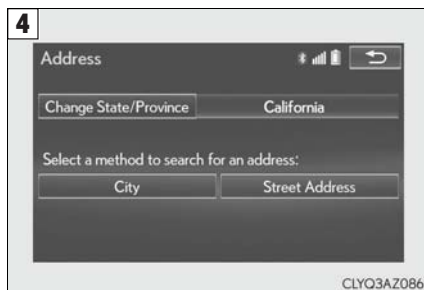

1 Press the “MENU” button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.

2 Select “Destination”.

3 Select “Address”.

4 Select “City”.

5 Enter a city name and select “OK”.

6 Select the screen button of the desired city name from the displayed list.

7 Enter a street name and select “OK”.

 
 
8 When the desired street name is found, select the corresponding screen button.

9 Enter a house number and select “OK”.

10 Select “Go”.

11 Select “OK”.

■ Select by street address

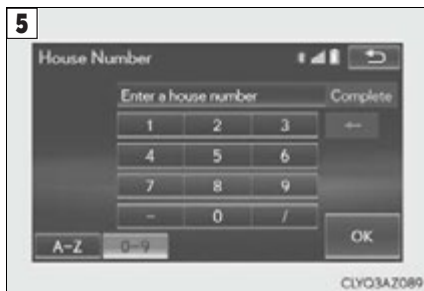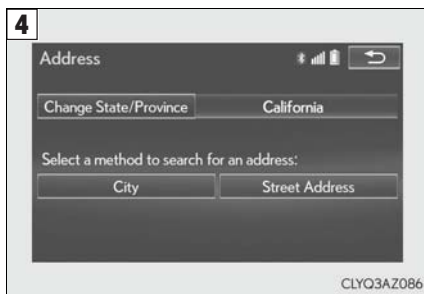

1 Press the "MENU" button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.

2 Select "Destination".

3 Select "Address".

4 Select "Street Address".

5 Enter a house number and select "OK".

6 Enter a street name and select "OK".

7 When the desired street name is found, select the corresponding screen button.

8 Enter a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.

10 Select "Go".

 
 
11 Select "OK".

■ Destination input——Search points of interest by name



- 1** Press the "MENU" button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.
- 2** Select "Destination".
- 3** Select "Point of Interest".
- 4** Select "Name".
- 5** Enter a POI name and select "OK".
- 6** Select the screen button of the desired POI.
- 7** Select "Go".
- 8** Select "OK".

■ Destination input — Search points of interest by category

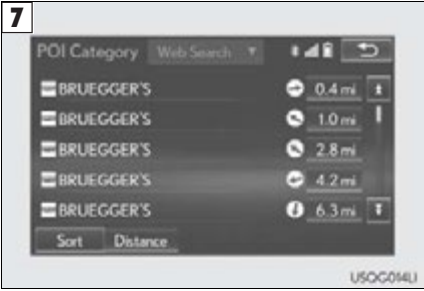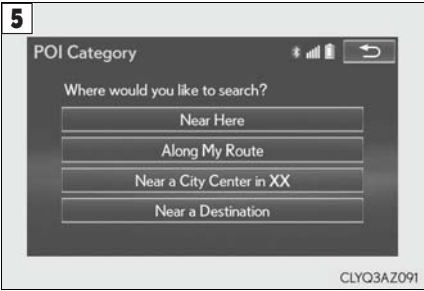

1 Press the “MENU” button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.

2 Select “Destination”.

3 Select “Point of Interest”.

4 Select “Category”.

5 Select “Near a Destination”.

6 Select the desired POI category from the displayed list.

7 Select the screen button of the desired POI.

8 Select “Go”.

9 Select “OK”.

■ Destination input—— Search points of interest by telephone number



- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.
- 2** Select “Destination”.
- 3** Select “Point of Interest”.
- 4** Select “Phone #”.
- 5** Enter a phone number and select “OK”.
- 6** Select “Go”.
- 7** Select “OK”.

Hands-free System For Cellular Phone

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.

To use a Bluetooth® phone, it is necessary to first register it in the system.



1 Press  on the steering wheel.

 
2 Select "Yes" or "OK".




3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

Refer to the cellular phone user's manual for cellular phone operation.

4 Register the Bluetooth® device using your Bluetooth® device.

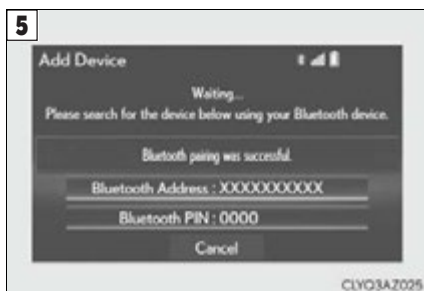


 5 Check that the following screen is displayed when registration is complete.

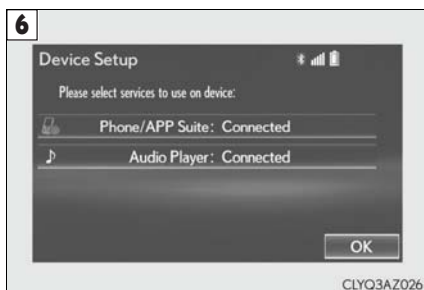

6 Select "OK" when the connection status changes from "Connecting" to "Connected".

 ■ Contacts transfer

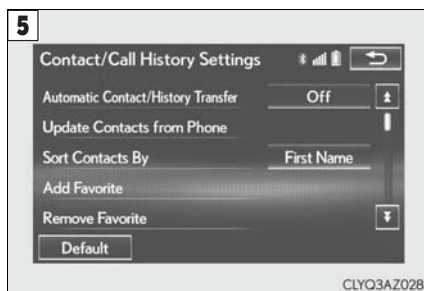

1 Press the "MENU" button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.

2 Select "Setup".

3 Select "Phone".

 
4 Select "Contact/Call History Settings".

5 Select "Update Contacts from Phone".

6 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.


■ Registering the contacts in the favorites list

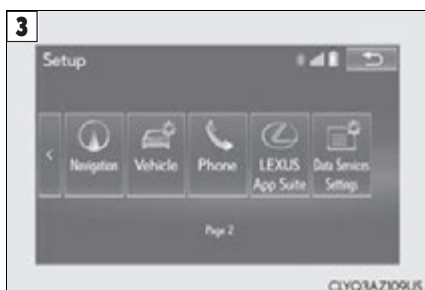

1 Press the “MENU” button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.

2 Select “Setup”.

 3 Select “Phone”.

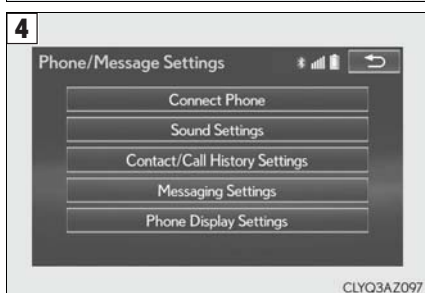

4 Select “Contact/Call History Settings”.



5 Select “Add Favorite”.

 


6 Select the desired contact to add to the favorites list.

7 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name (vehicles with navigation system)

You can call by giving a name registered in the contacts. For details, refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

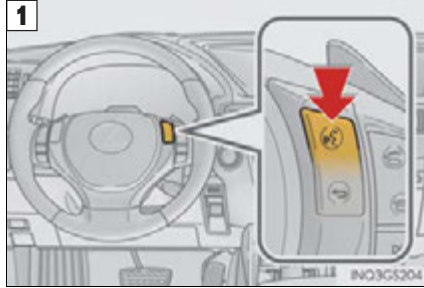


1 Press .

2 Say "Call <contacts> <phone types>".




: Pressing this switch turns the voice command system on. Say a command after the beep.

 ■ Calling by favorites list

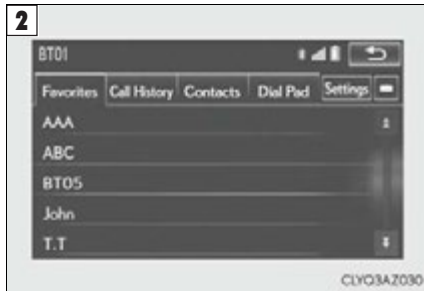

1 Press  on the steering wheel.

 
2 Select the "Favorites" tab and select the desired contact.



3 Select the desired number.

4 Check that the "Call" screen is displayed.

 
■ Calling using e-mail/SMS/MMS message

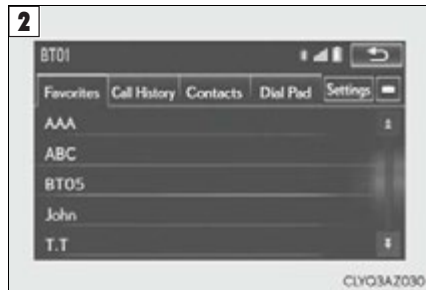

- 1 Press  on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the "Call" screen is displayed.

The tab display may vary depending on the type of cellular phone.

 
■ Receiving a call

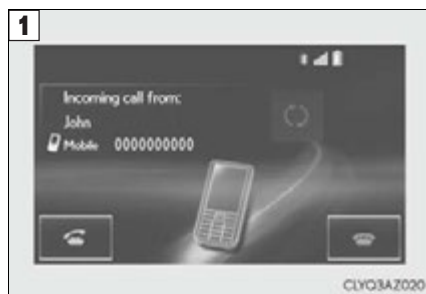

- 1 When a call is received, this screen is displayed with a sound.
- 2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

 ■ Steering switches

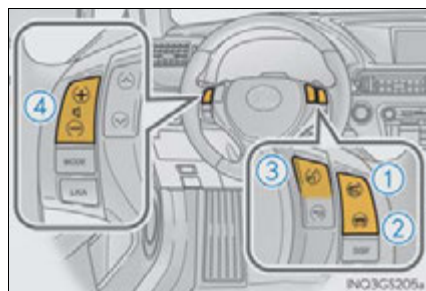

- ① Sending/Receiving/"Phone" screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

Audio System

Audio control screen

Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 54 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.

Side Display (vehicles with a navigation system)

 


Operations such as selecting a preset station or track are carried out on the screen.

- 1 Changing the audio sources
- 2 Station selector/selecting a track/file/chapter


Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

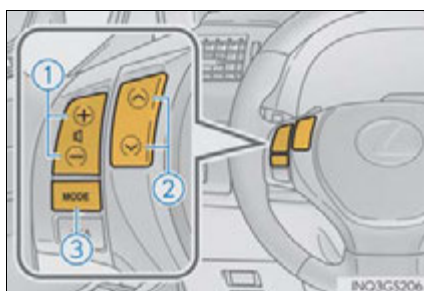

- 1 Radio mode: Selects a radio station
SAT mode: Selects a channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
USB mode: Selects a file/track
iPod mode: Selects a track/file
BT audio mode: Selects a track
- 2 Increases/decreases volume
- 3 Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

 ■ Basic operation

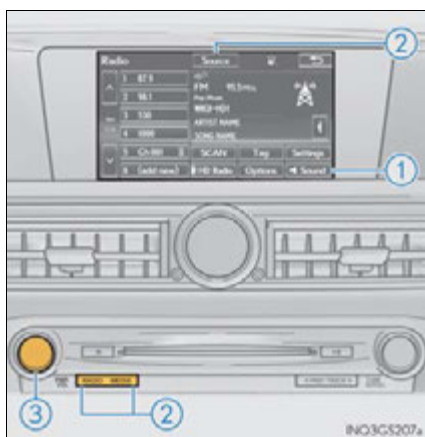

① Sound settings

② Audio sources

“RADIO” button:

AM: AM radio

FM: FM radio

SAT: Satellite radio ^{*1}

APPS (if equipped):

Internet radio broadcast

“MEDIA” button:

DISC: DVD player/CD player

iPod: iPod

USB: USB memory

Bluetooth ^{*2}: Bluetooth[®] audio

 
AUX: Auxiliary audio device

③ Power/Volume

^{*1}: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P.95)

^{*2}: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ Radio

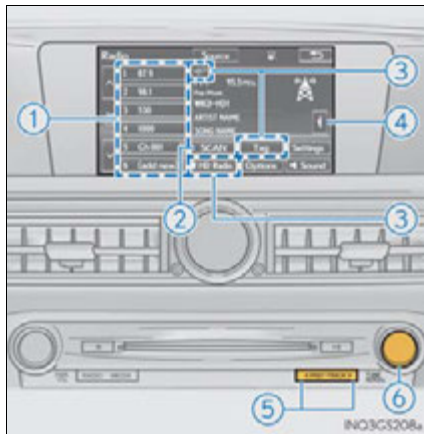

- ① Tuning to preset stations/channels
- ② Scanning for receivable stations
- ③ Using HD Radio™ Technology (for U.S.A., if equipped)
- ④ Cache radio operation buttons
- ⑤ Press: Selects a preset station
Press and hold: Seeks for a station
- ⑥ Adjusting the frequency

 
■ Entering station presets

- 1** Tune in the desired station.
- 2** Select "add new".
- 3** Select "Yes" on the confirmation screen.
- 4** Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


■ DVD player/CD player

■ Playing an audio CD

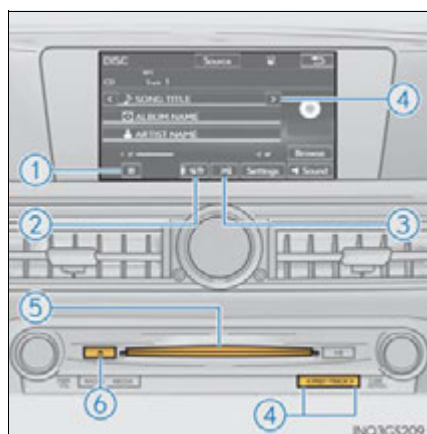


- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a track
- ⑤ Disc slot
- ⑥ CD eject

 ■ Playing a CD with MP3/WMA/AAC files

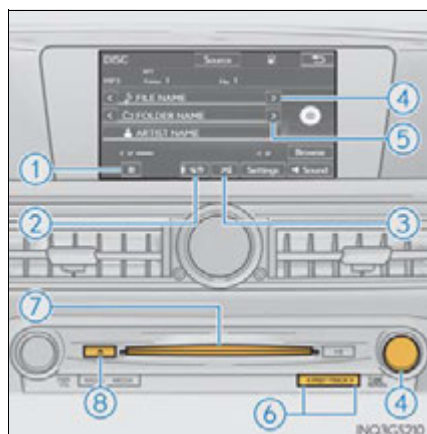

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a file
- ⑤ Selecting a folder
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Disc slot
- ⑧ CD eject

 ■ Playing a DVD

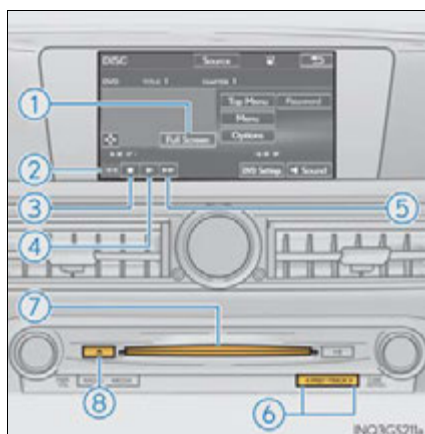

- ① Full screen/Expand
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Selecting a chapter
- ⑦ Disc slot
- ⑧ DVD eject

 
■ Operating an iPod

■ Playing an iPod audio



- ① Playback/pause
- ② Repeat playback
- ③ Selecting a play mode
- ④ Random playback
- ⑤ Selecting a track/fast forward/rewind

■ Playing an iPod video

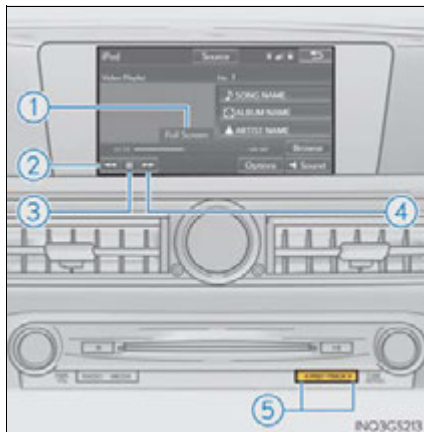

- ① Full screen/Expand
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

Front Air Conditioning System



■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

■ Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.
Press the "OFF" button to turn the fan off.

■ Changing the air flow mode

To change the airflow, press .

The air outlets used are switched each time the button is pressed.

■ Control screen

► Without rear air conditioning system



► With rear air conditioning system



① Adjust the left-hand side temperature setting

② Adjust the fan speed setting

③ Select the air flow mode



: Air flows to the upper body



: Air flows to the upper body and feet



: Air flows to the feet



: Air flows to the feet and the windshield defogger operates

④ Adjust the right-hand side temperature setting

⑤ Display the option control screen

⑥ Turn the fan off

⑦ Select to set automatic mode on/off

⑧ Display the rear air conditioning operation screen (if equipped) (→P.82)

■ Option control screen

Select **...** on the operation screen to display the option control screen. The functions can be switched on and off.

► Without rear air conditioning system



① Select to set cooling and dehumidification function on/off

② Vehicles without rear air conditioning system:

The temperature for the driver's and front passenger's seats can be adjusted separately (DUAL mode)

Vehicles with rear air conditioning system:

The temperature for the driver's, front passenger's and rear seats (→P.82) can be adjusted separately (3-ZONE mode)

③ Prevent ice from building up on the windshield and wiper blades (if equipped)

 
④ Remove pollen from the air (Pollen removal mode)

► With rear air conditioning system




■ Side display (if equipped)

► Without rear air conditioning system

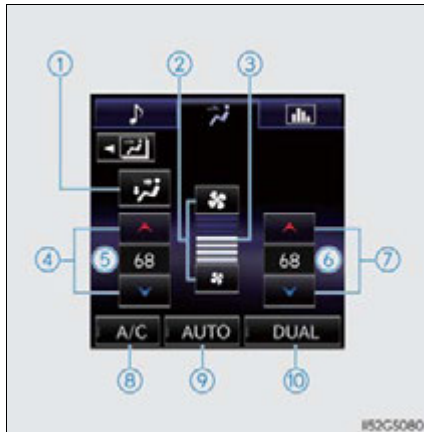

► With rear air conditioning system

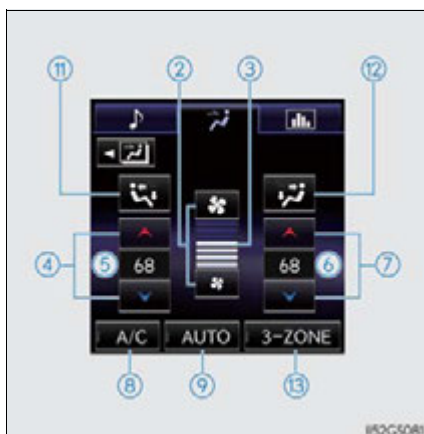 

- ① Front seat air outlet selector
- ② Fan speed control
- ③ Fan speed display
- ④ Left-hand front seat side temperature control
- ⑤ Left-hand front seat side temperature display
- ⑥ Right-hand front seat side temperature display
- ⑦ Right-hand front seat side temperature control
- ⑧ Cooling and dehumidification function on/off
- ⑨ Automatic mode
- ⑩ DUAL mode
- ⑪ Left-hand front seat side air outlet selector
- ⑫ Right-hand front seat side air outlet selector
- ⑬ 3-ZONE mode

■ Using the automatic mode

Select "AUTO" on the operation screen to turn on the airflow and adjust the temperature setting.

■ Adjusting the temperature for the driver's and front passenger's seats separately (DUAL mode) (vehicles without rear air conditioning system)

To turn on the DUAL mode, perform any of the following procedures:

- Select "DUAL" on the option control screen.
- Adjust the passenger's side temperature setting.

■ Adjusting the temperature for the driver's, front passenger's and rear seats separately (3-ZONE mode) (vehicles with rear air conditioning system)

To turn on the 3-ZONE mode, perform any of the following procedures:

- Select "3-ZONE" on the option control screen.
- Adjust the passenger's side or rear seats temperature setting.

■ Using the S-FLOW mode



Press the S-FLOW mode button to operate the system.

When the S-FLOW mode button is pressed, the airflow changes as follows.

Without rear air conditioning system:

 
Air flows to the front seats only.*

With rear air conditioning system:

Air flows to the front seats only, and if the passenger seat is unoccupied, the set temperature, outside humidity and temperature inside the cabin are assessed, and air flows to the driver seat only.*

*: Air may also flow to the rear seats depending on the situation.

Rear Air Conditioning System (if equipped)

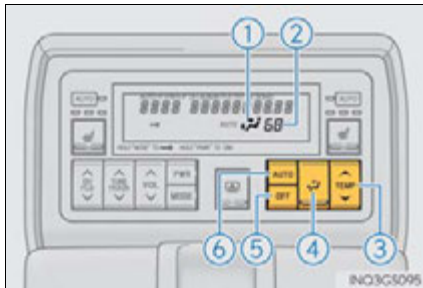

- ① Air outlet mode display
- ② Temperature display
- ③ Temperature control
- ④ Air outlet selector
- ⑤ Off
- ⑥ Automatic mode

Front controller



 
- ① Temperature control
- ② Off
- ③ Automatic mode
- ④ Disabling the switches on the rear arm-rest

Seat Heaters/Seat Ventilators

The seat can be warmed and air from the seat can improve ventilation.


Front seat heaters and ventilators/rear seat heaters (if equipped)

Front seats

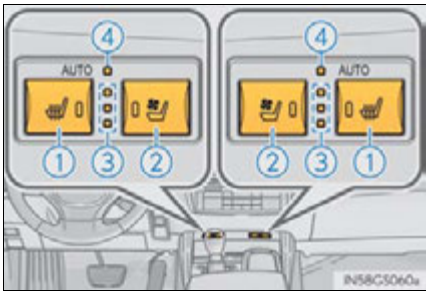

- ① Seat heater switches
The indicator light (yellow) on the switch comes on when the seat heater is operating.
- ② Seat ventilator switches (front seats only)
The indicator light (green) on the switch comes on when the seat ventilator is operating.
- ③ Level indicator lights
The seat heater temperature level or the seat ventilator fan speed level (for front seats only) is displayed.
- ④ "AUTO" indicator lights

 Rear seats

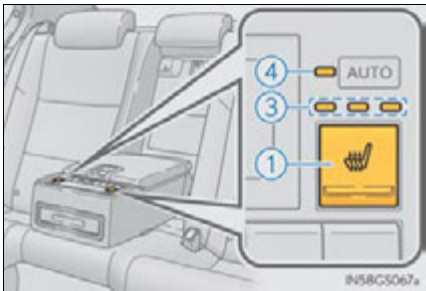

- Modes and indicators
The mode can be changed by pressing the switch.


Mode	"AUTO" indicator light	Level indicator lights
Off	Off	Off
Automatic*	On	3 to 1, or off
Hi	Off	3
Mid	Off	2
Lo	Off	1

*: When automatic mode is selected, the level automatically changes depending on the air conditioning settings.

If the driving mode select switch is switched to Eco drive mode in cold temperatures, the seat heater may be automatically operated to assist heating performance. (→P.50)

Voice Command System

 Basic operation

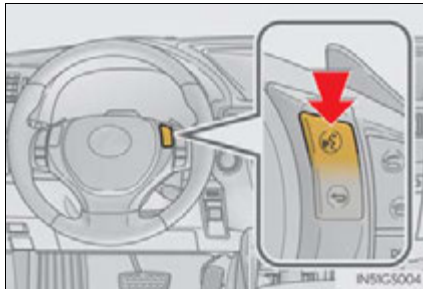

- 1** Press the talk switch.
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.
On the list screen, you can select the desired command.

Continue on to pages 85-88 for a detailed list of Voice Commands for the following categories:

Basic.....	P.85
Apps.....	P.85
Navi	P.85
Phone.....	P.86
Radio	P.86
Audio.....	P.87
Info	P.87
Other	P.88

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large  (TALK icon) will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.
- If a desired outcome is not shown, or if no selections are available, press  on the steering wheel to return to the previous screen.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

► Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

► Apps (vehicles with a navigation system) (if equipped)

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

► Navi (vehicles with a navigation system)

Command	Action
"Find <POI category>"	Displays a list of <POI category ^{*1} > near the current position ^{*2}
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Route Guidance"	Stops the route guidance
"Resume Route Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

► Audio

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album

► Info

Command	Action
"Destination Assist"*	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"*	Displays the Lexus insider list

*: Vehicles with a navigation system

► Other

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees ^{*1}
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth ^{*2} Audio"	Selects Bluetooth [®] audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

 
*1: Only within the possible temperature range of the air conditioning system

*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

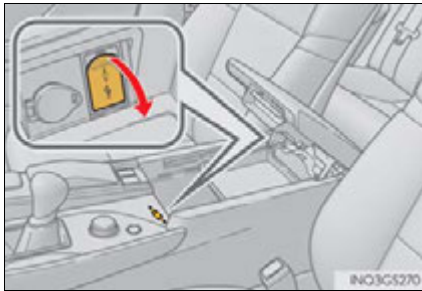

Open the console box, open the cover and connect the portable audio device.

 
Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].

■ Programming the HomeLink[®] (for U.S.A. owners)


The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

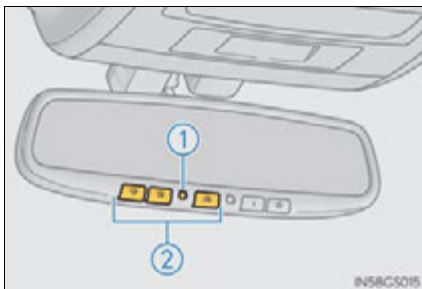

① Indicator light

② Buttons

 ■ Programming HomeLink®

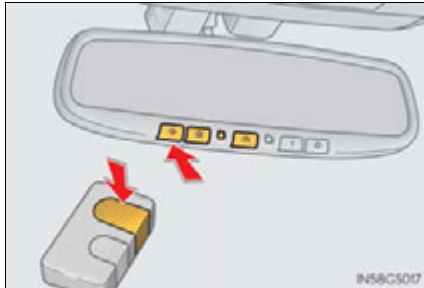

- 1** Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.
- 2** Press and hold down the desired HomeLink® button.
- 3** For U.S.A. owners:
While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.
For Canadian owners:
While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4** Press the training button on the motor-head unit in your garage.
- 5** Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.
If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

 
To program an entry gate, see the OWNER'S MANUAL.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®

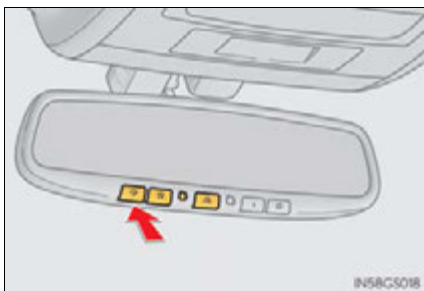


Press the appropriate HomeLink® button.
The indicator light should come on.

■ Lexus Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

 ■ System components

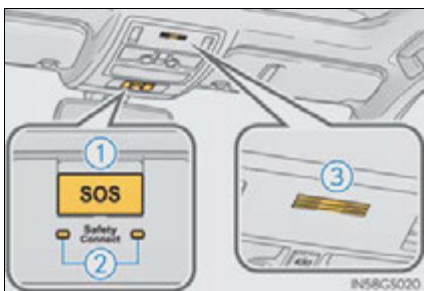

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform (for U.S.A., if equipped)

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

Function achieved by using a cellular phone (with navigation system)

Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● **LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system (with navigation system)

Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

- **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

- **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ Function achieved by using DCM

- **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P.91)

■ LEXUS Enform Remote

- **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to

<http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

- **Subscription**

→P.94



XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

■ Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit www.siriusxm.com or call 1-877-515-3987

► **Canadian Customers:**

 
Visit www.xmradio.ca or call 1-877-438-9677

Fuel Tank Cap


■ Before refueling the vehicle

- Close all the doors and windows, and turn the power switch off.
- Confirm the type of fuel.


■ Opening the fuel tank cap

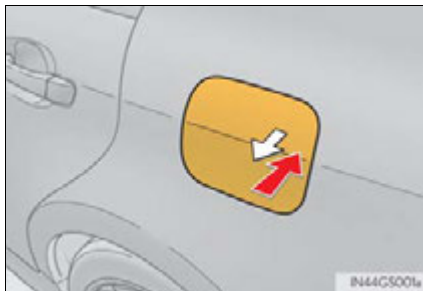

 - 1** With the doors unlocked, press the center of the rear edge of the fuel filler door. Push until you hear a click and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.

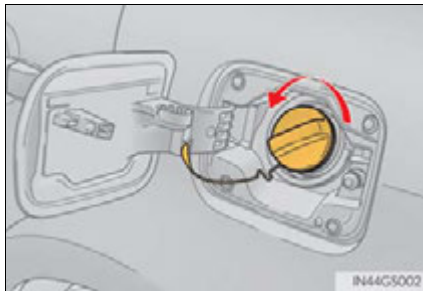

 - 2** Turn the fuel tank cap slowly to open.

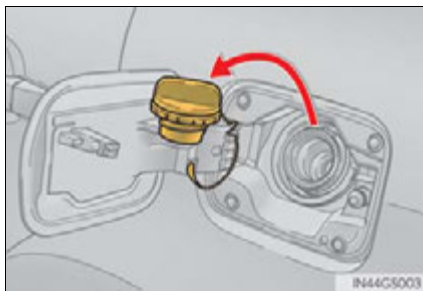

- 3** Hang the fuel tank cap on the back of the fuel filler door.

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

-  (U.S.A.)
Brake system warning light
-  (Canada)

Stop the vehicle immediately.

-  Charging system warning light

Have the vehicle inspected immediately.

- | | |
|--|--|
|  (U.S.A.)
Malfunction indicator lamp |  Slip indicator |
|  (Canada) |  (Flashes)
"AFS OFF" indicator (if equipped) |
|  SRS warning light |  (Flashes)
Brake hold operated indicator |
|  (U.S.A.)
ABS warning light |  (Flashes) (U.S.A.)
Parking brake indicator |
|  (Canada) |  (Flashes) (Canada) |
|  Electric power steering system warning light |  Brake system warning light |
|  (Flashes)
"PCS" warning light (if equipped) |  (Blinking and then continuously on)
Tire pressure warning light |

For further information, refer to the OWNER'S MANUAL.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



Tire pressure warning light *

(Illuminates
without
blinking)

 


Seat belt reminder light

For further information, refer to the OWNER'S MANUAL.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...


See the OWNER'S MANUAL		
	Turn signal indicator	 Intuitive parking assist indicator (if equipped)*
	Headlight indicator (U.S.A.)	 "AFS OFF" indicator (if equipped)
	Tail light indicator (Canada)	 Slip indicator (Flashes)
	Headlight high beam indicator	 VSC OFF indicator
	Front fog light indicator (if equipped)	 "PCS" warning light (if equipped) (Flashes faster)
	"READY" indicator	 Parking brake indicator (U.S.A.)
	EV indicator	 Parking brake indicator (Canada)
	Cruise control indicator	 Brake hold standby indicator
	Radar cruise control indicator (if equipped)	 Brake hold operated indicator
	Cruise control "SET" indicator	 BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)
	LKA (Lane-Keeping assist) indicator (if equipped)	 "AIR BAG ON/OFF" indicator
For further information, refer to the OWNER'S MANUAL.		

*: Refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL"

What to do if...

If the electronic key does not operate properly

 Unlocking and locking the doors

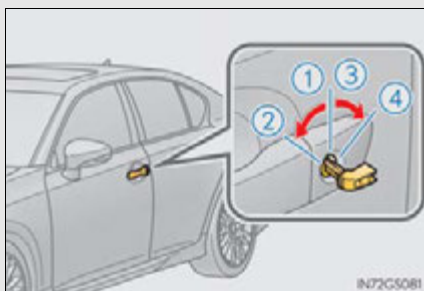


Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof* (turn and hold)
- ③ Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof* (turn and hold)

*: This setting must be customized at your Lexus dealer.

 
Unlocking the trunk

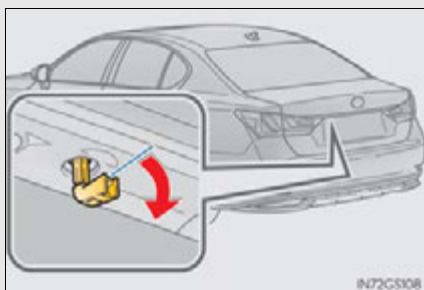

Turn the mechanical key clockwise to open.

What to do if...

 Starting the hybrid system

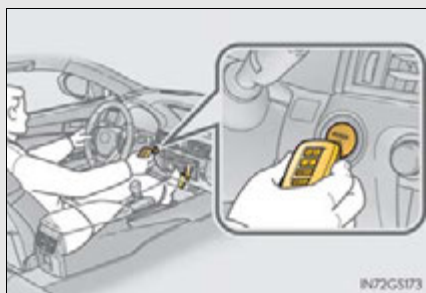

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch. The power switch will turn to ON mode. When the smart access system with push-button start is deactivated in customization setting, the power switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the power switch.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the OWNER'S MANUAL. If you need further assistance, contact your Lexus dealer.

If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.21)

If the hybrid system still does not start, see the OWNER'S MANUAL for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2014 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.