

 
Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

12.3-inch Display	48
ASC (Active Sound Control)	43
Audio System	
Audio control screen.....	57
Side Display (vehicles with navigation system)	57
Remote control (steering wheel switches).....	58
Basic operation.....	58
Radio	59
DVD player/CD player	59
Operating an iPod.....	61
Automatic High Beam	26
BSM (Blind Spot Monitor)	41
Cruise Control	37
Driving Mode Select Switch	40
Driving Position Memory	14
Dynamic Radar Cruise Control	33
Eco Driving Indicator	24
Engine (Ignition) Switch	16
Floor mat installation	11
Front Automatic Air Conditioning System	
Control panel	62
Control screen.....	63
Option control screen	64
Side display (vehicles with 12.3-inch display)	64
Using the automatic mode.....	65
Adjusting the temperature for the driver's and front passenger's seats separately (DUAL mode) (vehicles without rear air conditioning system)	65
Adjusting the temperature for the driver's, front passenger's and rear seats separately (3-ZONE mode) (vehicles with rear air conditioning system)	65
Using the S-FLOW mode	65
Front Seats	13
Fuel Tank Cap	83


Garage Door Opener	74
Hands-free System For Cellular Phone	
Bluetooth® phone pairing	53
Contacts transfer	54
Registering the contacts in the favorites list.....	55
Calling by name.....	55
Calling by favorites list.....	56
Calling the message sender	56
Receiving a call	56
Steering switches	56
Headlights	25
Head-up Display	23
Intuitive Parking Assist	39
LDA (Lane Departure Alert with steering control)	32
Lexus Enform	80
Lexus Enform Safety Connect	78
Multi-information Display	21
Navigation System	
Register home	49
Destination search - Search by address.....	50
Destination search - Search points of interest by name	51
Destination search - Search points of interest by category	52
Destination search - Search points of interest by phone number	52
Parking Brake	20
Portable Audio Device Ports	74
Rear Air Conditioning System	
Control panel.....	66
Front controller	66
Remote Touch	45


Seat Heaters/Seat Ventilators	67
Smart Access System with Push-button Start.....	12
Tire Pressure Warning System.....	42
Turn Signal Lever	19
TVD (Torque Vectoring Differential).....	44
Voice Command System	
Basic operation.....	69
Command list	70
Windshield Wipers and Washer.....	28
XM Satellite Radio.....	82



Overview

Instrument Panel

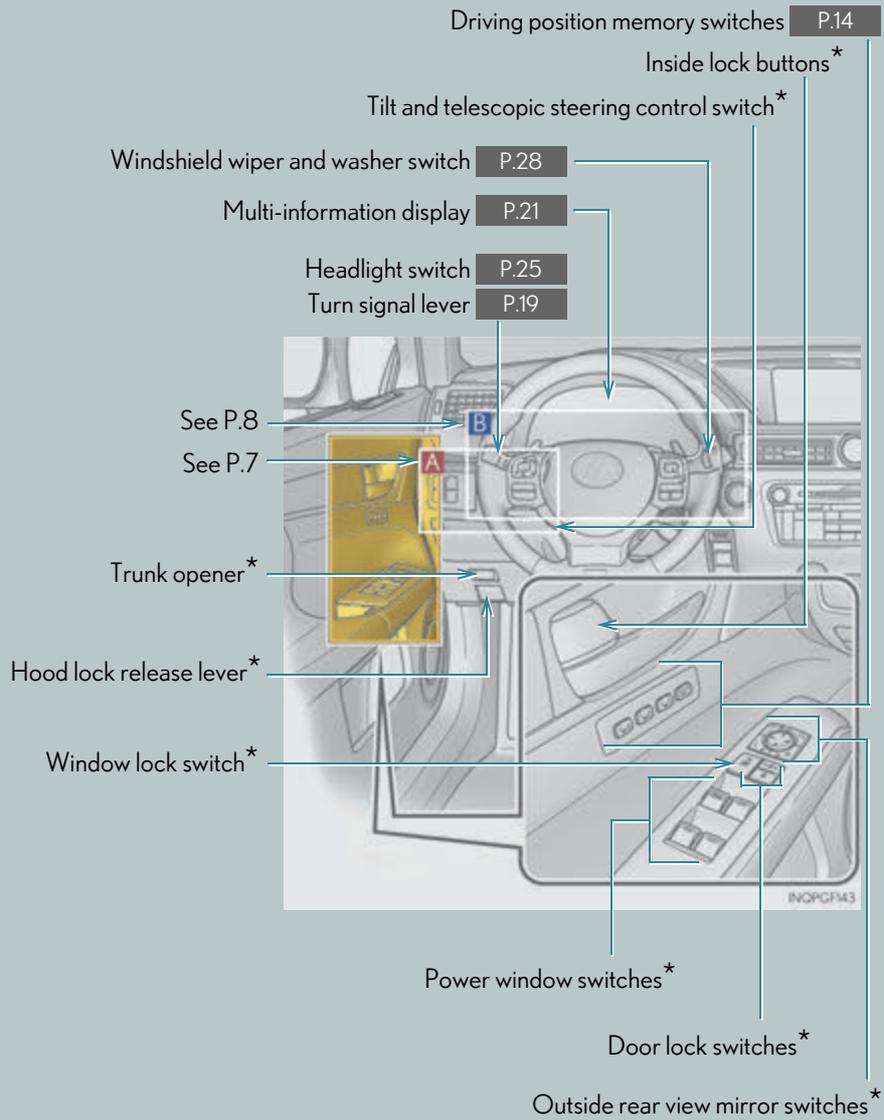

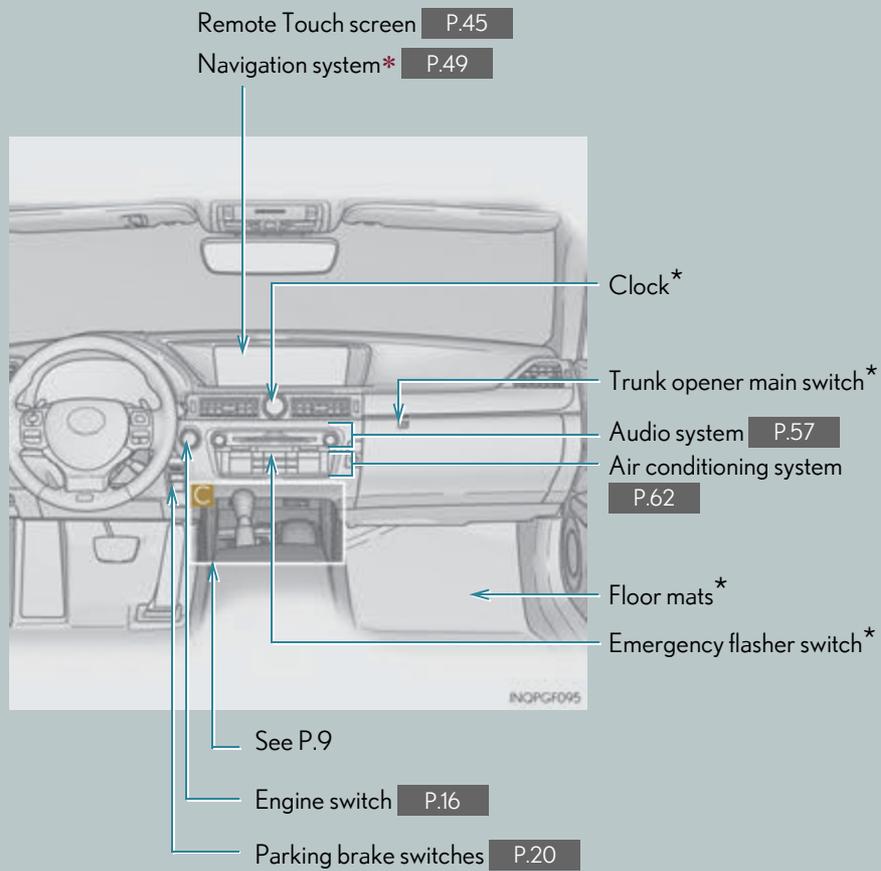


*: If equipped
 *: Refer to "OWNER'S MANUAL".

A

Odometer/trip meter and trip meter reset button*

Instrument panel light control switches*

VSC OFF switch*

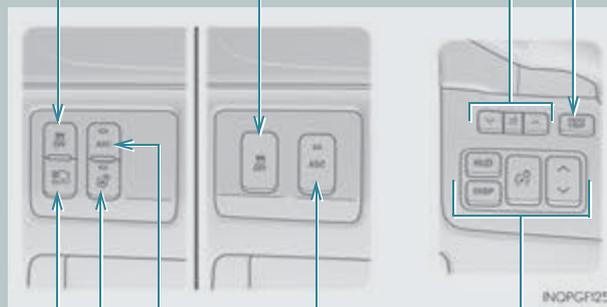


ASC switch P.43

Heated steering wheel switch**

HUD (Head-up display) switches* P.23

Automatic High Beam switch* P.26


B

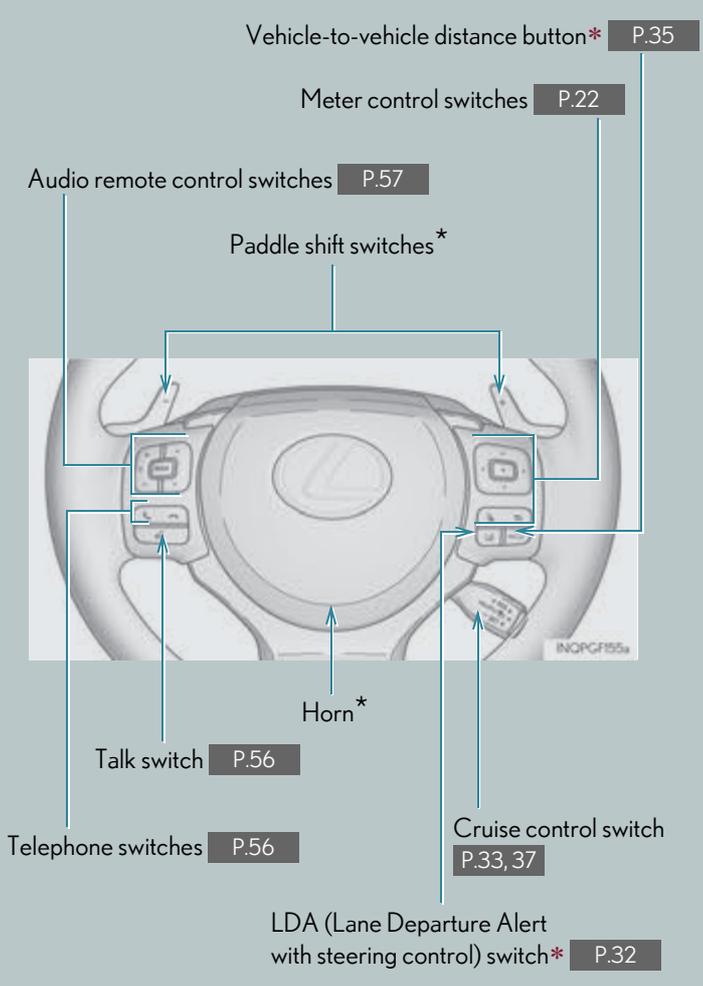

*: If equipped
*: Refer to "OWNER'S MANUAL".


Overview

Instrument Panel

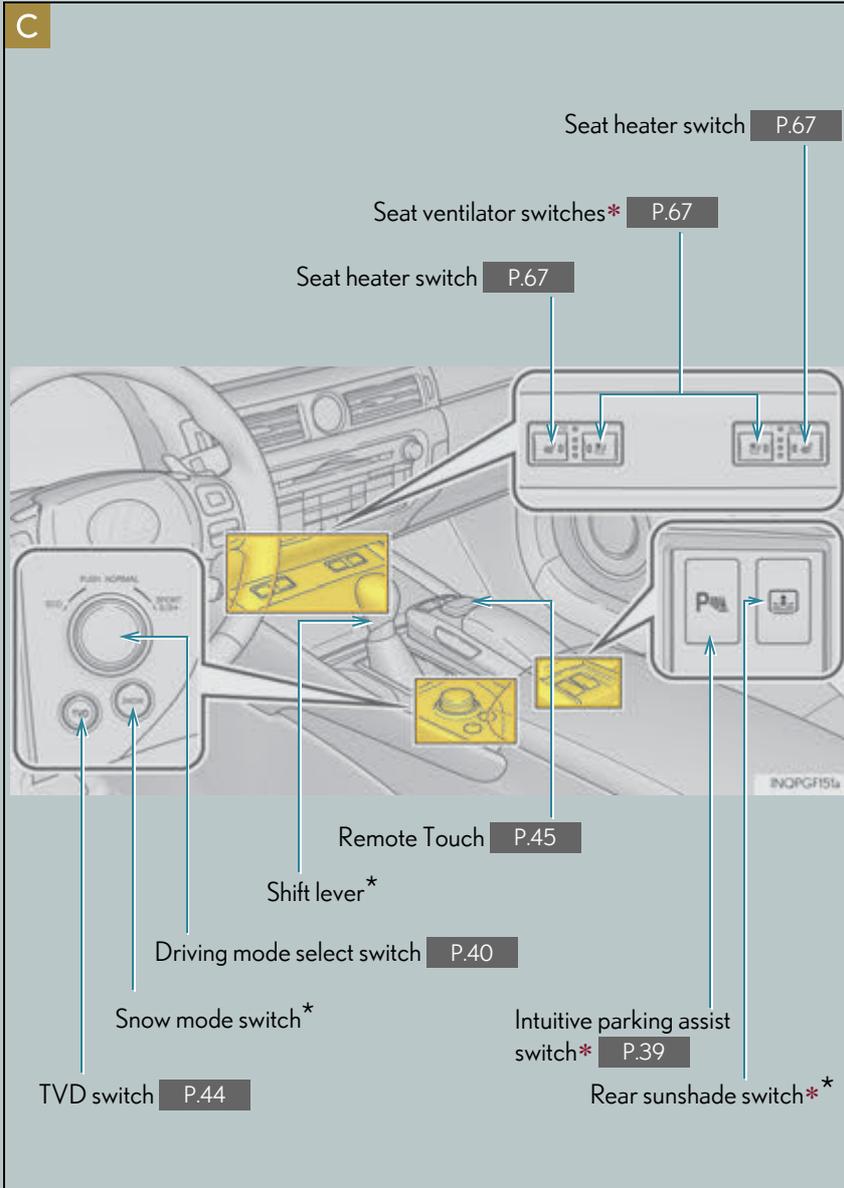

Overview

Roof

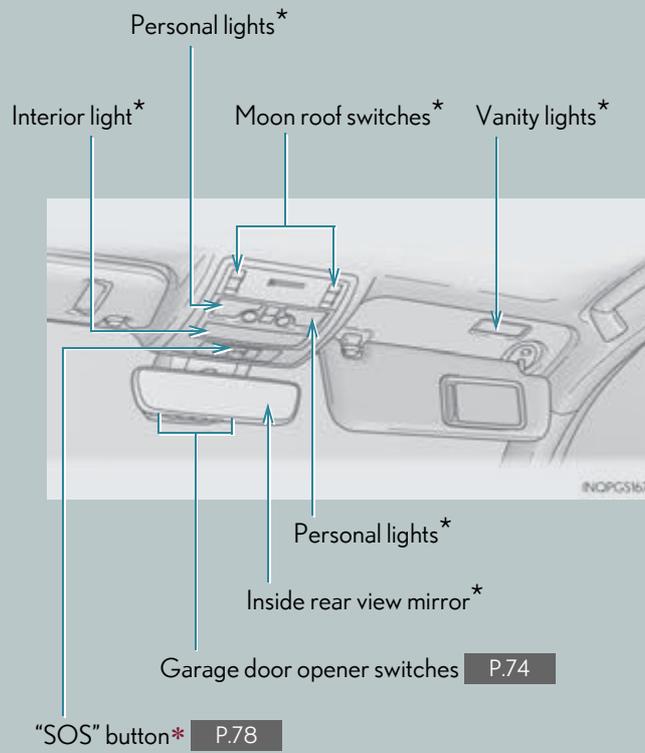


*: If equipped


*: Refer to "OWNER'S MANUAL".

Floor mat installation

 Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.



- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

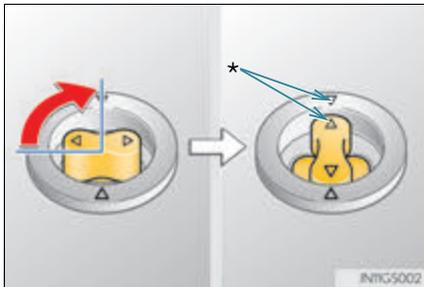

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the \triangle marks.

 
The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. The driver should always carry the electronic key.

For details on starting the engine, see page 16.

■ Entering and exiting the vehicle



- ① Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.*

Make sure to touch the sensor on the back of the handle.

 
The doors cannot be unlocked for 3 seconds after the doors are locked.

*: The door unlock settings can be changed.

- ② Touch the lock sensor (the indentation on the upper part of the door handle) to lock all the doors.

Check that the door is securely locked.

■ Opening the trunk



While carrying the electronic key, press the button.


When all the doors are unlocked with the power door lock system, the trunk can be opened without carrying the electronic key.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 88.

Front Seats

■ Adjustment procedure

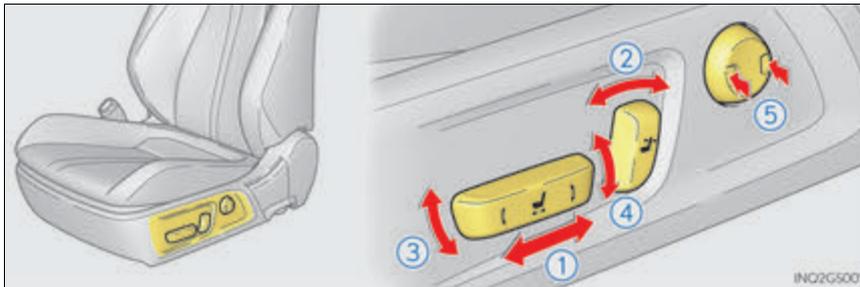

- ① Seat position adjustment switch
- ② Seatback angle adjustment switch
- ③ Seat cushion (front) angle adjustment switch
- ④ Vertical height adjustment switch
- ⑤ Lumbar support adjustment switch (if equipped)


Driving Position Memory

This feature automatically adjusts the front seats, steering wheel and outside rear view mirrors to make entering and exiting the vehicle easier or to suit your preferences.

■ Driving position memory

■ Recording procedure

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Adjust the driver's seat, steering wheel, outside rear view mirrors and HUD (head-up display) (if equipped) to the desired positions.

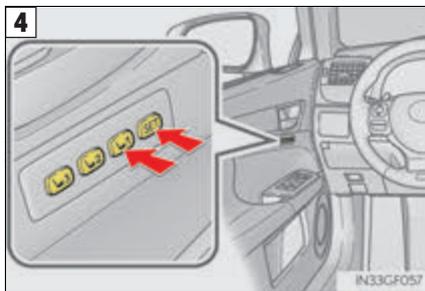


While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.

■ Recall procedure

 - 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.




Press one of the buttons for the driving position you want to recall until the buzzer sounds.

■ Memory recall function (driver's side only)

Each electronic key (including a card key) can be registered to recall your preferred driving position.

■ Registering procedure

- 1 Check that the shift lever is in P.
- 2 Turn the engine switch to IGNITION ON mode.
- 3 Recall the driving position that you want to record.

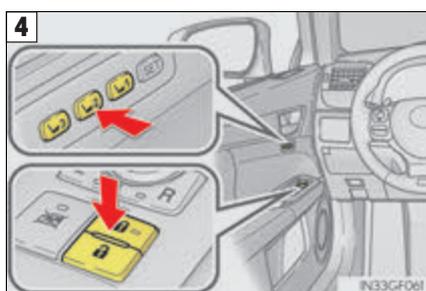


While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

Engine (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

Starting the engine

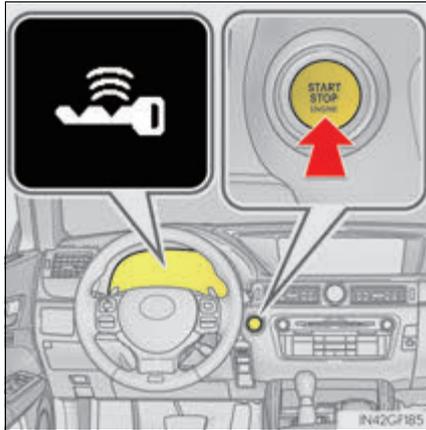

- 1** Press the parking brake switch to check that the parking brake is set. (→P.20)

Parking brake indicator will come on.

- 2** Check that the shift lever is set in P.

- 3** Firmly depress the brake pedal.



and a message will be displayed on the multi-information display. If it is not displayed, the engine cannot be started.

- 4** Press the engine switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.


Continue depressing the brake pedal until the engine is completely started. The engine can be started from any engine switch mode.

■ Stopping the engine

- 1 Stop the vehicle.
- 2 Shift the shift lever to P.
- 3 Set the parking brake. (→P.20)
- 4 Press the engine switch.
- 5 Release the brake pedal and check that "POWER ON" on the multi-information display is off.

■ Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

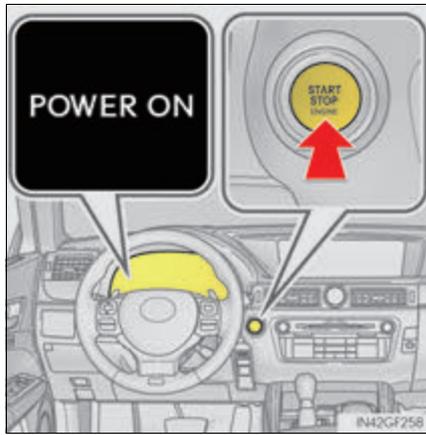

Off*

The emergency flashers can be used.
"POWER ON" will not be displayed on the multi-information display.

ACCESSORY mode

Some electrical components such as the audio system can be used.
"POWER ON" will be displayed on the multi-information display.

IGNITION ON mode

All electrical components can be used.
"POWER ON" will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

■ If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.
 - ▶ If the shift lever is shifted to N
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the engine.
 - ▶ If the shift lever cannot be shifted to N
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.




To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

Turn Signal Lever

The lever will return to its original position immediately after operation.

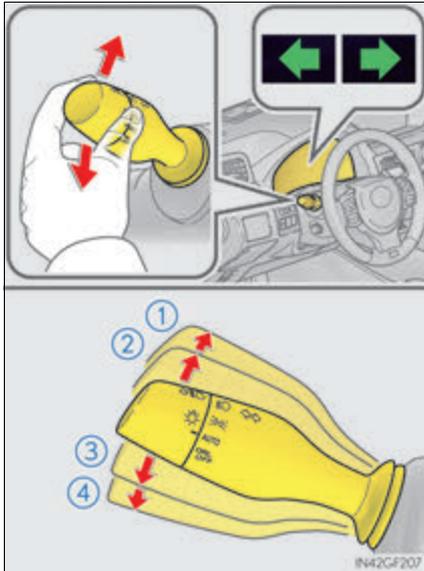


- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ **If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing**

Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.

Parking Brake

Manual mode

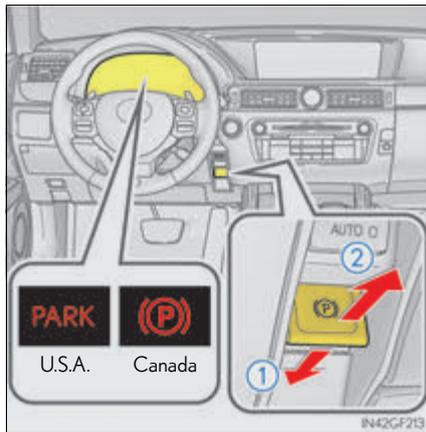

- ① Sets the parking brake
The parking brake indicator light will come on.
Press and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.
- ② Releases the parking brake
Operate the parking brake switch while depressing the brake pedal.
Make sure that the parking brake indicator light goes off.

Automatic mode

The parking brake is set or released automatically according to shift lever operation.



- Turns automatic mode on/off
- When the shift lever is moved out of P, the parking brake will be released.
 - When the shift lever is moved into P, the parking brake will be set.
- Operate the shift lever with the brake pedal depressed.

Multi-information Display

The multi-information display presents the driver with a variety of vehicle data.

■ Display content



Drive information

Select to display various drive data.



"F" content

Select to display the lap timer, G-force, torque distribution and other useful functions for sporty driving.



Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the meter using the meter control switches.



Driving assist system information

Select to display the cruise control or dynamic radar cruise control/ LDA (Lane Departure Alert with steering control) (if equipped) information, when the system is used. (→P. 32, 33, 37)



Warning message display


Select to display warning messages and measures to be taken if a malfunction is detected.



Settings display

Select to change the meter display settings.

■ Operating the meter control switches

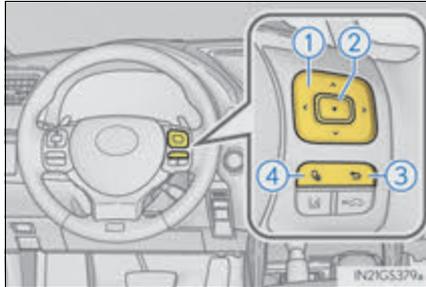

The multi-information display is operated using the meter control switches.

- ①   : Switch menu
  : Change displayed content, scroll up/down the screen and move the cursor up/down

- ② Press: Enter/Set
Press and hold: Reset

- ③ Return to the previous screen

- ④ Press: Displays the screen registered to 

When no screen has been registered, the drive information screen will be displayed.

Press and hold: Registers the currently displayed screen to 

When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Head-up Display (if equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.



- ① Head-up display
- ② “HUD” button
- ③ Display brightness adjustment switch
- ④ Display position adjustment switch
- ⑤ “DISP” button

■ Head-up display contents

- Vehicle speed
- Tachometer
- Shift position and shift range
- Head-up rev indicator
- Audio display*
- Route guidance display (vehicles with navigation system)
- Lexus Enform (if equipped)
- Lane departure warning display (LDA [Lane Departure Alert with steering control]) (if equipped)
- Approach warning display (dynamic radar cruise control) (if equipped)
- Pre-collision warning message (PCS [Pre-Collision System]) (if equipped)
- Speed limit display (vehicles with navigation system)

*: The default setting is off

Eco Driving Indicator




During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds the Zone of Eco driving, or when the vehicle is stopped, the light turns off.

Eco Driving Indicator will not operate under the following conditions:


- The shift lever is in any position other than D.
- A paddle shift switch is operated.
- Neither normal mode nor Eco drive mode is selected. (→P. 40)
- The vehicle speed is approximately 80 mph (130 km/h) or higher.

Headlights

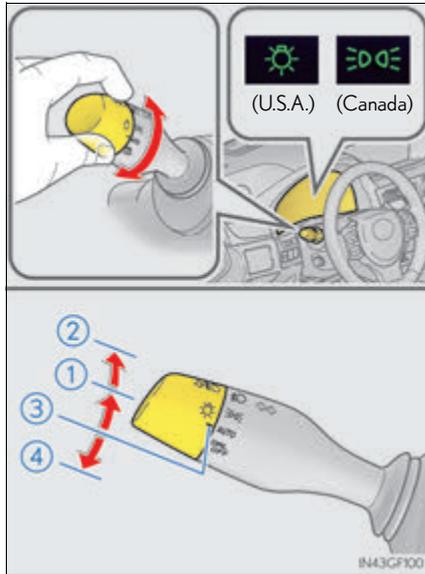

- ① The side marker, parking, tail, license plate and instrument panel lights turn on.
- ② The headlights and all lights listed above turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the engine switch is in IGNITION ON mode.)
- ④ **DRL OFF** Off
(U.S.A.)
○ The daytime running lights turn (Canada) on.

 ■ Turning on the high beam headlights




- ① With the headlights on, push the lever away from you to turn on the high beams.
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.


Automatic High Beam (if equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of vehicles ahead, etc., and automatically turns the high beam on or off as necessary.

■ Activating the Automatic High Beam system

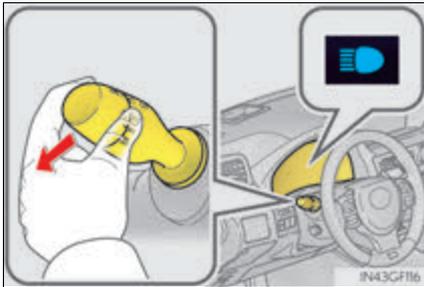

 
- 1** Push the lever away from you with the headlight switch in the **AUTO** or  position.



- 2** Press the Automatic High Beam switch.
The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

■ Turning the high beam on/off manually

■ Switching to low beam

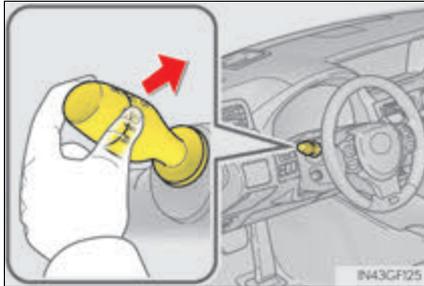


Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

■ Switching to high beam

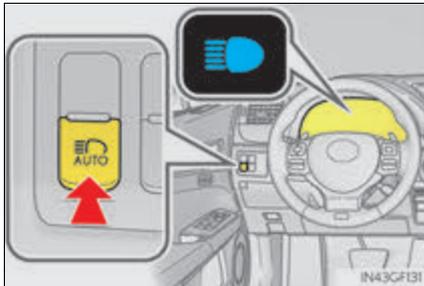

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

Windshield Wipers and Washer



The lever will return to its original position immediately after operation.

■ Intermittent wipers with interval adjuster



- ① **⬆ OFF** (U.S.A.) or **○** (Canada)
Move the lever up 2 levels
- ② **△** Move the lever up 1 level
- ③ **▼** (U.S.A.) or **▽** (Canada)
Move the lever down 1 level
- ④ **⬇ HI** (U.S.A.) or **⬇** (Canada)
Move the lever down 2 levels

Operation Status before operation	⬆ OFF or ○	△	▼ or ▽	⬇ HI or ⬇
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change

 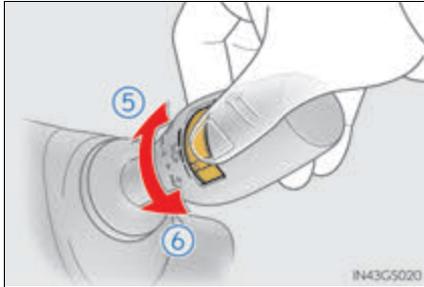


Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

- ⑦ Washer/wiper dual operation
Wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners:
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

Rain-sensing windshield wipers

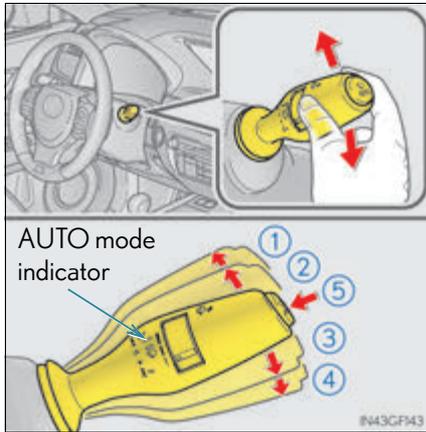


- ① **OFF** (U.S.A.) or **○** (Canada)
Move the lever up 2 levels
- ② **△** Move the lever up 1 level
- ③ **▼** (U.S.A.) or **▽** (Canada)
Move the lever down 1 level
- ④ **HI** (U.S.A.) or **HI** (Canada)
Move the lever down 2 levels
- ⑤ **AUTO** AUTO mode on/off switch

With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed. AUTO mode indicator will turn on when AUTO mode is selected.

Status before operation \ Operation		OFF or ○	△	▼ or ▽	HI or HI
		Off	Temporary operation	Temporary operation	Low speed operation
Low speed operation	Off	Off	High speed operation	High speed operation	
High speed operation	Off	Low speed operation	No change	No change	
AUTO mode	Intermittent operation	Off	Temporary operation ^{*1}	Low speed operation ^{*2}	High speed operation ^{*2}
	Continuously		No change		


*1: After temporary operation, the mode will return to AUTO mode.

*2: AUTO mode will be canceled.

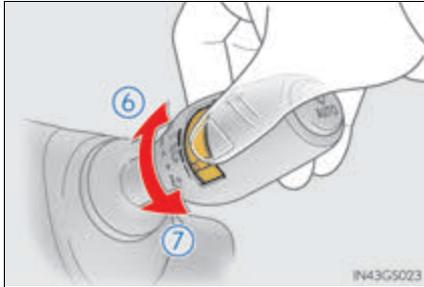

When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

 - ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity



- ⑧ Washer/wiper dual operation
Wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners:
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

LDA (Lane Departure Alert with steering control) (if equipped)

When driving on highways and freeways with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the front windshield.

Turning LDA system on



Press the LDA switch to turn the LDA system on.


The LDA indicator illuminates and a message is displayed on the multi-information display.

Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.


Dynamic Radar Cruise Control (if equipped)

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed. Use the dynamic radar cruise control on freeways and highways.

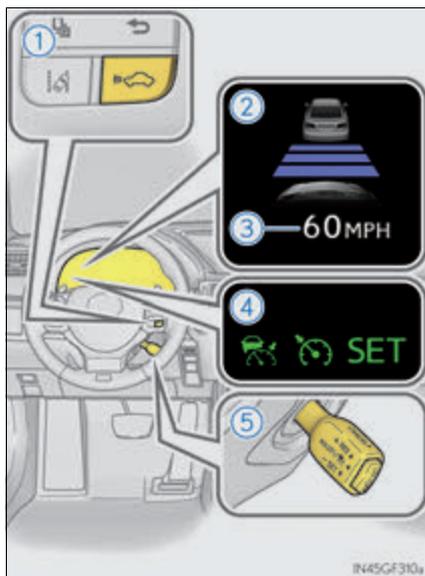

- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)

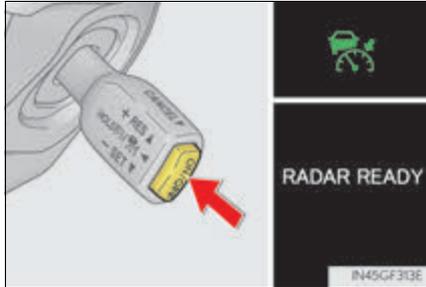


- 1** Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

 If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode.




- 2** Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

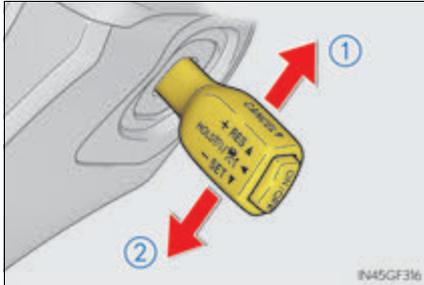


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

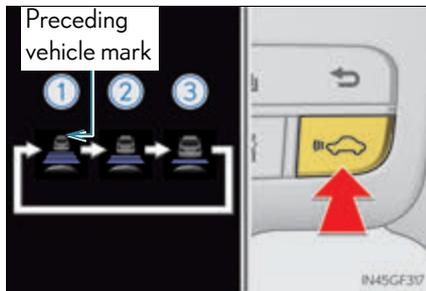

Pressing the button changes the vehicle-to-vehicle distance as follows:

① Long


② Medium

③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.


If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

■ Canceling and resuming the speed control

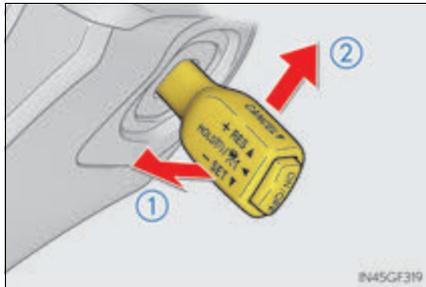


- 1 Pulling the lever toward you cancels the speed control.
The speed control is also canceled when the brake pedal is depressed.
- 2 Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.
However, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.

■ Selecting constant speed control mode

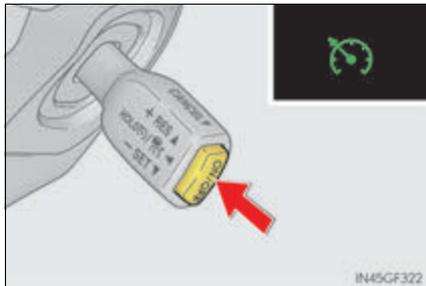


- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.
Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.
Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

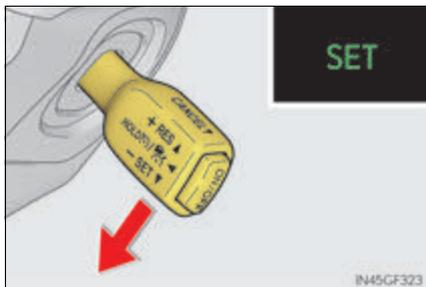

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed.
Cruise control "SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.


Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

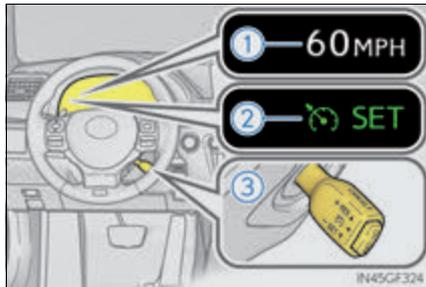


- ① Set speed
- ② Indicators
- ③ Cruise control switch

Setting the vehicle speed

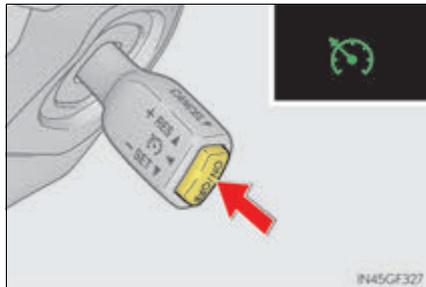


 - 1** Press the "ON/OFF" button to activate the cruise control.
Cruise control indicator will come on.
Press the button again to deactivate the cruise control.




- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
Cruise control "SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

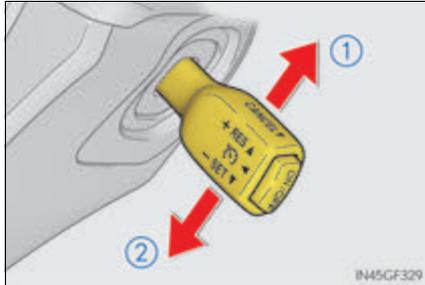

- ① Increases the speed
 - ② Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

 ■ Canceling and resuming the constant speed control




- ① Pulling the lever toward you cancels the constant speed control. The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Remote Touch screen and a buzzer. Always check the surrounding area when using this system.

■ Turning the system on and off

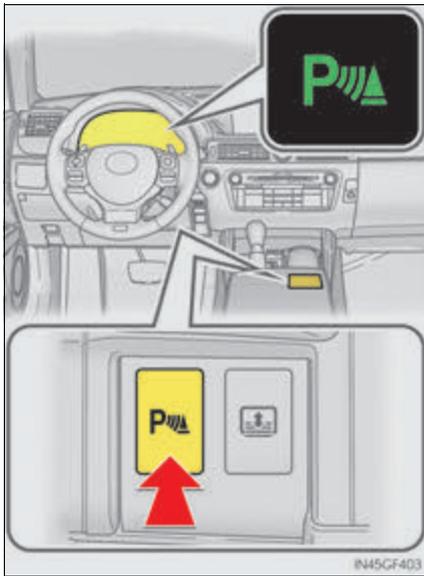


Turns the intuitive parking assist on/off

When on, the indicator light comes on to inform the driver that the system is operational.

Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

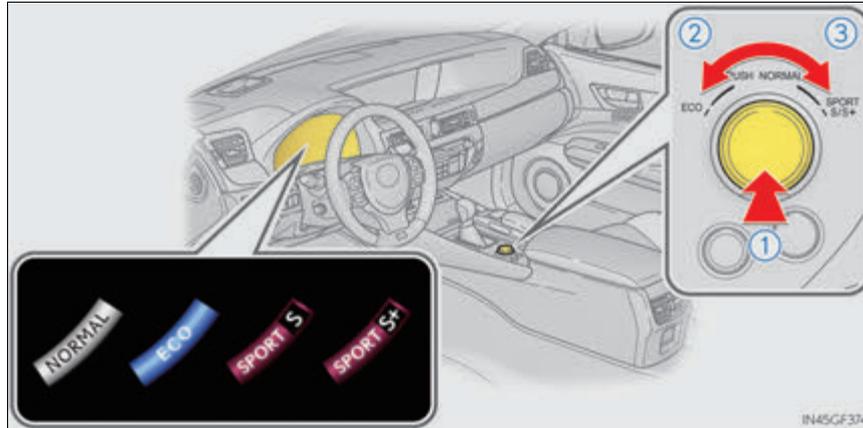


- ① Normal mode
For normal driving.
Press the switch to change the driving mode to normal mode when Eco drive mode or sport mode is selected. The normal mode indicator comes on in the meter.
- ② Eco drive mode
Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.
When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator comes on in the meter.
- ③ Sport mode
 - SPORT S mode
Assists acceleration response by controlling the transmission and engine.
When not in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S" indicator comes on in the meter.
 - SPORT S+ mode
Provides earlier downshift timing than SPORT S mode in order to maintain a high engine speed and provides faster gear changes. This mode also changes the steering feel and VDIM control, making it suitable for powerful sporty driving.
When in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S+" indicator comes on in the meter.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function
Assists the driver when backing up

These functions use same sensors.

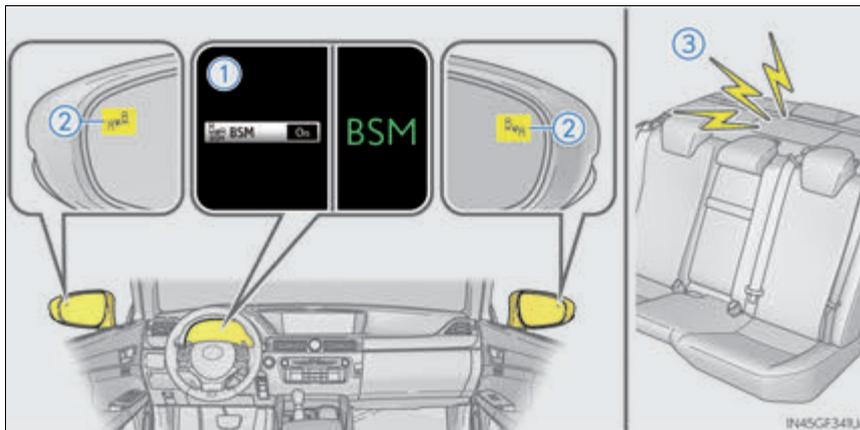

- ① Switching the BSM function
The Blind Spot Monitor function and Rear Cross Traffic Alert function can be switched on and off using the multi-information display.
When switched on, the BSM indicator illuminates on the meter and the buzzer sounds.
- ② Outside rear view mirror indicators
Blind Spot Monitor function:
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.
Rear Cross Traffic Alert function:
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire inflation pressure display function




The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

The illustration used is intended as an example, and may differ from the image that is actually displayed on the multi-information display.

Initializing the tire pressure warning system

- 1 Turn the engine switch to IGNITION ON mode.
- 2 Press **<** or **>** on the meter control switch and select .
- 3 Press **^** or **v** on the meter control switch and select "Vehicle Settings". Then press .

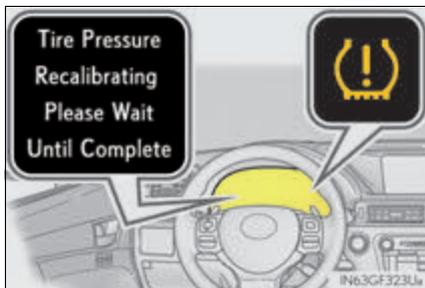


- 4 Press **^** or **v** on the meter control switch and select "TPMS". Then press and hold  until a message is displayed.

The message will be displayed on the meter and the tire pressure warning light will blink slowly 3 times.

When the message disappears, initialization is complete.

ASC (Active Sound Control)

The ASC system directs certain sounds from the front and rear of the cabin to the vehicle interior, and harmonizes these sounds with the actual sound of the engine and exhaust in order to allow the driver to feel acceleration and the state of the engine more strongly.

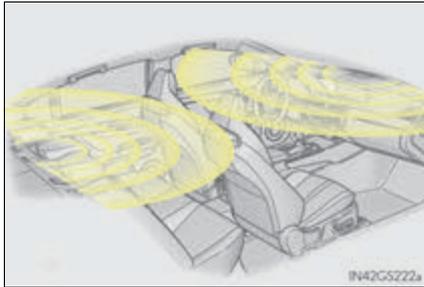


The ASC system can be operated when the driving mode select switch is in sport mode.

SPORT S mode: Sounds are output from the rear.

SPORT S+ mode: Sounds are output from the front and rear.

Disabling the ASC system

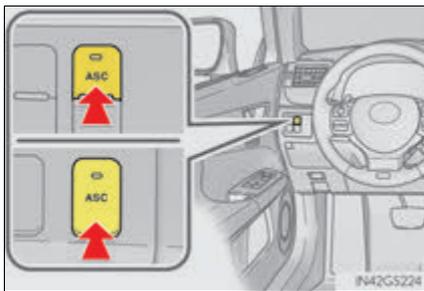

Press the ASC switch.

The indicator on switch will turn off.


Press the switch again to turn the system back on.

Even if the indicator is illuminated, when the driving mode select switch is in Normal or Eco drive mode, ASC does not operate.

TVD (Torque Vectoring Differential)

The TVD system distributes driving force (torque) between the right and left rear wheels automatically. This system contributes to enhanced steering response while cornering and increased traction when exiting a corner, providing an agile driving experience.

■ Changing TVD control modes

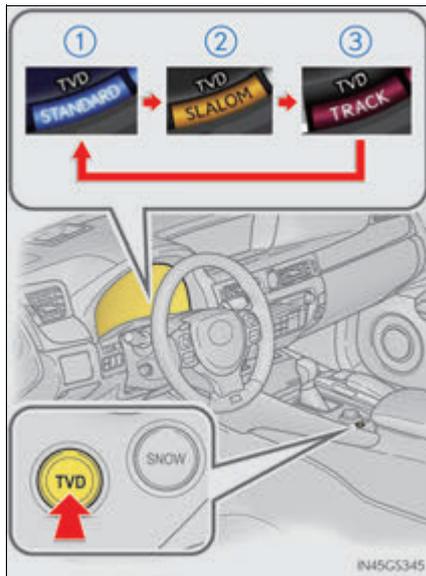

With the engine switch in IGNITION ON mode, pressing the TVD switch changes the TVD control mode.


The current TVD control mode will be displayed on the meters.

- ① STANDARD mode
This is the default mode and provides an optimum balance of driving agility and stability.
- ② SLALOM mode
This mode emphasizes enhanced steering response.
- ③ TRACK mode
This mode emphasizes stability for high speed sporty driving.

Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.

Basic operation

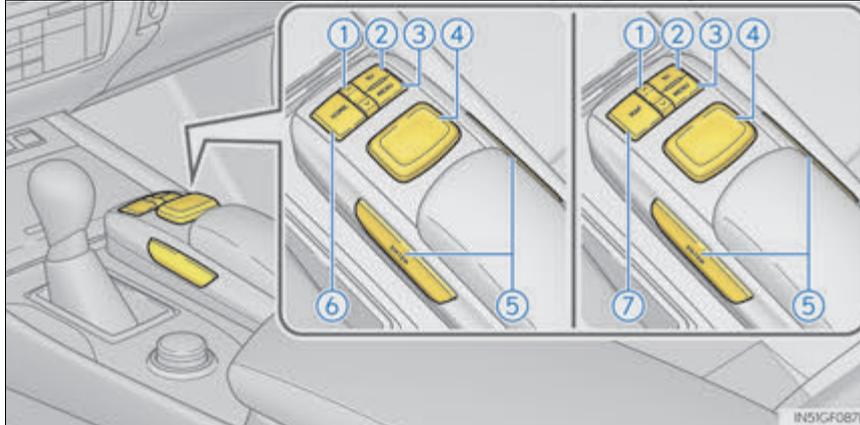

- ① “∧•∨” button
Press this button to change map scale and scroll through lists.
- ② Back button
Press this button to display the previous screen.
- ③ “MENU” button
Press this button to display the “Menu” screen.
- ④ Remote Touch knob
Move in the desired direction to select a function, letter and screen button.
Press the knob to enter the selected function, letter or screen button.
- ⑤ “ENTER” buttons
Press this button to enter the selected function, letter or screen button.
- ⑥ “HOME” button (vehicles with 8-inch display)
Press this button to display the home screen.
- ⑦ “MAP” button (vehicles with 12.3-inch display)
Press this button to display the vehicle’s current position.

■ “Menu” screen

Press the “MENU” button on the Remote Touch to display the “Menu” screen.

The display may differ depending on the type of the system.

12.3-inch display: When an interruption screen is being displayed on the side display, the “Menu” screen will be shown on the main display.

▶ Vehicles with 8-inch display



- ① “Destination” (→P.50)
- ② “Radio” (→P.59)
- ③ “Media” (→P.59)
- ④ “Phone” (→P.53)
- ⑤ “LEXUS App Suite”

▶ Vehicles with 12.3-inch display



- ⑥ “Info”
- ⑦ “Climate” (→P.62)
- ⑧ “Setup”
- ⑨ “Display” (→P.46)
- ⑩ “Compass”

 
■ Display



Press the “MENU” button on the Remote Touch and select “Display” on the “Menu” screen.

- ① Turns the screen off
- ② Turns day mode on/off
- ③ Adjust the screen display
- ④ Adjust the camera display

Screen scroll operation



To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Register as a memory point
- ④ Set as a destination

Setting a route

While route guidance is operating, you can change the route using the following method.



1 Select .

2 Select "Edit Route".

3 Select the item to be set.

- ① Adding destinations
- ② Deleting destinations
- ③ Reordering destinations
- ④ Route preferences
- ⑤ Route type
- ⑥ Detour setting
- ⑦ Starting from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

12.3-inch Display (if equipped)

Full screen display

The following functions can be displayed full screen:

- Initial screen
- Map screen
- "Menu" screen (→P.46)

Split-screen display



Different information can be displayed on the left and right of the screen. For example, air conditioning system screen can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

- ① Main display
- ② Side display

Display the side display

Basic screens

The following functions can be displayed and operated on the side display.



- ① Navigation system
- ② Audio (→P.57)
- ③ Phone
- ④ Vehicle information
- ⑤ Air conditioning system (→P.62)

 
 

Interruption screens

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist (if equipped) (→P.39)
- Phone (→P.53)
- Destination Assist
- Driving mode (→P.40)

Navigation System (if equipped)

Register home

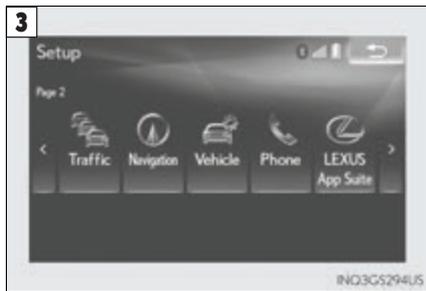

1 Press the "MENU" button on the Remote Touch.

Please refer to page 45 for the Remote Touch operation.

2 Select "Setup".

3 Select "Navigation".

4 Select "Home".

5 Select "Set Home Location".

6 Select "Address".

7 Select "City".

8 Enter a city name and select "OK".

9 Select the desired city name.

10 Enter a street name and select "OK".

11 Select the desired street name.

12 Enter a house number and select "OK".

13 Select "Enter".

14 Select "OK".

■ Destination search

 
■ Search by address



3

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Address".


► Search by city



4

- 4 Select "City".
- 5 Enter a city name and select "OK".
- 6 Select the desired city name.
- 7 Enter a street name and select "OK".
- 8 Select the desired street name.
- 9 Enter a house number and select "OK".
- 10 Select "Go".
- 11 Select "OK".

 ► Search by street address



4

- 4 Select "Street Address".
- 5 Enter a house number and select "OK".
- 6 Enter a street name and select "OK".
- 7 Select the desired street name.
- 8 Enter a city name and select "OK".
- 9 Select the desired city name.
- 10 Select "Go".
- 11 Select "OK".

■ Search by point of interest

 


1 Press the “MENU” button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.

2 Select “Destination”.


3 Select “Point of Interest”.

▶ Search by name



4 Select “Name”.

 5 Enter a POI name and select “OK”.




6 Select the desired POI.


7 Select “Go”.

8 Select “OK”.

 ► Search by category




4 Select "Category".

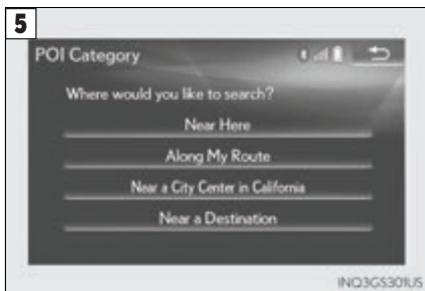

- 5 Select the desired search point.
- 6 Select the desired POI category.
- 7 Select the desired POI.
- 8 Select "Go".
- 9 Select "OK".

 ► Search by phone number




- 4 Select "Phone #".
- 5 Enter a phone number and select "OK".
- 6 Select "Go".
- 7 Select "OK".

Hands-free System For Cellular Phone



Bluetooth® phone pairing

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.

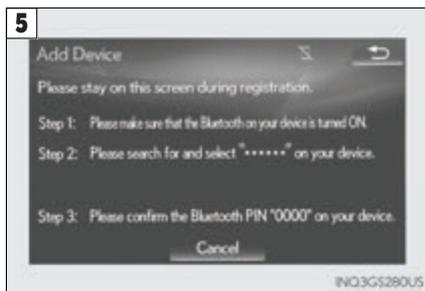

- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
- 3 Select "Phone".
- 4 Select "Yes" to register a phone.
- 5 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.
- 6 Register the Bluetooth® device using your Bluetooth® device.
- 7 Check that a confirmation screen is displayed, indicating pairing was successful (a Bluetooth® link has been established but registration is not yet complete).
- 8 Check that "Connected" is displayed and registration is complete.



■ Contacts transfer

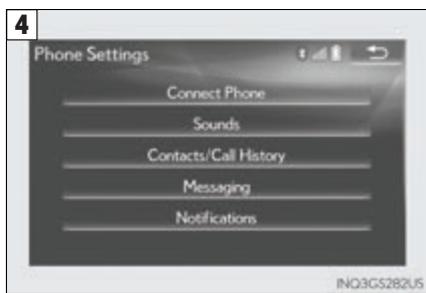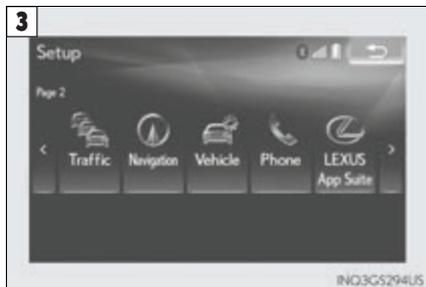

- 1** Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Phone".
- 4** Select "Contacts/Call History".
- 5** Select "Transfer Contacts from Phone".
- 6** Transfer the contact data to the system using a Bluetooth[®] phone.
- 7** Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

 
■ Registering the contacts in the favorites list

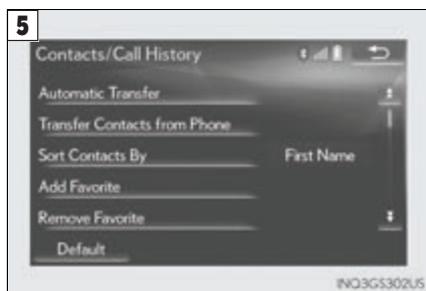

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Contact/Call History".
- 5 Select "Add Favorite".
- 6 Select the desired contact to add to the favorites list.
- 7 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name

You can call by giving a name registered in the contacts. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

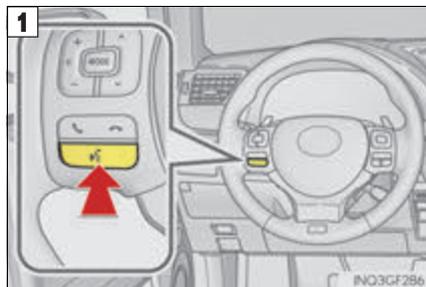

- 1 Press the talk switch.
- 2 Say "Call <contacts> <phone types>".
In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact.
For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"

Talk switch: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by favorites list

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select the "Favorites" tab and select the desired contact.
- 4 Select the desired number.
- 5 Check that the "Call" screen is displayed.

■ Calling the message sender

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select .
- 4 Select the desired message.
- 5 Select "Call".
- 6 Check that the "Call" screen is displayed.

■ Receiving a call

 
When a call is received, this screen is displayed with a sound.

12.3-inch display: Call screen can also be displayed on the side display.

Press the  switch on the steering wheel to talk on the phone.

To refuse to receive the call, press the  switch on the steering wheel.

■ Steering switches



- ① Sending/Receiving/Phone top screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

Audio System

Audio control screen

Follow the procedure below to display the audio control screen.

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 45 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media".

Side Display (vehicles with navigation system)

▶ Radio operation

On the side display, preset stations can be registered and selected.



- 1 Select "▽".
- 2 Select the desired source.
 - 1 Select to tune in to the desired preset station/channel.

▶ Media operation


Operations such as selecting a chapter, file or track are carried out on the screen.



- 1 Select "▽".
- 2 Select the desired source.
 - 1 Select a chapter/track/file
Select and hold to rewind
 - 2 Stop the video screen
 - 3 Play/pause
 - 4 Select a chapter/track/file
During playback: Select and hold to fast forward
During a pause: Select and hold to slow forward

■ Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

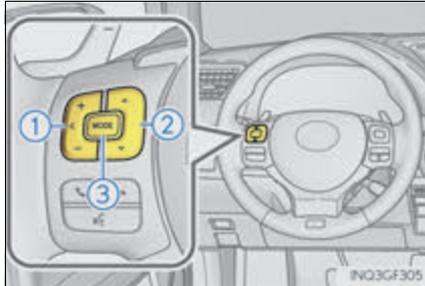


- ① Increases/decreases volume
- ② Radio mode: Selects a radio station
SAT mode: Selects a channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
USB mode: Selects a file/track
iPod mode: Selects a track/file
BT audio mode: Selects a track
- ③ Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

■ Basic operation



- ① Display the audio source selection screen
- ② Display the sound setting screen
- ③ Adjust volume
Turn the audio system on/off
- ④ Select a radio/media mode
- ⑤ Play/Pause
Turn mute on/off

■ Radio

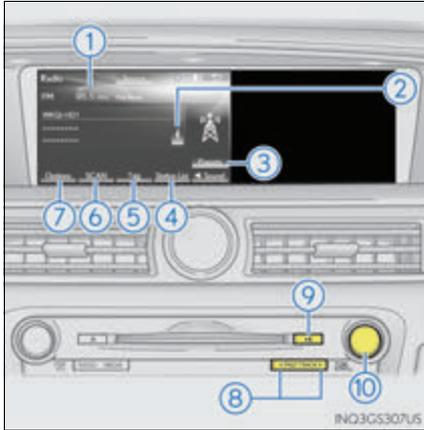

- ① Display HD) multicast channels available
- ② Display the cache radio operation buttons
- ③ Display the radio preset buttons
- ④ Display a list of receivable stations
- ⑤ Store artist and song title information
- ⑥ Scan for receivable stations
- ⑦ Change the screen buttons to the optional screen buttons
- ⑧ Press: Select a preset station
Press and hold: Seek for a station
- ⑨ Turn mute on/off. (Cache radio only)
- ⑩ Step up/down frequencies
Move up/down the list

■ Entering station/channel presets

- 1 Select the desired station/channel by using the tune, the seek or the scan function.
- 2 Select "Presets".
- 3 Select one of the screen buttons and hold it until a beep is heard, indicating that the station/ channel has been set.

■ DVD player/CD player

■ Playing an audio CD




- ① Display a track list
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track
Rewind
- ⑦ Eject a disc
- ⑧ Select a track
Fast forward/rewind
- ⑨ Select a track
Move up/down the list

■ Playing a CD with MP3/WMA/AAC files



- ① Select a folder
- ② Display a folder list
- ③ Set random playback
- ④ Set repeat playback
- ⑤ Select a file
Fast forward
- ⑥ Play/Pause
- ⑦ Select a file
Rewind
- ⑧ Eject a disc
- ⑨ Select a file
Fast forward/rewind
- ⑩ Select a file
Move up/down the list

■ Playing a DVD

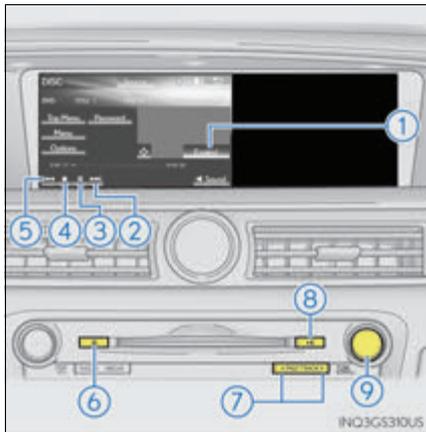

- ① Display expanded screen video
- ② Select a chapter
Fast forward/slow forward
- ③ Play/Pause
- ④ Stop the video screen
- ⑤ Select a chapter
Rewind
- ⑥ Eject a disc
- ⑦ Select a chapter
Fast forward/rewind
- ⑧ Play/Pause
- ⑨ Select a chapter

■ Operating an iPod

■ iPod audio



- ① Display the play mode selection screen
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track
Rewind
- ⑦ Select a track
Fast forward/rewind
- ⑧ Select a track
Move up/down the list


■ iPod video



- ① Display expanded screen video
- ② Select a track
Fast forward
- ③ Play/Pause
- ④ Select a track
Rewind
- ⑤ Select a track
Fast forward/rewind
- ⑥ Select a track
Move up/down the list

Front Automatic Air Conditioning System

Control panel

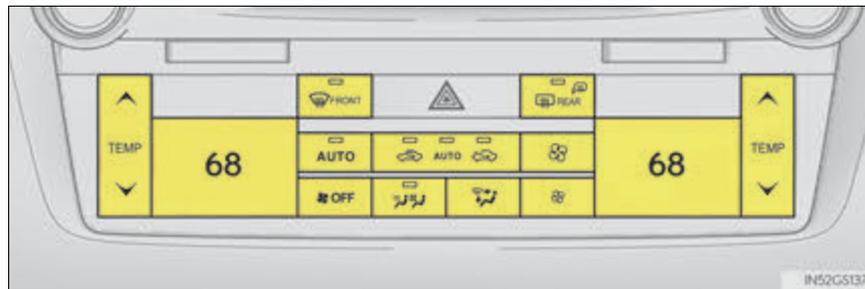

Adjusting the temperature setting

Press “^” on  to increase the temperature and “v” to decrease the temperature.

Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.
Press the “OFF” button to turn the fan off.

Change the airflow mode

To change the air outlets, press .
The air outlets used are switched each time the button is pressed. (→P.63)

■ Control screen

▶ Without rear air conditioning system



▶ With rear air conditioning system



- ① Adjust the left-hand side temperature setting
- ② Select the air flow to the feet and operate the windshield defogger
- ③ Adjust the fan speed setting
- ④ Select the air flow mode* (the front seats)
- ⑤ Function on/off indicators on the option control screen
- ⑥ Display the option control screen (→P.64)
- ⑦ Adjust the right-hand side temperature setting
- ⑧ Set eco air conditioning mode
Air conditioning and heater output is limited to prioritize fuel economy.
- ⑨ Adjust the temperature for the driver's and front passenger's seats separately (DUAL mode) (→P.65)
- ⑩ Set cooling and dehumidification function on/off
- ⑪ Select to set automatic mode on/off
- ⑫ Select the air flow mode* (the left-hand side)
- ⑬ Select the air flow mode* (the right-hand side)
- ⑭ Display the rear air conditioning operation screen (→P.66)
- ⑮ Adjust the temperature for the driver's, front passenger's and rear seats (→P.66) separately (3-ZONE mode) (→P.65)

To adjust or select settings, move the Remote Touch knob to select the screen button, and then press the Remote Touch knob or the "ENTER" button of Remote Touch to enter the selected function.


*:  — Air flows to the upper body

 — Air flows to the upper body and feet

 — Air flows to the feet

■ Option control screen

Select  on the operation screen to display the option control screen. The functions can be switched on and off.

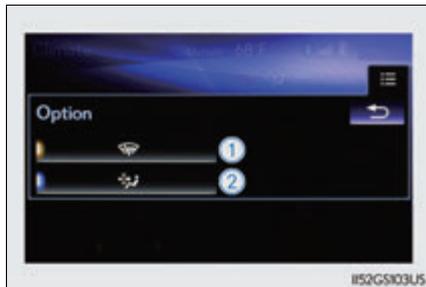


- ① Prevent ice from building up on the windshield and wiper blades (if equipped)
- ② Remove pollen from the air (Micro dust and pollen filter)

■ Side display (vehicles with 12.3-inch display)

▶ Without rear air conditioning system



 ▶ With rear air conditioning system



- ① Adjust the left-hand side temperature setting
- ② Select the air flow mode (the front seats)
- ③ Adjust the fan speed setting
- ④ Adjust the right-hand side temperature setting
- ⑤ Adjust the temperature for the driver's and front passenger's seats separately (DUAL mode) (→P.65)
- ⑥ Set cooling and dehumidification function on/off
- ⑦ Select to set automatic mode on/off
- ⑧ Select the air flow mode (the left-hand side)
- ⑨ Select the air flow mode (the right-hand side)
- ⑩ Adjust the temperature for the driver's, front passenger's and rear seats (→P.66) separately (3-ZONE mode) (→P.65)

■ Using the automatic mode

Press  or select "AUTO" on the operation screen to turn on the airflow and adjust the temperature setting.

■ Adjusting the temperature for the driver's and front passenger's seats separately (DUAL mode) (vehicles without rear air conditioning system)

To turn on the DUAL mode, perform any of the following procedures:

- Select "DUAL" on the option control screen.
- Adjust the passenger's side temperature setting.

■ Adjusting the temperature for the driver's, front passenger's and rear seats separately (3-ZONE mode) (vehicles with rear air conditioning system)

To turn on the 3-ZONE mode, perform any of the following procedures:

- Select "3-ZONE" on the option control screen.
- Adjust the passenger's side or rear seats temperature setting.

■ Using the S-FLOW mode

Press .

When  is pressed, the airflow changes as follows.

Without rear air conditioning system:

Air flows to the front seats only.*

With rear air conditioning system:

Air flows to the front seats only, and if the passenger seat is unoccupied, the set temperature, outside humidity and temperature inside the cabin are assessed, and air flows to the driver seat only.*

*: Air may also flow to the rear seats depending on the situation.

Rear Air Conditioning System

Control panel



- ① Set automatic mode on/off
- ② Turn the fan off
- ③ Change the airflow mode
- ④ Adjust the temperature setting

Front controller




- ① Adjust the rear seat temperature setting
- ② Disabling the switches on the rear armrest
- ③ Turn the fan off (rear seat)
- ④ Select to set automatic mode on/off (rear seat)

Seat Heaters/Seat Ventilators (if equipped)


Seat heaters heat the side grips of the seats, respectively. Seat ventilators maintain good airflow by blowing air from the seats.

■ Front seat heaters and ventilators (if equipped)/rear seat heaters (if equipped)

► Front seats

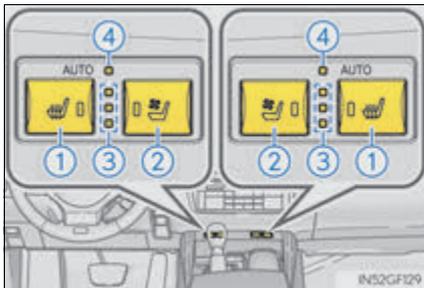

► Rear seats

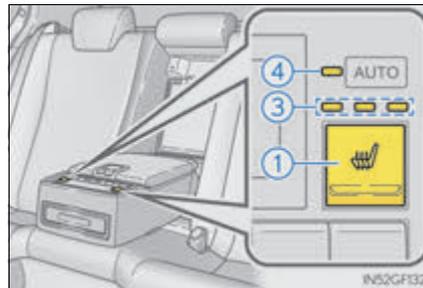

- ① Seat heater switches
The indicator light (yellow) on the switch comes on when the seat heater is operating.
- ② Seat ventilator switches (front seats only)
The indicator light (green) on the switch comes on when the seat ventilator is operating.
- ③ Level indicator lights
The seat heater temperature level or the seat ventilator fan speed level (for front seats only) is displayed.
- ④ "AUTO" indicator lights


● Modes and indicators

The mode can be changed by pressing the switch.

Mode	“AUTO” indicator light	Level indicator lights
Off	Off	Off
Automatic *	On	3 to 1, or off
Hi	Off	3
Mid	Off	2
Lo	Off	1

*: When automatic mode is selected, the level automatically changes depending on the air conditioning settings.

■ Seat heaters (without seat ventilators) (if equipped)

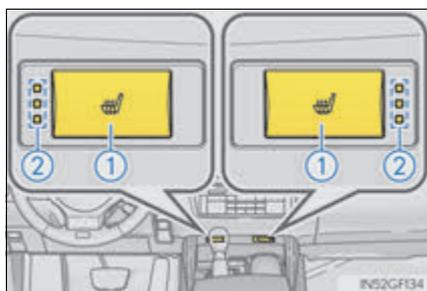

- ① Seat heater switches
- ② Level indicator lights
The seat heater temperature level is displayed.

● Modes and indicators

The mode changes each time the switch is pressed as follows:

Mode	Level indicator lights	Automatic operation *
Off	Off	—
Hi	3	Hi → Mid → Lo
Mid	2	Mid → Lo
Lo	1	Lo

 
*: The mode changes automatically depending on the amount of time that has elapsed. The amount of time until the mode changes varies depending on the interior temperature when the seat heater was operated and other factors.

If the driving mode select switch is switched to Eco drive mode in cold temperatures, the seat heater may be automatically operated to assist heating performance. (→P.40)

Voice Command System

Basic operation

NOTE: When entering voice commands you must wait until after the beep to speak.



- 1** Press the talk switch on the steering wheel.
- 2** - If you know the command:
Press the talk switch again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press the talk switch again.
- 3** Say a command after the beep.

Continue on to pages 70-73 for a detailed list of Voice Commands for the following categories:

Basic	P.70
Apps	P.70
Navi.....	P.70
Phone	P.71
Radio.....	P.71
Audio	P.72
Info.....	P.72
Climate.....	P.73

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

■ Command list

▶ Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

▶ Apps (vehicles with navigation system) (if equipped)

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

▶ Navi (vehicles with navigation system)

Command	Action
"Find <POI category>"	Displays a list of <POI category ^{*1} > near the current position ^{*2}
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode

► Audio

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* Audio"	Selects Bluetooth® audio mode
"External"	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

*: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

► Info

Command	Action
"Destination Assist"*	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"*	Displays the Lexus insider list

*: Vehicles with navigation system

► Climate

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees *

*: Only within the possible temperature range of the air conditioning system

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.




Open the console box, open the cover and connect the portable audio device.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

■ Programming HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

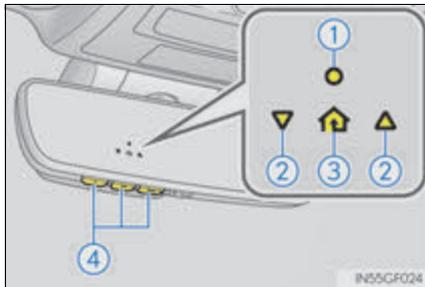


- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ HomeLink® icon
Illuminates while HomeLink® is operating.
- ④ Buttons

■ Before programming HomeLink®

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the "Learn" or "Smart" button on the garage door opener motor.


■ Programming HomeLink®

 - 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).
Perform **3** within 60 seconds of **1**, or the indicator light will stop flashing and programming will not be able to be completed.



- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.
Keep the HomeLink® indicator light in view while programming.

► For U.S.A. owners

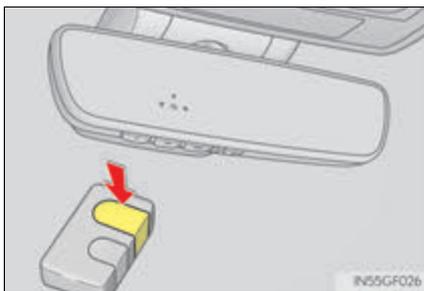


- 3** Press and hold the handheld transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

- 3** Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).
- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
 - Device with fixed code: If the indicator light is solid/continuous, programming has been completed and your garage door or other device should operate when the HomeLink® button is pressed and released.
 - Device with rolling code: If the indicator light flashes rapidly, your garage door opener motor (or other device) is equipped with a rolling code. Complete the programming process by firmly pressing and holding the programmed HomeLink® button for 2 seconds and then release the button.
 - If the garage door or other device does not operate, proceed to "Programming a rolling code system".

- 5 Repeat the steps above to program another device for any of the remaining HomeLink® buttons.

 ■ Programming a rolling code system



- 1 Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

- 2 Press and release the “Learn” or “Smart” button.

Perform 3 within 30 seconds after performing 2.

- 3 Press and hold the desired HomeLink® button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming. If the garage door opener motor operates when the HomeLink® button is pressed, the garage door opener motor recognizes the HomeLink® signal.

■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to www.HomeLink.com.)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink[®], both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform **2** and **3** within the first 10 presses of the HomeLink[®] button after programming has been completed.

- 2 Press a programmed HomeLink[®] button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink[®] button, after the garage door operation has stopped, press the "Learn" or "Smart" button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

■ Reprogramming a single HomeLink[®] button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink[®] button.
- 2 When the HomeLink[®] indicator starts flashing (orange), continue to hold the HomeLink[®] button and perform "Programming HomeLink[®]" **1** (it takes 20 seconds for the HomeLink[®] indicator to start flashing).

■ Operating HomeLink[®]

 
Press the appropriate HomeLink[®] button. The HomeLink[®] indicator light should turn on.

Lexus Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components



- ① "SOS" button
- ② LED light indicators
- ③ Microphone

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform (for U.S.A., if equipped)

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

■ Function achieved by using a cellular phone (vehicles with navigation system)

■ Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● LEXUS App Suite

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

■ Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

■ Function achieved by using DCM and the navigation system (vehicles with navigation system)

■ Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

- **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

- **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

- **Function achieved by using DCM**

- **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P.78)

- **LEXUS Enform Remote**

- **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to

<http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

- **Subscription**

→P.81

XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

■ Subscription

For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included.

Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit www.siriusxm.com or call 1-877-447-0011

► **Canadian Customers:**

 
Visit www.siriusxm.ca or call 1-877-438-9677

Fuel Tank Cap


■ Before refueling the vehicle

- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

■ Opening the fuel tank cap



 - 1** With the doors unlocked, press the center of the rear edge of the fuel filler door. Push until you hear a click and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.



- 2** Turn the fuel tank cap slowly to remove it and put it into the holder on the fuel filler door.

What to do if...

List of Warning/Indicator Lights

Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.

-  (U.S.A.) Brake system warning light
-  (Canada)

Immediately stop the vehicle in a safe place and contact your Lexus dealer.

-  Charging system warning light

Have the vehicle inspected by your Lexus dealer immediately.

- | | | | |
|--|--|---|--|
|  (U.S.A.) | Malfunction indicator lamp |  (Flashes) | PCS (Pre-Collision System) warning light (if equipped) |
|  (Canada) | |  | Slip indicator |
|  | SRS warning light |  (Flashes) | (U.S.A.) Parking brake indicator |
|  (U.S.A.) | ABS warning light |  (Flashes) | (Canada) |
|  (Canada) | |  | Brake system warning light |
|  | Electric power steering system warning light |  | Tire pressure warning light |
| | | (Blinking and then continuously on) | |

For further information, refer to the OWNER'S MANUAL.

What to do if...

Follow the correction procedures.

 Open door warning light	 Master warning light
 Low fuel level warning light	 Tire pressure warning light* ¹
 Seat belt reminder light	<small>(Illuminates without blinking)</small>

See the OWNER'S MANUAL

 Turn signal indicator	 LDA indicator (if equipped)
 Headlight indicator (U.S.A.)	 Intuitive parking assist indicator (if equipped)* ²
 Tail light indicator (Canada)	 Slip indicator <small>(Flashes)</small>
 Headlight high beam indicator	 VSC OFF indicator
 Automatic High Beam indicator (if equipped)	 TRAC OFF indicator
 Cruise control indicator	 PCS (Pre-Collision System) warning light (if equipped) <small>(Flashes faster)</small>
 Dynamic radar cruise control indicator (if equipped)	 BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)
 Cruise control "SET" indicator	 BSM (Blind Spot Monitor) indicator (if equipped)

For further information, refer to the OWNER'S MANUAL.

What to do if...

See the OWNER'S MANUAL

	Security indicator		(U.S.A.) Parking brake indicator
	Low outside temperature indicator		(Canada)
	Eco Driving Indicator Light		"AIR BAG ON/OFF" indicator
● Drive mode indicators			
	"NORMAL" indicator		Eco drive mode indicator
	"SPORT S" indicator		"SPORT S+" indicator
	"EXPERT" indicator		Snow mode indicator
● TVD (Torque Vectoring Differential) control mode indicators			
	"STANDARD" indicator		"SLALOM" indicator
	"TRACK" indicator		

For further information, refer to the OWNER'S MANUAL.


*1: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

*2: Refer to "NAVIGATION SYSTEM OWNER'S MANUAL".

What to do if...

If the electronic key does not operate properly

■ Unlocking and locking the doors

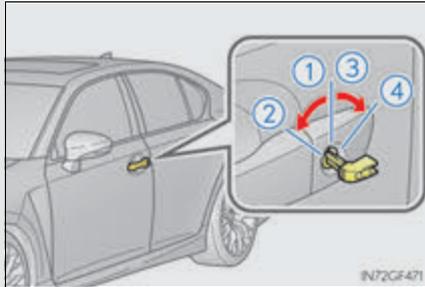


Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof* (turn and hold)
- ③ Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof* (turn and hold)

*: This setting must be customized at your Lexus dealer.


■ Unlocking the trunk

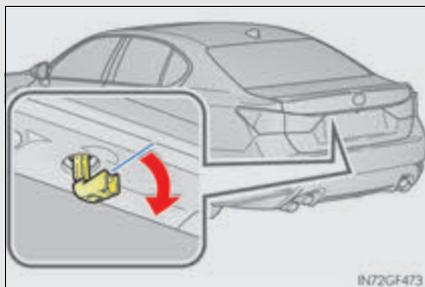

Turn the mechanical key clockwise to open.

What to do if...

■ Starting the engine

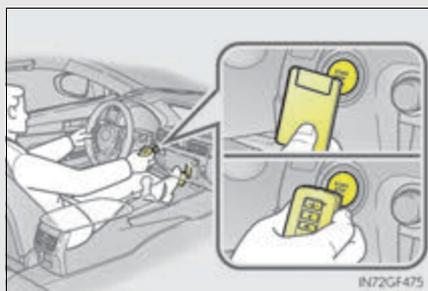

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch.
When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode.
When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  and a message are shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the OWNER'S MANUAL. If you need further assistance, contact your Lexus dealer.

What to do if...

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.16)

If the engine still does not start, see the OWNER'S MANUAL for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2015 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.