

# Contents

 
The Quick Guide is not intended as a substitute for your *OWNER'S MANUAL*. We strongly encourage you to review the *OWNER'S MANUAL* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>12.3-inch Display</b> .....	<b>57</b>
<b>Audio System</b>	
Audio control screen .....	66
Side Display.....	66
Remote control (steering wheel switches) .....	67
Basic operation.....	67
Radio .....	68
DVD player/CD player .....	68
Operating an iPod.....	70
<b>Automatic High Beam</b> .....	<b>35</b>
<b>Brake Hold</b> .....	<b>29</b>
<b>BSM (Blind Spot Monitor)</b> .....	<b>52</b>
<b>Cruise Control</b> .....	<b>47</b>
<b>Driving Mode Select Switch</b> .....	<b>50</b>
<b>Driving Position Memory</b> .....	<b>21</b>
<b>Dynamic Radar Cruise Control with Full-Speed Range</b> .....	<b>42</b>
<b>Energy Monitor/Consumption Screen</b> .....	<b>16</b>
<b>EV Drive Mode</b> .....	<b>26</b>
<b>Floor mat installation</b> .....	<b>11</b>
<b>Front Automatic Air Conditioning System</b>	
Control panel .....	71
Control screen.....	72
Option control screen .....	73
Side display.....	73
Using the automatic mode.....	74
Adjusting the temperature for the driver's and front passenger's seats separately (DUAL mode) (vehicles without rear air conditioning system)....	74
Adjusting the temperature for the driver's, front passenger's and rear seats separately (3-ZONE mode) (vehicles with rear air conditioning system)....	74
Using the S-FLOW mode.....	74

<b>Front Seats</b> .....	<b>20</b>
<b>Fuel Tank Cap</b> .....	<b>92</b>
<b>Garage Door Opener</b> .....	<b>83</b>
<b>Hands-free System For Cellular Phone *</b>	
Bluetooth® phone pairing .....	62
Contacts transfer .....	63
Registering the contacts in the favorites list .....	64
Calling by name.....	64
Calling by favorites list.....	65
Calling the message sender.....	65
Receiving a call .....	65
Steering switches.....	65
<b>Headlights</b> .....	<b>33</b>
<b>Head-up Display</b> .....	<b>32</b>
<b>Hybrid System</b> .....	<b>12</b>
<b>Intuitive Parking Assist</b> .....	<b>49</b>
<b>Lexus Enform</b> .....	<b>89</b>
<b>Lexus Enform Safety Connect</b> .....	<b>87</b>
<b>LKA (Lane-Keeping Assist)</b> .....	<b>41</b>
<b>Multi-information Display</b> .....	<b>30</b>
<b>Navigation System</b>	
Register home.....	58
Destination search - Search by address .....	59
Destination search - Search points of interest by name.....	60
Destination search - Search points of interest by category .....	61
Destination search - Search points of interest by phone number .....	61
Voice Command System.....	78


\*: These features may be operated by Voice Command (See P.78)


<b>Parking Brake</b> .....	<b>28</b>
<b>Portable Audio Device Ports</b> .....	<b>83</b>
<b>Power (Ignition) Switch</b> .....	<b>23</b>
<b>Rear Air Conditioning System</b>	
Control panel .....	75
Front controller.....	75
<b>Remote Touch</b> .....	<b>54</b>
<b>Seat Heaters/Seat Ventilators</b> .....	<b>76</b>
<b>Smart Access System with Push-button Start</b> .....	<b>19</b>
<b>Tire Pressure Warning System</b> .....	<b>53</b>
<b>Turn Signal Lever</b> .....	<b>27</b>
<b>Voice Command System</b>	
Basic operation.....	78
Command list .....	79
<b>Windshield Wipers and Washer</b> .....	<b>37</b>
<b>XM Satellite Radio</b> .....	<b>91</b>



## Overview

## Instrument Panel

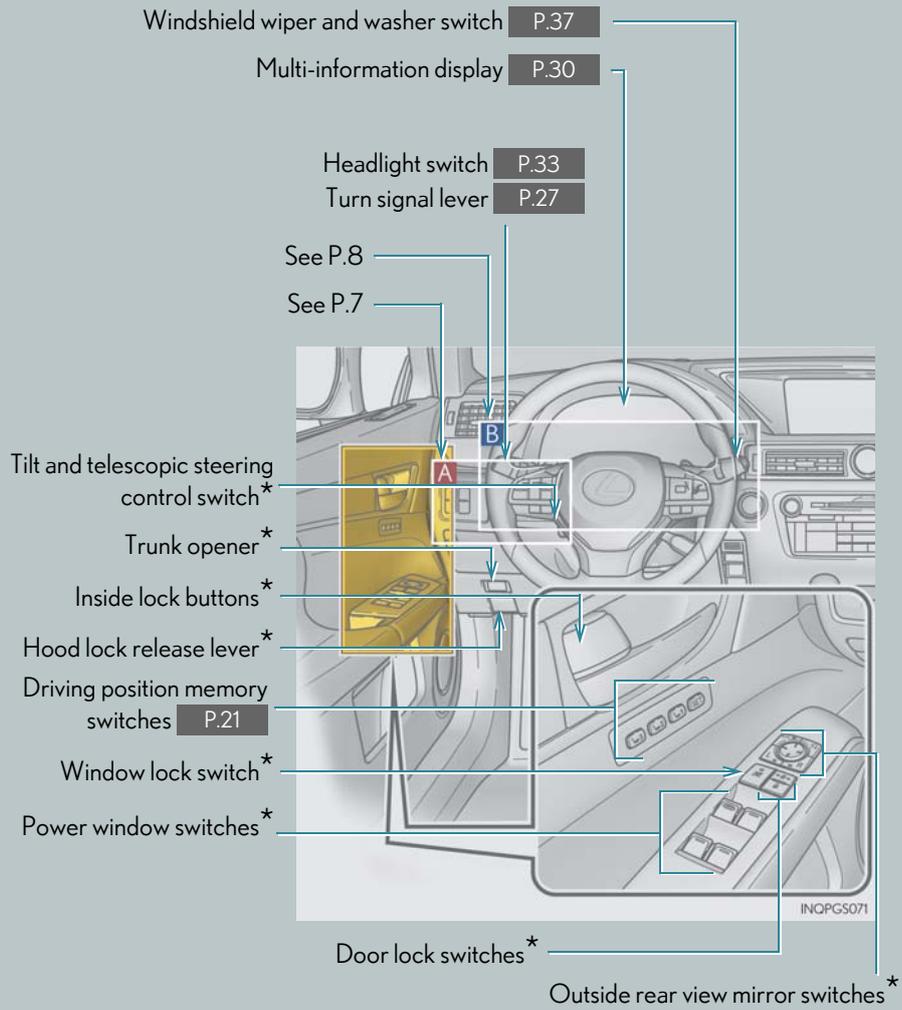

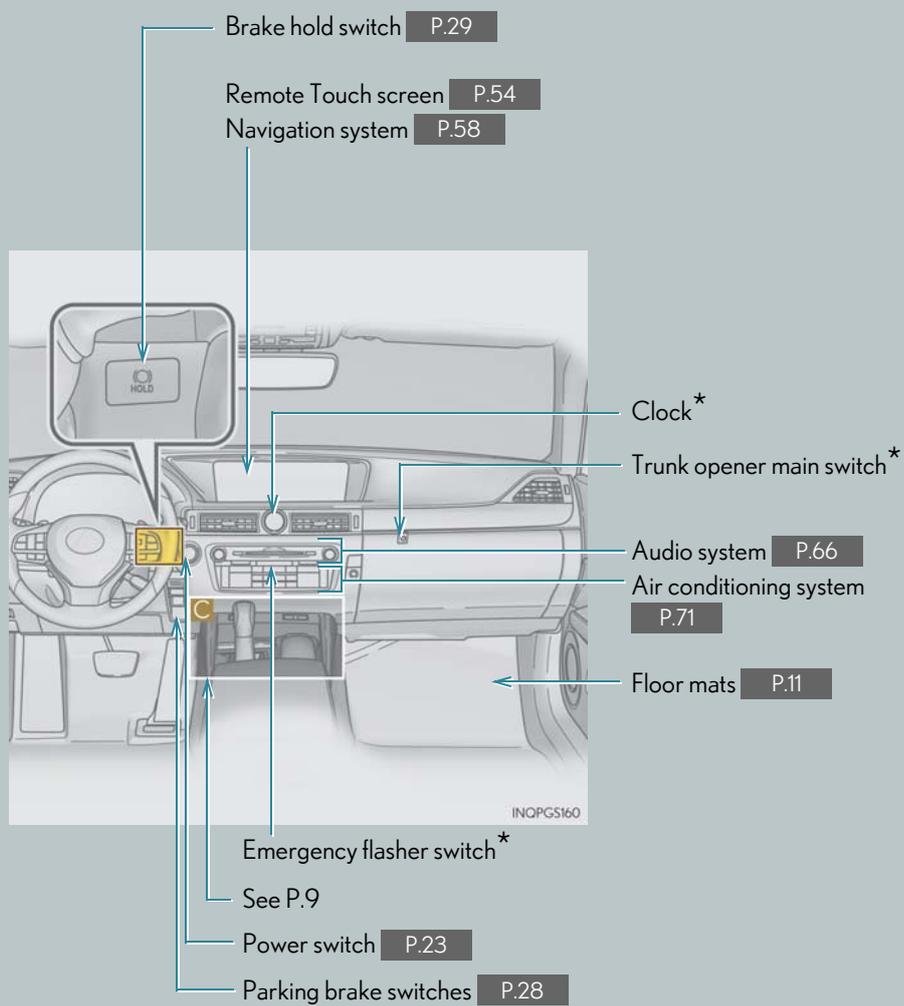

\*: Refer to "OWNER'S MANUAL".

## Overview


## Instrument Panel

A

Odometer/trip meter and trip meter reset button\*

Instrument panel light control switches\*

VSC OFF switch\*

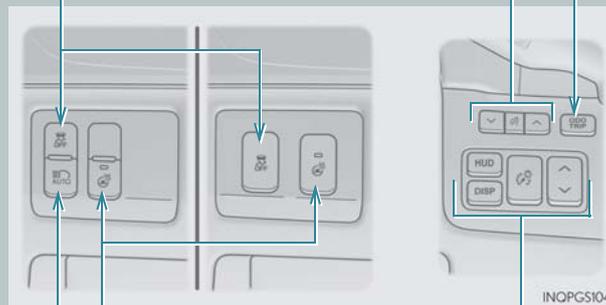


Heated steering wheel switch\*

HUD (Head-up display) switches\* P.32

Automatic High Beam switch\* P.35

B

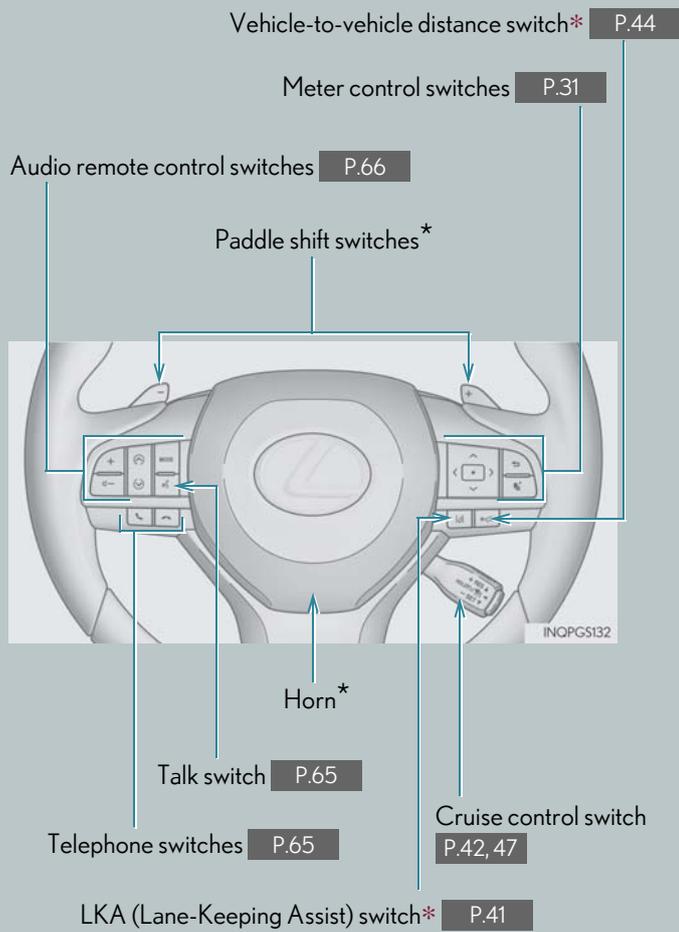


\*: If equipped

\*: Refer to "OWNER'S MANUAL".

## Overview


## Instrument Panel

C

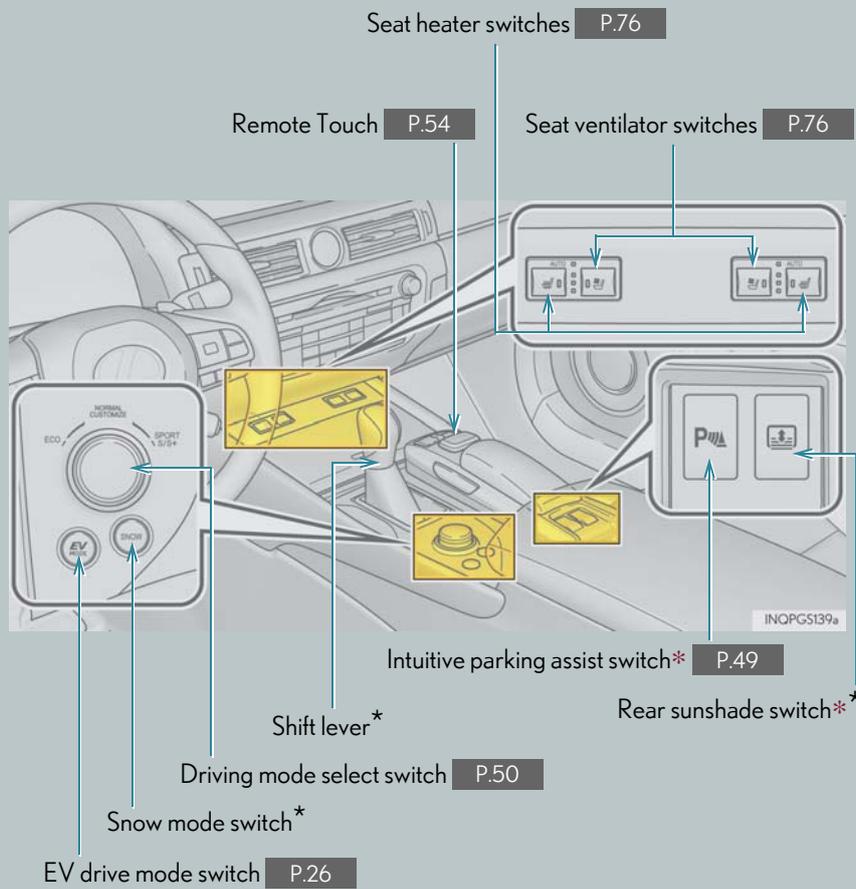

## Overview

## Roof

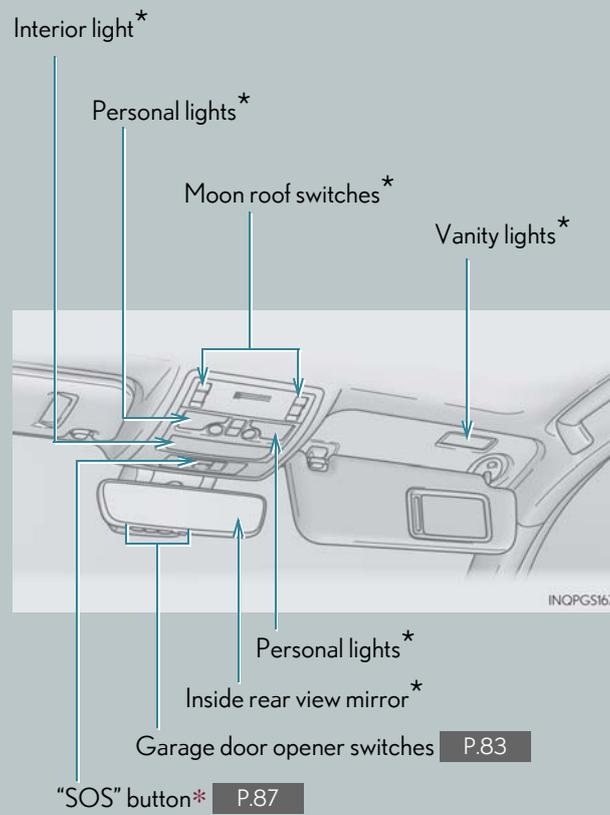


\*: If equipped


\*: Refer to "OWNER'S MANUAL".

## Floor mat installation

 Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.



- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

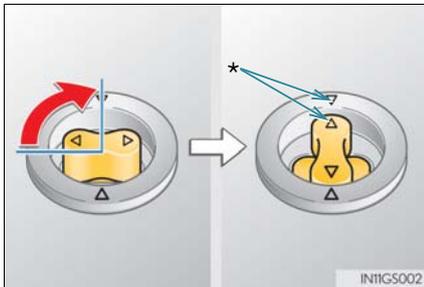

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Hybrid System


Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "OWNER'S MANUAL".

### Hybrid System Indicator

#### ► Except F SPORT models

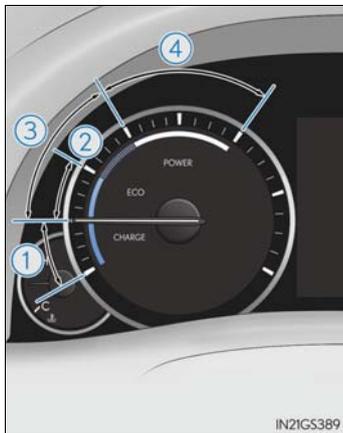

#### ► F SPORT models



- ① Charge area  
Shows regenerative charging.
  - ② Hybrid Eco area  
Shows that gasoline engine power is not being used very often.  
The gasoline engine will automatically stop and restart under various conditions.
  - ③ Eco area  
Shows that the vehicle is being driven in an Eco-friendly manner.
  - ④ Power area  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.
  - By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
  - Charge area indicates regeneration\* status. Regenerated energy will be used to charge the battery.
- \*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

### ■ Charging the hybrid battery (traction battery)

---

If the shift lever is in N, the hybrid battery (traction battery) will not be charged even when the engine is running. Therefore, if the vehicle is left with the shift lever in N for a long period of time, the hybrid battery (traction battery) will discharge, and this may result in the vehicle not being able to start.

### ■ Regenerative braking

---

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or S.
- The brake pedal is depressed while driving with the shift lever in D or S.

### ■ Sounds and vibrations specific to a hybrid vehicle

---

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), behind the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the trunk lid is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents on the both sides of the rear seatback.

### ■ Running out of fuel


---

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 2.6 gal. [10.0 L, 2.2 Imp.gal.] [except F SPORT models] or 2.6 gal. [9.9 L, 2.2 Imp.gal.] [F SPORT models], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

## ■ Hybrid warning message

---

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

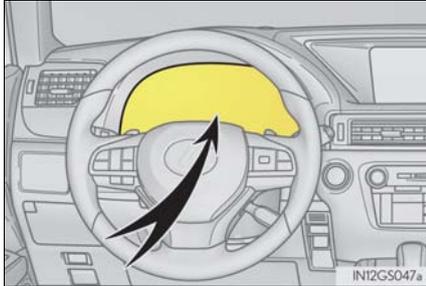

If a warning message is shown on the multi-information display, read the message and follow the instructions.

## Energy Monitor/Consumption Screen

You can view the status of your hybrid system on the multi-information display and the Remote Touch screen.

The energy monitor or consumption screen can be displayed on the side display.

### Energy monitor

- How to display on the Remote Touch screen

Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen, and then select "Fuel Consumption".

If the "Trip Information" or "Past Record" screen is displayed, select "Energy".



The flow of energy is displayed on the Remote Touch screen.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the multi-information display

Press  or  of the meter control switches and select , and then press  or  to select the energy monitor display.



The flow of energy is indicated by the movement of the arrows on the multi-information display.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

## ■ Consumption

Press the "MENU" button on the Remote Touch, then select  on the "Menu" screen, and then select "Fuel Consumption".

### ● Trip information

If the "Energy Monitor" or "Past Record" screen is displayed, select "Trip Information".



- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Regenerated energy in the past 15 minutes  
One symbol indicates 50 Wh.  
Up to 5 symbols are shown.
- ⑤ Average vehicle speed since the hybrid system was started.
- ⑥ Elapsed time since the hybrid system was started.
- ⑦ Cruising range

### ● Past record

 
If the "Energy Monitor" or "Trip Information" screen is displayed, select "Past Record".



- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

## ■ Side display

Vehicle information can be displayed on the side display (→P.57), then select **<** or **>** to select the desired screen.




- Fuel consumption
- Past record
- Trip information
- Energy monitor

The image is an example only, and may vary slightly from actual conditions.

## Smart Access System with Push-button Start

 
The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key. For details on starting the hybrid system, see page 23.

### ■ Entering and exiting the vehicle



- ① Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.\*  
Make sure to touch the sensor on the back of the handle.  
The doors cannot be unlocked for 3 seconds after the doors are locked.
- \*: The door unlock settings can be changed.
- ② Touch the lock sensor (the indentation on the upper part of the door handle) to lock all the doors.  
Check that the door is securely locked.

### ■ Opening the trunk

 

While carrying the electronic key, press the button.


When all the doors are unlocked with the power door lock system, the trunk can be opened without carrying the electronic key.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 96.

## Front Seats

### ■ Adjustment procedure

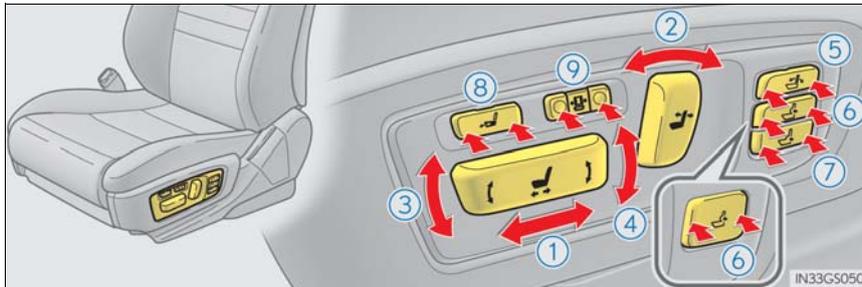

- ① Seat position adjustment switch
- ② Seatback angle adjustment switch
- ③ Seat cushion (front) angle adjustment switch
- ④ Vertical height adjustment switch
- ⑤ Seatback upper angle adjustment switch (if equipped)
- ⑥ Lumbar support adjustment switch
- ⑦ Pelvic support adjustment switch (if equipped)
- ⑧ Seat cushion length adjustment switch (if equipped)
- ⑨ Seatback side support adjustment switch (if equipped)


## Driving Position Memory

This feature automatically adjusts the front seats, steering wheel and outside rear view mirrors to make entering and exiting the vehicle easier or to suit your preferences.

### ■ Driving position memory

#### ■ Recording procedure

- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON mode.
- 3 Adjust the driver's seat, steering wheel, outside rear view mirrors and HUD (head-up display) (if equipped) to the desired positions.

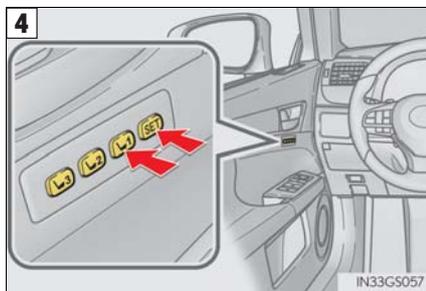


While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.

#### ■ Recall procedure

 - 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON mode.




Press one of the buttons for the driving position you want to recall until the buzzer sounds.

## ■ Memory recall function (driver's side only)

Each electronic key can be registered to recall your preferred driving position.

### ■ Registering procedure

- 1 Check that the shift lever is in P.
- 2 Turn the power switch to ON mode.
- 3 Recall the driving position that you want to record.

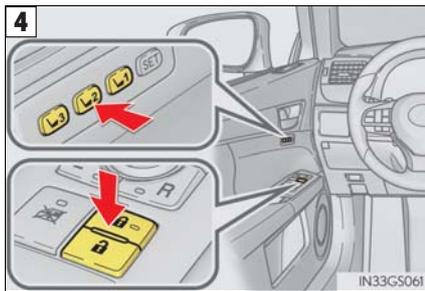

While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.

If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

## Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

### Starting the hybrid system



- 1 Press the parking brake switch to check that the parking brake is set. (→P. 28)

Parking brake indicator will come on.

- 2 Check that the shift lever is in P.
- 3 Firmly depress the brake pedal.



will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.

- 4 Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough.

It is not necessary to press and hold the switch.

If the "READY" indicator turns on, the hybrid system will operate normally.

Continue depressing the brake pedal until the "READY" indicator is illuminated.

The hybrid system can be started from any power switch mode.

- 5 Check that the "READY" indicator is illuminated.

The vehicle will not move when the "READY" indicator is off.

## ■ Stopping the hybrid system


---

- 1 Stop the vehicle completely.
- 2 Set the parking brake (→P. 28), and shift the shift lever to P.
- 3 Press the power switch.
- 4 Release the brake pedal and check that "POWER ON" on the multi-information display is off.

## ■ Changing power switch modes

---

Modes can be changed by pressing the power switch with brake pedal released. (The mode changes each time the switch is pressed.)

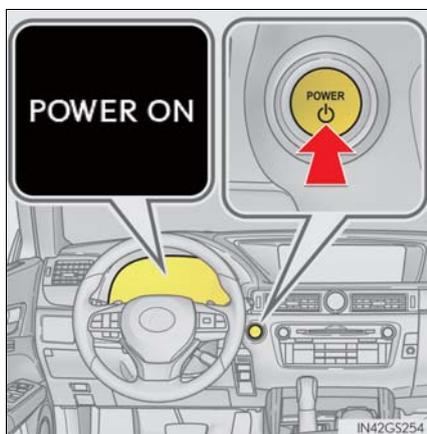

### Off\*

The emergency flashers can be used.  
"POWER ON" will not be displayed on the multi-information display.

### ACCESSORY mode

Some electrical components such as the audio system can be used.  
"POWER ON" will be displayed on the multi-information display.

### ON mode

 
All electrical components can be used.  
"POWER ON" will be displayed on the multi-information display.

\*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACCESSORY mode, not to off.

## ■ If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.
  - ▶ If the shift lever is shifted to N
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the hybrid system.
  - ▶ If the shift lever cannot be shifted to N
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.




To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

## EV Drive Mode

 In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.




### Turns EV drive mode on/off

When EV drive mode is turned on, "EV MODE" will be displayed on the multi-information display. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

## Turn Signal Lever

The lever will return to its original position immediately after operation.

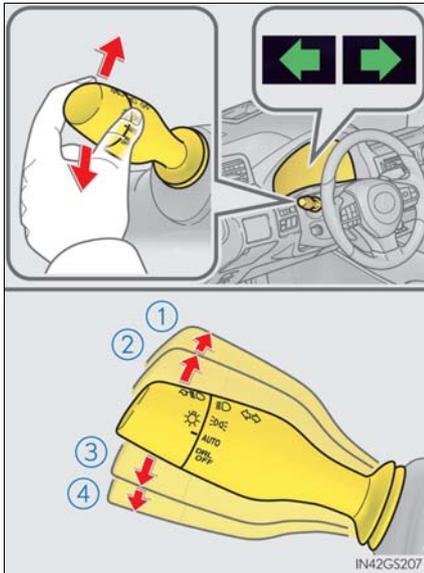


- ① Right turn
- ② Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- ④ Left turn

### ■ If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing

Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.

## Parking Brake

### Manual mode

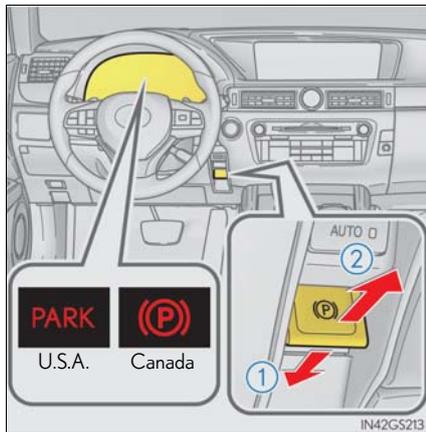

- ① Sets the parking brake  
The parking brake indicator light will come on.  
Press and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.
- ② Releases the parking brake  
Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

### Automatic mode

The parking brake is set or released automatically according to shift lever operation.



- Turns automatic mode on/off
- When the shift lever is moved out of P, the parking brake will be released.
  - When the shift lever is moved into P, the parking brake will be set.
- Operate the shift lever with the brake pedal depressed.

## Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.



Turns the brake hold system on

The brake hold standby indicator (green) comes on. While the system is holding the brake, the brake hold operated indicator (yellow) comes on.

## Multi-information Display

The multi-information display presents the driver with a variety of vehicle data.

### ■ Display content

---



Drive information

Select to display various drive data.



Navigation system-linked display

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the display using the meter control switches.



Driving assist information

Select to display the cruise control or dynamic radar cruise control with full-speed range/LKA (Lane-Keeping Assist) (if equipped) information, when the system is used. (→P. 41, 42, 47)



Warning message display


Select to display warning messages and measures to be taken if a malfunction is detected.



Settings display

Select to change the meter display settings.

## ■ Operating the meter control switches

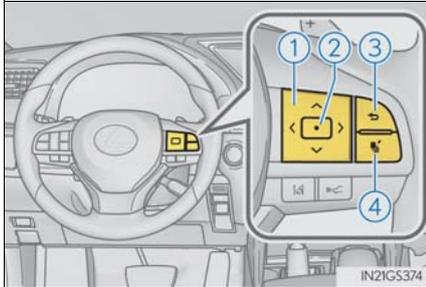


The multi-information display is operated using the meter control switches.

- ①   : Switch menu
-   : Change displayed content, scroll up/down the screen and move the cursor up/down
- ② Press: Enter/Set  
Press and hold: Reset
- ③ Return to the previous screen
- ④ Press: Displays the screen registered to   
When no screen has been registered, the drive information screen will be displayed.  
Press and hold: Registers the currently displayed screen to   
When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Head-up Display (if equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.

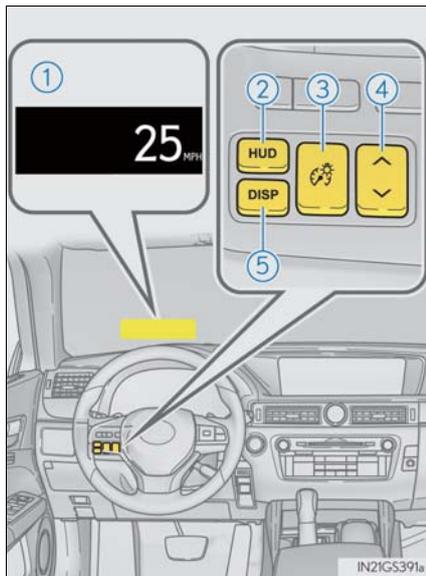


- ① Head-up display
- ② “HUD” button
- ③ Display brightness adjustment switch
- ④ Display position adjustment switch
- ⑤ “DISP” button

### Head-up display contents

- Vehicle speed
- Hybrid System Indicator
- Tachometer
- Shift position and shift range
- Audio display\*
- Route guidance display
- Lexus Enform (if equipped)
- Lane departure warning display (LKA [Lane-Keeping Assist]) (if equipped)
- Approach warning display (dynamic radar cruise control with full-speed range) (if equipped)
- Pre-collision warning message (PCS [Pre-Collision System]) (if equipped)
- Speed limit display


\*: The default setting is off

## Headlights

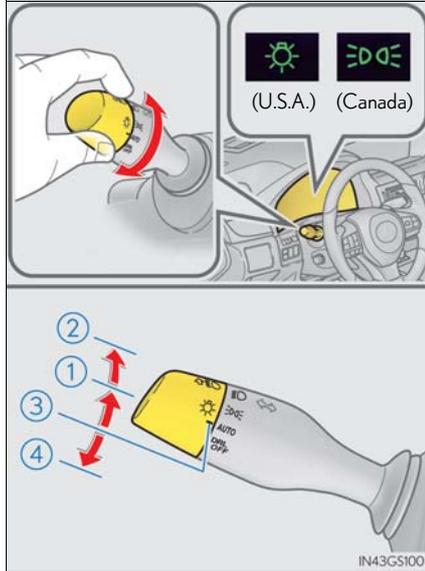

- ①  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- ②  The headlights and all lights listed above (except daytime running lights) turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the power switch is in ON mode.)
- ④ **DRL OFF** Off  
(U.S.A.)  
 The daytime running lights turn (Canada) on.

## Turning on the high beam headlights

 

- ① With the headlights on, push the lever away from you to turn on the high beams.  
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.  
You can flash the high beams with the headlights on or off.

## ■ AFS (Adaptive Front-lighting System) (if equipped)

AFS (Adaptive Front-lighting System) secures excellent visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire's angle as controlled by steering input.

### ■ Deactivating AFS

Settings can be changed from  on the multi-information display (→P. 30).

- 1 Press  or  on the meter control switch and select "AFS".




- 2 Press  on the meter control switch and select "Off".  
The indicator turns on when the AFS is deactivated.


## Automatic High Beam (if equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of vehicles ahead, etc., and automatically turns the high beam on or off as necessary.

### Activating the Automatic High Beam system

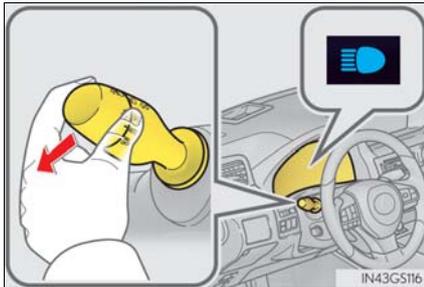

 - 1 Push the lever away from you with the headlight switch in the **AUTO** or  position.




- 2 Press the Automatic High Beam switch.  
The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

## ■ Turning the high beam on/off manually

---

### ■ Switching to low beam

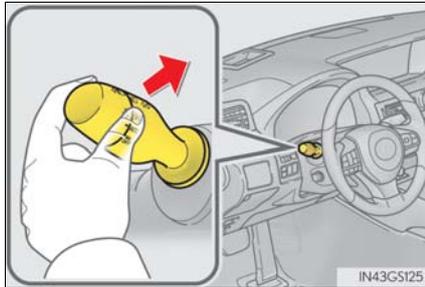


Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

### ■ Switching to high beam

 


Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

## Windshield Wipers and Washer

The lever will return to its original position immediately after operation.

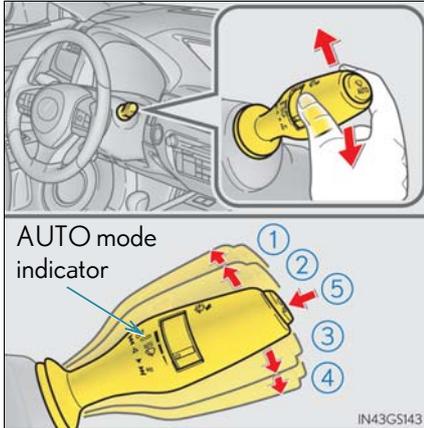

- ① **OFF** (U.S.A.) or **o** (Canada)  
Move the lever up 2 levels
- ② **▲** Move the lever up 1 level
- ③ **▼** (U.S.A.) or **▽** (Canada)  
Move the lever down 1 level
- ④ **HI** (U.S.A.) or **HI** (Canada)  
Move the lever down 2 levels
- ⑤ **AUTO** AUTO mode on/off switch


With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

AUTO mode indicator will turn on when AUTO mode is selected.

Operation		Status before operation			
		<b>OFF</b> or <b>o</b>	<b>▲</b>	<b>▼</b> or <b>▽</b>	<b>HI</b> or <b>HI</b>
<b>Off</b>		Temporary operation	Temporary operation	Low speed operation	High speed operation
<b>Low speed operation</b>		Off	Off	High speed operation	High speed operation
<b>High speed operation</b>		Off	Low speed operation	No change	No change
<b>AUTO mode</b>	<b>Intermittent operation</b>	Off	Temporary operation*1	Low speed operation*2	High speed operation*2
	<b>Continuously</b>		No change		


\*1: After temporary operation, the mode will return to AUTO mode.

\*2: AUTO mode will be canceled.

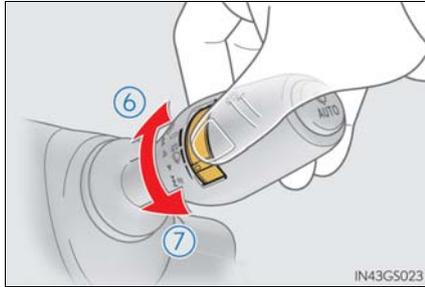


When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

 - ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity



- ⑧ Washer/wiper dual operation  
Wipers will automatically operate a couple of times after the washer squirts.  
Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

### ■ Switching to the intermittent windshield wipers

 

Press and hold  until the AUTO mode indicator stops flashing.


If  is pressed and held until the AUTO mode indicator stops flashing again, it will return to its previous state.

## ■ Operating the intermittent windshield wipers



- ① **⏏ OFF** (U.S.A.) or **○** (Canada)  
Move the lever up 2 levels
- ② **△** Move the lever up 1 level
- ③ **▼** (U.S.A.) or **▽** (Canada)  
Move the lever down 1 level
- ④ **⏏ HI** (U.S.A.) or **⏏** (Canada)  
Move the lever down 2 levels

Operation Status before operation	<b>⏏ OFF</b> or <b>○</b>	<b>△</b>	<b>▼</b> or <b>▽</b>	<b>⏏ HI</b> or <b>⏏</b>
<b>Off</b>	Temporary operation	Temporary operation	Intermittent operation	High speed operation
<b>Intermittent operation</b>	Off	Off	Low speed operation	High speed operation
<b>Low speed operation</b>	Off	Intermittent operation	High speed operation	High speed operation
<b>High speed operation</b>	Off	Low speed operation	No change	No change

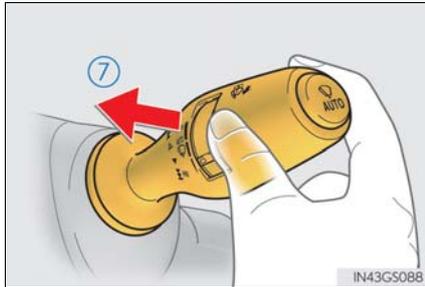

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency

⑦ Washer/wiper dual operation

Wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners: When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## LKA (Lane-Keeping Assist) (if equipped)

When driving on highways and freeways with white or yellow lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane. Furthermore, the system also provides steering assistance when dynamic radar cruise control with full-speed range is operating to keep the vehicle in its lane.

The LKA system recognizes visible white or yellow lines with the camera sensor on the upper portion of the front windshield.

### Turning the LKA system on



Press the LKA switch to turn the LKA system on.

The LKA indicator illuminates and a message is displayed on the multi-information display.


Press the LKA switch again to turn the LKA system off.

When the LKA system is turned on or off, operation of the LKA system continues in the same condition the next time the hybrid system is started.

## Dynamic Radar Cruise Control with Full-Speed Range (if equipped)


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

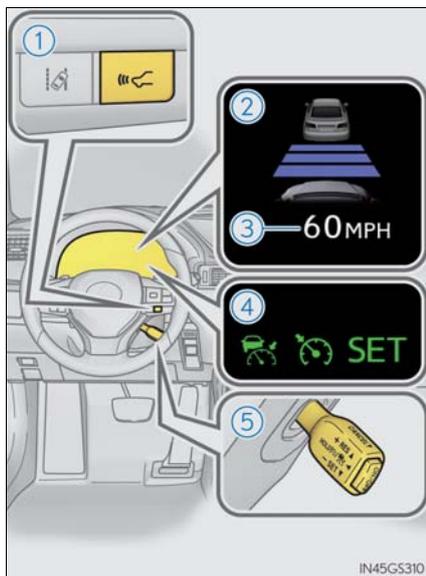

- ① Vehicle-to-vehicle distance switch
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

## ■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)

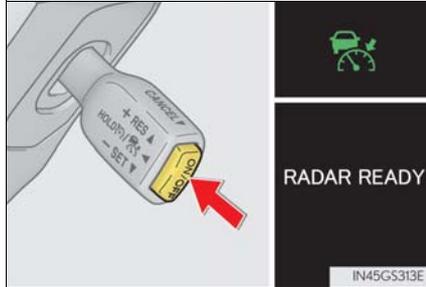


- 1** Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

 If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode.




- 2** Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.


If the lever is operated while the vehicle speed is below approximately 30 mph (50 km/h) and a preceding vehicle is present, the set speed will be adjusted to approximately 30 mph (50 km/h).

## ■ Adjusting the set speed

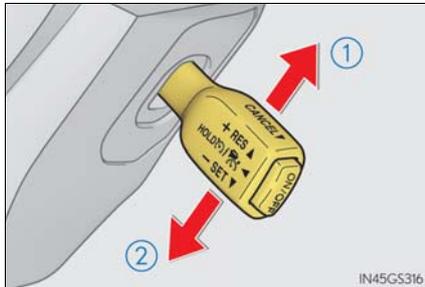

- ① Increases the speed  
(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)
- ② Decreases the speed  
Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.


## ■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

 

Pressing the switch changes the vehicle-to-vehicle distance as follows:

- ① Long
  - ② Medium
  - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned ON mode. If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.


## ■ Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

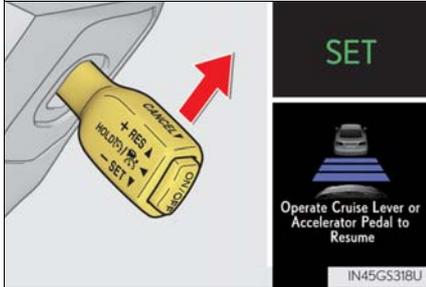

After the vehicle ahead of you starts off, push the lever up.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

## ■ Canceling and resuming the speed control

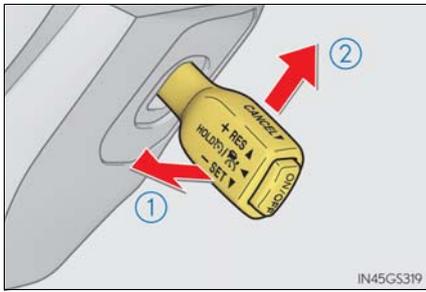

- ① Pulling the lever toward you cancels the speed control.


The speed control is also canceled when the brake pedal is depressed.

(When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)

- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, when a vehicle ahead is not detected, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.


## ■ Selecting constant speed control mode

 

- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.

Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

 Switching to constant speed control mode is only possible when operating the lever with the cruise control off.




- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.


## Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

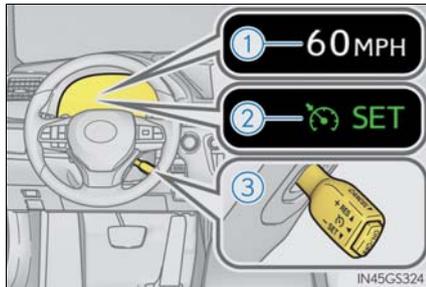


- ① Set speed
- ② Indicators
- ③ Cruise control switch

### Setting the vehicle speed

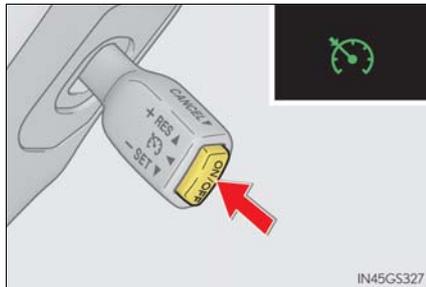


 - 1** Press the "ON/OFF" button to activate the cruise control.  
Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.




- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.  
Cruise control "SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

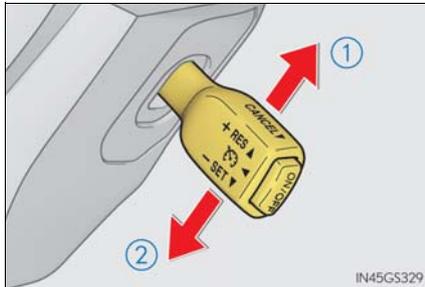

- ① Increases the speed
  - ② Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

## ■ Canceling and resuming the constant speed control

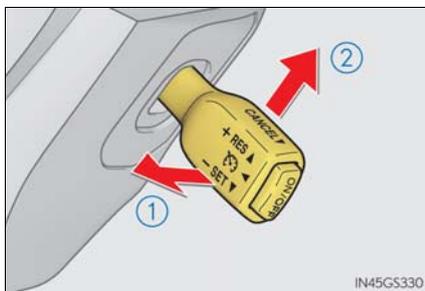


- ① Pulling the lever toward you cancels the constant speed control.  
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Remote Touch screen and a buzzer. Always check the surrounding area when using this system.

### Turning the system on and off

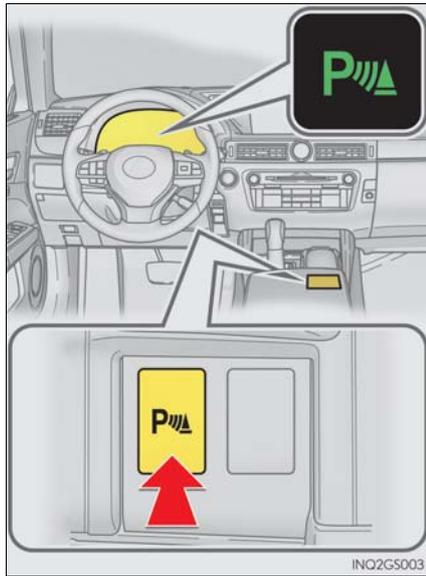


Turns the intuitive parking assist on/off

When on, the indicator light comes on to inform the driver that the system is operational.

## Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

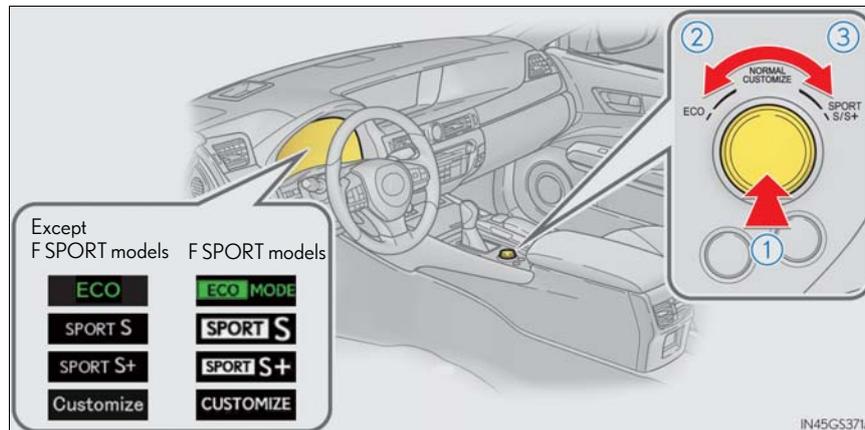

### ① Normal mode/Customized mode

Normal mode and customized mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and customized mode. When customized mode is selected, the "Customize" or "CUSTOMIZE" indicator will be illuminated.

Press the switch to change the driving mode to normal mode when Eco drive mode or sport mode is selected.

- Normal mode

For normal driving.

- Customized mode

Allows you to drive with the power train, chassis and air conditioning system functions set to your preferred settings.

Customized mode settings can only be changed on the drive mode customization display of the Remote Touch screen.

② Eco drive mode

Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.

When not in Eco drive mode and the driving mode select switch is turned to the left, the "ECO" or "ECO MODE" indicator comes on in the multi-information display.

③ Sport mode

- SPORT S mode

Assists acceleration response by controlling the transmission and engine.

When not in SPORT S mode and the driving mode select switch is turned to the right, the "SPORT S" indicator comes on in the multi-information display, and the Hybrid System Indicator changes to the tachometer.

- SPORT S+ mode


Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the hybrid system. Suitable for sporty driving.

When in SPORT S mode and the driving mode select switch is turned to the right, the "SPORT S+" indicator comes on in the multi-information display.

## BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
  - The Rear Cross Traffic Alert function  
Assists the driver when backing up
- These functions use same sensors.

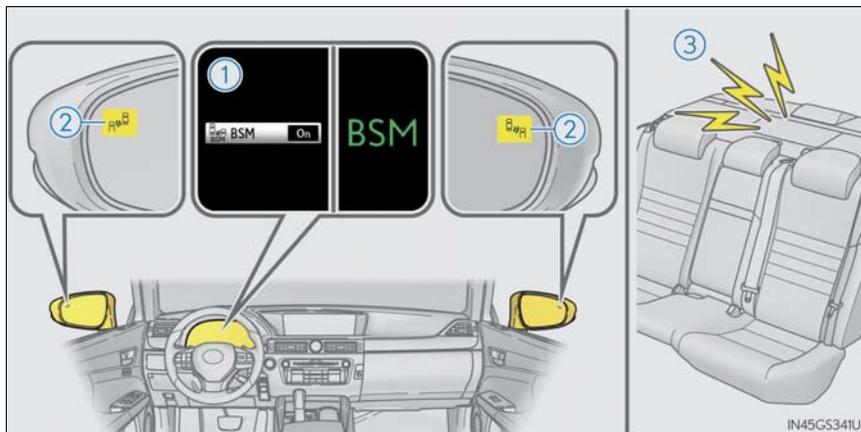

- ① Switching the BSM function  
The Blind Spot Monitor function and Rear Cross Traffic Alert function can be switched on and off using the multi-information display.  
When switched on, the BSM indicator illuminates on the meter and the buzzer sounds.
- ② Outside rear view mirror indicators  
Blind Spot Monitor function:  
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.  
Rear Cross Traffic Alert function:  
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)  
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

## Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

### The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

The illustration used is intended as an example, and may differ from the image that is actually displayed on the multi-information display.

### Initializing the tire pressure warning system

- 1 Turn the power switch to ON mode.
- 2 Press **<** or **>** on the meter control switch and select .
- 3 Press **^** or **v** on the meter control switch and select "Vehicle Settings". Then press .



- 4 Press **^** or **v** on the meter control switch and select "TPMS". Then press and hold  until a message is displayed.


The message will be displayed on the meter and the tire pressure warning light will blink slowly 3 times.

When the message disappears, initialization is complete.

## Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.

### Basic operation

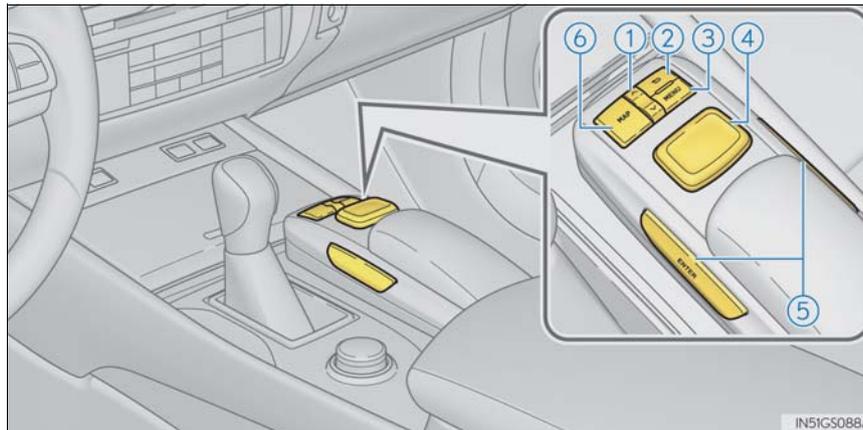

- ① “^v” button  
Press this button to change map scale and scroll through lists.
- ② Back button  
Press this button to display the previous screen.
- ③ “MENU” button  
Press this button to display the “Menu” screen.
- ④ Remote Touch knob  
Move in the desired direction to select a function, letter and screen button.  
Press the knob to enter the selected function, letter or screen button.
- ⑤ “ENTER” buttons  
Press this button to enter the selected function, letter or screen button.
- ⑥ “MAP” button  
Press this button to display the vehicle’s current position.

## ■ “Menu” screen

Press the “MENU” button on the Remote Touch to display the “Menu” screen.  
The display may differ depending on the type of the system.

When an interruption screen is being displayed on the side display, the “Menu” screen will be shown on the main display.



- ① “Destination” (→P.59)
- ② “Radio” (→P.68)
- ③ “Media” (→P.68)
- ④ “Phone” (→P.62)
- ⑤ “LEXUS App Suite”
- ⑥ “Info”
- ⑦ “Climate” (→P.71)
- ⑧ “Setup”
- ⑨ “Display” (→P.55)

## ■ Display



Press the “MENU” button on the Remote Touch and select “Display” on the “Menu” screen.

- ① Turns the screen off
- ② Turns day mode on/off
- ③ Adjust the screen display
- ④ Adjust the camera display

## ■ Screen scroll operation



To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

- ① Cursor mark
- ② Distance from the current position to the cursor mark
- ③ Register as a memory point
- ④ Set as a destination

## ■ Setting a route

While route guidance is operating, you can change the route using the following method.



**1** Select .

**2** Select "Edit Route".

**3** Select the item to be set.

- ① Adding destinations
- ② Deleting destinations
- ③ Reordering destinations
- ④ Route preferences
- ⑤ Route type
- ⑥ Detour setting
- ⑦ Starting from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## 12.3-inch Display

### Full screen display

The following functions can be displayed full screen:

- Initial screen
- "Menu" screen (→P.55)
- Map screen

### Split-screen display



Different information can be displayed on the left and right of the screen. For example, air conditioning system screen can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

- ① Main display
- ② Side display

### Display the side display

#### Basic screens

The following functions can be displayed and operated on the side display.



- ① Navigation system
- ② Audio (→P.66)
- ③ Phone
- ④ Vehicle information (→P.18)
- ⑤ Air conditioning system (→P.71)


#### Interruption screens

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist (if equipped) (→P.49)
- Phone (→P.62)
- Destination Assist
- Driving mode (→P.50)

## Navigation System

### Register home

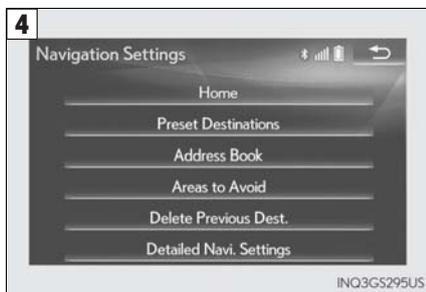

- 1** Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Navigation".
- 4** Select "Home".
- 5** Select "Set Home Location".
- 6** Select "Address".
- 7** Select "City".
- 8** Enter a city name and select "OK".
- 9** Select the desired city name.  
For security reasons, use a point close to your home instead of your actual home address.
- 10** Enter a street name and select "OK".
- 11** Select the desired street name.
- 12** Enter a house number and select "OK".
- 13** Select "Enter".
- 14** Select "OK".

## ■ Destination search

### ■ Search by address



#### ► Search by city



#### ► Search by street address



**1** Press the “MENU” button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.

**2** Select “Destination”.

**3** Select “Address”.

**4** Select “City”.

**5** Enter a city name and select “OK”.

**6** Select the desired city name.

**7** Enter a street name and select “OK”.

**8** Select the desired street name.

**9** Enter a house number and select “OK”.

**10** Select “Go”.

**11** Select “OK”.

**4** Select “Street Address”.

**5** Enter a house number and select “OK”.

**6** Enter a street name and select “OK”.

**7** Select the desired street name.

**8** Enter a city name and select “OK”.

**9** Select the desired city name.

**10** Select “Go”.

**11** Select “OK”.

### ■ Search by point of interest



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".

### ▶ Search by name



- 4 Select "Name".
- 5 Enter a POI name and select "OK".




- 6 Select the desired POI.
- 7 Select "Go".
- 8 Select "OK".

► Search by category



4 Select "Category".

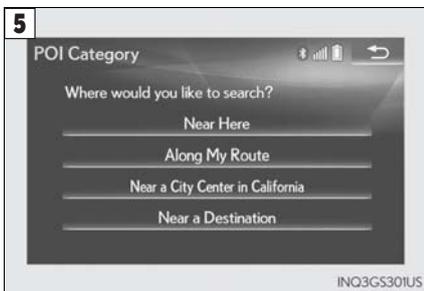

5 Select the desired search point.

6 Select the desired POI category.

7 Select the desired POI.

8 Select "Go".

9 Select "OK".

► Search by phone number



4 Select "Phone #".

5 Enter a phone number and select "OK".

6 Select "Go".

7 Select "OK".

## Hands-free System For Cellular Phone


### Bluetooth® phone pairing

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.



- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the "MENU" button on the Remote Touch. Please refer to P.54 for the Remote Touch operation.
- 3 Select "Phone".
- 4 Select "Yes" to register a phone.
- 5 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.
- 6 Register the Bluetooth® device using your Bluetooth® device.
- 7 Check that a confirmation screen is displayed, indicating pairing was successful (a Bluetooth® link has been established but registration is not yet complete).
- 8 Check that "Connected" is displayed and registration is complete.

## ■ Contacts transfer

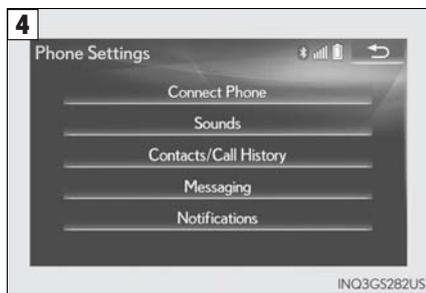

- 1** Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Phone".
- 4** Select "Contacts/Call History".
- 5** Select "Transfer Contacts from Phone".
- 6** Transfer the contact data to the system using a Bluetooth<sup>®</sup> phone.
- 7** Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.


## ■ Registering the contacts in the favorites list



- 1** Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Phone".
- 4** Select "Contact/Call History".
- 5** Select "Add Favorite".
- 6** Select the desired contact to add to the favorites list.
- 7** Check that a confirmation screen is displayed when the operation is complete.

## ■ Calling by name

You can call by giving a name registered in the contacts. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

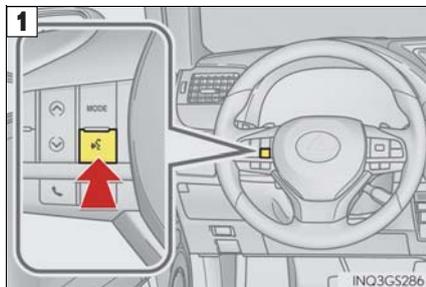

- 1** Press the talk switch.
- 2** Say "Call <contacts> <phone types>".  
In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact.  
For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"

Talk switch: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by favorites list

---

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select the "Favorites" tab and select the desired contact.
- 4 Select the desired number.
- 5 Check that the "Call" screen is displayed.

## ■ Calling the message sender

---

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select .
- 4 Select the desired message.
- 5 Select "Call".
- 6 Check that the "Call" screen is displayed.

## ■ Receiving a call

---

When a call is received, call screen is displayed with a sound.

 
Call screen can also be displayed on the side display.

Press the  switch on the steering wheel to talk on the phone.

To refuse to receive the call, press the  switch on the steering wheel.

## ■ Steering switches

---



- ① Sending/Receiving/Phone top screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

## Audio System

### ■ Audio control screen

Follow the procedure below to display the audio control screen.

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.  
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media".

### ■ Side Display

#### ▶ Radio operation

On the side display, preset stations can be registered and selected.



- 1 Select "▽".
- 2 Select the desired source.
  - 1 Select to tune in to the desired preset station/channel

#### ▶ Media operation

 
Operations such as selecting a chapter, file or track are carried out on the screen.



- 1 Select "▽".
- 2 Select the desired source.
  - 1 Select a chapter/track/file  
Select and hold to rewind
  - 2 Stop the video screen
  - 3 Play/pause
  - 4 Select a chapter/track/file  
During playback: Select and hold to fast forward  
During a pause: Select and hold to slow forward

## ■ Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.




- ① Increases/decreases volume
- ② Radio mode: Selects a radio station  
SAT mode: Selects a channel  
Audio CD mode: Selects a track  
MP3/WMA/AAC disc mode: Selects a file  
DVD mode: Selects a chapter  
USB mode: Selects a file/track  
iPod mode: Selects a track/file  
BT audio mode: Selects a track
- ③ Press: Change audio modes  
Press and hold: Mute/unmute or pause/resume the current operation

## ■ Basic operation



- ① Display the audio source selection screen
- ② Display the sound setting screen
- ③ Adjust volume  
Turn the audio system on/off
- ④ Select a radio/media mode
- ⑤ Play/Pause  
Turn mute on/off

## ■ Radio

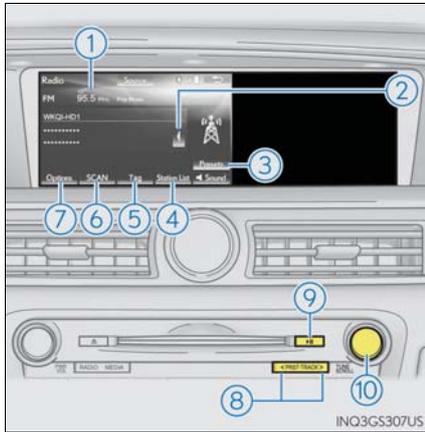

- ① Display (HD) multicast channels available
- ② Display the cache radio operation buttons
- ③ Display the radio preset buttons
- ④ Display a list of receivable stations
- ⑤ Store artist and song title information
- ⑥ Scan for receivable stations
- ⑦ Change the screen buttons to the optional screen buttons
- ⑧ Press: Select a preset station  
Press and hold: Seek for a station
- ⑨ Turn mute on/off (Cache radio only)
- ⑩ Step up/down frequencies  
Move up/down the list

## ■ Entering station/channel presets

- ① Select the desired station/channel by using the tune, the seek or the scan function.
- ② Select "Presets".
- ③ Select one of the screen buttons and hold it until a beep is heard, indicating that the station/channel has been set.

## ■ DVD player/CD player

### ■ Playing an audio CD




- ① Display a track list
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track  
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track  
Rewind
- ⑦ Eject a disc
- ⑧ Select a track  
Fast forward/rewind
- ⑨ Select a track  
Move up/down the list

### ■ Playing a CD with MP3/WMA/AAC files



- ① Select a folder
- ② Display a folder list
- ③ Set random playback
- ④ Set repeat playback
- ⑤ Select a file  
Fast forward
- ⑥ Play/Pause
- ⑦ Select a file  
Rewind
- ⑧ Eject a disc
- ⑨ Select a file  
Fast forward/rewind
- ⑩ Select a file  
Move up/down the list

### ■ Playing a DVD

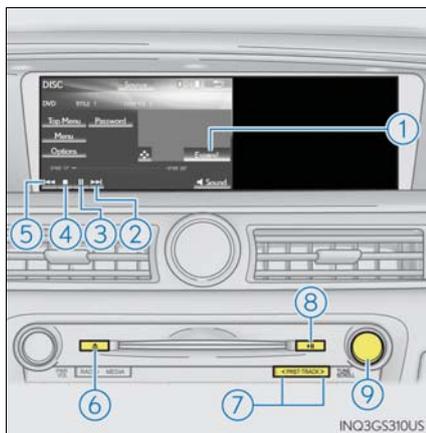

- ① Display expanded screen video
- ② Select a chapter  
Fast forward/slow forward
- ③ Play/Pause
- ④ Stop the video screen
- ⑤ Select a chapter  
Rewind
- ⑥ Eject a disc
- ⑦ Select a chapter  
Fast forward/rewind
- ⑧ Play/Pause
- ⑨ Select a chapter

## ■ Operating an iPod

### ■ iPod audio



- ① Display the play mode selection screen
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track  
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track  
Rewind
- ⑦ Select a track  
Fast forward/rewind
- ⑧ Select a track  
Move up/down the list


### ■ iPod video



- ① Display expanded screen video
- ② Select a track  
Fast forward
- ③ Play/Pause
- ④ Select a track  
Rewind
- ⑤ Select a track  
Fast forward/rewind
- ⑥ Select a track  
Move up/down the list

## Front Automatic Air Conditioning System

### Control panel

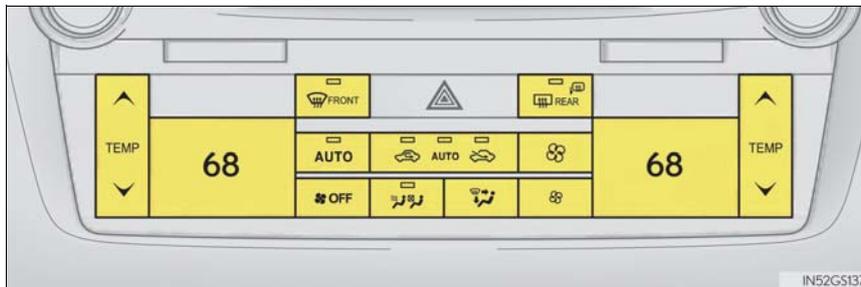

#### Adjusting the temperature setting

Press “^” on  to increase the temperature and “v” to decrease the temperature.

#### Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.  
Press the “OFF” button to turn the fan off.

#### Changing the air flow mode

To change the airflow, press .

The air outlets used are switched each time the button is pressed. (→P.72)

## ■ Control screen

### ▶ Without rear air conditioning system



### ▶ With rear air conditioning system



- ① Adjust the left-hand side temperature setting
- ② Select the air flow to the feet and operate the windshield defogger
- ③ Adjust the fan speed setting
- ④ Select the air flow mode\* (the front seats)
- ⑤ Function on/off indicators on the option control screen
- ⑥ Display the option control screen (→P.73)
- ⑦ Adjust the right-hand side temperature setting
- ⑧ Set eco air conditioning mode  
Air conditioning and heater output is limited to prioritize fuel economy.
- ⑨ Adjust the temperature for the driver's and front passenger's seats separately (DUAL mode) (→P.74)
- ⑩ Set cooling and dehumidification function on/off
- ⑪ Select to set automatic mode on/off
- ⑫ Select the air flow mode\* (the left-hand side)
- ⑬ Select the air flow mode\* (the right-hand side)
- ⑭ Display the rear air conditioning operation screen (→P.75)
- ⑮ Adjust the temperature for the driver's, front passenger's and rear seats (→P.75) separately (3-ZONE mode) (→P.74)

To adjust or select settings, move the Remote Touch knob to select the screen button, and then press the Remote Touch knob or the "ENTER" button of Remote Touch to enter the selected function.

- \*:
-  — Air flows to the upper body
  -  — Air flows to the upper body and feet
  -  — Air flows to the feet

## ■ Option control screen


Select  on the control screen to display the option control screen. The functions can be switched on and off.




- ① Prevent ice from building up on the windshield and wiper blades (if equipped)
- ② Remove pollen from the air (Micro dust and pollen filter)

## ■ Side display

### ▶ Without rear air conditioning system

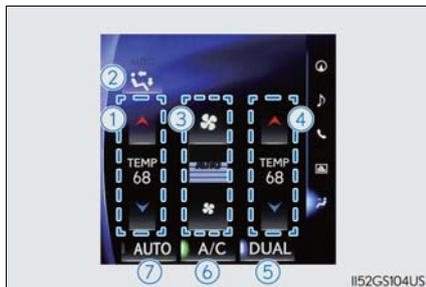

### ▶ With rear air conditioning system

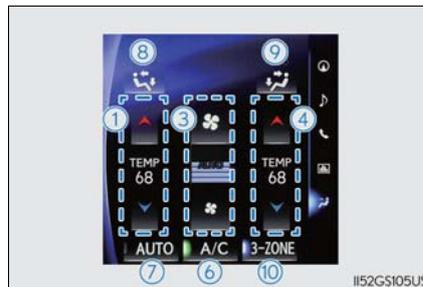

- ① Adjust the left-hand side temperature setting
- ② Select the air flow mode (the front seats)
- ③ Adjust the fan speed setting
- ④ Adjust the right-hand side temperature setting
- ⑤ Adjust the temperature for the driver's and front passenger's seats separately (DUAL mode) (→P.74)
- ⑥ Set cooling and dehumidification function on/off
- ⑦ Select to set automatic mode on/off
- ⑧ Select the air flow mode (the left-hand side)
- ⑨ Select the air flow mode (the right-hand side)
- ⑩ Adjust the temperature for the driver's, front passenger's and rear seats (→P.75) separately (3-ZONE mode) (→P.74)

## ■ Using the automatic mode

---

Press  or select "AUTO" on the operation screen to turn on the airflow and adjust the temperature setting.

## ■ Adjusting the temperature for the driver's and front passenger's seats separately (DUAL mode) (vehicles without rear air conditioning system)

---

To turn on the DUAL mode, perform any of the following procedures:

- Select "DUAL" on the option control screen.
- Adjust the passenger's side temperature setting.

## ■ Adjusting the temperature for the driver's, front passenger's and rear seats separately (3-ZONE mode) (vehicles with rear air conditioning system)

---

To turn on the 3-ZONE mode, perform any of the following procedures:

- Select "3-ZONE" on the option control screen.
- Adjust the passenger's side or rear seats temperature setting.

## ■ Using the S-FLOW mode

---

Press .

When  is pressed, the airflow changes as follows.

Without rear air conditioning system:

Air flows to the front seats only.\*

 
With rear air conditioning system:

Air flows to the front seats only, and if the passenger seat is unoccupied, the set temperature, outside humidity and temperature inside the cabin are assessed, and air flows to the driver seat only.\*

\*: Air may also flow to the rear seats depending on the situation.

## Rear Air Conditioning System (if equipped)

### Control panel



- ① Set automatic mode on/off
- ② Turn the fan off
- ③ Change the airflow mode
- ④ Adjust the temperature setting

### Front controller



 
- ① Adjust the rear seat temperature setting
- ② Disabling the switches on the rear armrest
- ③ Turn the fan off (rear seat)
- ④ Select to set automatic mode on/off (rear seat)

## Seat Heaters/Seat Ventilators


Seat heaters heat the side grips of the seats, respectively. Seat ventilators maintain good airflow by blowing air from the seats.

### Front seat heaters and ventilators/rear seat heaters

#### ▶ Front seats



#### ▶ Rear seats (if equipped)

 

- ① Seat heater switches  
The indicator light (yellow) on the switch comes on when the seat heater is operating.
- ② Seat ventilator switches (front seats only)  
The indicator light (green) on the switch comes on when the seat ventilator is operating.
- ③ Level indicator lights  
The seat heater temperature level or the seat ventilator fan speed level (for front seats only) is displayed.
- ④ "AUTO" indicator lights

● Modes and indicators

The mode can be changed by pressing the switch.

Mode	"AUTO" indicator light	Level indicator lights
Off	Off	Off
Automatic *	On	3 to 1, or off
Hi	Off	3
Mid	Off	2
Lo	Off	1


\*: When automatic mode is selected, the level automatically changes depending on the air conditioning settings.

If the driving mode select switch is switched to Eco drive mode in cold temperatures, the seat heater may be automatically operated to assist heating performance. (→P.50)

## Voice Command System
 
### Basic operation

**NOTE:** When entering voice commands you must wait until after the beep to speak.



- 1** Press the talk switch on the steering wheel.
- 2** - If you know the command:  
Press the talk switch again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press the talk switch again.
- 3** Say a command after the beep.

Continue on to pages 79-82 for a detailed list of Voice Commands for the following categories:

Basic.....	P.79
Apps.....	P.79
Navi .....	P.79
Phone .....	P.80
Radio .....	P.80
Audio.....	P.81
Info .....	P.81
Climate.....	P.82

- Important voice commands information and tips
  - Voice commands can be used while driving.
  - You must wait until after the beep to say a command.
  - If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

## ■ Command list

### ▶ Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

### ▶ Apps (if equipped)

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

### ▶ Navi

Command	Action
"Find <POI category>"	Displays a list of <POI category <sup>*1</sup> > near the current position <sup>*2</sup>
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

\*1: For example; "Gas stations", "Restaurants", etc.

\*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book
"Mobile Assistant"	Activates Apple's Siri <sup>®</sup> Eyes Free mode

► Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode

► **Audio**

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* Audio"	Selects Bluetooth® audio mode
"External"	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

\*: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

► **Info**

Command	Action
"Destination Assist"*	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

\*: Vehicles with navigation system


► Climate

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees *

\*: Only within the possible temperature range of the air conditioning system

## Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

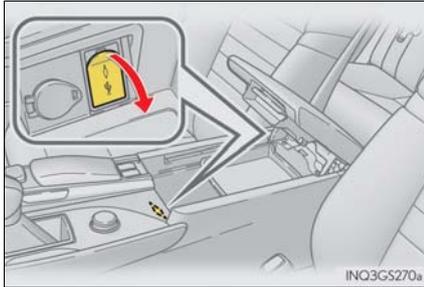


Open the console box, open the cover and connect the portable audio device.

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

### Programming HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

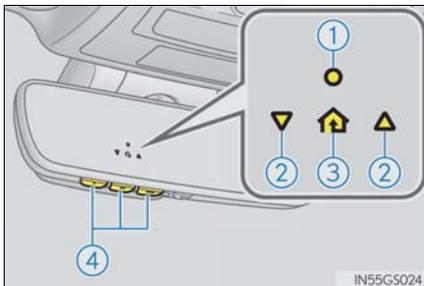

- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ HomeLink® icon  
Illuminates while HomeLink® is operating
- ④ Buttons


### Before programming HomeLink®

 - During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the "Learn" or "Smart" button on the garage door opener motor.

## ■ Programming HomeLink®


Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).



- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

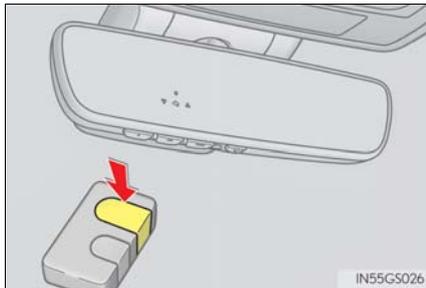

- 3** Program a device.

### ► Programming a device other than an entry gate (for U.S.A. owners)

Press and hold the remote control transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

### ► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market


Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).

- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
  - Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink® button is pressed and released.
  - Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink® button for 2 seconds then release it.
  - If the garage door or other device does not operate, proceed to "Programming a rolling code system".

- 5 Repeat the steps above to program another device for any of the remaining HomeLink<sup>®</sup> buttons.


### ■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

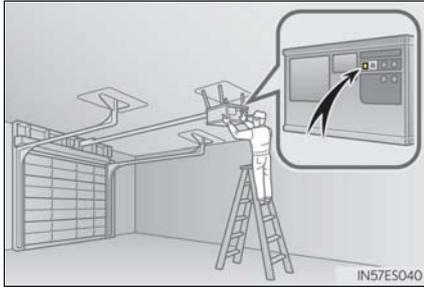


- 1 Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

 This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.



- 2 Press and release the “Learn” or “Smart” button.

Perform **3** within 30 seconds after performing **2**.

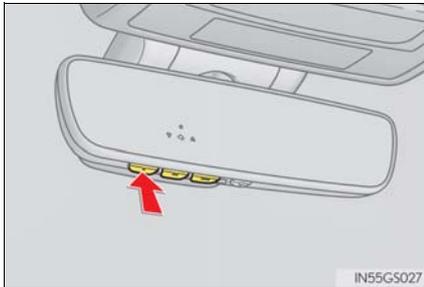

- 3 Press and hold the desired HomeLink<sup>®</sup> button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor operates when the HomeLink<sup>®</sup> button is pressed, the garage door opener motor recognizes the HomeLink<sup>®</sup> signal.

### ■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.HomeLink.com](http://www.HomeLink.com).)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink<sup>®</sup>, both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform **2** and **3** within the first 10 presses of the HomeLink<sup>®</sup> button after programming has been completed.

- 2 Press a programmed HomeLink<sup>®</sup> button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink<sup>®</sup> button, after the garage door operation has stopped, press the "Learn" or "Smart" button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

### ■ Reprogramming a single HomeLink<sup>®</sup> button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink<sup>®</sup> button.
- 2 When the HomeLink<sup>®</sup> indicator starts flashing (orange), continue to hold the HomeLink<sup>®</sup> button and perform "Programming HomeLink<sup>®</sup>" **1** (it takes 20 seconds for the HomeLink<sup>®</sup> indicator to start flashing).

### ■ Operating HomeLink<sup>®</sup>

---


Press the appropriate HomeLink<sup>®</sup> button. The HomeLink<sup>®</sup> indicator light should turn on.

## Lexus Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components

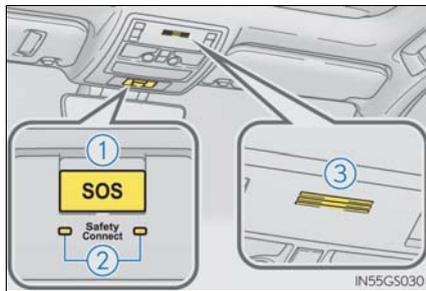

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## **Lexus Enform (for U.S.A., if equipped)**

Lexus Enform is a service that includes Safety Connect, Remote, Destinations and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### **Function achieved by using a cellular phone**

---

#### **Services**

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

#### **● LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

#### **Subscription**

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system**

---

#### **Services**

Of the functions included with Lexus Enform and LEXUS Enform Destinations (Destination Assist) can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

### ● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

### ■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

## ■ Function achieved by using DCM

---

### ■ Services

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P.87)

## ■ LEXUS Enform Remote

---

### ■ Services

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

### ■ Subscription

→P.90

## **XM Satellite Radio**

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

### **■ Subscription**

For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included.

Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-447-0011

► **Canadian Customers:**

 
Visit [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677

## Fuel Tank Cap

### ■ Before refueling the vehicle


- Turn the power switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

### ■ Opening the fuel tank cap



- 1** With the doors unlocked, press the center of the rear edge of the fuel filler door.

 Push until you hear a click and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.



- 2** Turn the fuel tank cap slowly to remove it and put it into the holder on the fuel filler door.

**What to do if...**

**List of Warning/Indicator Lights**

**Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.**



(U.S.A.)

Brake system warning light



(Canada)

**Immediately stop the vehicle in a safe place and contact your Lexus dealer.**



Charging system warning light\*<sup>1</sup>

**Have the vehicle inspected by your Lexus dealer immediately.**



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(Flashes)

"AFS OFF" indicator\*<sup>2</sup>



(Flashes)

Brake hold operated indicator



(Flashes)

(U.S.A.)

Parking brake indicator



(Flashes)

(Canada)



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



Brake system warning light



(Flashes)

PCS (Pre-Collision System) warning light\*<sup>2</sup>



(Blinking and then continuously on)

Tire pressure warning light



Slip indicator



LKA warning light\*<sup>2</sup>

**For further information, refer to the OWNER'S MANUAL.**

## What to do if...

### Follow the correction procedures.



Low fuel level warning light



Master warning light



Seat belt reminder light



Tire pressure warning light\*<sup>3</sup>

(Illuminates without blinking)

### See the OWNER'S MANUAL



Turn signal indicator



VSC OFF indicator



Headlight indicator (U.S.A.)



PCS warning light\*<sup>2</sup>



Tail light indicator (Canada)



BSM (Blind Spot Monitor) outside rear view mirror indicators\*<sup>2</sup>



Headlight high beam indicator



BSM (Blind Spot Monitor) indicator\*<sup>2</sup>



Automatic High Beam indicator\*<sup>2</sup>



Brake hold standby indicator



Cruise control indicator



Brake hold operated indicator



Dynamic radar cruise control indicator\*<sup>2</sup>



Low outside temperature indicator



Cruise control "SET" indicator



"READY" indicator



LKA indicator\*<sup>2</sup>



EV indicator



Intuitive parking assist indicator\*<sup>2,4</sup>



(U.S.A.)  
Parking brake indicator



"AFS OFF" indicator\*<sup>2</sup>



(Canada)



Slip indicator



"AIR BAG ON/OFF" indicator

For further information, refer to the OWNER'S MANUAL.

## What to do if...

### See the OWNER'S MANUAL

#### ● Drive mode indicators

 EV drive mode indicator

#### ▶ Except F SPORT models

 Eco drive mode indicator

 "SPORT S" indicator

 "SPORT S+" indicator

 "Customize" indicator

 Snow mode indicator

#### ▶ F SPORT models

 Eco drive mode indicator

 "SPORT S" indicator

 "SPORT S+" indicator

 "CUSTOMIZE" indicator

 Snow mode indicator

For further information, refer to the OWNER'S MANUAL.

\*1: F SPORT models

\*2: If equipped


\*3: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

\*4: Refer to "NAVIGATION SYSTEM OWNER'S MANUAL"

## What to do if...

### If the electronic key does not operate properly

#### ■ Unlocking and locking the doors

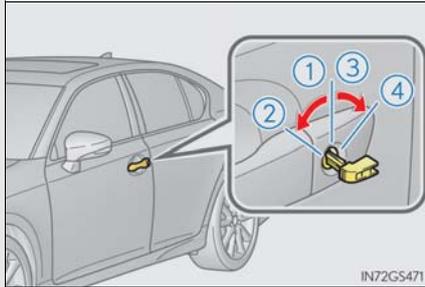


Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof\* (turn and hold)
- ③ Unlocks the door  
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof\* (turn and hold)

\*: This setting must be customized at your Lexus dealer.


#### ■ Unlocking the trunk

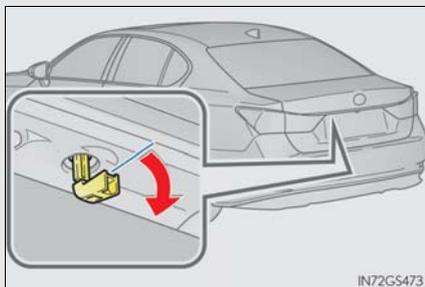

Turn the mechanical key clockwise to open.

## What to do if...

### Starting the hybrid system

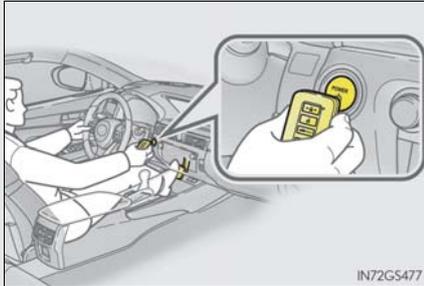

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch.  
When the electronic key is detected, a buzzer sounds and the power switch will turn to ON mode.  
When the smart access system with push-button start is deactivated in customization setting, the power switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the power switch.

In the event that the hybrid system still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the OWNER'S MANUAL. If you need further assistance, contact your Lexus dealer.

### If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

**Brake pedal**

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.23)

If the hybrid system still does not start, see the OWNER'S MANUAL for more information or contact your Lexus dealer.



#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)

- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)

- Canada: [www.lexus.ca](http://www.lexus.ca)

©2017 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.