

FOREWORD

Welcome to the growing group of value-conscious people who drive Lexus vehicles. We are proud of the advanced engineering and quality construction of each vehicle we build.

This Owner's Manual explains the features of your new Lexus. Please read it and follow the instructions carefully so that you can enjoy many years of safe motoring.

When it comes to service, remember that your Lexus dealer knows your vehicle best and is interested in your complete satisfaction. Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, or you need emergency assistance for any reason, please call the following number:

U.S. OWNERS

- When traveling in the U.S. mainland or Canada:
Lexus Roadside Assistance 1-800-25-LEXUS (Toll-Free)
(1-800-255-3987)
- HAWAII:
Lexus Customer Service Assistance 1-800-25-LEXUS (Toll-Free)
(1-800-255-3987)

CANADIAN OWNERS

- Please refer to the "Owner's Guide" or "Owner's Manual Supplement".

Please leave this Owner's Manual in this vehicle at the time of resale. The next owner will need this information also.

All information and specifications in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

TOYOTA MOTOR CORPORATION

INTRODUCTION

New vehicle warranty

Your new vehicle is covered by the following Lexus limited warranties:

- New vehicle warranty
- Emission control systems warranty
- Others

For further information, please refer to the “Owner’s Guide”, “Owner’s Manual Supplement” or “Warranty Booklet”.

Your responsibility for maintenance

It is the owner’s responsibility to make sure the specified maintenance is performed. Section 5 of this Owner’s Manual gives details of these maintenance requirements. Included in Section 6 is general maintenance. For scheduled maintenance information, please refer to the “Owner’s Manual Supplement/Maintenance Schedule”.

Accessories, spare parts and modification of your Lexus

A wide variety of non–genuine spare parts and accessories for Lexus vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Lexus vehicle.

This vehicle should not be modified with non–genuine Lexus products. Modification with non–genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Spark ignition system of your Lexus

The spark ignition system in your Lexus meets all requirements of the Canadian Interference–Causing Equipment Standard.

Installation of a mobile two–way radio system

As the installation of a mobile two–way radio system in your vehicle could affect electronic systems such as the multiport fuel injection system/sequential multiport fuel injection system, cruise control system, anti–lock brake system, SRS airbag system and seat belt pretensioner system, be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation.

Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

HOW TO USE THIS MANUAL

The contents of this manual are explained briefly on this page to help you make the best use of the manual. Please read this page and the rest of the Owner's Manual carefully to make sure you fully understand the operation of your vehicle.

This will help you enjoy safe and comfortable driving.

TABLE OF CONTENTS

The table of contents and the pictorial index provide easy reference to the appropriate pages.

BASIC OPERATION – QUICK REFERENCE

Operation of basic equipment is briefly explained in an easily understandable way for quick reference.

SECTION 1 – INSTRUMENTS AND CONTROLS

The vehicle's equipment is divided into the 7 groups listed below. Use of the equipment is explained, including any points you should pay particular attention to.

1. Keys and doors
2. Switches
3. Gauges, meters and service reminder indicators
4. Interior equipment
5. Exterior equipment
6. Comfort adjustment
7. Theft deterrent

SECTION 2 – AIR CONDITIONING AND AUDIO

The features of the vehicle's air conditioning and audio are explained in detail. Be sure to read this section so that you can make full use of them.

SECTION 3 – STARTING AND DRIVING

Starting the engine, driving, stopping, operation of features affecting vehicle handling, hints on vehicle safety and safe driving techniques are all explained. Please read everything in this section, and remember – drive safely!

SECTION 4 – IN CASE OF AN EMERGENCY

This section explains what to do in the event of an urgent situation such as the engine not starting or getting a flat tire, etc. If such a problem occurs, check the contents of this Owner's Manual and follow the instructions given.

SECTION 5 – MAINTENANCE

This section explains the importance of regular maintenance. Regular and periodic inspection and maintenance of your Lexus will help to keep your vehicle in its best condition.

SECTION 6 – SERVICE PROCEDURES AND SPECIFICATIONS

Simple maintenance procedure and service data are provided here for your reference should you wish to perform inspection and maintenance yourself.

HOW TO USE THIS MANUAL

INDEX

The page number is listed for each item in the Owner's Manual so that you can rapidly find the item and page you are searching for.


GAS STATION INFORMATION

The information you need to know for appropriate servicing at the gas station is provided here.

QUICK INDEX

This is designed so that you can quickly find the needed information when an urgent situation arises.

Safety symbol

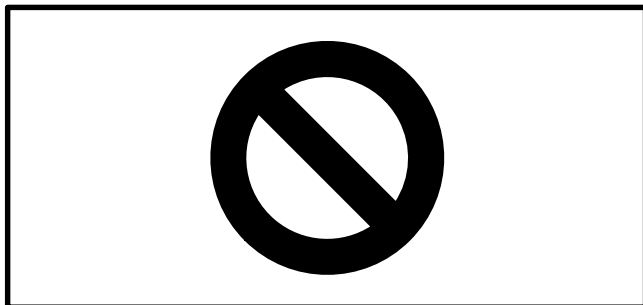

In this manual, you will also see a circle with a slash through it. This means "Do not", "Do not do this", or "Do not let this happen".

Safety and vehicle damage warnings

In this manual you will see CAUTION and NOTICE warnings. These are used in the following ways:

CAUTION


This is a warning against something which may cause injury to people if the warning is ignored. You are informed what you must or must not do in order to avoid or reduce the risk to yourself and other people.

NOTICE

This is a warning against something which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed what you must or must not do in order to avoid or reduce the risk of damage to your Lexus and its equipment.

Your Lexus Owner's Manual provides you with a considerable amount of information. To use this information most effectively, please take the time to familiarize yourself with the contents and use of the manual.

INSTRUMENT PANEL

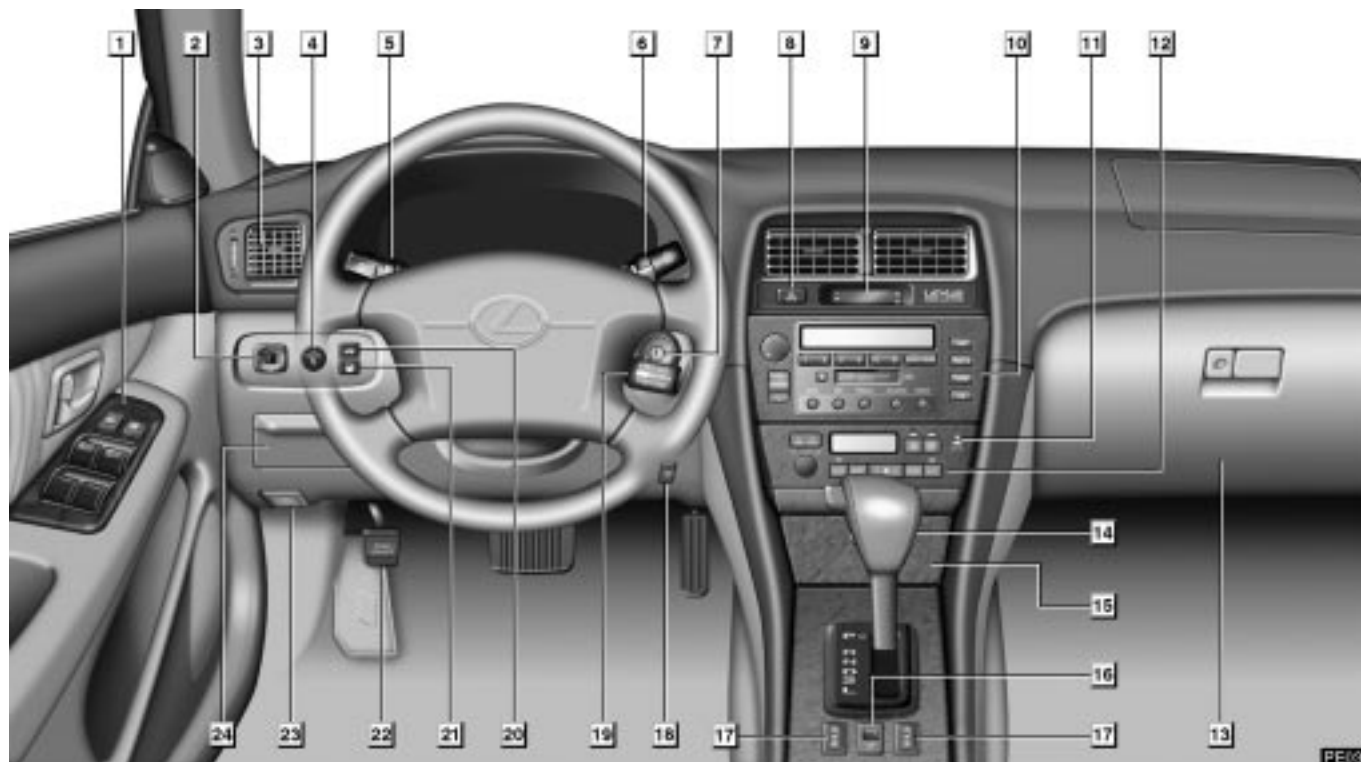


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Door lock switch and power window switches	28, 42	14 Automatic transmission selector lever	284
2 Power rear view mirror control switches	132	15 Ashtray	81
3 Side vents	232	16 Electronic modulated suspension control switch	301
4 Instrument panel light control	69	17 Seat heater switches	49
5 Headlight, turn signal and fog light switch	31	18 Vehicle skid control system off switch or Traction control system off switch	301, 305
6 Wiper and washer switch	36	19 Cruise control switch	297
7 Ignition switch	279	20 Trunk lid opener	105
8 Emergency flasher switch	48	21 Fuel filler door opener	108
9 Clock	81	22 Parking brake	281
10 Car audio	238	23 Hood lock release lever	102
11 Security indicator light	12, 211	24 Auxiliary box	96
12 Automatic air conditioning controls	217		
13 Glove box/CD automatic changer	85/256		

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in U. S. A.) (Type A)

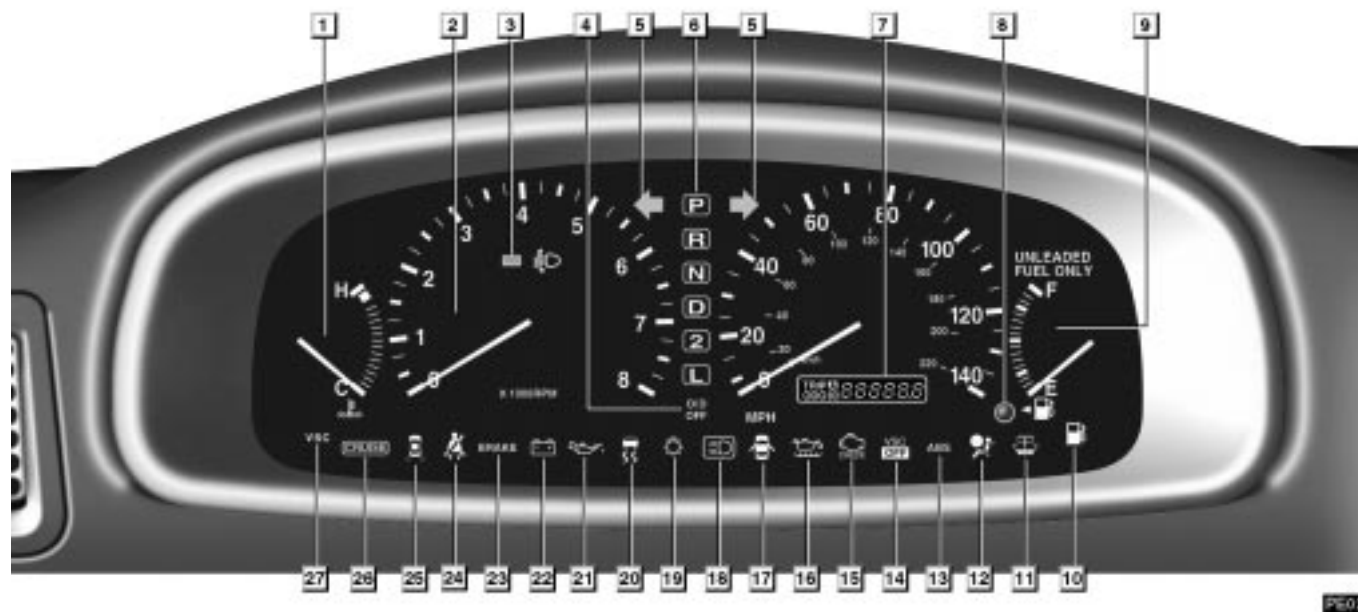


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1	<i>Engine coolant temperature gauge</i>	14	<i>Vehicle skid control system off indicator light</i>
2	<i>Tachometer</i>		65
3	<i>Automatic headlight leveling system warning light</i>	15	<i>Malfunction indicator lamp</i>
	67		64
4	<i>Overdrive off indicator light</i>	16	<i>Low engine oil level warning light</i>
	286		64
5	<i>Turn signal indicator light</i>	17	<i>Open door warning light</i>
	36		65
6	<i>Automatic transmission indicator lights</i>	18	<i>Headlight high beam indicator light</i>
	284		35
7	<i>Odometer and trip meter</i>	19	<i>Headlight indicator light</i>
	58		31
8	<i>“ODO/TRIP” knob</i>	20	<i>Slip indicator light</i>
	58		301, 304
9	<i>Fuel gauge</i>	21	<i>Low oil pressure warning light</i>
	54		64
10	<i>Low fuel level warning light</i>	22	<i>Discharge warning light</i>
	67		63
11	<i>Low washer fluid warning light</i>	23	<i>Brake system warning light</i>
	67		62
12	<i>SRS warning light</i>	24	<i>Seat belt reminder light</i>
	63		63
13	<i>Anti-lock brake system warning light</i>	25	<i>Rear light failure warning light</i>
	65		65
		26	<i>Cruise control indicator light</i>
			297
		27	<i>Vehicle skid control system warning light</i>
			65

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in Canada) (Type A)

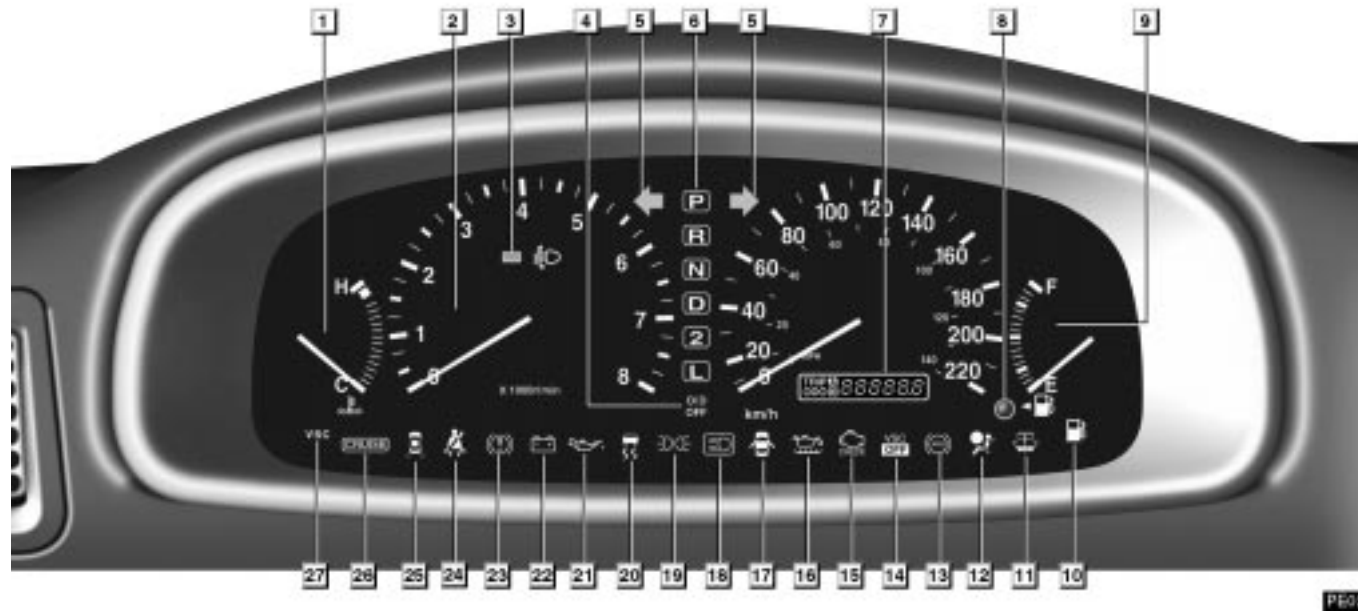


PE022

PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Engine coolant temperature gauge	56	14 Vehicle skid control system off indicator light	65
2 Tachometer	58	15 Malfunction indicator lamp	64
3 Automatic headlight leveling system warning light	67	16 Low engine oil level warning light	64
4 Overdrive off indicator light	286	17 Open door warning light	65
5 Turn signal indicator light	36	18 Headlight high beam indicator light	35
6 Automatic transmission indicator lights	284	19 Tail light indicator light	31
7 Odometer and trip meter	58	20 Slip indicator light	301, 304
8 "ODO/TRIP" knob	58	21 Low oil pressure warning light	64
9 Fuel gauge	54	22 Discharge warning light	63
10 Low fuel level warning light	67	23 Brake system warning light	62
11 Low washer fluid warning light	67	24 Seat belt reminder light	63
12 SRS warning light	63	25 Rear light failure warning light	65
13 Anti-lock brake system warning light	65	26 Cruise control indicator light	297
		27 Vehicle skid control system warning light	65

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in U. S. A.) (Type B)

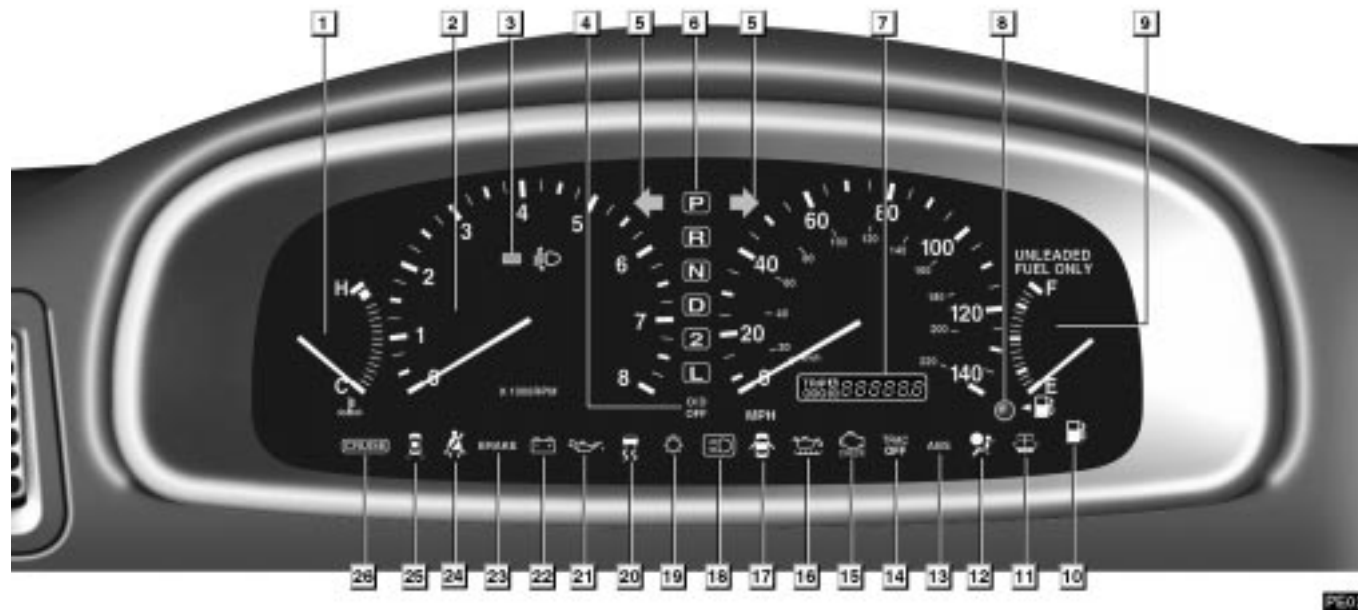


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Engine coolant temperature gauge	56	14 Traction control system off indicator/warning light	66
2 Tachometer	58	15 Malfunction indicator lamp	64
3 Automatic headlight leveling system warning light	67	16 Low engine oil level warning light	64
4 Overdrive off indicator light	286	17 Open door warning light	65
5 Turn signal indicator light	36	18 Headlight high beam indicator light	35
6 Automatic transmission indicator lights	284	19 Headlight indicator light	31
7 Odometer and trip meter	58	20 Slip indicator light	301, 304
8 “ODO/TRIP” knob	58	21 Low oil pressure warning light	64
9 Fuel gauge	54	22 Discharge warning light	63
10 Low fuel level warning light	67	23 Brake system warning light	62
11 Low washer fluid warning light	67	24 Seat belt reminder light	63
12 SRS warning light	63	25 Rear light failure warning light	65
13 Anti-lock brake system warning light	65	26 Cruise control indicator light	297

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in Canada) (Type B)

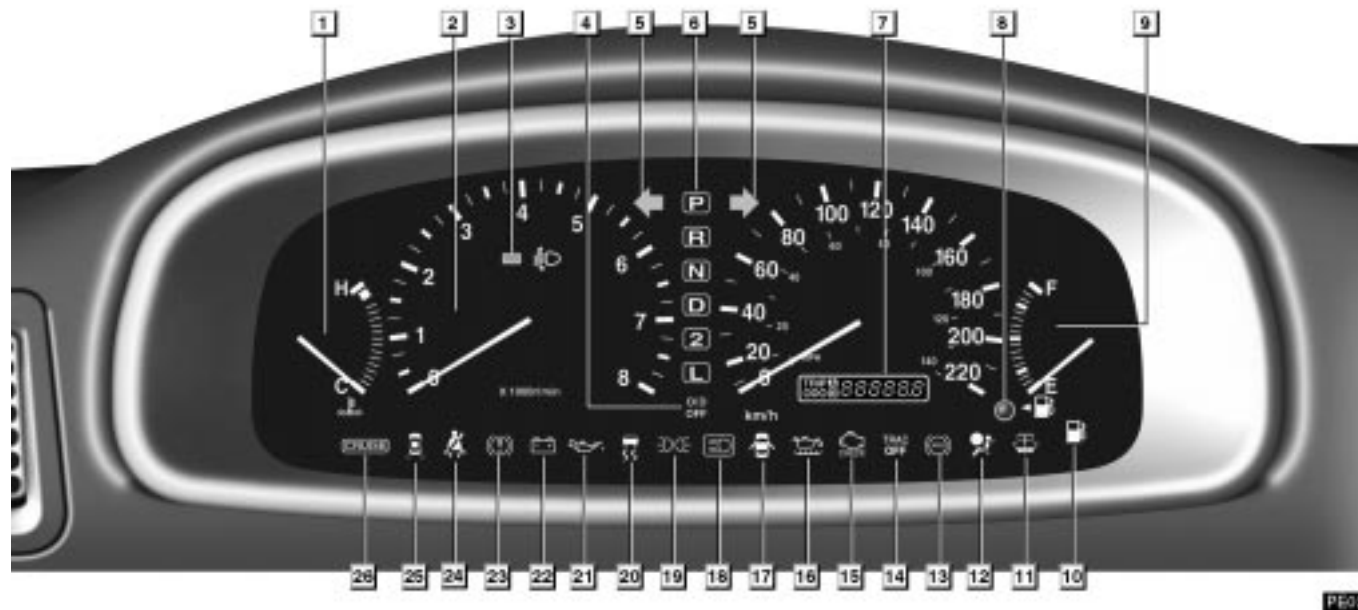


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1 Engine coolant temperature gauge	56	14 Traction control system off indicator/warning light	66
2 Tachometer	58	15 Malfunction indicator lamp	64
3 Automatic headlight leveling system warning light	67	16 Low engine oil level warning light	64
4 Overdrive off indicator light	286	17 Open door warning light	65
5 Turn signal indicator light	36	18 Headlight high beam indicator light	35
6 Automatic transmission indicator lights	284	19 Tail light indicator light	31
7 Odometer and trip meter	58	20 Slip indicator light	301, 304
8 “ODO/TRIP” knob	58	21 Low oil pressure warning light	64
9 Fuel gauge	54	22 Discharge warning light	63
10 Low fuel level warning light	67	23 Brake system warning light	62
11 Low washer fluid warning light	67	24 Seat belt reminder light	63
12 SRS warning light	63	25 Rear light failure warning light	65
13 Anti-lock brake system warning light	65	26 Cruise control indicator light	297

For detailed information, refer to the description given in each section.

SEAT AND STEERING WHEEL

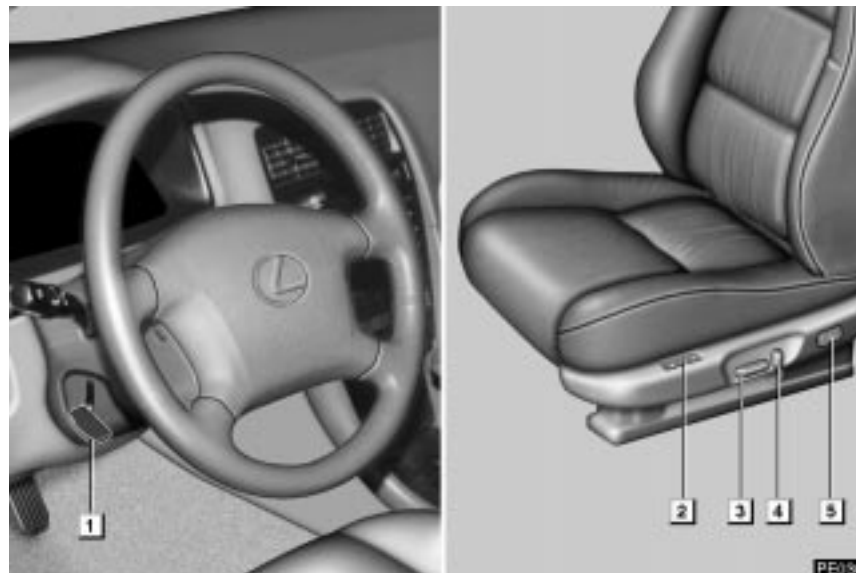


	<i>Page</i>
1 <i>Tilt steering adjustment lever</i>	129
2 <i>Driving position memory switch</i>	204
3 <i>Seat position, seat cushion angle and height control switch</i>	121
4 <i>Seatback angle control switch</i> . .	122
5 <i>Lumbar support control switch</i> .	124

For detailed information, refer to the description given in each section.

PICTORIAL INDEX

EXTERIOR VIEW

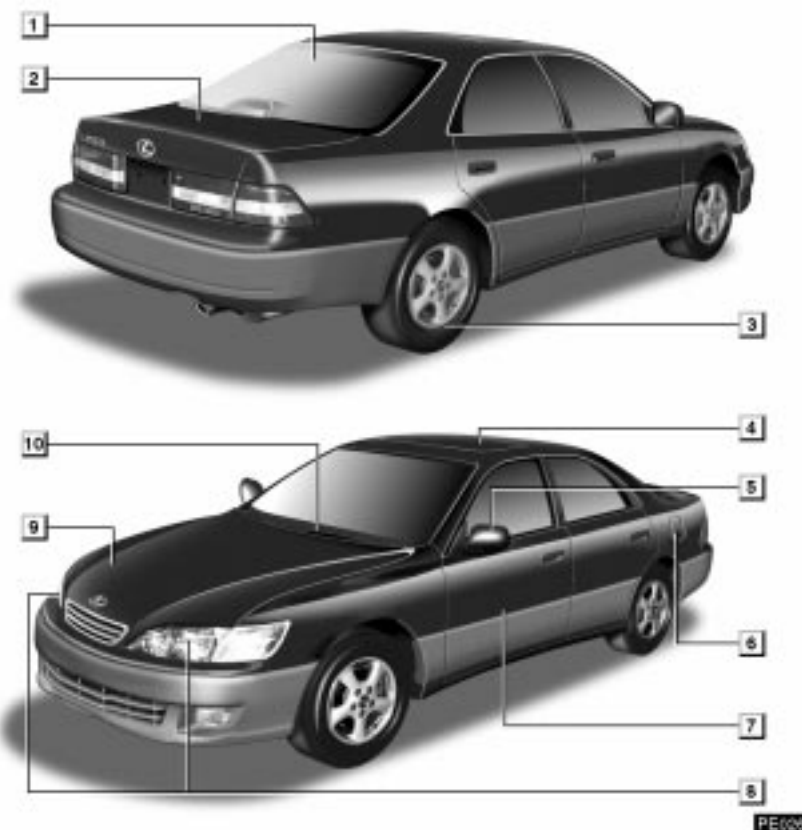

	<i>Page</i>
1 Rear window defogger	41
2 Trunk lid	104
3 Tire and wheel	431
4 Moon roof	111
5 Outside rear view mirror	130
6 Fuel filler door	108
7 Door	24
8 Headlights	31, 469
9 Hood	102
10 Wiper and washer	36, 464

For detailed information, refer to the description given in each section.

BASIC OPERATION

QUICK REFERENCE

Driver's seat	2
Steering wheel	2
Automatic transmission	3
Headlight and turn signal switch	4
Wiper switch	5

BASIC OPERATION – QUICK REFERENCE

1. DRIVER’S SEAT



	Seat position		
	Seat cushion angle		
			
	Seat cushion height		
	Seatback angle		
	Lumbar support		
	Head restraint height		
	Head restraint angle		

BE023

2. STEERING WHEEL

• TILT STEERING WHEEL




To tilt the steering wheel up or down to the desired angle:

1. Pull the lever up while holding the steering wheel.
2. Push or pull the steering wheel to the desired angle.
3. Release the lever.

3. AUTOMATIC TRANSMISSION

Lock release button (To prevent misshifting)

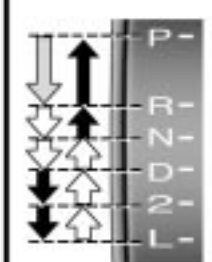

P- Parking, engine starting and key removal position

R- Reverse position

N- Neutral position

D- Normal driving (with overdrive on) position

2- Position for stronger engine braking

L- Position for maximum engine braking


↓ With the brake pedal depressed, shift while holding the lock release button in. (The ignition switch must be in "ON" position.)

↓ ↑ Shift while holding the lock release button in.

↓ ↑ Shift normally.

Overdrive switch

For selecting either a three-speed or four-speed transmission

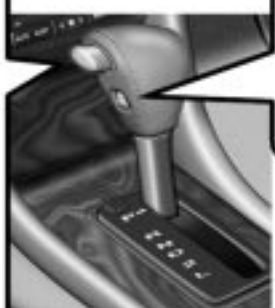

"O/D OFF" indicator light on the instrument cluster

BE/08

Note: When the cruise control is being used, even if you downshift the transmission by turning off the overdrive switch, engine braking will not be applied because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 300.

BASIC OPERATION – QUICK REFERENCE

4. HEADLIGHT AND TURN SIGNAL SWITCH

• HEADLIGHT SWITCH

With the ignition OFF


	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	Automatic light control

With the engine started and parking brake released


	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights turn on at full intensity.
	Automatic light control

	High beam
	Headlight flasher

• TURN SIGNAL SWITCH

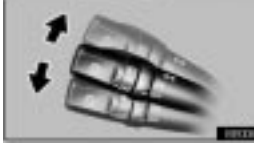	Right or left turn
	Lane change (Right or left)

5. WIPER SWITCH

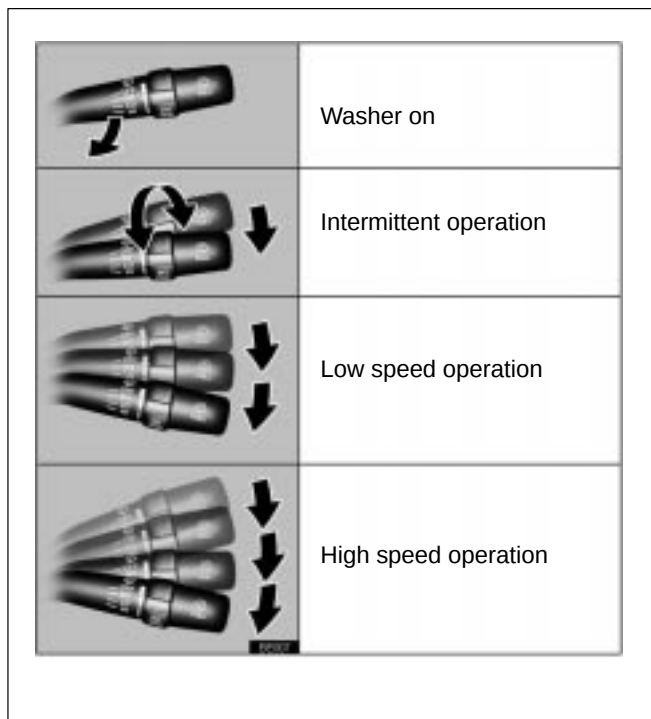

SECTION **1** - 1

INSTRUMENTS AND CONTROLS

Keys and doors

Keys	7
Engine immobiliser system	12
Wireless remote control	14
Doors	24

KEYS



KEYS AND DOORS

- 1 Master key (black) – The master key works in every lock. For your Lexus dealer to make you a new key with built-in transponder chip, your dealer will need it.**
- 2 Sub key (gray) – The sub key will not open the trunk, glove box and armrest door in the rear seat.**
- 3 Key number plate – Keep the plate in a safe place such as your wallet, not in the vehicle.**

A transponder chip for engine immobiliser system has been fitted in the head of the master and sub keys. These chips are needed to enable the system to function correctly, so be careful not to lose these keys. If you make your own duplicate key, you will not be able to cancel the system or start the engine.

To protect things locked in the trunk or glove box when you have your vehicle parked, leave the sub key with the attendant.

Since the doors and trunk lid can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

If you should lose your keys or if you need additional keys, duplicates can be made by a Lexus dealer using the key number.

We recommend you to write down the key number and keep it in safe place.



Since a transponder chip is not built in this flat key, you cannot start the engine with this key. Use this key to release the lock in case you accidentally lock your keys inside the vehicle or trunk.

Insert your flat key in its key case as shown. We recommend that you always carry this with you for emergency use. Do not leave it in your vehicle.

NOTICE

- *Do not let the key case become bent as the key may fall out or become bent also.*
- *The flat key is designed for emergency use only.*

KEYS AND DOORS



When using a key containing a transponder chip, observe the following precautions:

- *When starting the engine, do not use the key with a key ring resting on the key grip and do not press the key ring against the key grip. Otherwise the engine may not start, or may stop soon after it starts.*



- *When starting the engine, do not use the key with other transponder keys around (including keys of other vehicles) and do not press other key plates against the key grip. Otherwise the engine may not start, or may stop soon after it starts. If this happens, remove the key once and then insert it again after taking off other transponder keys (including keys of other vehicles) from the ring or while gripping or covering them with your hand to start the engine.*

KEYS AND DOORS



- *Do not bend the key grip.*
- *Do not cover the key grip with any material that cuts off electromagnetic waves.*
- *Do not knock the key hard against other objects.*
- *Do not leave the key exposed to high temperatures for a long period, such as on the dashboard and hood under the direct sunlight.*
- *Do not put the key in water or wash it in an ultrasonic washer.*
- *Do not use the key with electromagnetic materials.*

ENGINE IMMOBILISER SYSTEM



The engine immobiliser system is a theft prevention system. When you insert the key in the ignition switch, the transponder chip in the key's head transmits an electronic code to the vehicle. The engine will start, only when the electronic code in the chip corresponds to the registered ID code for the vehicle.

The system is automatically set when the key is removed from the ignition switch. At this time, the security indicator light flashes. When you insert the key in the ignition switch, the security indicator light goes out and the system is canceled automatically, which enables the engine to start.

For your Lexus dealer to make you a new key with built-in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Lexus dealer can make for you.

If you make your own duplicate key, you will not be able to cancel the system or start the engine.

For vehicles sold in U.S.A.

FCC ID: MOZ RI-4ETY
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

KEYS AND DOORS



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

This device complies with RSS-210 of Industry Canada.

Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

WIRELESS REMOTE CONTROL



1 Locking the doors and sounding an alarm

2 Indicator light

3 Unlocking the trunk lid

4 Unlocking the doors

When you operate any button on the key, push it slowly and surely. At this time, the indicator light on the key grip flashes once.

The operational range of the wireless remote control is approximately 1 meter (3 ft.). The effective range may vary with different conditions. To activate the wireless remote control without fail, do it approximately 1 meter (3 ft.) from your Lexus.

In the following cases, the battery in the key may be discharged. If this is a case, replace it using a special screwdriver.

- The remote control does not work.
- The operational range of wireless remote control becomes extremely short.
- The indicator light on the key is dimmed or does not come on.

For the replacement of the battery, see “Replacing the battery” on page 22. You can also have the battery of the key replaced by your Lexus dealer.

If you lose the wireless key, contact your Lexus dealer as soon as possible to avoid the possibility of theft, or an accident. (See “If you lose your keys or lock yourself out” on page 377.)

You can use up to 4 wireless remote control keys for the same vehicle. Contact your Lexus dealer for detailed information.

The wireless remote control key is an electronic component. Observe the following instructions in order not to cause damage to the key.

- Do not leave the wireless remote control key on places where the temperature becomes high such as on the dashboard.
- Do not disassemble it.
- Avoid knocking it hard against other objects or

KEYS AND DOORS

dropping it.

- Avoid putting it in water.

Locking/Unlocking the doors

When you push the “LOCK” button on the key briefly, all the doors can be locked from outside the vehicle.

At this time, one beep sounds and the parking lights and tail lights flash once. However, when you push the “LOCK” button with any door not closed securely, the buzzer sounds for 10 seconds. To stop the buzzer, close all the doors securely or push the “UNLOCK” button. If the key is in the ignition switch, locking cannot be done.

Make sure all the doors are locked when you leave the vehicle. Push the “LOCK” button once again.

NOTICE

Do not push the “LOCK” button any longer than 2 to 3 seconds. Pushing the button longer activates an alarm. For details, see page 19.

When you push the “UNLOCK” button, the driver’s door is unlocked. Pushing that button once again within 3 seconds from the first push, all other doors are also unlocked.

At this time, two beeps sound and the parking lights and tail lights flash twice. Together with the activation of unlocking, the interior light comes on for 15 seconds if the interior light switch is in "DOOR" position. However, this function does not work when the ignition key is in the "ON" position. For further information, see "Interior light" on page 75.

You have 30 seconds to open a door after using the wireless remote unlock feature. If a door is not opened by then, all the doors will be automatically locked again.

Even if the "LOCK" or "UNLOCK" button is kept pressed in, the locking or unlocking operation is not repeated. Release the button and then push again.

KEYS AND DOORS



► **1** *Louder* **2** *Off*

When you push any button on the key, the vehicle sounds one beep when the doors are locked by remote control, and sounds two beeps when the doors are unlocked.

You can adjust the beep loudness with the knob under the instrument panel. Turning the knob clockwise increases the volume and turning it counterclockwise until it stops turns the buzzer off.

Unlocking the trunk lid



When you keep the button pushed for about 1 second, you can unlock the trunk lid. One beep sounds.

This function does not work when the ignition key is in the "ON" position.

Sounding an alarm



KEYS AND DOORS

When you push the “PANIC” button for about 2 to 3 seconds, an alarm sounds to deter any person trying to break into or damage your vehicle.

If you want to stop the alarm, push any button.

This function does not work when the ignition key is in the “ON” position.

For vehicles sold in U.S.A.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on,

the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

KEYS AND DOORS

Replacing the battery

When you replace the battery, prepare a lithium battery CR1616 and a special screwdriver.



CAUTION

Special care should be taken that small children do not swallow the removed battery or components.

NOTICE


When replacing the battery, be careful not to lose the components, screws and O-ring.



1. Remove the screw, and then the cover while pushing it in the arrow direction.



2. Remove the module from the key frame.

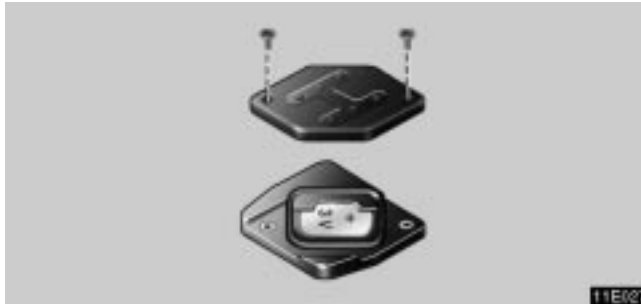

3. Remove the 2 screws to take out the lid of the module.

4. Take out the discharged battery and put a new battery with the positive side up.

KEYS AND DOORS

NOTICE

- *Make sure the positive side and negative side of the battery should be faced correctly.*
- *Be careful not to bend the electrode of the battery insertion and that dust or oils do not adhere to the inside of the module.*
- *Take care not to lose the screws and O-ring.*

5. Install the lid with the 2 screws.

NOTICE

Take care not to damage or bend the O-ring when installing.

6. Install the module into the key frame and secure the cover with the screw.

7. When pushing any button on the wireless key, make sure the indicator light comes on.

DOORS

Locking with key



► **1 Lock 2 Unlock**


Turn the key towards the front of the vehicle to lock and towards the back to unlock.

The doors lock and unlock simultaneously with either front door. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all doors simultaneously. In the passenger's door lock, turning the key once will unlock all doors simultaneously.

The windows and moon roof can be opened and closed from outside the vehicle using the key. For details, see "Power window switches" on page 42 and "Moon roof" on page 111.

KEYS AND DOORS

Locking with inside lock button

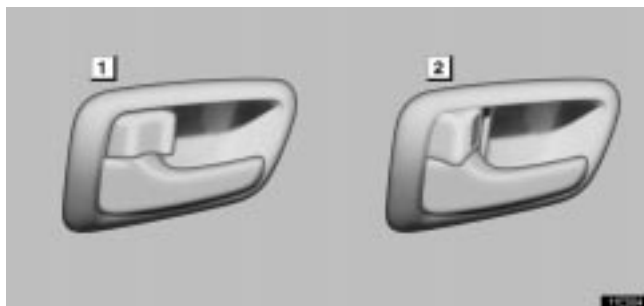

► **1** Lock **2** Unlock

Push in the lock button to lock and unlock the door.

When locked, the door cannot be opened with either the outside or inside door handle.

Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle. The door will not lock if the key is left in the ignition switch when closing the front doors.



CAUTION

Before driving, make sure the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

KEYS AND DOORS

Locking with power door lock switch



► **1** Lock **2** Unlock

To lock all the doors simultaneously, push the power door lock switch on the front side. Pushing on the rear side will unlock them.

The same switch is also equipped on the front passenger's side.

Locking with rear door child-protector



► **1** *Lock* **2** *Unlock*

Whenever small children are in the vehicle, lock the rear door so that it does not open from the inside. To do this, move the lever to the lock position as shown on the label next to the lever.


SECTION 1 - 2

INSTRUMENTS AND CONTROLS

Switches

Headlight switch	31
Headlight dimmer and turn signal switch	34
Fog light switch	36
Windshield wiper and washer switch	36
Rear window and outside rear view mirror defogger switch	41
Power window switches	42
Emergency flasher switch	48
Seat heater switches	49

HEADLIGHT SWITCH

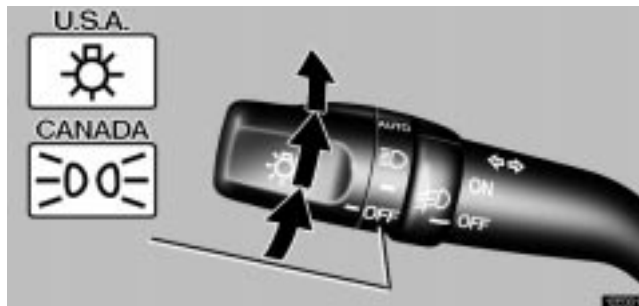

SWITCHES

To turn the lights on, twist the knob on the end of the lever.

FIRST CLICKSTOP: Only the parking, tail, license plate, side marker and instrument panel lights turn on.

SECOND CLICKSTOP: Headlights also turn on.

THIRD CLICKSTOP ("AUTO"): The headlights and all other lights automatically turn on depending on the darkness of the surroundings.

Vehicles sold in U.S.A.: When the headlights are on, the headlight indicator lights up in the instrument cluster.

Vehicles sold in Canada: When the tail lights are on, the tail light indicator lights up in the instrument cluster.

Manually twist the knob to the second clickstop to turn on the headlights if they are needed immediately when entering a dark tunnel, parking structure, etc.

When the headlight switch is turned to the first or second clickstop, the brightness of the instrument cluster will be reduced slightly unless the instrument panel light control knob is turned fully on.



The automatic light control sensor is on top of the driver's side instrument panel.

Do not place anything on the instrument panel, and/or do not affix anything on the windshield to block this sensor.

When the headlights come on, the lights automatically turn off about 30 seconds after any of the doors is opened and closed with the ignition key turned to the "ACC" or "LOCK" position. To turn them on again, turn the ignition key to the "ON" position, or turn the headlight switch off and then twist the knob until the first or second clickstop. If you are going to park for over one week, make sure the headlight switch is off.

Daytime Running Light System

The headlights turn on at reduced intensity when the parking brake is released with the engine started, even with the light switch in the "OFF" position. They will not go off until the ignition switch is turned off.

To turn on the other exterior lights and instrument panel lights, twist the knob to the first clickstop.

Twist the knob to the second clickstop to turn on the headlights to full intensity for driving at night.

When setting the knob to the third clickstop ("AUTO"), the headlights will automatically adjust to full intensity and/or turn on the other lights depending on the darkness of the surroundings. Likewise, as the surroundings become brighter, the headlights will turn to reduced intensity, ultimately turning off the other lights.

NOTICE

To prevent the battery from being discharged, do not leave the lights on longer than necessary when the engine is not running.

SWITCHES

Automatic headlight leveling system (Vehicles with discharge headlight only)



As the headlight beam level is always maintained automatically at the proper level in all loading conditions, your headlights do not dazzle other road users.

If this system fails, the warning light in the instrument cluster comes on. If this occurs, have your vehicle checked by Lexus dealer.

HEADLIGHT DIMMER AND TURN SIGNAL SWITCH



SWITCHES

For high beam, push the lever forward. Pull it back for low beam. For the headlight flasher, pull it further back.

A blue light in the instrument cluster indicates high beam or headlight flasher is on.

The headlight flasher works even when the headlight switch is off.




SWITCHES

For signaling turns, move the lever up or down in the conventional manner.

The ignition key must be in the “ON” position.

The turn signal is self-cancelling after a turn, but after a lane change, you may have to cancel it by hand. You can also signal a lane change by moving the turn signal lever partway and holding it there.


If the green light in the instrument cluster flashes faster than normal, it indicates that the front or rear turn signal bulb has burned out. If this indicator light does not come on, the fuse or the indicator light itself has probably failed.

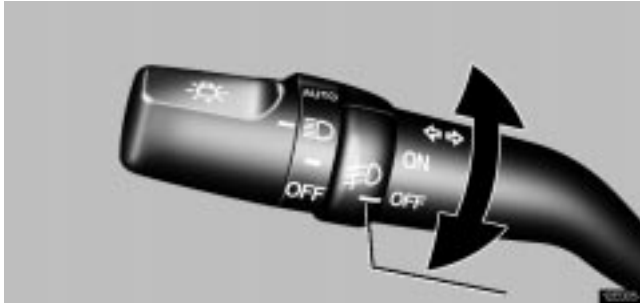

To turn on the fog lights, turn the switch to the “ON” position. The fog lights come on only when the headlights are on low beam.

FOG LIGHT SWITCH

WINDSHIELD WIPER AND WASHER SWITCH

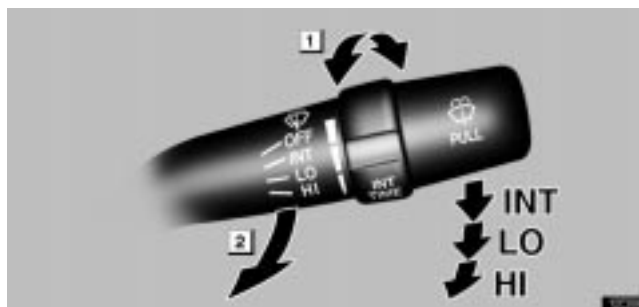

► **1 Interval adjuster 2 Washer on**

To turn the wipers on, move the lever down until you reach the desired speed setting.

The ignition key must be in the “ON” position.

There are 3 settings:

“INT” position: Intermittent operation

“LO” position: Low speed operation

“HI” position: High speed operation

Twist the interval adjuster upward to increase the wiping time interval between sweeps, and downward to decrease it.

The wiper lever must be in the “INT” position.

To make the washer squirt, pull the lever toward you and release it.

Also, the wipers will automatically operate a couple of times after the washer squirts even with the lever in the “OFF” position.

The low washer fluid warning light in the instrument cluster comes on when the fluid level in the tank becomes nearly empty. For information on adding washer fluid, see “Adding washer fluid” on page 464.


In cold weather, warm the windshield with the defroster before using the washer. This will help prevent icing, which could block your vision.

NOTICE

Do not operate the wipers if the windshield is dry. It may scratch the glass.

SWITCHES

Shifting the windshield wiper position

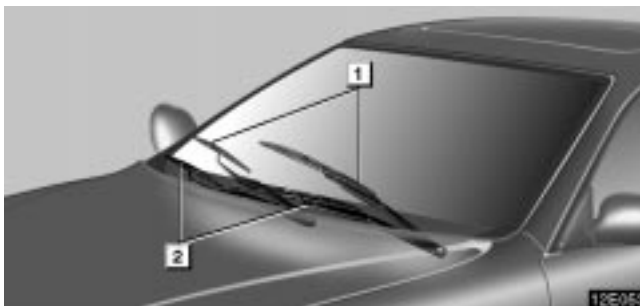

► **1 Rest position** **2 Retracted position**

The wiper blades retract under the hood when the wipers are turned off. If retraction is obstructed by snow etc., at the bottom of the windshield, the wipers should be shifted from the retracted position to the rest position above the hood level. When the snow season is over, manually return the wipers to the retracted position following the procedure given below.




** More than 10 cm (3.9 in.)*

To shift the windshield wipers from retracted to rest position, hold the connection of the wiper arm and wiper blade and pull it upward along the windshield glass with the force of about 98 N (10 kgf, 22 lbf.).

NOTICE

To prevent the wiper blades from being deformed, be sure to hold the connection of the wiper arm and wiper blade securely.

SWITCHES

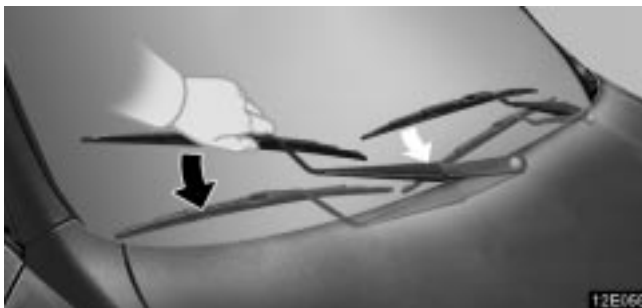


To return the windshield wipers to retracted position, push the connection of the wiper arm and wiper blade downward.

NOTICE

To prevent the wiper blades from being deformed, be sure to hold the connection of the wiper arm and wiper blade securely.

REAR WINDOW AND OUTSIDE REAR VIEW MIRROR DEFOGGER SWITCH

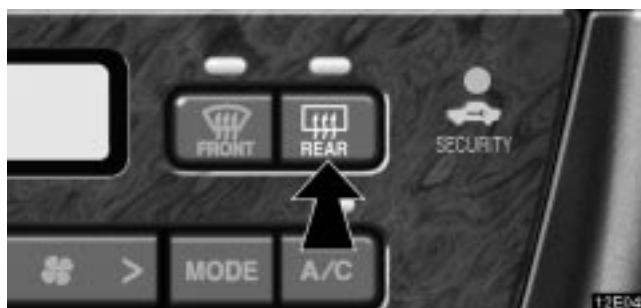

To turn the electric rear window and outside rear view mirror defogger on, push the switch.

The ignition key must be in the "ON" position.

The thin heater wires on the inside of the rear window and the heater panels in the outside rear view mirrors will quickly clear the surface. An indicator light is on when the defogger is operating.

The system will automatically shut off when the defogger has operated about 15 minutes.

SWITCHES



CAUTION

Since the mirror surfaces can get hot, keep your hands off them when the rear window and outside rear view mirror defogger switch is on.

If further defrosting or defogging is desired, simply actuate the switch again. When the surface has cleared, push the switch once again to turn the defogger off. Continuous use may cause the battery to discharge, especially during stop-and-go driving. The defogger is not designed to dry rain water or to melt snow.

If the outside rear view mirrors are heavily coated with ice, use a spray de-icer before operating the switch.

POWER WINDOW SWITCHES

NOTICE

- *When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires or connectors.*
- *To prevent the battery from being discharged, do not operate the defogger continuously longer than necessary.*




- **1** *For driver's window*
- 2** *For front passenger's window*
- 3** *For left rear window*
- 4** *For right rear window*

To raise or lower the windows, use the switch on each door. The passengers' windows can also be controlled by the switches on the driver's door.

The power windows work when the ignition key is in the "ON" position.

Key off operation: Even if the ignition key is turned to the "ACC" or "LOCK" position with all the doors closed, the window can be operated until a front door is opened (or for 43 seconds).

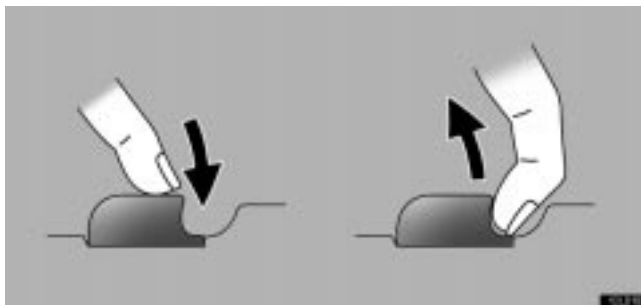

SWITCHES

Operating the driver's and front passenger's switch

To lower the window, push the switch halfway down. Pull it up to raise the window. The window glass moves as long as the switch is operated.

Automatic operation: To fully raise or lower the window automatically, pull the switch fully up or push it fully down.

To stop the window partway, lightly push or pull the switch in the opposite direction and then release it.



► *Indicator light*

With the window lock switch pressed in, only the driver's window can be raised or lowered.

The indicator lights on the switch tell you which of the switches can be operated.


Operating the rear passengers' switches

To lower the window, push the switch down. Pull it up to raise the window. The window moves as long as the switch is operated.

Operating the window lock switch

Operating the driver's and front passenger's windows from outside the vehicle

The windows can be operated using an ignition key.

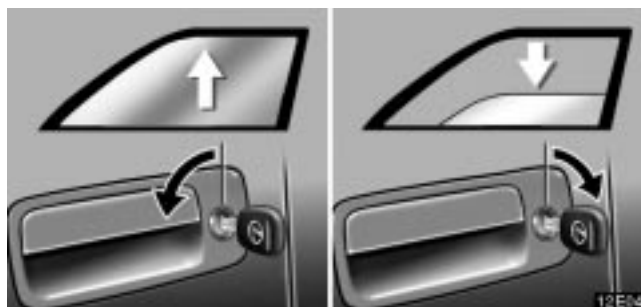

Insert the ignition key into the key hole on either front door.

To close the windows: Turn the key in the locking direction and hold it.

After the door is locked, the window begins to close. To stop in the middle, return the key.

To open the windows: Turn the key in the unlocking direction and hold it.

After the door is unlocked, the window begins to open. To stop in the middle, return the key.

SWITCHES

Jam protection function

During automatic raising operation, key off raising operation or raising operation using the ignition key from the outside, the window stops and is lowered if something gets caught between the window and window frame.

If the window receives a strong impact, this function may work even if nothing is caught.



CAUTION


To avoid serious personal injury, you must do the following.

- Always make sure the heads, hands and other parts of the bodies of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, make sure that he/she operates the windows safely.

- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock switch to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can be involved in serious accidents.
- Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work if something gets caught just before the window fully closed.

SWITCHES

EMERGENCY FLASHER SWITCH

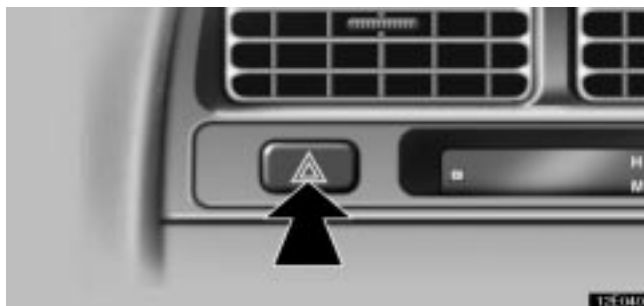

To turn on the emergency flashers, push the switch.

All the turn signal lights will flash. The emergency flashers will work with the engine running or off and with or without the ignition key.

Turn on the emergency flashers to warn other drivers if you must stop your vehicle where it might be a traffic hazard.


Always pull your vehicle as far off the road as possible.

The turn signal light switch will not work when the emergency flashers are in operation.

SEAT HEATER SWITCHES

NOTICE

To prevent the battery from being discharged, do not leave the switch on longer than necessary when the engine is not running.

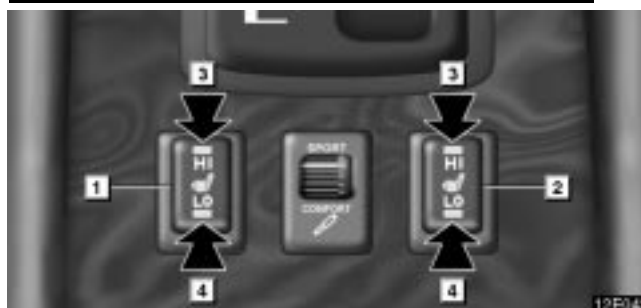

SWITCHES

- **1** *For driver's seat* **2** *For front passenger's seat*
 3 *High heating temperature*
 4 *Low heating temperature*

To turn on the seat heater, push the switch to “HI” (high temperature) or “LO” (low temperature). Pushing lightly on the opposite side will turn it off.

The ignition key must be in the “ON” position.

**CAUTION**

Occupants must use caution when operating the seat heater because they may experience minor burns even at low temperatures. Use extra caution for;

- Babies, small children, elderly persons, sick persons or handicapped persons
- Persons who have delicate skin
- Persons who are exhausted
- Persons who have taken alcohol or drugs which induce sleep (sleeping drug, cold remedy, etc.).

To prevent the seat from overheating, do not use the seat heater with a blanket, cushion, or other insulating objects which cover the seat.

SWITCHES

NOTICE

- *Do not put unevenly weighted objects on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.*
- *When cleaning the seats, do not use organic substances (paint thinner, benzine, alcohol, gasoline, etc.). They may damage the heater and seat surface.*
- *To prevent the battery from being discharged, turn the switches on when the engine is running.*

;

SECTION **1** – 3

INSTRUMENTS AND CONTROLS

Gauges, meters and service reminder indicators

Fuel gauge	54
Engine coolant temperature gauge	56
Tachometer	58
Odometer and trip meter	58
Service reminder indicators and warning buzzers	60
Instrument panel light control	69

FUEL GAUGE



► *Low fuel level warning light*

The gauge is displayed when the ignition switch is on and indicates the approximate quantity of fuel remaining in the tank.

It is a good idea to keep the tank over 1/4 full.

This fuel gauge has a non–return type needle which remains at the last indicated position when the ignition switch is turned off.

If the fuel level approaches “E” or the low fuel level warning light comes on, fill the fuel tank as soon as possible.

On inclines or curves, due to the movement of fuel in the tank, the fuel gauge needle may fluctuate or the low fuel level warning light may come on earlier than usual.

If the fuel tank is completely empty, the malfunction indicator lamp comes on. Fill the fuel tank immediately.

The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.

See the inner back cover for fuel capacity and recommended fuel selection.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

ENGINE COOLANT TEMPERATURE GAUGE



► *Normal range*

The gauge indicates the engine coolant temperature when the ignition switch is on. The engine operating temperature will vary with changes in weather and engine load.

If the needle points to the red zone or higher, stop your vehicle and allow the engine to cool.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

Your vehicle may overheat during severe operating conditions, such as:

- Driving up a long hill on a hot day.
- Reducing speed or stopping after high speed driving.
- Idling for a long period with the air conditioning on in stop-and-go traffic.
- Towing a trailer.

NOTICE

- *Do not remove the thermostat in the engine cooling system as this may cause the engine to overheat. The thermostat is designed to control the flow of coolant to keep the temperature of the engine within the specified operating range.*
- *Do not continue driving with an overheated engine. See "If your vehicle overheats" on page 348.*

GAUGES, METERS AND SERVICE REMINDER INDICATORS

TACHOMETER



The tachometer indicates engine speed in thousands of rpm (revolutions per minute). Use it while driving to prevent engine over-revving.

Driving with the engine running too fast causes excessive engine wear and poor fuel economy. Remember, in most cases the slower the engine speed, the greater the fuel economy.

ODOMETER AND TRIP METER

NOTICE

Do not let the indicator needle get into the red zone. This may cause severe engine damage.

GAUGES, METERS AND SERVICE REMINDER INDICATORS



GAUGES, METERS AND SERVICE REMINDER INDICATORS

► “ODO/TRIP” knob

This meter displays the odometer and two trip meters. To change the mode indication, push the “ODO/TRIP” knob briefly. Each time you push the knob, the mode changes in order from the odometer to trip meter A to trip meter B, then back to the odometer.


The odometer records the total distance the vehicle has been driven. The twin trip meter records two different distances independently.

For example, you can use one meter to calculate the fuel economy and the other to measure the distance on each trip.


To set the A trip meter to zero, display the A meter reading, push the knob and hold it. The same applies for the B trip meter.

The data of trip meters will be cancelled if the electrical power source is disconnected.

SERVICE REMINDER INDICATORS AND WARNING BUZZERS

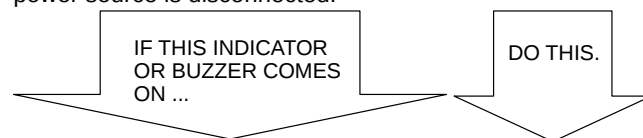

 GAUGES, METERS AND SERVICE REMINDER INDICATORS

(a)	 or 	If parking brake is off, stop immediately and contact Lexus dealer.	(f)		Add engine oil.
(b)	 (Indicator and buzzer)	Fasten seat belt.	(g)		Take vehicle to Lexus dealer.
(c)		Take vehicle to Lexus dealer immediately.	(h)	 or 	Take vehicle to Lexus dealer.
(d)		Stop and check.	(i)		Close all doors.
(e)		Stop and check.	(j)		Replace bulb.
			(k)	 and 	Take vehicle to Lexus dealer.
			(l)		Take vehicle to Lexus dealer.
			(m)		Add washer fluid.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

- | | | |
|-----|---|-------------------------------|
| (n) | Low fuel level warning light | Fill up tank. |
| (o) | Automatic headlight leveling system warning light | Take vehicle to Lexus dealer. |
| (p) | Key reminder buzzer | Remove key. |

(a) Brake System Warning Light

This light comes on in the following cases when the ignition key is in the "ON" position.

- When the parking brake is applied...
- When the brake fluid level is low...



CAUTION

It is dangerous to continue driving normally when the brake fluid level is low.

Have your vehicle checked at your Lexus dealer in the following cases.

- The light does not come on even if the parking brake is applied when the ignition key is in the "ON" position.



CAUTION

If the light does not turn off even after the parking brake is released while the engine is running, immediately stop your vehicle at a safe place and contact your Lexus dealer. In this case, the brakes may not work properly and your stopping distance will become longer. Depress the brake pedal firmly and bring the vehicle to an immediate stop.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(b) Seat Belt Reminder Light and Buzzer

This light and buzzer remind you to buckle up the driver's seat belt.

Once the ignition key is turned to "ON" or "START", the reminder light and buzzer come on if the driver's seat belt is not fastened. Unless the driver fastens the belt, the light stays on and the buzzer stops after about 4 to 8 seconds.

(c) SRS Warning Light

This light comes on when the ignition key is turned to the "ACC" or "ON" position. It goes off after about 6 seconds. This means the SRS airbags and seat belt pretensioners are operating properly.

This warning light system monitors the airbag sensor assembly, front airbag sensors, side airbag sensors, front seat belt pretensioner assemblies, inflators, warning light, interconnecting wiring and power sources.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on as described above.
- The light stays on or flashes.
- The light comes on or starts flashing while driving.

If the light stays on, it indicates that the driver and front

passenger airbags fail. If the light flashes, the side airbags and/or seat belt pretensioners fail.

(d) Discharge Warning Light

This light warns that the battery is being discharged.

If it comes on while you are driving, stop the vehicle, turn off the engine, and check for the cause. Look first at the engine drive belt.

- If it is loose or broken, the generator will not charge the battery properly.
- If the belt is O.K., there is a problem somewhere in the charging system.

The engine ignition will continue to operate, however, until the battery is discharged. Turn off the air conditioning, blower, radio, etc., and drive directly to the nearest Lexus dealer or repair shop.

NOTICE

Do not continue driving if the engine drive belt is broken or loose.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(e) Low Oil Pressure Warning Light

This light warns that the engine oil pressure is too low.

If it flickers or stays on while you are driving, pull off the road to a safe place and stop the engine immediately. Call a Lexus dealer or qualified repair shop for assistance.

The light may occasionally flicker when the engine is idling or it may come on briefly after a hard stop. There is no cause for concern if it then goes out when the engine is accelerated slightly.

The light may come on when the oil level is extremely low. It is not designed to indicate low oil level, and the oil level must be checked using the oil level dipstick.

NOTICE

Do not drive the vehicle with the warning light on – even for one block. It may ruin the engine.

(f) Low Engine Oil Level Warning Light

This light warns that the engine oil level is too low. Add oil as soon as possible. (For instructions, see “Checking the engine oil level” on page 410.)

While driving on steep inclines or rough roads which causes the vehicle to substantially sway or on curves, this light may come on due to the movement of engine oil in the engine.

NOTICE

Continued engine operation with low engine oil will damage the engine.

(g) Malfunction Indicator Lamp

This lamp comes on in the following cases.

- The fuel tank is completely empty. (See “Fuel gauge” on page 54 for instructions.)
- The fuel tank cap is not tightened securely. (See “Fuel tank cap” on page 108 for instructions.)
- There is a problem somewhere in your engine or automatic transmission electrical system.

If it comes on while you are driving in case “c.”, have your vehicle checked/repared by your Lexus dealer as soon as possible.

(h) “ABS” Warning Light

The light comes on when the ignition key is turned to the “ON” position. If the anti-lock brake system and the brake assist system work properly, the light turns off after a few seconds. Thereafter, if either of the systems malfunctions, the light comes on again.

When the “ABS” warning light is on (and the brake system warning light is off), the anti-lock brake system, the brake assist system, the traction control system and the vehicle skid control system do not operate, but the brake system still operates conventionally.

When the “ABS” warning light is on (and the brake system warning light is off), the anti-lock brake system does not operate so that the wheels could lock up during a sudden braking or braking on slippery road surfaces.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the “ON” position, or remains on.
- The light comes on while you are driving.

A warning light turning on briefly during operation does not indicate a problem.

(i) Open Door Warning Light

This light remains on until all the doors are completely closed.

(j) Rear Light Failure Warning Light

If this light comes on when the headlight switch is turned on (at the first or second clickstop), it indicates that one or more of the tail lights are burned out.

If it comes on when the brake pedal is depressed, one or more stop lights are burned out.

Have defective bulbs replaced as soon as possible.

(k) Vehicle Skid Control System Warning Lights (Vehicles with Vehicle Skid Control System only)

These lights warn that there is a problem somewhere in the vehicle skid control system, traction control system and brake assist system.

The lights will come on when the ignition key is turned to “ON”, and will go off after a few seconds.

If the “VSC” warning light and “VSC OFF” indicator light come on, the vehicle skid control system, traction control system and brake assist system do not work. However, as conventional braking operates when applied, there is no problem to continue your driving.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle:

- The “VSC” warning light and/or “VSC OFF” indicator light do/does not come on after the ignition is turned to on.
- The “VSC” warning light and “VSC OFF” indicator light are left on after the ignition is turned to on.
- The “VSC” warning light and “VSC OFF” indicator light come on while driving without pushing “VSC OFF” switch.

(I) “TRAC OFF” Indicator/Warning Light (Vehicles with Traction Control System only)

This light warns that when there is a problem somewhere in the traction control system.

The light will come on when the ignition key is turned to “ON”, and will go off after a few seconds.

If either of the following conditions occurs, this indicates malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come after the ignition is turned to on.

- The light is left on after the ignition is turned to on.
- The light comes on while driving without pushing “TRAC OFF” switch.
- The light flashes.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(m) Low Washer Fluid Warning Light

This light comes on when the fluid level in the tank becomes nearly empty. Fill the tank as soon as possible.

(n) Low Fuel Level Warning Light

This light comes on when the fuel level in the tank becomes nearly empty. Fill the tank as soon as possible.

On inclines or curves, due to the movement of fuel in the tank, the low fuel level warning light may come on earlier than usual.

(o) Automatic Headlight Leveling System Warning Light (Vehicles with discharge headlight only)

This light warns that when there is a problem somewhere in the automatic headlight leveling system.

If it comes on, have your vehicle checked by your Lexus dealer.

(p) Key Reminder Buzzer

This buzzer reminds you to remove the key when you open the driver's door with the ignition key in the "ACC" or "LOCK" position.

How to check all the service reminder indicators

(except the low fuel level warning light and low washer fluid warning light):

1. Apply the parking brake.
2. Open the door.

The following service reminder indicator should come on. It goes off when you close the door completely.



 
3. Turn the ignition key to "ACC".

The following service reminder indicator should come on. It goes off after 6 seconds.



4. Turn the ignition key to "ON".

The following service reminder indicators should come on.



or



 
or



GAUGES, METERS AND SERVICE REMINDER INDICATORS




soon as possible.



Automatic headlight leveling system
warning light

 The following service reminder indicators go off after a
few seconds.



5. Turn the ignition key to “START”.

The following service reminder indicators should come
on.



If any service reminder indicator or warning buzzer does
not function, have it checked by your Lexus dealer as

INSTRUMENT PANEL LIGHT CONTROL



To adjust the brightness of the instrument panel lights, turn the knob.

SECTION 1 - 4

INSTRUMENTS AND CONTROLS

Interior equipment


Vanity mirrors	71
Interior light	75
Personal light	77
Ignition switch light	79
Clock	81
Cigarette lighter and ashtray	81
Power outlet	84
Glove box	85
Rear console box	87
Garage door opener	88
Cup holder	93
Overhead console box	95
Auxiliary box	96
Floor mat	97
Luggage stowage precautions	99

VANITY MIRRORS

INTERIOR EQUIPMENT



► *Sun visor with garage door opener*

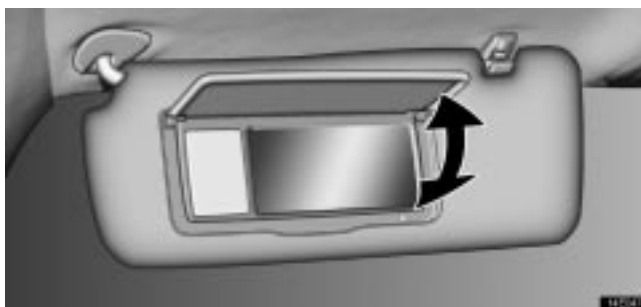


► *Sun visor without garage door opener*

Sun visors

To use the vanity mirrors, swing the sun visor down and open the cover.

The vanity lights come on when you open the cover.

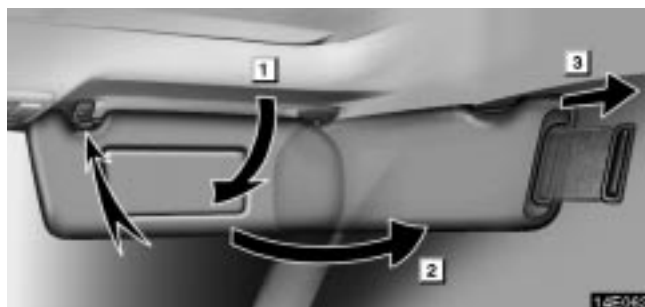

INTERIOR EQUIPMENT

- 1 To block out glare from the front , swing the sun visor down.
- 2 To block out glare from the side, remove the sun visor from the hook and swing it to the side.
- 3 To block out glare coming obliquely from behind you, pull out an extension plate from the inside of the sun visor.



CAUTION

Do not pull out the extension plate when the visor is in the position 1. It can cover the inside rear view mirror and obstruct the rear view.

NOTICE

Take care not to swing back the sun visor without pushing back the extension plate so as not to damage the extension plate.

INTERIOR LIGHT

INTERIOR EQUIPMENT



To turn on the interior light, slide the switch.

With the switch in the “DOOR” position, the light comes on when any of the doors are opened. After all the doors are closed, the light remains on for about 15 seconds and then goes out.

However, in the following cases, the light goes out immediately:

1. All the doors are closed when the ignition key is in “ACC” or “ON” position.
2. The ignition key is turned to “ACC” or “ON” when the light is still on.
3. All the doors are locked when the light is still on.
4. One door is closed with the lock button pushed in while the other doors are locked.

PERSONAL LIGHT



INTERIOR EQUIPMENT

► *Vehicles without moon roof*


To turn on the personal light, push the switch. To turn it off, push the switch again.



► *Vehicles with moon roof*

To turn on the personal light, push the switch. To turn it off, push the switch again.

IGNITION SWITCH LIGHT

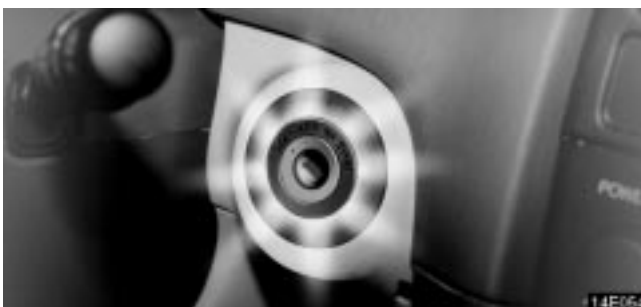

INTERIOR EQUIPMENT

For easy access to the ignition switch, the ignition switch light comes on when any of the doors are opened.

The light remains on for about 15 seconds and goes out after all the doors are closed. However, the light goes out immediately when all the doors are locked or the ignition key is in the "ACC" or "ON" position.

CLOCK



The digital clock indicates the time with the ignition key at the “ACC” or “ON” position. To reset the hour, press the “H” button. To reset the minutes, press the “M” button. To adjust the time to the nearest hour, press the “:00” button.

For example, if the “:00” button is pressed when the time is between 9:30 – 9:59 or between 10:01 – 10:29, the time will change to 10:00.

With the tail lights on, the brightness of the time indication will be reduced.

If the electrical power source has been disconnected from the clock, the time display will automatically be set to 1:00 (one o'clock).

CIGARETTE LIGHTER AND ASHTRAY

INTERIOR EQUIPMENT



► *Front cigarette lighter and ashtray*

To use the cigarette lighter and ashtray, first push against the ashtray cover. Then when the ashtray opens out, press in the cigarette lighter. When it becomes heated, it automatically pops out ready for use.


Do not hold the cigarette lighter pressed in.

If the engine is not running, the ignition key must be in the "ACC" position.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, push it back in completely.

To remove the ashtray, just pull it up.

Use a Lexus genuine cigarette lighter or equivalent for replacement.

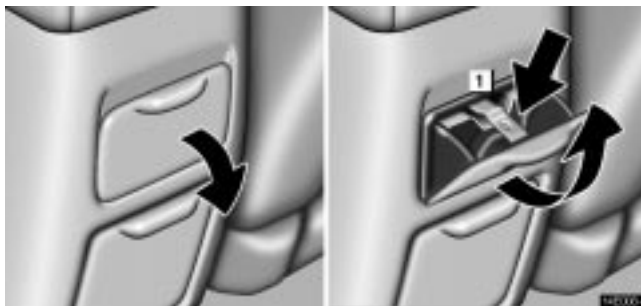

► Rear ashtray 1 Snuffer bridge

To use the ashtray, pull on the lid.

When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, close the lid completely.

To remove the ashtray, pull it out while pressing on the snuffer bridge to release the catch.




CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always close the ashtray completely after using.

INTERIOR EQUIPMENT

POWER OUTLET

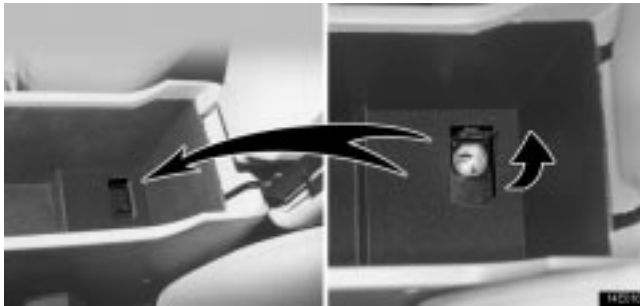

The power outlet is designed for power supply for car accessories.

The ignition key must be in the "ACC" or "ON" position for the power outlet to be used.

GLOVE BOX

NOTICE

To prevent the fuse from being blown, do not use the electricity over the total vehicle capacity of 12V/120W.

To prevent the battery from being discharged, do not use the power outlet longer than necessary when the engine is not running.

Close the power outlet lid when the power outlet is not in use. Inserting a foreign object other than the appropriate plug that fits the outlet, or allowing any liquid into the outlet may cause electrical failure or short circuits.

INTERIOR EQUIPMENT



► **1** *Unlock* **2** *Open* **3** *Lock*

To open the glove box door, pull the lever. To lock the glove box door, insert the master key and turn it clockwise.

With the tail lights on, the glove box light will come on when the glove box door is open.

The trunk lid opener main switch is installed inside the glove box. See page 106 for further information.


For the CD automatic changer, see page 256.



CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the glove box door closed while driving.

REAR CONSOLE BOX

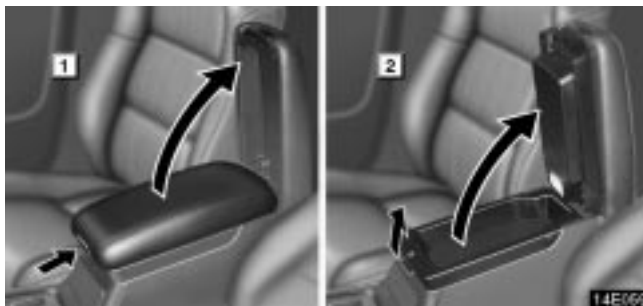

► **1** *Upper tray* **2** *Console box*

To access the upper tray, push the lock release button and raise the lid. To access the console box, pull up the lock release lever and raise the lid.



CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the rear console box closed while driving.

INTERIOR EQUIPMENT

GARAGE DOOR OPENER

The garage door opener (**HomeLink®** Universal Transceiver) is manufactured under license from HomeLink® and can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, and security systems, etc.

(a) Programming the HomeLink®



► **1** Indicator light **2** Buttons

The HomeLink® in your vehicle has 3 buttons and you can store one program for each button.

To ensure correct programming into the HomeLink®, install a new battery in the hand-held transmitter prior to programming.

The battery side of the hand-held transmitter must be pointed away from the HomeLink[®] during the programming process.

For Canadian users, follow the procedure in "Programming an entrance gate/Programming all devices in the Canadian market".

1. Decide which of 3 HomeLink[®] buttons you want to program.

2. Place your hand-held garage transmitter 25 to 75 mm (1 to 3 in.) away from the surface of the HomeLink[®].

Keep the indicator light on the HomeLink[®] in view while programming.

3. Simultaneously press and hold the hand-held garage transmitter button along with the selected HomeLink[®] button.

4. When the indicator light on the HomeLink[®] changes from a slow to a rapid flash after 20 seconds, you can release both buttons.

5. Test the operation of the HomeLink[®] by pressing the newly programmed button. If programming a garage door opener, check to see if the garage door opens and closes.

If the garage door does not operate, identify if your garage transmitter is of the "Rolling Code" type. Press and hold the programmed HomeLink[®] button. The garage door has the rolling code feature if the indicator light (on the HomeLink[®]) flashes rapidly and then remains lit after 2 seconds. If your garage transmitter is the "Rolling Code" type, proceed to the heading "Programming a rolling code system".

6. Repeat steps 2 through 5 for each remaining HomeLink[®] button to program another device.

Programming a rolling code system

If your device is "Rolling Code" equipped, it is necessary to follow steps 1 through 4 under the heading "Programming the HomeLink[®]" before proceeding with the steps listed below.

1. Locate the "training" button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener. Refer to the owner's guide supplied by the garage door opener manufacturer for the location of this "training" button.

2. Press the "training" button on the ceiling mounted garage door opener motor.

Following this step, you have 30 seconds in which to initiate step 3 below.

INTERIOR EQUIPMENT

3. Press and release the vehicle's programmed HomeLink[®] button twice. The garage door may open. If the door does open, the programming process is complete. If the door does not open, press and release the button a third time. This third press and release will complete the programming process by opening the garage door.

The ceiling mounted garage door opener motor should now recognize the HomeLink[®] unit and be able activate the garage door up/down.

4. Repeat steps 1 through 3 for each remaining HomeLink[®] button to program another rolling code system.

Programming an entrance gate / Programming all devices in the Canadian market

1. Decide which of the 3 HomeLink[®] buttons you want to program.

2. Place your hand-held gate/device transmitter 25 to 75 mm (1 to 3 in.) away from the surface of the HomeLink[®].

Keep the indicator light on the HomeLink[®] in view while programming.

3. Press and hold the selected HomeLink[®] button.

4. Continuously press and release (cycle) the hand-held gate/device transmitter button every two

seconds until step 5 is complete.

5. When the indicator light on the HomeLink[®] changes from a slow to a rapid flash after 20 seconds, you can release both buttons.

6. Test the operation of the HomeLink[®] by pressing the newly programmed button. Check to see if the gate/device operates correctly.

7. Repeat steps 1 through 6 for each remaining HomeLink[®] button to program another device.

Programming other devices

To program other devices such as home security systems, home door locks or lighting, contact your authorized Lexus dealer for assistance.

Reprogramming a button

Individual HomeLink[®] buttons cannot be erased, however, to reprogram a single button, follow the procedure "Programming the HomeLink[®]".

(b) Operating the HomeLink[®]

To operate the HomeLink[®], press the appropriate HomeLink[®] button to activate the programmed device. The HomeLink[®] indicator light should come on. The HomeLink[®] continues to send the signal for up to 20 seconds as long as the button is pressed.

(c) Erasing the entire HomeLink[®] memory (all three programs)

To erase all previously programmed codes at one time, press and hold down the 2 outside buttons for 20 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink[®] memory.

INTERIOR EQUIPMENT



CAUTION


When programming the HomeLink® Universal Transceiver, you may be operating a garage door or other device. Make sure people and objects are out of the way of the garage door or other device to prevent potential harm or damage.

Do not use this HomeLink® Universal Transceiver with any garage door opener that lacks the safety stop and reverse feature as required by federal safety standards. (This includes any garage door opener model manufactured before April 1, 1982.) A garage door opener, which cannot detect an object, signaling the door to stop and reverse, does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death.

CUP HOLDER

FCC ID: CB2V94800
CANADA: 1763 102 264


This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. **WARNING: This transmitter has been tested and complies with FCC and DOC/MDC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.**

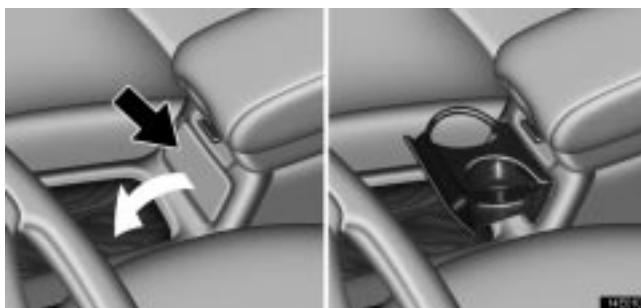

► *Front cup holder*

To use the front cup holder, push the top of the cup holder portion of the console box.

INTERIOR EQUIPMENT

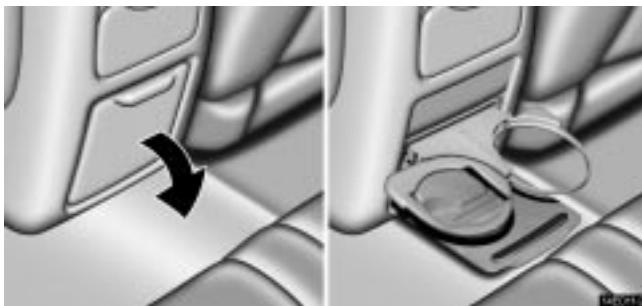

► *Rear cup holder*

To use the rear cup holder, pull the cup holder portion of the console box.

The cup holder is designed for holding cups or drink-cans securely.



CAUTION

Do not place anything else other than cups or drink-cans on the cup holder, as such items may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or in an accident.

To reduce the chance of injury in case of an accident or sudden stop while driving, keep the cup holder closed when not in use.

OVERHEAD CONSOLE BOX



To use the box, open it as shown above.



CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the overhead console box closed while driving.

As this box is designed for holding eyeglasses, do not place any object heavier than approximately 60 g (0.13 lb.) in it. Heavier objects may cause the box to open and contents to fly out resulting in injuries.

INTERIOR EQUIPMENT

NOTICE

In hot weather, inside of the vehicle becomes very hot. Do not leave anything flammable or deformable such as a lighter, the glasses, etc. inside.



To use the box, pull on the handle.



CAUTION

To reduce the chance of injury in case of an accident or a sudden stop, always keep the auxiliary box closed while driving.

AUXILIARY BOX

FLOOR MAT



Use a floor mat of the correct size.

If the floor carpet and floor mat have a hole, then it is designed for use with a locking clip. Fix the floor mat with locking clip into the hole in the floor carpet.

INTERIOR EQUIPMENT



CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

LUGGAGE STOWAGE PRECAUTIONS

When stowing luggage or cargo in the vehicle, observe the following:

Put luggage or cargo in the trunk when at all possible.
Be sure all items are secured in place.

Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.

For better fuel economy, do not carry unnecessary weight.



CAUTION

Do not place anything on the package tray behind the rear seatback. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or an accident.

Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.

INTERIOR EQUIPMENT

NOTICE

Do not load the vehicle beyond the vehicle capacity weight specified on the tire pressure label.

SECTION 1 – 5

INSTRUMENTS AND CONTROLS

Exterior equipment

Hood	102
Trunk lid	104
Fuel tank cap	108
Moon roof	111

EXTERIOR EQUIPMENT

HOOD



1. To open the hood, pull the hood lock release lever under the instrument panel. The hood will spring up slightly.



2. Insert your fingers under the hood, push up the auxiliary catch lever and lift the hood.

EXTERIOR EQUIPMENT

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. Then lower the hood and make sure it locks.



CAUTION

Before driving, be sure that the hood is securely locked. Otherwise, the hood may open unexpectedly while driving and an accident may occur.

EXTERIOR EQUIPMENT

TRUNK LID



To unlock the trunk lid, insert the master key and turn it clockwise.

To close the trunk lid, lower it and press down on it. After closing the trunk lid, try pulling it up to make sure it is securely closed.

The trunk lid can be unlocked using the wireless remote control key. For details, see page 19.



CAUTION

Keep the trunk lid closed while driving. This not only keeps the luggage from being thrown out, but also prevents exhaust gases from entering the vehicle.

Trunk lid opener



To open the trunk lid while sitting in the driver's seat, push the switch with the main switch on.

EXTERIOR EQUIPMENT



► **1** Main switch **2** Operative **3** Inoperative

If you do not want to activate the trunk lid opener system, turn off the main switch in the glove box. To turn it on, push in the main switch.

To protect things put in the trunk when you have your vehicle parked, turn off the trunk lid opener system and lock the glove box.

Internal trunk release handle



If a person is locked in the trunk, pull down the phosphorescent handle (illuminated for a while) on the inside of trunk lid in case of emergency to open the trunk lid.

The handle illuminating time depends on the intensity of the light thrown on the handle.



CAUTION

- Always lock the trunk lid and all doors, and keep away the vehicle keys out of children's reaches.
- Never leave children unattended in the vehicle. Unsupervised children may lock themselves in the vehicle or trunk and suffer serious injuries or death.

EXTERIOR EQUIPMENT

FUEL TANK CAP



This indicates that the fuel filler door is on the left side of your vehicle.

EXTERIOR EQUIPMENT



1. To open the fuel filler door, push the switch.
When refueling, turn off the engine.

EXTERIOR EQUIPMENT

CAUTION

- Do not smoke, cause sparks or allow open flames when refuelling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.



2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. The removed cap can be stored on the back side of the fuel filler door.

It is not unusual to hear a slight swoosh when the cap is opened. When installing the cap, turn the cap clockwise until you hear a click.


If the cap is not tightened securely, the malfunction indicator lamp comes on. Make sure the cap is tightened securely.

The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.

 CAUTION

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Lexus fuel tank cap for replacement. It is designed to regulate fuel tank pressure.

In case the opener is not actuated

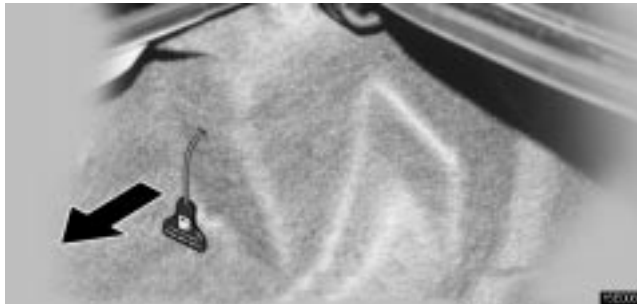

Pull the manual lever in the trunk toward the back.

This is used in case the fuel filler door cannot be opened due to a discharged battery or other trouble.

MOON ROOF

EXTERIOR EQUIPMENT



► 1 Open 2 Close

To slide open the moon roof, push the switch on the “SLIDE OPEN” side briefly. The moon roof will fully open. To stop partway, push the same side or “TILT UP” side briefly.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened with the moon roof.

To close the moon roof, push the switch on the “TILT UP” side. The moon roof will fully close. To stop partway, push the same side or “SLIDE OPEN” side briefly.

To slide open the tilted-up moon roof:

Push the switch on the “SLIDE OPEN” side to tilt down the moon roof. After releasing the switch, push the switch on the same side again.



► **1 Lower 2 Tilt up**

To tilt up the rear end of the moon roof, push the switch on the “TILT UP” side or on the “SLIDE OPEN” side to lower it.

To operate the moon roof, the ignition key must be in the “ON” position.

Key off operation: Even if the ignition key is turned to the “ACC” or “LOCK” position, the moon roof can be operated until a front door is opened (or for 43 seconds).

To tilt up the slide–opened moon roof:

Push the switch on the “TILT UP” side to close the moon roof fully. After releasing the switch, push the switch on the same side again.

Operating the moon roof from outside the vehicle

The moon roof can be closed or opened using an ignition key.

Insert the ignition key into the key hole on either front door.

To close the moon roof: Turn the key in the locking direction and hold it.

After the door is locked, the moon roof begins to close. To stop in the middle, return the key.

To open the moon roof: Turn the key in the unlocking direction and hold it.

After the door is unlocked, the moon roof begins to open. To stop in the middle, return the key.

EXTERIOR EQUIPMENT

Jam protection function

During closing operation, the moon roof stops and is open if something gets caught into the roof opening.

If the moon roof receives a strong impact, this function may work even if nothing is caught.



CAUTION

To avoid serious personal injury, you must do the following.

- While the vehicle is moving, always keep the heads, hands and other parts of the bodies of all occupants away from the roof opening. Otherwise, they could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.
- Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands gets caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.

- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can be involved in serious accidents.
- Never sit on top of the vehicle around the roof opening.
- Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work if something gets caught just before the moon roof fully closed.

SECTION 1 – 6

INSTRUMENTS AND CONTROLS

Comfort adjustment

Front seats	117
Trunk storage extension	124
Head restraints	126
Tilt steering wheel	129
Outside rear view mirrors	130
Inside rear view mirror	134
Seat belts	136
SRS airbags	152
Child restraint	175
Driving position memory system	204

FRONT SEATS

Front seat precautions

COMFORT ADJUSTMENT



CAUTION

The SRS side airbags are installed in the driver and front passenger seats, observe the following precautions.

- Do not lean over the front door when the vehicle is in use. The side airbag inflates with considerable speed and force; you may be killed or severely injured.
- Do not use accessories for the seats which cover the parts where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or serious injury.
- Do not modify or replace the seats or upholstery of the front seats with the side airbags. Such changes may disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury. Consult your Lexus dealer if you insist on modifications of this kind.

Seat adjustment precautions

Adjust the driver's seat so that the foot pedals, steering wheel and instrument panel controls are within easy reach of the driver.

**CAUTION**

- Do not adjust the seat while the vehicle is moving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Be careful not to hit the seat against a passenger, luggage or the rear seat.

NOTICE

Do not operate the control switch in more than one dimension at a time. It may cause electrical overload.


Adjusting front seats

COMFORT ADJUSTMENT



- **1** *Seat position control switch, seat cushion angle and height control switch*
- 2** *Seatback angle control switch*
- 3** *Lumbar support control switch*

Adjusting seat position

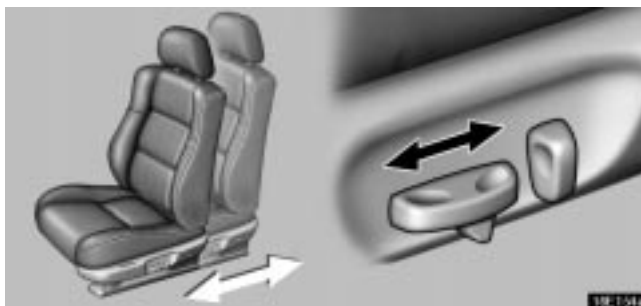


Move the control switch in the desired direction.

Releasing the switch will stop the seat in that position.
Do not place anything under the seat. It might interfere with the seat movement.

COMFORT ADJUSTMENT

Adjusting seatback angle

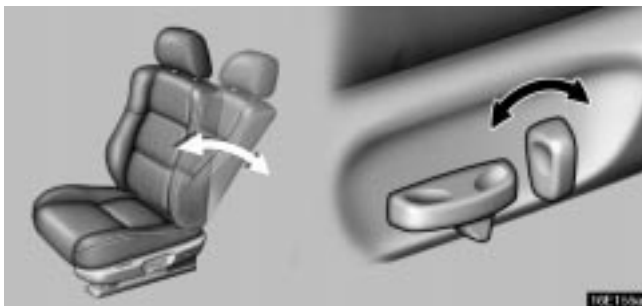

Move the control switch in the desired direction.

Releasing the switch will stop the seatback in that position.



CAUTION

To reduce the risk of sliding under the lap belt during a collision, avoid reclining the seatback any more than needed. The seat belts provide maximum protection in a frontal or rear collision when the driver and the passenger are sitting up straight and well back in the seats. If you are reclined, the lap belt may slide past your hips and apply restraint forces directly to the abdomen. Therefore, in the event of a frontal collision, the risk of personal injury may increase with increasing recline of the seatback.

Adjusting seat cushion angle and height




Move the control switch in the desired direction.

Releasing the switch will stop the seat cushion in that position.

COMFORT ADJUSTMENT

Adjusting lumbar support (driver's seat only)

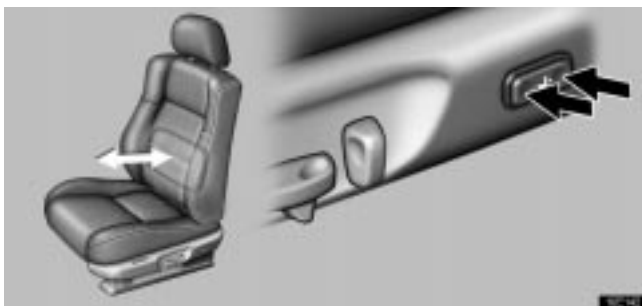

Push the control switch on either side.

The amount of lumbar support will change as long as the switch is pushed.



TRUNK STORAGE EXTENSION

► **1** *Unlock* **2** *Lock* **3** *Open*

Pull down the center armrest in the rear seat. Pull the lever of the armrest door and open the armrest door.

Access to the trunk can be prevented by locking the armrest door with the master key.

See "Luggage stowage precautions" on page 99 for precautions to observe in loading luggage.




CAUTION

Be sure to close the door when the trunk storage extension is not in use. Luggage or cargo in the trunk may be thrown into the passenger compartment in a sudden stop or crash resulting in injury.

COMFORT ADJUSTMENT

HEAD RESTRAINTS

Front seats

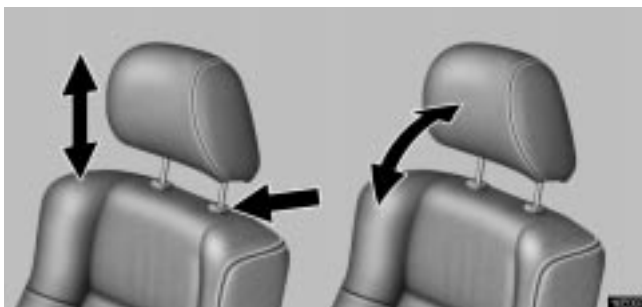

To raise the head restraint, pull it up. To lower it, press the lock release button and push the head restraint down. To move the head restraint forward or rearward, pull or push on the top.

The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.




CAUTION

- Adjust the center of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

COMFORT ADJUSTMENT

Rear seats

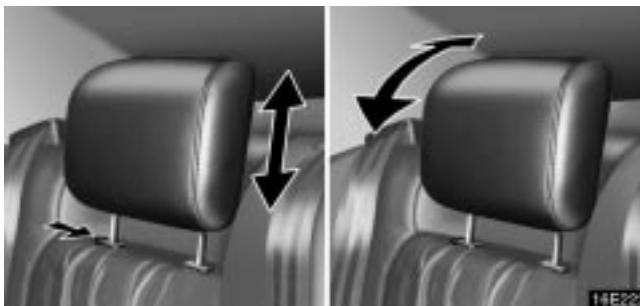

To raise the head restraint, pull it up. To lower it, press the lock release button and push the head restraint down. To move the head restraint forward or rearward, pull or push on the top.

The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.



CAUTION

- Adjust the center of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

TILT STEERING WHEEL



To change the steering wheel angle, hold the steering wheel, pull up the lock release lever, tilt the steering wheel to the desired angle and release the lever.

When the steering wheel is in a low position, it will spring up as you release the lock release lever.



CAUTION

- Do not adjust the steering wheel while the vehicle is moving. It may cause the driver to mishandle the vehicle and an accident may occur resulting in death or serious injuries.
- After adjusting the steering wheel, try moving it up and down to make sure it is locked in position.

COMFORT ADJUSTMENT

OUTSIDE REAR VIEW MIRRORS



Adjust the mirror so that you can just see the side of your vehicle in the mirror.

Be careful when judging the size or distance of any object seen in the outside rear view mirror on the passenger's side. It is a convex mirror with a curved surface. Any object seen in a convex mirror will look smaller and farther away than if seen in a normal flat mirror.

When the inside rear view mirror darkens in "AUTO" mode, the driver's side outside rear view mirror also darkens to reduce the reflection of the headlights of the following vehicle. For details, see "Inside rear view mirror" on page 134.

When you push the rear window and outside rear view mirror defogger switch, the heater panels in the outside rear view mirrors will quickly clear the mirror surface.



CAUTION

- Do not adjust the mirror while the vehicle is moving. It may cause the driver to mishandle the vehicle and an accident may occur resulting in death or serious injuries.
- Since the mirror surfaces can get hot, keep your hands off them when the rear window and outside rear view mirror defogger switch is on.

COMFORT ADJUSTMENT

Power rear view mirror control



► **1** Control switch **2** Master switch


To adjust the power rear view mirror, first place the master switch at “L” (left) or “R” (right), and push the control switch on the desired side.

The power rear view mirror can be adjusted when the key is in the “ACC” or “ON” position.

NOTICE

If ice should jam the mirror, do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

Folding rear view mirrors

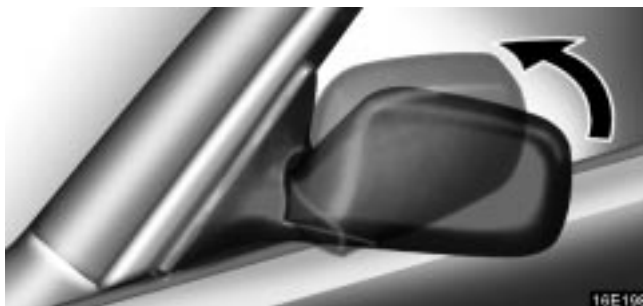

To fold the rear view mirror, push backward.

The rear view mirrors can be folded backward for parking in restricted areas.




CAUTION

Do not drive with the mirrors folded backward. Both the driver and passenger side rear view mirrors must be extended and properly adjusted before driving.

COMFORT ADJUSTMENT

INSIDE REAR VIEW MIRROR

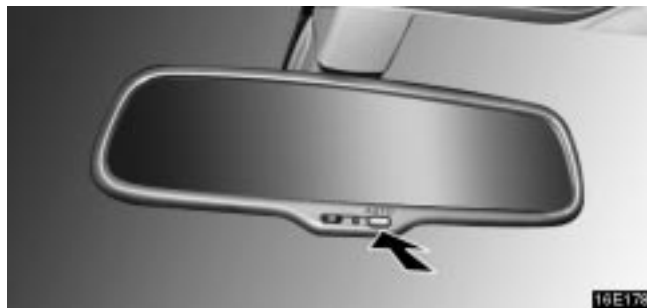

COMFORT ADJUSTMENT

Adjust the mirror so that you can just see the rear of your vehicle in the mirror.

Pushing the switch changes the mode between “AUTO” and “DAY”.

The indicator comes on when the “AUTO” mode is selected.

“DAY” mode: The mirror surface is normal.

“AUTO” mode: If the mirror detects light from the headlights of the vehicle behind you, the mirror surface darkens slightly to reduce the reflected light.

When the inside rear view mirror surface changes, the driver’s side outside rear view mirror surface will also become darker.

When the ignition key is inserted and turned on, the inside rear view mirror always turns on in the “AUTO” mode.

When the outside air temperature is low, it may take a little longer for the mirror to darken in response to the detection of headlights.



CAUTION

Do not adjust the mirror while the vehicle is moving. It may cause the driver to mishandle the vehicle and an accident may occur resulting in death or serious injuries.

COMFORT ADJUSTMENT

SEAT BELTS

recommendations. The lap belt should be worn securely and as low as possible over the hips and not on the waist.

Seat belt precautions

Lexus strongly urges that the driver and passengers in the vehicle be properly restrained at all times with the seat belts provided. Failure to do so could increase the chance of injury and/or the severity of injury in accidents.

Child. Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belts. See "Child restraint" on page 175 for details.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

If a child must sit in the front seat, the seat belts should be worn properly. Do not let the child sit on your lap. It does not provide sufficient restraint. If an accident occurs and the seat belts are not worn properly, the force of the rapid inflation of the airbag may cause death or serious injury to the child.

Do not allow the child to stand up or kneel on either rear or front seats. An unrestrained child could suffer serious injury or death during emergency braking or a collision.

Pregnant woman. Lexus recommends the use of a seat belt. Ask your doctor for specific

Injured person. Lexus recommends the use of a seat belt. Depending on the injury, first check with your doctor for specific recommendations.

COMFORT ADJUSTMENT



CAUTION

Persons should ride in their seats properly wearing their seat belts whenever the vehicle is moving. Otherwise, they are much more likely to suffer serious bodily injury or death in the event of sudden braking or a collision.

When using the seat belts, observe the following:

- Use the belt for only one person at a time. Do not use a single belt for two or more people – even children.
- Avoid reclining the seatbacks too much. The seat belts provide maximum protection when the seatbacks are in the upright position. (See “Adjusting seatback angle” on page 122.)
- Be careful not to damage the belt webbing or hardware. Take care that they do not get caught or pinched in the seat or doors.
- Inspect the belt system periodically. Check for cuts, fraying, and loose parts. Damaged parts should be replaced. Do not disassemble or modify the system.
- Keep the belts clean and dry. If they need cleaning, use a mild soap solution or lukewarm water. Never use bleach, dye, or abrasive cleaners – they may severely weaken the belts. (See “Cleaning the interior” on page 482 for instructions.)

COMFORT ADJUSTMENT

- Replace the belt assembly (including bolts) if it has been used in a severe impact. The entire assembly should be replaced even if damage is not obvious.

COMFORT ADJUSTMENT

Fastening front and rear seat belts



Adjust the seat as needed and sit up straight and well back in the seat. To fasten your belt, pull it out of the retractor and insert the tab into the buckle.

You will hear a click when the tab locks into the buckle.

The seat belt length automatically adjusts to your size and the seat position.


The retractor will lock the belt during a sudden stop or on impact. It also may lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend, and you can move around freely.

When a passenger's shoulder belt is completely extended and is then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system securely. (For details, see "Child restraint" on page 175.) To free the belt again, fully retract the belt and then pull the belt out once more.

If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it. You will then be able to smoothly pull the belt out of the retractor.

 CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.

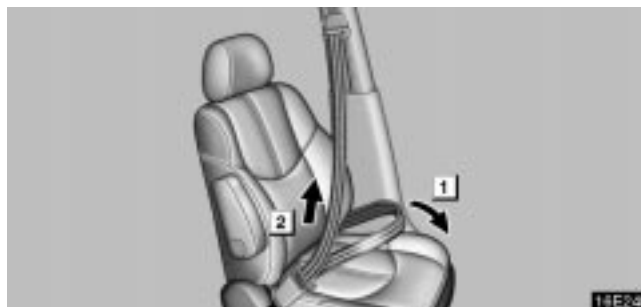

COMFORT ADJUSTMENT


Adjust the position of the lap and shoulder belts.

- 1 Position the lap belt as low as possible on your hips
– not on your waist.
- 2 Adjust it to a snug fit by pulling the shoulder portion
upward through the latch plate.



CAUTION

- Both high-positioned lap belts and loose-fitting belts could cause serious injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on hip as possible.
- For your safety, do not place the shoulder belt under your arm.

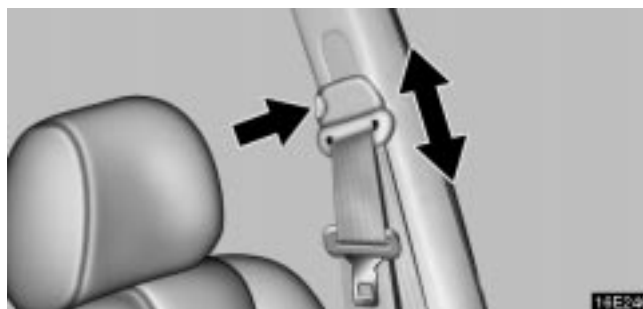

► *Front seat belts only*

Adjust the shoulder anchor position to your size.

To raise the anchor position, push the anchor up. To lower the anchor position, support the anchor while you push the lock release button then slide the anchor down. After the adjustment, make sure the anchor is locked in position.



CAUTION

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause severe injuries in a collision.



COMFORT ADJUSTMENT

To release the belt, press the buckle release button and allow the belt to retract.

If the belt does not retract smoothly, pull it out and check for kinks or twists. Then make sure it remains untwisted as it retracts.

Seat belt extender

If your seat belts cannot be fastened securely because it is not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

Please contact your local Lexus dealer so that the dealer can order the proper required length for the extender. Bring the heaviest coat you expect to wear for proper measurement and selection of length. Additional ordering information is available at your Lexus dealer.



CAUTION

When using the seat belt extender, observe the following. Failure to follow these instructions could result in less effectiveness of the seat belt restraint system in case of vehicle accident, increasing the chance of personal injury.

- Never use the seat belt extender if you can fasten the seat belt without it.
- Remember that the extender provided for you may not be safe when used on a different vehicle, or for another person or at a different seating position than the one originally intended for.



To connect the extender to the seat belt, insert the tab into the seat belt buckle so that the “PRESS” signs on the buckle release buttons of the extender and the seat belt are both facing outward as shown.

You will hear a click when the tab locks into the buckle.

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt. This helps prevent damage to the vehicle interior and extender itself.

When not in use, remove the extender and store in the vehicle for future use.

COMFORT ADJUSTMENT



CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.

Front seat belt pretensioners



The driver and front passenger's seat belt pretensioners are designed to be activated in response to a severe frontal impact.

When the airbag sensor detects the shock of a severe frontal impact, the front seat belts are quickly drawn back in by the retractors so that the belts snugly restrain the front seat occupants.

The front seat belt pretensioners are activated even with no passenger in the front seat.


Collisions occurring at certain speeds and angles may cause the seat belt pretensioners and SRS airbags not to operate all together.

COMFORT ADJUSTMENT



This indicator comes on when the ignition key is turned to the “ACC” or “ON” position. It goes off after about 6 seconds. This means the front seat belt pretensioners are operating properly.

This warning light system monitors the airbag sensor assembly, front airbag sensors, side airbag sensors, front seat belt pretensioner assemblies, inflators, warning light, interconnecting wiring and power sources. (For details, see “Service reminder indicators and warning buzzers” on page 60 for instructions.)

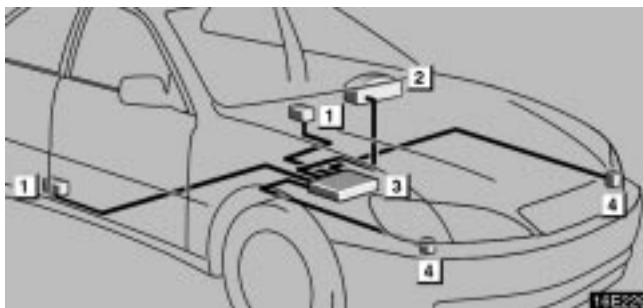

- **1 Front seat belt pretensioner assemblies**
- 2 SRS warning light**
- 3 Airbag sensor assembly**
- 4 Front airbag sensors**

The front seat belt pretensioner system mainly consists of the above components, and their locations are shown in the illustration.

The front seat belt pretensioners are controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and airbag sensor.

When the front seat belt pretensioners are activated, an operating noise may be heard and a small amount of smoke-like gas may be released. This gas is harmless and does not indicate that a fire is occurring.

Once the front seat belt pretensioners have been activated, the seat belt retractors remain locked.

COMFORT ADJUSTMENT



CAUTION

Do not modify, remove, strike or open the front seat belt pretensioner assemblies, airbag sensor or surrounding area or wiring. Doing any of these may cause sudden operation of the front seat belt pretensioners or disable the system, which could result in death or serious injury.

Failure to follow these instructions can result in death or serious injuries.

NOTICE

Do not perform any of the following changes without consulting your Lexus dealer. Such changes can interfere with proper operation of the front seat belt pretensioners in some cases.

- *Installation of electronic devices such as a mobile two-way radio, cassette tape player or compact disc player*
- *Repairs on or near the front seat belt retractor assemblies*
- *Modification of the suspension system*
- *Modification of the front end structure*


- *Attachment of a grille guard (bull bar, kangaroo bar, etc.), snowplow, winches or any other equipment to the front end*
- *Repair made on or near the front fenders, front end structure or console*



This front seat belt pretensioner system has a service reminder indicator to inform the driver of operating problems. If any of the following conditions occurs, this indicates a malfunction of the airbags or pretensioners. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the "ACC" or "ON" position, or the light remains on.
- The light comes on or flashes while driving.
- If either front seat belt does not retract or cannot be pulled out due to a malfunction or activation of the relevant front seat belt pretensioner.

COMFORT ADJUSTMENT

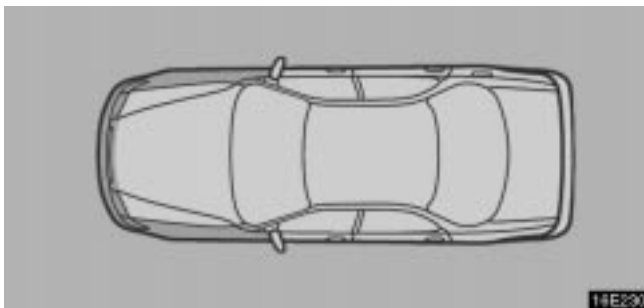

In the following cases, contact your Lexus dealer as soon as possible:

- The front part of the vehicle (shaded in the illustration) was involved in an accident that was not severe enough to cause the front seat belt pretensioners to operate.
- Either front seat belt pretensioner assembly or surrounding area is scratched, cracked, or otherwise damaged.



SRS AIRBAGS

The SRS (Supplemental Restraint System) airbags are designed to provide further protection for the driver and front passenger in addition to the primary safety protection provided by the seat belts.

► *SRS front airbags*

In response to a severe frontal impact, the SRS front airbags work together with the seat belts to help reduce injury by inflating. The SRS front airbags help to reduce injuries mainly to the driver's or front passenger's head or chest caused by directly hitting the steering wheel or dashboard.

The front passenger airbag is activated even with no passenger in the front seat.

Be sure to wear your seat belt properly.

COMFORT ADJUSTMENT

CAUTION

The driver or front passenger too close to the steering wheel or dashboard during airbag deployment can be killed or seriously injured. Lexus strongly recommends that:

- The driver sit as far back as possible from the steering wheel while still maintaining control of the vehicle.
- The front passenger sit as far back as possible from the dashboard.
- All vehicle occupants be properly restrained using the available seat belts.



► *SRS side airbags*

In response to a severe side impact, the SRS side airbags work together with the seat belts to help reduce injury by inflating. The SRS side airbags help to reduce injuries mainly to the driver's or front passenger's chest.

The SRS side airbag on the passenger seat is activated even with no passenger in the front seat.

Be sure to wear your seat belt properly.

COMFORT ADJUSTMENT



CAUTION


SRS side airbags inflate with considerable force. To avoid potential death or serious injury when they inflate, the driver and front passenger must:

- Wear their seat belts properly.
- Remain properly seated with their back upright and against the seat at all times.



The indicator comes on when the ignition key is turned to the “ACC” or “ON” position. It goes off after about 6 seconds. This means the SRS airbags are operating properly.

This warning light system monitors the airbag sensor assembly, front airbag sensors, side airbag sensors, front seat belt pretensioner assemblies, inflators, warning light, interconnecting wiring and power sources. (For details, see “Service reminder indicators and warning buzzers” on page 60 for instructions.)

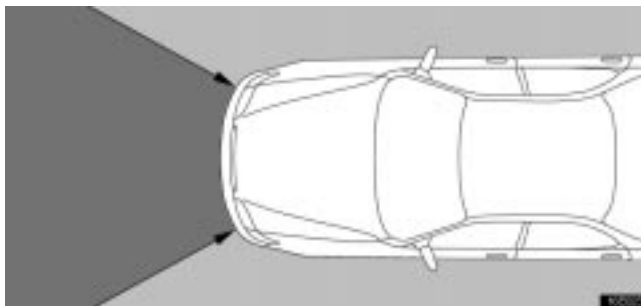

The SRS front airbag system is designed to activate in response to a severe frontal impact within the shaded area between the arrows in the illustration.

The SRS front airbags will deploy if the severity of the impact is above the designed threshold level, comparable to an approximate 25 km/h (15 mph) collision when impacting straight into a fixed barrier that does not move or deform.


If the severity of the impact is below the above threshold level, the SRS front airbags may not deploy.

However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or if it is involved in an underride collision (e.g. a collision in which the nose of the vehicle “underrides”, or goes under, the bed of a truck, etc.).

It is possible that in some collisions at the lower zone of airbag sensor detection and activation the SRS airbags and seat belt pretensioners will not operate all together.

For the safety of all occupants, always wear your seat belts properly.

COMFORT ADJUSTMENT

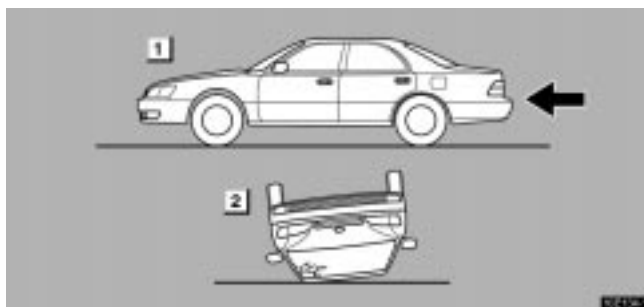


- **1** *Collision from the rear*
- 2** *Vehicle rollover*

The SRS front airbags are not designed to inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed frontal collision.

The SRS side airbags are designed to inflate when the passenger compartment gets a severe collision from the side.


The SRS side airbags may rather not to activate in the impact in which the occupant wearing the seat belt correctly would not get serious injury.

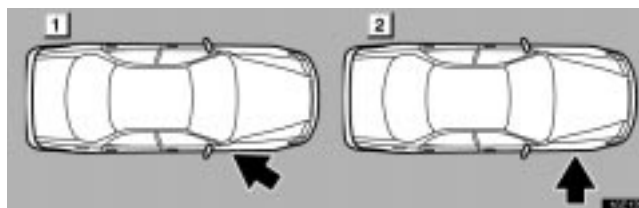

- ▶ **1** Collision from the side at an angle
- 2** Collision from the side to the vehicle body other than the passenger compartment


The SRS side airbag system may not activate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment as shown in the illustration.

COMFORT ADJUSTMENT

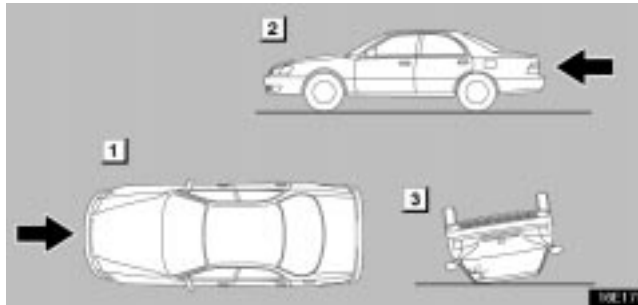

- **1** *Collision from the front*
- 2** *Collision from the rear*
- 3** *Vehicle rollover*


The SRS side airbags are not designed to inflate if the vehicle is involved in a front or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

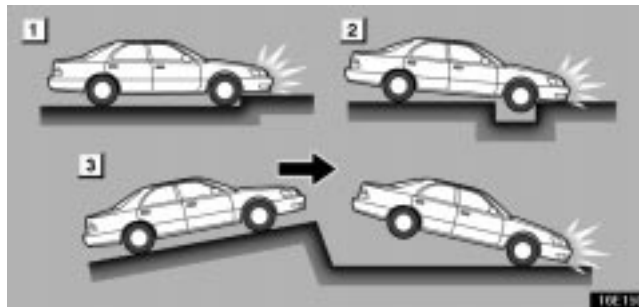

- **1** *Hitting a curb, edge of pavement or hard material*
- 2** *Falling into or jumping over a deep hole*
- 3** *Landing hard or vehicle falling*

The SRS front airbags may deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

COMFORT ADJUSTMENT

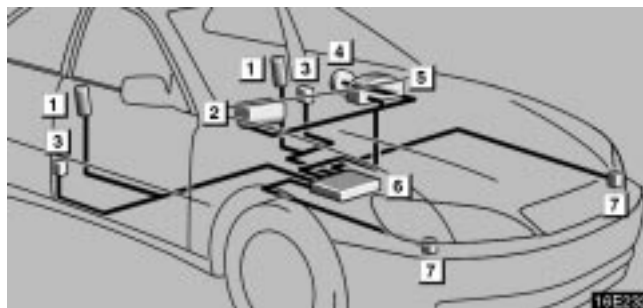

- **1** *Side airbag modules (airbag and inflator)*
- 2** *Airbag module for front passenger (airbag and inflator)*
- 3** *Side airbag sensors*
- 4** *Airbag module for driver (airbag and inflator)*
- 5** *SRS warning light*
- 6** *Airbag sensor assembly*
- 7** *Front airbag sensors*

The SRS airbag system consists mainly of the above components, and their locations are shown in the illustration.

The airbag sensor assembly consists of a safing sensor and airbag sensor.

In a severe frontal impact, the sensors detect deceleration and the system triggers the front airbag inflators. In a severe side impact, the side airbag sensor triggers the side airbag inflator. Then a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the forward or lateral motion of the occupants.

When the SRS operates, it produces a fairly loud noise and release some smoke and residue along with non-toxic gas. This does not indicate a fire. This gas is normally harmless; however, for those who have delicate skin, it may cause a minor skin irritation. Be sure to wash off any residue as soon as possible to prevent any potential skin irritation.

Deployment of the airbags happens in a fraction of a second, so the airbags must inflate with considerable force. While the system is designed to reduce serious injuries, it may also cause minor burns or abrasions and swelling.

Parts of the airbag module (steering wheel hub, dashboard, front seats) may be hot for several minutes, but the airbags themselves will not be hot. The airbags are designed to inflate only once.

A crash severe enough to inflate the driver and front passenger airbags may break the windshield as the vehicle buckles. In vehicles with a front passenger airbag, the windshield may also be damaged by absorbing some of the force of the inflating airbag.

COMFORT ADJUSTMENT



CAUTION

- The SRS airbag system is designed only as a supplement to the primary protection of the driver side and front passenger side seat belt systems. The front seat occupants can be killed or seriously injured by the inflating airbags if they do not wear the available seat belts properly. During sudden braking just before a collision, an unrestrained driver or front passenger can move forward into direct contact with or close proximity to the airbag which may then deploy during the collision. To ensure maximum protection in an accident, the driver and all passengers in the vehicle must wear their seat belts properly. Wearing a seat belt properly during an accident reduces the chances of death or serious injury or being thrown out of the vehicle. For instructions and precautions concerning the seat belt system, see "Seat belts" on page 136.
- Improperly seated and/or restrained infants and children can be killed or seriously injured by the deploying airbags. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seat of the vehicle and properly restrained. The rear seat is the safest for infants and children. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 175 .



- Never put a rear-facing child restraint system on the front passenger seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.

COMFORT ADJUSTMENT



► *Move seat fully back*

- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- Do not allow the child to lean against the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.
- For instructions concerning the installation of a child restraint system, see "Child restraint" on page 175.

COMFORT ADJUSTMENT



- Do not sit on the edge of the seat or lean over the dashboard when the vehicle is in use. The front airbags inflate with considerable speed and force; you may be killed or seriously injured. Sit up straight and well back in the seat, and always use your seat belt properly.

COMFORT ADJUSTMENT



- Do not lean against the front door when the vehicle is in use. The side airbag inflates with considerable speed and force; you may be killed or seriously injured.
- Do not apply excessive weight to the outer side of the front seats on vehicles with side airbags.



- Do not allow a child to stand up, or to kneel on the front passenger seat. The front airbag inflates with considerable speed and force; the child may be killed or seriously injured.
- Do not hold a child on your lap or in your arms. Use a child restraint system in the rear seat. For instructions concerning the installation of a child restraint system, see “Child restraint” on page 175.

COMFORT ADJUSTMENT



- Do not put objects or your pets on or in front of the dashboard or steering wheel pad that houses the front airbag system. They might restrict inflation or cause death or serious injury as they are projected rearward by the force of the deploying airbags. Likewise, the driver and front passenger should not hold things in their arms or on their knees.



- Do not attach a cup holder or any other device or object on or around the door. When the side airbag inflates, the cup holder or any other device or object will be thrown with great force, or the side airbag may not activate correctly, resulting in death or serious injury. Likewise, the driver and front passenger should not hold things in their arms or on their knees.

COMFORT ADJUSTMENT

- Do not use accessories for the seats which cover the parts where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or serious injury.
- Do not modify or remove any wiring. Do not modify, remove, strike or open any components, such as the steering wheel pad, steering wheel, column cover, front passenger airbag cover, front seats or airbag sensor assembly. Doing any of these may cause sudden SRS airbag inflation or disable the system, which could result in death or serious injury.
- Do not modify or replace the seats or upholstery of the front seats with the side airbags. Such changes may disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury. Consult your Lexus dealer if you insist on modifications of this kind.

Failure to follow these instructions can result in death or serious injury.

NOTICE

Do not perform any of the following changes without consulting your Lexus dealer. Such changes can interfere with proper operation of the SRS in some cases.

- *Installation of electronic devices such as a mobile two-way radio, cassette tape player or compact disc player*
- *Modification of the suspension system*
- *Modification of the front end structure and side structure of the passenger compartment*
- *Attachment of a grille guard (bull bar, kangaroo bar, etc.), snowplow, winches or any other equipment to the front end*
- *Repairs made on or near the front fenders, front end structure, console, steering column, steering wheel, dashboard near the front passenger airbag or front seats*



This SRS airbag system has an indicator to inform the driver of operating problems. If either of the following conditions occurs, this indicates a malfunction of the airbags. Contact your Lexus dealer as soon as possible to service the vehicle.

- When the ignition key is turned to the “ACC” or “ON” position, the light does not come on, stays on or flashes.
- The light comes on or starts flashing while driving.

If the light stays on, it indicates that the SRS front airbags fail. If the light flashes, the SRS side airbags fail.

COMFORT ADJUSTMENT



In the following cases, contact your Lexus dealer as soon as possible:

- Any of the SRS airbags have been inflated.
- The front part of the vehicle and portion of the doors (shaded in the illustration) were involved in an accident that was not severe enough to cause the SRS airbags to inflate.
- The surface of the seats with the side airbags or the pad section of the steering wheel or front passenger airbag cover (shaded in the illustration) is scratched, cracked, or otherwise damaged.

NOTICE

Do not disconnect the battery cables before contacting your Lexus dealer.

CHILD RESTRAINT

Child restraint precautions

Lexus strongly urges the use of child restraint systems for children small enough to use them.

The laws of all fifty states in the U.S.A. and Canada now require the use of a child restraint system.

Your vehicle conforms to SAE J1819.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. See "Seat belts" on page 136 for details.

COMFORT ADJUSTMENT



CAUTION

- For effective protection in automobile accidents and sudden stops, child must be properly restrained using a seat belt or child restraint depending on age and size. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior if you are unrestrained.
- Lexus strongly urges use of a proper child restraint which conforms to the size of the child, and is put on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

- Never put a rear-facing child restraint system on the front seat. In the event of an accident, the force of the rapid inflation of the airbag can cause death or serious injury if a rear-facing child restraint system is put on the front seat.
- Unless it is unavoidable, do not put a forward-facing child restraint system on the front seat.
- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- Do not allow the child to lean against the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured.

COMFORT ADJUSTMENT

Child restraint system

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt. You must carefully consult the manufacturer's instructions which accompany the child restraint system.

To provide proper restraint, use a child restraint system following the manufacturer's instructions about the appropriate age and size of the child for the restraint system.

Install the child restraint system correctly following the instructions provided by its manufacturer. General directions are also provided under the following illustrations.

The child restraint system should be installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

**CAUTION**


- Never put a rear-facing child restraint system on the front seat. In the event of an accident, the force of the rapid inflation of the airbag can cause death or serious injury if a rear-facing child restraint system is put on the front seat.
- Unless it is unavoidable, do not put a forward-facing child restraint system on the front seat.
- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- Do not allow the child to lean against the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.
- After installing the child restraint system, make sure it is secured in place according to the manufacturer's instructions. If it is not restrained securely, it may cause death or serious injury to the child in the event of a sudden stop or accident.

COMFORT ADJUSTMENT

When not using the child restraint system, keep it secured with the seat belt or place it in the trunk or somewhere other than in the passenger compartment. This will prevent it from injuring passengers in the event of a sudden stop or accident.

Your vehicle has anchors for securing the top strap of a child restraint system.

For instructions about how to use the anchor bracket, see "Using a top strap" on page 201.

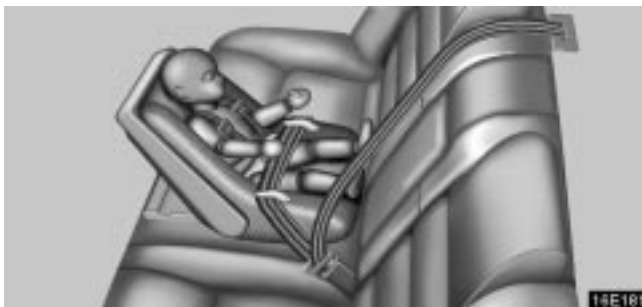

Types of child restraint system


Child restraint systems are classified into the following 3 types depending on the child's age and size.

- (A) Infant seat
- (B) Convertible seat
- (C) Booster seat

Install the child restraint system following the instructions provided by its manufacturer.

(A) Infant seat

(B) Convertible seat

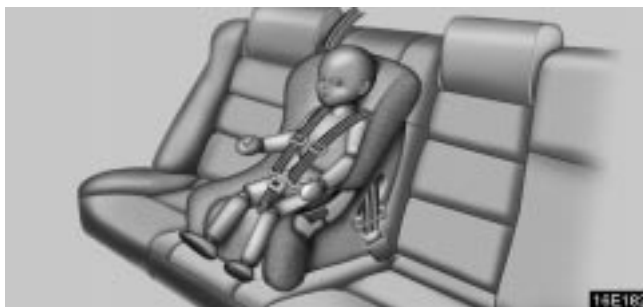


(C) Booster seat



COMFORT ADJUSTMENT

INSTALLATION WITH 3-POINT TYPE SEAT BELT

(A) Infant seat installation

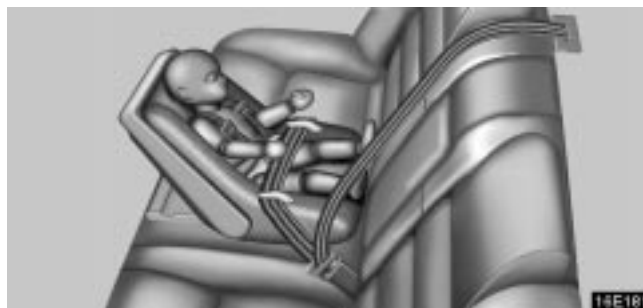

An infant seat is used in rear-facing position only.




 CAUTION

Never put a rear-facing child restraint system on the front passenger seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.

COMFORT ADJUSTMENT



- If your driving seat position is not satisfactory, install the child restraint system at another position.

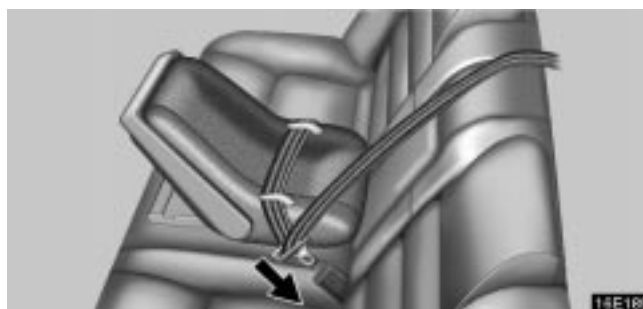

COMFORT ADJUSTMENT


1. Run the lap and shoulder belt through or around the infant seat following the instructions provided by its manufacturer and inserting the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.

COMFORT ADJUSTMENT



CAUTION


- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.

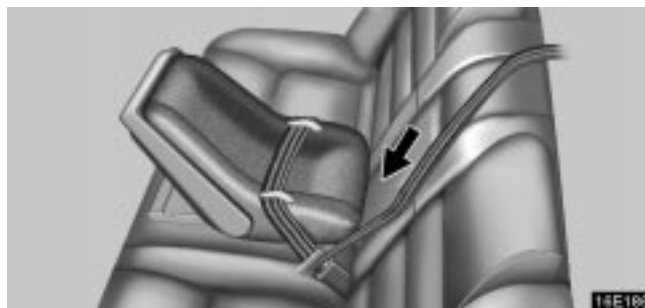

2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted even slightly, it cannot be extended.


To hold the infant seat securely, make sure the belt is in the lock mode before letting the belt retract.

COMFORT ADJUSTMENT

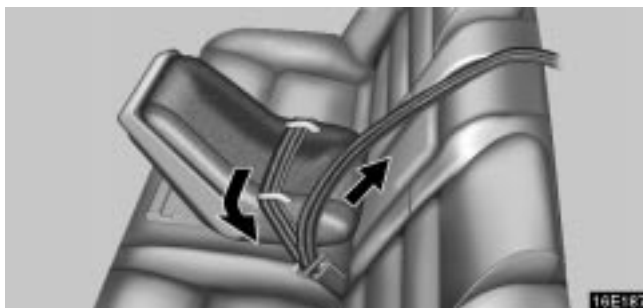

3. While pressing the infant seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the infant seat securely.

COMFORT ADJUSTMENT

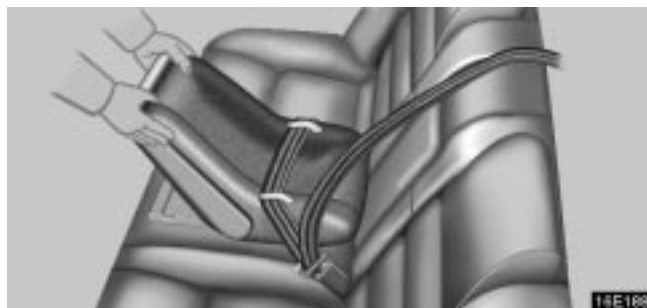

CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.




4. To remove the infant seat, press the buckle–release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger.

(B) Convertible seat installation



A convertible seat is used in forward–facing or rear–facing position depending on the age and size of the child. When installing, follow the manufacturer's instructions about the applicable child's age and size as well as directions for installing the child restraint system.

COMFORT ADJUSTMENT

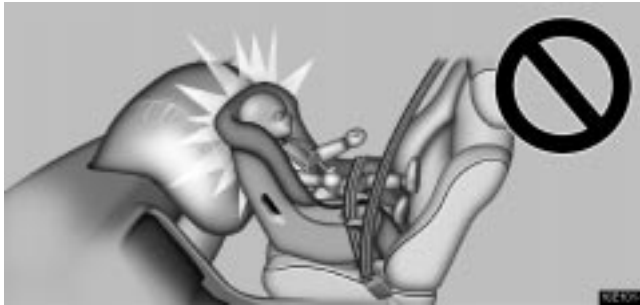

CAUTION

- Never put a rear-facing child restraint system on the front passenger seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.



► *Move seat fully back*

- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- Do not allow the child to lean against the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.

COMFORT ADJUSTMENT



- If your driving seat position is not satisfactory, install the child restraint system at another position.



COMFORT ADJUSTMENT


1. Run the lap and shoulder belt through or around the convertible seat following the instructions provided by its manufacturer and inserting the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.

COMFORT ADJUSTMENT



CAUTION


- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.

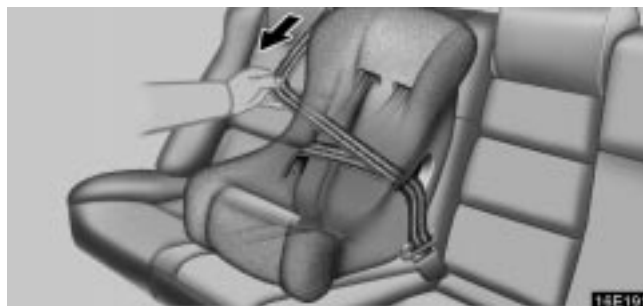

2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted slightly, it cannot be extended.

To hold the convertible seat securely, make sure the belt is in the lock mode before letting the belt retract.

COMFORT ADJUSTMENT

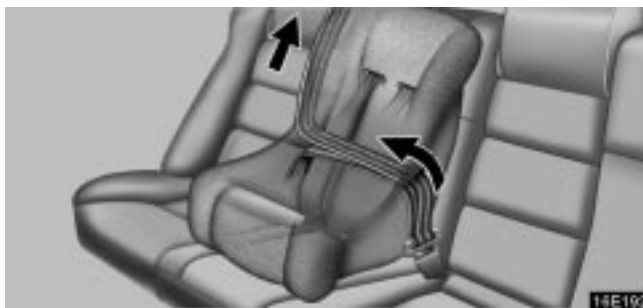

3. While pressing the convertible seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the convertible seat securely.

COMFORT ADJUSTMENT



CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.



4. To remove the convertible seat, press the buckle–release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger.

(C) Booster seat installation



A booster seat is used in forward–facing position only.

COMFORT ADJUSTMENT




► *Move seat fully back*



CAUTION

- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- Do not allow the child to lean over the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.

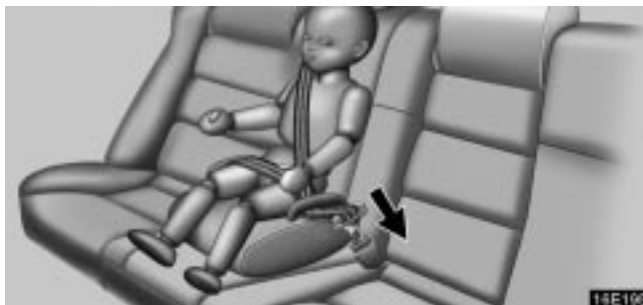

COMFORT ADJUSTMENT

1. Sit the child on a booster seat. Run the lap and shoulder belt through or around the booster seat and child following the instructions provided by its manufacturer and insert the tab into the buckle.

Make sure the shoulder belt is correctly across the child's shoulder and that the lap belt is positioned as low as possible on child's hips. See "Seat belts" on page 136 for details.



CAUTION


- Always make sure the shoulder belt is positioned across the center of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Failure to do so could reduce the amount of protection in an accident and cause serious injuries in a collision.

- Both high-positioned lap belts and loose-fitting belts could cause serious injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on a child's hips as possible.
- For child's safety, do not place the shoulder belt under child's arm.
- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent your child from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect your child from injury.




2. To remove the child restraint system, press the buckle-release button and allow the belt to retract.

Using a top strap

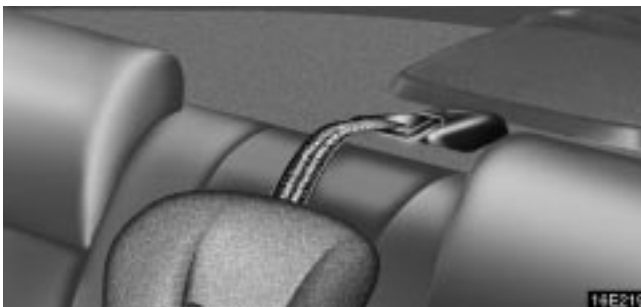

Follow the procedure below for a child restraint system that requires the use of a top strap.


COMFORT ADJUSTMENT

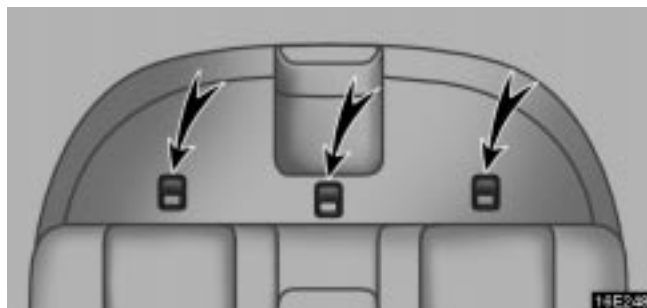

► **Anchor bracket**

Use the anchor bracket on the package tray behind the rear seat to attach the top strap.

Anchor brackets are installed for each rear seating position.

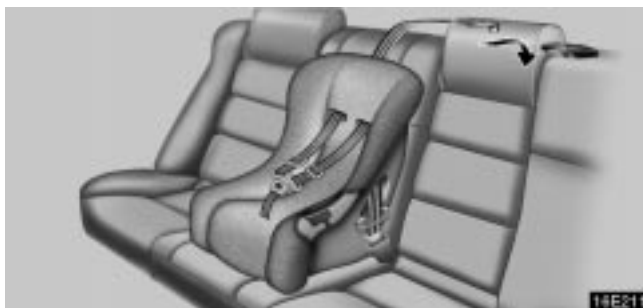

Fix the child restraint system with the seat belt.

Latch the hook onto the anchor bracket and tighten the top strap.

For instructions to install the child restraint system, see "Child restraint system" on page 178.



CAUTION

Make sure the top strap is securely latched, and check that the child restraint system is secure by pushing and pulling it in different directions. Follow all the installation instructions provided by its manufacturer.


COMFORT ADJUSTMENT

DRIVING POSITION MEMORY SYSTEM

The micro computer can memorize the positions of the driver's seat and outside rear view mirrors. Two different driving position profiles can be entered into the computer's memory.

Recording a driving position in the computer's memory can only be done when the ignition key is in the "ON" position and the selector lever is in the "P" position.

Setting a driving position

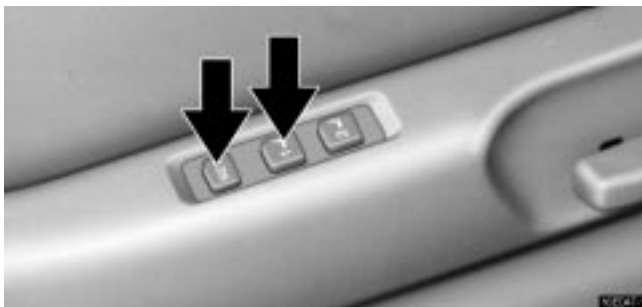

COMFORT ADJUSTMENT

1. Adjust the driver's seat and outside rear view mirrors to the desired position.

2. While pushing the "SET" button, push button "1" or "2" until the signal beeps.

The beep sound means that the positions are recorded in the computer's memory.


By repeating these two steps and pressing the remaining button, the driving position for another driver can be recorded.

To set a new memorized position, select the desired position and perform step 2. The previous memory will be erased and the new position will be set.

To make only slight changes to an already memorized position, the easiest way is to first activate the memorized position, then make the desired changes and perform step 2 above.

COMFORT ADJUSTMENT

Activating a memorized position

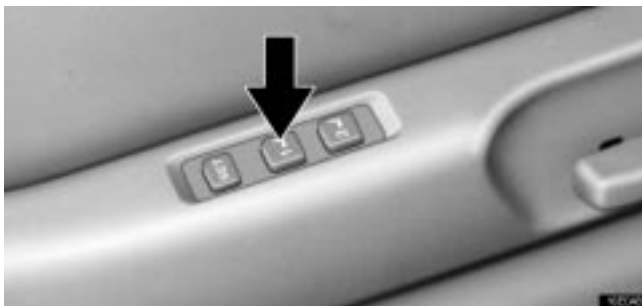

When you push button “1” or “2”, the driving position will be automatically adjusted to the position recorded for that button.

Conditions for memorized position activation

- Ignition key “ON” and selector lever in “P” position
All parts of the memorized positions can be activated.
However, if the brake pedal is being depressed, the seat position will not change.
- Key not in ignition switch and within 30 seconds of opening driver's door.
The memorized position can be activated.

If any driving position memory switch is pushed while one of the memorized driving position profiles is being activated, the operation will stop.

To activate the system, push the desired button (“1” or “2”) again.

The driving position memory control system cannot be operated while the vehicle is moving.

If the vehicle's battery is disconnected, the computer's memory will be erased and the memorized positions will have to be set again.

COMFORT ADJUSTMENT



CAUTION

- Do not start the vehicle while the adjustments are being made.
- Take care not to select the wrong button, or the seat could strike the rear passenger or hit your body against the steering wheel. If this happens, you can stop the movement by pressing another driving position memory switch, or depressing the brake pedal.

·
-

SECTION 1 - 7

INSTRUMENTS AND CONTROLS

Theft deterrent

[Theft deterrent system](#) 211

[Theft prevention labels](#) 214

THEFT DETERRENT SYSTEM

To deter theft of the vehicle, this system is designed to give an alarm if any of the doors, trunk or hood is forcibly unlocked or the battery terminal is disconnected and then reconnected while the vehicle is locked.

The alarm blows the horn intermittently and flashes the headlights, tail lights and other exterior lights.



Setting the system

1. Turn the ignition key to the "LOCK" position and remove it.

The indicator light flashes by means of the engine immobiliser system.

2. Close and lock all the doors, trunk and hood using an ignition key or wireless remote control.

THEFT DETERRENT

If you lock them with wireless remote control, the parking lights and tail lights flash once.

The flashing indicator light will change to stay on when all the doors, trunk and hood are closed and locked.

3. After 30 seconds, the indicator starts flashing and the system is set.

Cancelling the system

When you unlock any door or trunk using an ignition key or wireless remote control, the system is cancelled.

If you unlock any door or trunk with wireless remote control, the parking lights and tail lights flash twice.

Activating the system

The alarm sounds for 60 seconds if any of the following are operated:

- Unlocking any door or trunk without using an ignition key or wireless remote control.
- Opening the hood forcibly.
- Reconnecting the battery.

If any door is unlocked and the ignition key is not in the ignition switch during the alarm sounding, the door is automatically locked.

To stop the alarm: Use either of the following methods.

- Unlock the door or trunk using an ignition key or wireless remote control.
- Turn the ignition switch on.

Testing the system

1. Open all the windows.

2. Set the system as described above.

The front doors should be locked with the ignition key or wireless remote control. Be sure to wait until the indicator light starts flashing.

3. Unlock one of the doors from the inside.

The system should activate the alarm.

4. Unlock any of the doors with a key or the wireless remote control to cancel the system.

5. Repeat this operation for the other doors and hood.

When testing the hood, also check that the system is activated when the battery terminal is disconnected and then reconnected.

If the system does not work properly, have it checked by your Lexus dealer.

NOTICE

Disconnecting the battery may result in the erasure of information you have set in the computer memory. After reconnecting the battery, check that the memorized data has been retained. If it has been erased, input it into the computer once more.

THEFT DETERRENT

THEFT PREVENTION LABELS (U.S.A. ONLY)



Your new vehicle carries theft prevention labels which are approximately 56 mm (2.20 in.) by 16 mm (0.63 in.).

The purpose of these labels is to reduce the incidence of vehicle thefts by facilitating the tracing and recovery of parts from stolen vehicles. The label is designed so that once it is applied to a surface, any attempt to remove it will result in destroying the integrity of the label. Transferring these labels intact from one part to another will be impossible.

NOTICE

You should not attempt to remove the theft prevention labels as it may violate certain state or federal laws.

SECTION 2 - 1

AIR CONDITIONING AND AUDIO

Air conditioning

Automatic air conditioning controls 217

AUTOMATIC AIR CONDITIONING CONTROLS


- The automatic air conditioning automatically maintains the set temperature.

In the automatic operation mode, the air conditioning selects the most suitable fan speed, air flow, air intake and on-off the air conditioning according to the temperature.

The ignition key must be in the "ON" position.


NOTICE

To prevent the battery from being discharged, do not leave the air conditioning on longer than necessary when the engine is not running.

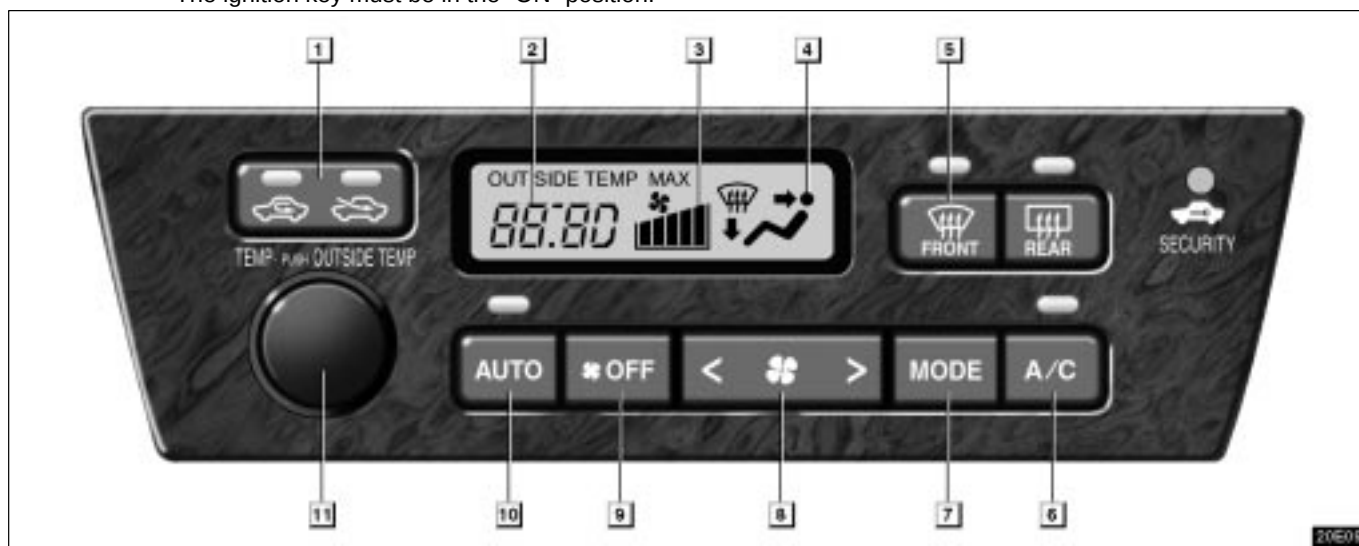

AIR CONDITIONING

- 1** *Air intake control button*
- 2** *Temperature display (in degrees Fahrenheit or Centigrade)* ► *Air flow selection*
- 3** *Fan speed display*
- 4** *Air flow display*
- 5** *Front windshield button*
- 6** *Air conditioning on–off button*
- 7** *Air flow control button*
- 8** *Fan speed control button*
- 9** *OFF button*
- 10** *Automatic control button*
- 11** *Temperature control and outside temperature knob*

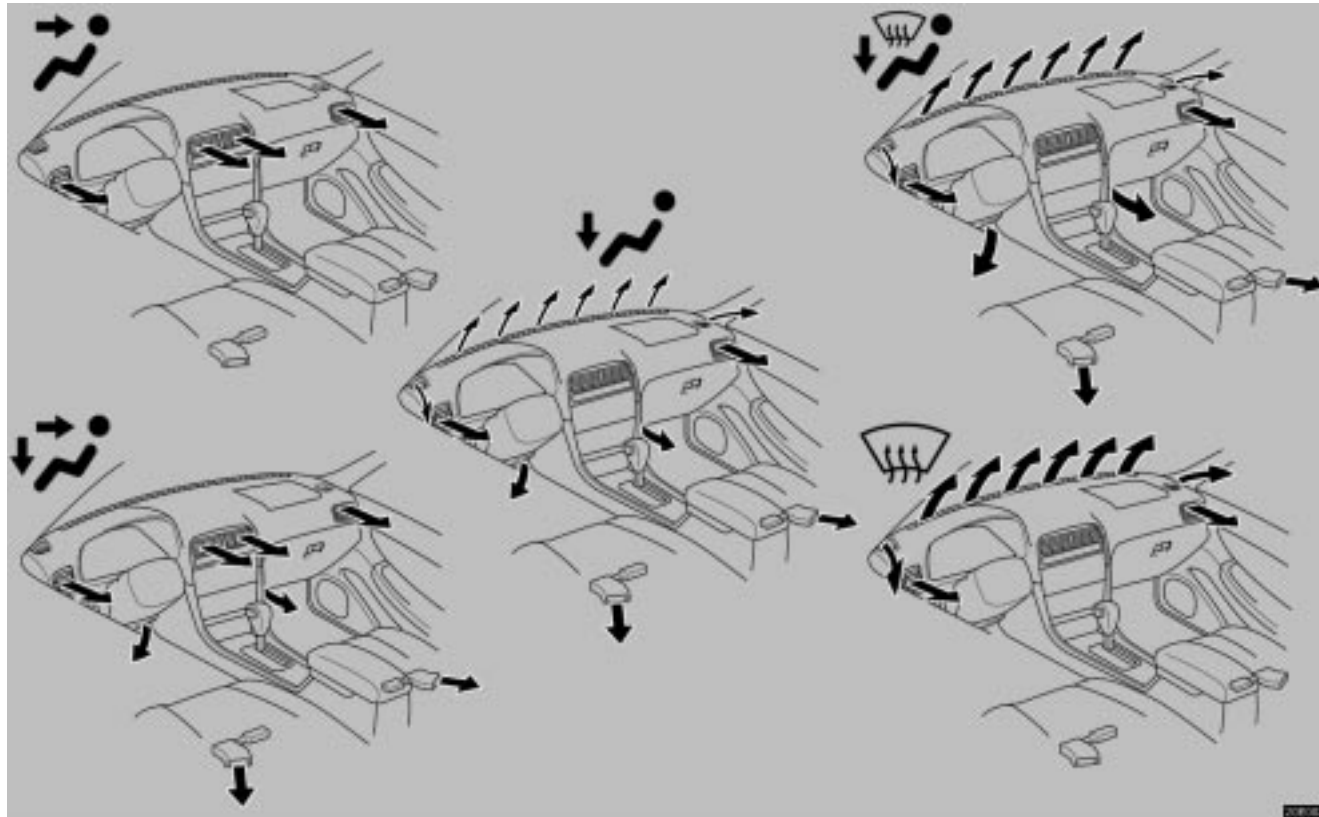

AIR CONDITIONING

(a) Climate control

SETTING OPERATION – automatic control



1. Push the “AUTO” button.

An indicator light will illuminate to show that the automatic operation mode has been selected.

Air flow quantity, switching of the diffusers, on–off of the air conditioning and switching of the air intake between RECIRCULATED AIR and OUTSIDE AIR are automatically adjusted. The operation status is shown by each indicator.

When one of the manual control buttons is depressed while operating in automatic mode, the operation corresponding to the button depressed is set. Other conditions continue to be adjusted automatically.

Push the “OFF” button to turn the air conditioning system off.



2. Turn the “TEMP” knob until the desired temperature is displayed.


The “TEMP” knob is used to set the desired passenger compartment temperature. The temperature of air delivered to the passenger compartment will be controlled automatically according to the setting. The figures on the panel indicate degrees Fahrenheit or Centigrade.

When you adjust the “TEMP” knob to maximum cooling, a “MAX. COLD” message will appear on the display and the air intake mode will be automatically changed to RECIRCULATED AIR.

SETTING OPERATION – manual control

If manual air flow selection is desired –

AIR CONDITIONING

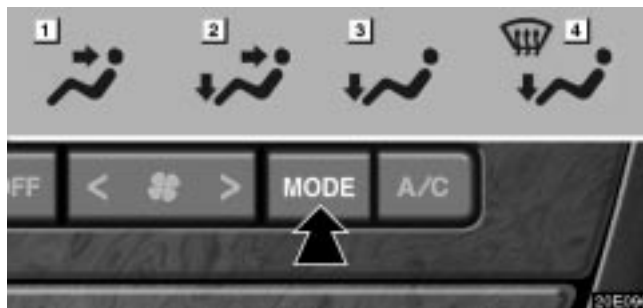

The outlets from which air is delivered can be selected manually by pushing the button. The function of each mode is as follows:


- 1 Panel** – Air flows mainly from the instrument panel vents.
- 2 Bi-level** – Air flows from both the floor vents and the instrument panel vents.
- 3 Floor** – Air flows mainly from the floor vents.
- 4 Floor/Windshield** – Air flows mainly from the floor vents and windshield vents.

If quick heating or cooling is desired –

Turn the “TEMP” knob until “MAX. HOT” or “MAX. COLD” appears on the display.

When the “MAX. COLD” is selected, the air intake is automatically set to RECIRCULATED AIR mode.

If manual fan speed control is desired –

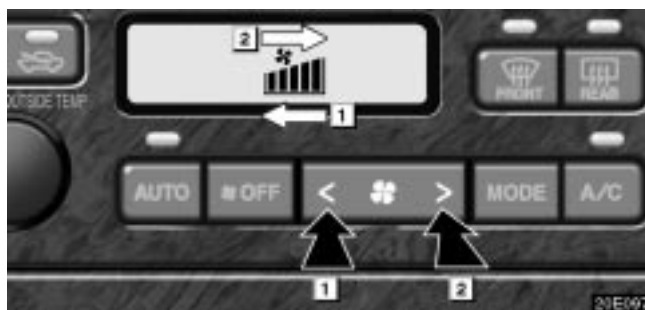

► **1 Fan speed at low 2 Fan speed at high**

If manual switching of air intake is desired –

The fan speed can be set to your desired speed by pushing the appropriate side of fan speed control button. The higher the fan speed is, the more air is delivered. Pushing the "OFF" button turns off the fan.

To remove exterior windshield frost, use the high speed setting.

AIR CONDITIONING



The air intake control button is used to switch the air intake between the OUTSIDE AIR mode and RECIRCULATED AIR mode.

With the button in the OUTSIDE AIR mode, the OUTSIDE AIR mode indicator light will come on and the system will take fresh outside air into the vehicle.

If quick circulation of cooled air is desired, push the air intake control button for RECIRCULATED AIR. The RECIRCULATED AIR mode indicator light will come on.

For normal use, it is best to keep the air intake control button set to OUTSIDE AIR mode. If recirculated air is used during heating, the windows will fog up more easily.

When the air conditioning is ON, if the engine coolant temperature becomes extremely high, the RECIRCULATED AIR mode is automatically selected. This is not a malfunction. When the engine coolant temperature is lowered, the previous mode resumes.

If manual on-off of the air conditioning is desired –

Push the “A/C” button to turn the air conditioning on and push it again to turn the air conditioning off.

The air conditioning does not work if the outside temperature is lowered down to around 0°C (32°F).

If the system is used for ventilation, heating in dry weather or removing frost or exterior fog on the windshield, turn the air conditioning off once it is no longer required. This will improve fuel economy. The air conditioning can be used for year-round automatic

temperature control including cooling and dehumidifying operation.

If the air conditioning compressor does not operate, the indicator of the “A/C” button will blink. If the indicator of the “A/C” button blinks even when the “A/C” button is pushed again, have the compressor checked by your nearest Lexus dealer.

Displaying the outside temperature –

When you push the “OUTSIDE TEMP” knob, the temperature display shows the outside temperature. To return to the display of the current set temperature, push the knob again. The temperature display ranges from –30°C (–22°F) up to 50°C (122°F).

AIR CONDITIONING

(b) Windshield defogging and defrosting



To remove interior fog on the windshield –

Push the “FRONT WINDSHIELD” button.

To remove frost or exterior fog on the windshield –

1. Turn the “TEMP” knob at the maximum temperature.
2. Push the “FRONT WINDSHIELD” button.
3. Push the fan speed control button on the right side to obtain a maximum air flow.
4. Leave the air conditioning on–off button off.

When the “FRONT WINDSHIELD” button is pushed, air flows mainly from the windshield vents and the OUTSIDE AIR mode is automatically set. This setting clears the front view more quickly.

If you want to return the setting to RECIRCULATED AIR mode, push the air intake control button once again.

Pushing the “FRONT WINDSHIELD” button turns on the defroster–linked air conditioning. At this time, the “A/C” button indicator comes on regardless of whether or not the “A/C” button is pushed in. This is to clean up the front view more quickly.

To turn off the air conditioning alone, push the “A/C” button once again.

When the “A/C” button is not pushed in, pushing another air flow control button turns off the air conditioning.

Pushing the “FRONT WINDSHIELD” button once again returns the air flow mode to the last one used.



CAUTION

Do not use the “FRONT WINDSHIELD” button during cooled air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield could cause the outer surface of the windshield to fog up blocking your vision.

AIR CONDITIONING

(c) Operating tips

- To help cool down the interior after parking in the hot sun, drive for the first few minutes with the windows open. After the excess heat has blown away, close the windows.
- Make sure the air inlet grilles in front of the windshield are not blocked by leaves or other obstructions.
- If air flow control is not satisfactory, check the dashboard vents. (See “Side vents”.)
- On humid days, do not blow cold air on the windshield. The windshield could fog up because of the difference in air temperature on the inside and outside of the windshield.
- Keep the area under the front seats clear to allow air to circulate throughout the vehicle.
- On cold days, push the fan speed selector to adjust the fan speed high for a minute to help clear the intake ducts of snow or moisture. This can reduce the amount of fogging on the windows.
- When driving on dusty roads, close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake control button be left to the OUTSIDE AIR mode and the fan speed control button be pressed to anywhere except the “OFF” button.

- If following another vehicle on a dusty road, or driving in windy and dusty conditions, it is recommended that the air intake control button be temporarily pressed in to the RECIRCULATED AIR mode, which will close off the outside passage and prevent outside air and dust from entering the vehicle interior.

Heating

For best results, set controls to:

For automatic operation –

Push in the “AUTO” button. Temperature – To the desired temperature Air intake – OUTSIDE AIR Air conditioning – OFF
--

For manual operation –

AIR CONDITIONING

Fan speed – To the desired fan speed
Temperature – Towards **WARM** (to the right)
Air intake – **OUTSIDE AIR**
Air flow – **FLOOR**
Air conditioning – **OFF**

- For quick heating, select RECIRCULATED AIR for a few minutes. To keep the windows from fogging, select OUTSIDE AIR after the vehicle interior has been warmed.
- Push the “A/C” button on for dehumidified heating.
- Choose floor/windshield air flow to heat the vehicle interior while defrosting or defogging the windshield.

Air conditioning

For best results, set controls to:

For automatic operation –

Push in the “AUTO” button.
Temperature – To the desired temperature
Air intake – **OUTSIDE AIR**
Air conditioning – **ON**

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **COLD** (to the left)
Air intake – **OUTSIDE AIR**
Air flow – **PANEL**
Air conditioning – **ON**

- For quick cooling, select RECIRCULATED AIR for a few minutes.

Ventilation

For best results, set controls to:

For automatic operation –

Push in the “AUTO” button.
Temperature – Towards low temperature
Air intake – **OUTSIDE AIR**
Air conditioning – **OFF**

AIR CONDITIONING

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **COLD** (to the left)
Air intake – **OUTSIDE AIR**
Air flow – **PANEL**
Air conditioning – **OFF**

Defogging and defrosting

– The inside of the windshield

For best results, set controls to:

For automatic operation –

Temperature – Towards high temperature to heat;
low temperature to cool
Air intake – **OUTSIDE AIR**
Air flow – **WINDSHIELD**

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **WARM** (to the right) to heat;
COLD (to the left) to cool
Air intake – **OUTSIDE AIR**
Air flow – **WINDSHIELD**

When pushing the “FRONT WINDSHIELD” button, the air intake selects OUTSIDE AIR automatically. This is to clean up the front view more quickly.

If you want to return the setting to RECIRCULATED AIR mode, push the air intake control button once again.

Pushing the “FRONT WINDSHIELD” button turns on the defroster–linked air conditioning. At this time, the “A/C” button indicator comes on regardless of whether or not the “A/C” button is pushed in. This is to clean up the front view more quickly.

To turn off the air conditioning alone, push the “A/C” button once again.

When the “A/C” button is not pushed in, pushing another air flow control button turns off the air conditioning.

Pushing the “FRONT WINDSHIELD” button once again returns the air flow mode to the last one used.

- On humid days, do not blow cold air on the windshield – the difference between the outside and inside temperatures could make the fogging worse.

– The outside of the windshield

For best results, set controls to:

For automatic operation –

Temperature – Towards high temperature
Air intake – **OUTSIDE AIR**
Air flow – **WINDSHIELD**

For manual operation –

Fan speed – To the desired fan speed Temperature – Towards WARM (to the right) Air intake – OUTSIDE AIR Air flow – WINDSHIELD

When pushing the “FRONT WINDSHIELD” button, the air intake selects OUTSIDE AIR automatically. This is to clean up the front view more quickly.

If you want to return the setting to RECIRCULATED AIR mode, push the air intake control button once again.

Pushing the “FRONT WINDSHIELD” button turns on the defroster-linked air conditioning. At this time, the “A/C” button indicator comes on regardless of whether or not the “A/C” button is pushed in. This is to clean up the front view more quickly.

To turn off the air conditioning alone, push the “A/C” button once again.

When the “A/C” button is not pushed in, pushing another air flow control button turns off the air conditioning.

Pushing the “FRONT WINDSHIELD” button once again returns the air flow mode to the last one used.

- To heat the vehicle interior while defrosting the windshield, choose floor/windshield air flow.

AIR CONDITIONING

Side vents



If air flow control is not satisfactory, check the side vents. The side vents may be opened or closed as shown.

(d) Checking and replacing the air conditioning filter



On some models, the air conditioning filters are behind the central instrument panel.


The air conditioning filter may clog after long use. The filter may need to be replaced if the air flow of the air conditioner and heater experiences extreme reductions in operating efficiency, or if the windows become to fog up easily.

To maintain the air conditioning efficiency, inspect and replace the air conditioning filter according to the maintenance schedule. (For scheduled maintenance information, please refer to the "Owner's Manual Supplement/Maintenance Schedule".)




CAUTION

Be careful not to touch the hot heater radiator pipes.

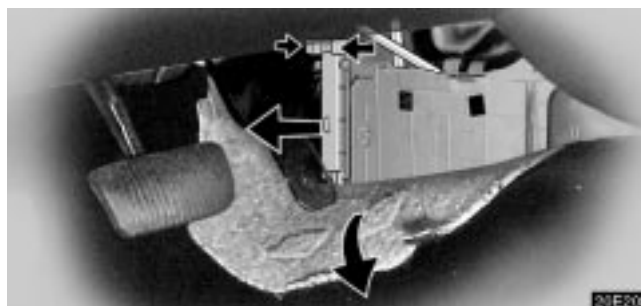


AIR CONDITIONING

1. Turn over the floor carpet carefully until the filter cover appears. Pull open the cover while compressing the cover clips.

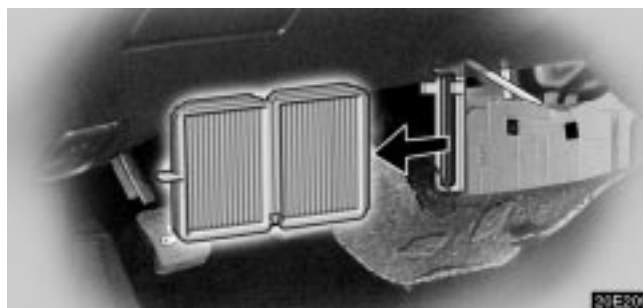

2. Pull on the lower tab and remove the lower filter from the filter outlet.

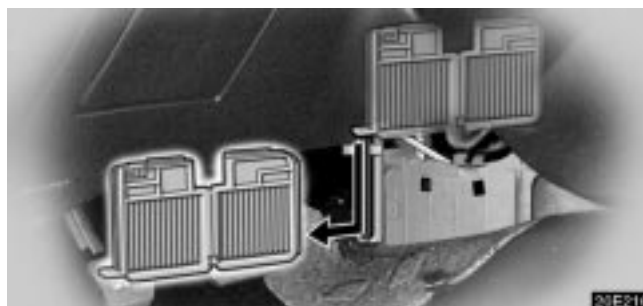

3. Remove the upper filter by pulling down on its tab then pulling it out.

4. Inspect the filter on the surface facing the front of the vehicle.

If it is just moderately dusty, it may be cleaned by blowing compressed air from the reverse surface. Do not wash or oil the filter.

If it is dirty, it should be replaced.



CAUTION

Make sure the floor mat and carpet are properly placed on its original place. If the floor mat and carpet interferes with the movement of the pedals during driving, it may cause an accident.

AIR CONDITIONING

NOTICE

Do not drive with the air conditioning filter removed, or the efficiency of the air conditioning may be lost.

SECTION 2 - 2

AIR CONDITIONING AND AUDIO


Audio

Audio system 238

AUDIO

AUDIO SYSTEM

Quick reference for your audio system

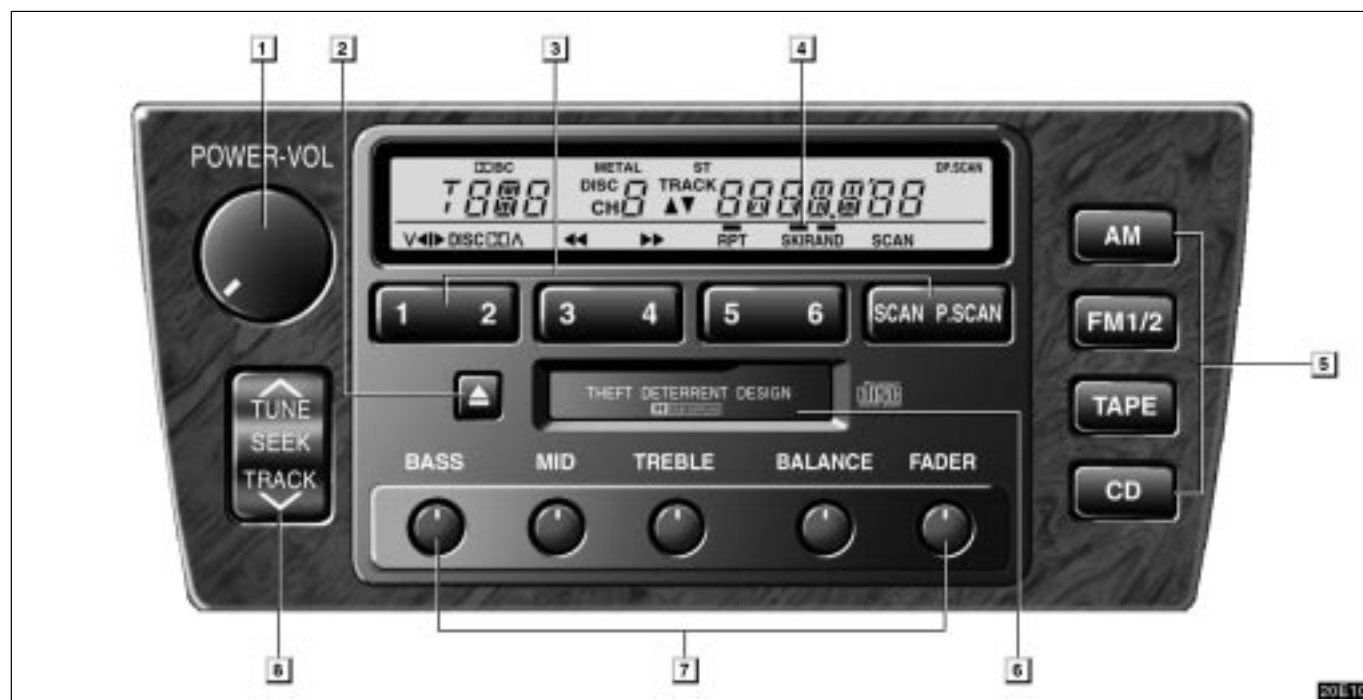

► The “CD” button works only when your Lexus is equipped with an automatic changer.
Audio system made in Nakamichi has a “NAKAMICHI” logo on the panel.

AUDIO

1 **Turning the system on and adjusting volume**
(See page 241 for details.)

2 **Stopping and ejecting a cassette tape**
(See page 250 for details.)

3 **Function buttons**

1 – 6: Station selector buttons
(See page 247 for details.)

SCAN: Scan tuning
(See page 250 for details.)

P. SCAN: Preset scan tuning
(See page 250 for details.)

4 **Display of functions in TAPE mode**

◀|▶: Side change
(See page 252 for details.)

□□: DOLBY NR
(See page 252 for details.)

◀◀: Rewinding
(See page 253 for details.)

▶▶: Fast forwarding
(See page 253 for details.)

RPT: Automatic repeat
(See page 254 for details.)

SKIP: Automatic skip of blank portions of tape
(See page 254 for details.)

4 **Display of functions in CD mode**

v ▲: Disc selection
(See page 260 for details.)

◀◀: Reversing
(See page 264 for details.)

▶▶: Fast forwarding
(See page 264 for details.)

RPT: Automatic repeat
(See page 265 for details.)

RAND: Random access
(See page 265 for details.)

SCAN: Scan selection
(See page 262 for details.)

5 **Mode selectors**
(See page 242 for details.)

6 **Cassette tape slot**
(See page 250 for details.)

7 **Tone and balance knobs**
(See page 243 for details.)

8 **Radio mode:** Frequency tuning
(See page 246 or 248 for details.)

TAPE mode: Direct access to a desired program
(See page 255 for details.)

CD mode: Direct access to a desired

program

(See page 263 for details.)

Using your audio system: some basics

This section describes some of the basic features of the Lexus audio system. Some information may not pertain to your system.

Your audio system works when the ignition key is in the "ACC" or "ON" position.

NOTICE

To prevent the battery from being discharged, do not leave the car audio on longer than necessary when the engine is not running.

(a) Turning the system on and off



Push this knob to turn the audio system on and off.
Turn this knob to adjust the volume.

The system turns on in the last mode used.



AUDIO

Push “AM”, “FM1/2”, “TAPE” or “CD” to turn on that mode. The selected mode turns on directly.

Push these buttons if you want to switch from one mode to another.

If the tape or disc is not set, the cassette player or compact disc player does not turn on.

You can turn off the cassette player by ejecting the cassette tape. If the audio system was previously off, then the entire audio system will be turned off when you eject the cassette tape. If another function was previously playing, it will come on again.



In the “TAPE” or “CD” mode, the applicable functions are shown in the lowest part of the display. Push the switch just below to turn on each function.

(b) Tone and balance

How good an audio program sounds to you is largely determined by the mix of the treble, mid-range, and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid-range, and bass.

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.



AUDIO

Push the knob so that it pops out of its retracted position. Then turn it for adjustment.

“BASS” knob: Use this knob to adjust low-pitched tones.

“MID” knob: Use this knob to adjust mid-pitched tones.

“TREBLE” knob: Use this knob to adjust high-pitched tones.

“BALANCE” knob: Use this knob to adjust the sound balance between the right and left speakers.

“FADER” knob: Use this knob to adjust the sound balance between the front and rear speakers.

After adjustment, push the knob back into its retracted position.

(c) Automatic sound levelizer (except Nakamichi model)

When the audio sound becomes difficult to be heard due to road noise, wind noise, etc. during driving, the system adjusts to optimum volume according to the noise level.

(d) Your radio antenna

The wire antenna is mounted inside the rear window.

NOTICE

- *When cleaning the inside of the rear window, be careful not to scratch or damage the wire antenna.*
- *Putting a window tint (especially, conductive or metallic type) on the rear window may affect the reception of radio. For the installation of the window tint, consult with your Lexus dealer.*

(e) Your cassette player

When you insert a cassette, the exposed tape should be to the right.

NOTICE

Do not oil any part of the cassette player, and do not insert anything except a cassette tape into the slot.

(f) Your automatic changer



If your Lexus is equipped with an automatic changer, it can play selected discs or continuously play all the discs set in the magazine.

When you set discs into the magazine, make sure they face the correct way. If not, the player will display "ERR" and the disc number.

NOTICE

Never try to disassemble or oil any part of the compact disc player. Do not insert anything except a compact disc into the magazine.

The player is intended for use with 12 cm (4.7 in.) discs only.

AUDIO

Radio operation

(a) Listening to the radio



Push these buttons to choose either an AM or FM station.

"AM", "FM1" or "FM2" appears on the display.



Push this button on the upper side to step up the station band or on the lower side to step down.

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the display. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the display.

(b) Presetting a station

AUDIO



1. Tune in the desired station.

2. Push one of the station selector buttons (1–6) and hold it until a beep is heard. This sets the station to the button and the button number (1–6) appears on the display.

Each button can store one AM station and two FM stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

(c) Selecting a station

Your Lexus has an electronic tuning radio (ETR). Tune in the desired station using one of the following methods.




Preset tuning: Push the button (1–6) for the station you want briefly. The button number (1–6) and station frequency appear on the display.

Manual tuning: Push the “TUNE SEEK” button briefly. Each time you push the button, the radio will step up or down to another frequency.

Seek tuning: Push the “TUNE SEEK” button and hold it until you hear a beep. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched out one after another.

AUDIO

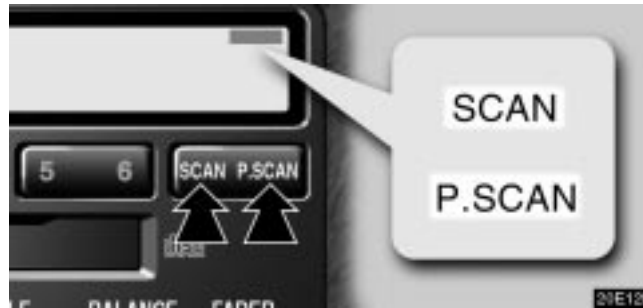

To scan all the frequencies: Push the "SCAN" button. "SCAN" appears on the display. The radio will find the next station up the band, stay there for a few seconds, and then scan again. To select a station, push the "SCAN" button a second time.

To scan the preset stations: Push the "P.SCAN" button. "P.SCAN" appears on the display. The radio will tune in the next preset station up the band, stay there for a few seconds, and then move to the next preset station. To select a station, push the "P.SCAN" button a second time.

Cassette tape player operation

(a) Playing a cassette tape



When you insert a cassette tape, the exposed tape should be to the right.

The player will automatically start when you insert a cassette tape. At this time, "TAPE" appears on the display.

If a metal or chrome equivalent cassette tape is put in the cassette player, the player will automatically adapt to it and "METAL" appears on the display.

To stop or eject the cassette tape, push the "EJECT" button.

Auto-reverse feature: After the cassette player reaches the end of a tape, it automatically reverses and begins to play the other side, regardless of whether the cassette was playing or fast forwarding.



AUDIO

If a cassette is already in the slot, push the “TAPE” button.

(b) Manual program selection

Dolby Noise Reduction* feature: If you are listening to a tape that was recorded with Dolby* B or C Noise Reduction, push the button by the double-D symbol until the appropriate symbol appears on the display.

The Dolby B NR mode reduces tape noise by about 10 dB. The Dolby C NR mode reduces tape noise by another 10 dB or about 20 dB total. For best sound reproduction, select the same NR mode that was used to record the tape.

To play a tape recorded without Dolby NR, push the button until the symbol disappears from the display.

* Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. “DOLBY” and the double-D symbol  are trademarks of Dolby Laboratories Licensing Corporation.



“Program” button: Push the “◀▶” button to select the other side of a cassette tape. The display indicates which side is currently selected (“▲” indicates top side, “▼” indicates bottom side).

“Rewind” button: Push the “◀◀” button to rewind a tape. “REW” appears on the display.


To stop rewinding, push the same button or “TAPE” button.

“Fast forward” button: Push the “▶▶” button to fast forward a cassette tape. “FF” appears on the display.

To stop fast forwarding, push the same button or “TAPE” button.

(c) Automatic program selection

AUDIO

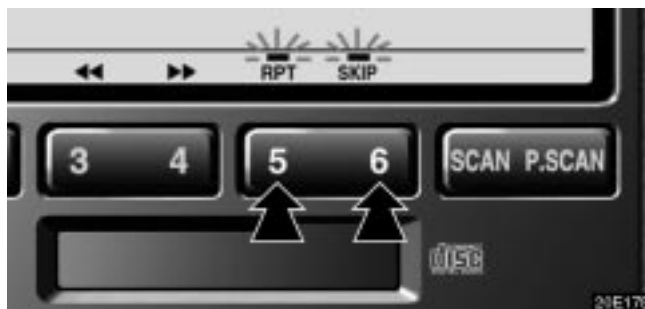

“RPT” button: The repeat feature automatically replays the current program.

Push the “RPT” button while the program is playing. When the program ends, it will automatically be rewound and replayed. Push the button again to turn off the repeat feature.

There must be at least 4 seconds of blank space between programs for the repeat feature to work correctly.

“SKIP” button: The skip feature allows you to fast forward past long stretches of blank tape. This is especially useful at the end of cassettes.

Push the “SKIP” button. The player will automatically skip any blank portions of 15 seconds or more and play the next program. To cancel it, push the button once again.



“Automatic program selection” button: The automatic program selection feature allows you to program your cassette player to skip forward or backward to locate the song you want to hear. You can skip up to nine programs at a time.

Push this button on the upper side to skip forward. “FF” and the number will appear on the display. Push the button until the number you want to skip appears on the display. After that, the player will automatically skip forward.

When the end of the tape is reached, the player automatically reverses sides and resumes normal play.

AUDIO

Push this button on the lower side to skip backward. Push the button until “REW” and the number you want to skip appear on the display.

- If you set “REW 1”, the player will rewind to the beginning of the current program.
- When counting the number of programs you want to rewind, remember to count the current program as well. For example, if you want to rewind to a song that is two before the song you are listening to, push this button until “REW 3” appears on the display.

When the beginning of the tape is reached, the player automatically resumes normal play.

There must be at least 3 seconds of blank space between programs for this feature to work correctly.

“RPT”, “SKIP” and “Automatic program selection” features: These features may not work well with some spoken word, live or classical recordings.

Compact disc player operation

The compact disc player is an optional accessory that your vehicle is pre-wired to accept. Although your audio system has a “CD” button, your vehicle may or may not be equipped with a CD player. Please contact your dealer for additional details if you would like to have the optional CD player installed.

(a) Inserting compact discs




1. Pull the lever and open the glove box door.




2. Push this button to eject the magazine.

AUDIO

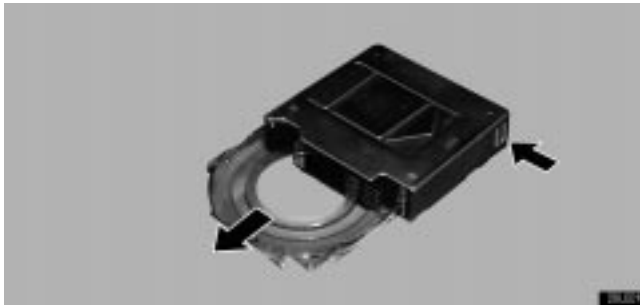


3. Pull out the tray while pushing the lock release button.

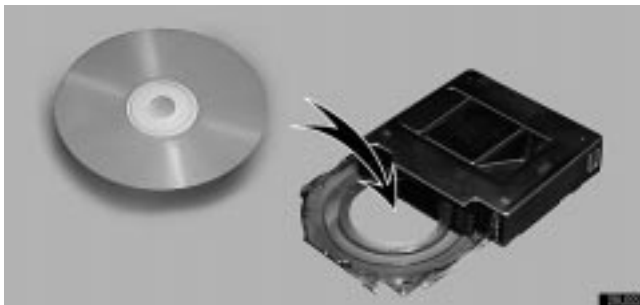

4. Put a disc on the tray with its label face down and push the tray back into the magazine.

If the label faces up, the disc cannot be played. In this case, "ERR" and the disc number appear on the display.

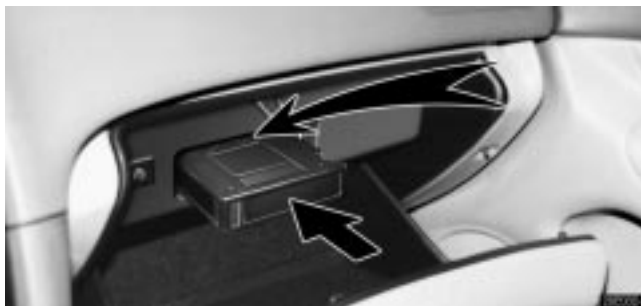

5. Insert the magazine into the player as indicated by the arrow head on the magazine and close the glove box door.

When the magazine is set completely, the system will be in a "Load" cycle for approximately 20 seconds while the system searches for discs in the magazine. Upon completion of this cycle, the CD unit will be ready to play. If the "CD" button is pushed during the "Load" cycle, "LOAD" appears on the display until the system has completed the load cycle, after which the system will begin normal play.

**CAUTION**

To reduce the chance of injury in case of an accident or a sudden stop, always keep the glove box door closed while driving.

AUDIO

(b) Playing a compact disc



Push the “CD” button if the magazine is already loaded in the player.

(c) Selecting a desired disc

“CD” appears on the display.

The discs set in the magazine are played continuously, starting with disc number 1. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the display.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.


The player will skip any empty disc trays.



Push the “DISC” button to select the disc number.

Push the button several times until the desired disc number appears on the display. When you release the button, the player will start playing the selected disc from the first track.

(d) Searching for a desired track

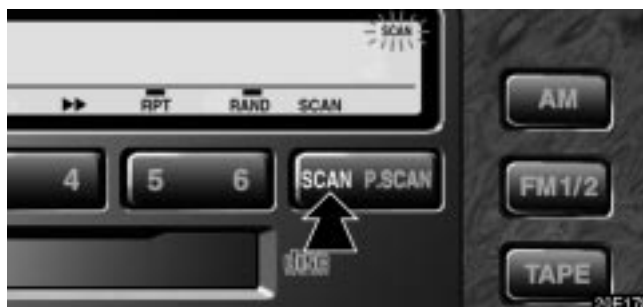


AUDIO

Push the “SCAN” button briefly.

“SCAN” will appear on the display. The compact disc player will play the next track for 10 seconds, then scan again. To select a track, push the “SCAN” button a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

(e) Searching for a desired disc

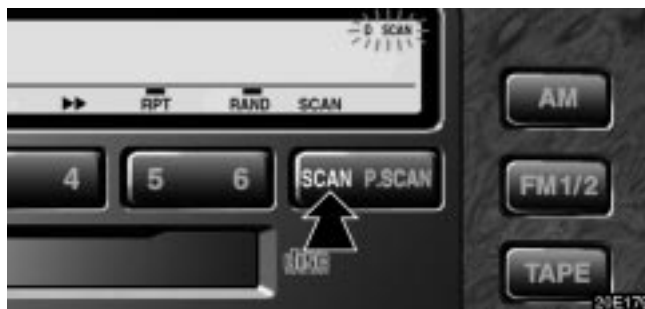

Push the “SCAN” button until you hear a beep.

(f) Selecting a desired track

With “D.SCAN” on the display, the program at the beginning of each disc will be played for 10 seconds. To continue listening to the program of your choice, push the “SCAN” button a second time.

After all the discs in the magazine are scanned in one pass, the scan function is cancelled.

AUDIO



“TRACK” button: Use for direct access to a desired track.

Push either side of the “TRACK” button several times until the desired track number appears on the display. As you release the button, the player will start playing the selected track from the beginning.


“Fast forward” button

Push the “▶▶” button and hold it to fast forward the disc. When you release the button, the compact disc player will resume playing from that position.

“Reverse” button

Push the “◀◀” button and hold it to reverse the disc. When you release the button, the compact disc player will resume playing.

(g) Other compact disc player functions

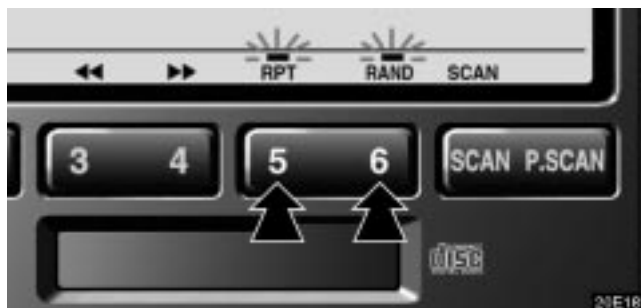

“RPT” button: Use it for automatic repeat of the track you are currently listening to.

Push the button while the track is playing. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, push the button once again.

“RAND” button: Use it for automatic track selection and play by the system.

When the button is pushed, the system selects a track in the discs which are set and plays it. To cancel it, push the button once again.

When a track is skipped or the system is inoperative, push the button to reset.

(h) If the player malfunctions

If “WAIT” appears on the display, audio signals of the disc cannot be read or the system has trouble. Push the “CD” button once again.

If the player does not operate, check that the disc surface is not soiled or damaged. If the disc is O.K., the following cause is possible.

- The temperature of the player's internal mechanism is raised because of high external temperature. Remove the magazine from the player to cool it.

If the player still does not operate, take it to your Lexus dealer.

AUDIO

Car audio system operating hints

NOTICE

To ensure the correct audio system operation:

- ***Be careful not to spill beverages over the audio system.***
- ***Do not put anything other than a cassette tape or CD magazine into the cassette tape slot or CD changer.***
- ***The use of cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.***

Radio reception

Usually, the problem with radio reception does not mean there is a problem with your radio – it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations – Generally, the effective range of FM is about 40 km (25 miles). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path – FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering – These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping – If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

AM

Fading – AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference – When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static – AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

Caring for your cassette player and tapes

For the best performance for your cassette player and tapes:

Clean the tape head and other parts regularly.

- A dirty tape head or tape path can decrease sound quality and tangle your cassette tapes. The easiest way to clean them is by using a cleaning tape. (A wet type is recommended.)

Use high-quality cassettes:


- Low-quality cassette tapes can cause many problems, including poor sound, inconsistent playing speed, and constant auto-reversing. They can also get stuck or tangled in the cassette player.
- Do not use a cassette if it has been damaged or tangled or if its label is peeling off.
- Do not leave a cassette in the player if you are not listening to it, especially if it is hot outside.
- Store cassettes in their cases and out of direct sunlight.
- Avoid using cassettes with a total playing time longer than 100 minutes (50 minutes per side). The tape used in these cassette is thin and could get stuck or tangled in the cassette player.

AUDIO

Caring for your compact disc player and discs




- Use only compact discs labeled as shown. CD-R (CD-Recordable), CD-RW (CD-Re-writable) and personal computer use CD-ROMs may not be playable on your compact disc player.
- Your compact disc player is intended for use with 12 cm (4.7 in.) discs only.
- Extremely high temperature can keep your compact disc player from working. On hot days, use air conditioning to cool the vehicle interior before you listen to a disc.
- Bumpy roads or other vibrations may make your compact disc player skip.
- If moisture gets into your compact disc player, you may not hear any sound even though your compact disc player appears to be working. Remove the magazine from the player and wait until it dries.

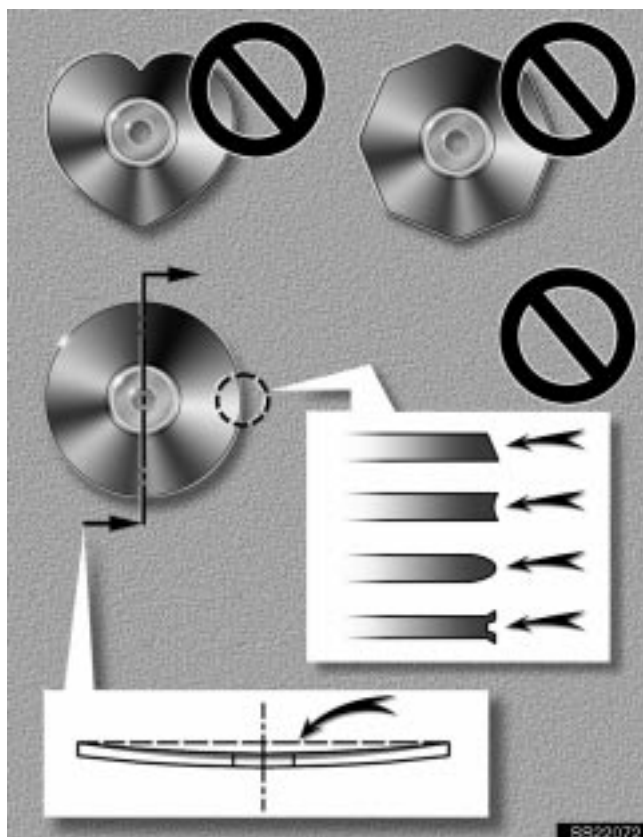

AUDIO

Your automatic changer cannot play special shaped or low-quality compact discs such as those shown here. Do not use them as the changer could be damaged.

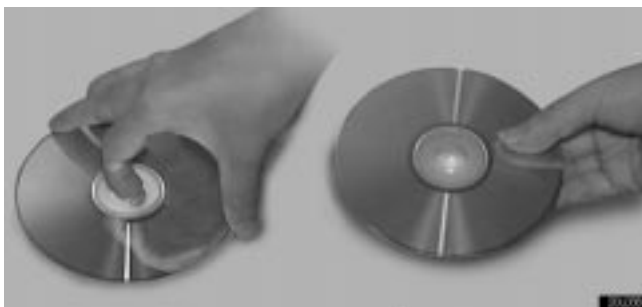

► **Correct**

► **Wrong**

- Handle compact discs carefully, especially when you set them into the magazine. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scrapes, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)



To clean a compact disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in a circle). Do not use a conventional record cleaner or anti-static device.

**CAUTION**

Compact disc players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

SECTION 3 - 1


STARTING AND DRIVING

Starting and driving

Three-way catalytic converter	273
Engine exhaust caution	276
Before starting the engine	278
Ignition switch with steering lock	279
Parking brake	281
How to start the engine	283
Automatic transmission	284
Cruise control	297
Electronic modulated suspension	301
Traction control system	301
Vehicle skid control system	304
Brake system	308
Brake pad wear limit indicators	315
Types of tires	315

THREE-WAY CATALYTIC CONVERTER

STARTING AND DRIVING

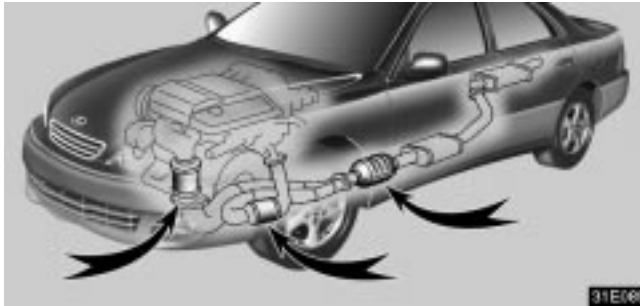

The three-way catalytic converters are emission control devices installed in the exhaust system.

It looks somewhat like a muffler, but its purpose is to reduce pollutants in the exhaust gas.



CAUTION

- Keep people and combustible materials away from the exhaust pipe while the engine is running. The exhaust gas is very hot.
- Do not drive, idle or park your vehicle over anything that might burn easily such as grass, leaves, paper or rags.

NOTICE

A large amount of unburned gases flowing into the three-way catalytic converter may cause it to overheat and create a fire hazard. To prevent this and other damage, observe the following precautions:

- *Use only unleaded gasoline.*
- *Do not drive with an extremely low fuel level; running out of fuel could cause the engine to misfire, creating an excessive load on the three-way catalytic converter.*
- *Do not allow the engine to run at idle speed for more than 20 minutes.*
- *Avoid racing the engine.*
- *Do not push-start or pull-start your vehicle.*
- *Do not turn off the ignition while the vehicle is moving.*
- *Keep your engine in good running order. Malfunctions in the engine electrical system, electronic ignition system/distributor ignition system or fuel system could cause an extremely high three-way catalytic converter temperature.*
- *If the engine becomes difficult to start or stalls frequently, take your vehicle in for a check-up as soon as possible. Remember, your Lexus dealer knows your vehicle and its three-way catalytic converter system best.*

STARTING AND DRIVING

- *To ensure that the three-way catalytic converter and the entire emission control system operate properly, your vehicle must receive the periodic inspections required by the Lexus Maintenance Schedule. For scheduled maintenance information, refer to the "Owner's Manual Supplement/Maintenance Schedule".*

ENGINE EXHAUST CAUTION



CAUTION

- Avoid inhaling the engine exhaust. It contains carbon monoxide, which is a colorless and odorless gas. It can cause unconsciousness or even death.
- Make sure the exhaust system has no holes or loose connections. The system should be checked from time to time. If you hit something, or notice a change in the sound of the exhaust, have the system checked immediately.
- Do not run the engine in a garage or enclosed area except for the time needed to drive the vehicle in or out. The exhaust gases cannot escape, making this a particularly dangerous situation.
- Do not remain for a long time in a parked vehicle with the engine running. If it is unavoidable, however, do so only in an unconfined area and adjust the heating or cooling system to force outside air into the vehicle.
- Keep the trunk lid closed while driving. An open or unsealed trunk lid may cause exhaust gases to be drawn into the vehicle.

STARTING AND DRIVING

- To allow proper operation of your vehicle's ventilation system, keep the inlet grilles in front of the windshield clear of snow, leaves, or other obstructions.
- If you smell exhaust fumes in the vehicle, drive with the windows open and the trunk lid closed. Have the cause immediately located and corrected.

BEFORE STARTING THE ENGINE

1. Check the area around the vehicle before entering it.
2. Adjust seat position, seatback angle, head restraint height and steering wheel angle.
3. Adjust the inside and outside rear view mirrors.
4. Lock all doors.
5. Fasten seat belts.

Remember to check that the service reminder indicators function when turning the key to "ON", and check the fuel gauge to see that you have sufficient fuel.

IGNITION SWITCH WITH STEERING LOCK



STARTING AND DRIVING

“START” – Starter motor on. The key will return to the “ON” position when released.

For starting tips, see page 283.

“ON” – Engine on and all accessories on.

This is the normal driving position.

If you leave the key in the “ACC” or “LOCK” position and open the driver’s door, a buzzer will remind you to remove the key.

NOTICE

Do not leave the key in the “ON” position if the engine is not running. The battery will discharge and the electronic ignition system could be damaged.

“ACC” – Accessories such as the radio operate, but the engine is off.



PARKING BRAKE

“LOCK” – Engine is off and the steering wheel is locked. The ignition key can be removed only at this position.

You must push in the key to turn it from “ACC” to the “LOCK” position. The selector lever must be put in the “P” position before turning the key to the “LOCK” position.

Once you remove the key, the engine immobiliser system is automatically set. See “Engine immobiliser system” on page 12.

When starting the engine, the key may seem stuck at the “LOCK” position. To free it, first be sure the key is pushed all the way in, and then rock the steering wheel slightly while turning the key gently.

If, in an emergency, you must turn the engine off while the vehicle is moving, turn the key only to “ACC”.



STARTING AND DRIVING

To set: Hold the regular brake pedal down with your right foot. Push down the parking brake pedal with your left foot.

To release: Hold the regular brake pedal down with your right foot and push the parking brake pedal with your left foot. When you lift your left foot, the parking brake pedal will follow it to the released position.

Before leaving your vehicle, firmly apply the parking brake.



CAUTION

Before driving, make sure the parking brake is fully released and that the parking brake reminder light is off.

HOW TO START THE ENGINE

Before cranking

1. Apply the parking brake firmly.
2. Turn off unnecessary lights and accessories.
3. Put the selector lever in "P". If you need to restart the engine while the vehicle is moving, put the selector lever in "N". A starter safety device will prevent the starter from operating if the selector lever is in any drive position.
4. Depress the brake pedal and hold it to the floor until driving off.

Starting the engine

Before starting the engine, be sure to follow the instructions in "Before cranking".

Normal starting procedure

The multiport fuel injection system/sequential multiport fuel injection system in your engine automatically controls the proper air-fuel mixture for starting. You can start a cold or hot engine as follows:

1. With your foot off the accelerator pedal, crank the engine by turning the key to "START". Release it when the engine starts.
2. After the engine runs for about 10 seconds, you are ready to drive.

If the weather is below freezing, let the engine warm up for a few minutes before driving. Do not leave the vehicle while the engine is warming up.

If the engine stalls ...

Simply restart it , using the correct procedure given in normal starting.

If the engine will not start

See "If your vehicle will not start" on page 343.


NOTICE

- ***Do not crank for more than 30 seconds at a time. This may overheat the starter and wiring systems.***
- ***Do not race a cold engine.***
- ***If the engine becomes difficult to start or stalls frequently, have the engine checked immediately.***

STARTING AND DRIVING

AUTOMATIC TRANSMISSION

Your automatic transmission has a shift lock system to minimize the possibility of incorrect operation. This means you can only shift out of “P” position when the brake pedal is depressed (with the ignition switch in “ON” position and the lock release button depressed). (★)

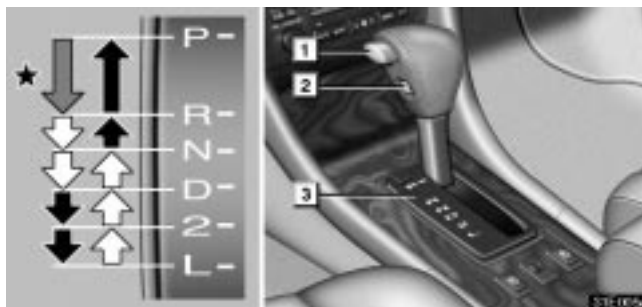

1 Lock release button



With the brake pedal depressed, shift while holding the lock release button in. (The ignition switch must be in the “ON” position.)



Shift while holding the lock release button in.



Shift normally.

2 Overdrive switch

For selecting either a three-speed or four-speed transmission.

When the cruise control is being used, even if you downshift the transmission by turning off the overdrive switch, engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 300.

3 Shift position indicator

The shift position is also displayed on the instrument cluster.

P: Parking, engine starting and key removal position

R: Reverse position

N: Neutral position

D: Normal driving (with overdrive on) position

2: Position for stronger engine braking

L: Position for maximum engine braking

Correct use of the automatic transmission is explained in the following parts.

- (a) Overdrive switch
- (b) Normal driving
- (c) Using engine braking
- (d) Using the “2” and “L” positions
- (e) Backing up
- (f) Parking
- (g) Good driving practice
- (h) Rocking your vehicle if stuck
- (i) If you cannot shift the selector lever out of “P” position

STARTING AND DRIVING

(a) Overdrive switch



You can select either third gear (with overdrive off) or fourth gear (with overdrive on) by pushing this switch.

To turn the overdrive off, push the switch. The “O/D OFF” indicator light should come on. To turn the overdrive on again, push the switch again. The “O/D OFF” indicator light should go off.

Always drive your vehicle with the overdrive on for better fuel economy and quieter driving.

If the engine is turned off when the overdrive is off and restarted, the overdrive will automatically be on.

When the cruise control is being used, even if you downshift the transmission by pushing and releasing the overdrive switch, engine braking will not be enabled because the cruise control is not cancelled.

For ways to decrease the vehicle speed, see page 300.

(b) Normal driving



► **1** “P” (Park) position **2** “N” (Neutral) position

1. Start the engine as instructed in “How to start the engine” on page 283.

 
The transmission must be in “P” or “N”. The engine will not start in “R”, “2”, “L” or “D” position even if the ignition key is turned to “START”.

STARTING AND DRIVING



► **1** Brake pedal **2** “D” (Drive) position

2. With your foot holding down the brake pedal, shift the selector lever to “D”.



Never put your foot on the accelerator pedal while shifting.

3. Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

The vehicle will start in the first gear and automatically shift to the most suitable gear for the running conditions, such as the vehicle speed, hill climbing, hard towing, etc. However, while the engine coolant temperature is low and the vehicle is traveling at low speed, the transmission will not shift into the overdrive gear even with the overdrive on.


When the lever is in the “D” position, the automatic transmission system will select the most suitable gear for the running conditions such as hill climbing, hard towing, etc.

If you need to accelerate rapidly while driving, push the accelerator pedal all the way to the floor. The transmission will automatically downshift to the third, second or first gear, according to the vehicle speed.

If engine braking is needed, such as in descending a long hill, see “(c) Using engine braking”.

STARTING AND DRIVING

(c) Using engine braking

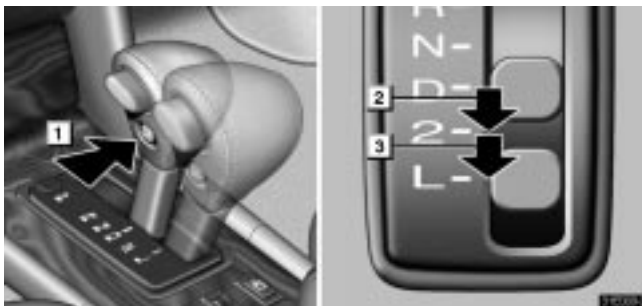

STARTING AND DRIVING

To use the braking power of the engine, downshift the transmission in the way described below:

- 1 Push the overdrive switch. (This is effective only when you are driving in the “D” position.) The “O/D OFF” indicator light in the instrument cluster will come on and the transmission will downshift to third gear.

When the cruise control is being used, even if you downshift the transmission by pushing and releasing the overdrive switch, engine braking will not be enabled because the cruise control is not cancelled. If you need to decrease the vehicle speed, see page 300.

- 2 Shift into the “2” position. The transmission will downshift to second gear when the vehicle speed is lower than 120 km/h (75 mph) and stronger engine braking will be enabled.

- 3 Shift into the “L” position. The transmission will downshift to first gear when the vehicle speed is lower than 55 km/h (34 mph) and maximum engine braking will be enabled.



CAUTION

Be careful when downshifting on a slippery surface. The abrupt change in engine speed could cause the vehicle to spin or skid.

STARTING AND DRIVING

(d) Using the “2” and “L” positions

The “2” and “L” positions are used for strong engine braking as described previously.

With the selector lever in “2” or “L”, you can start the vehicle in motion as with the lever in “D”.

With the selector lever in “2”, the vehicle will start in first gear and automatically shift to second gear.

With the selector lever in “L”, the transmission is engaged in first gear.

NOTICE

- *Be careful not to over-rev the engine. Watch the tachometer to keep engine rpm from going into the red zone. The approximate maximum allowable speed for each position is given above for your reference.*

“2” ... 128 km/h (80 mph)

“L” ... 71 km/h (44 mph)

- *Do not continue hill climbing or hard towing for a long time in the “2” or “L” position. This may cause severe automatic transmission damage from overheating. To prevent such damage, “D” position should be used in hill climbing or hard towing.*

(e) Backing up

► **1** *Brake pedal* **2** *“R” (Reverse) position*

1. Bring the vehicle to a complete stop.
2. With the brake pedal held down with your foot, shift the selector lever to the “R” position.

NOTICE

Never shift into reverse while the vehicle is moving.

STARTING AND DRIVING

(f) Parking



- **1** *Brake pedal* **2** *Parking brake pedal*
3 *"P" (Park) position*

1. Bring the vehicle to a complete stop.
2. Depress the parking brake fully to securely apply the parking brake.
3. With the brake pedal held down with your foot, shift the selector lever to the "P" position.



CAUTION

Never attempt to move the selector lever into "P" under any circumstances while the vehicle is moving. Serious mechanical damage and loss of vehicle control may result.

(g) Good driving practice

- If the transmission repeatedly shifts up and down between the third and overdrive gears when climbing a gentle slope, the overdrive should be turned off. Be sure to turn the switch on immediately after climbing the slope.
- When towing a trailer, in order to maintain efficient engine braking and electrical charging performance, do not use overdrive.



CAUTION

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

NOTICE

Do not hold the vehicle on an upgrade with the accelerator pedal. This can cause the transmission to overheat. Always use the brake pedal or parking brake.

(h) Rocking your vehicle if stuck



CAUTION

If your vehicle becomes stuck in snow, mud, sand, etc., then you may attempt to rock the vehicle free by moving it forward and backward. Do not attempt this procedure if people or objects are anywhere near the vehicle. During the rocking operation the vehicle may suddenly move forward or backward as it becomes un-stuck, causing injury or damage to nearby people or objects.

STARTING AND DRIVING

NOTICE

If you rock your vehicle, observe the following precautions to prevent damage to the transmission and other parts.

- *Do not depress the accelerator pedal while shifting the selector lever or before the transmission is completely shifted to forward or reverse gear.*
- *Do not race the engine and avoid spinning the wheels.*
- *If your vehicle remains stuck after rocking the vehicle several times, consider other ways such as towing.*

(i) If you cannot shift the selector lever out of “P” position

If you cannot shift the selector lever from “P” position even though the brake pedal is depressed, use the shift lock override button. For instructions, see “If you cannot shift automatic transmission selector lever” on page 375.

CRUISE CONTROL

The cruise control allows you to cruise the vehicle at a desired speed over 40 km/h (25 mph) with your foot off the accelerator pedal.

Your cruising speed can be maintained although a slight speed change may occur when driving up or down a gradient, within the limits of engine performance. On steeper hills, a great speed change will occur so it is better to drive without the cruise control.



CAUTION

- To help maintain maximum control of your vehicle, do not use the cruise control when driving in heavy or varying traffic, or on slippery (rainy, icy or snow-covered) or winding roads.
- Avoid vehicle speed increases when driving downhill. If the vehicle speed is too fast in relation to the cruise control set speed, cancel the cruise control then downshift the transmission to use engine braking to slow down.

STARTING AND DRIVING

Turning on the system



To operate the cruise control, push the main switch. This turns the system on. The indicator light in the instrument cluster shows that you can now set your desired cruising speed. Another push on the switch will turn the system completely off.

When the ignition key is turned off, the main switch is also automatically turned off. To use the cruise control again, push the main switch again to turn it on.



CAUTION

To avoid accidental cruise control engagement, keep the main switch off when not using the cruise control.

Setting operation



► Each function is described below.

1. Setting at a desired speed

The transmission must be in “D” before you set the cruise control speed.

Bring the vehicle to the desired speed, press the control lever downward in the “SET/COAST” direction and release it. This sets the vehicle at that speed. Now you may take your foot off the accelerator pedal. If you need acceleration – for example, when passing – depress the accelerator pedal enough for the vehicle to exceed the set speed. When you release the accelerator pedal, the vehicle will return to the speed set prior to the acceleration.

2. Cancelling the preset speed

You can cancel the preset speed by either of the following:

- a. Pulling the control lever in the “CANCEL” direction.
- b. Depressing the brake pedal.

If the vehicle speed falls below about 40 km/h (25 mph), the preset speed will be automatically cancelled.

If the vehicle speed drops 16 km/h (10 mph) below the preset speed, the preset speed will also automatically be cancelled.

If the preset speed automatically cancels out for other than these reasons, have your vehicle checked by your Lexus dealer at the earliest opportunity.

STARTING AND DRIVING

3. Resetting to a faster speed

Press the control lever upward in the “RES/ACC” direction and hold it. Release the lever when the desired speed is attained. While the lever is held upward, the vehicle will gradually gain speed.

When the difference between the actual vehicle speed and the set speed is less than 5 km/h (3 mph), the set speed can be increased 1.6 km/h (1 mph) each time by pressing the control lever upward in the “RES/ACC” direction quickly.

However, a quicker way to reset is to accelerate the vehicle and then press the control lever downward in the “SET/COAST” direction.

4. Resetting to a slower speed

Press the control lever downward in the “SET/COAST” direction and hold it. Release the lever when the desired speed is attained. While the lever is held downward, the vehicle speed will gradually decrease.

When the difference between the actual vehicle speed and the set speed is less than 5 km/h (3 mph), the set speed can be lowered 1.6 km/h (1 mph) each time by pressing the control lever downward in the “SET/COAST” direction quickly.

However, a quicker way to reset is to depress the brake pedal and then press the control lever downward in the “SET/COAST” direction.


Even if you turn off the overdrive switch with the cruise control on, engine braking will not be applied because the cruise control is not cancelled. To decrease the vehicle speed, reset to a slower speed with the cruise control lever or depress the brake pedal. If you use the brake pedal, cruise control is cancelled.

5. Resuming the preset speed

If the preset speed is cancelled by pulling the control lever or by depressing the brake pedal, pushing the lever up in the “RES/ACC” direction will restore the speed set prior to cancellation. However, once the vehicle speed falls below about 40 km/h (25 mph), the preset speed will not be resumed.

Cruise control failure warning

If the "CRUISE" indicator light in the instrument cluster flashes five times and then goes out when using the cruise control, it means that there is trouble in the cruise control system. Contact your Lexus dealer.

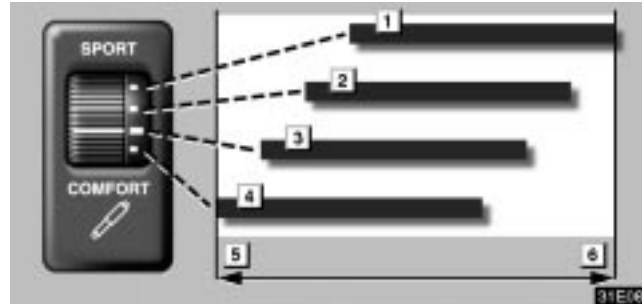

- 1** *For sporty type driving such as on winding mountain roads and high speed driving*
- 2** *For moderate high speed driving*
- 3** *For ordinary driving such as in the city traffic*
- 4** *For driving on a bumpy road*
- 5** *Soft*
- 6** *Hard*

ELECTRONIC MODULATED SUSPENSION

This electronic modulated suspension adjusts the damping effect on the shock absorbers with the control switch. Select one of the 4 modes which is suited to the driving conditions with the control switch to provide good riding comfort and stability.

TRACTION CONTROL SYSTEM

The traction control system automatically helps control the spinning of the front wheels which may occur when accelerating on slippery road surfaces, thus assisting driver to control the driving power of the front wheels.

STARTING AND DRIVING



► *Slip indicator light*

When you turn the ignition switch on, this system always turns on. Leave the system on during ordinary driving so that it can operate when needed. When traction control is applied, the slip indicator light blinks.



You can turn off the traction control system by pushing the “TRAC OFF” switch. The “TRAC OFF” indicator/warning light will then come on. Pushing the “TRAC OFF” switch a second time turns the system back on and extinguishes the “TRAC OFF” indicator/warning light.

You may hear a sound in the engine compartment for a few seconds when the engine is started or just after the vehicle is started. This means that the traction control system is in the self-check mode, and does not indicate malfunction.

When the traction control system is operating, you may feel vibration or noise of your vehicle, caused by operation of the brakes. This indicates the system is functioning properly.

When getting the vehicle out of mud or new snow, etc. the traction control system will help operate to prevent the wheels from spinning.

Traction control failure warning

The “TRAC OFF” indicator/warning light warns that when there is a problem somewhere in the traction control system.

The light will come on when the ignition key is turned to “ON”, and will go off after a few seconds.

If either of the following conditions occurs, this indicates malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come after the ignition is turned to on.
- The light is left on after the ignition is turned to on.
- The light comes on while driving without pushing “TRAC OFF” switch.
- The light flashes.



CAUTION

Under certain slippery road conditions, full traction of the vehicle and power to the front wheels cannot be maintained, even though the traction control system is in operation. Do not drive the vehicle under any speed or maneuvering conditions which will cause the vehicle to lose traction. In situations where the road surface is covered with ice or snow, your vehicle should be fitted with snow tires or tire chains. Always drive at an appropriate and cautious pace.

STARTING AND DRIVING

VEHICLE SKID CONTROL SYSTEM

The vehicle skid control system helps provide comprehensive control of the systems such as an anti-lock brake system, brake assist system, traction control, engine control, etc. This system automatically controls the output of the brakes or engine to help prevent the vehicle from skidding when cornering on a slippery road surface or abrupt steering wheel operation occurs.



► *Slip indicator light*

If the vehicle is going to skid during driving, the slip indicator light flashes and an alarm sounds intermittently.

The vehicle skid control activates when the vehicle speed is about more than 15 km/h (9 mph).

You may hear a sound in the engine compartment for a few seconds when the engine is started or just after the vehicle is started. This means that the vehicle skid control is in the self-check mode and does not indicate a malfunction.



You can turn off the vehicle skid control system by pushing the “VSC OFF” switch. The “VSC OFF” indicator comes on. At this time, the traction control system also turns off. You cannot turn off either one of them. Pushing the “VSC OFF” switch a second time turns the system back on and extinguishes the “VSC OFF” indicator light.

When you turn the ignition switch on, this system always turns on.

Vehicle skid control system failure warning



STARTING AND DRIVING

These lights warn that there is a problem somewhere in the vehicle skid control system, traction control system or brake assist system.

The lights will come on when the ignition key is turned to "ON", and will go off after a few seconds.

If the "VSC" warning light and "VSC OFF" indicator light come on, the vehicle skid control system, traction control system and brake assist system do not work. However, as conventional braking operates when applied, there is no problem to continue your driving.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle:

- The "VSC" warning light and/or "VSC OFF" indicator light do/does not come on after the ignition is turned to on.

- The "VSC" warning light and "VSC OFF" indicator light are left on after the ignition is turned to on.
- The "VSC" warning light and "VSC OFF" indicator light come on while driving without pushing "VSC OFF" switch.



CAUTION

- Do not rely excessively on the vehicle skid control system. Even if the vehicle skid control system is operating, it is not that your vehicle is absolutely safe. Reckless driving will result in an unexpected accident. Always keep safety driving in mind. If the slip indicator light flashes, sounding an alarm, special care should be taken while driving.
- Only use tires of specified size. The size, manufacturer, brand and tread pattern for all 4 tires should be the same. If you use the tires other than specified, or different type or size, the vehicle skid control system may not function correctly. When replacing the tires or wheels, contact your Lexus dealer.

STARTING AND DRIVING

BRAKE SYSTEM

The tandem master cylinder brake system is a hydraulic system with two separate sub-systems. If either sub-system should fail, the other will still work. However, the pedal will be harder to press, and your stopping distance will be longer. Also, the brake system warning light may come on.



CAUTION

Do not drive your vehicle with only a single brake system. Have your brakes fixed immediately.

Brake booster

The brake booster uses engine vacuum to power-assist the brakes. If the engine should quit while you are driving, you can bring the vehicle to a stop with normal pedal pressure. There is enough reserved vacuum for one or two stops but no more!



CAUTION

- Do not pump the brake pedal if the engine stalls. Each push on the pedal uses up your reserved vacuum.
- Even if the power assist is completely lost, the brakes will still work. But you will have to push the pedal hard, much harder than normal. And your braking distance will be longer.

Anti-lock brake system

The anti-lock brake system is designed to help prevent lock-up of the wheels during a sudden braking or braking on slippery road surfaces. This assists in providing directional stability and steering performance of the vehicle under these circumstances.

Effective way to press the ABS brake pedal: When the anti-lock brake system function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake in a panic stop. This will result in reduced braking performance.

STARTING AND DRIVING

The anti-lock brake system becomes operative after the vehicle has accelerated to a speed in excess of approximately 10 km/h (6 mph). It stops operating when the vehicle decelerates to a speed below approximately 5 km/h (3 mph).

Depressing the brake pedal on slippery road surfaces such as on the manhole cover, the steel plate under the construction, joints in the bridge, etc. on a rainy day tends to activate the anti-lock brake system.

You may hear a click or motor sound in the engine compartment for a few seconds when the engine is started or just after the vehicle is started. This means that the anti-lock brake system is in the self-check mode, and does not indicate a malfunction.

When the anti-lock brake system is activated, the following conditions may occur. They do not indicate a malfunction of the system:

- You may hear the anti-lock brake system operating and feel the brake pedal pulsating and the vibrations of the vehicle body and steering wheel. You may also hear the motor sound in the engine compartment even after the vehicle is stopped.
- At the end of the anti-lock brake system activation, the brake pedal may move a little forward.



CAUTION

Do not overestimate the anti-lock brake system: Although the anti-lock brake system assists in providing vehicle control, it is still important to drive with all due care and maintain a moderate speed and safe distance from the vehicle in front of you, because there are limits to the vehicle stability and effectiveness of steering wheel operation even with the anti-lock brake system on.


If tires grip performance exceeds its capability, or if hydroplaning occurs during high speed driving in the rain, the anti-lock brake system does not provide vehicle control.

STARTING AND DRIVING

Anti-lock brake system is not designed to shorten the stopping distance: Always drive at the moderate speed and maintain a safe distance from the vehicle in front of you. Compared with vehicles without an anti-lock brake system, your vehicle may require a longer stopping distance in the following cases:

- Driving on rough, gravel or snow-covered roads.
- Driving with tire chains installed.
- Driving over the steps such as the joints on the road.
- Driving on roads where the road surface is pitted or has other differences in surface height.

Install all 4 tires of specified size at appropriate pressure: The anti-lock brake system detects vehicle speeds using the speed sensors for respective wheels' turning speeds. The use of tires other than specified may fail to detect the accurate turning speed resulting in a longer stopping distance.

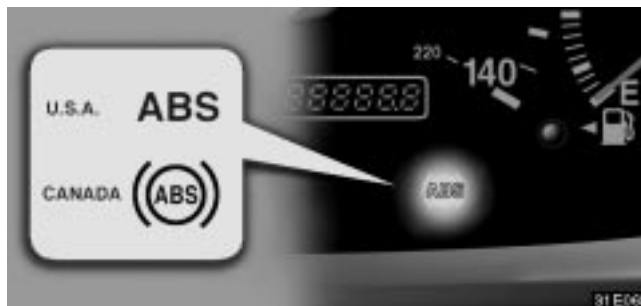“ABS” warning light

The light comes on when the ignition key is turned to the “ON” position. If the anti-lock brake system and the brake assist system work properly, the light turns off after a few seconds. Thereafter, if either of the systems malfunctions, the light comes on again.

When the “ABS” warning light is on (and the brake system warning light is off), the anti-lock brake system, the brake assist system, the traction control system and the vehicle skid control system do not operate, but the brake system still operates conventionally.

When the “ABS” warning light is on (and the brake system warning light is off), the anti-lock brake system does not operate so that the wheels could lock up during a sudden braking or braking on slippery road surfaces.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the “ON” position, or remains on.
- The light comes on while you are driving.

A warning light turning on briefly during operation does not indicate a problem.

STARTING AND DRIVING

Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drums are replaced.

Have your Lexus dealer perform the bedding-down.

Brake assist system (Vehicles with vehicle skid control system)

When you slam the brakes on, the brake assist system judges as an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

When you slam the brakes on, more powerful braking will be applied. At this time, you may hear a sound in the engine compartment and feel the vibrations of the brake pedal. This does not indicate a malfunction.

The brake assist system becomes operative after the vehicle has accelerated to a speed in excess of approximately 10 km/h (6 mph). It stops operating when the vehicle decelerates to a speed below approximately 5 km/h (3 mph).

For an explanation of this system's warning light, see "ABS warning light" on page 65 and "Vehicle skid control system warning lights" on page 65.

BRAKE PAD WEAR LIMIT INDICATORS



The brake pad wear limit indicators on your disc brakes give a warning noise when the brake pads are worn to the extent that replacement is required.

If you hear a squealing or scraping noise while driving, have the brake pads checked and replaced by your Lexus dealer as soon as possible. Expensive rotor damage can result if the pads are not replaced when needed.

TYPES OF TIRES

Determine what kind of tires your vehicle is originally equipped with.

1. Summer tires

Summer tires are high-speed capability tires best suited to highway driving under dry conditions.

Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered or icy roads, we recommend using snow tires. If installing snow tires, be sure to replace all four tires.

STARTING AND DRIVING

2. All season tires

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions, as well as for use all year round.

All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.



CAUTION

- Do not mix summer and all season tires on your vehicle as this can cause dangerous handling characteristics, resulting in loss of control.
- Do not use tires other than the manufacturer's designated tires, and never mix tires or wheels of the sizes different from the originals.

SECTION 3 – 2

STARTING AND DRIVING

Driving tips

Break-in period	319
Operation in foreign countries	319
Tips for driving in various conditionss	319
Winter driving tips	321
Dinghy towing	324
Trailer towing	327
How to save fuel and make your vehicle last longer	338

BREAK-IN PERIOD

Drive gently and avoid high speeds.

You need not follow a break-in schedule with your new Lexus. But following a few simple tips for the first 1600 km (1000 miles) can add to the future economy and long life of your vehicle:

- Do not drive over 88 km/h (55 mph).
- Avoid overrevving. Maintain engine speed between 2000 and 4000 rpm.
- Avoid full-throttle starts.
- Try to avoid hard stops during the first 300 km (200 miles).
- Do not drive for a long time at any single speed, either fast or slow.
- Do not tow a trailer during the first 800 km (500 miles).

OPERATION IN FOREIGN COUNTRIES

If you plan to drive your Lexus in another country ...

First, comply with the vehicle registration laws.

Second, confirm the availability of the correct fuel (unleaded and minimum octane rating).

TIPS FOR DRIVING IN VARIOUS CONDITIONS

- Always slow down in gusty crosswinds. This will allow you much better control.
- Drive slowly onto curbs and, if possible, at a right angle. Avoid driving onto high, sharp-edged objects and other road hazards. Failure to do so can lead to severe tire damage resulting in tire bursts.
- When parking on a hill, turn the front wheels until they touch the curb so that the vehicle will not roll. Apply the parking brake, and place the transmission in "P". If necessary, block the wheels.
- Washing your vehicle or driving through deep water may get the brakes wet. To see whether they are wet, check that there is no traffic near you and then press the pedal lightly. If you do not feel a normal braking force, the brakes are probably wet. To dry them, drive the vehicle cautiously while lightly pressing the brake pedal with the parking brake applied. If they still do not work safely, pull to the side of the road and call a Lexus dealer for assistance.

DRIVING TIPS



CAUTION

- Before driving off, make sure the parking brake is fully released and that the parking brake reminder light is off.
- Do not rest your foot on the brake pedal while driving. It can cause dangerous overheating, needless wear, and poor fuel economy.
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and not work properly. See page 290.
- Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. The abrupt change in engine speed, such as sudden acceleration or engine braking, could cause the vehicle to spin or skid.
- Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 140 km/h (85 mph) unless your vehicle has high-speed capability tires. Driving over 140 km/h (85 mph) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.

- Do not continue normal driving when the brakes are wet. If they are wet, your vehicle will require a longer stopping distance, and it may pull to one side when the brakes are applied. Also, the parking brake will not hold the vehicle securely.

WINTER DRIVING TIPS

Make sure you have a proper freeze protection of engine coolant.

Your coolant must contain ethylene–glycol type coolant for a proper corrosion protection of aluminum components. Use “Toyota Long Life Coolant” or equivalent. See “Checking the engine coolant level” on page 415 for instructions.

NOTICE

Do not use alcohol type antifreeze or plain water alone.

When it is extremely cold, we recommend to use 60% solution for your Lexus, to provide protection down to about -50°C (-58°F). Do not use more than 70% solution for better coolant performance.

Check the condition of the battery and cables.

Cold temperatures reduce the capacity of any battery, so it must be in top shape to provide enough power for winter starting. Page 451 tells you how to visually inspect the battery. Your Lexus dealer and most service stations will be pleased to check the battery charge level.

Make sure the engine oil viscosity is suitable for the cold weather.

DRIVING TIPS

See page 414 for recommended viscosity. Leaving a heavy summer oil in your vehicle during winter months may cause harder starting. If you are not sure about which oil to use, call your Lexus dealer – they will be pleased to help.

Check the electronic ignition system for loose connections or obvious damage.

Keep the door locks from freezing.

Squirt lock de-icer or glycerine into the locks to keep them from freezing.

Use a washer fluid containing an antifreeze solution.

This product is available at your Lexus dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

Do not use your parking brake when there is a possibility it could freeze.

When parking, put the transmission into "P" and block the rear wheels. Do not use the parking brake, or snow or water accumulated in and around the parking brake mechanism may freeze the parking brake, making it

hard to release.

Keep ice and snow from accumulating under the fenders.


Ice and snow built up under your fenders can make steering difficult. During bad winter driving, stop and check under the fenders occasionally.

Depending on where you are driving, we recommend you carry some emergency equipment.

Some of the things you might put in the vehicle are tire chains, window scraper, bag of sand or salt, flares, small shovel, jumper cables, etc.

DRIVING TIPS

DINGHY TOWING

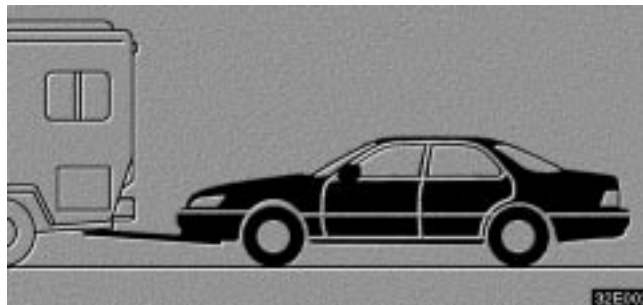

Your vehicle can be dinghy towed (with four wheels on the ground) from the front behind a motorhome.

CAUTION

Dinghy towing requires special equipment and accessories. Please refer to your service outlet of the motorhome manufacture for the recommended equipment.

NOTICE

Dinghy towing does not eliminate the possibility of damage to your vehicle.

Dinghy towing tips

Before dinghy towing, be sure to observe the following in order to reduce the damage to your vehicle.

1. Turn the ignition switch to the "ON" position.

2. Shift the selector lever into the “N” position.
3. Turn the ignition switch to the “ACC” position. Make sure the audio is turned off and any item is not plugged into the power outlet.

NOTICE

To avoid the locking of the steering wheel, turn the ignition switch to the “ACC” position.

4. Release the parking brake.


NOTICE

To prevent the vehicle from being damaged, observe following.

- *Do not tow the vehicle at the vehicle speed more than 88 km/h (55 mph).*
- *Do not tow the vehicle for more than 320 km (200 miles).*

After dinghy towing or at the recommended distance limit, let the engine idle for more than 3 minutes before driving the vehicle or resuming towing.

DRIVING TIPS

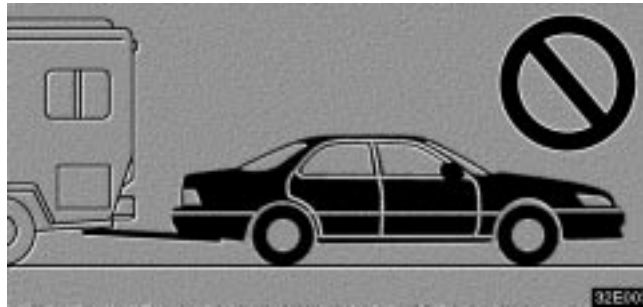

NOTICE

Do not tow your vehicle from the rear. This may cause serious damage to your vehicle.

TRAILER TOWING

Your vehicle is designed primarily as a passenger-carrying vehicle. Towing a trailer will have an adverse effect on handling, performance, braking, durability and driving economy (fuel consumption etc.). Your safety and satisfaction depend on the proper use of correct equipment and cautious driving habits. For your safety and the safety of others, you must not overload your vehicle or trailer. Lexus warranties do not apply to damage or malfunction caused by towing a trailer for commercial purposes. Ask your local Lexus dealer for further details before towing.

NOTICE


When towing a trailer, be sure to consult your Lexus dealer for further information on additional requirements such as a towing kit etc.

Weight limits

Before towing, make sure the total trailer weight, gross vehicle weight, gross axle weight and trailer tongue load are all within the limits.

The total trailer weight and tongue load can be measured with platform scales found at a highway weighing station, building supply company, trucking company, junk yard, etc.

DRIVING TIPS

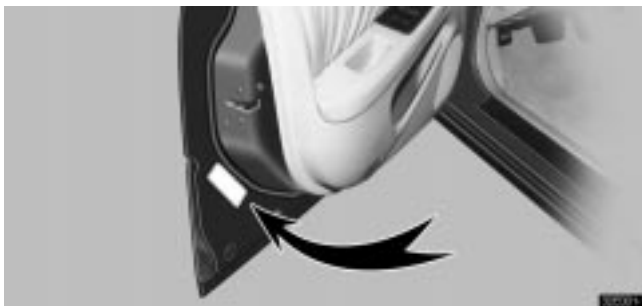


► *Certification label*

CAUTION

- The total trailer weight (trailer weight plus its cargo load) must not exceed 907 kg (2000 lb.). Exceeding this weight is dangerous.

- Trailer hitch assemblies have different weight capacities established by the hitch manufacturer. Even though the vehicle may be physically capable of towing a higher weight, the operator must determine the maximum weight rating of the particular hitch assembly and never exceed the maximum weight rating specified for the trailer hitch. Exceeding the maximum weight rating set by the trailer hitch manufacturer can cause an accident resulting in serious personal injuries.
- The gross vehicle weight must not exceed the Gross Vehicle Weight Rating (GVWR) indicated on the Certification Label. The gross vehicle weight is the sum weight of the unloaded vehicle, driver, passengers, luggage, hitch and trailer tongue load. It also includes the weight of any special equipment installed on your vehicle.
- The load on either the front or rear axle resulting from distribution of the gross vehicle weight on both axles must not exceed the Gross Axle Weight Rating (GAWR) listed on the Certification Label.

DRIVING TIPS

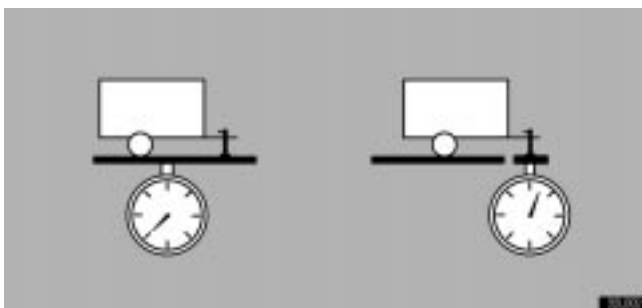

► *Total trailer weight*

► *Tongue load*

- The trailer cargo load should be distributed so that the tongue load is 9 to 11 % of the total trailer weight, not exceeding the maximum of 90 kg (200 lb.).
- Never load the trailer with more weight in the back than in the front. About 60 % of the trailer load should be in the front half of the trailer and the remaining 40 % in the rear.

Hitches

- If you wish to install a trailer hitch, your Lexus dealer should be consulted.
- Use only a hitch which is recommended by Lexus dealer and conforms to the total trailer weight requirement.
- Follow the directions supplied by the hitch manufacturer. Lubricate the hitch ball with a light coat of grease.
- Lexus recommends removing the trailer hitch whenever you are not towing a trailer to reduce the possibility of additional damage caused by the hitch if your vehicle is struck from behind. After removing the hitch, seal any mounting holes in the vehicle body to prevent entry of pollutants such as exhaust fumes, dirt, water, etc.

NOTICE

- ***Install the trailer hitch using only the position recommended by your Lexus dealer. Do not install the trailer hitch on the bumper; this may cause body damage.***
- ***Do not use axle-mounted hitches as they can cause damage to the axle housing, wheel bearings, wheels or tires.***

DRIVING TIPS

Brakes and safety chains

- Lexus recommends trailers with brakes that conform to any applicable federal and state/provincial regulations.
- A safety chain must always be used between the towing vehicle and the trailer. Leave sufficient slack in the chain for turns. The chain should cross under the trailer tongue to prevent the tongue from dropping to the ground in case it becomes damaged or separated. For correct safety chain procedures, follow the hitch or trailer manufacturer's recommendations.



CAUTION

- If the total trailer weight exceeds 450 kg (1000 lb.), trailer brakes are required.
- Never tap into your vehicle's hydraulic system as it will lower its braking effectiveness.
- Never tow a trailer without using a safety chain securely attached to both the trailer and the vehicle. If damage occurs to the coupling unit or hitch ball, there is possible danger of the trailer wandering over into another lane.

Tires

- Ensure that your vehicle's tires are properly inflated. Adjust the tire pressure to the recommended cold tire pressure indicated below:

Tire pressure, kPa (kgf/cm ² or bar, psi)	
Front	220 (2.2, 32)
Rear	220 (2.2, 32)

- The trailer tires should be inflated to the pressure recommended by the trailer manufacturer in respect to the total trailer weight.

Trailer lights

- Trailer lights must comply with federal, state/provincial and local regulations. See your local recreational vehicle dealer or rental agency for the correct type of wiring and relays for your trailer. Check for correct operation of the turn signals and stop lights each time you hitch up. Direct splicing may damage your vehicle's electrical system and cause a malfunction of your lights.

Break-in schedule

- Lexus recommends that you do not tow a trailer with a new vehicle or a vehicle with any new power train component (engine, transmission, differential, wheel bearing, etc.) for the first 800 km (500 miles) of driving.

Maintenance

- If you tow a trailer, your vehicle will require more frequent maintenance due to the additional load. For this information, please refer to the scheduled maintenance information in the "Owner's Manual Supplement/ Maintenance Schedule".
- Retighten all fixing bolts of the towing ball and bracket after approximately 1000 km (600 miles) of trailer driving.

Pre-towing safety check

- Check that your vehicle remains level when a loaded or unloaded trailer is hitched. Do not drive if the vehicle has an abnormal nose-up or nose-down condition, and check for improper tongue load, overload, worn suspension or other possible causes.
- Make sure the trailer cargo is securely loaded so that it cannot shift.
- Check that your rear view mirrors conform to any federal, state/provincial or local regulations. If they do not, install required rear view mirrors appropriate for towing purposes.

DRIVING TIPS

Trailer towing tips

When towing a trailer, your vehicle will handle differently than when not towing. The three main causes of vehicle–trailer accidents are driver error, excessive speed and improper trailer loading. Keep these in mind when towing:

- Before starting out, check the operation of the lights and all vehicle–trailer connections. After driving a short distance, stop and recheck the lights and connections. Practice turning, stopping and backing with a trailer in an area away from traffic until you learn the feel.
- Backing with a trailer is difficult and requires practice. Grip the bottom of the steering wheel and move your hand to the left to move the trailer to the left. Move your hand to the right to move the trailer to the right. (This procedure is generally opposite to that when backing without a trailer.) Also, just turn the steering wheel a little at a time, avoiding sharp or prolonged turning. Have someone guide you when backing to reduce the risk of an accident.
- Because stopping distance may be increased, vehicle–to–vehicle distance should be increased when towing a trailer. For each 16 km/h (10 mph) of speed, allow at least one vehicle and trailer length between you and the vehicle ahead. Avoid sudden braking as you may skid, resulting in jackknifing and loss of control. This is especially true on wet or slippery surfaces.
- Avoid jerky starts or sudden acceleration.
- Avoid jerky steering and sharp turns. The trailer could hit your vehicle in a tight turn. Slow down before making a turn to avoid the need of sudden braking.
- Remember that when making a turn, the trailer

wheels will be closer than the vehicle wheels to the inside of the turn. Therefore, compensate for this by making a larger than normal turning radius with your vehicle.

- Crosswinds and rough roads will adversely affect handling of your vehicle and trailer, causing sway. Pay attention to the rear from time to time to prepare yourself for being passed by large trucks or buses, which may cause your vehicle and trailer to sway. If swaying happens, firmly grip the steering wheel and reduce speed immediately but gradually. Never increase speed. If it is necessary to reduce speed, brake slowly. Steer straight ahead. If you make no extreme correction with the steering or brakes, your vehicle and trailer will stabilize.
- Be careful when passing other vehicles. Passing requires considerable distance. After passing a vehicle, do not forget the length of your trailer and be sure you have plenty of room before changing lanes.
- In order to maintain efficient engine braking and electrical charging performance, do not use overdrive.
- Because of the added load of the trailer, your vehicle's engine may overheat on hot days (at temperatures over 30°C [85°F]) when going up a long or steep grade with a trailer. If the engine coolant temperature gauge indicates overheating, immediately turn off the air conditioning (if in use), pull your vehicle off the road and stop in a safe spot. See "If your vehicle overheats" on page 348.
- Always place wheel blocks under both the vehicle and trailer wheels when parking. Apply the parking brake firmly. Put the transmission in "P". Avoid

DRIVING TIPS

parking on a slope with a trailer, but if it cannot be avoided, do so only after performing the following:

1. Apply the brakes and keep them applied.
2. Have someone place wheel blocks under both the vehicle and trailer wheels.
3. When the wheel blocks are in place, release your brakes slowly until the blocks absorb the load.
4. Apply the parking brake firmly.
5. Shift into "P" and turn off the engine.

When restarting out after parking on a slope:

1. With the transmission in "P" position, start the engine. Be sure to keep the brake pedal depressed.
2. Shift into the "2", "L" or "R" position.
3. Release the parking brake and brake pedal and slowly pull or back away from the wheel blocks. Stop and apply your brakes.
4. Have someone retrieve the blocks.



CAUTION

- Do not exceed 72 km/h (45 mph) or the posted towing speed limit, whichever is lower. Because instability (swaying) of a towing vehicle-trailer combination usually increases as the speed increases, exceeding 72 km/h (45 mph) may cause loss of control.
- Slow down and downshift before descending steep or long downhill grades. Do not make sudden downshifts.
- Avoid holding the brake pedal down too long or too frequently. This could cause the brakes to overheat and result in reduced braking efficiency.

DRIVING TIPS

HOW TO SAVE FUEL AND MAKE YOUR VEHICLE LAST LONGER

Getting more kilometer/mileage from a liter/gallon of fuel is easy – just take it easy. It will help make your vehicle last longer, too. Here are some specific tips on how to save money on both fuel and repairs:

- **Keep your tires inflated at the correct pressure.** Check the pressure every two weeks, or at least once a month. Underinflation causes tire wear and wastes fuel.
- **Do not carry unneeded weight in your vehicle.** Excess weight puts a heavier load on the engine, causing greater fuel consumption.
- **Avoid lengthy warm-up idling.** Once the engine is running smoothly, begin driving – but gently. Remember, however, that on cold winter days this may take a little longer.
- **Keep the automatic transmission overdrive turned on when engine braking is not required.** Driving with the overdrive off will reduce the fuel economy. (For details, see “Automatic transmission” on page 284.)
- **Accelerate slowly and smoothly.** Avoid jackrabbit starts.
- **Avoid long engine idling.** If you have a long wait

and you are not in traffic, it is better to turn off the engine and start again later.

- **Avoid engine over-revving.** Use a gear position suitable for the road on which you are traveling.

- **Avoid continuous speeding up and slowing down.** Stop-and-go driving wastes fuel.
- **Avoid unnecessary stopping and braking.** Maintain a steady pace. Try to time the traffic signals so you only need to stop as little as possible or take advantage of through streets to avoid traffic lights. Keep a proper distance from other vehicles to avoid sudden braking. This will also reduce wear on your brakes.
- **Avoid heavy traffic or traffic jams whenever possible.**
- **Do not rest your foot on the brake pedal.** This causes premature wear, overheating and poor fuel economy.
- **Maintain a moderate speed on highways.** The faster you drive, the greater the fuel consumption. By reducing your speed, you will cut down on fuel consumption.
- **Keep the front wheels in proper alignment.** Avoid hitting the curb and slow down on rough roads. Improper alignment not only causes faster tire wear but also puts an extra load on the engine, which, in turn, wastes fuel.
- **Keep the bottom of your vehicle free from mud etc.** This not only lessens weight but also helps prevent corrosion.
- **Keep your vehicle tuned-up and in top shape.** A dirty air cleaner, improper valve clearance, dirty plugs, dirty oil and grease, brakes not adjusted, etc. all lower engine performance and contribute to poor fuel economy. For longer life of all parts and lower operating costs, keep all maintenance work on schedule, and if you often drive under severe conditions, see that your vehicle receives more frequent maintenance. (For scheduled maintenance information, please refer to the "Owner's Manual Supplement/Maintenance Schedule".)

DRIVING TIPS



CAUTION

Never turn off the engine to coast down hills. Your power steering and brake booster will not function without the engine running. Also, the emission control system operates properly only when the engine is running.

SECTION 4

IN CASE OF AN EMERGENCY

If your engine stalls while driving	342
If your vehicle will not start	343
If your vehicle overheats	348
If you have a flat tire	350
If your vehicle needs to be towed	366
If you cannot shift automatic transmission selector lever 375	
If you lose your keys or lock yourself out	377

IN CASE OF AN EMERGENCY

IF YOUR ENGINE STALLS WHILE DRIVING

If your engine stalls while driving...

1. Reduce your speed gradually, keeping a straight line.
Move cautiously off the road to a safe place.
2. Turn on your emergency flashers.
3. Try starting the engine again.

If the engine will not start, see “If your vehicle will not start”.



CAUTION

If the engine is not running, the power assist for the brakes and steering will not work, so steering and braking will be much harder than usual.

IF YOUR VEHICLE WILL NOT START

(a) Simple checks

Before making these checks, make sure you have followed the correct starting procedure instructions in "How to start the engine" on page 283 and that you have sufficient fuel. Since your vehicle is equipped with the engine immobiliser system, also check whether the other keys will start the engine. If they work, your key may be broken. Have the key checked at your Lexus dealer. If none of your keys work, the system is possibly broken. Call your Lexus dealer. See "Keys" on page 7.

If the engine is not turning over or is turning over too slowly –

1. Check that the battery terminals are tight and clean.
2. If the battery terminals are O.K., switch on the interior light.
3. If the light is out, dim or goes out when the starter is cranked, the battery is discharged. You may try jump starting. See "(c) Jump starting" for further instruction.

If the light is O.K., but the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

NOTICE

Do not pull- or push-start the vehicle. It may damage the vehicle or cause a collision when the engine starts. Also the three-way catalytic converter / warm up three-way catalytic converter may overheat and become a fire hazard.

If the engine turns over at its normal speed but will not start –

1. The engine may be flooded because of repeated cranking. See "(b) Starting a flooded engine" for further instructions.
2. If the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

IN CASE OF AN EMERGENCY

(b) Starting a flooded engine

If the engine will not start, your engine may be flooded because of repeated cranking.

If this happens, turn the key to "START" with the accelerator pedal held down. Continue this operation for 30 seconds and then stop cranking. Then try starting the engine with your foot off the accelerator pedal.

If the engine does not start after 30 seconds of cranking, release the key, wait a few minutes and try again.

If the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

(c) Jump starting

To avoid serious personal injury and damage to your vehicle which might result from battery explosion, acid burns, electrical burns, or damaged electronic components, these instructions must be followed precisely.

If you are unsure about how to follow this procedure, we strongly recommend that you seek help from your Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

NOTICE

***Do not crank for more than 30 seconds at a time.
This may overheat the starter and wiring systems.***




CAUTION

- Batteries contain sulfuric acid which is poisonous and corrosive. Wear protective safety glasses when jump starting, and avoid spilling acid on your skin, clothing, or vehicle.
- If you should accidentally get acid on yourself or in your eyes, remove any contaminated clothing and flush the affected area with water immediately. Then get immediate medical attention. If possible, continue to apply water with a sponge or cloth while en route to the medical office.
- The gas normally produced by a battery will explode if a flame or spark is brought near. Use only standardized jumper cables and do not smoke or light a match while jump starting.

IN CASE OF AN EMERGENCY

NOTICE

The battery used for boosting must be 12 V. Do not jump start unless you are sure that the booster battery is correct.

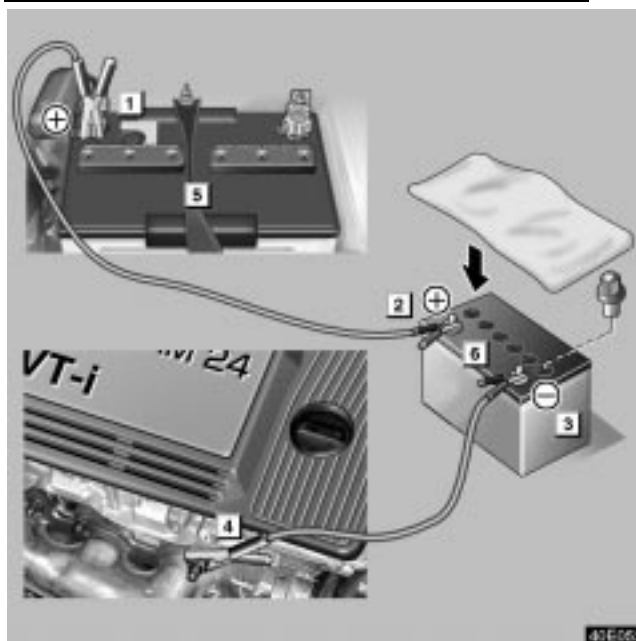

► **5** *Discharged battery* **6** *Booster battery*

JUMP STARTING PROCEDURE

1. If the booster battery is installed in another vehicle, make sure the vehicles are not touching. Turn off all unnecessary lights and accessories.

2. If required, remove all the vent plugs from the booster battery. Lay a cloth over the open vents on the booster battery. (This helps reduce the explosion hazard, personal injuries and burns.)

If the booster battery is an extended maintenance interval battery, it is not necessary to remove the vent plugs.

3. If the engine in the vehicle with the booster battery is not running, start it and let it run for about 5 minutes. During jump starting, run the engine at about 2000 rpm with the accelerator pedal lightly depressed.

4. Locate positive (+) and negative (–) terminals of each battery. Connect the jumper cables in the exact order (**1** **2** **3** **4**) shown in the illustration.

1 Connect a positive (red) jumper cable clamp to the positive (+) terminal of the discharged battery.

2 Connect the clamp at the other end of the positive (red) cable to the positive (+) terminal of the booster battery.

3 Connect a negative (black) cable clamp to the negative (–) terminal of the booster battery.

4 Connect the clamp at the other end of the negative

IN CASE OF AN EMERGENCY

(black) cable to a solid, stationary, unpainted metallic point (e.g. cylinder head) away from the battery. Do not connect it to or near any part that moves when the engine is cranked.



CAUTION

When making the connections, to avoid serious injury, do not lean over the battery or accidentally let the jumper cables or clamps touch anything except the correct battery terminals or the ground.

5. Start your engine in the normal way. After starting, run it at about 2000 rpm for several minutes with the accelerator pedal lightly depressed.
6. Carefully disconnect the cables in the exact reverse order: the negative cable and then the positive cable.
7. Carefully dispose of the battery cover cloths which may now contain sulfuric acid.
8. If removed, replace all the battery vent plugs.

If the cause of your battery discharging is not apparent (for example, lights left on), you should have it checked.

IF YOUR VEHICLE OVERHEATS

If your engine coolant temperature gauge indicates overheating, if you experience a loss of power, or if you hear a loud knocking or pinging noise, the engine has probably overheated.

When the engine overheats

Pull safely off the road, stop the vehicle and turn on your emergency flashers. Put the transmission in "P" and apply the parking brake.

A: If steam is coming from your engine:

Turn off the engine. Leave the hood closed until there is no sign of steam or coolant. Your engine could have been seriously damaged already. Call your Lexus dealer for assistance.



CAUTION

To help avoid personal injury, keep the hood closed until there is no steam. Escaping steam or coolant is sign of very high pressure.

B: If no steam is coming from your engine:

Leave the engine running and turn off the air conditioning. Check the following.

- Is the cooling fan operating?
- Is the coolant in the acceptable range?
- Is the engine drive belt O.K.?

IN CASE OF AN EMERGENCY



CAUTION

- When the engine is running, keep hands and clothing away from the moving fan and engine drive belt.
- Do not attempt to remove the radiator cap when the engine and radiator are hot. Serious injury could result from scalding hot fluid and steam blown out under pressure.

If the cooling fan is not operating or the coolant is not in the acceptable range, turn off the engine and call your Lexus dealer.

If both conditions are O.K., after the engine coolant temperature has cooled to normal, continue driving your vehicle.

If the engine coolant temperature does not cool down, or your vehicle overheats again, have it checked as soon as possible by your Lexus dealer.

IF YOU HAVE A FLAT TIRE

1. Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place – well away from the traffic. Avoid stopping on the center divider of a highway. Park on a level spot with firm ground.
2. Stop the engine and turn on your emergency flashers.
3. Firmly set the parking brake and put the transmission in “P”.
4. Have everyone get out of the vehicle on the side away from traffic.
5. Read the following instructions thoroughly.



CAUTION

When jacking, be sure to observe the following to reduce the possibility of personal injury:


- Follow jacking instructions.
- Do not put any part of your body under a vehicle supported by a jack. Personal injury may occur.
- Do not start or run the engine while your vehicle is supported by the jack.
- Stop the vehicle on a level firm ground, firmly set the parking brake and put the transmission in "P". Block the wheel diagonally opposite to the one being changed if necessary.

IN CASE OF AN EMERGENCY

- Make sure to set the jack properly in the jack point. Raising the vehicle with jack improperly positioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone.
- Use the jack only for lifting your vehicle during wheel changing.
- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not put an object on or under the jack.
- Raise the vehicle only high enough to remove and change the tire.

NOTICE

Do not continue driving with a deflated tire. Driving even a short distance can damage a tire and wheel beyond repair.

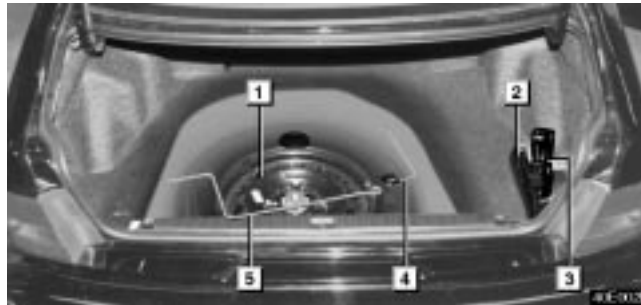

► **1 Spare tire** **2 Jack** **3 Tool bag** **4 Wrench**

5 Jack handle

1. Get the jack, wrench and spare tire.

To prepare yourself for an emergency, you should familiarize yourself with the use of the jack and each tool, and their storage locations. The jack handle and wrench are attached at the reverse side of the cover.

2. Remove the cover.

IN CASE OF AN EMERGENCY



► **1 Joint**

- 2** When removing the jack, turn the joint by hand in the "contract" direction until the jack is free.
- 3** When storing, turn the joint by hand in the "expand" direction until the jack is firmly secured to prevent it from flying forward during a collision or sudden braking.

IN CASE OF AN EMERGENCY



To remove the spare tire:

- 1** Loosen the nut and remove it.
- 2** Remove the spare tire cover.
- 3** Loosen the bolt and remove it.

When storing the spare tire, place it with the outer side of the wheel facing up. Then bolt the tire in place and install the spare tire cover to prevent the tire from flying forward during a collision or sudden braking.

IN CASE OF AN EMERGENCY



3. Block the wheel diagonally opposite the flat tire to keep the vehicle from rolling when it is jacked up.

When blocking the wheel, place a wheel block in front of the front wheels or behind the rear wheels.




4. Loosen all the wheel nuts.

Always loosen the wheel nuts before raising the vehicle.

Turn the wheel nuts counterclockwise to loosen them. To get maximum leverage, fit the wrench to the nut so that the handle is on the right side, as shown above. Grab the wrench near the end of the handle and pull up on the handle. Be careful that the wrench does not slip off the nut.


Do not remove the nuts yet – just unscrew them about one-half turn.

IN CASE OF AN EMERGENCY

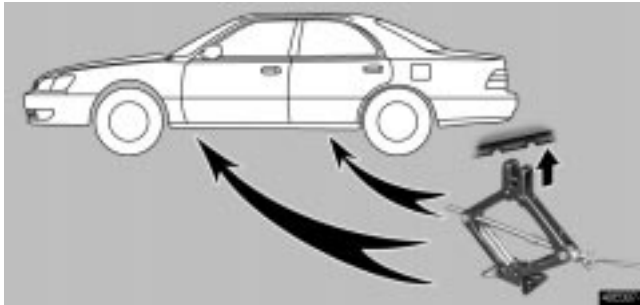

5. Position the jack at the jack points as shown.

Make sure the jack is positioned on a level and solid surface.

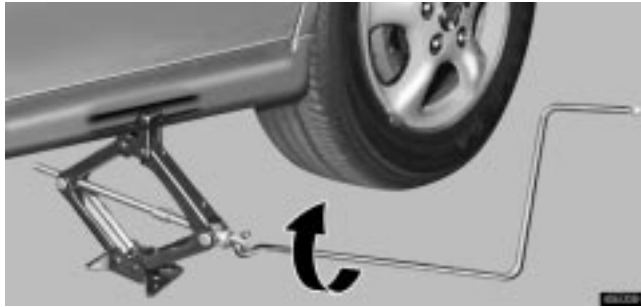

6. After making sure no one is in the vehicle, raise it high enough so that the spare tire can be installed.

Allow for the fact that you need more ground clearance when putting on the spare tire than when removing the flat tire.

To raise the vehicle, insert the jack handle into the jack (it is a loose fit) and turn it clockwise. As the jack touches the vehicle and begins to lift, double-check that it is properly positioned.

IN CASE OF AN EMERGENCY

CAUTION

Never get under the vehicle when the vehicle is supported by the jack alone.



7. Remove the wheel nuts and remove the flat tire.

Lift the flat tire straight off and put it aside.

IN CASE OF AN EMERGENCY



Before putting on the wheel, remove any corrosion on the mounting surfaces with a wire brush or such. Installation of wheels without good metal-to-metal contact at the mounting surface can cause wheel nuts to loosen and eventually cause a wheel to come off while driving.




IN CASE OF AN EMERGENCY

8. Reinstall all the wheel nuts finger tight.

Align the holes in the wheel with the bolts. Then lift up the wheel and get at least the top bolt started through its hole. Wiggle the tire and press it back over the other bolts.

Reinstall the wheel nuts and tighten them as much as you can by hand. Press the tire back and see if you can tighten them more.

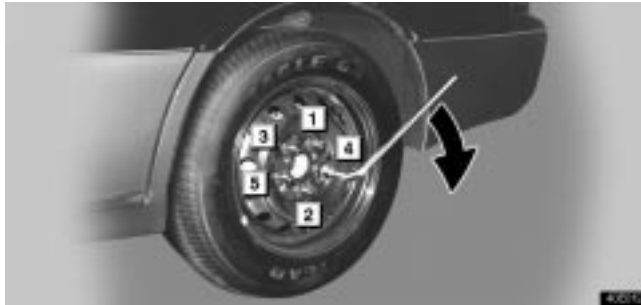

9. Lower the vehicle completely and tighten the wheel nuts.

Turn the jack handle counterclockwise to lower the vehicle.

Use only the wheel nut wrench to tighten the nuts. Do not use other tools or any additional leverage other than your hands, such as a hammer, pipe or your foot. Make sure the wrench is securely engaged over the nut.

Tighten each nut a little at a time in the order shown. Repeat the process until all the nuts are tight.

IN CASE OF AN EMERGENCY



CAUTION

- When lowering the vehicle, make sure all portions of your body and all other persons around will not be injured as the vehicle is lowered to the ground.
- As soon as possible after changing wheels, have the wheel nuts tightened by torque wrench at 103 N·m (10.5 kgf·m, 76 ft·lbf.).

10. After changing the wheel, check the air pressure of the replaced tire. Stow all the tools, jack and flat tire securely.

If the pressure of the replaced tire is low, drive slowly to the nearest service station and fill to the correct pressure.

Do not forget to reinstall the tire valve cap as dirt and moisture could get into the valve core and possible cause air leakage. If the cap is missing, put a new one on as soon as possible.

This is the same procedure for changing or rotating your tires.



CAUTION

Before driving, make sure all the tools, jack and flat tire are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

IN CASE OF AN EMERGENCY

IF YOUR VEHICLE NEEDS TO BE TOWED

If towing is necessary, we recommend you to have it done by your Lexus dealer or a commercial tow truck service. In consultation with them, have your vehicle towed using either (a) or (b).

- (a) Towing with a wheel lift type truck
- (b) Using a flat bed truck
- (c) Never tow with a sling type truck

Only when you cannot receive a towing service from a Lexus dealer or commercial tow truck service, tow your vehicle carefully in accordance with the instructions given in “(d) Emergency towing” on page 372.

Proper equipment will help ensure that your vehicle is not damaged while being towed. Commercial operators are generally aware of the state/provincial and local laws pertaining to towing.


Your vehicle can be damaged if it is towed incorrectly. Although most operators know the correct procedure, it is possible to make a mistake. To avoid damage to your vehicle, make sure the following precautions are observed. If necessary, show this page to the tow truck driver.

TOWING PRECAUTIONS:

Use a safety chain system for all towing, and abide by the state/provincial and local laws. The wheels and axle on the ground must be in good condition. If they are damaged, use a towing dolly.

(a) Towing with a wheel lift type truck

- From front

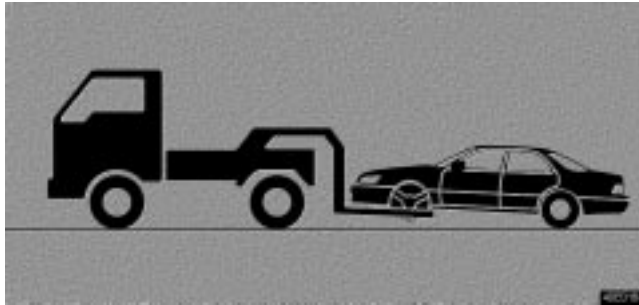


Release the parking brake.

- From rear

NOTICE

When lifting wheels, take care to ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Otherwise, the bumper and/or underbody of the towed vehicle will be damaged during towing.

IN CASE OF AN EMERGENCY

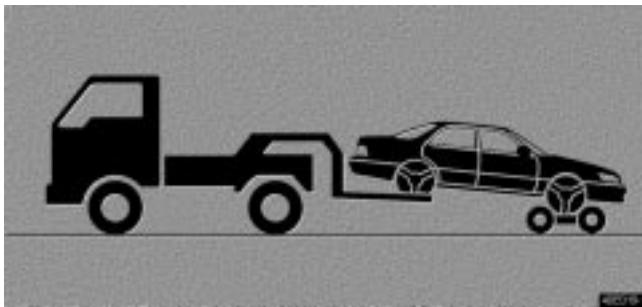


Use a towing dolly under the front wheels.

(b) Using a flat bed truck

NOTICE


Never tow a vehicle with an automatic transmission from the rear with front wheels on the ground, as this may cause serious damage to the transmission.

IN CASE OF AN EMERGENCY

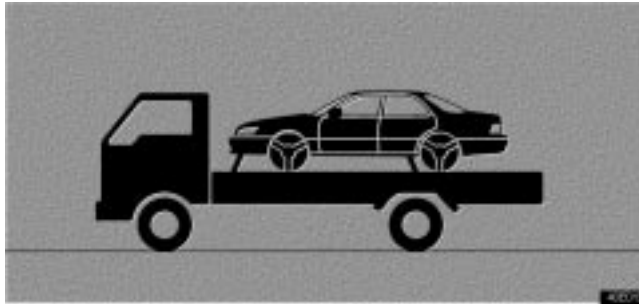


- Tie down points

IN CASE OF AN EMERGENCY

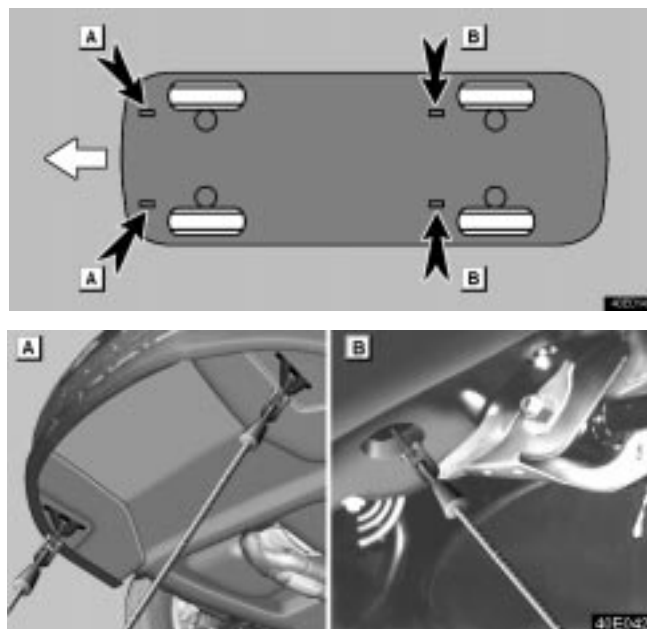

If your Lexus is transported by a flat bed, it should be tied down at locations A and B as shown above.

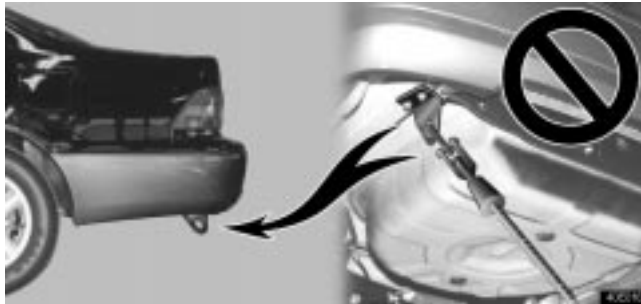


► *Rear emergency towing eyelets*

NOTICE


Do not use the rear emergency towing eyelets.

- Tie down angle

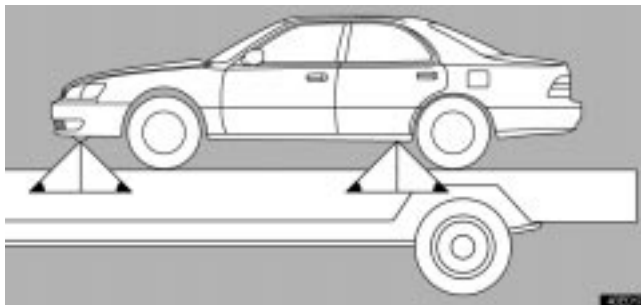

IN CASE OF AN EMERGENCY

If you use chains or wires to tie down your vehicle, the angles shaded black must be at 45°.

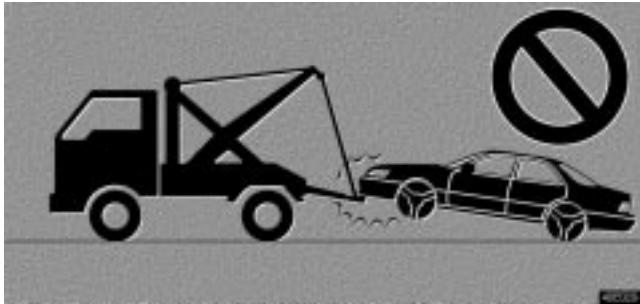

(c) Towing with a sling type truck

NOTICE

Do not tow with a sling type truck, either from the front or rear. This may cause body damage.

(d) Emergency towing



IN CASE OF AN EMERGENCY

If towing is necessary, we recommend you to have it done by your Lexus dealer or a commercial tow truck service.

If towing service is not available in an emergency, your vehicle may be temporarily towed by a cable or chain secured to the emergency towing eyelet. Use extreme caution when towing the vehicle.

NOTICE

Only use specified towing eyelet; otherwise your vehicle may be damaged.

A driver must be in the vehicle to steer it and operate the brakes.

Towing in this manner may be done only on hard-surfaced roads for a short distance and at low speeds. Also, the wheels, axles, drive train, steering and brakes must all be in good condition.

IN CASE OF AN EMERGENCY



CAUTION

Use extreme caution when towing the vehicle. Avoid sudden starts or erratic driving maneuvers which would place excessive stress on the emergency towing eyelet and towing cable or chain. The eyelet and towing cable or chain may break and cause serious injury or damage.

NOTICE

Use only a cable or chain specifically intended for use in towing vehicles. Securely fasten the cable or chain to the towing eyelet provided.


Before towing, release the parking brake and put the transmission in "N". The ignition key must be in "ACC" (engine off) or "ON" (engine running).



CAUTION

If the engine is not running, the power assist for the brakes and steering will not work so steering and braking will be much harder than usual.

IF YOU CANNOT SHIFT AUTOMATIC TRANSMISSION SELECTOR LEVER

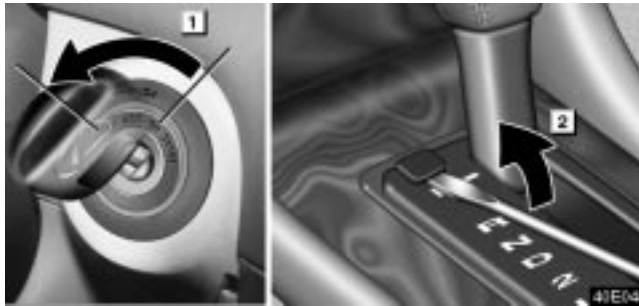

If you cannot shift the selector lever out of “P” position to other positions even though the brake pedal is depressed, use the shift lock override button as follows:

- 1 Turn the ignition key to “LOCK”. Make sure the parking brake is applied.
- 2 Pry up the cover with a flat-bladed screwdriver or equivalent.

IN CASE OF AN EMERGENCY



- 3** Push down the shift lock override button. You can shift out of "P" position only while pushing the button.
- 4** Shift into "N" position.

Insert the cover. Start the engine. For your safety, keep the brake pedal depressed.

Be sure to have the system checked by your Lexus dealer as soon as possible.

IF YOU LOSE YOUR KEYS OR LOCK YOURSELF OUT

You can purchase a new key at your Lexus dealer if you can give them the key number and master key, because your vehicle is equipped with the engine immobiliser system.

Even if you lose only one key, contact your Lexus dealer to make a new key. However, if you lose all your master keys, the dealer cannot duplicate key but only replace the whole system.

See the suggestion given in "Keys" on page 7.

You can use the wireless remote control system with the new key. Contact your Lexus dealer for detailed information.

If your keys are locked in the vehicle and you cannot get a duplicate, many Lexus dealers can still open the door for you, using their special tools. If you must break a window to get in, we suggest breaking the smallest side window because it is the least expensive to replace. Be extremely cautious to avoid cuts from the glass.

SECTION 5

MAINTENANCE

Maintenance requirements	380
General maintenance	382
Does your vehicle need repairing?	385

*For scheduled maintenance information,
please refer to the “Owner’s Manual
Supplement/Maintenance Schedule”.*

MAINTENANCE

MAINTENANCE REQUIREMENTS

Your Lexus vehicle has been designed to have fewer maintenance requirements with longer service intervals to save both your time and money. However, each regular maintenance as well as day-to-day care is more important than ever before to ensure smooth, trouble-free, safe, and economical driving.

It is the owner's responsibility to make sure the specified maintenance, including general maintenance services, is performed. Note that both the new vehicle and emission control system warranties specify that proper maintenance and care must be performed. See the "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet" for complete warranty information.

General maintenance

General maintenance items are those day-to-day care practices that are important to your vehicle for proper operation. It is the owner's responsibility to ensure that the general maintenance items are performed regularly.

These checks or inspections can be done either by yourself or your Lexus dealer.

Scheduled maintenance

The scheduled maintenance items listed in the "Owner's Manual Supplement/Maintenance Schedule" are those required to be serviced at regular intervals.

For details of your maintenance schedule, read the "Owner's Manual Supplement/Maintenance Schedule".

It is recommended that any replacement parts used for maintenance or for the repair of the emission control system be Lexus supplied.

The owner may elect to use non-Lexus supplied parts for replacement purposes without invalidating the emission control system warranty. However, use of replacement parts which are not of equivalent quality may impair the effectiveness of the emission control systems.

You may also elect to have maintenance, replacement, or repair of the emission control devices and system performed by any automotive repair establishment or individual without invalidating this warranty. See "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet" for complete warranty information.

Where to go for service?

Lexus technicians are well-trained specialists and are kept up to date with the latest service information through technical bulletins, service tips, and in-dealership training programs. They are well informed about the operation of all the systems on your vehicle.

You can be confident that your Lexus dealer's service department performs the best job to meet the maintenance requirements of your vehicle.

Your copy of the repair order is proof that all required maintenance has been performed for warranty coverage. And if any problems should arise with your vehicle while under warranty, your Lexus dealer will promptly take care of it. Again, be sure to keep a copy of the repair order for any service performed on your Lexus.

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself, if you have a little mechanical ability and a few basic automotive tools. Simple instructions for how to perform them are presented in Section 6.

If you are a skilled do-it-yourself mechanic, the Lexus service manuals are recommended. Please be aware that do-it-yourself maintenance can affect your warranty coverage. See your "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet" for the details.

MAINTENANCE

GENERAL MAINTENANCE

Listed below are the general maintenance items that should be performed at the intervals specified. It is recommended that any problem you notice be brought to the attention of your Lexus dealer or qualified service shop for their advice.



CAUTION

Make these checks only where adequate ventilation can be obtained if you run the engine.

Vehicle exterior

Items listed below should be performed from time to time, unless otherwise specified.

Tire pressure

Check the pressure with a gauge every two weeks, or at least once a month and adjust as shown on the tire pressure label. See page 431 for additional information.

Tire surface

Check the tires carefully for cuts, damage or excessive wear. See page 433 for additional information.

Wheel nuts

When checking the tires, make sure to check the nuts for looseness. Tighten them if necessary.

Tire rotation

Rotate the tires according to the maintenance schedule. (For scheduled maintenance information, please refer to the "Owner's Manual Supplement/Maintenance Schedule".) See page 432 for additional information.

Fluid leaks

Check underneath for leaking fuel, oil, water or other fluid after the vehicle has been parked for a while. If you smell fuel fumes or notice any leak, have the cause found and corrected immediately.

Doors and engine hood

Check that all doors, including trunk lid, operate smoothly and all latches lock securely. Make sure the engine hood secondary latch secures the hood when the primary latch is released.

Vehicle interior

Items listed below should be checked regularly, e.g. while performing periodic services, cleaning the vehicle, etc.

Lights

Make sure the headlight, stop lights, tail lights, turn signal lights, and other lights are working. Check headlight aim.

Service reminder indicators and warning buzzers

Check that all service reminder indicators and warning buzzers function properly.

Steering wheel

Check that it has the specified freeplay. Be alert for changes in steering condition, such as hard steering, excessive freeplay or strange noise.

Seats

Check that all front seat controls such as seat adjusters, seatback recliner, etc. operate smoothly. Check that the head restraints move up and down smoothly and that the locks hold securely in any latched position.

Seat belts

Check that the seat belt system such as buckles, retractors and anchors operate properly and smoothly. Make sure the belt webbing is not cut, frayed, worn or damaged.

Accelerator pedal

Check the pedal for smooth operation and uneven pedal effort or catching.

Brake pedal

Check the pedal for smooth operation and the proper clearance and freeplay. Check the brake booster function.

Brakes

At a safe place, check that the brakes do not pull to one side when applied.

Parking brake

Check that the pedal has the proper travel and that, on a safe incline, your vehicle is held securely with only the parking brake applied.

Automatic transmission “Park” mechanism

Check the lock release button of the selector lever for proper and smooth operation. On a safe incline, check that your vehicle is held securely with the selector lever in “P” position and all brakes released.

MAINTENANCE

Engine compartment

Items listed below should be checked from time to time, e.g. each time when refueling.

Washer fluid

Make sure there is sufficient fluid in the tank. See page 464 for additional information.

Engine coolant level

Make sure the coolant level is between the "FULL" and "LOW" lines on the see-through reservoir when the engine is cold. See page 415 for additional information.

Battery

Your Lexus has a maintenance free battery. You do not have to add distilled water. For longer life of the battery, however, see page 451 for additional information.

Brake fluid level

Make sure the brake fluid level is correct. See page 424 for additional information.

Engine oil level

Check the level on the dipstick with the engine turned off and the vehicle parked on a level spot. See page 410 for additional information.

Power steering fluid level

Check the level through the reservoir. The level should be in the "HOT" or "COLD" range depending on the fluid

temperature. See page 426 for additional information.

Exhaust system

If you notice any change in the sound of the exhaust or smell exhaust fumes, have the cause located and corrected immediately. (See engine exhaust cautions in Section 3–1.)

DOES YOUR VEHICLE NEED REPAIRING?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling, or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (However, water dripping from the air conditioning after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driving straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches floors, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to your Lexus dealer as soon as possible. It probably needs adjustment or repair.

MAINTENANCE



CAUTION

Do not continue driving with the vehicle unchecked. It could result in serious vehicle damage and possibly personal injury.

...


SECTION 6 – 1

SERVICE PROCEDURES AND SPECIFICATIONS

Introduction


Vehicle identification	388
Engine compartment overview	391
Do-it-yourself service precautions	392
Parts and tools	394
Positioning the jack	396

VEHICLE IDENTIFICATION

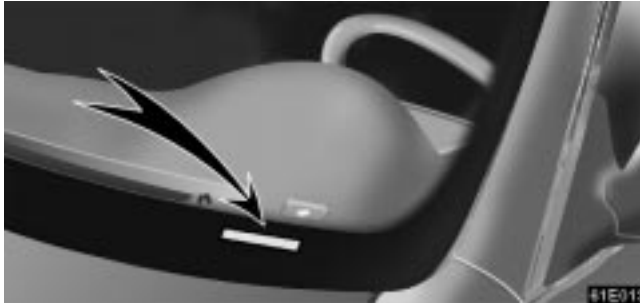


The vehicle identification number (VIN) is the legal identifier for your vehicle. This number is on the left top of the instrument panel and can be seen through the windshield from outside.

This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.

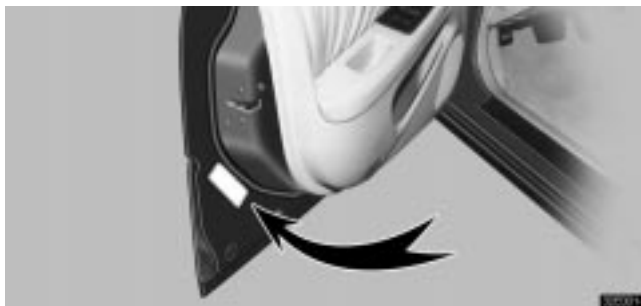


The vehicle identification number (VIN) is also on the Certification Label.

INTRODUCTION

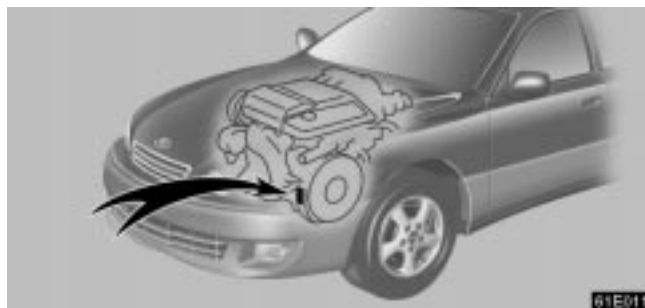

The engine number is stamped on the engine block as shown.

ENGINE COMPARTMENT OVERVIEW

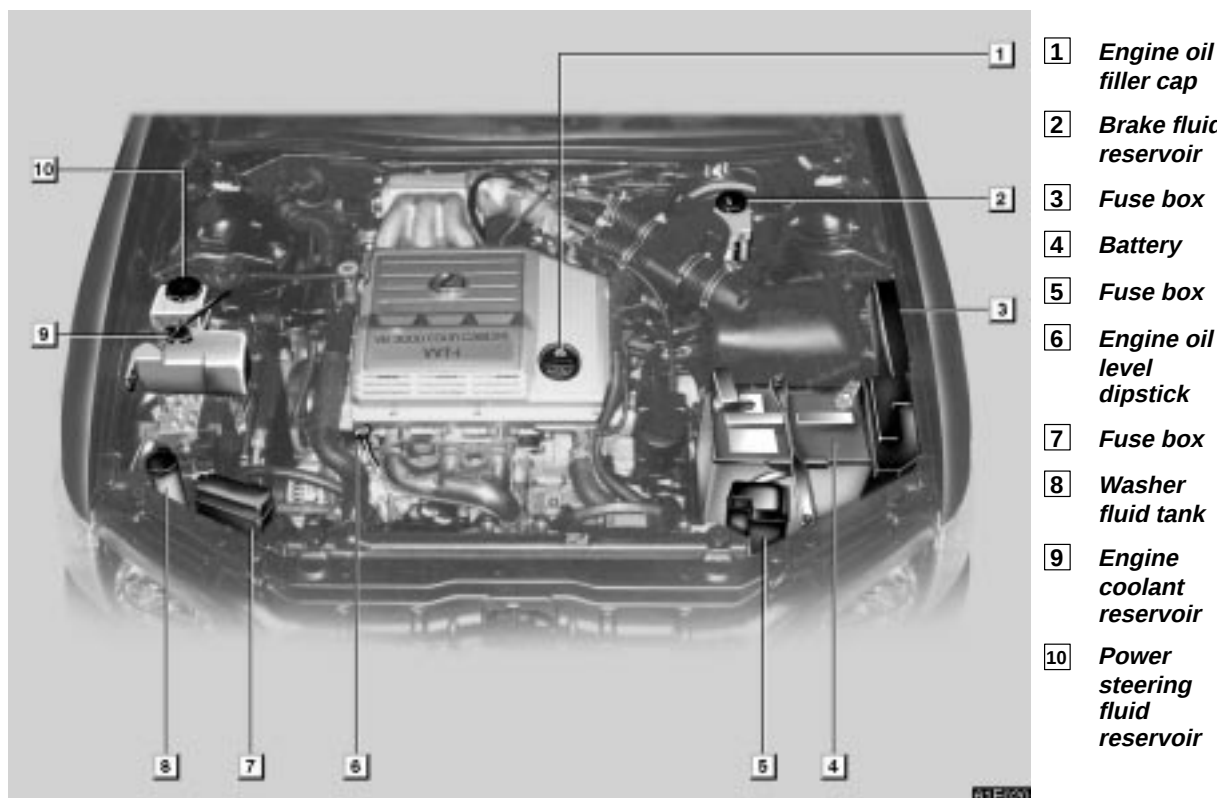

INTRODUCTION

DO-IT-YOURSELF SERVICE PRECAUTIONS

If you perform maintenance yourself, be sure to follow the correct procedure given in this section.

You should be aware that improper or incomplete servicing may result in operating problems.

Performing do-it-yourself maintenance during the warranty period may affect your warranty coverage. Read the separate Lexus Warranty statement for details and suggestions.

This section gives instructions only for those items that are relatively easy for an owner to perform. As explained in Section 5, there are still a number of items that must be performed by a qualified technician with special tools.

For information on tools and parts for do-it-yourself maintenance, see "Parts and tools" on page 394.

Utmost care should be taken when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

**CAUTION**

- When the engine is running, keep hands, clothing, and tools away from the moving fan and engine drive belt. (Removing rings, watches, and ties is advisable.)
- Right after driving, the engine compartment – the engine, radiator, exhaust manifold and power steering fluid reservoir, etc. – will be hot. So be careful not to touch them. Oil and other fluids may also be hot.
- Do not smoke, cause sparks or allow open flames around fuel or the battery. Their fumes are flammable.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Do not get under your vehicle with just the body jack supporting it. Always use automotive jack stands or other solid supports.
- Use eye protection whenever you work on or under your vehicle where you may be exposed to flying or falling material, fluid spray, etc.

INTRODUCTION

NOTICE

- ***Remember that battery and ignition cables carry high currents or voltages. Be careful of accidentally causing a short circuit.***
- ***Before closing the engine hood, check to see that you have not forgotten any tools, rags, etc.***
- ***Do not drive with the air cleaner removed, or excessive engine wear could result. Also backfiring could cause a fire in the engine compartment.***
- ***Do not overfill automatic transmission fluid, or the transmission could be damaged.***
- ***Be careful not to scratch the glass surface with the wiper frame.***

PARTS AND TOOLS

Here is a list of parts and tools you will need to perform do-it-yourself maintenance. Remember all Lexus parts are designed in metric sizes, so your tools must be metric.

Checking the engine oil level

Parts (if level is low):

- Use API grade SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil. For recommended oil viscosity, see page 414.

Tools:

- Rag or paper towel
- Funnel (only for adding oil)

Checking the engine coolant level

Parts (if level is low):

- "Toyota Long Life Coolant" or equivalent
See "Checking the engine coolant level" on page 415 for instructions.
- Demineralized or distilled water

Tools:

- Funnel (only for adding coolant)

Checking brake fluid**Parts (if level is low):**

- FMVSS No. 116 DOT 3 or SAE J1703 brake fluid

Tools:

- Funnel (only for adding fluid)

Checking power steering fluid**Parts (if level is low):**

- Automatic transmission fluid DEXRON[®] II or III

Tools:

- Rag or paper towel
- Funnel (only for adding fluid)

Checking battery condition**Tools:**

- Warm water
- Baking soda
- Grease
- Conventional wrench (for terminal clamp bolts)

Checking and replacing the blade type fuses**Parts (if replacement is necessary):**

- Fuse with same amperage rating as original

Checking the cartridge type fuses**Parts (if replacement is necessary):**

- Genuine Lexus fuse or equivalent with same amperage rating as original

Adding washer fluid**Parts:**

- Water
- Washer fluid containing antifreeze (for winter use)

Tools:

- Funnel

INTRODUCTION

POSITIONING THE JACK



► *Front*



► *Rear*

When jacking up your vehicle with the jack, position the jack correctly as shown in the illustrations.

**CAUTION**

When jacking, be sure to observe the following to reduce the possibility of personal injury:

- Follow jacking instructions.
- Do not put any part of your body under the vehicle supported by the jack. Personal injury may occur.
- Do not start or run the engine while your vehicle is supported by the jack.
- Stop the vehicle on a level firm ground, firmly set the parking brake and put the transmission in "P". Block the wheels on the opposite side of the jack up point if necessary.
- Make sure to set the jack properly in the jack point. Raising the vehicle with jack improperly positioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone; use vehicle support stands.
- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not put an object on or under the jack.

INTRODUCTION

NOTICE

Make sure to place the jack correctly, or your vehicle may be damaged.

!

SECTION 6 – 2

SERVICE PROCEDURES AND SPECIFICATIONS

Engine

Specifications	401
Fuel	404
Facts about engine oil consumption	407
Used engine oil	409
Checking the engine oil level	410
Checking the engine coolant level	415
Spark plugs	419

SPECIFICATIONS

– GENERAL

Model	1MZ – FE
Type	6 cylinder V type, 4 cycle, gasoline
Bore and stroke	87.5 × 83 mm (3.44 × 3.27 in.)
Displacement	2995 cm ³ (182.8 cu. in.)
Valve clearance (engine cold)	
Intake	0.15 – 0.25 mm (0.006 – 0.010 in.)
Exhaust	0.25 – 0.35 mm (0.010 – 0.014 in.)
Drive belt tension (with Borroughs drive belt tension gauge No. BT-33-73F)	115 ± 20 lb.

– LUBRICATION SYSTEM

ENGINE

Oil capacity Drain and refill with filter without filter Oil grade Recommended oil viscosity (SAE):	4.7 L (5.0 qt., 4.1 Imp. qt.) 4.5 L (4.8 qt., 4.0 Imp. qt.) API SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil
--	---

- COOLING SYSTEM

Capacity Coolant type	8.8 L (9.3 qt., 7.7 Imp. qt.) "Toyota Long Life Coolant" or equivalent With ethylene-glycol type coolant for a proper corrosion protection of aluminum components Do not use alcohol type antifreeze or plain water alone.
--------------------------	---

- FUEL

Fuel type Octane Rating	Only UNLEADED 87 (Research Octane Number 91) or higher Temperature range anticipated before next oil change
----------------------------	---

– IGNITION SYSTEM

Spark plug	– Make	DENSO	SK20R11
		NGK	IFR6A11
	– Gap		1.1 mm (0.043 in.)

– ELECTRICAL SYSTEM

Battery	– Maintenance type battery		
	Specific gravity reading at 20°C (68°F):	1.260	Fully charged
		1.160	Half charged
		1.060	Discharged
	Charging rates	Quick charge	15A max.
		Slow charge	5A max.
	– Non-maintenance battery		
	Open voltage at 20°C (68°F):	12.7V	Fully charged
		12.3V	Half charged
		11.9V	Discharged
		[Voltage that is checked 20 minutes after the key is removed with all the lights turned off]	
	Charging rates		5A max.

ENGINE

FUEL

Fuel type

Your vehicle must use only unleaded gasoline.

To help prevent gas station mixups, your Lexus has a smaller fuel tank opening. The special nozzle on pumps with unleaded fuel will fit it, but the larger standard nozzle on pumps with leaded gas will not.

At a minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB 3.5-M93 in Canada.

NOTICE

Do not use leaded gasoline. Use of leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and the emission control system to function improperly. Also, this can increase maintenance costs.

Octane rating

Select Octane Rating 87 (Research Octane Number 91) or higher. For improved vehicle performance, the use of premium unleaded gasoline with an Octane Rating of 91 (Research Octane Number 96) or higher is recommended.

Use of unleaded fuel with an Octane Rating or Research

Octane Number lower than stated above will cause persistent heavy knocking. If it is severe, this will lead to engine damage.

If your engine knocks ...

If you detect heavy knocking even when using the recommended fuel, or if you hear steady knocking while holding a steady speed on level roads, consult your Lexus dealer.

However, now and then, you may notice light knocking for a short time while accelerating or driving up hills. This is no cause for concern.

Gasolines containing detergent additives

Lexus recommends the use of gasoline that contain detergent additives to avoid build-up of engine deposits.

For further details, ask your Lexus dealer or a local gasoline retailer.

Quality gasoline

Automobile manufacturers in U.S., Europe and Japan have developed a specification for quality fuel named World-Wide Fuel Charter (WWFC) that is expected to be applied world wide. The WWFC consists of three categories that depend on required emission levels. In the U.S., category 3 has been adopted. The WWFC improves air quality by providing for better emissions in vehicle fleets, and

customer satisfaction through better vehicle performance.

Cleaner burning gasoline

Cleaner burning gasoline, including reformulated gasoline that contains oxygenates such as ethanol or MTBE is available in many areas.

Lexus recommends the use of cleaner burning gasoline and appropriately blended reformulated gasoline. These types of gasoline provide excellent vehicle performance, reduce vehicle emissions, and improve air quality.

Oxygenates in gasoline

Lexus allows the use of oxygenate blended gasoline where the oxygenate content is up to 10% ethanol or 15% MTBE. If you use gasohol in your Lexus, be sure that it has an octane rating no lower than 87.

Lexus does not recommend the use of gasoline containing methanol.

Sulfur in gasoline

If your vehicle is certified to California Emission Regulations, the vehicle is designed to operate on California cleaner burning gasoline (CBG) that contains lower sulfur. If you cannot use California CBG, your emission control system may suffer damage and turn on the Malfunction Indicator Lamp.

If the malfunction is caused by the type of fuel used, repairs may not be covered by your warranty.

ENGINE

Gasoline containing MMT

Some gasoline contain an octane enhancing additive called MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

Lexus does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected. The Malfunction Indicator Lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

Gasoline quality

In a very few cases, you may experience driveability problems caused by the particular gasoline that you are using. If you continue to have unacceptable driveability, try changing gasoline brands. If this does not rectify your problem, then consult your Lexus dealer.

NOTICE

- ***Do not use gasohol other than stated above. It will cause fuel system damage or vehicle performance problems.***
- ***If drivability problems are encountered (poor hot starting, vaporizing, engine knock, etc.), discontinue its use.***
- ***Take care not to spill gasohol during refueling. Gasohol may cause paint damage.***

Fuel tank capacity

70 L (18.5 gal., 15.4 Imp. gal.)

FACTS ABOUT ENGINE OIL CONSUMPTION

Functions of engine oil

Engine oil has the primary function of lubricating and cooling the inside of the engine, and plays a major role in maintaining the engine in proper working order.

Engine oil consumption

It is normal that an engine should consume some engine oil during normal engine operation. The causes of oil consumption in a normal engine are as follows.

- Oil is used to lubricate pistons, piston rings and cylinders. A thin film of oil is left on the cylinder wall when a piston moves downwards in the cylinder. High negative pressure generated when the vehicle is decelerating sucks some of this oil into the combustion chamber. This oil as well as some part of the oil film left on the cylinder wall is burned by the high temperature combustion gases during the combustion process.
- Oil is also used to lubricate the stems of the intake valves. Some of this oil is sucked into the combustion chamber together with the intake air and is burned along with the fuel. High temperature exhaust gases also burn the oil used to lubricate the exhaust valve

stems.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the way the vehicle is driven.

More oil is consumed under driving conditions such as high speeds and frequent acceleration and deceleration.

A new engine consumes more oil, since its pistons, piston rings and cylinder walls have not become conditioned.

When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.

For example, if a vehicle is used for repeated short trips and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

The diluting ingredients evaporate out when the vehicle is then driven at high speeds, as on an expressway, making it appear that oil is excessively consumed after driving at high speeds.

ENGINE

Importance of engine oil level check

One of the most important points in proper vehicle maintenance is to keep the engine oil at the optimum level so that oil function will not be impaired. Therefore, it is essential that the oil level be checked regularly. Lexus recommends that the oil level be checked every time you refuel the vehicle.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

For detailed information on oil level check, see “Checking the engine oil level” on page 410.

USED ENGINE OIL



CAUTION

- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact with it. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Do not leave used oil within the reach of children.
- Dispose of used oil and used oil filters only in a safe and acceptable manner. Do not dispose of used oil and used oil filters in household trash, in sewers or onto the ground. Call your Lexus dealer or a service station for information concerning recycling or disposal.


ENGINE

CHECKING THE ENGINE OIL LEVEL



With the engine at operating temperature and turned off, check the oil level on the dipstick.

1. To get a true reading, the vehicle should be on a level spot. After turning off the engine, wait a few minutes for the oil to drain back into the bottom of the engine.
2. Pull out the dipstick, and wipe it clean with a rag.
3. Reinsert the dipstick and push it in as far as it will go, or the reading will not be correct.

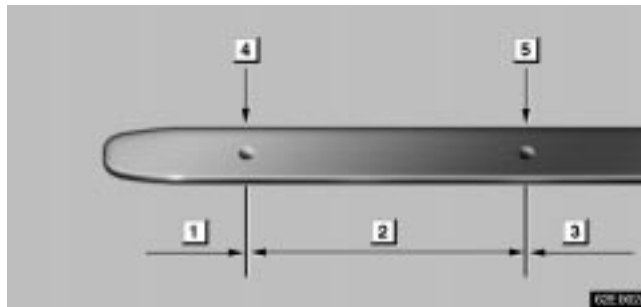

► **1 Add oil 2 O.K. 3 Too full**

4. Pull the dipstick out and look at the oil level on the end.
If it is between the low level mark (**4**) and the full level
mark (**5**), it is O.K.

ENGINE



If the oil level is below or only slightly above the low mark, add engine oil of the same type as already in the engine.

Remove the oil filler cap and add engine oil a little at a time, checking the dipstick. The approximate quantity of oil needed to fill between the low level mark and the full level mark on the dipstick is indicated below for reference.

When the level reaches within the correct range, return the filler cap and turn the cap clockwise until you hear a click.

Oil quantity. L (qt., Imp. qt.) 1.5 (1.6, 1.3)


<i>NOTICE</i>
<i>Avoid overfilling, or the engine could be damaged. Check the oil level on the dipstick once again after adding the oil.</i>

ENGINE

Engine oil selection

Use API SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil.

Recommended viscosity (SAE):

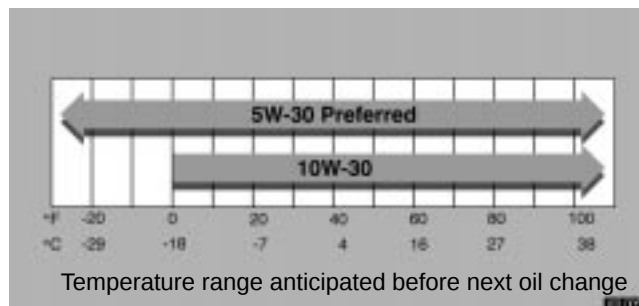

SAE 5W-30 is the best choice for your vehicle, for good fuel economy, and good starting in cold weather.

If you use SAE 10W-30 engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 engine oil is recommended.

Oil identification marks



► **API Service Symbol Mark**

► **ILSAC Certification Mark**

Either or both API registered marks are added to some oil containers to help you select the oil you should use.

- The API Service Symbol is located anywhere on the outside of the container.

The top portion of the label shows the oil quality by API (American Petroleum Institute) designation such as SJ. The center portion of the label shows the SAE viscosity grade such as SAE 5W-30. “Energy-Conserving”, shown in the lower portion, indicates that the oil has fuel-saving capabilities.

- The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.

CHECKING THE ENGINE COOLANT LEVEL

ENGINE



► **1 Reservoir cap 2 Upper line 3 Lower line**

Look at the see-through coolant reservoir when the engine is cold. The coolant level is satisfactory if it is between the “FULL” and “LOW” lines on the reservoir. If the level is low, add ethylene-glycol type coolant for a proper corrosion protection of aluminum components.

The coolant level in the reservoir will vary with engine temperature. However, if the level is on or below the “LOW” line, add coolant. Bring the level up to the “FULL” line.

Always use ethylene-glycol type coolant for a proper corrosion protection of aluminum components. See information in the next column.

If the coolant level drops within a short time after replenishing, there may be a leak in the system. Visually check the radiator, hoses, engine coolant filler cap, radiator cap and drain cock and water pump.

If you can find no leak, have your Lexus dealer test the cap pressure and check for leaks in the cooling system.



CAUTION

To prevent burning yourself, do not remove the radiator cap when the engine is hot.

ENGINE

Coolant type selection

Use of improper coolants may damage your engine cooling system. Your coolant must contain ethylene-glycol type coolant for a proper corrosion protection of your engine that contains aluminum components. Use "Toyota Long Life Coolant" or equivalent.

In addition to preventing freezing and subsequent damage to the engine, this type of coolant will also prevent corrosion. Further supplemental inhibitors or additives are neither needed nor recommended.

Read the coolant container for information on freeze protection. Follow the manufacturer's directions for how much to mix with plain water (preferably demineralized water or distilled water). The total capacity of the cooling system is given on page 402.

We recommend to use 50% solution for your Lexus, to provide protection down to about -35°C (-31°F). When it is extremely cold, to provide protection down to about -50°C (-58°F), 60% solution is recommended. Do not use more than 70% solution for better coolant performance.

NOTICE

Do not use alcohol type antifreeze or plain water alone.

SPARK PLUGS



Your engine is fitted with iridium-tipped spark plugs.

NOTICE

Use only iridium-tipped spark plugs and do not adjust gaps for your engine performance and smooth drivability.

SECTION 6 – 3

SERVICE PROCEDURES AND SPECIFICATIONS

Chassis

Specifications	421
Checking brake fluid	424
Checking power steering fluid	426
Checking tire pressure	431
Rotating tires	432
Checking and replacing tires	433
Installing snow tires and chains	437
Replacing wheels	440
Aluminum wheel precautions	440
Suspension and chassis	441

SPECIFICATIONS

– AUTOMATIC TRANSAXLE

Fluid capacity Drain and refill Fluid type	3.5 L (3.7 qt., 3.1 Imp. qt.) Automatic transmission fluid Type T-IV*
--	---

*Change automatic transmission fluid only as necessary. Generally, it is necessary to change automatic transmission fluid only if your vehicle is driven under one of the Special Operating Conditions listed in your "Owner's Manual Supplement/Maintenance Schedule". When changing the automatic transmission fluid, use only Toyota Genuine ATF Type T-IV (ATF JWS3309 or NWS6500) to aid in assuring optimum transaxle performance.

NOTICE

Using automatic transmission fluid other than Toyota Genuine ATF Type T-IV may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the automatic transmission of your vehicle.

CHASSIS

– BRAKES

Pedal clearance	55 mm (2.2 in.) Min. * ¹
Pedal free play	1 – 6 mm (0.04 – 0.24 in.)
Brake pad wear limit	1.0 mm (0.04 in.)
Parking brake lining wear limit	1.0 mm (0.04 in.)
Parking brake adjustment	3 – 6 clicks * ²
Fluid type	SAE J1703 or FMVSS No. 116 DOT 3

*¹: Minimum pedal clearance when depressed with the force of 490 N (50 kgf, 110 lbf.) with the engine running

*²: Parking brake adjustment when depressed with the force of 294 N (30 kgf, 66 lbf.)

– STEERING

Wheel free play	Less than 30 mm (1.2 in.)
Power steering fluid type	Automatic transmission fluid DEXRON®II or III

- TIRES AND WHEELS

Tire size	Type A: P205/65R15 92V Type B: P205/60R16 91V
Recommended cold tire inflation pressure	
Vehicle load up to 4 occupants	180 kPa (1.8 kgf/cm ² or bar, 26 psi) (Both front and rear)
Vehicle loaded up to vehicle capacity weight	220 kPa (2.2 kgf/cm ² or bar, 32 psi) (Both front and rear)
Spare tire	220 kPa (2.2 kgf/cm ² or bar, 32 psi)
Trailer towing (conventional and snow tires)	220 kPa (2.2 kgf/cm ² or bar, 32 psi) (Both front and rear)
Wheel size	
Wheel nut torque	Type A: 15 × 6 JJ Type B: 16 × 6 JJ 103 N·m (10.5 kgf·m, 76 ft·lbf.)

NOTE: For a complete information on tires (e.g. replacing tires or replacing wheels), see "Checking tire pressure" through "Aluminum wheel precautions" on page 431 through 440.

CHASSIS

CHECKING BRAKE FLUID



► *Vehicles equipped with vehicle skid control system*



► Vehicles equipped with traction control system

To check the fluid level, simply look at the see-through reservoir. The level should be between the “MAX” and “MIN” lines on the tank.

It is normal for the brake fluid level to go down slightly as the brake pads wear. So be sure to keep the reservoir filled.

If the reservoir needs frequent refilling, it may indicate a serious mechanical problem.

If the level is low, add FMVSS No.116 DOT 3 or SAE J1703 brake fluid to the brake reservoir.

Remove and replace the reservoir cap by hand. Add brake fluid up to the “MAX” line.

Use only newly opened brake fluid. Once opened, brake fluid absorbs moisture from the air, and excess moisture can cause a dangerous loss of braking efficiency.

**CAUTION**

Take care when filling the reservoir because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets in your hands or eyes, flush them with clean water immediately. If you still feel uncomfortable with your hands or eyes, go to the doctor.

CHASSIS

NOTICE

If you spill some of the fluid, be sure to wipe it off to prevent it from damaging the parts or paintwork.

CHECKING POWER STEERING FLUID



Check the fluid level through the reservoir. If necessary, add automatic transmission fluid DEXRON® II or III.

If the vehicle has been driven around 80 km/h (50 mph) for 20 minutes (a little more in frigid temperatures), the fluid is hot (60°C – 80°C or 140°F – 175°F). You may also check the level when the fluid is cold (about room temperature, 10°C – 30°C or 50°F – 85°F) if the engine has not been run for about five hours.

CHASSIS



- **1** *If hot O.K.* **2** *If hot add* **3** *If cold O.K.*
4 *If cold add*

Clean all dirt off the reservoir and look at the fluid level. If the fluid is cold, the level should be in the “COLD” range. Similarly, if it is hot, the fluid level should be in the “HOT” range. If the level is at the low side of the appropriate range, add automatic transmission fluid DEXRON® II or III to bring the level within the range.

To remove the reservoir cap, turn it counterclockwise and lift up. To reinstall it, turn it clockwise. After replacing the reservoir cap, visually check the steering box case, vane pump and hose connections for leaks or damage.



CAUTION

The reservoir may be hot so be careful not to burn yourself.

CHASSIS

NOTICE

Avoid overfilling, or the power steering could be damaged.

CHECKING TIRE PRESSURE



The recommended cold tire pressures, tire size and the vehicle capacity weight are given on the label.

You should check the tire pressures every two weeks, or at least once a month. And don't forget the spare! The air pressure for the spare tire should be 220 kPa (2.2 kgf/cm² or bar, 32 psi). Incorrect tire pressure can reduce tire life and make your vehicle less safe to drive.

Low tire pressure results in excessive wear, poor handling, reduced fuel economy, and the possibility of blowouts from overheated tires. Also, low tire pressure can cause poor sealing of the tire bead. If the tire pressure is excessively low, there is the possibility of wheel deformation and/or tire separation. So keep your tire pressures at the proper level. If a tire needs frequent refilling, have it checked by your Lexus dealer.

High tire pressure produces a harsh ride, handling problems, excessive wear at the center of the tire tread, and a greater possibility of tire damage from road hazards.

The following instructions for checking tire pressure should be observed:


- **The pressure should be checked only when the tires are cold.** If your vehicle has been parked for at

CHASSIS

least 3 hours and has not been driven for more than 1.5 km or 1 mile since, you will get an accurate cold tire pressure reading.

- **Always use a tire pressure gauge.** The appearance of the tire can be misleading. Besides, tire pressures that are even just a few pounds off can degrade ride and handling.
- **Do not bleed or reduce tire pressure after driving.** It is normal for the tire pressure to be higher after driving.
- **Never exceed the vehicle capacity weight.** The passengers and luggage weight should be located so that the vehicle is balanced.
- **Be sure to reinstall the tire valve caps.** Without the valve caps, dirt or moisture could get into the valve core and cause air leakage. If the caps have been lost, have new ones put on as soon as possible.

ROTATING TIRES

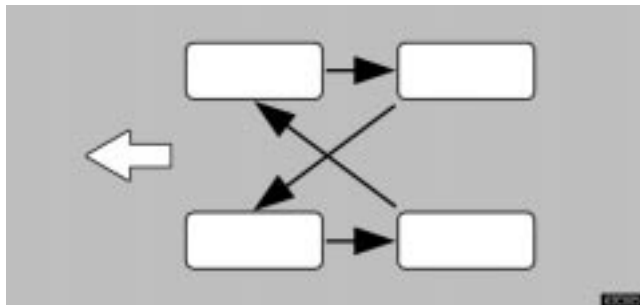

To equalize tire wear and help extend tire life, Lexus recommends that you rotate your tires according to the maintenance schedule. (For scheduled maintenance information, please refer to the “Owner’s Manual Supplement/Maintenance Schedule.) However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.

The wheel assemblies must be rotated as illustrated above.


When rotating tires, check for uneven wear and damage. Abnormal wear is usually caused by incorrect tire pressure, improper wheel alignment, out-of balance wheels, or severe braking.

Before storing radial, snow or studded tires, mark the direction of rotation and be sure to install them in the same direction when using them again. Tires should be stored in a cool dry place.

CHECKING AND REPLACING TIRES

When to replace your tires

CHASSIS

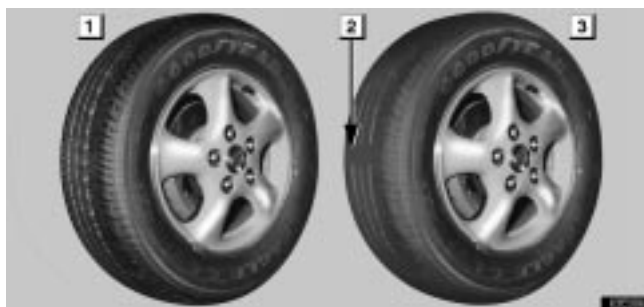

► **1** New tread **2** Tread wear indicator **3** Worn tread

Replace the tires when the tread wear indicators show. The location of the tread wear indicators is shown by the marks such as “TWI” or “△” marks molded on the sidewall of each tire.

The tires on your Lexus have built-in tread wear indicators to help you know when the tires need replacement. When the tread depth wears to 1.6 mm (0.06 in.) or less, the indicators will appear. If you can see the indicators in two or more adjacent grooves, the tire should be replaced.

The effectiveness of snow tires is lost if the tread wears down below 4 mm (0.16 in.).

If you have tire damage such as cuts, splits, cracks deep enough to expose the fabric, or bulges indicating internal damage, the tire should be replaced.

If a tire often goes flat or cannot be properly repaired due to the size or location of a cut or other damage, it should be replaced. If you are not sure, consult with your Lexus dealer.

If an air loss occurs while driving, do not continue driving with a deflated tire. Driving even a short distance can damage a tire beyond repair.

Any tires which are over 6 years old must be checked by a qualified technician even if damage is not obvious.

Tires deteriorate with age even if they have never or seldom been used.

This also applies to the spare tire and tires stored for future use.

Uniform tire quality grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation. It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

DOT quality grades – All passenger car tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width. For example: Treadwear 200 Traction AA Temperature A

Treadwear – The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and a half (1 – 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction AA, A, B, C – The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under

CHASSIS

controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

Temperature A, B, C – The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grade for this tire established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Tire selection

When replacing a tire, use only the same size and construction as originally installed and with the same or greater load capacity.

Using any other size or type of tire may seriously affect handling, ride, speedometer/odometer calibration, ground clearance, and clearance between the body and tires or snow chains.

Do not mix radial, belted, or conventional tires on your vehicle.

Do not use tires or wheels other than the manufacturer's recommended size.

It can cause dangerous handling characteristics, resulting in loss of control. If you need to change from conventional tires to radial tires or vice versa, replace them as a set.

INSTALLING SNOW TIRES AND CHAINS

When to use snow tires or chains

Snow tires or chains are recommended when driving on snow or ice.

On wet or dry roads, conventional or radial tires provide better traction than snow or studded tires.

Snow tire selection

If you need snow tires, select the same size, construction and load capacity as the original tires on your Lexus.

Do not use tires other than stated above. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restrictions.

Snow tire installation

Snow tires should be installed on all wheels.

Installing snow tires on the front wheels only can lead to an excessive difference in road grip capability between the front and rear tires which could cause loss of vehicle control.

CHASSIS



CAUTION

- Snow tires should be inflated to the same pressure as the original tires.
- Never drive over 120 km/h (75 mph) with any type of snow tires.

Tire chain selection

Regulations regarding the use of tire chains vary according to location or type of road. Always check the local regulations before installing chains.

Use SAE Class “S” type radial tire chains, with the exception of radial cable chains or V-bar type chains.

Chain installation

Install the chains on the front tires as tightly as possible. Do not use tire chains on the rear tires. Retighten chains after driving 0.5 – 1.0 km (1/4 – 1/2 mile).

When installing chains on your tires, carefully follow the instructions of the chain manufacturer.

**CAUTION**

- Do not exceed 50 km/h (30 mph) or the chain manufacturer's recommended speed limit, whichever is lower.
- Drive carefully avoiding bumps, holes, and sharp turns, which may cause the vehicle to bounce.
- Avoid sharp turns or locked-wheel braking, as use of chains may adversely affect vehicle handling.
- When driving with chains installed, be sure to drive carefully. Slow down before entering the curves to avoid losing control of the vehicle. Otherwise an accident may occur.

CHASSIS

REPLACING WHEELS

When to replace your wheels

If you have wheel damage such as bending, cracks or heavy corrosion, the wheel should be replaced.

If you fail to replace damaged wheels, a tire may slip off a wheel or cause loss of handling control.

Replacement with used wheels is not recommended as they may have been subjected to rough treatment or high mileage and could fail without warning. Also, bent wheels which have been straightened may have hidden structural damage and therefore should not be used. Never use an inner tube in a leaking wheel which is designed for a tubeless tire.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and offset.

Correct replacement wheels are available at your Lexus dealer.

A wheel of a different size or type may adversely affect handling, wheel and bearing life, brake cooling, speedometer/odometer calibration, stopping ability, headlight aim, bumper height, vehicle ground clearance, and tire or snow chain clearance to the body and chassis.

ALUMINUM WHEEL PRECAUTIONS

- When installing aluminum wheels, check that the wheel nuts are tight after driving your vehicle the first 1600 km (1000 miles).
- If you have rotated, repaired, or changed your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- When using tire chains, be careful not to damage the aluminum wheels.
- Use only the Lexus wheel nuts and wrench designed for your aluminum wheels.
- When balancing your wheels, use only Lexus balance weights or equivalent and a plastic or rubber hammer.
- As with any wheel, periodically check your aluminum wheels for damage. If damaged, replace immediately.

SUSPENSION AND CHASSIS



CAUTION

Do not modify the suspension/chassis with lift kits, spacers, springs, etc. It can cause dangerous handling characteristics, resulting in loss of control.

SECTION 6 – 4

SERVICE PROCEDURES AND SPECIFICATIONS


Electrical components

Specifications	444
Checking battery condition	451
Battery recharging precautions	455
Checking and replacing the blade type fuses	455
Checking the cartridge type fuses	461
Adding washer fluid	464
Checking the headlight aim	464
Replacing light bulbs	469

ELECTRICAL COMPONENTS

SPECIFICATIONS


– FUSE LOCATIONS

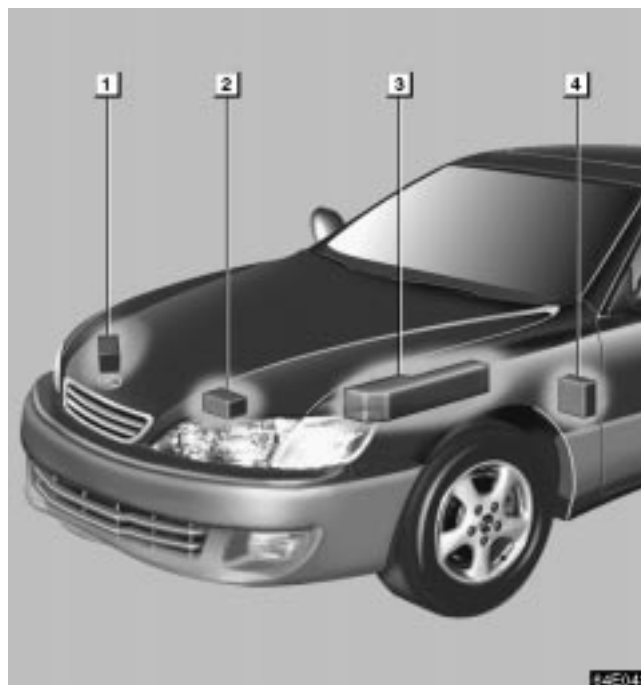


ELECTRICAL COMPONENTS

- **1** **2** **3** *Engine compartment*
4 *Driver's side instrument panel*

– FUSES

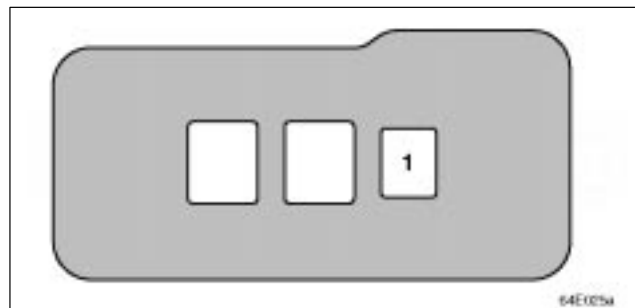


- 1** *Engine compartment*

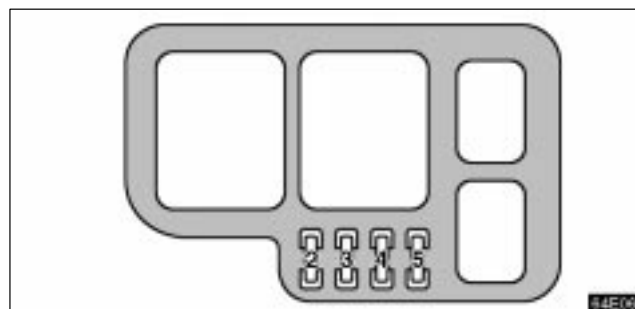

- 2** *Engine compartment*



3 *Engine compartment*

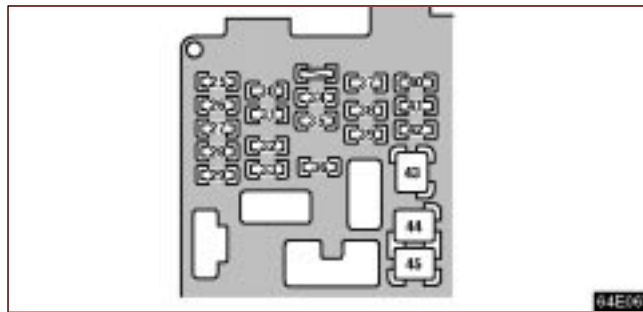

4 *Driver's side instrument panel*

ELECTRICAL COMPONENTS

No.	FUSE	AMPERE	CIRCUIT
1	ABS	60	Anti-lock brake system
2	INJ	20	No circuit
3	DRL NO.2	5	Daytime Running Light System
4	H-LP LH(LWR)	15 ^{*1}	Left-hand headlight (low beam)
		10 ^{*2}	
5	H-LP RH(LWR)	15 ^{*1}	Right-hand headlight (low beam)
		10 ^{*2}	
6	ALT	100	Charging system
7	T-STK	30	No circuit
8	HTR	50	Air conditioning system, Seat heater
9	MAIN	40	Headlight, Starting system
10	DOME	7.5	Theft deterrent system, Clock, Door courtesy light, Interior light, Ignition switch light, Vanity light, Wireless remote control system
11	ECU-B	10	Air conditioning system, Power seat system
12	RADIO NO.1	20	Audio system
13	HAZARD	15	Emergency flashers, Turn signal lights

ELECTRICAL COMPONENTS

- *1: Vehicles with discharge headlight
 *2: Vehicles without discharge headlight

No.	FUSE	AMPERE	CIRCUIT
14	AM2	30	Starting system
15	TEL	5	Telephone
16	HEAD LH(UPR)	20	Left-hand headlight (high beam)
17	ALT-S	5	Charging system
18	HEAD RH(UPR)	20	Right-hand headlight (high beam)
19	EFI	15	Multiport fuel injection
20	HORN	10	Theft deterrent system
21	RDI	30	Electronic cooling fan system
22	CDS	30	Air conditioning system
23	A/F HTR	25	Air fuel ratio sensor
24	A/C	10	No circuit
25	SEAT -HEATER	20	Seat heater system
26	HEATER	10	Air conditioning system
27	GAUGE	10	Gauges and meters, Service reminder indicators and warning buzzers, Back-up light, Door courtesy light, Seat heater, Power window system

ELECTRICAL COMPONENTS

No.	FUSE	AMPERE	CIRCUIT
28	WIPER	25	Windshield wipers and washer
29	MIRROR-HEATER	10	Outside rear view mirror defogger
30	ECU-IG	15	Cruise control system, Anti-lock brake system, Shift lock system, Theft deterrent system, Electronic modulated suspension, Wireless remote control
31	IGN	5	SRS, Multiport fuel injection
32	STOP	15	Stop lights, High mounted stoplight, Cruise control system, Electronic modulated suspension, Anti-lock brake system, Shift lock system, Power seat system, Multiport fuel injection
33	TAIL	10	Tail light, Side marker lights, License plate lights
34	POWER-OUTLET	15	Power outlet
35	OBD	7.5	On-board diagnosis system
36	FOG	15	Fog lights

No.	FUSE	AMPERE	CIRCUIT
37	STARTER	5	Starting system
38	DOOR	25	Door courtesy light, Theft deterrent system, Power door lock system, Trunk lid opener, Fuel filler door opener
39	PANEL	7.5	Instrument panel lights, Glove box light
40	TURN	7.5	Emergency flashers, Turn signal lights
41	RAD-NO.2	7.5	Audio system
42	CIG	15	Cigarette lighter, Clock, SRS
43	DEF	40	Rear window defogger, Outside rear view mirror defogger
44	PWR	30	Power window, Electronic moon roof, Power seat system
45	AM1	40	No circuit
*	SPARE		Spare fuse

CHECKING BATTERY CONDITION


Precautions

 CAUTION
BATTERY PRECAUTIONS The battery produces flammable and explosive hydrogen gas. • Do not cause a spark by contacting the battery terminals with tools. • Do not smoke or light a match near the battery. The electrolyte contains poisonous and corrosive sulfuric acid. • Avoid contact with eyes, skin or clothes. • Never inhale or swallow electrolyte. • Wear protective safety glasses when working near the battery. • Keep children away from the battery. EMERGENCY MEASURES • If electrolyte gets in your eyes, flush your eyes with clean water immediately and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the medical office.

ELECTRICAL COMPONENTS

- If electrolyte gets on your skin, thoroughly wash the contacted area. If you feel a pain or burn, get medical attention immediately.
- If electrolyte gets on your clothes, there is a possibility of its soaking through to your skin, so immediately take off the exposed clothing and follow the procedure above, if necessary.
- If you accidentally swallow electrolyte, drink a large quantity of water or milk. Follow with milk of magnesia, beaten raw egg or vegetable oil. Then go immediately for emergency help.

Checking battery exterior

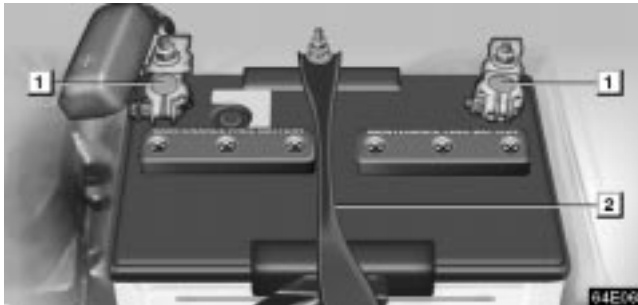

► 1 Terminals 2 Hold-down clamp

Check the battery for corroded or loose connections, cracks, or loose hold-down clamps.

1. If the battery is corroded, wash it off with a solution of warm water and baking soda. Coat the terminals with grease to prevent further corrosion.
2. If the connections are loose, tighten the clamp bolts – but do not overtighten.
3. Tighten the hold-down clamp only enough to keep the battery firmly in place. Overtightening may damage the battery case.

NOTICE

- *Make sure the engine and all accessories are turned off before performing maintenance.*
- *When checking the battery, remove the ground cable first and reinstall it last.*
- *Be careful not to cause a short circuit with tools.*
- *Take care no solution gets into the battery when washing it.*

ELECTRICAL COMPONENTS

Checking battery fluid

Checking by hydrometer



Check the battery condition by the hydrometer color.

- 1 BLUE – Good condition.
- 2 WHITE – Charging necessary. Have the battery checked by your Lexus dealer.
- 3 RED – Have the battery checked by your Lexus dealer.

NOTICE

Do not refill the battery with water.

BATTERY RECHARGING PRECAUTIONS

During recharging, the battery is producing hydrogen gas.

Therefore, before recharging:

1. If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
2. Make sure the power switch on the recharger is off when connecting the charger cables to the battery and when disconnecting them.



CAUTION


- Always charge the battery in an unconfined area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.
- Only do a slow charge (5 A or less). Charging at a quicker rate is dangerous. The battery may explode causing personal injuries.

NOTICE


Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

CHECKING AND REPLACING THE BLADE TYPE FUSES

ELECTRICAL COMPONENTS

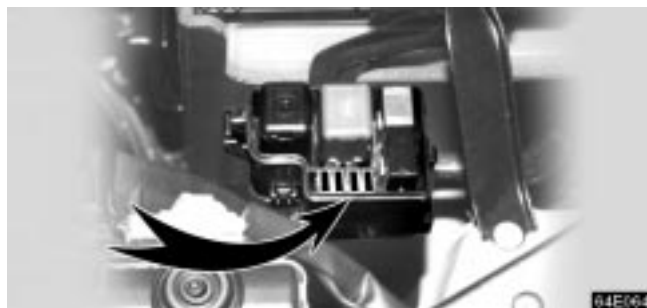

► *Engine compartment* **1** Pull-out tool **2** Spare fuses

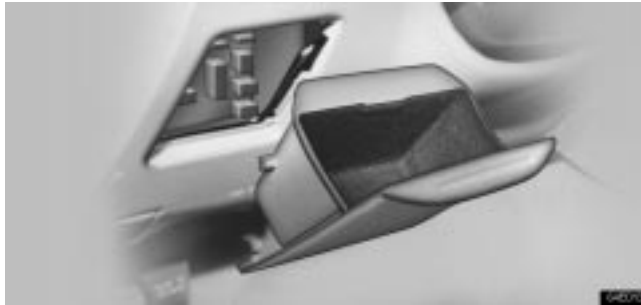


► *Driver's side instrument panel*

1. Turn the ignition switch off and remove the auxiliary box.

Determine which fuse may be causing the problem. The auxiliary box shows the name of the circuit for each fuse.

ELECTRICAL COMPONENTS

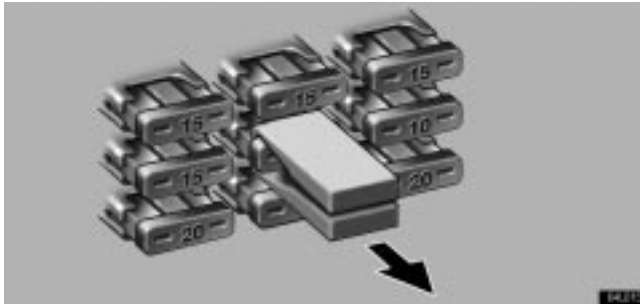

2. Make sure the inoperative component is turned off. Pull the suspected fuse straight out with the pull-out tool and check it. If it has blown, push a new fuse into the clips.



► **Good**

a. Look carefully at the fuse. If the thin wire is broken, the fuse has blown. If you are not sure or if it is too dark to see, try replacing the suspected fuse with one of the same value that you know is good.

b. Only install a fuse with the amperage rating designated on the fuse box lid.

If you do not have a spare fuse, in an emergency you can pull out the "RADIO NO.1", "RAD-NO.2" or "POWER OUTLET" fuse, which may be dispensable for normal driving, and use it if its amperage rating is the same.

If you cannot use one of the same amperage, use one lower than, but as close as possible to, the amperage. If the amperage is lower than that specified, the fuse might blow out again but this does not indicate anything wrong. Be sure to get the correct fuse as soon as possible and return the substitute to its original clips.

► **Blown**

It is a good idea to purchase a set of spare fuses and keep them in your vehicle for emergencies.

If the new fuse immediately blows out, there is a problem with the electrical system. Have your Lexus dealer correct it as soon as possible.

ELECTRICAL COMPONENTS



CAUTION


Never use a fuse with a higher amperage rating, or any other object, in place of a fuse. This may cause extensive damage and possibly a fire.

CHECKING THE CARTRIDGE TYPE FUSES




► *Engine compartment*

ELECTRICAL COMPONENTS

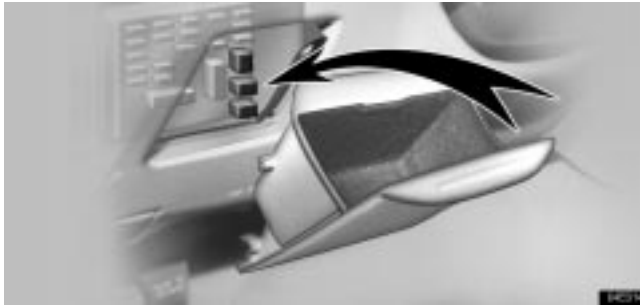

► *Driver's side instrument panel*

If the headlights or other electrical components do not work and the blade type fuses are O.K., check the cartridge type fuses. If any of the cartridge type fuses are blown, they must be replaced.

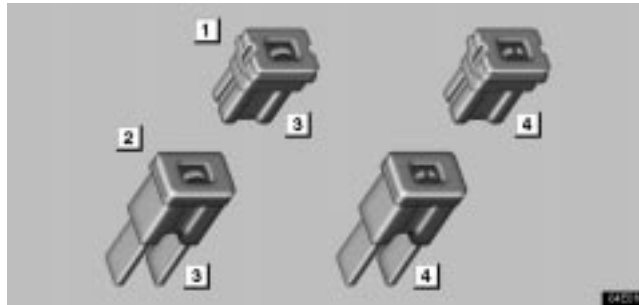

► 1 Type A 2 Type B 3 Good 4 Blown

If there is an overload in the circuits from the battery, the fuses are designed to blow before the entire wiring harness is damaged.



CAUTION

Always use a genuine Lexus fuse or equivalent for replacement. Never install an ordinary wire – even for a temporary fix. This may cause extensive damage and possibly a fire.

NOTICE

Before replacing the fuses, have the cause of electrical overload determined and repaired by your Lexus dealer.

ELECTRICAL COMPONENTS

ADDING WASHER FLUID




If the washer tank becomes nearly empty, add washer fluid.

You may use plain water as washer fluid. However, in cold areas where temperatures range below the freezing point, use washer fluid containing antifreeze. This product is available at your Lexus dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

CHECKING THE HEADLIGHT AIM (Vehicles with halogen headlight)

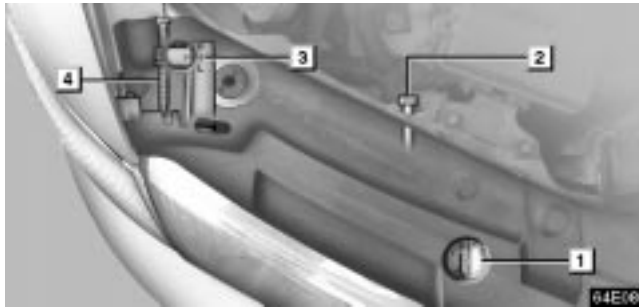


Adjusting the headlight aiming

- **1** *Beam angle gauge (vertical movement)*
- 2** *Adjusting bolt A*
- 3** *Beam angle gauge (horizontal movement)*
- 4** *Adjusting bolt B*

Before checking the headlight aim:

1. Be sure that the body around the headlight is not deformed.
2. Park the vehicle on a level spot.
3. The driver gets into the driver's seat and puts the vehicle in a state readying for a driving (with a full tank).
4. Bounce the vehicle several times.


ELECTRICAL COMPONENTS

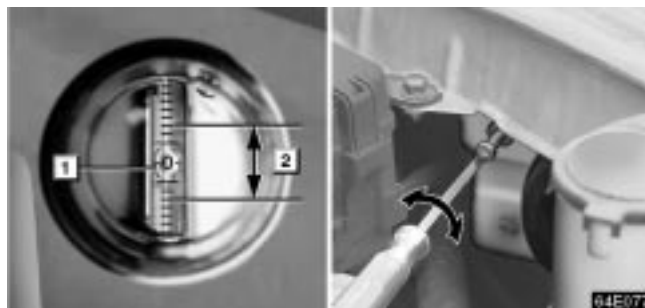

► **1** *Bubble* **2** *Acceptable range*

Vertical movement gauge: The bubble of the gauge should not deviate from the center of the gauge by more than two marks to either side of the gauge.

If the bubble is out of the acceptable range of the beam angle gauge, adjust it using bolt A.

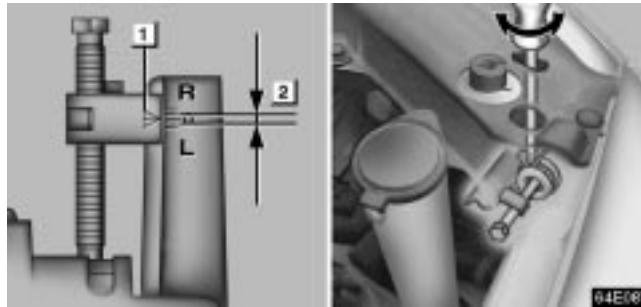

► **1** Arrow **2** Acceptable range

Horizontal movement gauge: The arrow should not deviate by more than one mark to either side of the gauge.

If the arrow is out of the acceptable range of the beam angle gauge, adjust it using bolt B.

If the error is over the value specified above, take the vehicle to your Lexus dealer to adjust the headlight aim.



CHECKING THE HEADLIGHT AIM (Vehicles with discharge headlight)

ELECTRICAL COMPONENTS

- **1** *Beam angle gauge (horizontal movement)*
- 2** *Adjusting bolt A*
- 3** *Adjusting bolt B*


Adjusting the vertical aiming

Before checking the headlight aim:

1. Be sure that the body around the headlight is not deformed.
2. Park the vehicle on a level spot.
3. The driver gets into the driver's seat and puts the vehicle in a state readying for a driving (with a full tank).
4. Bounce the vehicle several times.



1. Turn the adjusting bolt A in either direction.

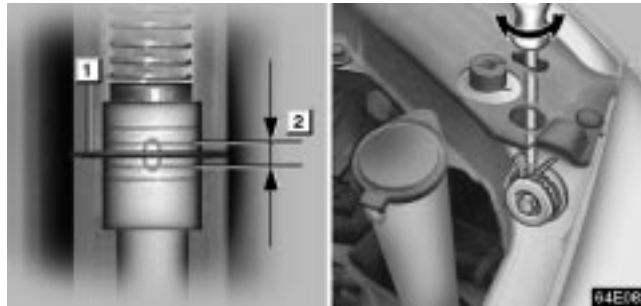

► **1 Mark 2 Acceptable range**

2. Look at the beam angle gauge (horizontal movement). The mark should not deviate by more than one mark to either side of the gauge.

If the mark is out of the acceptable range of the gauge, adjust it using bolt B.

After adjusting the headlight in the horizontal direction, check that the light has been shifted from the adjusted position in the vertical direction.

If the error is over the value specified above, take the vehicle to your Lexus dealer to adjust the headlight aim.

REPLACING LIGHT BULBS

The illustration on the following pages show the locations of light bulbs. If it is necessary to replace a bulb, take your vehicle to your Lexus dealer as soon as possible. Use bulbs with the bulb numbers and wattage ratings given in the table.



CAUTION

Halogen bulbs have pressurized gas inside and require special handling. They can burst or shatter if scratched or dropped. Hold a bulb only by its plastic or metal case. Do not touch the glass part of a bulb with bare hands.

ELECTRICAL COMPONENTS

NOTICE

Only use a bulb of the listed type.


The inside of the lens of exterior lights such as headlights may temporarily fog up when the lens becomes wet in the rain or in a car wash. This is not a problem because the fogging is caused by the temperature difference between the outside and inside of the lens, just like the windshield fogged up in the rain. However, if there is a large drop of water on the inside of the lens, or if there is water pooled inside the light, contact your Lexus dealer.

LIGHT LOCATION



ELECTRICAL COMPONENTS


Light Bulbs type	Bulb No.	W	T
1 Headlights (high beam) A	9005	60	
2 Headlights (low beam) Discharge bulb B	D2R	35	
Halogen bulb C	H7	55	
3 Front turn signal/parking E lights	1157NA	27/8	
4 Fog lights D	H3	55	

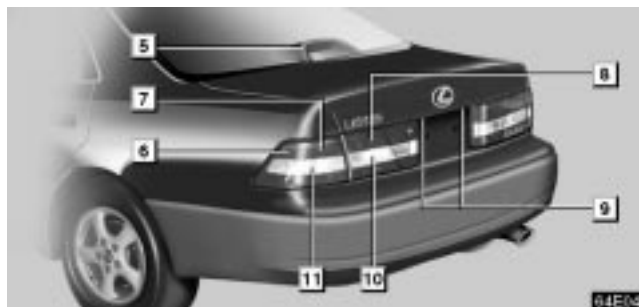

ELECTRICAL COMPONENTS

Light Bulbs type	Bulb No.	W	T	11	Rear turn signal lights F	—	21
5 High mounted stoplight F	—	21					
6 Rear side marker lights F	—	5					
7 Stop/tail lights F	—	21/5					
8 Tail lights F	—	5					
9 License plate lights F	—	5					
10 Back-up lights F	—	18					

ELECTRICAL COMPONENTS

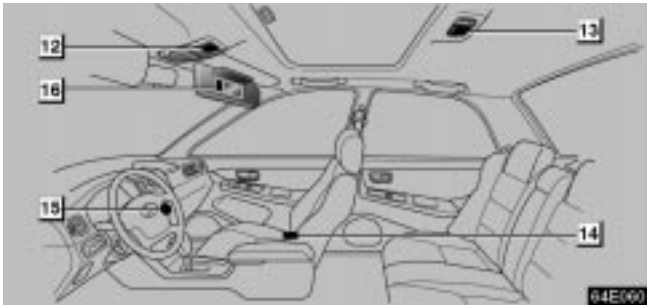

Light Bulbs		Bulb No.	W	T				
type								
12	Personal light G	—	10		13	Interior light G	—	8
					14	Door courtesy lights F	—	3.8
					15	Glove box light F	—	1.2
					16	Vanity lights G	—	1.5

ELECTRICAL COMPONENTS



type	Light Bulbs	Bulb No.	W	T

ELECTRICAL COMPONENTS

17	Trunk light G	194	2.8
		A: HB3	halogen bulbs
		B: D2R	discharge bulbs
		C: H7	halogen bulbs
		D: H3	halogen bulbs
		E: Single	end bulbs
		F: Wedge	base bulbs
		G: Double	end bulbs

SECTION 6 – 5

SERVICE PROCEDURES AND SPECIFICATIONS

Body

Specifications	477
Protecting your vehicle from corrosion	478
Washing and waxing	480
Cleaning the interior	482

SPECIFICATIONS

– DIMENSIONS AND WEIGHT

Overall length	4830 mm (190.2 in.)
Overall width	1790 mm (70.5 in.)
Overall height	1395 mm (54.9 in.)*
Wheelbase	2670 mm (105.1 in.)
Tread – Front	1545 mm (60.8 in.)
– Rear	1520 mm (59.8 in.)
Vehicle capacity weight (occupants + luggage)	410 kg (900 lb.)

*: Unladen vehicle

– FUEL TANK

Capacity	70 L (18.5 gal., 15.4 Imp. gal.)
----------	----------------------------------

BODY

PROTECTING YOUR VEHICLE FROM CORROSION

Proper care of your Lexus can help ensure long-term corrosion prevention.

The most common causes of corrosion to your vehicle are:

- The accumulation of road salt, dirt and moisture in hard-to-reach areas under the vehicle.
- Chipping of paint or undercoating caused by minor accidents or by stones and gravel.

The following conditions will cause or accelerate corrosion of your vehicle, so it is important to keep your vehicle, particularly the underside, as clean as possible and to repair any damage to paint or protective coatings as soon as possible.

- The presence of road salt or dust control chemicals, salt in the air near the sea coast, industrial air pollution.
- High humidity, especially at temperatures just above freezing point.
- Certain parts of your vehicle are wet or damp for an extended period of time, even though other parts of the vehicle are dry.
- Components of the vehicle which are prevented from quick-drying due to lack of proper ventilation are

exposed to high temperature.

To help prevent corrosion on your Lexus, follow these guidelines:

Keep your vehicle clean by regular washing. In addition, observe the following points.

- If you drive on salted roads in the winter or if you live near the ocean, you should hose off the undercarriage at least once a month to minimize corrosion.
- High pressure water or steam is effective for cleaning the vehicle's underside and wheel housings. Pay particular attention to these areas as it is difficult to see all the mud and dirt. It will do more harm than good to simply wet the mud and debris without removing them. The lower edge of doors, rocker panels and frame members have drain holes which should not be allowed to clog with dirt as trapped water in these areas can cause corrosion.
- Wash the underside of the vehicle thoroughly when winter is over.

See "Washing and waxing" on page 480 for more tips.

Check the condition of your vehicle's paint and trim.

If you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through the bare metal, have a qualified body shop make the repair.

Check the interior of your vehicle. Water and dirt can accumulate under the floor mats and could cause corrosion. Occasionally check under the mats to make sure the area is dry. Be particularly careful when transporting chemicals, cleansers, fertilizers, salt, etc. These should be transported in proper containers. If a spill or leak should occur, immediately clean and dry the area.

Keep your vehicle in a well ventilated garage or a roofed place. Do not park your vehicle in a damp, poorly ventilated garage. If you wash your vehicle in the garage, or if you drive it in covered with water or snow, your garage may be so damp it will cause corrosion. Even if your garage is heated, a wet vehicle can corrode if the ventilation is poor.

BODY

WASHING AND WAXING

Washing your Lexus

Keep your vehicle clean by regular washing.

The following cases may cause weakness to the paint or corrosion to the body and parts. Wash your vehicle as soon as possible.

- When driving in a coastal area
- When driving on a road sprinkled with antifreeze
- When having coal tar, tree sap, bird droppings and carcass of an insect
- When driving in the areas where there is a lot of smoke, soot, dust, iron dust and chemical substance
- When the vehicle becomes remarkably dirty with dust and mud

Hand-washing your Lexus

Work in the shade and wait until the vehicle body is not hot to the touch.

1. Rinse off loose dirt with a hose. Remove any mud or road salt from the underside of the vehicle or in the wheel wells.
2. Wash with a mild car-wash soap, mixed according to the manufacturer's instructions. Use a soft cotton mitt and keep it wet by dipping it frequently into the wash water. Do not rub hard – let the soap and water remove the dirt.

Plastic wheel ornaments: The plastic wheel ornaments are damaged easily by organic substances. If any organic substances splashes an ornament, be sure to wash it off with water and check if the ornament is damaged.



CAUTION

Do not attach the heavily damaged plastic wheel ornament. It may fly off the wheel and cause accidents while the vehicle is moving.

Aluminum wheels: Use only a mild soap or neutral detergent.

Urethane bumpers and side moldings: Wash carefully. Do not scrub with abrasive cleaners. The bumper and side molding faces are soft.

Road tar: Remove with turpentine or cleaners that are marked safe for painted surfaces.

NOTICE

Do not use organic substances (gasoline, kerosene, benzine or strong solvents), which may be toxic or cause damage.

3. Rinse thoroughly – dried soap can cause streaking. In hot weather you may need to rinse each section right after you wash it.

4. To prevent water spots, dry the vehicle using a clean soft cotton towel. Do not rub or press hard – you might scratch the paint.

Automatic car wash

Your vehicle may be washed in an automatic car wash, but remember that the paint can be scratched by some type of brushes, unfiltered washing water, or the washing process itself. Scratching reduces paint durability and gloss, especially on darker colors. The manager of the car wash should be able to advise you whether the process is safe for the paint on your vehicle.

BODY

Waxing your Lexus

Polishing and waxing is recommended to maintain the original beauty of your Lexus' finish.

Once a month or if the vehicle surface does not repel water well, apply wax.

1. Always wash and dry the vehicle before you begin waxing, even if you are using a combined cleaner and wax.
2. Use a good quality polish and wax. If the finish has become extremely weathered, use a car-cleaning polish, followed by a separate wax. Carefully follow the manufacturer's instructions and precautions. Be sure to polish and wax the chrome trim as well as the paint.
3. Wax the vehicle again when water does not bead but remains on the surface in large patches.

CLEANING THE INTERIOR



CAUTION

- Be careful not to splash water or spill liquid on the floor. This may prevent the side airbags from activating correctly, resulting in serious injury.
- Do not wash the vehicle floor with water, or allow water to get onto the floor when cleaning the vehicle interior or exterior. Water may get into audio components or other electrical components above or under the floor carpet (or mat) and cause a malfunction; and it may cause body corrosion.

Leather Interior

The selected leather is used in your Lexus. Due to a leather product, some parts of leather may be rough, uneven or scratched originally.

To keep good appearance, we recommend you to clean it periodically twice a year.

Remove dirt on the leather in the following ways:

1. Wipe it off lightly using a soft cloth (e.g. gauze) dampened with 5% solution of neutral detergent for wool.
2. Wring water from a clean cloth and thoroughly wipe off all traces of detergent with it.
3. Wipe off the surface of the leather with a dry soft cloth. Allow the leather to dry in a ventilated shaded area. Excess of wet may cause the hardening or shrinking of the leather.

NOTICE

BODY

- *Dirt or sand adhered to the leather may damage the treated surface and cause it to wear earlier. Remove dirt or sand using a vacuum cleaner.*
- *If a stain should fail to come out with a neutral detergent, apply a cleaner that does not contain an organic solvent.*
- *Never use organic substances such as benzine, alcohol or gasoline, or alkaline or acid solutions for cleaning the leather as these could cause discoloring.*
- *Use of a nylon brush or synthetic fiber cloth, etc. may scratch the fine grained surface of the leather.*
- *Mildew may develop on soiled leather upholstery. Be especially careful to avoid oil spots. Try to keep your upholstery always clean.*
- *Long exposure to direct sunlight may cause the leather surface to harden and shrink. Keep your vehicle in a shaded area, especially in the summer.*
- *The interior of your vehicle is apt to heat up on hot summer days, so avoid placing on the upholstery items made of vinyl or plastic or containing wax as these tend to stick to leather when warm.*
- *Improper cleaning of the leather upholstery could result in discoloration or staining.*

Synthetic Leather Areas (Dash)

The synthetic leather areas may be easily cleaned with a mild soap or detergent and water.

First vacuum over the upholstery to remove loose dirt. Then, using a sponge or soft cloth, apply the soap solution to the synthetic leather. After allowing it to soak in for a few minutes to loosen the dirt, remove the dirt and wipe off the soap with a clean damp cloth. If all the dirt does not come off, repeat the procedure. Commercial foaming-type cleaners are also available which work well. Follow the manufacturer's instructions.

NOTICE

Do not use solvent, thinner, gasoline or window cleaner on the interior.

Carpets, Windows and Seat Belts

Begin by vacuuming thoroughly to remove as much dirt as possible. Several types of foam cleaners are available; some are in aerosol cans and others are powders or liquids which you mix with water to produce a foam. To shampoo the carpets, use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water – the best results are obtained by keeping the carpet as dry as possible. Read the shampoo instructions and follow them closely.

The seat belts may be cleaned with mild soap and

water or with lukewarm water.

Use a cloth or sponge. As you are cleaning, check the belts for excessive wear, fraying or cuts.

NOTICE

- *Use a good foam-type shampoo to clean the carpets.*
- *Do not use dye or bleach on the belts – it may weaken them.*
- *Do not use the belts until they become dry.*
- *The windows may be cleaned with any household window cleaner.*
- *When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires or connectors.*

Air Conditioning Control Panel, Car Audio, Instrument Panel, Console Panel, and Switches

Use a soft damp cloth for cleaning.

Soak a clean soft cloth in water or lukewarm water then lightly wipe off any dirt.

NOTICE

- *Do not use organic substances (solvents, kerosene, alcohol, gasoline, etc.) or alkaline or acidic solutions. These chemicals can cause discoloring, staining or peeling of the surface.*
- *If you use cleaners or polishing agents, make sure their ingredients do not include the substances mentioned above.*
- *If you use a liquid car freshener, do not spill the liquid onto the vehicle's interior surfaces. It may contain the ingredients mentioned above. Immediately clean any spill using the method mentioned above.*

If you have any questions about the cleaning of your Lexus, your local Lexus dealer will be pleased to answer them.

SECTION 7

REPORTING SAFETY DEFECTS FOR U.S. OWNERS

[Reporting safety defects for U.S. owners](#) 486

1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

REPORTING SAFETY DEFECTS FOR U.S. OWNERS

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-800-25-LEXUS).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Toyota Motor Sales, U.S.A., Inc.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at

GAS STATION INFORMATION

- **Fuel selection:**

Select Octane Rating 87 (Research Octane Number 91) or higher. For improved vehicle performance, the use of premium unleaded gasoline with an Octane Rating 91 (Research Octane Number 96) or higher is recommended.

- **Fuel tank capacity:**

70 L (18.5 gal., 15.4 Imp. gal.)

- **Engine oil:**

API SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil.

Recommended oil viscosity – SAE 5W-30 if normal temperatures are below 38°C (100°F)

Oil capacity: L (qt., Imp. qt.)

Drain and refill

with filter 4.7 (5.0, 4.1)

without filter 4.5 (4.8, 4.0)

See page 410 for detailed information.

- **Engine coolant:**

Capacity: 8.8 L (9.3 qt., 7.7 Imp. qt.)

Coolant type – "Toyota Long Life Coolant" or equivalent

With ethylene-glycol type coolant for a proper corrosion protection of aluminum components

Do not use alcohol type antifreeze or plain water alone.

For checking the engine coolant, see page 415.

- **Automatic transaxle:**

Fluid type – Automatic transmission fluid Type T-IV

See page 421 for detailed information.

- **Tire information:**

See pages 431 through 440 for detailed information.

- **Tire pressure:**

Tire size: P205/65R15 92V or P205/60R16 91V

		cold tires
		kPa (kgf/cm ² or bar, psi)
	Vehicle load up to 4 occupants	Vehicle loaded up to vehicle capacity weight
Front tires	180 (1.8, 26)	220 (2.2, 32)
Rear tires	180 (1.8, 26)	220 (2.2, 32)

When driving under the above vehicle load conditions at sustained high speeds above 160 km/h (100 mph), in countries where such speeds are permitted by law, inflate the front and rear tires 220 kPa (2.2 kgf/cm² or bar, 32 psi), but never exceed the maximum cold tire pressure molded on the tire sidewall.