

# Contents


The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System (with navigation system)	
Using the automatic mode .....	44
Adjusting the temperature .....	44
To turn off the airflow .....	44
Air Conditioning System (without navigation system)	
Using the automatic mode .....	54
Adjusting the temperature .....	54
To turn off the airflow .....	54
Audio System (with navigation system)	
Basic operation .....	40
Radio .....	40
DVD player/CD player .....	41
Operating an iPod .....	43
Remote control (steering wheel switches) .....	43
Audio System (without navigation system)	
Basic operation .....	51
Radio .....	52
CD player .....	52
Operating an iPod .....	53
Remote control (steering wheel audio switches) .....	53
Automatic Transmission .....	14
Cruise Control .....	18
Door Locks .....	60
Dynamic Radar Cruise Control .....	19
Eco Driving Indicator .....	17
Engine (ignition) Switch .....	13
Fog Lights .....	21
Fuel Tank Cap .....	62
Hands-free System For Cellular Phone (with navigation system)	
Bluetooth® phone pairing .....	33
Phonebook transfer .....	34
Registering a voice tag .....	35
Registering a speed dial .....	36
Calling by name .....	37
Calling by speed dial .....	38
Receiving a call .....	39

Hands-free System For Cellular Phone (without navigation system)	
Bluetooth® phone pairing .....	45
Calling by number .....	46
Calling by name.....	46
Calling by speed dial.....	47
Phonebook transfer .....	48
Changing the registered name.....	49
Registering a speed dial.....	50
Head Restraints .....	12
Headlights .....	20
Instrument Panel Light Control.....	23
Intuitive Parking Assist.....	15
Keys .....	8
Lexus Enform with Safety Connect.....	58
Moon Roof.....	63
Multi-information Display.....	16
Navigation System	
Register home.....	27
Destination input — Search by address .....	28
Destination input — Search points of interest by name.....	30
Destination input — Search points of interest by category.....	31
Destination input — Search points of interest by telephone number .....	32
Power Windows .....	61
Rear Window and Outside Rear View Mirror Defoggers .....	23
Safety Connect .....	56
Seat Belts .....	12
Seats .....	11
Smart Access System with Push-button Start .....	9
Speech Command System	
Basic operation.....	55
Theft Deterrent System .....	10
Touch Screen (with navigation system)	
Display .....	25
Screen scroll operation.....	26
Setting a route.....	26
Trunk.....	61
Turn Signal Lever .....	15
Windshield Wipers and Washer .....	22

# Overview

# Instrument Panel

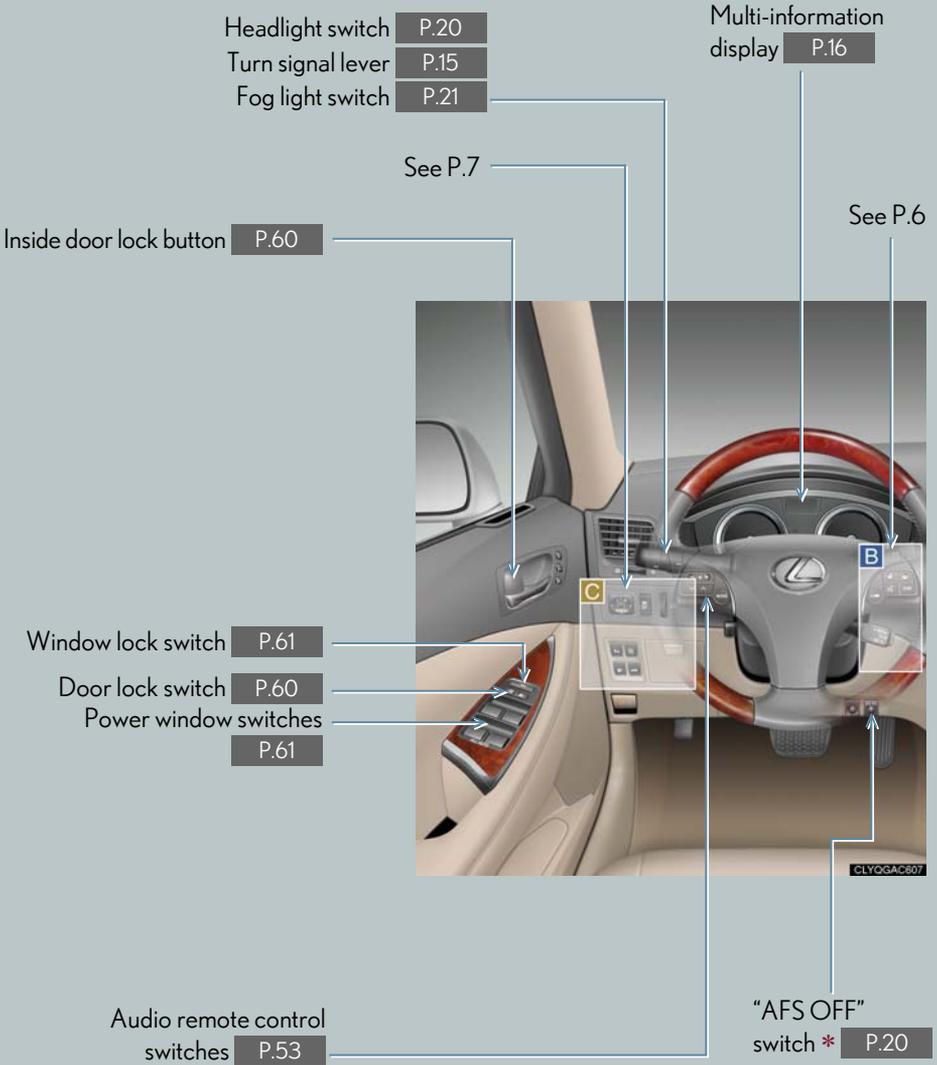

Windshield wipers and washer switch P.22

Engine (ignition) switch P.13



See P.5

Trunk opener main switch P.61

Automatic transmission shift lever P.14

\* : If equipped

# Overview

# Instrument Panel

**A**

▶ Without navigation system

Air conditioning system P.54

Audio system P.51



Security indicator P.10

Rear window and outside rear view mirror defoggers P.23

▶ With navigation system

Navigation system P.27

Air conditioning system P.44

Audio system P.40



Security indicator P.10

Rear window and outside rear view mirror defoggers P.23

**B**

Distance switch \* P.18



Telephone switch \* P.33

"DISP" switch P.16

Talk switch \* P.55

Cruise control switch \* P.18

Dynamic radar cruise control switch \* P.19

\* : If equipped

# Overview

# Instrument Panel

## C ▶ Type A



Instrument panel light control P.23

Intuitive parking assist switch \* P.15

Trunk opener P.61

Fuel filler door opener P.62

## ▶ Type B



Instrument panel light control P.23

Trunk opener P.61

Fuel filler door opener P.62

\* : If equipped

## Keys

### ■ Electronic key



Smart access system with push-button start  
(→P.9, 13)

### ■ Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box
- Locks and unlocks the armrest door

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull.

### ■ Wireless remote control



- 1 Locks the doors
- 2 Unlocks the doors
- 3 Opens the trunk
- 4 Sounds the alarm

Use the alarm to attract attention to the vehicle in order to help deter break-ins.  
(To stop the alarm, push any button on the wireless remote control.)

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 13.

### ■ Entering the vehicle



To unlock the vehicle, simply grasp any of the door handles.

### ■ Exiting the vehicle



To lock the vehicle, press the lock button on any of the door handles.

To close the windows and the moon roof (standard type), press and hold the lock button.

### ■ Opening the trunk



To open the trunk, press and hold the trunk release button.

For details on what to do when the electronic key battery becomes discharged, see page 66.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### ■ Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### ■ Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

**To set the alarm:** lock all the doors from outside the vehicle. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** start the engine, or unlock the doors or trunk using the entry function or wireless remote control.

### ■ Steering lock




The steering wheel locks when the "ENGINE START STOP" switch is in OFF.

To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch.


## Seats

### ■ Adjusting seat position

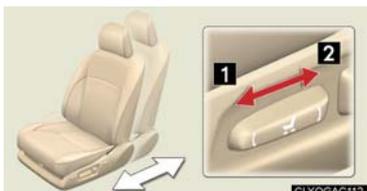

- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle

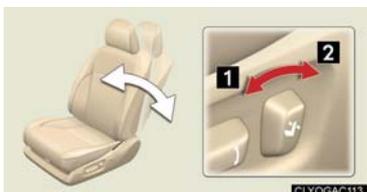

- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer


### ■ Adjusting the seat cushion length (if equipped)



- 1 Longer
- 2 Shorter

## Head Restraints

### Height adjustment

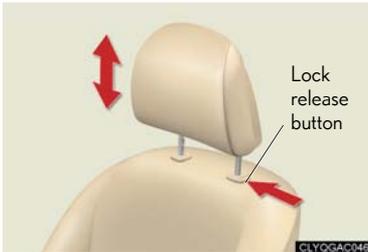

**To raise:** pull the head restraint upward.

**To lower:** push the head restraint down while pressing the lock release button.

## Seat Belts


### Adjusting shoulder belt height (front seats only)



**To raise:** pull the anchor upward.

**To lower:** depress the button and push the anchor down.

### Seat belt comfort guides (outside rear seats only)

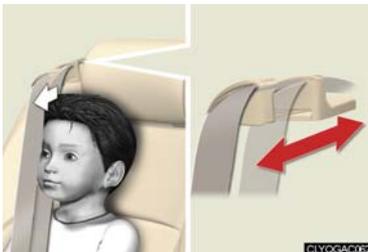


If the shoulder belt sits close to the neck, slide the comfort guide forward.

## Engine (ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.  
(The mechanical key cannot be used to start the engine.)

### Starting the engine

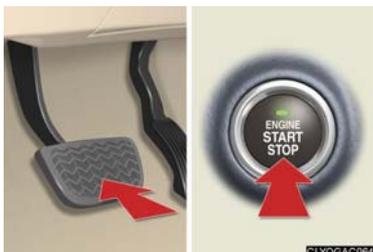

Make sure the parking brake is engaged and the shift lever is in P.


- 1] Depress the brake pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2] Press the “ENGINE START STOP” switch.

### Stopping the engine

- 1] Engage the parking brake and shift the shift lever to P.
- 2] Press the “ENGINE START STOP” switch.

### Changing power modes

To change power modes without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The modes can be changed in the following order:

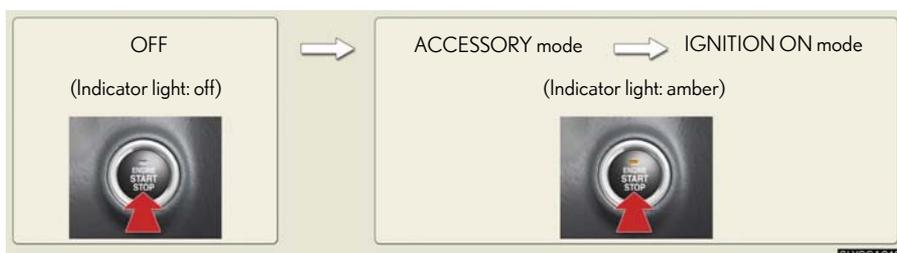

## Automatic Transmission

### Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

← The vehicle can only be shifted out of P when the “ENGINE START STOP” switch is in IGNITION ON mode and the brake pedal is depressed.

### S mode

S mode allows the driver to select the shift range manually based on driving conditions.




1 Shift the shift lever to S.



2 To upshift: shift the shift lever toward “+”.  
To downshift: shift the shift lever toward “-”.

The selected shift range is displayed on the instrument cluster.

## Turn Signal Lever

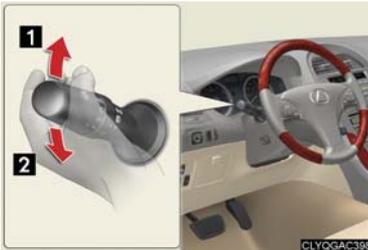

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and hold.

## Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.


### Turning the system on and off



Press the switch.

When ON, an indicator on the switch comes on to inform the driver that the function is operational.

### Screen display

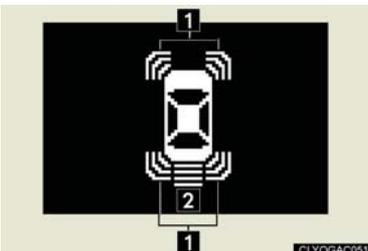

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors

## Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.


### Display information

---



- Trip information
  - Outside temperature
  - Driving range
  - Average fuel consumption
  - Average fuel consumption after refueling
  - Current fuel consumption
  - Eco Driving Indicator Zone Display
  - Eco Driving Indicator Light customization
  - Average vehicle speed
  - Elapsed time
- Intuitive parking assist information (if equipped)
- Dynamic radar cruise control settings (if equipped)
- Warning messages


## ■ Changing the display of trip information

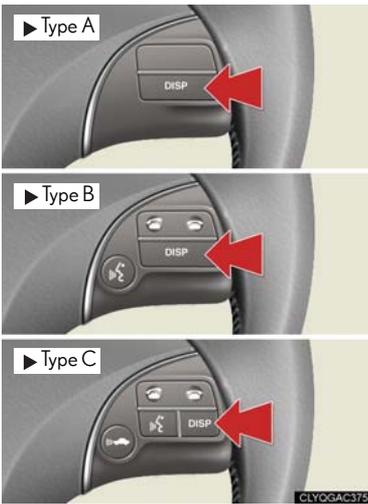

Trip information items can be switched by pressing the “DISP” switch.

- When using the intuitive parking assist system or dynamic radar cruise control, the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Eco Driving Indicator

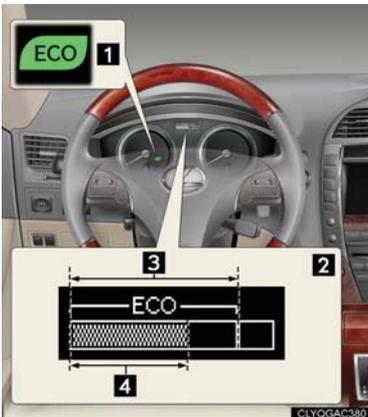

- 1 Eco Driving Indicator Light**  
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.
- 2 Eco Driving Indicator Zone Display**  
Suggests Zone of Eco driving with current Eco driving ratio based on acceleration.
- 3 Zone of Eco driving**
- 4 Eco driving ratio based on acceleration**  
Vehicle to exceed Zone of Eco driving, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

## Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.


Use for highway driving or when traveling at a constant speed for long periods of time.

### Setting the speed



- 1 Press the "ON-OFF" button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### Canceling

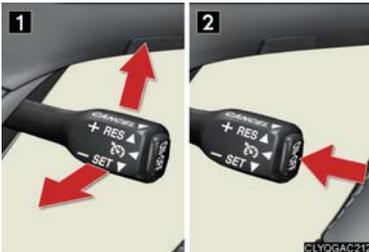

- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

### Adjusting the speed setting



- To **increase speed**: push the lever up.  
To **decrease speed**: push the lever down.

Release the lever when the desired speed is reached.

## Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.

### Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

### Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Following distance can be adjusted using the vehicle-to-vehicle distance control switch.

### Conventional (constant speed) cruise control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

### Canceling



To temporarily cancel the dynamic radar cruise control, pull the lever.

To turn the system off, press the "ON-OFF" button.

### Adjusting the speed setting






**To increase speed:** push the lever up.

**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## Headlights

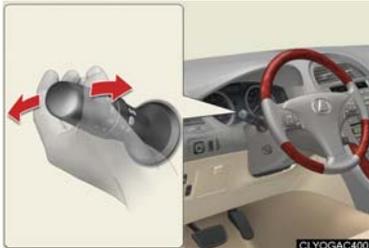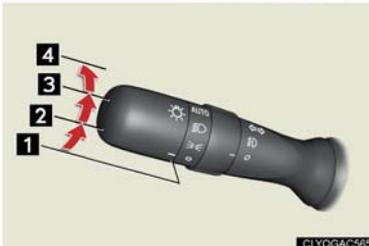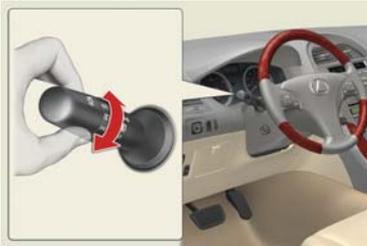

- 1 The daytime running lights turn on.
- 2 The instrument panel, the side marker, parking, tail, license plate and daytime running lights turn on.
- 3 The headlights and all lights listed above (except daytime running lights) turn on.
- 4 The headlights, parking lights and daytime running lights turn on/off automatically in accordance with ambient light levels.

To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

### ■ AFS (Adaptive Front-lighting System) (if equipped)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.




To cancel the system, press the "AFS OFF" switch.

- 1 OFF
- 2 ON

The indicator comes on when the system is off.

## Fog Lights

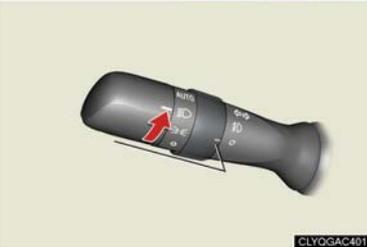

The fog lights can be used only when the headlights (low beam) are on.

## Windshield Wipers and Washer



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Single wipe



CLYOGAC402

Automatic operation: Sensitivity can be adjusted by turning the band.



CLYOGAC333

To spray washer fluid, pull the lever. The wipers will operate automatically.



CLYOGAC340

## Rear Window and Outside Rear View Mirror Defoggers

### ► Without navigation system



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

### ► With navigation system



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 to 60 minutes. The operation time changes according to the ambient temperature and vehicle speed.

## Instrument Panel Light Control



**1** Brighter


**2** Darker

When the headlight switch is turned to ON, the brightness will be reduced slightly unless the control dial is turned fully on.

## Touch Screen (with navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the "Navigation System Owner's Manual".


The button positions, shapes and screen may slightly vary depending on the type of the touch screen.

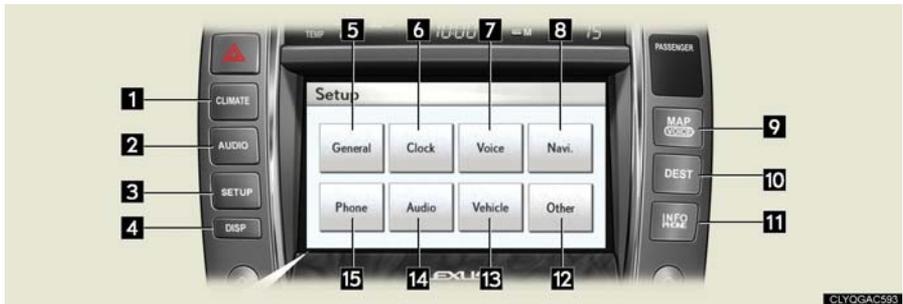

Press the button to display the screen. The "Setup" screen shown in the above illustration is displayed when the "SET UP" button is pressed.

- 1 "CLIMATE": Air conditioning operation screen
- 2 "AUDIO": Audio control screen
- 3 "SET UP": Setup screen
- 4 "DISP": Adjust picture quality
- 5 "General": General settings screen
- 6 "Clock": Clock settings screen
- 7 "Voice": Voice settings screen
- 8 "Navi.": Navigation settings screen
- 9 "MAP VOICE": Vehicle's current position
- 10 "DEST": Destination screen
- 11 "INFO PHONE": Information screen
- 12 "Other": Other settings screen
- 13 "Vehicle": Vehicle settings screen
- 14 "Audio": Audio settings screen
- 15 "Phone": Phone settings screen


## Display

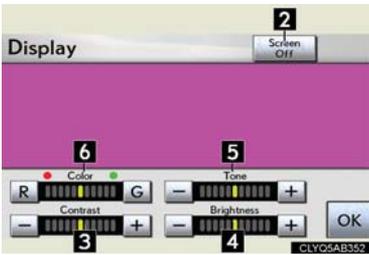

Push the  button on the side of the touch screen to show the “Display” screen.

- 1 Displays the screen in “Day Mode” with the headlight switch on
- 2 Turns the screen off
- 3 Adjust contrast
- 4 Adjust brightness
- 5 Adjust color tone
- 6 Adjust color

## Screen scroll operation

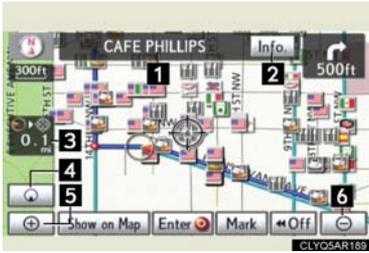

When any point on the map is touched, that point moves to the center of the screen.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

## Setting a route

While route guidance is operating, you can change the route using the following method.



Touch **Route**.

The following settings can be accessed





- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

## Navigation System (If Equipped)


### Register home

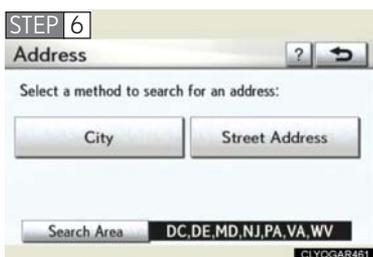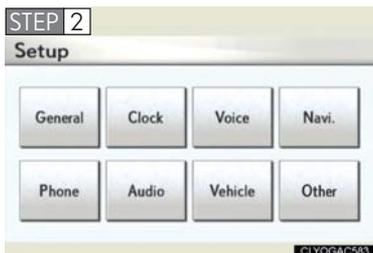

- 1 Push the **SETUP** button on the side of the touch screen. (→P.24)
- 2 Touch **Navi.**
- 3 Touch **Home**
- 4 Touch **Set Home**
- 5 Touch **Address**
- 6 Touch **City**
- 7 Input a city name and touch **OK**
- 8 Touch the button of the desired city name from the displayed list.
- 9 Input the street name and touch **OK**
- 10 When the desired street name is found, touch the corresponding button.
- 11 Input a house number and touch **OK**
- 12 Touch **Enter**
- 13 Touch **OK**



## Destination input — Search by address


### ► Select by city name

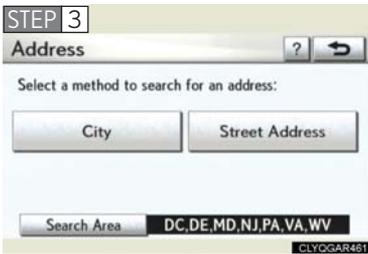


- 1 Push the  button on the side of the touch screen. (→P.24)
- 2 Touch .
- 3 Touch .
- 4 Input a city name and touch .
- 5 Touch the button of the desired city name from the displayed list.
- 6 Input the street name and touch .
- 7 When the desired street name is found, touch the corresponding button.
- 8 Input a house number and touch .
- 9 Touch .
- 10 Touch .

## ► Select by street address

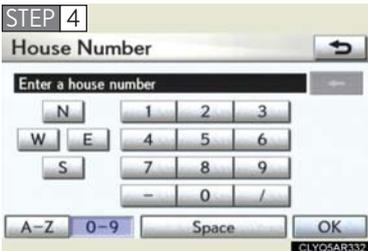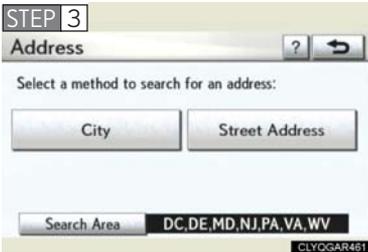

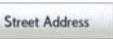
- 1 Push the  button on the side of the touch screen. (→P.24)
- 2 Touch .
- 3 Touch .
- 4 Input a house number and touch .
- 5 Input the street name and touch .
- 6 When the desired street name is found, touch the corresponding button.
- 7 Input a city name and touch .
- 8 Touch the button of the desired city name from the displayed list.
- 9 Touch .
- 10 Touch .

## Destination input — Search points of interest by name

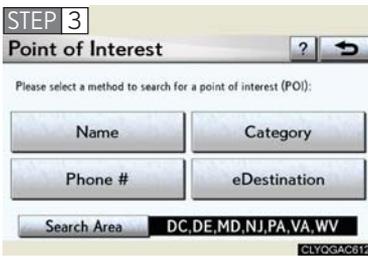


- 1 Push the  button on the side of the touch screen. (→P.24)
- 2 Touch .
- 3 Touch .
- 4 Input the name of the point of interest and touch .
- 5 Touch the button of the desired destination.
- 6 Touch .
- 7 Touch .


## Destination input — Search points of interest by category

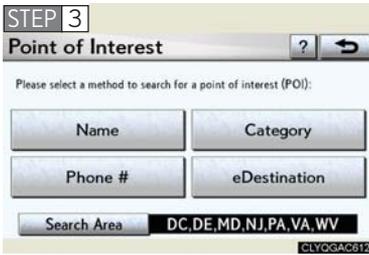

- 1 Push the  button on the side of the touch screen. (→P.24)
- 2 Touch .
- 3 Touch .
- 4 Touch .
- 5 Touch the button of the desired destination and set the search point.
- 6 Touch the desired point of interest category.
- 7 Touch the button of the desired item.
- 8 Touch .
- 9 Touch .

## Destination input — Search points of interest by telephone number

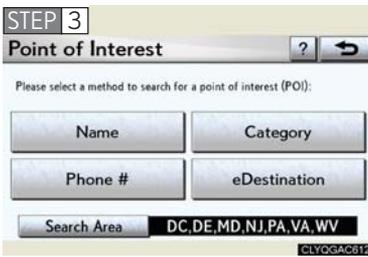

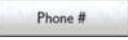
- 1 Push the  button on the side of the touch screen. (→P.24)
- 2 Touch .
- 3 Touch .
- 4 Input a telephone number and touch .
- 5 Touch .
- 6 Touch .

## Hands-free System For Cellular Phone (with navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.


#### STEP 2 Setup

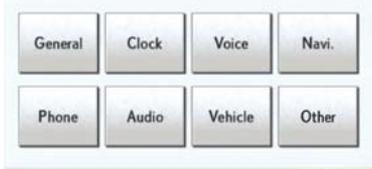

To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Push the **SETUP** button on the side of the touch screen. (→P.24)
- 2 Touch **Phone**.
- 3 Touch **Manage Phone**.
- 4 Touch **(add new)** to display the screen for connecting Bluetooth.
- 5 Enter the passcode displayed on the screen into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 6 When the connection is completed, **Bluetooth connection successful.** will appear and push the **SETUP** button.



## Phonebook transfer

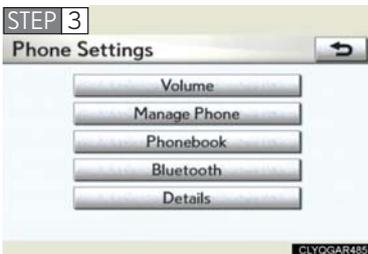

- 1 Push the **SETUP** button on the side of the touch screen. (→P.24)
- 2 Touch **Phone**.
- 3 Touch **Phonebook**.
- 4 Touch **Manage Contacts**.
- 5 Touch **Transfer Contacts**.
- 6 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.



Phonebook transfer may not be possible depending on phone model.

## ■ Registering a voice tag

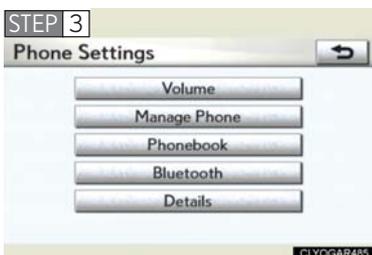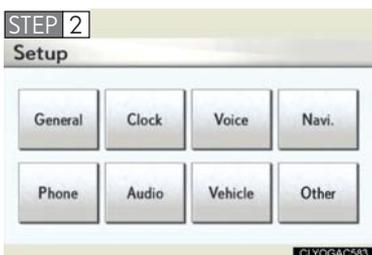

- 1 Push the **SETUP** button on the side of the touch screen. (→P.24)
- 2 Touch **Phone**.
- 3 Touch **Phonebook**.
- 4 Touch **Manage Voice Tags**.
- 5 Touch **New Voice Tag**.
- 6 Touch the data you want to register.
- 7 Touch **REC**, and record a voice tag.
- 8 Touch **OK**.

## ■ Registering a speed dial

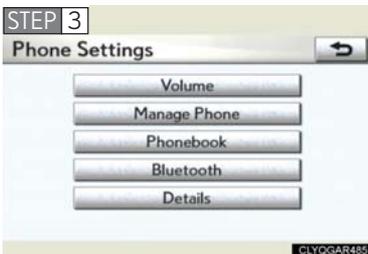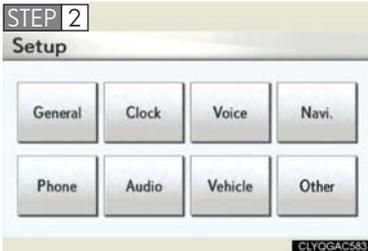

- 1 Push the **SETUP** button on the side of the touch screen. (→P.24)
- 2 Touch **Phone**.
- 3 Touch **Phonebook**.
- 4 Touch **Manage Speed Dials**.
- 5 Touch **New Speed Dial**.
- 6 Touch the data you want to register.
- 7 Touch the desired phone number.
- 8 Touch the button you want to register in.
- 9 The registration completion message is displayed on the screen.

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)




- 1 Press .
- 2 Follow the voice guidance and say "Phone".
- 3 Follow the voice guidance and say "Dial by name".
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Calling by speed dial

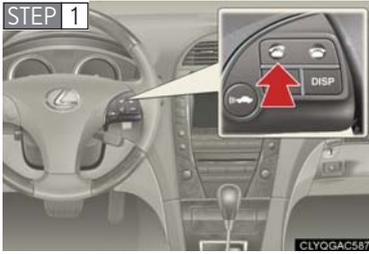


1 Press .

2 Touch .

3 Touch the desired number to call.



## Receiving a call

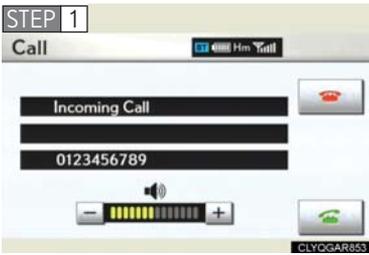

1 When a call is received, this screen is displayed with a sound.

2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

## Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

### Basic operation



1 Displays the audio control screen

2 Sound quality modes

3 Audio sources

#### ► Type A

AM•FM: AM radio/FM radio

SAT: Satellite radio

DISC: DVD player (if equipped)

CD: CD player (if equipped)

AUX: Auxiliary audio device/USB memory (if equipped)/iPod (if equipped)/Bluetooth® audio player

#### ► Type B

AM: AM radio

FM: FM radio

DISC: DVD player

AUX: Auxiliary audio device/USB memory (if equipped)/iPod (if equipped)

4 Power/Volume

### Radio



1 Displays the audio control screen

2 Station presets

3 Scanning radio stations

4 Radio tuner

5 Station select

6 Seek

## ■ Entering station presets

- 1 Touch the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

## ■ DVD player/CD player

---

### ■ Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Track select/rewind/fast-forward
- 8 Eject

### ■ Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

## ■ Playing a DVD (DVD player only)



- 1 Displays the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Chapter select/rewind/fast-forward
- 7 Eject

## ■ Loading a disc

- 1 Press the “LOAD” button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

## ■ Loading multiple discs

- 1 Press and hold the “LOAD” button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the “LOAD” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

## ■ Operating an iPod (if equipped)

---




- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random playback
- 6 Song list
- 7 Song select
- 8 Song select/rewind/fast-forward

## ■ Remote control (steering wheel switches)

---

The audio system can be operated using the remote control located on the steering wheel.

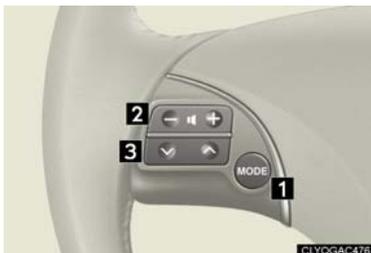

- 1 Power on/change mode: press  
Power off: press and hold
- 2 Volume
- 3 Radio mode: radio tuner  
DVD mode: track/chapter/disc select  
CD mode: disc/track/file (MP3/WMA) select  
iPod mode (if equipped): song select

## Air Conditioning System (with navigation system)



- |   |   |
|---|---|
| <b>1</b> Passenger side temperature display       | <b>8</b> "OFF" button   |
| <b>2</b> Dual mode button                         | <b>9</b> Automatic mode button                                |
| <b>3</b> Air outlet display                       | <b>10</b> Driver side temperature control                     |
| <b>4</b> Fan speed display                        | <b>11</b> Cooling and dehumidification function on/off button |
| <b>5</b> Passenger side temperature control       | <b>12</b> Air conditioning operation screen display button    |
| <b>6</b> Outside air/recirculated air mode button | <b>13</b> Driver side temperature display                     |
| <b>7</b> Windshield defogger                      |   |

### Using the automatic mode

Press **9** to turn on the airflow and **10** to adjust the temperature.

### Adjusting the temperature

**To simultaneously adjust the driver's side and passenger's side temperature settings**  
Touch **2** to turn the "DUAL" indicator off (**DUAL**) and then press **10**.

**To individually adjust the driver's side and passenger's side temperature settings**  
Touch **2** or press **5** to turn the "DUAL" indicator on (**DUAL**) and then press **10** or **5**.

### To turn off the airflow

Press **8**.

## Hands-free System For Cellular Phone (without navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name\*.

\*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Calling by speed dial




1 Press .

2 Press the desired preset button (1-6).

3 Press .



## ■ Phonebook transfer

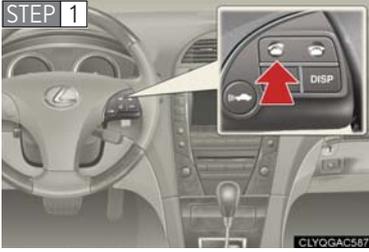

- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Changing the registered name




- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Registering a speed dial

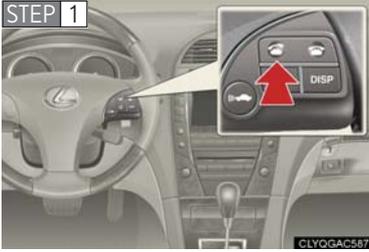

- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button (1-6).
- 8 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

## Audio System (without navigation system)

### Basic operation



- 1 Power/Volume
- 2 Audio sources
- 3 Sound quality modes  
Listening position  
ASL (Automatic Sound Levelizer)

### Audio sources

#### ► Type A

AM•FM: AM radio/FM radio

SAT: Satellite radio

CD•AUX: CD player/Auxiliary audio device/USB memory (if equipped)/iPod (if equipped)/Bluetooth® audio player

#### ► Type B

AM: AM radio

FM: FM radio

CD•AUX: CD player/Auxiliary audio device/USB memory (if equipped)/iPod (if equipped)/Bluetooth® audio player

## Radio



- 1 Text messages
- 2 Station presets
- 3 Traffic information
- 4 Scanning radio stations
- 5 Radio tuner
- 6 RDS genre select
- 7 Seek

### Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1~6) until you hear a beep, indicating that the station is set.

## CD player

### Playing an audio CD



- 1 Eject
- 2 Disc load
- 3 Pause/Playback
- 4 Search playback
- 5 Disc select
- 6 Repeat play
- 7 Track select/rewind/fast-forward
- 8 Random playback
- 9 Text information

### Playing a CD with MP3/WMA files



- 1 Eject
- 2 Pause/Playback
- 3 Disc load
- 4 Folder select
- 5 Search playback
- 6 File select
- 7 Disc select
- 8 Repeat play
- 9 Random playback
- 10 Text information

## ■ Loading a CD

- 1 Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicator on the slot turns from amber to green.  
The display changes from "WAIT" to "LOAD".

## ■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicator on the slot turns from amber to green.  
The display changes from "WAIT" to "LOAD".  
The indicator on the slot turns to amber when the CD is inserted.
- 3 Insert the next CD when the indicator on the slot turns from amber to green again.  
Repeat the procedure for the remaining CDs.  
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.

## ■ Operating an iPod (if equipped)

---




- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Playback
- 7 Song select/rewind/fast-forward
- 8 Text information

## ■ Remote control (steering wheel audio switches)


---

The audio system can be operated using the remote control located on the steering wheel.

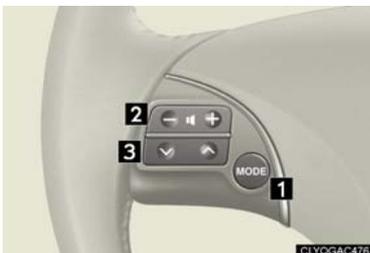

- 1 Power on/change mode: press  
Power off: press and hold
- 2 Volume
- 3 Audio source  
Radio: radio tuner  
CD: disc/track/file (MP3/WMA) select  
iPod (if equipped): song select

## Air Conditioning System (without navigation system)

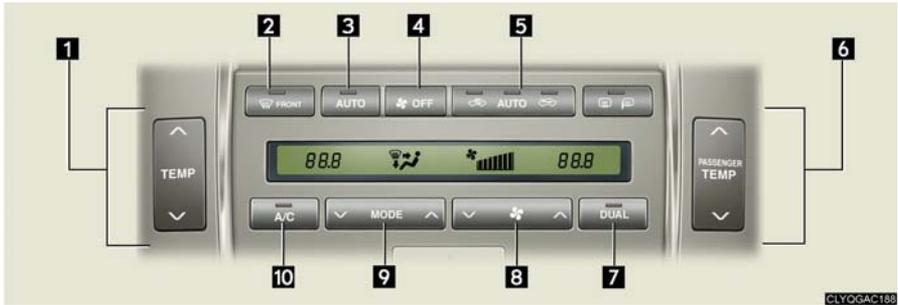

- |   |   |
|---|---|
| <b>1</b> Driver side temperature control          | <b>6</b> Passenger side temperature control |
| <b>2</b> Windshield defog/defrost                 | <b>7</b> Dual mode switch                   |
| <b>3</b> Switch to automatic mode                 | <b>8</b> Fan speed controls                 |
| <b>4</b> "OFF" button                             | <b>9</b> Air flow controls                  |
| <b>5</b> Outside air/recirculated air mode switch | <b>10</b> "A/C" switch                      |

### ■ Using the automatic mode

Press **3** to turn on the airflow and **1** to adjust the temperature.

### ■ Adjusting the temperature

#### ■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press **7** to turn the "DUAL" indicator off (  ) and then press **1**.

#### ■ To individually adjust the driver's side and passenger's side temperature settings

Press **7** or **6** to turn the "DUAL" indicator on (  ) and then press **1** or **6**.

#### ■ To turn off the airflow

Press **4**.

# Speech Command System

## Basic operation



- 1 Press .
- 2 - If you know the command:  
Press  again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.


- Important speech commands information and tips
  - Speech commands can be used while driving.
  - You must wait until after the beep to say a command.
  - In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
  - If you know what command to use, you can press  at any time to interrupt the voice guidance.

## Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### Buttons

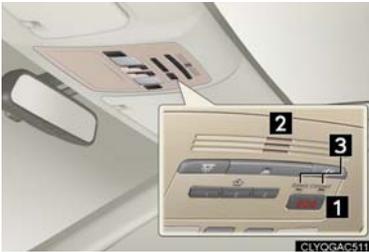

- 1 "SOS" button
- 2 Microphone
- 3 LED light indicators

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

#### ● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM<sup>®</sup> satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### Services

---

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.56)**

- Automatic collision notification\*<sup>1</sup>
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com](http://www.lexus.com) and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM<sup>®</sup> Sports and Stocks\*<sup>2</sup>**

XM<sup>®</sup> Sports and Stocks is a service included with XM<sup>®</sup> satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeather™\*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

- **XM® NavTraffic\*3**

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

- ▶ **The following navigation-based Lexus Enform features are available without a subscription:**

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

\*1: U.S. Patent No. 7,508,298 B2

\*2: Available at no extra charge with an active XM® satellite radio subscription.

\*3: Available via separate XM® subscription(s).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

## Door Locks

### Locking the vehicle from inside

---

#### ► Inside lock button



- 1 Locks
- 2 Unlocks

#### ► Door lock switch



- Operates all door locks.
- 1 Locks
  - 2 Unlocks

### Locking the vehicle from outside

---

Using the entry function or wireless remote control (→P.8, 9)

### Rear door child-protector lock

---



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

## Power Windows



### 1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch


The window lock switch disables the operation of all windows other than the driver's door window.

## Trunk

### Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

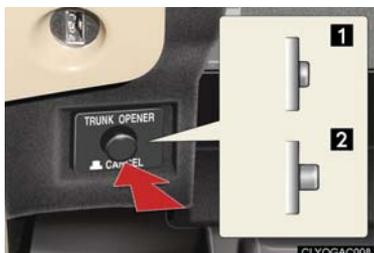

To disable the trunk opener, turn OFF the main switch in the glove box.

1 ON

2 OFF

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

### Entry function and wireless remote control

→P.8, 9

## Fuel Tank Cap



1 Press the fuel filler door opener.




2 Slowly remove the cap by turning it counter-clockwise.  
After the cap is removed, it can be hung on the inside of the fuel filler door.

## Moon Roof

### Standard type

#### ► Opening and closing

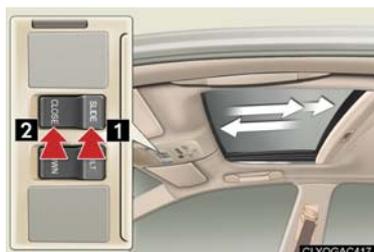

- 1 Opens  
The moon roof stops slightly before the fully opened position.  
To fully open, press the switch again.
- 2 Closes


#### ► Tilt up and down



- 1 Tilts up
- 2 Tilts down

### Glass type

#### ► Opening and closing

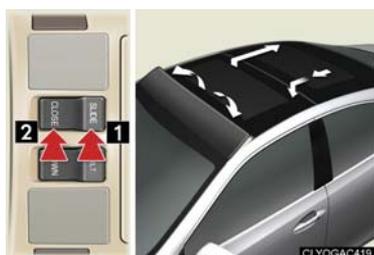

- 1 Opens
- 2 Closes (press and hold)  
The moon roof stops once.  
To fully close, push and hold the switch again.

#### ► Tilt up and down



- 1 Tilts up
- 2 Tilts down (press and hold)

## List of Warning/Indicator Lights



CLYGGAC539

The units used on the speedometer, the tachometer gauge display, indicators and warning lights may differ depending on the model / type.

**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**

**BRAKE**

(USA)

Brake system warning light



(Canada)

**Stop the vehicle immediately.**



Charging system warning light



(USA)

Malfunction



(Canada)

indicator lamp

**Have the vehicle inspected immediately.**



SRS warning light



Pre-collision system  
warning light\*<sup>1</sup>



(USA)

ABS warning light



Tire pressure warning light



(Canada)

(Flashing and  
then continuously  
on)

For further information, refer to the Owner's Manual.

## What to do if ...

### Follow the correction procedure.



Open door warning light



Low fuel level warning light



(On the instrument cluster)

Driver's seat belt reminder light



Front passenger's seat belt reminder light<sup>\*2</sup>



(On the center panel)

Front passenger's seat belt reminder light<sup>\*3</sup>



(Illuminate no flashing)

Tire pressure warning light<sup>\*4</sup>



Master warning light

### See the Owner's Manual



Turn signal indicator



Cruise control "SET" indicator



Headlight high beam indicator



Radar cruise control indicator<sup>\*1</sup>



Headlight indicator (USA)



AFS OFF indicator<sup>\*1</sup>



Tail light indicator (Canada)



Slip indicator



Front fog light indicator



SRS airbag on-off indicator<sup>\*3</sup>



Eco Driving Indicator Light



SRS airbag on-off indicator<sup>\*2</sup>



Cruise control indicator



Shift position and shift range indicators

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: With navigation system

<sup>\*3</sup>: Without navigation system

<sup>\*4</sup>: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire (excluding compact spare tire). Adjust the tire inflation pressure.

## If the electronic key does not operate properly

### Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

### Starting the engine




- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## What to do if ...

### If the engine doesn't start

Make sure that the correct operating procedures have been followed.

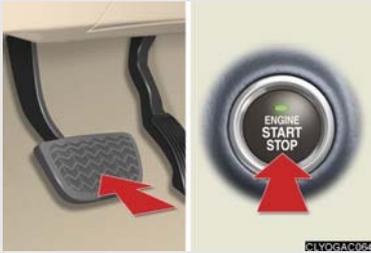

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.  
(→P.13)



#### Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch.

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside the trunk and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Exterior alarm sounds once for 3 seconds and interior alarm sounds continuously	When the "ENGINE START STOP" switch is in ACCESSORY or IGNITION ON mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in P	Shift the shift lever to P.
Interior alarm pings continuously	Turned the "ENGINE START STOP" switch to ACCESSORY mode while the driver's door is open (Opened the driver's door when the "ENGINE START STOP" switch is in ACCESSORY mode.)	Turn the "ENGINE START STOP" switch OFF and close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door is open	Close the driver's door.

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

It is also possible to customize certain vehicle features yourself using the navigation system.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

### Settings that can be customized at a dealer

The following table includes some settings that can be customized using the navigation system display. (→P.72)

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer)	ON	OFF
Wireless remote control	Wireless remote control	ON	OFF
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	ON	OFF
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operation signal (Emergency flashers)	ON	OFF
	Operation signal (Buzzer volume)	Level 7	Level 0 to 7
	Door lock buzzer	ON	OFF
	Trunk unlocking function	ON	OFF
	Trunk unlocking operation	Push and hold	Push twice
One push			
Panic function	ON	OFF	

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors locked in one step
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shifting gears to P unlocks all doors	ON	OFF
	Shifting gears to position other than P locks all doors	ON	OFF
Power windows	Linked mechanical key operation	Open and close	OFF Open only Close only
	Wireless remote control linked operation	OFF	Open only
	Linked entry function	ON	OFF
Moon roof (Standard type)	Linked mechanical key operation	Open and close	OFF Open only Close only
	Linked operation of components when mechanical key is used	Slide only	Tilt only
	Wireless remote control linked operation	OFF	Open only
	Linked operation of components when wireless remote control used	Slide only	Tilt only
	Linked entry function	ON	OFF
Eco Driving Indicator Light	Eco Driving Indicator Light	ON	OFF
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds 90 seconds

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Lights	Daytime running lights system (USA only)	ON	OFF
Intuitive parking assist	Back sensor operation display and buzzer	ON	OFF
	Buzzer volume	Level 3	Level 1 to 5
	Distance which a sensor detects	4.5 ft. (150 cm)	1.8 ft. (60 cm)
Illumination	Time elapsed before lights turn off	15 seconds	OFF 7.5 seconds 30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the "ENGINE START STOP" switch turned OFF	ON	OFF
	Front foot well lighting	ON	OFF
	Outer foot light	ON	OFF
Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	ON	OFF

### Multi-information display

Country	Available languages
Canada	English and French

## ■ Settings that can be customized using the navigation system

You can customize the following settings the navigation system display.

(For further information on customizing settings using the navigation system display, refer to the Navigation System Owner's Manual.)

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	ON	OFF
	Smart door unlocking	Driver's door	All the doors
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
Operation signal (Emergency flashers)	ON	OFF	
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	OFF
			30 seconds
			120 seconds
Operation signal (Emergency flashers)	ON	OFF	

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors locked in one step
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shifting gears to P unlocks all doors	ON	OFF
	Shifting gears to position other than P locks all doors	ON	OFF
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds 90 seconds
Automatic air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C Auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights	Daytime running lights system (USA only)	ON	OFF
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.		Standard
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2



### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2010 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.