

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Air Conditioning System</b> .....	<b>84</b>
<b>Audio System (with Lexus Display Audio System)</b>	
Lexus Display Audio operation buttons.....	80
Using the steering switches to change audio sources.....	80
Audio menu screen.....	81
Operating the audio system using the steering wheel switches.....	83
<b>Audio System (with navigation system)*</b>	
Audio control screen.....	69
Remote control (steering wheel switches).....	69
Basic operation.....	70
Radio.....	71
DVD player/CD player.....	72
Operating an iPod.....	74
<b>Automatic High Beam</b> .....	<b>38</b>
<b>BSM (Blind Spot Monitor)</b> .....	<b>51</b>
<b>Cruise Control</b> .....	<b>43</b>
<b>Door Locks</b> .....	<b>103</b>
<b>Driving Mode Select Switch</b> .....	<b>52</b>
<b>Driving Position Memory</b> .....	<b>25</b>
<b>Dynamic Radar Cruise Control</b> .....	<b>45</b>
<b>Energy Monitor/Consumption Screen</b> .....	<b>14</b>
<b>EV Drive Mode</b> .....	<b>31</b>
<b>Floor mat installation</b> .....	<b>11</b>
<b>Front Seats</b> .....	<b>23</b>
<b>Fuel Tank Cap</b> .....	<b>106</b>
<b>Garage Door Opener</b> .....	<b>96</b>

 
\*: These features may be operated by Voice Command (See P.88)

<b>Hands-free System For Cellular Phone (with Lexus Display Audio System)</b>	
How to register a Bluetooth® phone.....	77
Registering favorites.....	77
Dialing.....	77
Dialing from the phonebook.....	77
When the phonebook is empty.....	78
Dialing from favorites.....	78
To answer the phone.....	79
To refuse a call.....	79
Operating a telephone using the steering wheel switches.....	79
<b>Hands-free System For Cellular Phone (with navigation system)*</b>	
Bluetooth® phone pairing.....	64
Contacts transfer.....	65
Registering the contacts in the favorites list.....	66
Calling by name.....	67
Calling by favorites list.....	67
Calling using e-mail/SMS/MMS message.....	68
Receiving a call.....	68
Steering switches.....	68
<b>Headlights.....</b>	<b>37</b>
<b>Head Restraints.....</b>	<b>24</b>
<b>Hybrid System.....</b>	<b>12</b>
<b>Hybrid Transmission.....</b>	<b>32</b>
<b>Intuitive Parking Assist.....</b>	<b>50</b>
<b>Keys.....</b>	<b>18</b>
<b>LDA (Lane Departure Alert).....</b>	<b>48</b>
<b>Lexus Display Audio Controller (with Lexus Display Audio System).....</b>	<b>75</b>
<b>Lexus Enform.....</b>	<b>100</b>
<b>Lexus Enform Safety Connect.....</b>	<b>98</b>

\*: These features may be operated by Voice Command (See P.88)


<b>Moon Roof</b> .....	<b>105</b>
<b>Multi-information Display</b> .....	<b>35</b>
<b>Navigation System *</b>	
Register home .....	58
Destination input - Search by address .....	59
Destination input - Search points of interest by name.....	61
Destination input - Search points of interest by category.....	62
Destination input - Search points of interest by telephone number .....	63
<b>Outside Rear View Mirrors</b> .....	<b>27</b>
<b>Portable Audio Device Ports</b> .....	<b>93</b>
<b>Power (Ignition) Switch</b> .....	<b>28</b>
<b>Power Windows</b> .....	<b>104</b>
<b>Rear Sunshade/Rear Door Sunshades</b> .....	<b>94</b>
<b>Remote Touch (with navigation system)</b> .....	<b>54</b>
<b>Seat Heaters and Ventilators</b> .....	<b>93</b>
<b>Smart Access System with Push-button Start</b> .....	<b>19</b>
<b>Theft Deterrent System</b> .....	<b>22</b>
<b>Tire Pressure Warning System</b> .....	<b>53</b>
<b>Trunk</b> .....	<b>107</b>
<b>Trunk Storage Extension</b> .....	<b>95</b>
<b>Turn Signal Lever</b> .....	<b>34</b>
<b>Voice Command System</b>	
Basic operation.....	88
Command list .....	89
<b>Windshield Wipers and Washer</b> .....	<b>40</b>
<b>XM Satellite Radio</b> .....	<b>102</b>


\*: These features may be operated by Voice Command (See P.88)



## Overview

## Instrument Panel

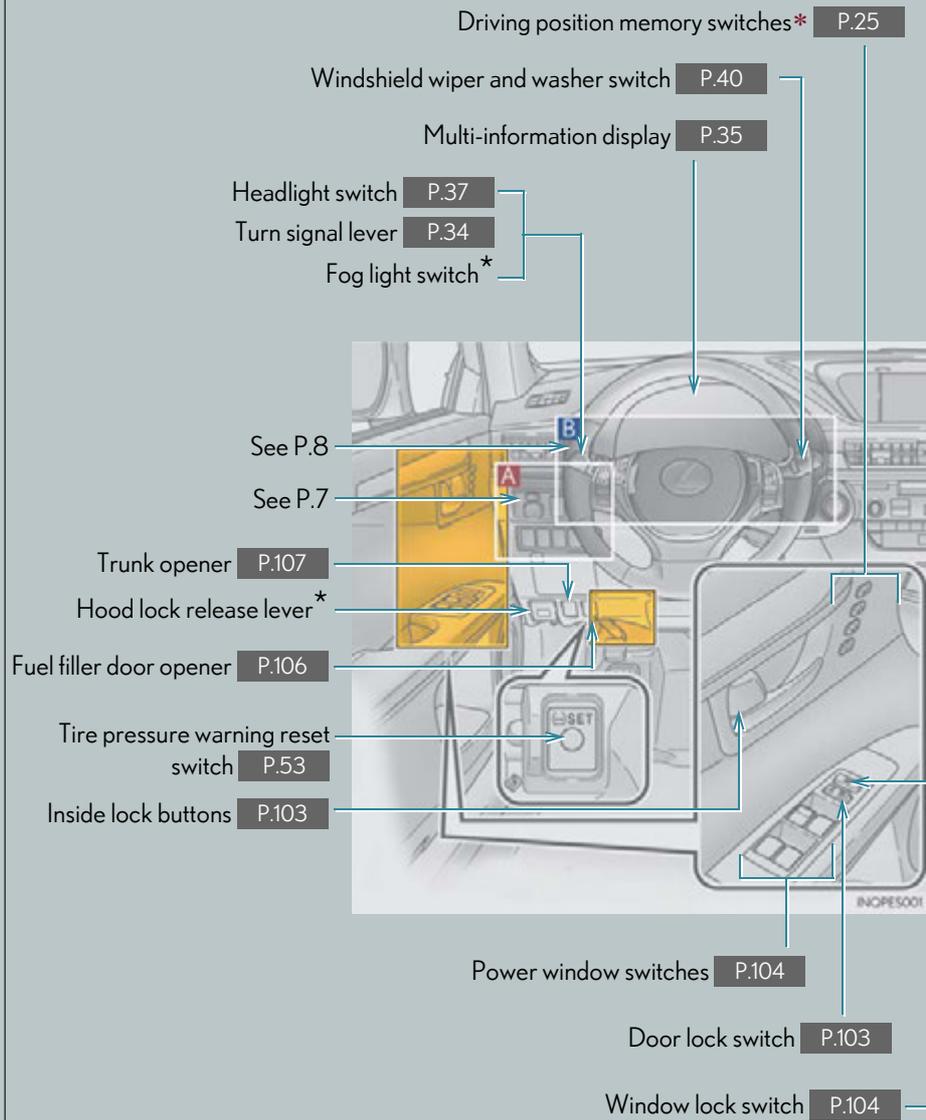

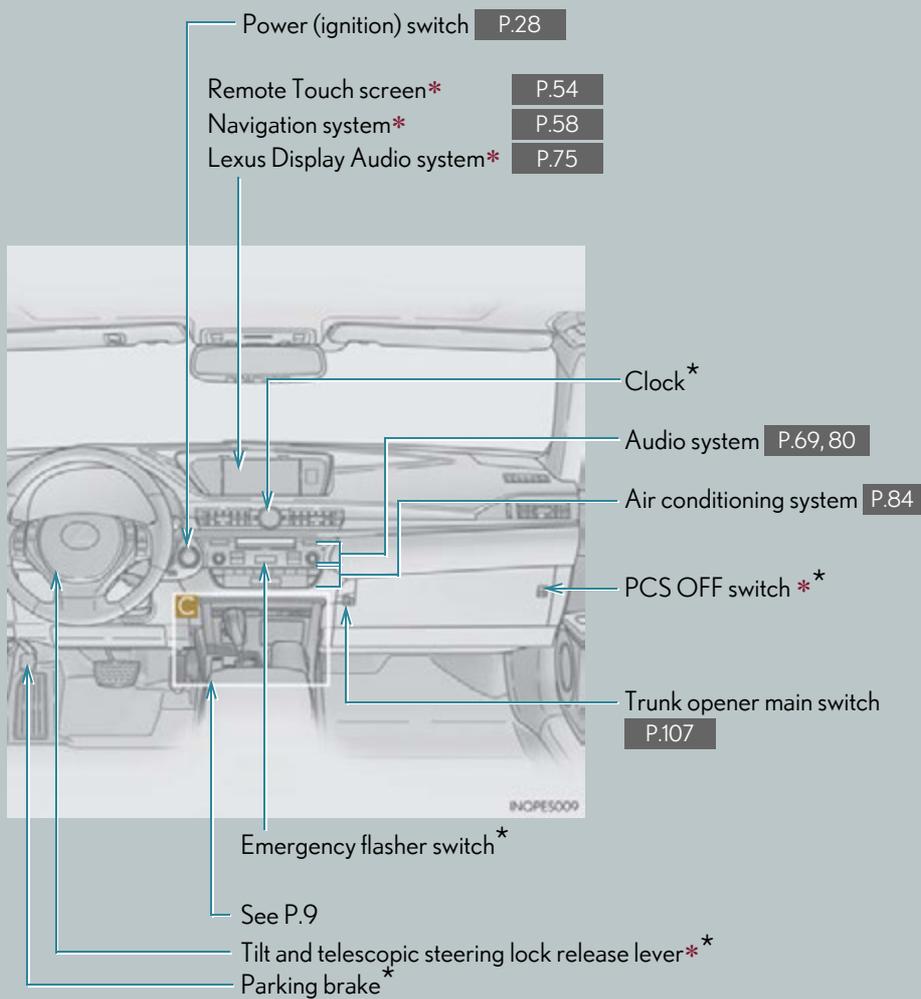

\*: If equipped  
 \*\*: Refer to "OWNER'S MANUAL".

## Overview


## Instrument Panel

A

Odometer/trip meter and trip meter reset button \*1

Instrument panel light control switches \*1


Outside rear view mirror switches P.27

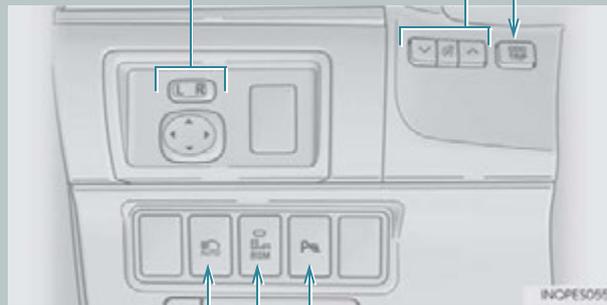

Intuitive parking assist switch\* P.50

BSM (Blind Spot Monitor)  
main switch\* P.51

Automatic High Beam switch\* P.38

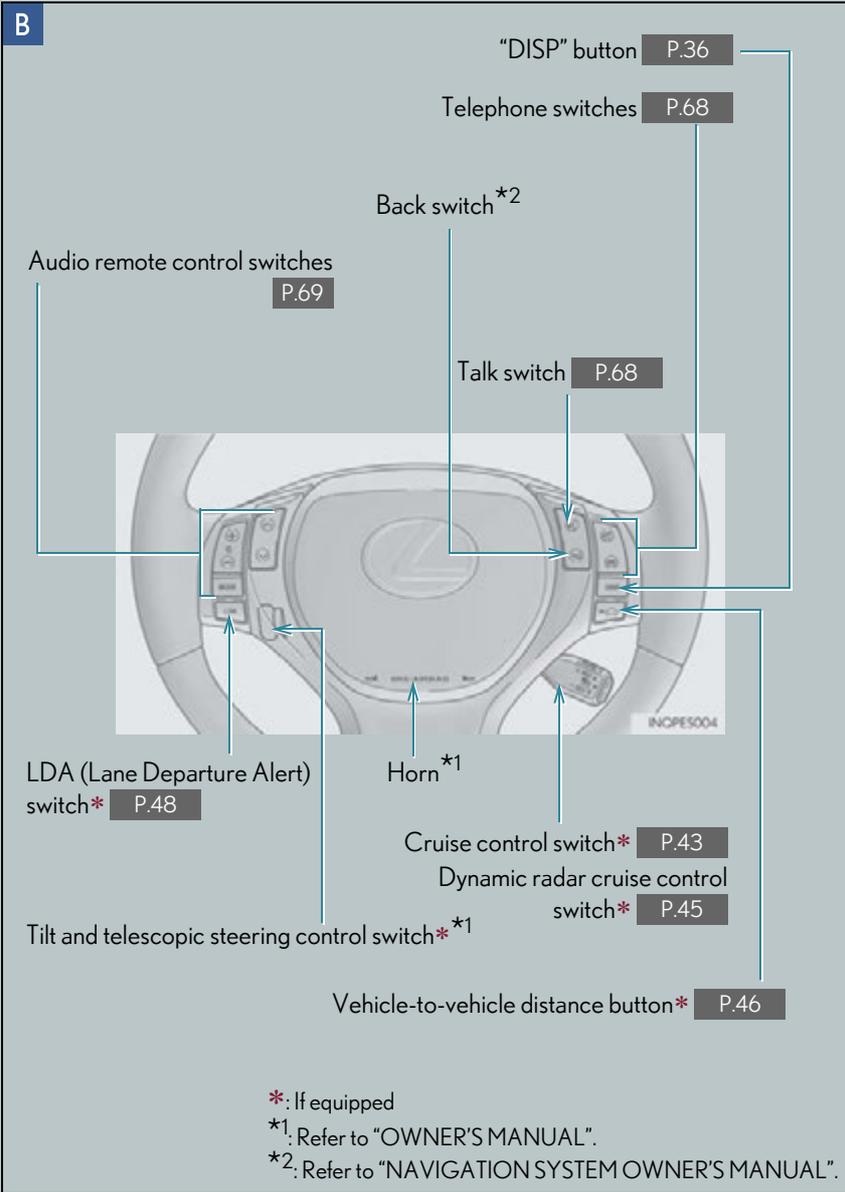

## Overview

## Instrument Panel


C

Seat heater and ventilator switches\* P.93

Heated steering wheel switch\*\*

Rear sunshade switch\* P.94

Lexus Display Audio controller\* P.75

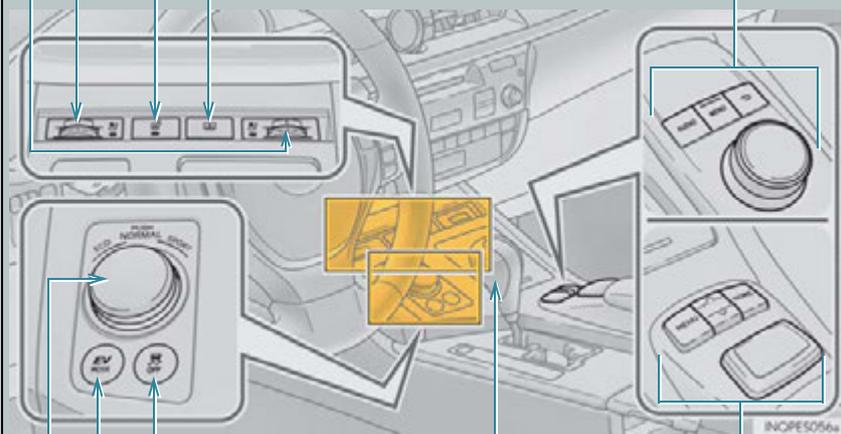

Shift lever P.32

Remote Touch\* P.54


VSC OFF switch\*

EV drive mode switch P.31

Driving mode select switch P.52

## Overview

## Roof

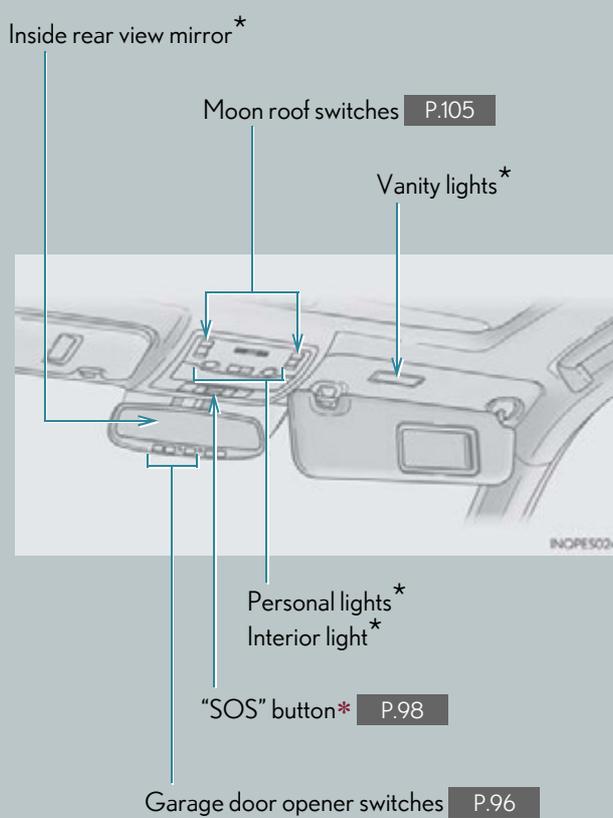


\*: If equipped


\*: Refer to "OWNER'S MANUAL".

## Floor mat installation

 Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.



- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

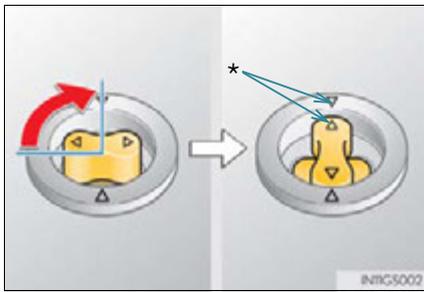

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "OWNER'S MANUAL".

### Hybrid System Indicator



- ① Power area  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- ② Eco area  
Shows that the vehicle is being driven in an Eco-friendly manner.
- ③ Hybrid Eco area  
Shows that gasoline engine power is not being used very often. The gasoline engine will automatically stop and restart under various conditions.
- ④ Charge area  
Shows regenerative charging.

- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration<sup>\*</sup> status. Regenerated energy will be used to charge the battery.

\*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

### ■ Charging the hybrid battery (traction battery)

---

If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.

### ■ Regenerative braking

---

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift position in D or S.
- The brake pedal is depressed while driving with the shift position in D or S.

### ■ Sounds and vibrations specific to a hybrid vehicle

---

There may be no engine sounds or vibration even though the vehicle is able to move. For safety, apply the parking brake and make sure to shift the shift position to P when parked. The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the trunk lid is open.
- Sounds may be heard from the hybrid transmission when the hybrid system starts or stops.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on rear left seat.

### ■ Running out of fuel

---

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.0 gal. [11.3 L, 2.5 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

## Energy Monitor/Consumption Screen

You can view the status of your vehicle on the multi-information display and the navigation system screen or Lexus Display Audio system screen.

### Energy monitor

- How to display on the navigation system screen  
Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".  
If the "Trip Information" or "Past Record" screen is displayed, select "Energy".



The flow of energy is displayed on the navigation system screen.

Amber: gasoline energy

Yellow: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the Lexus Display Audio screen  
Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".  
If the "Energy Monitor" screen does not appear, move the controller to the right and select "Energy".



The flow of energy is displayed on the Lexus Display Audio system screen.


Purple: gasoline energy

Yellow: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the multi-information display
  - Press the "DISP" button on the steering wheel several times to select the energy monitor display.

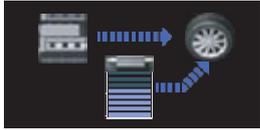

The flow of energy is indicated by the movement of the arrows on the multi-information display.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.


## ■ Fuel Consumption

 - Trip information

### ▶ Navigation system screen

Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Energy Monitor" or "Past Record" screen is displayed, select "Trip Information".




- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Regenerated energy in the past 15 minutes  
One symbol indicates 50 Wh. Up to 5 symbols are shown.
- ⑤ Average vehicle speed since the hybrid system was started.
- ⑥ Elapsed time since the hybrid system was started.
- ⑦ Cruising range

► **Lexus Display Audio screen**

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Trip Information" screen does not appear, move the controller to the right and select "Trip Information".

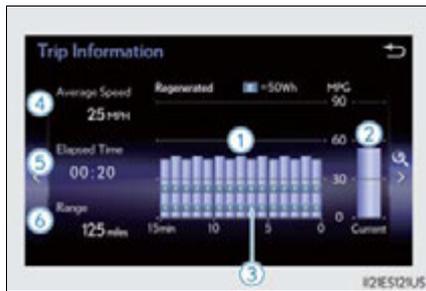

- ① Fuel consumption in the past 15 minutes
- ② Current fuel consumption
- ③ Regenerated energy in the past 15 minutes  
One symbol indicates 50 Wh. Up to 5 symbols are shown.
- ④ Average vehicle speed since the hybrid system was started.
- ⑤ Elapsed time since the hybrid system was started.
- ⑥ Cruising range

● Past record

▶ **Navigation system screen**

Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Energy Monitor" or "Trip Information" screen is displayed, select "Past Record".



- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

▶ **Lexus Display Audio screen**

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

 
If the "Past Record" screen does not appear, move the controller to the right and select "Past Record".



- ① Previous fuel consumption record
- ② Current fuel consumption
- ③ Best recorded fuel consumption

■ **Hybrid warning message**


A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

## Keys


### ■ Electronic key

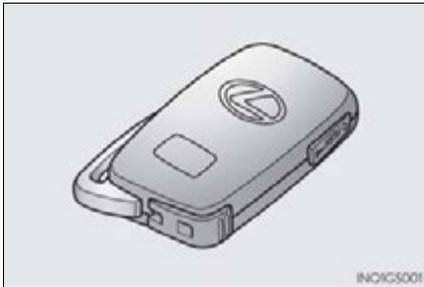

Smart access system with push-button start  
(→P:19, 28)

Wireless remote control (→P:19)


### ■ Mechanical key

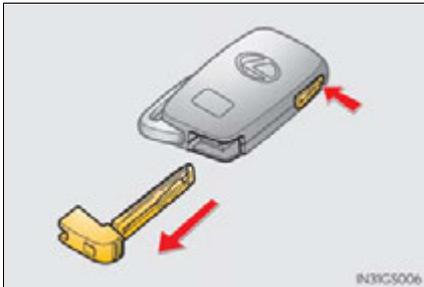

To take out the mechanical key, push the  
release button and take the key out.

After using the mechanical key, store it in  
the electronic key. Carry the mechanical  
key together with the electronic key. If  
the electronic key battery is depleted or  
the entry function does not operate  
properly, you will need the mechanical  
key.

## ■ Wireless remote control

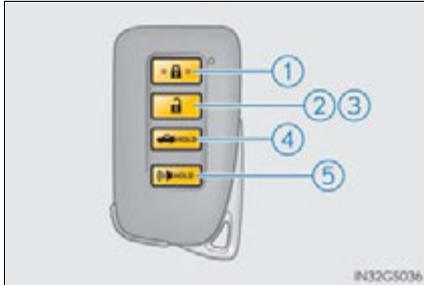


- ① Locks all the doors  
Check that the door is securely locked.
  - ② Unlocks all the doors  
Pressing the button unlocks the driver's door. Pressing the button again within 5 seconds unlocks the other doors.
  - ③ Opens the windows and moon roof (press and hold)\*
  - ④ Opens the trunk (press and hold)  
If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.
  - ⑤ Sounds the alarm (press and hold)
- \*: This setting must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)  
For details on starting the hybrid system, see page 28.

## ■ Entering the vehicle

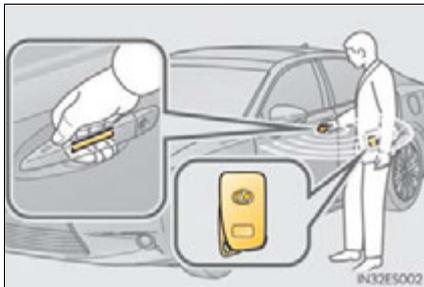


Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.


### ■ Exiting the vehicle

 

Touch the lock sensor (the indentation on the upper part of the door handle) to lock all the doors.

Check that the door is securely locked.

### ■ Opening the trunk

 

Press the button.

If the vehicle is equipped with power trunk opener and closer, the trunk lid automatically opens fully.

### ■ Changing the door unlock function setting

It is possible to set which doors the entry function unlocks using the wireless remote control.

1 Turn the "POWER" switch off.

2 When the indicator light on the key surface is not on, press and hold  ,  or  for approximately 5 seconds while pressing and holding .

The setting changes each time an operation is performed, as shown below. (When changing the setting continuously, release the buttons, wait for at least 5 seconds, and repeat step 2.)

Multi-information display	Unlocking function	Beep
	Holding the driver's door handle unlocks only the driver's door.	Exterior: Beeps 3 times Interior: Pings once
	Holding a passenger's door handle unlocks all the doors.	
	Holding a door handle unlocks all the doors.	Exterior: Beeps twice Interior: Pings once


To prevent unintended triggering of the alarm, unlock the doors using the wireless remote control and open and close a door once after the settings have been changed. (If a door is not opened within 60 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

In case that the alarm is triggered, immediately stop the alarm. (→P.22)

For details on what to do when the electronic key does not operate properly, see page 112.

## Theft Deterrent System

### ■ Immobilizer system

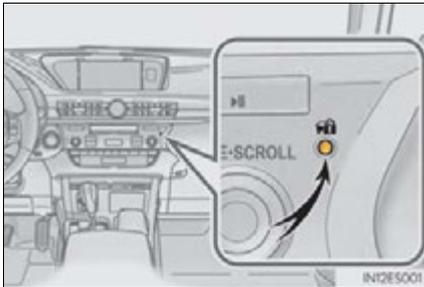

The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

### ■ Alarm

The alarm uses light and sound to give an alert when an intrusion is detected.

#### **To set the alarm:**

Close the doors, trunk and hood, and lock all the doors. The system will be set automatically after 30 seconds.


The indicator light changes from being on to flashing when the system is set.

#### **To deactivate or stop the alarm:**

- Unlock the doors or open the trunk.
- Turn the "POWER" switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

## Front Seats


### Adjustment procedure

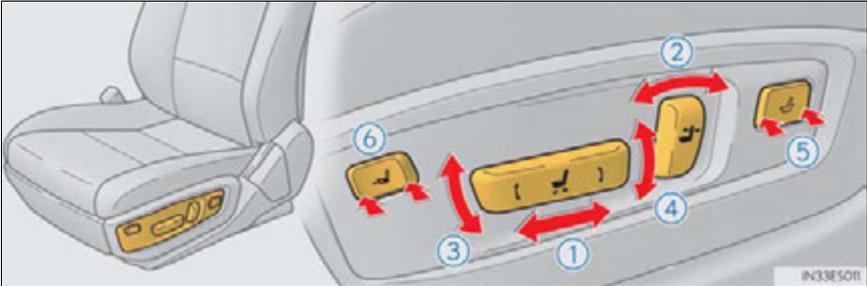

- ① Seat position adjustment switch
- ② Seatback angle adjustment switch
- ③ Seat cushion (front) angle adjustment switch
- ④ Vertical height adjustment switch
- ⑤ Lumbar support adjustment switch
- ⑥ Seat cushion length adjustment switch (if equipped for driver's side)


## Head Restraints
 
### Front seats



#### Vertical adjustment

 - ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pressing the lock release button.




#### Horizontal adjustment

The position of the head restraint can be adjusted forward in 4 stages.


If the head restraint is pulled forward from the foremost position, it will return to the rearmost position.

### Rear seats
 
#### ► Outboard



#### ► Center

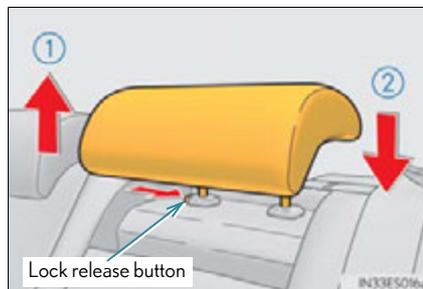

- ① Up  
Pull the head restraints up.
- ② Down  
Push the head restraint down while pressing the lock release button.


## Driving Position Memory (if equipped)

This feature automatically adjusts the front seats, steering wheel (power adjustment type) and outside rear view mirrors to suit your preferences.

### Driving position memory

#### Recording procedure

- 1 Check that the shift lever is in P.
- 2 Turn the "POWER" switch to ON mode.
- 3 Adjust the driver's seat, steering wheel, and outside rear view mirrors to the desired positions.

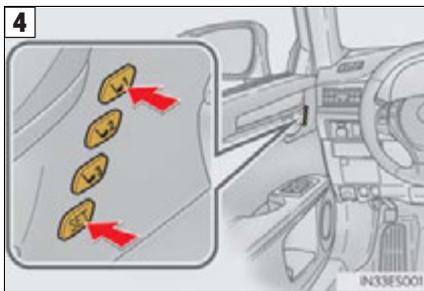


While pressing the "SET" button, or within 3 seconds after the "SET" button is pressed, press button "1", "2" or "3" until the buzzer sounds.

If the selected button has already been preset, the previously recorded position will be overwritten.

#### Recall procedure

- 1 Check that the shift lever is in P.
- 2 Turn the "POWER" switch to ON mode.

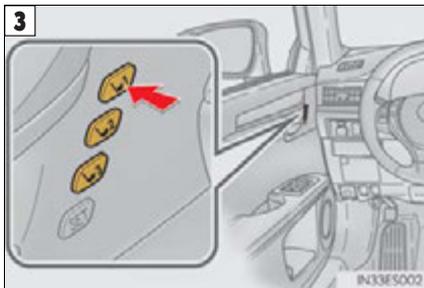

Press one of the buttons for the driving position you want to recall until the buzzer sounds.


## ■ Memory recall function (driver's side only)

 ---

Each electronic key can be registered to recall your preferred driving position.

### ■ Registering procedure


- 1 Check that the shift lever is in P.
- 2 Turn the "POWER" switch to ON mode.
- 3 Recall the driving position that you want to record.



While pressing the recalled button, press and hold the door lock switch (either lock or unlock) until the buzzer sounds.


If the button could not be registered, the buzzer sounds continuously for approximately 3 seconds.

## Outside Rear View Mirrors

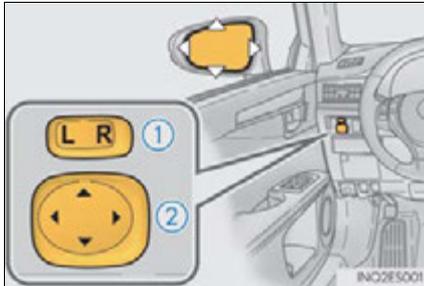

- ① Selects a mirror to adjust ("L": left or "R": right)
- ② Adjust the mirror up, down, in or out using the switch

### Folding the mirrors

 

Push the mirror back in the direction of the vehicle's rear.

### Linked mirror function when reversing

When the mirror select switch is in the L or R position, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground.

To disable this function, move the mirror select switch to the neutral position (between L and R).

### Adjusting the mirror angle when the vehicle is reversing


With the shift lever in R, adjust the mirror angle at a desired position. The adjusted angle will be memorized and the mirror will automatically tilt to the memorized angle whenever the shift lever is shifted to R from next time.

The memorized downward tilt position of the mirror is linked to the normal position (angle adjusted with the shift lever in other than R). Therefore, if the normal position is changed after adjustment, the tilt position will also change. When the normal position is changed, readjust the angle in reversing.

## Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes "POWER" switch modes.

### Starting the hybrid system

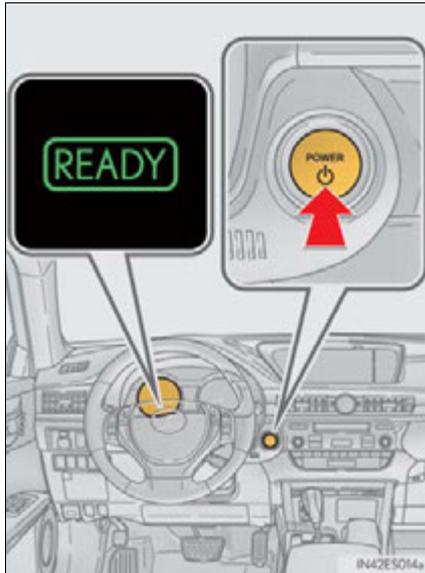

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.



will be displayed on the multi-information display. If it is not displayed, the hybrid system cannot be started.

- 4 Press the "POWER" switch. Continue depressing the brake pedal until the hybrid system is completely started. The hybrid system can be started from any "POWER" switch mode.
- 5 Check that the "READY" indicator is on. The vehicle will not move when the "READY" indicator is off.

## ■ Stopping the hybrid system


---

- 1 Stop the vehicle.
- 2 Shift the shift lever to P.
- 3 Set the parking brake.
- 4 Press the "POWER" switch.
- 5 Release the brake pedal and check that "POWER ON" on the multi-information display is off.

## ■ Changing "POWER" switch modes

---

Modes can be changed by pressing the "POWER" switch with the brake pedal released. (The mode changes each time the switch is pressed.)

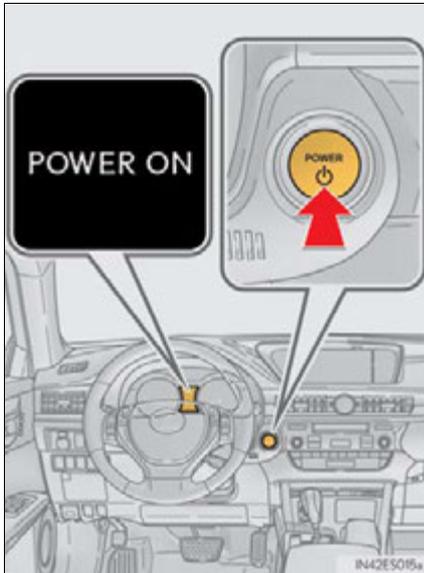

### Off\*

The emergency flashers can be used.  
The multi-information display will not be displayed.

### ACCESSORY mode

Some electrical components such as the audio system can be used.  
"POWER ON" will be displayed on the multi-information display.

### ON mode


All electrical components can be used.  
"POWER ON" will be displayed on the multi-information display.

\*: If the shift lever is in a position other than P when turning off the hybrid system, the "POWER" switch will be turned to ACCESSORY mode, not to off.

## ■ If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1 Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2 Shift the shift lever to N.
  - ▶ If the shift lever is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the hybrid system.
  - ▶ If the shift lever cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

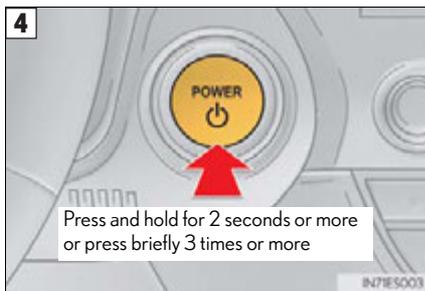


To stop the hybrid system, press and hold the "POWER" switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5 Stop the vehicle in a safe place by the road.

## EV Drive Mode

 In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.




Turns EV drive mode on/off

When EV drive mode is turned on, "EV MODE" will be displayed on the multi-information display. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

## Hybrid Transmission

### Shifting the shift lever

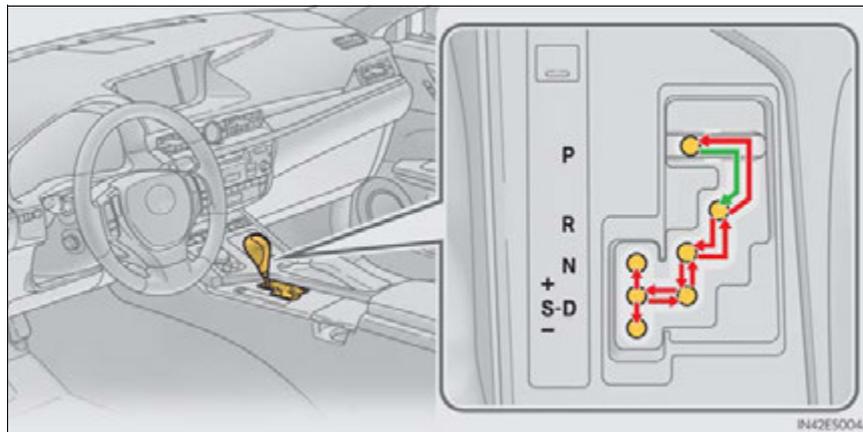

- ← While the “POWER” switch is in ON mode, move the shift lever with the brake pedal depressed.  
When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

### Shift position purpose


Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving <sup>*1</sup>
S	S mode driving <sup>*2</sup>

<sup>\*1</sup>: To improve fuel efficiency and reduce noises, set the shift lever in D for normal driving.

<sup>\*2</sup>: By selecting shift ranges using S mode, you can control engine braking forces.

## ■ Selecting shift ranges in the S position

To enter S mode, shift the shift lever to S. Shift ranges can be selected by operating the shift lever, allowing you to drive in the shift range of your choosing.

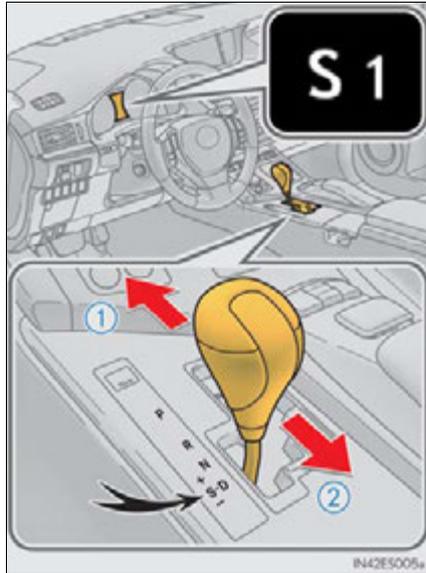

① Upshifting

② Downshifting


The selected shift range, from S1 to S6, will be displayed in the meter.

The initial shift range in S mode is automatically set to S4 or S5 according to vehicle speed.

### ■ Shift ranges and their functions

- You can choose from 6 levels of engine braking force.
- A lower shift range will provide greater engine braking force than a higher shift range, and the engine revolutions will also increase.
- If you accelerate while in ranges S1 to S4, the shift range may automatically range up in accordance with the vehicle's speed.

## Turn Signal Lever

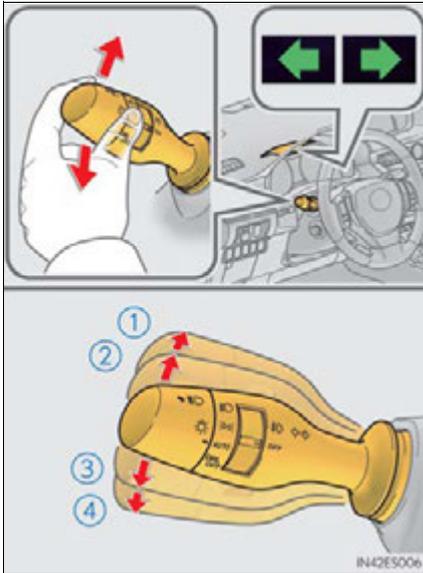

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- ④ Left turn


### ■ Customization

 The number of times the turn signals flash during a lane change can be changed.

## Multi-information Display


The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

### Display contents



- Trip information
    - Energy monitor (→P.15)
    - Outside temperature
    - Current fuel consumption
    - Average fuel consumption after refueling
    - Average fuel consumption
    - Average vehicle speed
    - Driving range
    - Elapsed time
    - Tire inflation pressure (→P.53)
  - Drive monitor
    - Outside temperature
    - Average fuel consumption after refueling
    - Driving range
  - Intuitive parking assist display\* (if equipped)
  - Dynamic radar cruise control display\* (if equipped)
  - LDA (Lane Departure Alert) display\* (if equipped)
  - Warning messages
- \*: Automatically displayed when the system is used. Display can be switched by pressing the "DISP" button.


## ■ Switching the display of trip information

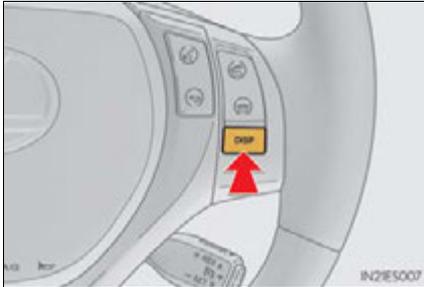

Items displayed can be switched by pressing the "DISP" button.


If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Headlights

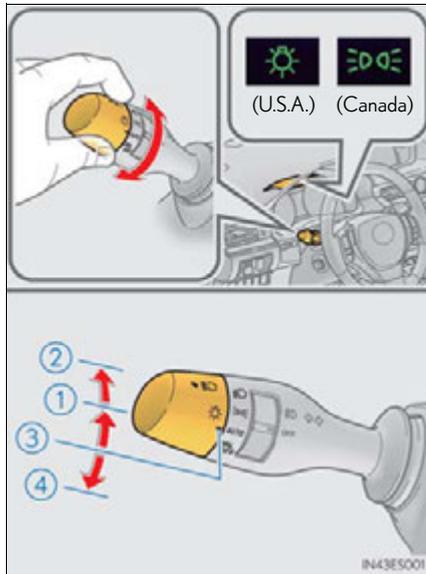

- ① The side marker, daytime running, tail, license plate and instrument panel lights turn on.
- ② The headlights, parking and all lights listed above (except daytime running lights) turn on.
- ③ **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically. (When the "POWER" switch is in ON mode.)
- ④ **DRL** Off  
 (U.S.A.)  
 ○ The daytime running lights turn (Canada) on.

### Turning on the high beam headlights

 


- ① With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


## Automatic High Beam (if equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

### Activating the Automatic High Beam system

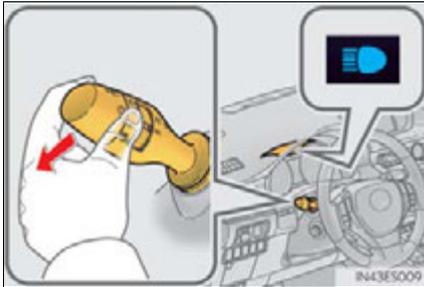

 - 1 Push the lever away from you with the headlight switch in **AUTO** or  position.




- 2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

## ■ Turning the high beam on/off manually

---

### ● Switching to low beam

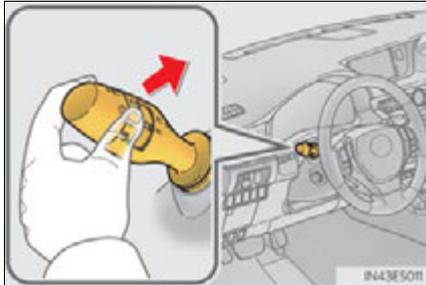


Pull the lever to original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

### ● Switching to high beam

 


Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.


Press the switch to activate the Automatic High Beam system again.

## Windshield Wipers and Washer

### ■ Intermittent windshield wipers with interval adjuster

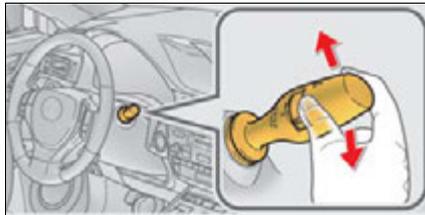

 - ① Temporary operation
- ② Intermittent operation
- ③ Low speed operation
- ④ High speed operation






Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency



- ⑦ Washer/wiper dual operation  
Wipers will automatically operate a couple of times after the washer squirts.

## ■ Rain-sensing windshield wipers

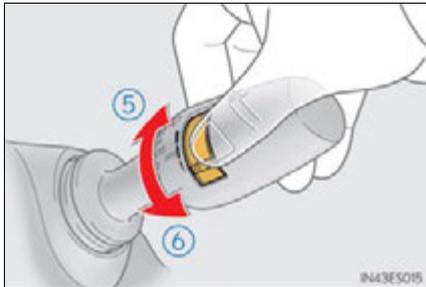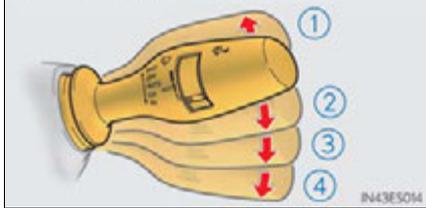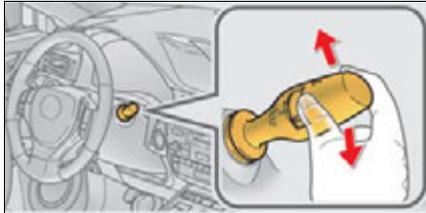

- ① Temporary operation
- ② Rain-sensing wiper operation (AUTO)
- ③ Low speed operation
- ④ High speed operation

With AUTO selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when AUTO is selected.


- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

- ⑦ Washer/wiper dual operation  
Wipers will automatically operate a couple of times after the washer squirts.

## ■ Shifting the windshield wiper position

---

### ■ To rest position

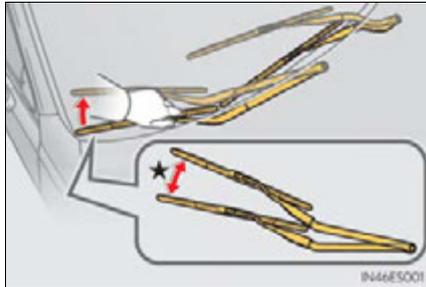


Raise the wiper in line with the windshield until it locks.

You can stand the wipers up for the rest position.

★: More than 3.9 in. (10 cm)


### ■ To retract position

 

Lower the wipers by pressing on the upper part of the hook section.


## Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

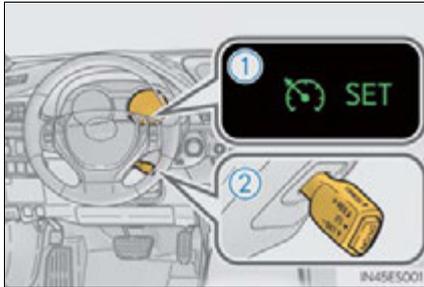


- ① Indicators
- ② Cruise control switch

### Setting the vehicle speed

 


 - 1** Press the "ON/OFF" button to activate the cruise control. Cruise control indicator will come on. Press the button again to deactivate the cruise control.




- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed. "SET" indicator will come on. The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

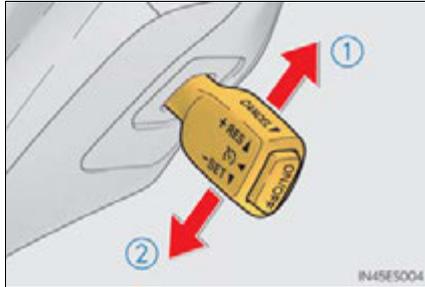

- ① Increases the speed
- ② Decreases the speed  
Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.


## ■ Canceling and resuming the constant speed control

 

- ① Pulling the lever toward you cancels the constant speed control. The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## Dynamic Radar Cruise Control (if equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

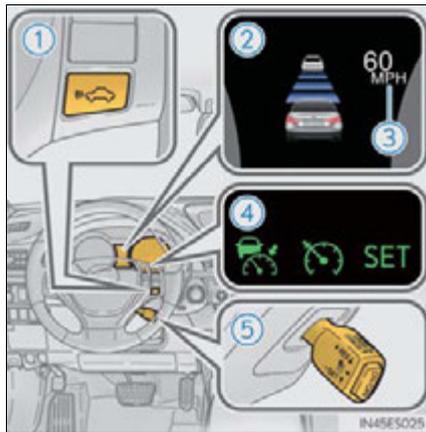


- 1 Vehicle-to-vehicle distance button
- 2 Display
- 3 Set speed
- 4 Indicators
- 5 Cruise control switch

### Setting the vehicle speed (vehicle-to-vehicle distance control mode)




 - 1 Press the "ON/OFF" button to activate the cruise control. Radar cruise control indicator will come on. Press the button again to deactivate the cruise control.




- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed. "SET" indicator will come on. The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

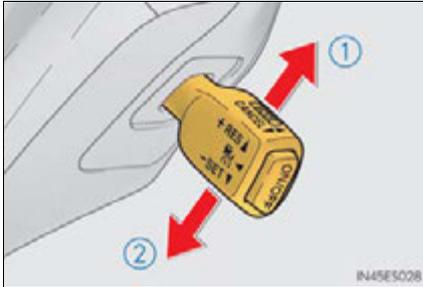

- ① Increases the speed
  - ② Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

## ■ Changing the vehicle-to-vehicle distance

 


Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
  - ② Medium
  - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the "POWER" switch is turned to ON mode.  
If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## ■ Canceling and resuming the speed control

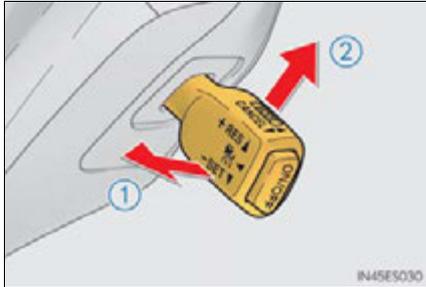

- ① Pulling the lever toward you cancels the cruise control.  
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## ■ Selecting conventional constant speed control mode

 


- ① Press the "ON/OFF" button to activate the cruise control.  
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.  
(Push the lever forward and hold for approximately 1 second.)  
Cruise control indicator will come on.  
When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

## LDA (Lane Departure Alert) (if equipped)

While driving on a road that has lane markers, this system recognizes the lane markers using a camera as a sensor to alert the driver when the vehicle deviates from its lane. If the system judges that the vehicle may deviate from its lane, it alerts the driver using beeping and indications on the multi-information display.

### Turning the LDA system on

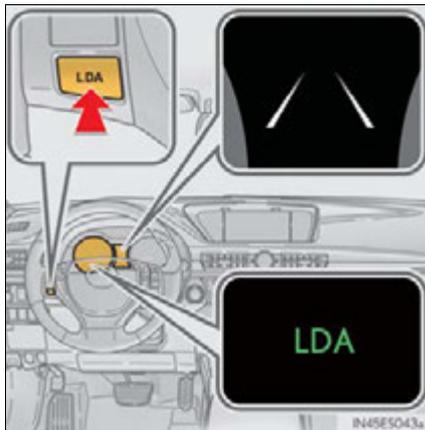

Press the "LDA" switch to activate the system.

"LDA" indicator and the lane lines will come on.

Press the switch again to turn the LDA system off.

The LDA system will remain on or off even if the "POWER" switch is turned to ON mode.

## ■ Indication on the multi-information display

---

When the LDA system is on, the lane lines are shown.



The inside of the lane lines turn white when the right and left lane markers are recognized.

If the vehicle deviates from the lane, the lane line on the side the vehicle deviates from will flash.



The inside of the recognized lane line turns white when the right or left lane marker is recognized.

If the vehicle deviates from a lane that has lane markers recognized, the lane line will flash.




The inside of the lane lines turn black when no lane marker is recognized or the LDA system is temporarily canceled.

## Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, navigation system screen or Lexus Display Audio system screen and a buzzer. Always check the surrounding area when using this system.

### ■ Turning the system on and off

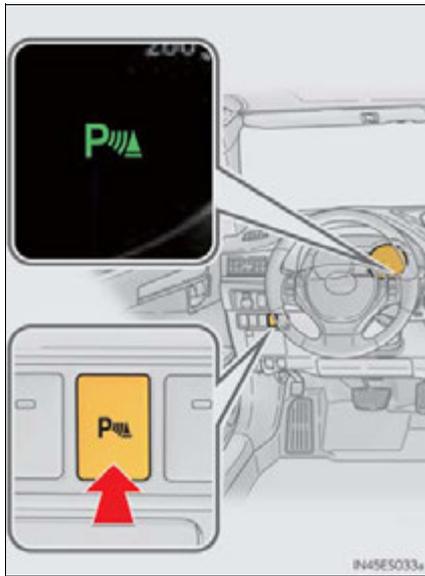


Turns the intuitive parking assist on/off

When on, the indicator light comes on to inform the driver that the system is operational.

## BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;


- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
  - The Rear Cross Traffic Alert function  
Assists the driver when backing up
- These functions use same sensors.

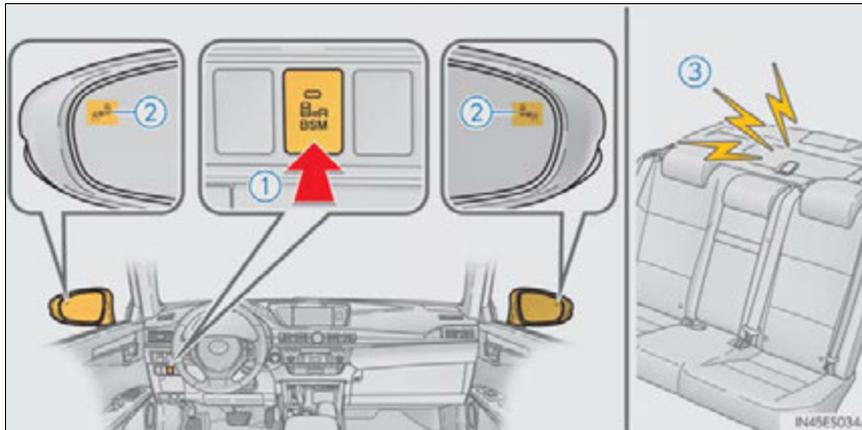

- ① BSM main switch  
Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates. Common switch for Blind Spot Monitor function and Rear Cross Traffic Alert function.
- ② Outside rear view mirror indicator  
Blind Spot Monitor function:  
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.  
Rear Cross Traffic Alert function:  
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert function buzzer (Rear Cross Traffic Alert function only)  
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

## Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

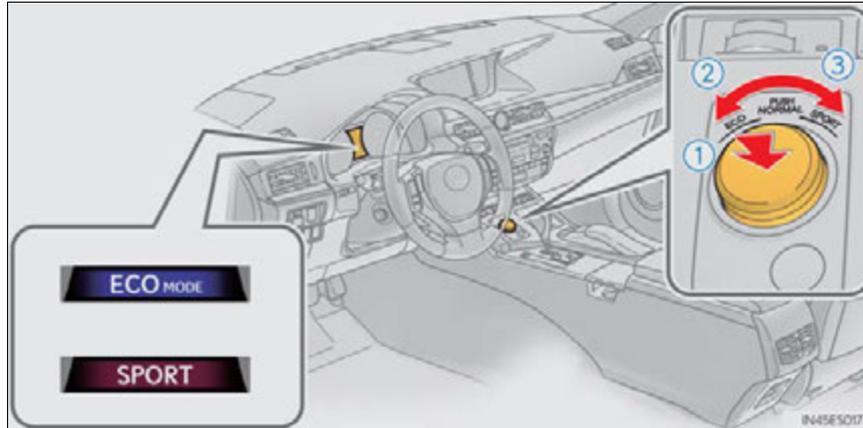

- ① Normal mode  
For normal driving.  
Press the switch to change the driving mode to normal mode when selected to Eco drive mode or sport mode.
- ② Eco drive mode  
Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.  
When not in Eco drive mode and the driving mode select switch is turned to the left, the "ECO MODE" indicator comes on in the multi-information display.
- ③ Sport mode  
Assists acceleration response by controlling the steering and hybrid system. Suitable for when precise handling is desirable, for example when driving on mountain roads.  
When not in Sport mode and the driving mode select switch is turned to the right, the "SPORT" indicator comes on in the multi-information display.  
The hybrid system indicator changes to the tachometer.

## Tire Pressure Warning System


Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

### The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

### Initializing the tire pressure warning system

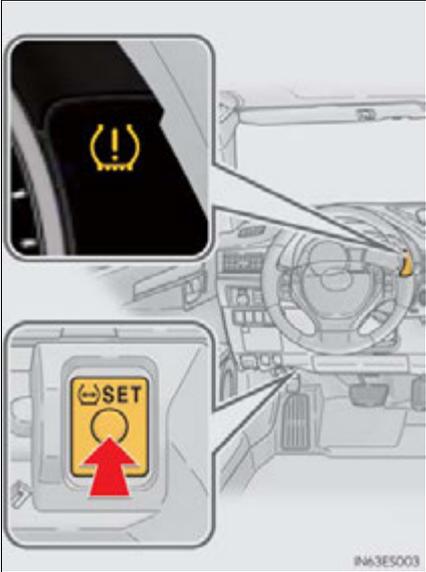


Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

## Remote Touch (with navigation system)

The Remote Touch can be used to operate the Remote Touch screens.

### Basic operation

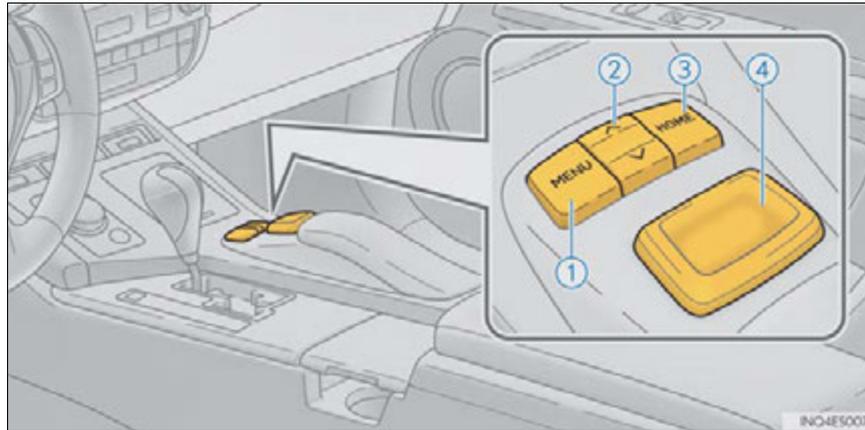

- ① "MENU" button  
Press to display the "Menu" screen.
- ② "^v" button  
Press to change the scale of the map and to scroll the list screen.
- ③ "HOME" button  
Press to display the home screen.
- ④ Remote Touch knob  
Move in the desired direction to select a function, letter and screen button.  
Press to enter the selected function, letter or screen button.

## Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Climate" (→P.84)
- ② "Nav" (→P.58)
- ③ "LEXUS App Suite"
- ④ "Info"
- ⑤ "Radio" (→P.71)
- ⑥ "Media" (→P.69)
- ⑦ "Phone" (→P.64)
- ⑧ "Setup"
- ⑨ "Display"

## Home

### ▶ Three-way split screen



Press the "HOME" button on the Remote Touch to display the home screen.

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth<sup>®</sup> connection
- ② Select to change the display items/area and the home screen layout.

### ▶ Two-way split screen



## ■ Screen scroll operation




To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

## ■ Setting a route


While route guidance is operating, you can change the route using the following method.

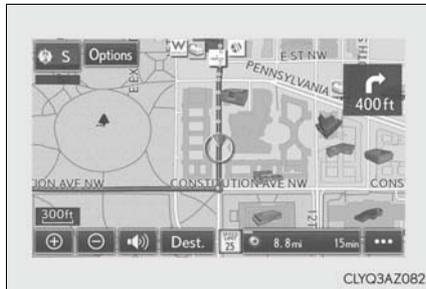

**1** Select "Options".



**2** Select "Edit Route".

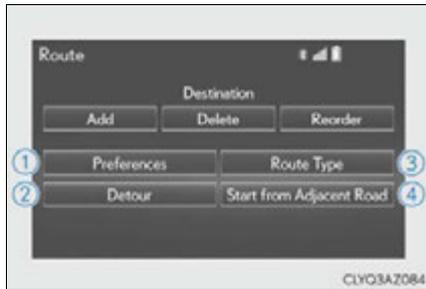



**3** Select the item to be set.

- ① Set route preferences
- ② Set detours
- ③ Change route type
- ④ Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## Navigation System (if equipped)
  
### Register home



**1** Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.

**2** Select "Setup".

**3** Select "Navigation".

**4** Select "Home".

**5** Select "Set Home Location".

**6** Select "Address".

**7** Select "City".

**8** Enter a city name and select "OK".

**9** Select the screen button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.

**10** Enter a street name and select "OK".


**11** When the desired street name is found, select the corresponding screen button.

**12** Enter a house number and select "OK".

**13** Select "OK".

## ■ Destination input — Search by address

### Select by city name

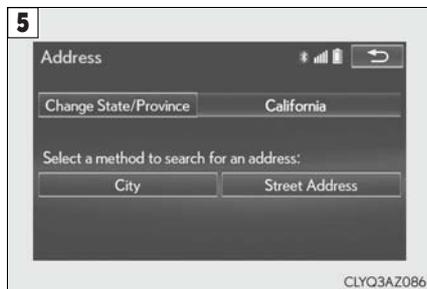

**1** Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.

**2** Select "Nav".

**3** Select "Dest".

**4** Select "Address".

**5** Select "City".

**6** Enter a city name and select "OK".

**7** Select the screen button of the desired city name from the displayed list.

**8** Enter a street name and select "OK".



**9** When the desired street name is found, select the corresponding screen button.

**10** Enter a house number and select "OK".

**11** Select "Go".

**12** Select "OK".

### Select by street address

  

**1** Press the “MENU” button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.

**2** Select “Nav”.

**3** Select “Dest”.

**4** Select “Address”.

**5** Select “Street Address”.

**6** Enter a house number and select “OK”.

**7** Enter a street name and select “OK”.

**8** When the desired street name is found, select the corresponding screen button.



**9** Enter a city name and select “OK”.

**10** Select the screen button of the desired city name from the displayed list.

**11** Select “Go”.

**12** Select “OK”.

## Destination input — Search points of interest by name

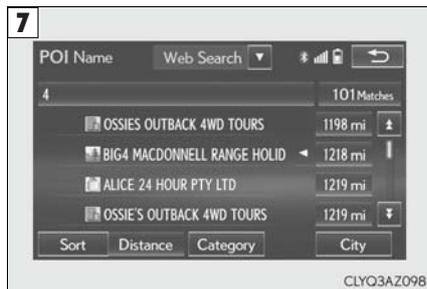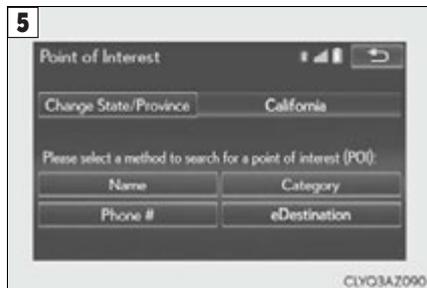

- 1** Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2** Select "Nav".
- 3** Select "Dest".
- 4** Select "Point of Interest".
- 5** Select "Name".
- 6** Enter a POI name and select "OK".
- 7** Select the screen button of the desired POI.
- 8** Select "Go".
- 9** Select "OK".

## Destination input — Search points of interest by category




1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.


2 Select "Nav".

3 Select "Dest".

4 Select "Point of Interest".

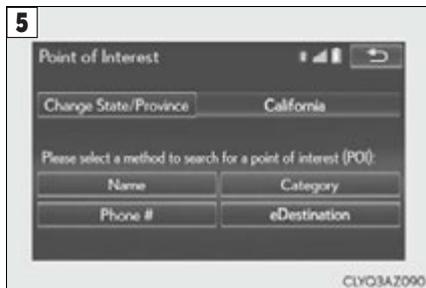


5 Select "Category".

 

6 Select "Near a Destination".

 7 Select the desired POI category from the displayed list.




8 Select the screen button of the desired POI.

9 Select "Go".

10 Select "OK".

## ■ Destination input — Search points of interest by telephone number

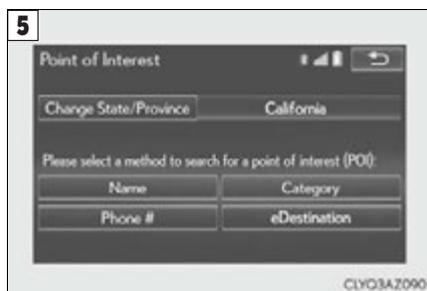

- 1** Press the “MENU” button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.
- 2** Select “Nav”.
- 3** Select “Dest”.
- 4** Select “Point of Interest”.
- 5** Select “Phone #”.
- 6** Enter a phone number and select “OK”.
- 7** Select “Go”.
- 8** Select “OK”.

## Hands-free System For Cellular Phone (with navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "[www.lexus.com/MobileLink](http://www.lexus.com/MobileLink)" (for U.S.A.) for more phone information.

To use a Bluetooth® phone, it is necessary to first register it in the system.



**1** Press  on the steering wheel.

**2** Select "Yes" or "OK".




**3** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

Refer to the cellular phone user's manual for cellular phone operation.

**4** Register the Bluetooth® device using your Bluetooth® device.




**5** Check that the following screen is displayed when registration is complete.

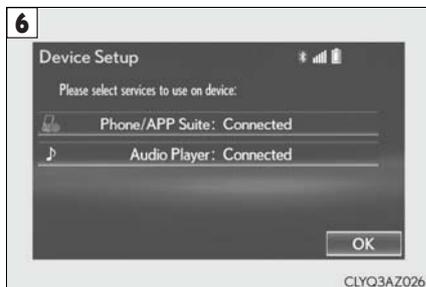

**6** Select "OK" when the connection status changes from "Connecting" to "Connected".

## ■ Contacts transfer

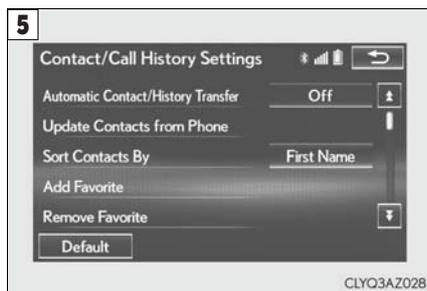

1 Press the “MENU” button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Phone”.

4 Select “Contact/Call History Settings”.

5 Select “Update Contacts from Phone”.

6 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

## ■ Registering the contacts in the favorites list



 
1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.

2 Select "Setup".


3 Select "Phone".



4 Select "Contact/Call History Settings".



5 Select "Add Favorite".

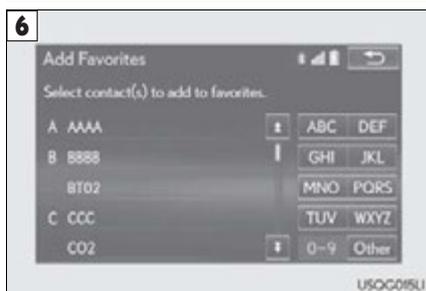


6 Select the desired contact to add to the favorites list.

7 Check that a confirmation screen is displayed when the operation is complete.

## ■ Calling by name

You can call by giving a name registered in the contacts. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

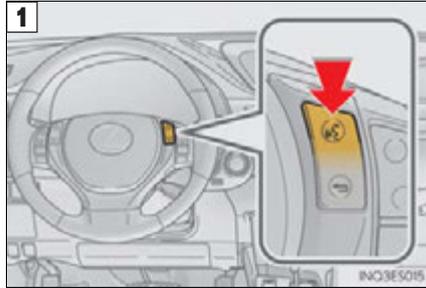


**1** Press .

**2** Say "Call <contacts> <phone types>".




: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by favorites list

 

**1** Press  on the steering wheel.

 
**2** Select the "Favorites" tab and select the desired contact.



**3** Select the desired number.

**4** Check that the "Call" screen is displayed.

## ■ Calling using e-mail/SMS/MMS message

 

- 1 Press  on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the "Call" screen is displayed.

The tab display may vary depending on the type of cellular phone.


## ■ Receiving a call



 - 1 When a call is received, this screen is displayed with a sound.
- 2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

## ■ Steering switches



- ① Sending/Receiving/"Phone" screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

## Audio System (with navigation system)

### Audio control screen


Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.54 for the Remote Touch operation.  
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.


### Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

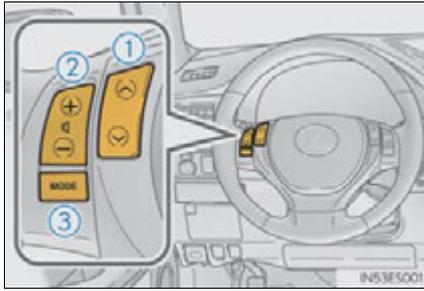

- 1 Radio mode: Selects a radio station/channel  
Audio CD mode: Selects a track  
MP3/WMA/AAC disc mode: Selects a file  
DVD mode: Selects a chapter  
iPod mode: Selects a track/file
- 2 Increases/decreases volume
- 3 Press: Change audio modes  
Press and hold: Mute/unmute or pause/resume the current operation

## ■ Basic operation

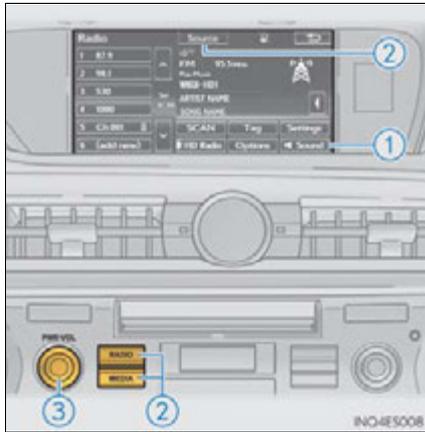

① Sound settings

② Audio sources

**"RADIO" button:**

AM: AM radio

FM: FM radio

SAT: Satellite radio<sup>\*1</sup>

**APPS (if equipped):**

Internet radio broadcast

**"MEDIA" button:**

DISC: DVD player/CD player

iPod: iPod

USB: USB memory

Bluetooth<sup>\*2</sup>: Bluetooth<sup>®</sup> audio


AUX: Auxiliary audio device

③ Power/Volume

\*1: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P.102)

\*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## ■ Radio

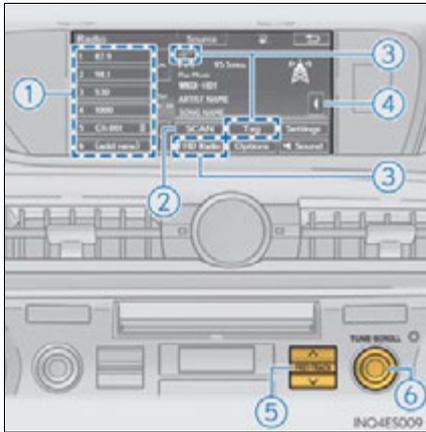

- ① Tuning to preset stations/channels
- ② Scanning for receivable stations
- ③ Using HD Radio™ Technology (for U.S.A., if equipped)
- ④ Cache radio operation buttons
- ⑤ Press: Selects a preset station  
Press and hold: Seeks for a station
- ⑥ Adjusting the frequency

### ■ Entering station presets

- 1 Tune in the desired station.
- 2 Select "add new".
- 3 Select "Yes" on the confirmation screen.
- 4 Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


## ■ DVD player/CD player

### ■ Playing an audio CD




- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a track
- ⑤ Disc slot
- ⑥ CD eject

### ■ Playing a CD with MP3/WMA/AAC files

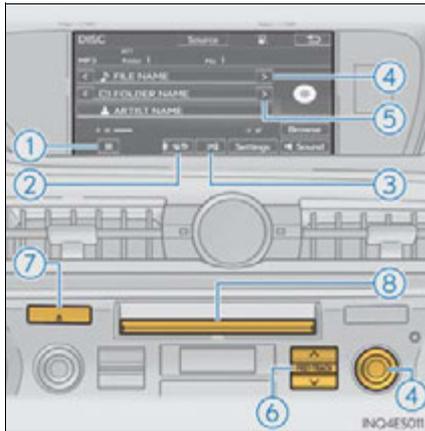

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a file
- ⑤ Selecting a folder
- ⑥ Selecting a file/fast forward/rewind
- ⑦ CD eject
- ⑧ Disc slot

## ■ Playing a DVD

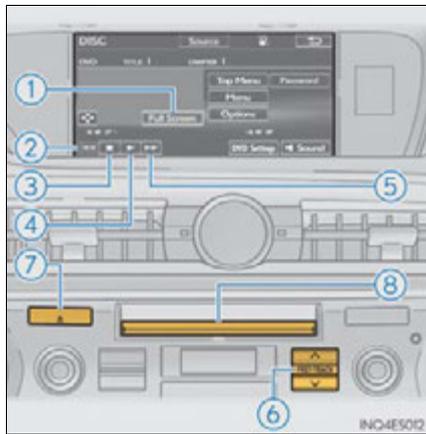

- ① Image display (full screen)
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Selecting a chapter
- ⑦ DVD eject
- ⑧ Disc slot

## ■ Operating an iPod

### ■ Playing an iPod audio



- ① Playback/pause
- ② Repeat playback
- ③ Selecting a play mode
- ④ Random playback
- ⑤ Selecting a track/fast forward/rewind

### ■ Playing an iPod video




- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

## Lexus Display Audio Controller (with Lexus Display Audio System)

By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.


### Basic operation

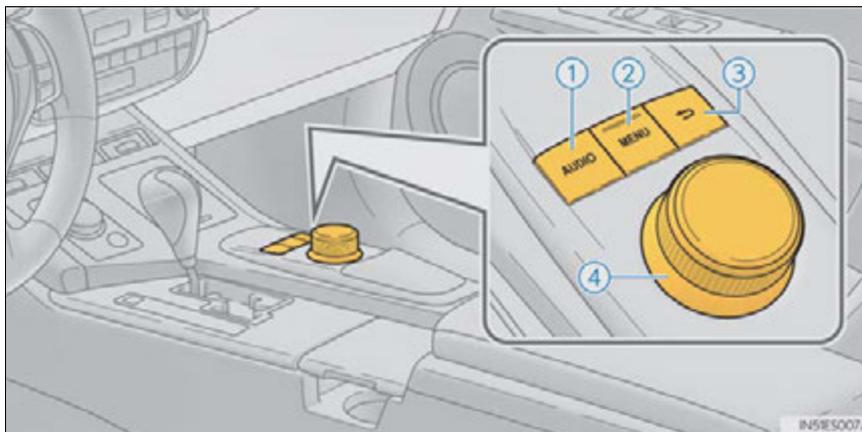

- ① Display the "Source" screen or audio top screen
- ② Display the "Menu" screen
- ③ Back button  
Display the previous screen
- ④ Turn or move the controller to select a function and number.  
Move the controller to display the left or right side of the screen.  
Push the controller to enter the selected function and number.

## ■ “Menu” screen


To display the “Menu” screen, press the “MENU” button on the controller unit.

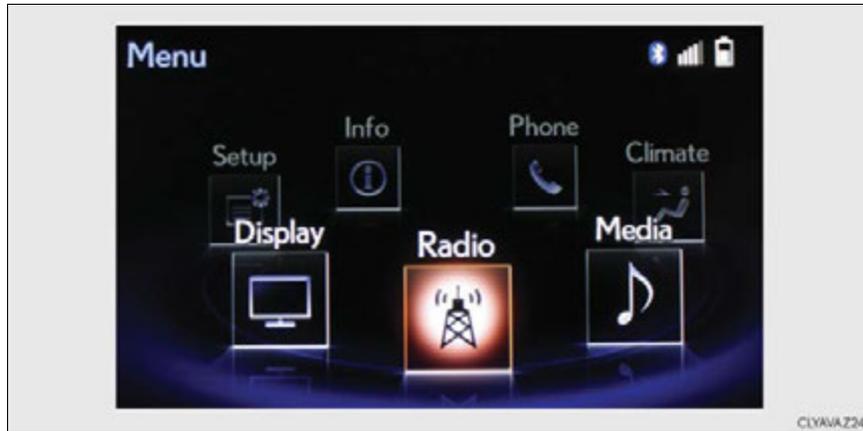

Button	Function
“Radio”	Display the radio top screen (→P.81)
“Media”	Display the media top screen (→P.81)
“Climate”	Automatic air conditioning system (→P.84)
“Phone”	Display the phone top screen
“Info”	Display the “Information” screen
“Setup”	Setup menu
“Display”	Display settings

## ■ Screen for display settings

Go to “Display”: “MENU” button → “Display”

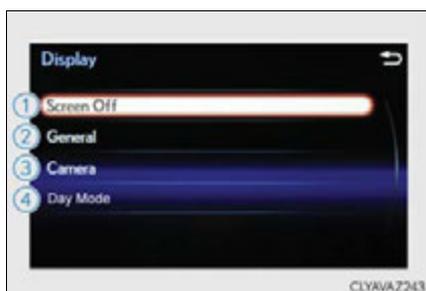

- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the rear view monitor camera.
- ④ Change to day mode.

## Hands-free System For Cellular Phone (with Lexus Display Audio System)

### How to register a Bluetooth® phone

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "[www.lexus.com/MobileLink](http://www.lexus.com/MobileLink)" (for U.S.A.) for phone information.

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to "Bluetooth\* Setup": "MENU" button → "Setup" → "Bluetooth\*"
- 3 Move the controller to the left and then select "Add Device"



- 4 When this screen is displayed, input the passcode displayed on the screen into your Bluetooth® phone.
- 5 Register the Bluetooth® phone using your Bluetooth® phone.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "MENU" button → "Setup" → "Phone" → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

### Dialing

- 1 Go to "Dial Pad": "MENU" button → "Phone" → "Dial Pad"
- 2 Input a phone number.
- 3 Press the off-hook switch on the steering wheel or select .

### Dialing from the phonebook

- 1 Go to "Contacts": "MENU" button → "Phone" → "Contacts"
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

## ■ When the phonebook is empty

---

You can transfer the phone numbers in a Bluetooth® phone to the system. Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.


- 1 Press the off-hook switch on the steering wheel.  
If the phonebook is empty, a message will be displayed.

► For a PBAP compatible Bluetooth® phone and “Automatic Transfer” is off



- 2 To transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Transfer”.  
Select “Once” if you want to transfer new contacts from a cellular phone.

► For a PBAP incompatible and OPP compatible Bluetooth® phone

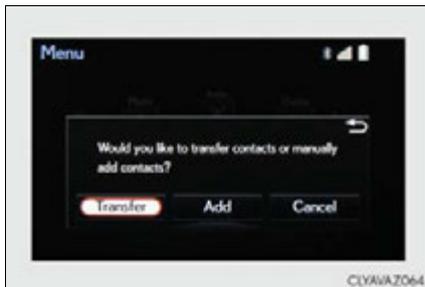

- 2 Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.  
Select “Add” if you want to add a new contact manually.


## ■ Dialing from favorites

---

You can make a call using numbers registered in the favorites.

- 1 Go to “Favorites”: “MENU” button → “Phone” → “Favorites”
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

## ■ To answer the phone

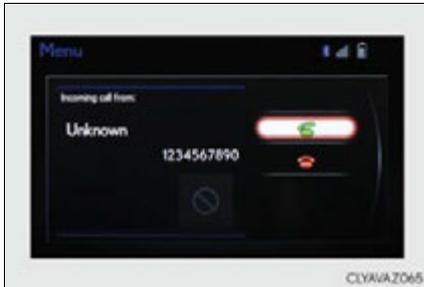


- 1 When a call is received, the following screen is displayed together with a sound.
- 2 Press the off-hook switch on the steering wheel or select .

## ■ To refuse a call

 Press the on-hook switch on the steering wheel or select .


## ■ Operating a telephone using the steering wheel switches



- 1 Off-hook switch
  - Start call
  - Receiving
  - Phone top screen display
- 2 On-hook switch
  - End call
  - Refuse call
- 3 Talk switch
  - Press: Turns the voice command system on
  - Press and hold: Turns the voice command system off
- 4 Volume switch
  - During an incoming call: Adjusts the ring tone volume
  - During speaking on the phone: Adjusts in call volume
  - The voice guidance volume cannot be adjusted using this button.

## Audio System (with Lexus Display Audio System)

### ■ Lexus Display Audio operation buttons

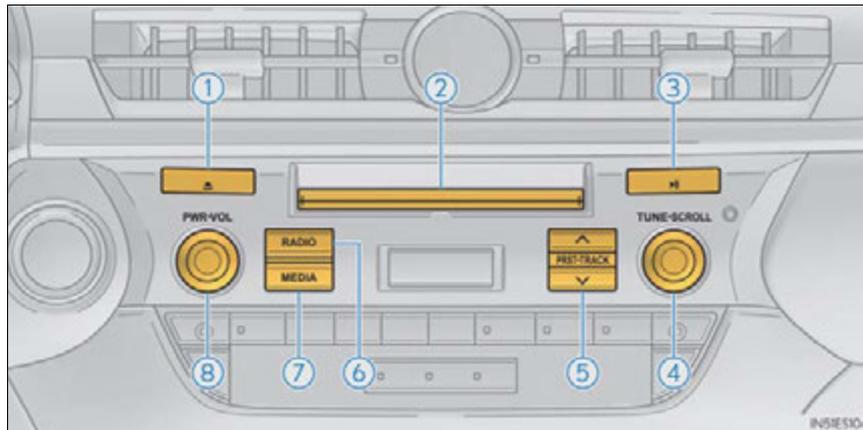

- ① Eject a disc.
- ② Disc slot
- ③ Except radio and A/V mode: Pause or resume playing a track.  
Radio and A/V mode: Turn mute on/off
- ④ "TUNE-SCROLL" knob  
Select a radio station band, track or file.
- ⑤ Selects a preset radio station, or to access a desired track or file.
- ⑥ Display the radio top screen.
- ⑦ Display the media top screen.
- ⑧ "PWR-VOL" knob  
Press to turn the audio system on/off, and turn to adjust the volume.

### ■ Using the steering switches to change audio sources

Press the "MODE" switch when the audio system is turned on. The audio source changes each time the "MODE" switch is pressed.

## ■ Audio menu screen

To display the audio menu screen, move the controller to the left while on an audio top screen.

### ▶ AM, FM radio or XM Satellite Radio \*



- ① Scan for receivable stations (AM, FM radio)
- ② Seek a station of the nearest frequency (stops when a station is found) (AM, FM radio)
- ③ Captures the song title and artist name information for potential purchase (when the "HD" indicator on the selected station is appears) (FM radio)
- ④ Changes the channel of HD Radio (HD2, HD3, HD4 where applicable) (FM radio)
- ⑤ Seek a station of the traffic announcement (FM radio)
- ⑥ Select to set the station list shows of HD radio on/off (AM, FM radio)
- ⑦ Change radio settings
- ⑧ Change sound settings


\*: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P.102)

► CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth®




- ① Play or pause a track/file
- ② Select a track/file
- ③ Select a folder/album (MP3/WMA/AAC disc or USB)
- ④ Select and hold: Fast-forward or rewind a track/file
- ⑤ Select a repeat mode.
- ⑥ Select a random/shuffle play mode.
- ⑦ Select a full screen mode (iPod video mode)
- ⑧ Change iPod settings (iPod)
- ⑨ Change USB settings (USB)
- ⑩ Connect a Bluetooth device (Bluetooth®)
- ⑪ Change the cover art settings (CD or MP3/WMA/AAC disc)
- ⑫ Change sound settings

► A/V

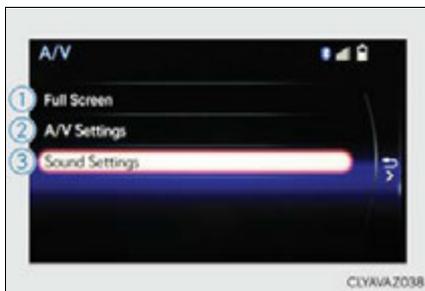

- ① Select full screen mode
- ② Change A/V settings
- ③ Change sound settings

## ■ Operating the audio system using the steering wheel switches

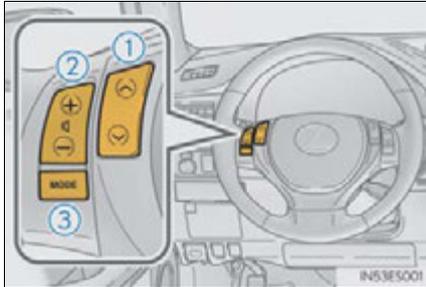

- ① Radio mode:
  - Press: Selects a radio station
  - Press and hold: Seeks up/down CD, MP3/WMA/AAC disc, Bluetooth<sup>®</sup>, iPod or USB mode
- ② Volume switch
  - Press: Increases/decreases volume
  - Press and hold: Continuously increases/decreases volume
- ③ "MODE" switch
  - Press: Turns the power on, selects audio source
  - Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.

## Air Conditioning System



### ■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

### ■ Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.  
Press the "OFF" button to turn the fan off.

### ■ Change the airflow mode

To change the air outlets, press .

The air outlets used are switched each time the button is pressed.

## ■ Control screen

### ▶ Vehicles with a Lexus Display Audio system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ "AUTO": Select to set automatic mode on/off  
"OFF": Turn the fan off  
: Display the option control screen
- ④ Select the air flow mode
  - : Air flows to the upper body
  - : Air flows to the upper body and feet
  - : Air flows to the feet
  - : Air flows to the feet and the windshield defogger operates
- ⑤ Adjust the right-hand side temperature setting

► Vehicles with a navigation system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
  -  : Air flows to the upper body
  -  : Air flows to the upper body and feet
  -  : Air flows to the feet
  -  : Air flows to the feet and the windshield defogger operates
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen
- ⑥ Turn the fan off
- ⑦ Select to set automatic mode on/off

## ■ Option control screen

---

Select **\*\*\*** on the climate screen to display the option control screen. The functions can be switched on and off.

### ▶ Vehicles with a Lexus Display Audio system



- ① Select to set cooling and dehumidification function on/off
- ② Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)
- ③ Prevent ice from building up on the windshield and wiper blades (if equipped)
- ④ Remove pollen from the air (Micro dust and pollen filter)

### ▶ Vehicles with a navigation system



## ■ Using the automatic mode

---

Press the "AUTO" button to turn on the airflow and adjust the temperature setting.

## ■ Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)


---

To turn on the "DUAL" mode, perform any of the following procedures:

- Press the "DUAL" button.
- Select "DUAL" on the option control screen.
- Adjust the passenger's side temperature setting.

## Voice Command System

### Basic operation

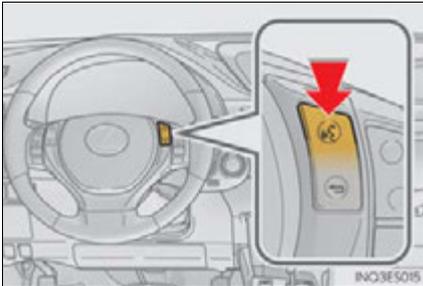

- 1** Press the talk switch.  
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.  
On the list screen, you can select the desired command.

Continue on to pages 89-92 for a detailed list of Voice Commands for the following categories:

Basic.....	P.89
Apps.....	P.89
Navi.....	P.89
Phone.....	P.90
Audio.....	P.90
Info.....	P.91
Other.....	P.92

- Important voice commands information and tips
  - Voice commands can be used while driving.
  - You must wait until after the beep to say a command.
  - In vehicles with a navigation system, a large  (TALK icon) will appear on the navigation screen to prompt you to say a command.
  - If you know what command to use, you can press  at any time to interrupt the voice guidance.

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

## ■ Command list

### ▶ Basic (vehicles with a Lexus Display Audio System)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab

### ▶ Basic (Vehicles with a navigation system)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

### ▶ Apps (vehicles with a navigation system) (for U.S.A., if equipped)

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

### ▶ Navi (vehicles with a navigation system)

Command	Action
"Find <POI category>"	Displays a list of <POI category <sup>*1</sup> > near the current position <sup>*2</sup>
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

\*1: For example; "Gas stations", "Restaurants", etc.

\*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► Radio (vehicles with a navigation system)

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

► Audio (vehicles with a Lexus Display Audio System)

Command	Action
"Play Playlist <playlists>"	Plays tracks from the selected playlist
"Play Artist <artist>"	Plays tracks from the selected artist
"Play Song <songs>"	Plays the selected track
"Play Album <albums>"	Plays tracks from the selected album
"Turn Music On/Off"	Turns the audio system on/off
Audio source name	Selects audio source

► **Audio (vehicles with a navigation system)**

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album

► **Info (vehicles with a navigation system) (for U.S.A., if equipped)**

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"	Displays the Lexus insider list

► **Info (vehicles with a Lexus Display Audio System)**

Command	Action
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

► Other (vehicles with a navigation system)

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees <sup>*1</sup>
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth <sup>*2</sup> Audio"	Selects Bluetooth <sup>®</sup> audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

 
\*1: Only within the possible temperature range of the air conditioning system

\*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".


## Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Open the console box, open the cover and connect the portable audio device.

## Seat Heaters and Ventilators (if equipped)

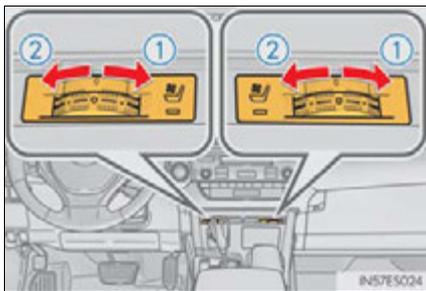


- ① Heats the seat  
The indicator light comes on.  
The higher the number of dots, the warmer the seat becomes.
- ② Blows air from the seat  
The indicator light comes on.  
The higher the number of dots, the stronger the airflow becomes.

## Rear Sunshade/Rear Door Sunshades (if equipped)


### Rear sunshade

The rear sunshade can be raised and lowered by operating the button shown below.

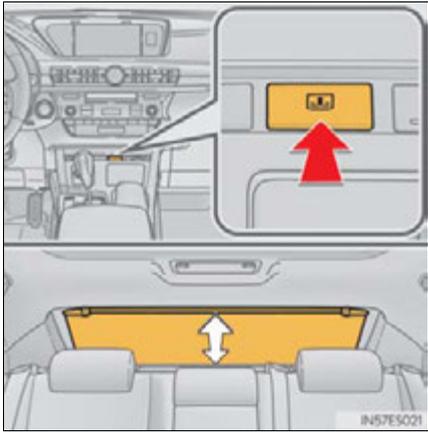

Raise/lower

### Rear door sunshades

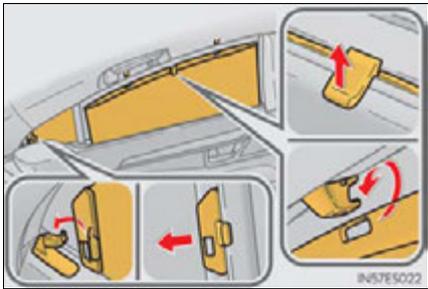


Pull the tab of the rear door sunshade and hook the shade on using the anchors.

To retract the rear door sunshade, unhook the shade and retract it slowly.

## Trunk Storage Extension (if equipped)

 Long objects can be loaded into the vehicle by utilizing the trunk space and rear seat area.



**1** Fold down the armrest.



**2** Fold down the handle and open the armrest door.


## Garage Door Opener

 The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink<sup>®</sup> Universal Transceiver) is manufactured under license from HomeLink<sup>®</sup>.

### ■ Programming the HomeLink<sup>®</sup>

The HomeLink<sup>®</sup> compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.




① Indicator light

② Buttons

## ■ Programming HomeLink®

---

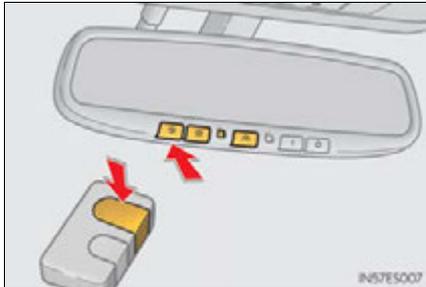

- 1** Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.
- 2** Press and hold down the desired HomeLink® button.
- 3** For U.S.A. owners:  
While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.  
For Canadian owners:  
While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4** Press the training button on the motor-head unit in your garage.
- 5** Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.  
If the door does not open, press and release the same button once again.

## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the OWNER'S MANUAL.

 
To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink®

---



Press the appropriate HomeLink® button.  
The indicator light should come on.


## Lexus Enform Safety Connect (for U.S.A., if equipped)

 Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

## ■ System components

---



- ① "SOS" button
- ② LED light indicators
- ③ Microphone

## ■ Services

---

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification\***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

## **Lexus Enform (for U.S.A., if equipped)**

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### **Function achieved by using a cellular phone (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

#### **● LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

#### **Subscription**

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

● **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ **Function achieved by using DCM**

---

■ **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P:98)

■ **LEXUS Enform Remote**

---

■ **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to

<http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

■ **Subscription**

→P:101

## **XM Satellite Radio**

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### **Subscription**

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.xmradio.ca](http://www.xmradio.ca) (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-515-3987

► **Canadian Customers:**

 
Visit [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-438-9677

## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.


For details the entry function or wireless remote control (→ P.18, 19)

### ■ Door lock switch



- ① Locks all the doors
- ② Unlocks all the doors


### ■ Inside lock button

 

- ① Locks the door
- ② Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

## ■ Rear door child-protector lock

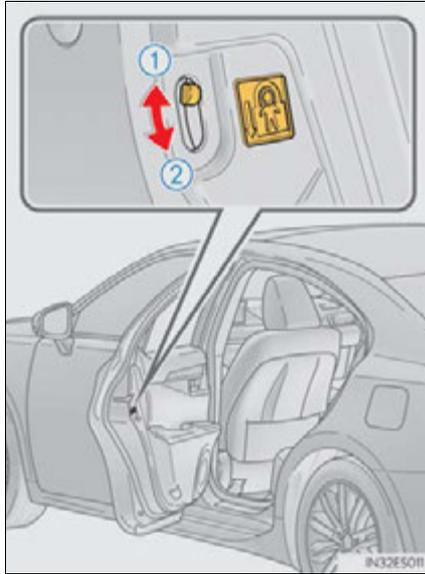


The door cannot be opened from inside the vehicle when the lock is set.

- ① Unlock
- ② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

## ■ Power Windows

 
### ■ Power window switches



- ① Closing
- ② One-touch closing\*
- ③ Opening
- ④ One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

### ■ Window lock switch

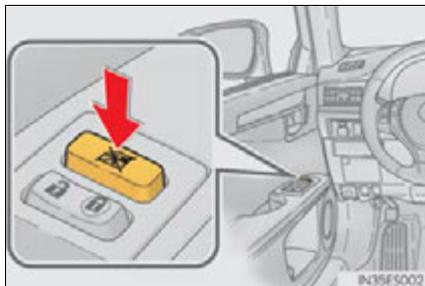


Press the switch down to lock the passenger window.

Use this switch to prevent children from accidentally opening or closing a passenger window.

## Moon Roof

 
### Opening and closing



- ① Opens the moon roof\*  
The moon roof stops slightly before the fully open position to reduce wind noise.  
Press the switch again to fully open the moon roof.

- ② Closes the moon roof\*  
\*: Lightly press either of the moon roof switches to stop the moon roof partway.

### Tilting up and down

 

- ① Tilts the moon roof up\*
- ② Tilts the moon roof down\*


- \*: Lightly press either of the moon roof switches to stop the moon roof partway.

## Fuel Tank Cap


### ■ Before refueling the vehicle

- Close all the doors and windows, and turn the "POWER" switch off.
- Confirm the type of fuel.


### ■ Opening the fuel tank cap

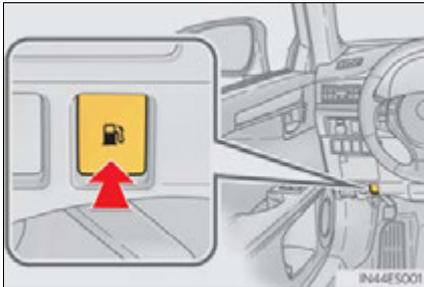

 - 1** Press the opener switch to open the fuel filler door.



- 2** Turn the fuel tank cap slowly to open.

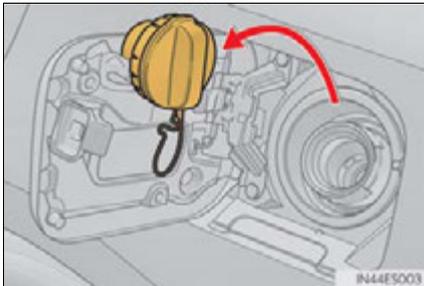


- 3** Hang the fuel tank cap on the back of the fuel filler door.


# Trunk

## Opening the trunk

- From inside the vehicle

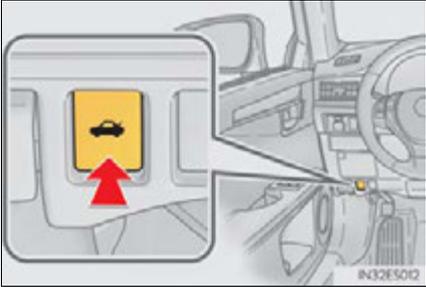

 Press the opener switch.  
If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully




Turn the main switch in the glove box off to disable the trunk opener.

- ① On
- ② Off

The trunk lid cannot be opened even with the wireless remote control or the trunk release button.

- From outside the vehicle
  - Trunk release button

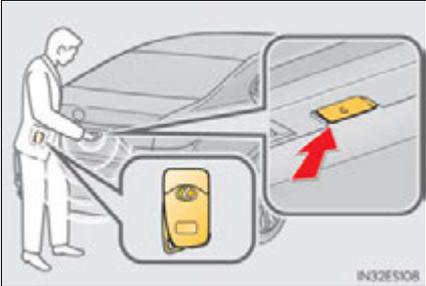

While carrying the electronic key, press the button on the trunk lid.

When all the doors are unlocked with the power door lock system, the trunk can be opened without carrying the electronic key.

- Wireless remote control  
→P.19


■ **Trunk easy closer (vehicles with power trunk opener and closer)**

---

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position.

■ **Trunk closer switch (vehicles with power trunk opener and closer)**

---

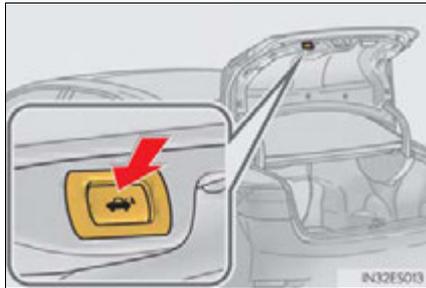

Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.

**What to do if...**

**List of Warning/Indicator Lights**

**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**

-  (U.S.A.)  
Brake system warning light
-  (Canada)

**Stop the vehicle immediately.**

-  Charging system warning light

**Have the vehicle inspected immediately.**

- |  |   |
|--|---|
|  (U.S.A.)<br>Malfunction indicator lamp         |  (Flashes)<br>"PCS" warning light (if equipped)                    |
|  (Canada)                                     |  Slip indicator  |
|  SRS warning light                            |  Brake system warning light                                      |
|  (U.S.A.)<br>ABS warning light                |  Tire pressure warning light                                     |
|  (Canada)                                     | (Blinking and then continuously on)   |
|  Electric power steering system warning light |  Automatic headlight leveling system warning light (if equipped) |

**For further information, refer to the OWNER'S MANUAL.**

## What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



Tire pressure warning light\*



Seat belt reminder light

(Illuminates  
without  
blinking)

For further information, refer to the **OWNER'S MANUAL**.

\*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

**What to do if...**

**See the OWNER'S MANUAL**


	Turn signal indicator		Cruise control "SET" indicator
	Headlight indicator (U.S.A.)		"LDA" (Lane Departure Alert) indicator (if equipped)
	Tail light indicator (Canada)		Intuitive parking assist indicator (if equipped)
	Headlight high beam indicator		Slip indicator
	Automatic High Beam indicator (if equipped)		VSC OFF indicator
	Fog light indicator		"PCS" warning light (if equipped)
	"READY" indicator		BSM outside rear view mirror indicators (if equipped)
	EV indicator		"AIR BAG ON/OFF" indicator
	Cruise control indicator		
	Radar cruise control indicator (if equipped)		

**For further information, refer to the OWNER'S MANUAL.**

## What to do if...

### If the electronic key does not operate properly

#### Unlocking and locking the doors

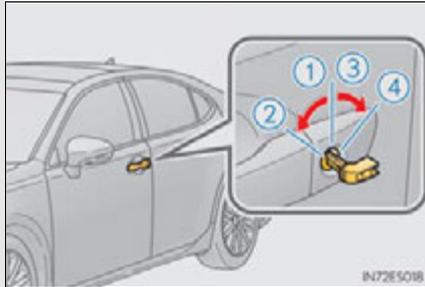


Use the mechanical key (→P.18) in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof\* (turn and hold)
- ③ Unlocks the door  
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof\* (turn and hold)

\*: This setting must be customized at your Lexus dealer.


#### Unlocking the trunk

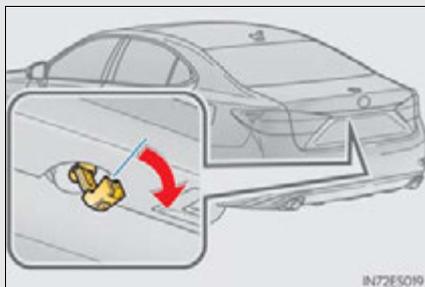

Turn the mechanical key clockwise to open.

## What to do if...

### Starting the hybrid system

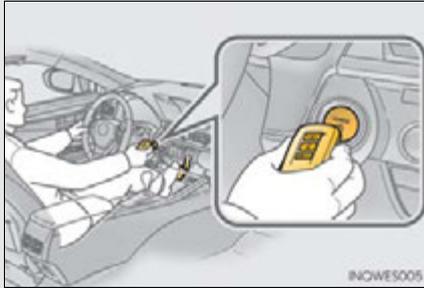

- 1 Ensure that the shift lever is in P and depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch. The "POWER" switch will turn to ON mode. When the smart access system with push-button start is deactivated in customization setting, the "POWER" switch will turn to ACCESSORY mode.
- 3 Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4 Press the "POWER" switch.

In the event that the hybrid system still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the OWNER'S MANUAL. If you need further assistance, contact your Lexus dealer.

### If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.28)

If the hybrid system still does not start, see the OWNER'S MANUAL for more information or contact your Lexus dealer.



#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)

- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)

- Canada: [www.lexus.ca](http://www.lexus.ca)

©2014 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.