

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Hybrid System

- Hybrid System ▶ P.9
- Energy Monitor / Consumption Screens ▶ P.10



Topic 2

Entering and Exiting

- Keys ▶ P.13
- Smart Access System with Push-button Start ▶ P.14
- Theft Deterrent System ▶ P.15

Topic 3

Before Driving

- Front Seats ▶ P.17
- Head Restraints ▶ P.18
- Seat Belts ▶ P.19
- Outside Rear View Mirrors ▶ P.20
- Anti-glare Inside Rear View Mirror ▶ P.21
- Steering Wheel ▶ P.21



Topic 4


When Driving

- Dynamic Radar Cruise Control ▶ P.32
- Head-up Display ▶ P.34
- Electronically Modulated Air Suspension ▶ P.35
- Power (Ignition) Switch ▶ P.23
- Transmission ▶ P.24
- Intuitive Parking Assist ▶ P.26
- Multi-information Display and Switch ▶ P.27
- Eco Driving Indicator Light ▶ P.29
- Parking Brake ▶ P.29
- Turn Signal Lever ▶ P.30
- Emergency Flasher Switch ▶ P.30
- Cruise Control ▶ P.31

Topic 5

Rain and Night Driving

- Headlights ▶ P.37
- Automatic High Beam ▶ P.39
- Windshield Wipers and Washer ▶ P.40
- Rear Window Wiper and Washer ▶ P.42
- Rear Window and Outside Rear View Mirror Defoggers ▶ P.43

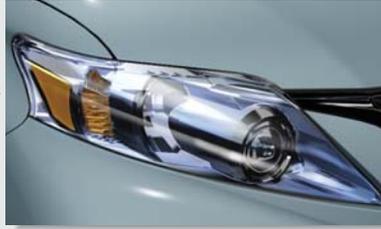

- Power Outlets ▶ P.86
- Garage Door Opener ▶ P.87
- Rear Seat Entertainment System ▶ P.89

Topic 6

Driving Comfort

- Remote Touch ▶ P.45
- Navigation System ▶ P.48
- Hands-free System For Cellular Phone ▶ P.54, 67
- Audio System ▶ P.62, 73
- Air Conditioning System ▶ P.66, 78
- Speech Command System ▶ P.79
- Portable Audio Device Adapters ▶ P.85

Topic 7

Opening and Closing

- Door Locks ▶ P.99
- Power Windows ▶ P.100
- Moon Roof ▶ P.101
- Fuel Tank Cap ▶ P.102
- Hood ▶ P.102
- Back Door ▶ P.103



What to do if ...





Responding to warning/indicator lights and other problems that may arise.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

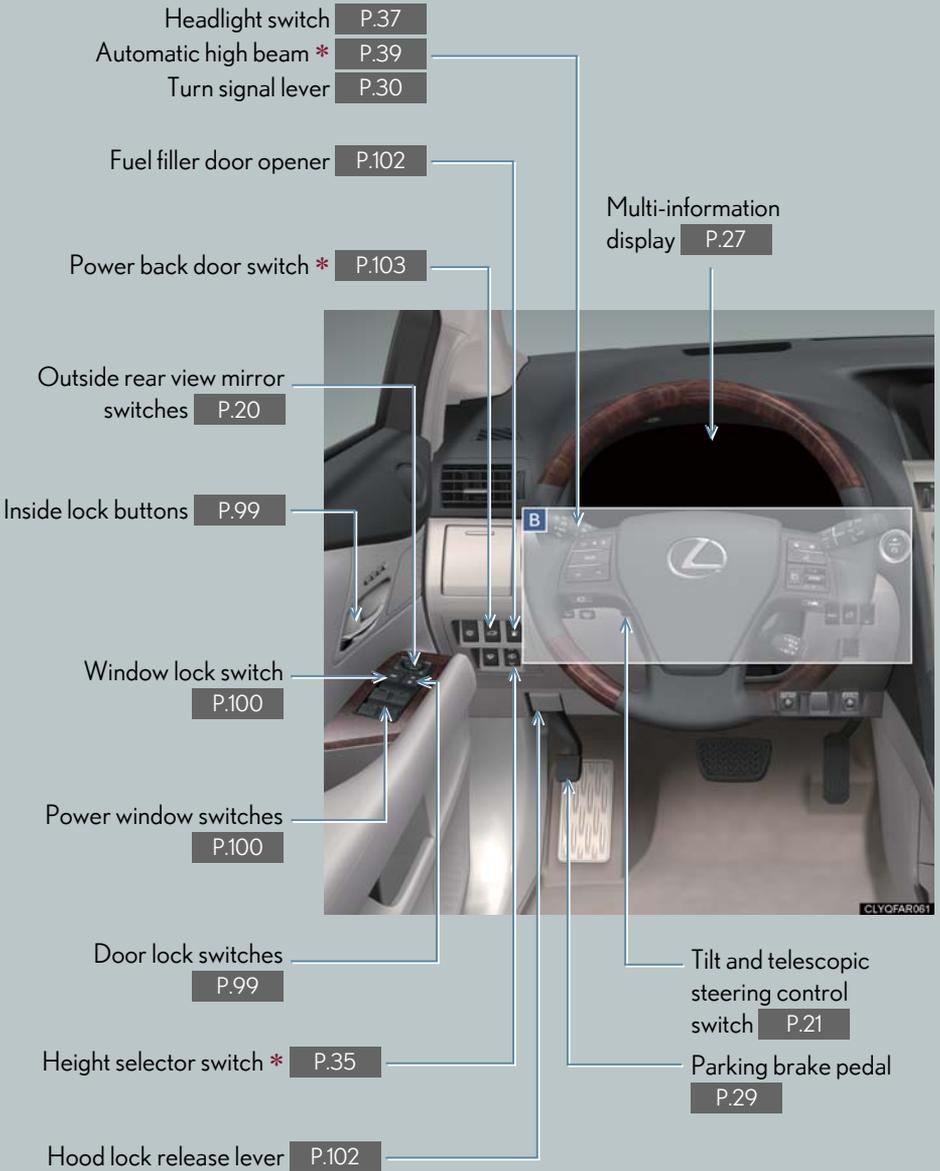

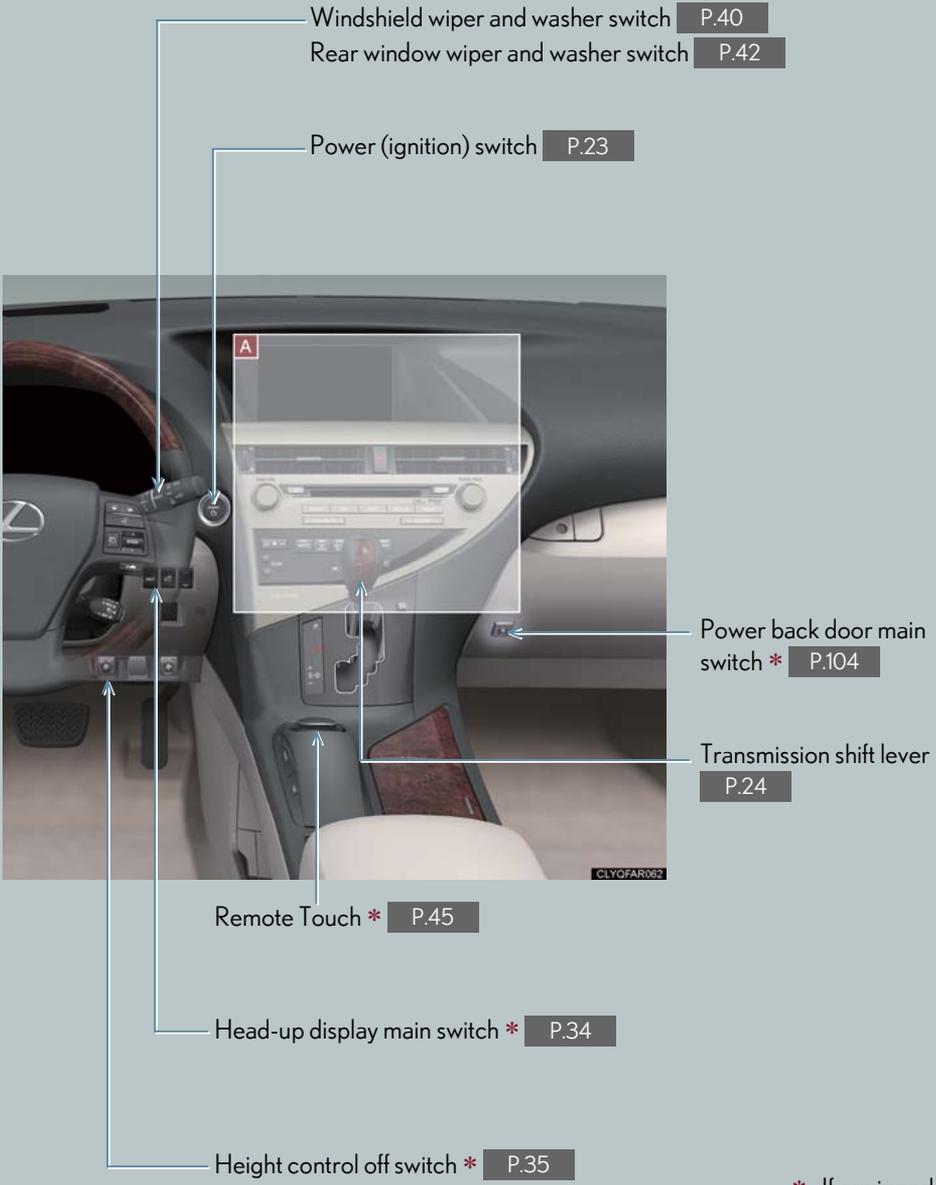

* : If equipped

A

► With navigation system

Emergency flasher switch P.30

Audio system P.62



Navigation system P.48

Air conditioning system P.66

Rear window and outside rear view mirror defoggers P.43

A

► Without navigation system

Emergency flasher
switch P.30

Audio system
P.73

Air conditioning
system P.78



Rear window and
outside rear view
mirror defoggers
P.43

B

Audio remote control switches P.65, 77

Multi-information switches P.27



Cruise control switch P.31, 32

Distance switch * P.32

* : If equipped



Topic 1

Hybrid System

Hybrid System	9
Energy Monitor / Consumption Screens	10



Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicles, and operate with care. The hybrid system combines a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions. For details, refer to the "Owner's Manual".

Hybrid System Indicator



Displays the output and regenerative level of the hybrid system.

- By keeping the indicate within the Eco area, more fuel-efficient driving can be achieved.
- The Charge area indicates regeneration status.

Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released.
- The brake pedal is depressed with the shift lever in D or S.

Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibrations even though the vehicle is able to move. Always put the shift lever in P when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Vibrations may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seat.

Energy Monitor / Consumption Screens

You can view the status of your hybrid system on the multi-information display and the Navigation system screen.

Energy monitor

The energy monitor can be displayed on both the Navigation system screen and the multi-information display.

- How to display on the Navigation system screen (→P.45):

Press the “MENU” button, and select




after that select



If the **Consumption** or **Past Record** screen is displayed, select the **Energy** and push the “ENTER” button.

- How to display on the multi-information display:

Toggle the “ENTER” switch on the steering wheel upward or downward through several times to select the energy monitor display.

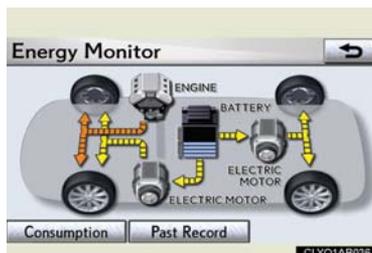

- The flow of energy is displayed on the Navigation system screen. (The rear electric motor is equipped AWD models only.)

Amber: gasoline energy

Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.

- The flow of energy is indicated by the movement of the arrows on the multi-information display.
- The battery display acts as an 9-step indicator of the hybrid battery level.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.



■ Consumption (with navigation system)

Press the “MENU” button and select




, after that select



and push the “ENTER”.

If the **Consumption** screen does not appear, select the **Consumption** and push the “ENTER” button.

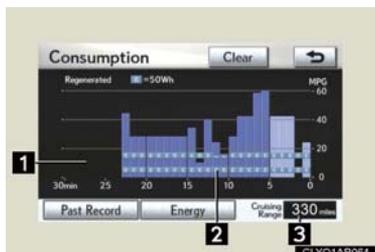

- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3 Cruising range

■ Past record (with navigation system)

Press the “MENU” button and select




, after that select



and push the “ENTER”.

If the **Past Record** screen does not appear, select the **Past Record** and push the “ENTER” button.

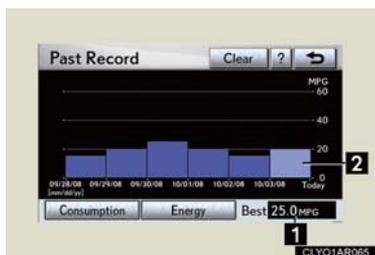

- 1 Best past fuel consumption
- 2 Average fuel consumption

■ Hybrid warning message

A message is automatically shown when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.



Topic 2

Entering and Exiting

Keys	13
Smart Access System with Push-button	
Start	14
Theft Deterrent System.....	15



Keys

Electronic key



Smart access system with push-button start (→P.14, 23)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
- 3 Press and hold:** opens and closes the back door*
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

*: If equipped

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag. For details on starting the hybrid system, see page 23.

Entering the vehicle




To unlock the vehicle, simply grasp either of the front door handles.

Exiting the vehicle



To lock the vehicle, touch the lock sensor on either of the front door handles.

Locking and unlocking the back door

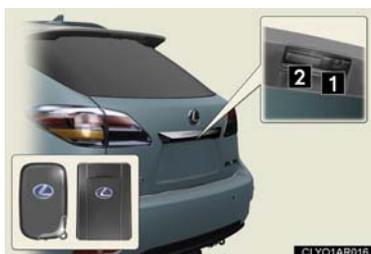

- 1 Locks
- 2 Unlocks

For details on what to do when the electronic key does not operate properly, see page 107.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

Immobilizer system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: start the hybrid system, or unlock the doors.

Steering lock



The steering wheel locks when the "POWER" switch is turned OFF and the driver's door is opened.

When the steering lock cannot be released, the green indicator light on the "POWER" switch will flash and a message will be shown on the multi-information display. To release it, press the "POWER" switch while gently turning the wheel left or right.



Topic 3

Before Driving

Front Seats.....	17
Head Restraints	18
Seat Belts.....	19
Outside Rear View Mirrors	20
Anti-glare Inside Rear View Mirror.....	21
Steering Wheel	21



Front Seats

■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

■ Adjusting the lumbar support




- 1 Firmer
- 2 Softer

■ Adjusting the seat cushion length (if equipped)



- 1** Lengthens the seat cushion
- 2** Shortens the seat cushion

■ Head Restraints

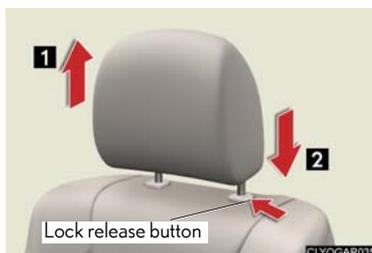

- 1** To raise: push the head restraint upward.
- 2** To lower: push the head restraint down while pressing the lock release button.



Seat Belts

Adjusting shoulder belt height (front seats)



- 1 To raise:** push the anchor upward.
- 2 To lower:** depress the button and push the anchor down.

Seat belt comfort guide (outside rear seats)



If the shoulder belt sits close to the neck, pass the seat belt through the comfort guide.

Outside Rear View Mirrors

Adjusting the mirrors



- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjusts the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing. This function only operates when either "L" or "R" mirror select button is selected.

Folding and extending the mirrors (if equipped)



- 1 Using the switch
- 2 Setting the automatic mode

Automatic mode allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.



Anti-glare Inside Rear View Mirror

The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn automatic mode on/off, press the "AUTO" button.

The indicator comes on when automatic mode is turned on.

Steering Wheel



- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "POWER" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "POWER" switch is switched to ACCESSORY or ON mode.

Vehicles with driving position memory: When exiting the vehicle, the steering wheel retracts only when the driver's seat movement is in a setting other than off and the driver seat belt has been unfastened.

When entering the vehicle, fastening the driver seat belt returns the steering wheel to its previously set position.



Topic 4

When Driving

Power (Ignition) Switch	23
Transmission.....	24
Intuitive Parking Assist	26
Multi-information Display and Switch	27
Eco Driving Indicator Light	29
Parking Brake.....	29
Turn Signal Lever.....	30
Emergency Flasher Switch.....	30
Cruise Control	31
Dynamic Radar Cruise Control.....	32
Head-up Display	34
Electronically Modulated Air Suspension.....	35

Power (Ignition) Switch

With the electronic key on your person, the hybrid system can be started by simply pressing the "POWER" switch, while depressing the brake pedal. (The mechanical key cannot be used to start the hybrid system.)

Starting the hybrid system



Make sure the parking brake is set and the shift lever is in P.


- 1] Depress the brake pedal.
The "POWER" switch indicator light turns green.
- 2] Press the "POWER" switch.
When the "READY" indicator changes from flashing to on, the hybrid system is properly started.

Stopping the hybrid system

- 1] Set the parking brake and shift the shift lever to P.
- 2] Press the "POWER" switch.

Changing "POWER" switch mode

To change the "POWER" switch mode without turning on the hybrid system, press the "POWER" switch without depressing the brake pedal. The mode can be changed in the following order:

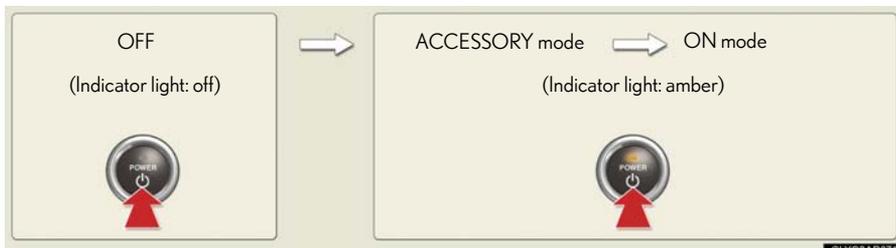

Transmission

Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

← The vehicle can only be shifted out of P when the “POWER” switch is in ON mode and the brake pedal is depressed.

S mode

S mode allows the driver to select the shift range manually based on driving conditions.



1 Shift the shift lever to S.



2 To upshift: shift the shift lever toward “+”.
To downshift: shift the shift lever toward “-”.

The selected shift range is displayed on the instrument cluster.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



EV drive mode

In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas late at night or in indoor parking lots etc. without concern for noises and gas emissions.



- 1 Press the menu switch
- 2 Press the “ENTER” switch upwards or downwards until “EV” appears.



- 3 Press the “ENTER” switch to select on/off.

Press the menu switch to change to the normal display.

Depending on the situation, it may not be possible to turn on EV drive mode.

Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Turning the system on and off




- 1 Press the menu switch
- 2 Press the "ENTER" switch upwards or downwards until the Intuitive parking assist mark appears in the multi-information display.



- 3 Press the "ENTER" switch to select on/off.

Press the menu switch to change to the normal display.

Screen display

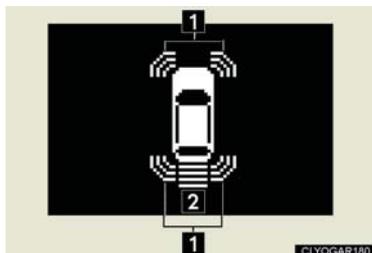

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors



Multi-information Display and Switch


The multi-information display shows information about your vehicle, including the items shown below.

Multi-information switches



- 1 Menu switch
Changes modes to electronic features control mode, customization mode or back to normal display mode.
- 2 "ENTER" switch
Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

Display contents

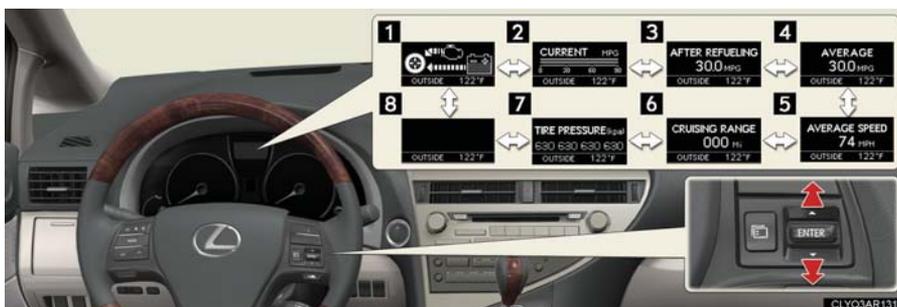


Trip information contents

- 1 Energy monitor
- 2 Current fuel consumption
- 3 Average fuel consumption after refueling
- 4 Average fuel consumption
- 5 Average vehicle speed
- 6 Cruising range
- 7 Tire inflation pressure
- 8 - (off)

Switching display items

Press the "ENTER" switch upwards or downwards.

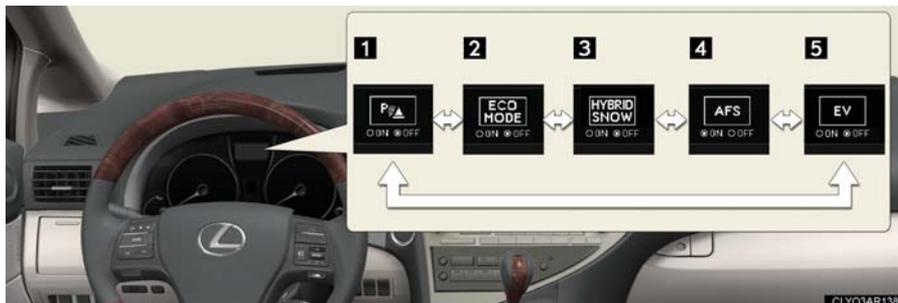

Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P. 26
2 Eco mode	For details, see the Owner's Manual.
3 Snow mode	For details, see the Owner's Manual.
4 AFS*	→P. 38
5 EV drive mode	→P. 25

Display order may vary depending on vehicle condition.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Customization	
Dynamic radar cruise control settings*	
Warning message	

*: If equipped

- When using intuitive parking assist or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.



Eco Driving Indicator Light



Environment-friendly driving

During environment-friendly acceleration operation (Eco driving), Eco Driving Indicator Light will turn on.

If the accelerator pedal is depressed more than necessary, the indicator will turn off.

Parking Brake



To set the parking brake: firmly depress the parking brake pedal.

To release the parking brake: depress the parking brake pedal again.

Turn Signal Lever



- 1 Right turn signal
- 2 Left turn signal



To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

The emergency flashers can be operated even when the "POWER" switch is OFF.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Cruise Control

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



To increase speed: push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant vehicle speed control mode)
- 3 Display
- 4 Distance switch
- 5 Cruise control switch

Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.


Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.



■ Canceling

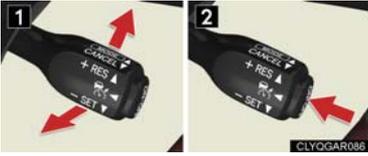

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the speed setting



To increase speed: push the lever up.

To decrease speed: push the lever down.


Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

Head-up Display (If Equipped)


The head-up display can be used to project vehicle speed and other information onto the windshield.

Head-up display main switches

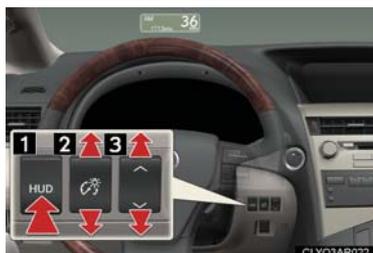

- 1 Pressing the button turns the Head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

Head-up display contents

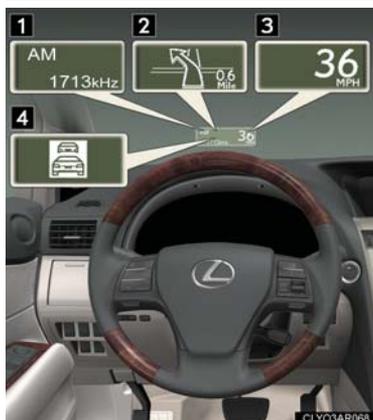

- 1 Audio display
- 2 Turn-by-turn navigation*
- 3 Vehicle speed display
- 4 Dynamic radar cruise control (if equipped)

- When using audio system or navigation system the appropriate display is shown on the screen.
- Warning messages will be displayed when necessary.
- Pressing and holding the head-up display main switch button for more than 2 seconds changes the display to audio display on/off mode. Press the head-up display main switch button to turn the audio display on/off.
- The head-up display may seem dark and hard to see when viewed through sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".

Electronically Modulated Air Suspension (If Equipped)

The electronically modulated air suspension allows the driver to control vehicle height in order to adjust for driving conditions. Select the desired height with the height select switch.

Selecting a height mode



To select a height mode, press \wedge or \vee on the height select switch for approximately 1 second.

HI mode: for driving on bumpy roads

N mode: for ordinary driving

LO mode: for sporty driving

Luggage mode: for easy luggage loading/unloading



Turning the height control on and off



To cancel the height control, press the height control off button. A message will appear on the multi-information display, and the vehicle height is fixed.

To turn the height control on, press the button again. When the vehicle's speed exceeds 19 mph (30 km/h), the height control turns on automatically.




Topic 5

Rain and Night Driving

Headlights.....	37
Automatic High Beam.....	39
Windshield Wipers and Washer	40
Rear Window Wiper and Washer.....	42
Rear Window and Outside Rear View	
Mirror Defoggers.....	43


Headlights

► U.S.A

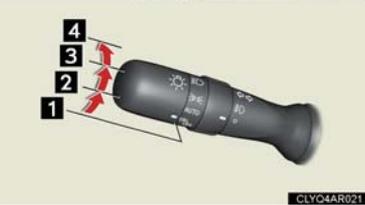

- 1 **DRL OFF** Turn off the daytime running light system.
- 2 **AUTO** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.
- 3  The instrument panel, side marker, parking, tail and license plate lights turn on.
- 4  The headlights and all lights listed above turn on.

► Canada

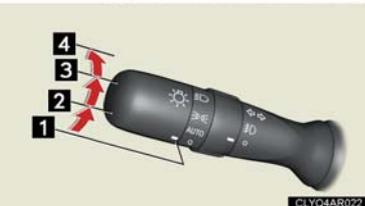

- 1 **OFF** Off
- 2 **AUTO** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.
- 3  The instrument panel, side marker, parking, tail and license plate lights turn on.
- 4  The headlights and all lights listed above turn on.



To engage the high beams, push the lever forward. To flash the high beams temporarily, pull the lever toward you.

■ AFS (Adaptive Front-lighting System) on and off (if equipped)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



- 1 Press the menu switch.
- 2 Press the "ENTER" switch upwards or downwards until "AFS" appears.



- 3 Press the "ENTER" switch to select on/off.

Press the menu switch to change to the normal display.

Automatic High Beam (If Equipped)


The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.



1 Headlight switch in "AUTO" position.



2 Push the lever away from you.

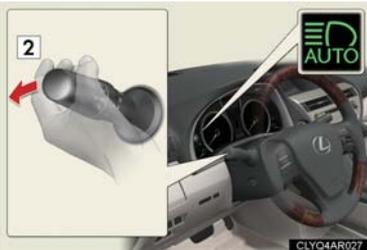

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 20 mph (32 km/h).

- The area ahead of the vehicle is dark.

- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

Windshield Wipers and Washer

■ Intermittent wiper with interval adjuster (if equipped)



CLYQGAR641



CLYQGAR120



CLYQGAR610

- 1  Off
- 2  Intermittent operation
- 3  Low speed
- 4  High speed
- 5  Single wipe

Intermittent operation: Wiper interval can be adjusted by turning the band.

To spray washer fluid, pull the lever. The wipers will operate automatically.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort



Opening and Closing

What to do if ...

Rain-sensing windshield wipers (if equipped)



- 1 ○ Off
- 2 AUTO Automatic operation
- 3 ▼ Low speed
- 4 ▼ High speed
- 5 ▲ Single wipe

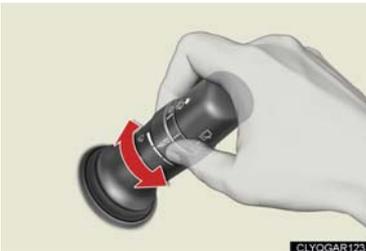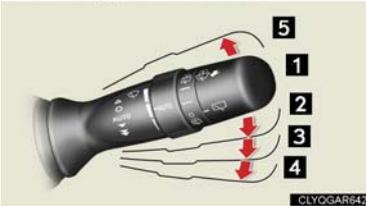


Sensitivity can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

Rear Window Wiper and Washer

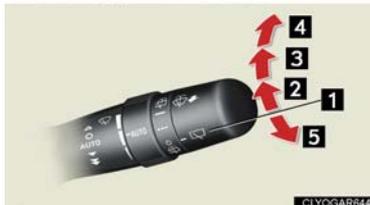

- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Rear Window and Outside Rear View Mirror Defoggers


► Without navigation system



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

► With navigation system

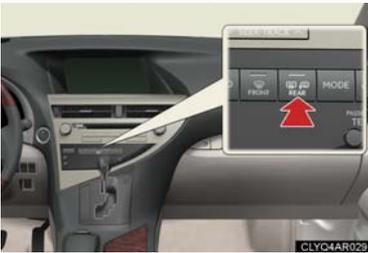

The system turns off automatically after 15 to 60 minutes.



Topic 6

Driving Comfort

Remote Touch	45
Navigation System	48
Hands-free System For Cellular Phone (with navigation system)	54
Audio System (with navigation system)	62
Air Conditioning System (with navigation system)	66
Hands-free System For Cellular Phone (without navigation system)	67
Audio System (without navigation system) ..	73
Air Conditioning System (without navigation system)	78
Speech Command System	79
Portable Audio Device Adapters	85
Power Outlets	86
Garage Door Opener	87
Rear Seat Entertainment System	89

Remote Touch (If Equipped)

The Remote Touch can be used to operate the navigation screens and configure settings.

Basic operation



- 1 Remote Touch knob**
Use this knob to move the cursor and select items on the screen.
Feedback force, pointer shape, and on or off of selection sounds can be changed. Refer to the "Navigation System Owner's Manual".
- 2 "ENTER" button**
Push this button to confirm a selection.
- 3 "MAP/VOICE" button**
Push this button to display the vehicle's current position.
- 4 "∧∨" button**
Push these buttons to change map scale and scroll through lists.
- 5 "MENU" button**
Push this button to display the "Start" (menu) screen.
- 6 "DISP" button**
Push this button to adjust picture quality.

Start



Push the "MENU" button on the Remote Touch to display the "Start" screen.


- 1 Destination
- 2 Info. Phone
- 3 Setup
- 4 Climate (→P.66)
- 5 Audio (→P.62)

Display



Push the "DISP" button on the Remote Touch to show the "Display" screen.

- 1 Turns the rear seat entertainment system on and off
- 2 Displays the screen in "Day Mode" with the headlight switch on
- 3 Turns the screen off
- 4 Adjust contrast
- 5 Adjust brightness
- 6 Adjust color tone
- 7 Adjust color

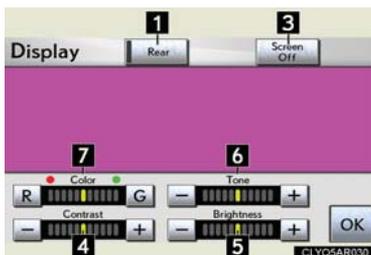

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...



Screen scroll operation

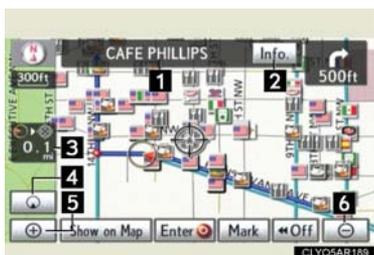

To scroll over the map, place the pointer in a position near the desired destination and then press and hold the “ENTER” button of the Remote Touch.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map


Setting a route

While route guidance is operating, you can change the route using the following method.



Select **Route**.

The following settings can be accessed


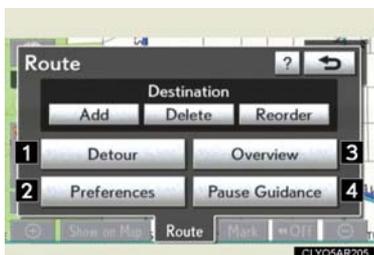


- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the “Navigation System Owner’s Manual”.

Navigation System (If Equipped)

Register home

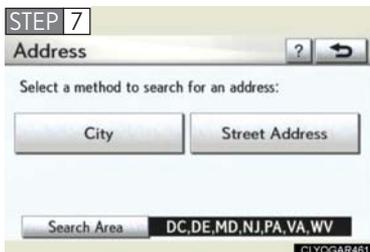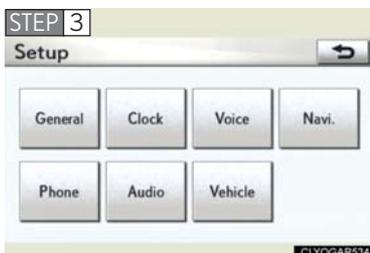

- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select **Setup**.
- 3 Select **Navi.**
- 4 Select **Home**.
- 5 Select **Set Home**.
- 6 Select **Address**.
- 7 Select **City**.
- 8 Input a city name and select **OK**.
- 9 Select the button of the desired city name from the displayed list.
- 10 Input the street name and select **OK**.
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select **OK**.
- 13 Select **Enter**.
- 14 Select **OK**.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort



Opening and Closing


What to do if ...



Destination input — Search by address




► Select by city name

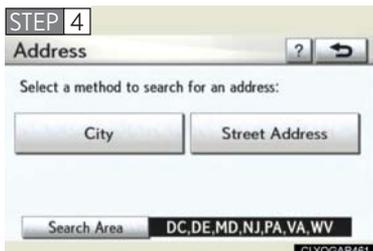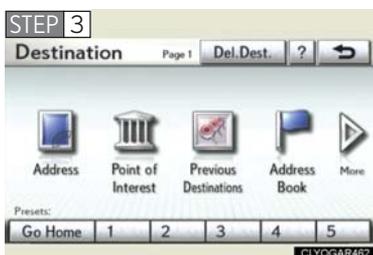

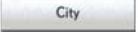- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select  .
- 3 Select  .
- 4 Select  .
- 5 Input a city name and select  .
- 6 Select the button of the desired city name from the displayed list.
- 7 Input the street name and select  .
- 8 When the desired street name is found, select the corresponding button.
- 9 Input a house number and select  .
- 10 Select  .
- 11 Select  .

Destination input — Search by address

► Select by street address

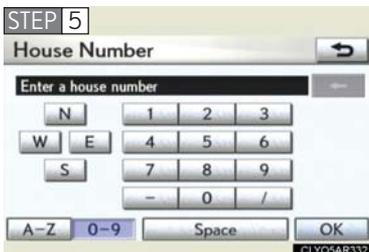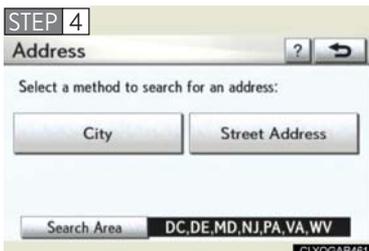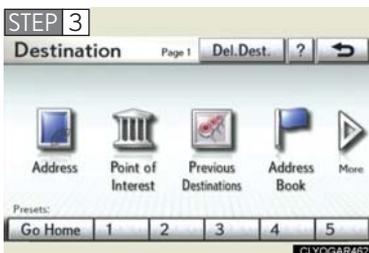

- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select  .
- 3 Select  .
- 4 Select **Street Address** .
- 5 Input a house number and select **OK** .
- 6 Input the street name and select **OK** .
- 7 When the desired street name is found, select the corresponding button.
- 8 Input a city name and select **OK** .
- 9 Select the button of the desired city name from the displayed list.
- 10 Select **Go to** .
- 11 Select **OK** .

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving



Driving Comfort

Opening and Closing

What to do if ...





Destination input — Search points of interest by name

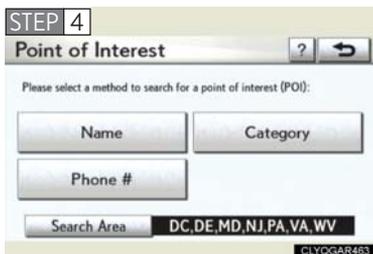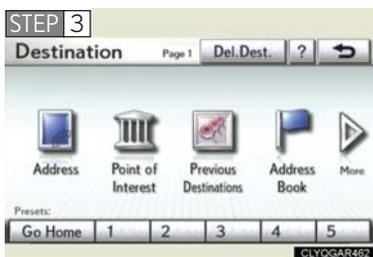

- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select  .
- 3 Select  .
- 4 Select .
- 5 Input the name of the point of interest and select .
- 6 Select the button of the desired destination.
- 7 Select .
- 8 Select .




Destination input — Search points of interest by category

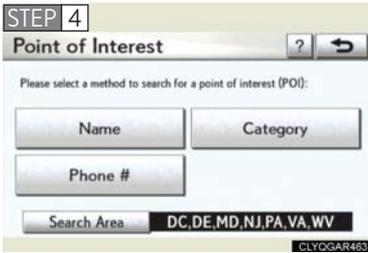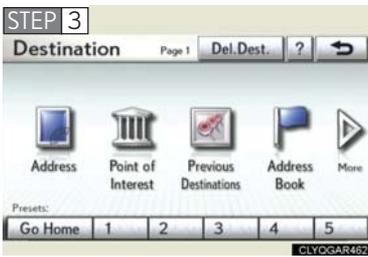


- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select  .
- 3 Select  .
- 4 Select  .
- 5 Select  .
- 6 Select the button of the desired destination and set the search point.
- 7 Select the desired point of interest category.
- 8 Select the button of the desired item.
- 9 Select  .
- 10 Select  .



Destination input — Search points of interest by telephone number

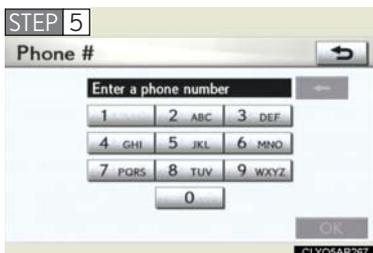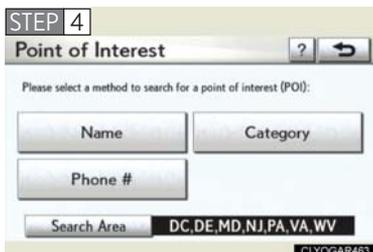
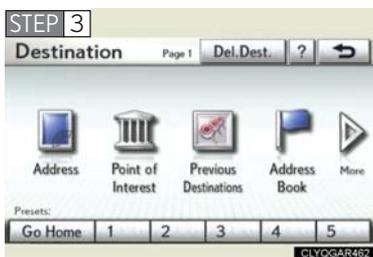


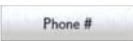- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select  .
- 3 Select  .
- 4 Select  .
- 5 Input a telephone number and select  .
- 6 Select  .
- 7 Select  .

Hands-free System For Cellular Phone (with navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

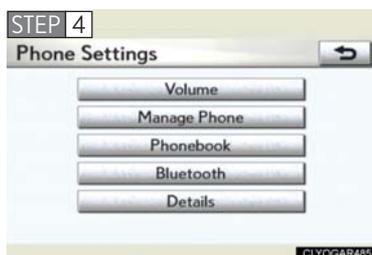
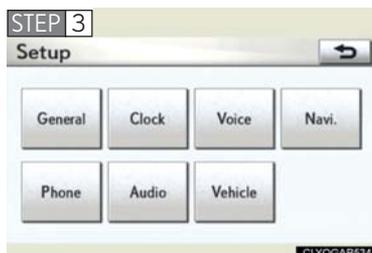


To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select  .
- 3 Select  .
- 4 Select  .
- 5 Select  to display the screen for connecting Bluetooth.
- 6 Enter the passcode displayed on the screen into the phone. Refer to the cellular phone user's manual for cellular phone operation.
- 7 When the connection is completed, **Bluetooth connection successful.** will appear and push the **MENU** button.




Phonebook transfer

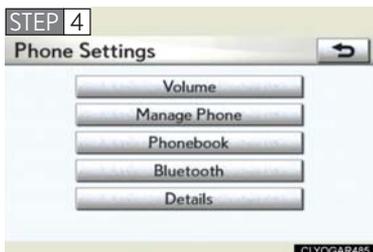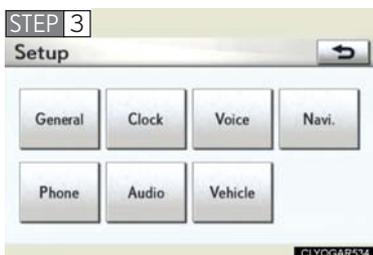

- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select **Setup**.
- 3 Select **Phone**.
- 4 Select **Phonebook**.
- 5 Select **Manage Contacts**.
- 6 Select **Transfer Contacts**.
- 7 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

Registering a voice tag

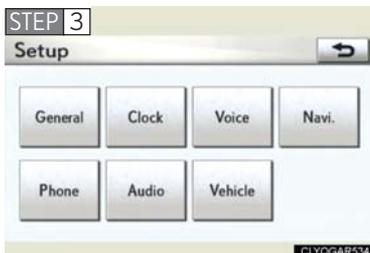

1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.

2 Select **Setup**.

3 Select **Phone**.

4 Select **Phonebook**.

5 Select **Manage Voice Tags**.

6 Select **New Voice Tag**.



7 Select the data you want to register.

8 Select **REC**, and record a voice tag.

9 Select **OK**.



Registering a speed dial

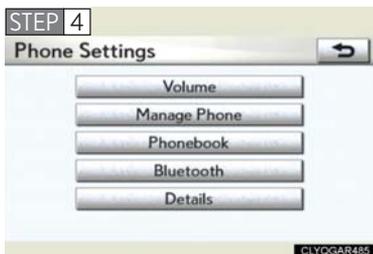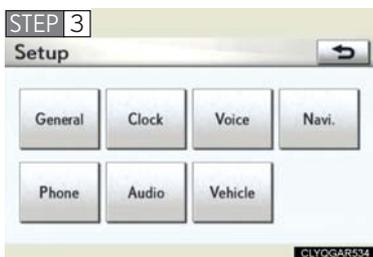

- 1 Push the **MENU** button on the Remote Touch. Please refer to P.45 for the Remote Touch operation.
- 2 Select **Setup**.
- 3 Select **Phone**.
- 4 Select **Phonebook**.
- 5 Select **Manage Speed Dials**.
- 6 Select **New Speed Dial**.
- 7 Select the data you want to register.
- 8 Select the desired phone number.
- 9 Select the button you want to register in.
- 10 The registration completion message is displayed on the screen.

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



- 1 Press .
- 2 Follow the voice guidance and say "Phone".
- 3 Follow the voice guidance and say "Dial by name".
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...



■ Calling by speed dial



- 1 Press .
- 2 Select .
- 3 Select the desired number to call.

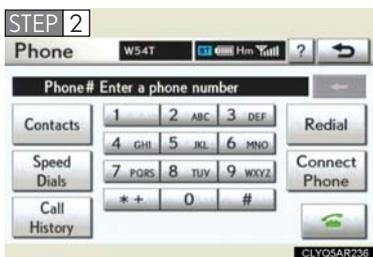

Receiving a call



1 When a call is received, this screen is displayed with a sound.

2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



■ XM[®] NavWeather

The XM[®] NavWeather service that allows the navigation system to display weather information on the map is available if your satellite radio tuner can receive weather information. For details, refer to the “Navigation System Owner’s Manual”.

To receive the XM[®] NavWeather service, a subscription to the XM[®] Satellite Radio with NavWeather is necessary.

The XM[®] NavWeather is available in the contiguous 48 U.S. states. For details about the XM[®] NavWeather service coverage area, refer to www.xmradio.com.

● How to activate the XM[®] NavWeather service

To receive the XM[®] NavWeather service, it is necessary to activate the service. To activate the service, an extra fee is required in addition to subscription fees for the XM[®] Satellite Radio. For details about service and activation, call XM[®] Listener Care Center at 1-877-515-3987.

Customers should have their radio ID ready; the radio ID can be found by selecting “channel 000” on the radio.

XM[®] Satellite Radio has the responsibility for all fees and service, they are subject to change.

The following operations can be performed.

- Show XM[®] NavWeather information
- Weather information
- Weather warnings

Audio System (with navigation system)

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Audio control screen

Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.

Please refer to P.45 for the Remote Touch operation.

The "Start" screen will be displayed.

- 2 Using the Remote Touch, select "Audio" and press the "ENTER" button.

Basic operation



- 1 Sound quality modes

- 2 Audio sources

AM•FM: AM radio/FM radio

SAT: Satellite radio

DISC: DVD player (if equipped)

CD: CD player (if equipped)

AUX•USB: Auxiliary audio device/USB memory player/iPod® player/Bluetooth® audio

- 3 Power/Volume



Radio



- 1 Station presets
- 2 Scanning radio stations
- 3 Radio tuner
- 4 Station select
- 5 Seek

Entering station presets

- 1 Select the desired station by using the tune, seek or scan function.
- 2 Using the Remote Touch, select one of the preset switches (1-6), then press the "ENTER" button until a beep is heard, indicating that the station has been set.

DVD player/CD player

Playing an audio CD



- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Disc load
- 6 Track select/rewind/fast-forward
- 7 Eject

Playing a CD with MP3/WMA files



- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Eject

Playing a DVD (DVD player only)



- 1 Disc select
- 2 DVD operation
- 3 Image display (full screen)
- 4 Disc load
- 5 Chapter select
- 6 Eject



■ Operating an iPod®



- 1 Menu
- 2 Pause/Playback
- 3 Repeat play
- 4 Random playback
- 5 Track list
- 6 Go back
- 7 Track select
- 8 Track select/rewind/fast-forward

■ Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

■ Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat **2** and **3** until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Power on/change mode: press
Power off: press and hold
- 3 Radio mode: radio tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod® player mode (if equipped): track select

Air Conditioning System (with navigation system)



- | | |
|---|---|
| 1 Dual mode button | 8 Automatic mode button |
| 2 Passenger side temperature display | 9 Driver side temperature control |
| 3 Fan speed display | 10 Fan speed control button/"OFF" button |
| 4 Outside air/recirculated air mode button | 11 Cooling and dehumidification function on/off button |
| 5 Passenger side temperature control | 12 Driver side temperature display |
| 6 Air outlet selector button | 13 Air outlet display |
| 7 Windshield defogger | |

Using the automatic mode

Press **8** to turn on the airflow and **9** to adjust the temperature.

Adjusting the temperature

To simultaneously adjust the driver's side and passenger's side temperature settings
Select **1** to turn the "DUAL" indicator off (**DUAL**) and then press **9**.

To individually adjust the driver's side and passenger's side temperature settings
Select **1** or press **5** to turn the "DUAL" indicator on (**DUAL**) and then press **9** or **5**.

To turn off the airflow

Press and hold "v" on **10** until the airflow turns off.



Hands-free System For Cellular Phone (without navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name*.
*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .

 : Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by number

STEP 1



1 Press  and say "Dial by number".

2 Press  and say the phone number.

3 Dialing

a. Press .

b. Press  and say "Dial".

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

STEP 1



1 Press  and say "Dial by name".

2 Press  and say a contact name.

3 Dialing

a. Press .

b. Press  and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.



■ Calling by speed dial



- 1 Press .
- 2 Press the desired preset button.
- 3 Press .



Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the speech command system on. Say a command after the beep.



■ Changing the registered name



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".

 : Pressing this switch turns the speech command system on. Say a command after the beep.

■ Registering a speed dial



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Audio System (without navigation system)

Basic operation

► Type A



1 Power/Volume

2 Audio sources

AM•FM: AM radio/FM radio

SAT: Satellite radio


CD: CD player

AUX: Auxiliary audio device Bluetooth® audio (if equipped)

AUX•USB: Auxiliary audio device/USB memory player (if equipped)/ iPod® player (if equipped)/ Bluetooth® audio

3 Sound quality modes

► Type B

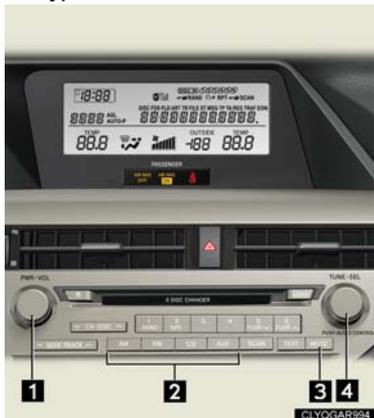

1 Power/Volume

2 Audio sources

AM: AM radio

FM: FM radio

CD: CD player

AUX: Auxiliary audio device

3 Mute

4 Sound quality modes

Radio

► Type A



- 1 RDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek

■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

► Type B



- 1 Station select
- 2 Station presets
- 3 Radio tuner
- 4 Scanning radio stations
- 5 Seek

■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...



CD player


Playing an audio CD

► Type A

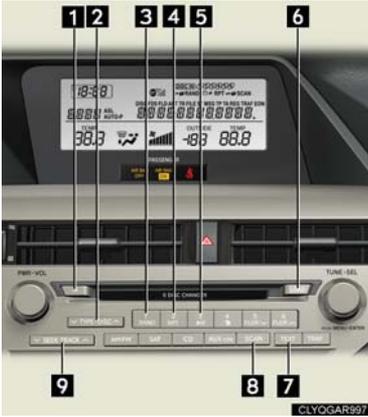

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Disc load
- 7 Text information
- 8 Search playback
- 9 Track select/rewind/fast-forward


► Type B

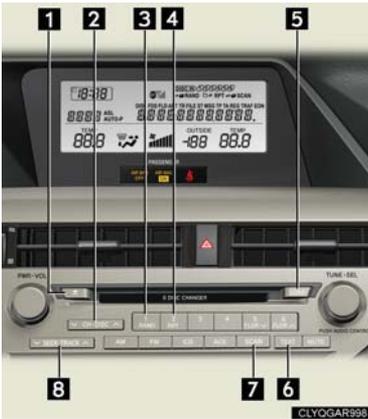

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Disc load
- 6 Text information
- 7 Search playback
- 8 Track select/rewind/fast-forward


■ Playing a CD with MP3/WMA files

► Type A

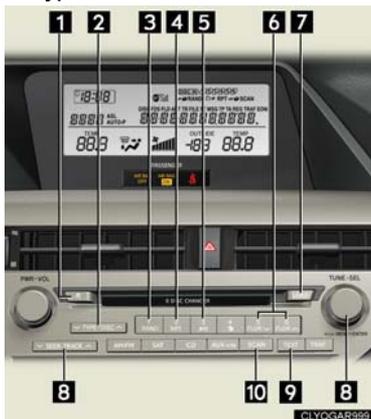

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Folder select
- 7 Disc load
- 8 File select
- 9 Text information
- 10 Search playback

► Type B

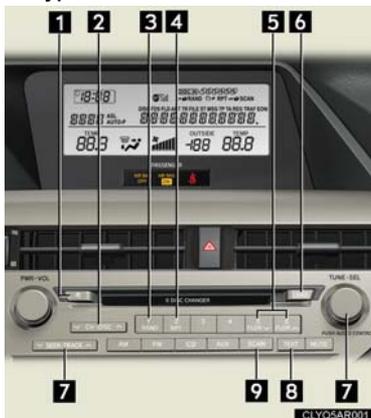

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Text information
- 9 Search playback

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort


Opening and Closing

What to do if ...



■ Operating an iPod®

► Type A only

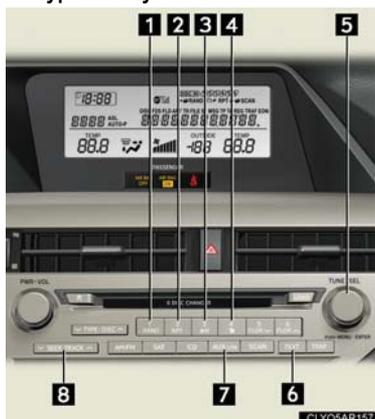

- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Track select
- 6 Text information
- 7 Playback
- 8 Track select/rewind/fast-forward

■ Loading a CD

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will cancelled automatically.

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Power on/change mode: press
Power off: press and hold
- 3 Radio mode: radio tuner
CD mode: disc/track/file (MP3/WMA) select
iPod® player mode (if equipped): track select

Air Conditioning System (without navigation system)



- | | |
|---|---|
| 1 Passenger side temperature display | 6 Air outlet selector button |
| 2 Passenger side temperature control | 7 Driver side temperature control |
| 3 Cooling and dehumidification function on/off button | 8 Fan speed control button/'OFF' button |
| 4 Outside air/recirculated air mode button | 9 Automatic mode button |
| 5 Windshield defogger | 10 Dual mode button |
| | 11 Driver side temperature display |

Using the automatic mode

Press **9** to turn on the airflow and **7** to adjust the temperature.

Adjusting the temperature

To simultaneously adjust the driver's side and passenger's side temperature settings

Press **10** to turn the "DUAL" indicator off () and then press **7**.

To individually adjust the driver's side and passenger's side temperature settings

Press **10** or **2** to turn the "DUAL" indicator on () and then press **7** or **2**.

To turn off the airflow

Press and hold "v" on **8** until the airflow turns off.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Speech Command System

Basic operation



- 1 Press  on the steering wheel.
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

- Important speech commands information and tips
 - Speech commands can be used while driving.
 - You must wait until after the beep to say a command.
 - In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
 - If you know what command to use, you can press  at any time to interrupt the voice guidance.

Command list

► All vehicles

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

► With navigation system

Destinations				
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:		"Address" and then follow the prompts to enter city, state, street and house number	
To Enter a Point of Interest, SAY	A Point of Interest Category, Such As: "Dining," "Shopping Malls," "Police," "Gas," ETC.			
	"Destination" and then SAY:	"Point of Interest" and then SAY:	"Near Here"	And then follow the prompts
			"Along Route"	
"Emergency"				
To Enter a Previous Destination, SAY:	"Destination" and then SAY:		"Phone Number"	
			"Previous Destinations"	
To Enter/Go to Preset Destinations, SAY:	"Destination" and then SAY:	"Presets" and then SAY:	"Home" (HOME must already be set using manual controls)	
			"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)	

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



General Navigation Commands	
To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
	"North Up"
	"Heading Up"
To Change the Map Orientation, SAY:	"Map Direction"
	"Right Map North Up"
	"Right Map Heading Up"
To Change the Guidance Mode, SAY:	"Right Map Direction"
	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
To Save a Point on the Map, SAY:	"Freeway Mode"
	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"



Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

General Navigation Commands

To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Final Destination Map"
	"Delete Next Destination"
	"Delete Final Destination"
To Operate the Traffic Information, SAY:	"Delete All Destinations"
	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
To Operate the Traffic Information, SAY:	"Louder"
	"Softer"
To Operate the Traffic Information, SAY:	"Traffic Information"
To Show the Icon, SAY:	"GAS", "PARKING" ETC.

PHONE

To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Send Tones"		NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Connect Phone" and then SAY:	"Send Phone"	
			"Add New Phone"	
			"Hands Free Power ON"	
		"Hands Free Power OFF"		



AUDIO			
To Turn Audio On or Off, SAY:	"Audio ON"		
	"Audio OFF"		
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD*, CD Changer*, DVD**, DVD Changer**, Bluetooth® Audio, iPod®, USB Audio		
	*For systems w/o NAV **For systems w/NAV		
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"		
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"		
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"		
	"Type Up" or "Type Down"		
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:	"Select Channel Number"	
		"Select Channel Name" (English only)	
		"Select Channel Type" (English only)	
		"Command List" and then SAY:	
		"Seek Up" or "Seek Down"	
		"Type Up" or "Type Down"	



Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

XM Information		
To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts
To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts

CLIMATE CONTROL/AIR CONDITIONING	
To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.



Portable Audio Device Adapters

These adapters can be used to connect a portable audio device and listen to it through the vehicle's speakers.



- 1 Slide the armrest while pulling up the lever, and lift the armrest.
Remove the upper tray.




- 2 Remove the lower tray and open the cover.



- 1 USB adapter (if equipped)
- 2 AUX adapter

Power Outlets

▶ 12VDC

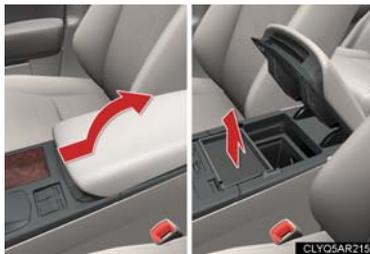

CLY06AR215



CLY06AR219



CLY06AR026

▶ 120VAC (if equipped)



1



2

▶ Inside the console

1 Slide the armrest while pulling up the lever, and lift the armrest.
Remove the upper tray.

2 Remove the lower tray.
Designed for use with car accessories.

▶ Luggage compartment
Designed for use with car accessories.

1 Main switch
To use the power outlet, turn on the main switch.

2 Power outlet socket

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].



The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

Programming HomeLink[®]



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink[®] buttons.
- 2 Press and hold down the desired HomeLink[®] button.
- 3 For U.S.A. owners:

While pressing the HomeLink[®] button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink[®] button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink[®] button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Rear Seat Entertainment System

When a personal audio-video equipment is connected to the A/V input adapter, rear passengers can enjoy different audio source for each display (limited to a combination of video mode and one other audio source).

Examples of audio sources selected on right and left displays

Left side rear seat display

Video mode

Right side rear seat display

**An audio source other
than video mode**

or

Left side rear seat display

**An audio source other
than video mode**

Right side rear seat display

Video mode

Location of the components



- | | |
|---|--|
| 1 Power outlet | 4 Display |
| 2 A/V input adapter | 5 Power outlet main switch |
| 3 Headphone volume control dials and headphone jacks | 6 Front audio system and DVD player |
| | 7 Remote control |


Remote Controller



- 1** Controller buttons for the left side display
- 2** Controller buttons for the right side display
- 3** Turns display off
- 4** Selects the display to be operated (for some controller buttons only)



Headphone jacks

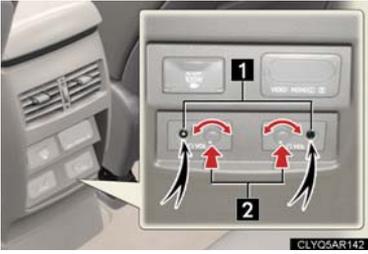

- 1 To use the headphones, connect them to the jack
- 2 To adjust the volume

Changing the speaker output


To listen to a different audio source through each rear seat headphone, turn “Speaker Output” off.



- 1 Press **SOURCE** on the controller
- 2 Select **Speaker Output** to turn speaker output off

- Speaker Output** (on) The audio source selected for the front audio system can be heard.
- Speaker Output** (off) A different audio source can be heard through each rear seat headphone.

■ Loading a disc

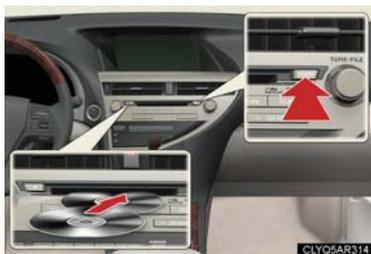

- 1 Press **LOAD/**.
- 2 Insert a disc.

■ Change the source



Press **SOURCE** on the controller and select the desired audio source.



- 1 Turning on the audio source selection screen
- 2 Inputting the selected icon
- 3 Selecting an icon

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



■ Using the DVD player

■ Playing a DVD video/audio



Press **DVD** on the controller and select a disc.



- 1 Turning on the menu disc
- 2 Playing/pausing
- 3 Fast forward
- 4 Control icon screen
- 5 Rewind
- 6 Turning on the title selection screen
- 7 Select a chapter/track/fast forward/rewind
- 8 Disc select

Playing an audio CD/CD text



Press **DVD** on the controller and select a disc.

- 1 Select a chapter/track/fast forward/rewind
- 2 Fast forward
- 3 Rewind
- 4 Disc select

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



■ Playing a CD with MP3/WMA file



Press **DVD** on the controller and select a disc.



- 1 Folder select
- 2 Fast forward
- 3 Rewind
- 4 File select
- 5 Disc select

Using the radio



Press **SOURCE** on the controller and select



or  or .

- 1 Station select
- 2 Radio tuner

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



■ Using the video mode



Press **VIDEO**.

■ Using the adapter



Open the cover

The A/V input adapter is composed of 3 input adapters.

Yellow: Image input adapter

White: Left channel audio input adapter

Red: Right channel audio input adapter



Topic 7

Opening and Closing

- Door Locks 99
- Power Windows 100
- Moon Roof 101
- Fuel Tank Cap 102
- Hood 102
- Back Door 103

Door Locks

Locking the vehicle from inside



▶ Inside lock button

- 1 Locks
- 2 Unlocks



▶ Door lock switch

Operates all door locks/unlocks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Using the entry function or wireless remote control (→P.13, 9)

Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger and rear window switches.

Hybrid System

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...


Moon Roof (If Equipped)

Opening and closing

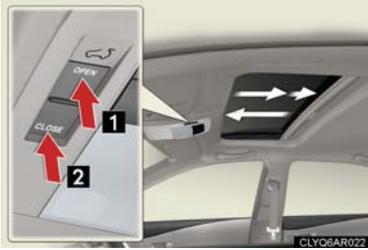

- 1** Opens
The moon roof stops slightly before the fully opened position.
To fully open, press the switch again.
- 2** Closes
To stop partway, press the switch lightly.

Tilt up and down

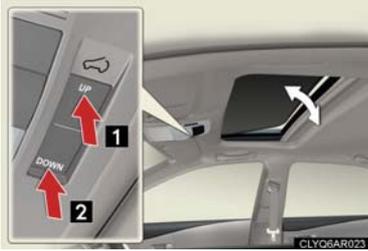

- 1** Tilts up
- 2** Tilts down
To stop partway, press the switch lightly.

Fuel Tank Cap



- 1 Press the fuel filler door opener.



- 2 Slowly remove the cap by turning it counter-clockwise.
After the cap is removed, it can be hung on the inside of the fuel filler door.

Hood




- 1 Pull the hood release lever.



- 2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Back Door

Back door opener button

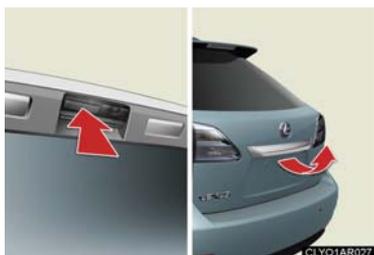

To open the back door, push up the opener button and raise the door.

Power back door switches (with power back door)



► Instrument panel

To open or close the back door, press the switch.



► Back door


To close the back door, press the switch.

► Wireless remote control (→P.13)

■ Back door closer (with power back door)

If the back door is left slightly open, it will close automatically.

■ Turning the power back door system on and off (with power back door)

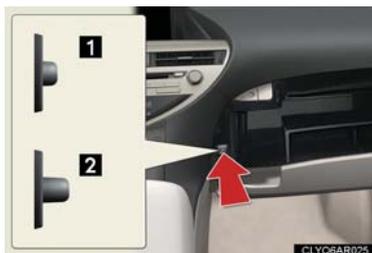

To disable the system, turn off the main switch in the glove box.

1 ON

2 OFF

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



Electric power steering warning light



Pre-collision system warning light^{*1}



(Flashing and then continuously on)

Tire pressure warning light



Brake system warning light

Follow the correction procedures.



Open door warning light



Low fuel level warning light



Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminate no flashing)

Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

See the Owner's Manual

	Turn signal indicator		"AFS OFF" indicator* ¹
	Headlight high beam indicator		Slip indicator
	Automatic High Beam indicator* ¹		VSC off indicator
	Headlight indicator (U.S.A.)		Electronically modulated air suspension indicator* ¹
	Tail light indicator (Canada)		Eco Driving Indicator Light
	Front fog light indicator		"ECO MODE" indicator
	"Hybrid SNOW" indicator		EV drive mode indicator
	Cruise control indicator		"READY" indicator
	Radar cruise control indicator* ¹		SRS airbag on-off indicator* ¹
	Intuitive parking assist indicator* ¹		SRS airbag on-off indicator* ¹

For further information, refer to the Owner's Manual.

*¹: If equipped

*²: It also turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure.

What to do if ...

If the electronic key does not operate properly

■ Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key (driver's door only). The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

■ Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "POWER" switch while gently turning the wheel left or right.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.