

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System	
(with a navigation system or the Lexus Display Audio system)*	
Using the automatic mode	70
Adjusting the temperature	70
Using the automatic mode	71
Adjusting the temperature	71
Air Conditioning System	
(without a navigation system or the Lexus Display Audio system)	
Using the automatic mode	84
Adjusting the temperature	84
Audio System (with a navigation system or the Lexus Display Audio system)*	
Audio control screen	63
Remote control (steering wheel switches)	63
Basic operation	64
Radio	65
DVD player/CD player	66
Operating an iPod	69
Audio System (without a navigation system or the Lexus Display Audio system)	
Basic operation	77
Radio	78
CD player	79
Operating an iPod	82
Remote control (steering wheel switches)	83
Back Door	96
BSM (Blind Spot Monitor)	34
Cruise Control	31
Door Locks	93
Dynamic Radar Cruise Control	32
Eco Driving Indicator	29
Energy Monitor / Consumption Screens	12
Engine (Ignition) Switch	21
EV Drive Mode	23
Fuel Tank Cap	95

*: This feature may be operated by Voice command (See P.82)

Hands-free System For Mobile Phone

(with a navigation system or the Lexus Display Audio system)*

Bluetooth® phone pairing	53
Phonebook transfer	55
Registering a speed dial	57
Calling by speed dial	59
Calling using SMS/MMS message (with a navigation system)	61
Receiving a call	62
Steering switches	62

Hands-free System For Mobile Phone

(without a navigation system or the Lexus Display Audio system)

Bluetooth® phone pairing	72
Calling by number	73
Calling by name	73
Calling by speed dial	74
Phonebook transfer	75
Changing the registered name	76
Registering a speed dial	76

Headlights	36
-------------------------	----

Head-up Display	35
------------------------------	----

Hybrid System	10
----------------------------	----

Intuitive Parking Assist	24
---------------------------------------	----

Keys	16
-------------------	----

Lexus Display Audio Controller

Basic operation	44
Menu	44

Lexus Enform with Safety Connect	91
---	----

Moon Roof	94
------------------------	----

Multi-information Display and Switch (RX350)	25
---	----

Multi-information Display and Switch (RX450h)	27
--	----

Navigation System*

Register home	45
Destination input — Search by address	46
Destination input — Search points of interest by name	49
Destination input — Search points of interest by category	50
Destination input — Search by telephone number	51
Voice Command System	85

Portable Audio Device Ports	88
--	----

Power (Ignition) Switch	22
--------------------------------------	----


*: This feature may be operated by Voice command (See P.82)

Power Windows	94
Rear Window Wiper and Washer	40
Remote Touch	
Basic operation	41
Menu	42
Display	42
Screen scroll operation	43
Setting a route	43
Safety Connect	89
Smart Access System with Push-button Start	17
Theft Deterrent System	18
Turn Signal Lever	30
Voice Command System	
Basic operation	85
Command list	86
Windshield Wipers and Washer	37



Overview

Instrument Panel

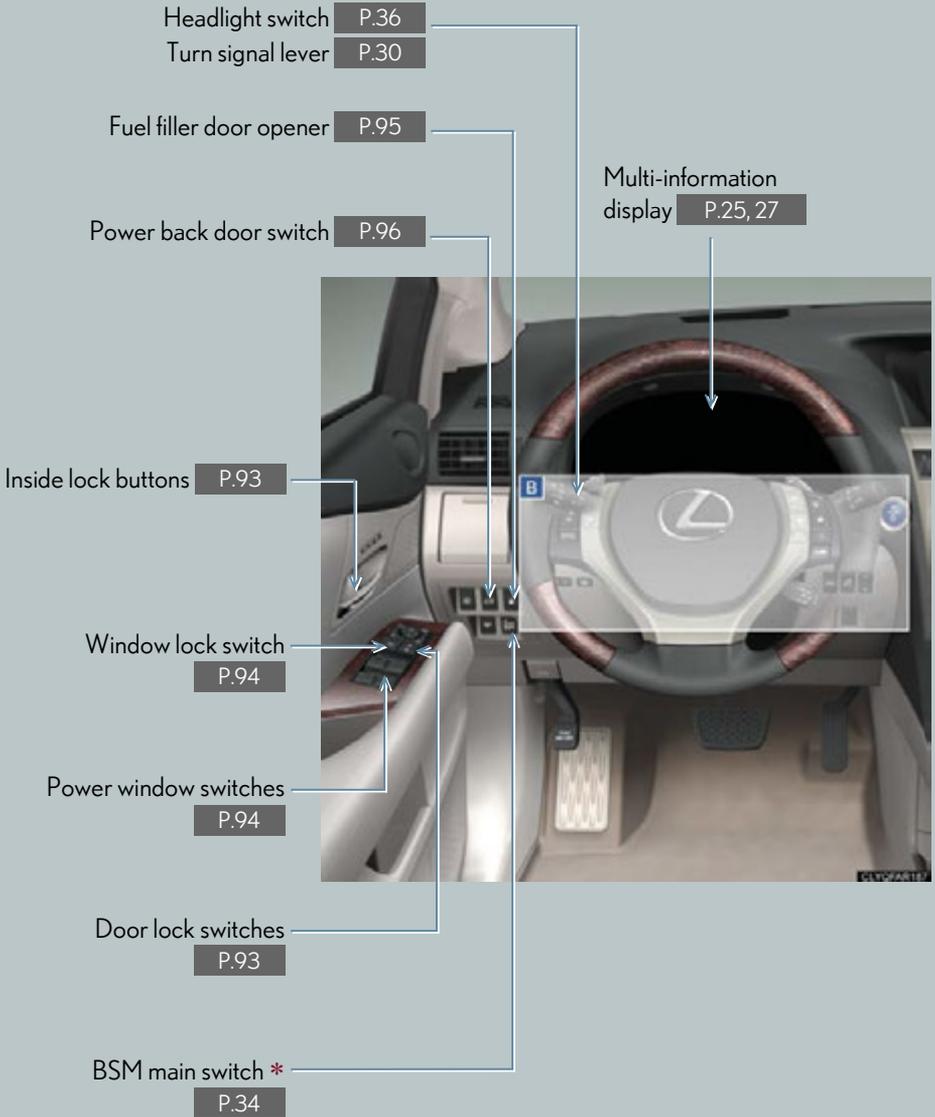

Windshield wiper and washer switch P.37

Rear window wiper and washer switch P.40

Engine (ignition) switch *1 P.21

Power (ignition) switch *2 P.22



Power back door main switch P.97

Remote Touch *3 P.41

Lexus Display Audio controller *4 P.44

Head-up display main switch * P.35

* : If equipped

*1: RX270/RX350

*2: RX450h

*3: With navigation system

*4: With Lexus Display Audio system

A

▶ Without a navigation system or Lexus Display Audio system



Air conditioning system P.84

Audio system P.77

A

▶ with the Lexus Display Audio system

Lexus Display
Audio system

P. 44



Air conditioning
system

P. 70

Audio system

P. 63

▶ with a navigation system

Navigation system

P. 45



Air conditioning
system

P. 70

Audio system

P. 63

* : If equipped

B

Steering wheel audio switches P.63, 83

Telephone switch P.53, 72



Multi-information switches P.25, 27

Talk switch P.53, 72, 85

Cruise control switch P.31, 32


Distance switch * P.32

* : If equipped

Hybrid System (RX450h)

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicles, and operate with care. The hybrid system combines a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions. For details, refer to the "Owner's Manual".

Hybrid System Indicator

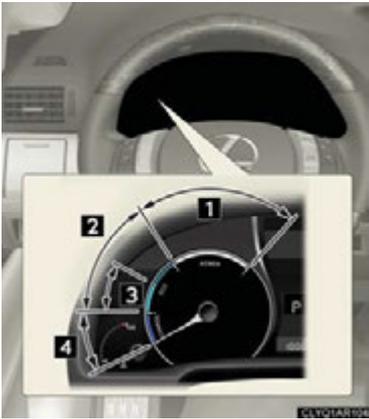

- 1 Power area**
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- 2 Eco area**
Shows that the vehicle is being driven in an Eco-friendly manner.
- 3 Hybrid Eco area**
Shows that gasoline engine power is not being used very often.
The gasoline engine will automatically stop and restart under various conditions.
- 4 Charge area**
Shows that energy is being recovered via regenerative braking.

■ Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released.
- The brake pedal is depressed with the shift lever in D or S.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibrations even though the vehicle is able to move. Always put the shift lever in P when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Vibrations may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seat.



Energy Monitor / Consumption Screens (RX450h)

You can view the status of your hybrid system on the multi-information display and the navigation system screen or the Lexus Display Audio screen.

Energy monitor

The energy monitor can be displayed on both the Navigation system screen and the multi-information display.

- How to display on the Navigation system screen (→P.41):
Press the “MENU” button on the Remote Touch, and select “Info/Apps” after that select “Fuel Consumption”.
If the “Trip Information” or “Past Record” screen is displayed, select the “Energy”.
- How to display on the Lexus Display Audio system screen (→P.44):
Press the “MENU” button on the Lexus Display Audio controller, and select “Car” on the “Menu” screen.
If the “Trip Information” or “History” screen is displayed, select the “Energy”.
- How to display on the multi-information display:
Press the “^” or “v” switch on the steering wheel through several items to select the energy monitor display.

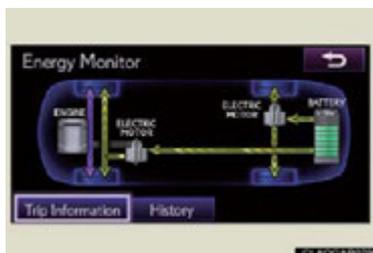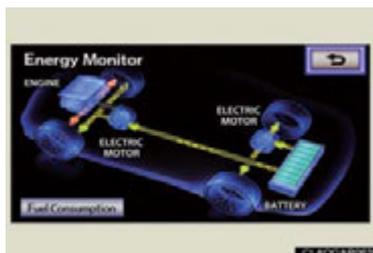

- The flow of energy is displayed on the navigation system screen or the Lexus Display Audio screen. (The rear electric motor is equipped AWD models only.)
- The flow of energy is indicated by the movement of the arrows on the multi-information display.
- The battery display acts as an 9-step indicator of the hybrid battery level.




The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

■ Consumption (with a navigation system)

Press the “MENU” button on the Remote Touch and select “Info/Apps”.
Select “Fuel Consumption”.

If the “Trip Information” screen does not appear, select “Fuel Consumption” on the “Energy Monitor” screen or “Trip Information” on the “Past Record” screen.

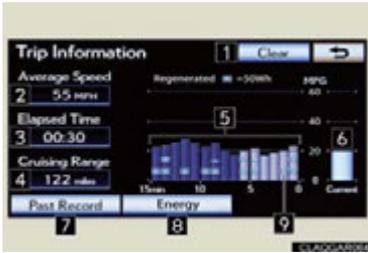

- 1 Reset the trip information data
- 2 Average vehicle speed
- 3 Elapsed time
- 4 Cruising range
- 5 Previous fuel consumption per minute
- 6 Current fuel consumption
- 7 “Past Record” screen appears
- 8 “Energy Monitor” screen appears
- 9 Regenerated energy


E : One symbol indicates 50 Wh.

The image is examples only, and may vary slightly from actual conditions.

■ Consumption (with the Lexus Display Audio system)

Press the “MENU” button on the Lexus Display Audio controller.
Select “Car” on the “Menu” screen.

If the “Trip information” screen does not appear, select “Trip information”.

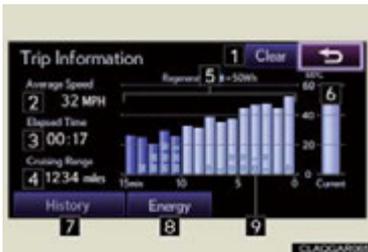

- 1 Reset the trip information data
- 2 Average vehicle speed
- 3 Elapsed time
- 4 Cruising range
- 5 Previous fuel consumption per minute
- 6 Current fuel consumption
- 7 “History” screen appears
- 8 “Energy Monitor” screen appears
- 9 Regenerated energy


E : One symbol indicates 50 Wh.

The image is examples only, and may vary slightly from actual conditions.

■ Past record (with a navigation system)

Press the “MENU” button on the Remote Touch and select “Info/Apps”.
Select “Fuel Consumption”.

If the “Past Record” screen does not appear, select “Fuel Consumption” on the “Energy Monitor” screen or “Past Record” on the “Trip Information” screen.

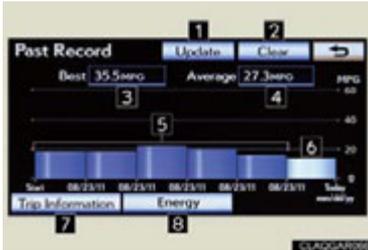


- 1 Update the past record data
- 2 Reset the past record data
- 3 Best past fuel consumption
- 4 Average fuel consumption
Use the displayed average fuel consumption as a reference.
- 5 Previous fuel economy record
- 6 Current fuel economy
- 7 “Trip Information” screen appears
- 8 “Energy Monitor” screen appears

The image is examples only, and may vary slightly from actual conditions.

■ Past record (with the Lexus Display Audio system)

Press the “MENU” button on the Lexus Display Audio controller.
Select “Car” on the “Menu” screen.

If the “History” screen does not appear, select “History”.

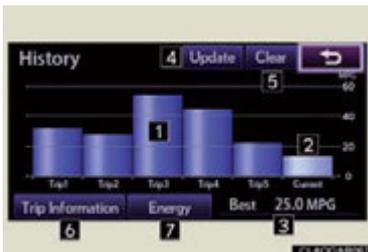

- 1 Previous fuel economy record
- 2 Current fuel economy
- 3 Best past fuel consumption
- 4 Update the past record data
- 5 Reset the past record data
- 6 “Trip information” screen appears
- 7 “Energy Monitor” screen appears

The image is examples only, and may vary slightly from actual conditions.

■ Hybrid warning message

A message is automatically shown when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

Keys

Electronic key



Smart access system with push-button start
(→P.17, 22)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
- 3 Press and hold:** opens and closes the back door
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)


Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)

RX350: For details on starting the engine, see page 21.

RX450h: For details on starting the hybrid system, see page 22.

■ Entering the vehicle

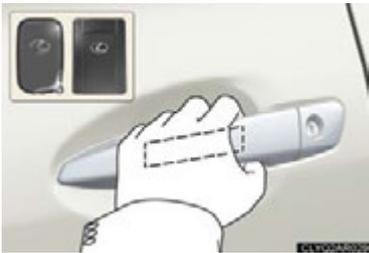


To unlock the vehicle, simply grasp either of the front door handles.

■ Exiting the vehicle



To lock the vehicle, touch the lock sensor on either of the front door handles.

■ Locking and unlocking the back door

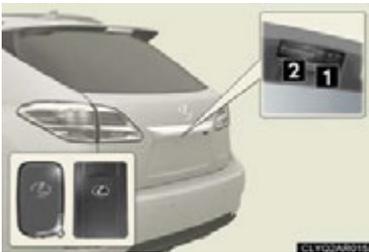

- 1 Locks
- 2 Unlocks

For details on what to do when the electronic key does not operate properly, see page 100.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

Engine immobilizer system (RX350)

▶ Vehicles with a navigation system or the Lexus Display Audio system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

▶ Vehicles without a navigation system or the Lexus Display Audio system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

■ Immobilizer system (RX450h)

▶ Vehicles with a navigation system or the Lexus Display Audio system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

▶ Vehicles without a navigation system or the Lexus Display Audio system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

■ Alarm (RX350)

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode, start the engine, or unlock the doors.

■ Alarm (RX450h)

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the “POWER” switch to ACCESSORY or ON mode, start the hybrid system, or unlock the doors.

■ Steering lock (RX350)



The steering wheel locks when the “ENGINE START STOP” switch is turned off and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, press the “ENGINE START STOP” switch while gently turning the steering wheel left or right.

■ Steering lock (RX450h)



The steering wheel locks when the “POWER” switch is turned off and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “POWER” switch will flash and a message will be shown on the multi-information display. To release it, press the “POWER” switch while gently turning the steering wheel left or right.

Engine (Ignition) Switch (RX350)

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is set and the shift lever is in P.

- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

Stopping the engine

- 1 Set the parking brake and shift the shift lever to P.
- 2 Press the “ENGINE START STOP” switch.

If the shift lever is in a position other than P when turning off the engine, the “ENGINE START STOP” switch will be turned to ACCESSORY mode, not to off. To avoid unexpected 12-volt battery discharge, make sure the lever is in the P position when stopping the engine.

Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:



Power (Ignition) Switch (RX450h)

With the electronic key on your person, the hybrid system can be started by simply pressing the “POWER” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the hybrid system.)

Starting the hybrid system



Make sure the parking brake is set and the shift lever is in P.

- 1 Depress the brake pedal.
The “POWER” switch indicator light turns green.
- 2 Press the “POWER” switch.
When the “READY” indicator changes from flashing to on, the hybrid system is properly started.


Stopping the hybrid system

- 1 Set the parking brake and shift the shift lever to P.
- 2 Press the “POWER” switch.

If the shift lever is in a position other than P when turning off the hybrid system, the “POWER” switch will be turned to ACCESSORY mode, not to off. To avoid unexpected 12-volt battery discharge, make sure the lever is in the P position when stopping the hybrid system.

Changing “POWER” switch mode

To change the “POWER” switch mode without turning on the hybrid system, press the “POWER” switch without depressing the brake pedal. The mode can be changed in the following order:

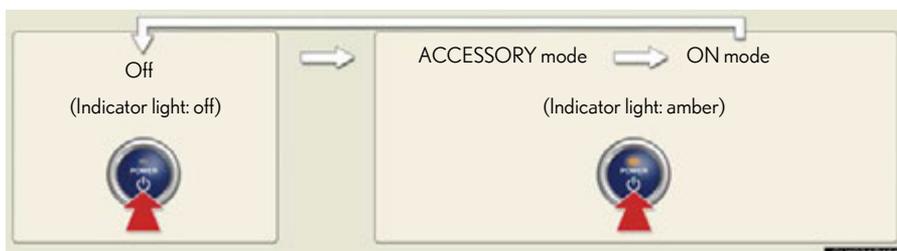

EV Drive Mode (RX450h)

In EV drive mode, the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning and late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.

However, when the Vehicle Proximity Notification System is active, the vehicle may produce sound.



Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

Depending on the situation, it may not be possible to turn on EV drive mode.

Intuitive Parking Assist (If Equipped)

The system uses a screen display, screen (vehicles with the Lexus Display Audio system) and a buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Turning the system on and off




- 1 Press the menu switch
- 2 Press the "∧" or "∨" switch until the intuitive parking assist mark appears in the multi-information display.



- 3 Press the "ENTER" switch to select on/off.

Press the menu switch to change to the normal display.

Screen display

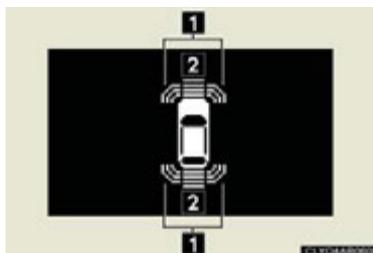

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the center sensors

Multi-information Display and Switch (RX350)


The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

Multi-information switches




- 1** “^” “v” switch
Changes items.
- 2** “ENTER” switch
Turns on/off electronic features controls and changes customization settings.
- 3** Menu switch
Changes mode from normal display to electronic features, customization or back to normal display.

Display contents

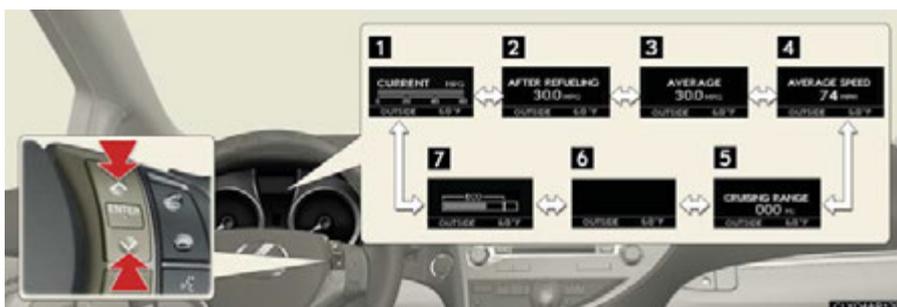

Trip information contents	Switching display items
1 Current fuel consumption	Press the “^” or “v” switch.
2 Average fuel consumption after refueling	
3 Average fuel consumption	
4 Average vehicle speed	
5 Cruising range	
6 Multi-information display off	
7 Eco Driving Indicator Zone Display	

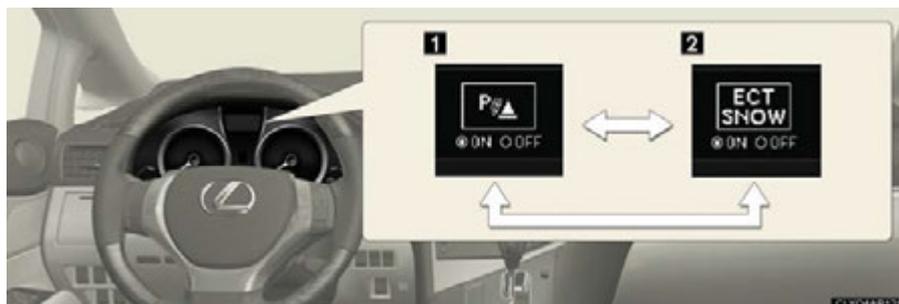

Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P.24
2 Snow mode	For details, see the Owner's Manual.

Display order may vary depending on vehicle condition.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Dynamic radar cruise control settings*	
Customization	
Warning message	

*: If equipped

- When using Intuitive parking assist-sensor or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Multi-information Display and Switch (RX450h)


The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

Multi-information switches




- 1 “^” “v” switch
Changes items.
- 2 “ENTER” switch
Turns on/off electronic features controls and changes customization settings.
- 3 Menu switch
Changes mode from normal display to electronic features, customization or back to normal display.

Display contents

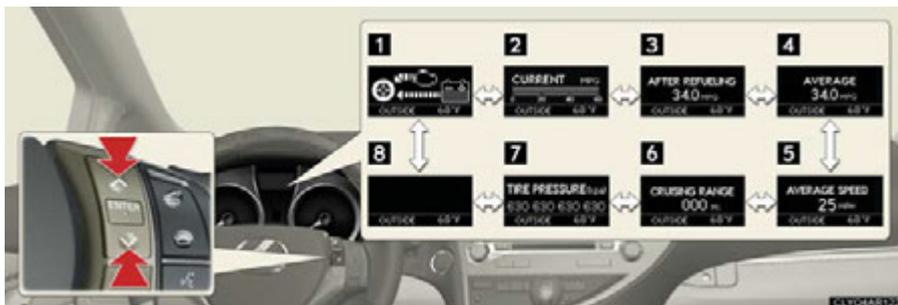

Trip information contents	Switching display items
1 Energy monitor	Press the “^” or “v” switch.
2 Current fuel consumption	
3 Average fuel consumption after refueling	
4 Average fuel consumption	
5 Average vehicle speed	
6 Cruising range	
7 Tire inflation pressure	
8 Multi-information display off	

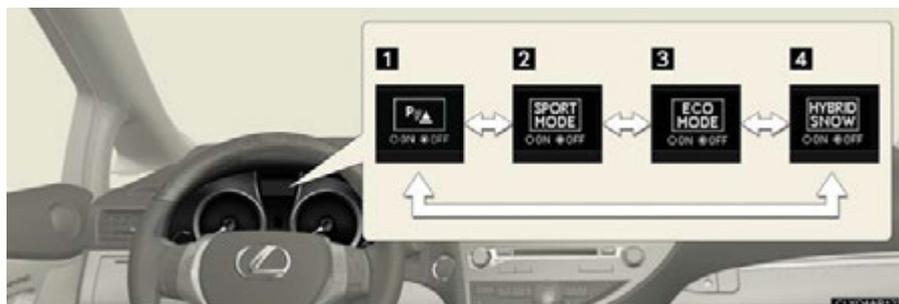

Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P. 24
2 Sport mode	For details, see the Owner's Manual.
3 Eco drive mode	For details, see the Owner's Manual.
4 Snow mode	For details, see the Owner's Manual.


Display order may vary depending on vehicle condition.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Dynamic radar cruise control settings*	
Customization	
Warning message	

*: If equipped

- When using intuitive parking assist or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Eco Driving Indicator (RX350)

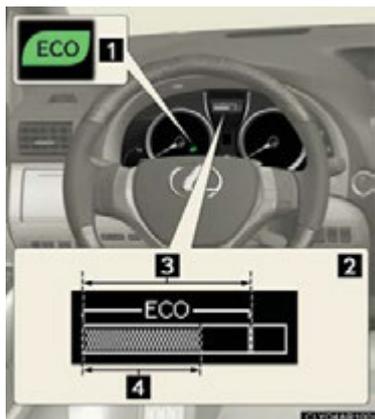


- 1 Eco Driving Indicator Light**
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.
- 2 Eco Driving Indicator Zone Display**
Suggests Eco driving range with current Eco driving ratio based on acceleration.
- 3 Zone of Eco driving**
- 4 Eco driving ratio based on acceleration**
If Zone of Eco driving is exceeded, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

Turn Signal Lever

► Type A



- 1 Right turn signal
- 2 Left turn signal

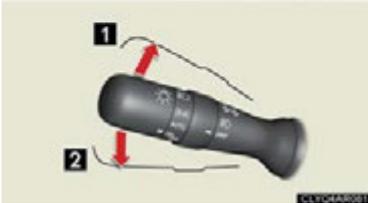

► Type B



- 1 Right turn signal
- 2 Left turn signal



To signal a lane change, move the lever partway and hold.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant vehicle speed control mode)
- 3 Display
- 4 Distance switch
- 5 Cruise control switch

■ Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

■ Vehicle-to-vehicle distance control mode




- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

■ Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

■ Canceling

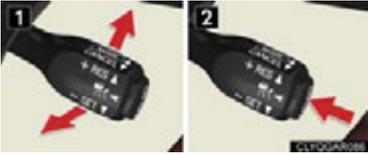

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the speed setting



To increase speed: push the lever up.


To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

BSM (Blind Spot Monitor) (If Equipped)

The Blind Spot Monitor is a system that assists the driver in making the decision to change lanes.

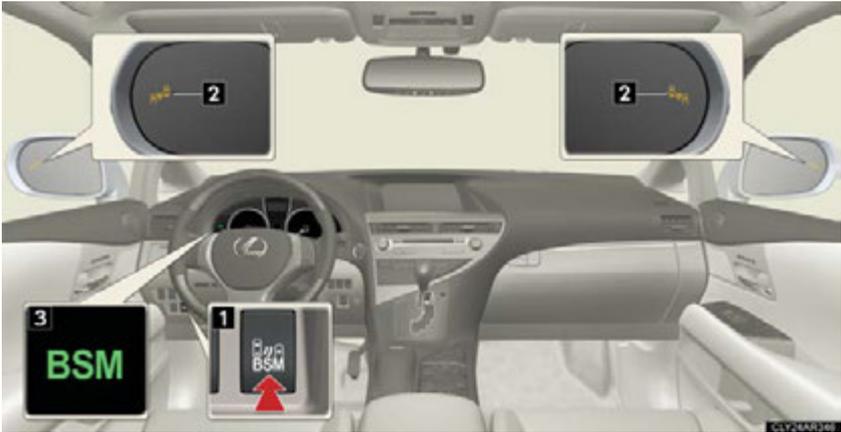

- 1** BSM main switch
Pressing the switch turns the system on or off.
- 2** Outside rear view mirror indicator
When a vehicle is detected in the blind spot, the outside rear view mirror indicator on that side illuminates. If the turn signal lever is operated when a vehicle is in the blind spot, the outside rear view mirror indicator flashes.
- 3** BSM indicator
When the system is on, the indicator will come on.

Head-up Display (If Equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.

Head-up display switches



- 1 Pressing the switch turns the head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

Head-up display contents




- 1 Audio display
- 2 Shift position and shift range display
- 3 Dynamic radar cruise control (if equipped)
- 4 Turn-by-turn navigation*
- 5 Vehicle speed display

- When using audio system or navigation system the appropriate display is shown on the screen.
- Warning messages will be displayed when necessary.
- The audio mode display and/or the shift position and shift range display can be shown or hidden. Press and hold the head-up display main switch changes the display to the display on/off mode. Press the head-up display main switch to select the desired setting item. Press and hold the head-up display main switch to turn the display on/off.
- The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses.
Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".


Headlights

► Type A

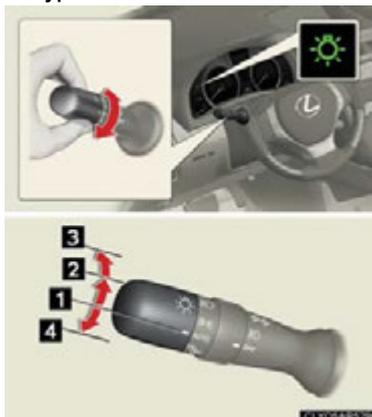

- 1 AUTO** The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically.
- 2** The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3** The headlights and all the lights listed above (except daytime running lights) turn on.
- 4 DRL OFF** The daytime running light turn off.

► Type B

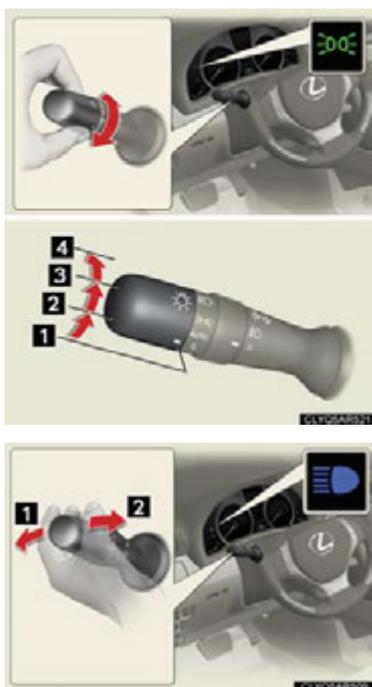

- 1** The daytime running lights turn on.
 - 2 AUTO** The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically.
 - 3** The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
 - 4** The headlights and all the lights listed above (except daytime running lights) turn on.
- To engage the high beams, push the lever forward.
 - To flash the high beams temporarily, pull the lever toward you.

Windshield Wipers and Washer

Intermittent wiper with interval adjuster (if equipped)




- 1 OFF** Off
- 2 INT** Intermittent wiper operation
- 3 LO** Low speed wiper operation
- 4 HI** High speed wiper operation
- 5 MIST** Temporary operation



Intermittent wiper operation: Wiper interval can be adjusted by turning the ring.

- 6** Increases the intermittent windshield wiper frequency
- 7** Decreases the intermittent windshield wiper frequency

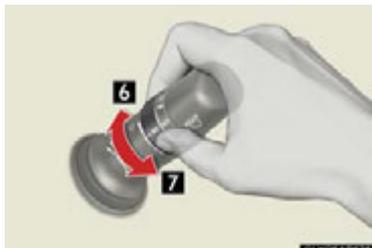

To spray washer fluid, pull the lever. The wipers will operate automatically.




■ Rain-sensing windshield wipers (if equipped)

▶ Type A



- 1 **OFF** Off
- 2 **AUTO** Rain-sensing wiper operation
- 3 **LO** Low speed wiper operation
- 4 **HI** High speed wiper operation
- 5 **MIST** Temporary operation

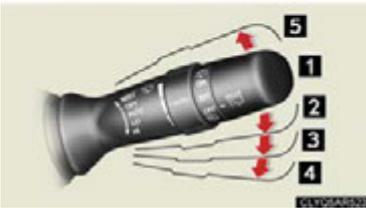

▶ Type B



- 1 **○** Off
- 2 **AUTO** Rain-sensing wiper operation
- 3 **▼** Low speed wiper operation
- 4 **▼** High speed wiper operation
- 5 **▲** Temporary operation





Rain-sensing wiper operation: the sensor sensitivity can be adjusted by turning the switch ring.

6 Sensor sensitivity (high)

7 Sensor sensitivity (low)



To spray washer fluid, pull the lever. The wipers will operate automatically.


Rear Window Wiper and Washer

► Type A



- 1 **OFF** Off
- 2 **INT** Intermittent window wiper operation
- 3 **ON** Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

► Type B

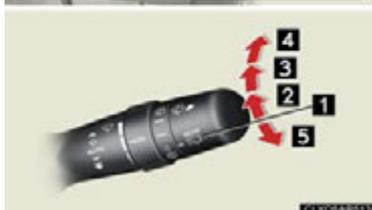

- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Remote Touch (with a navigation system)

The Remote Touch can be used to operate the Remote Touch screens

Basic operation



- 1** “∧•∨” button
Press this button to change map scale and scroll through lists.
- 2** “MAP/VOICE” button
Press this button to display the vehicle’s current position.
- 3** Remote Touch knob
Move in the desired direction to select a function, number and screen button.
Push the knob to enter the selected function, number and screen button.
- 4** “MENU” button
Press this button to display the “Menu” screen.


Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- 1 "Destination" (→P.45)
- 2 "Info/Apps" or "Info"
- 3 "Setup"
- 4 "Radio" (→P.65)
- 5 "Media" (→P.63)
- 6 "Climate" (→P.70)
- 7 "Phone" (→P.53)
- 8 "Display" (→P.42)


Display

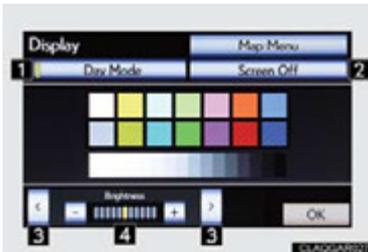

Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on
- 2 Turns the screen off
- 3 Change function
- 4 Adjust contrast/brightness

Screen scroll operation

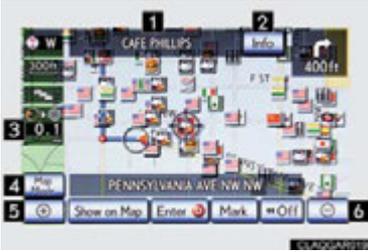


To scroll over the map, place the pointer in a position near the desired destination and then press and hold the Remote Touch knob.

- 1 Indicates the street name, town name, etc. for the selected point
- 2 Displays various information for the selected point
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the map configurations
- 5 Zooms in on the map
- 6 Zooms out on the map


Setting a route

While route guidance is operating, you can change the route using the following method.

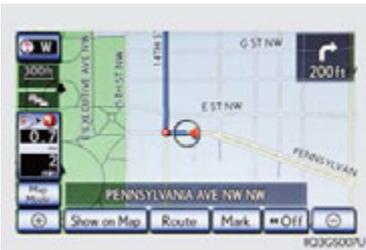

Select "Route".

The following settings can be accessed

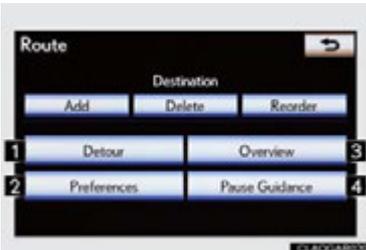

- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Lexus Display Audio Controller (with the Lexus Display Audio system)


By using the Lexus Display Audio controller, you can control the audio system and hands-free system, etc.

Basic operation



- 1 Displaying the audio control screen
- 2 Displaying the "Menu" screen
- 3 Displaying the previous screen
- 4 Turn or move the controller to select a function, number and screen button.
Push the controller to enter the selected function, number and screen button.

Menu

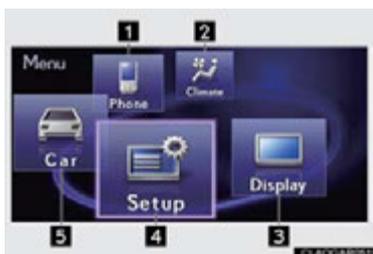


Press the "MENU" button on the Lexus Display Audio controller to display the "Menu" screen.

- 1 Phone (→P.53)
- 2 Climate (→P.70)
- 3 Display
- 4 Setup
- 5 Car

Navigation System (If Equipped)

Register home

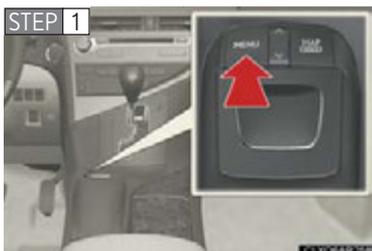


- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.




- 2 Select "Setup".



- 3 Select "Navigation".

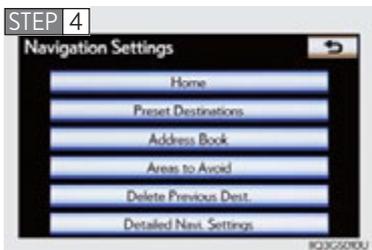


- 4 Select "Home".
- 5 Select "Set Home".
- 6 Select "Address".

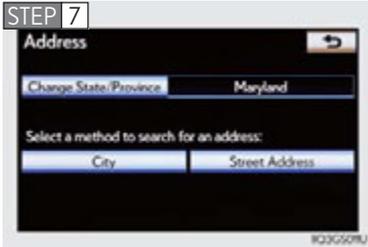

- 7 Select "City".
- 8 Input a city name and select "OK".
- 9 Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 10 Input the street name and select "OK".
- 11 When the desired street name is found, select the corresponding screen button.
- 12 Input a house number and select "OK".
- 13 Select "Enter".
- 14 Select "OK".

Destination input — Search by address

Select by city name

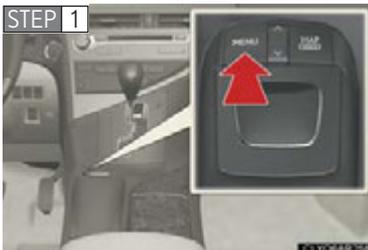


- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.



- 2 Select "Destination".



- 3 Select "Address".

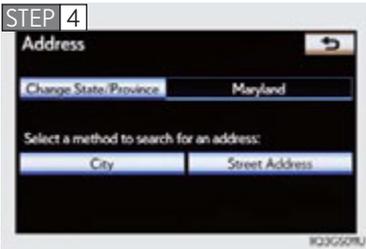

4 Select "City".



5 Input a city name and select "OK".

6 Select the screen button of the desired city name from the displayed list.

7 Input the street name and select "OK".


8 When the desired street name is found, select the corresponding screen button.

9 Input a house number and select "OK".

10 Select "Go to".

11 Select "OK".

Select by street address

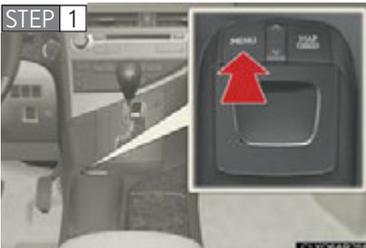

1 Press the "MENU" button on the Remote Touch.


Please refer to P.41 for the Remote Touch operation.



2 Select "Destination".



3 Select "Address".

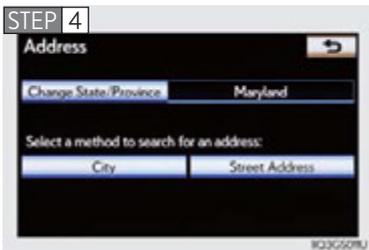

4 Select "Street Address".



5 Input a house number and select "OK".

6 Input the street name and select "OK".

7 When the desired street name is found, select the corresponding screen button.


8 Input a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.

10 Select "Go to".

11 Select "OK".

Destination input — Search points of interest by name

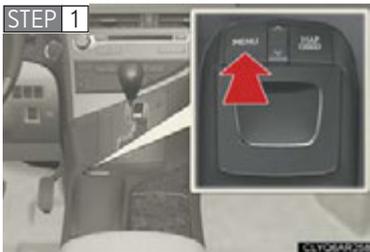


- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.



- 2 Select “Destination”.



- 3 Select “Point of Interest”.

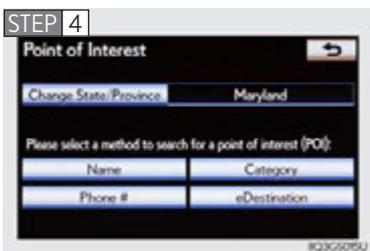


- 4 Select “Name”.



- 5 Input the name of the point of interest and select “OK”.
- 6 Select the screen button of the desired destination.
- 7 Select “Go to”.
- 8 Select “OK”.

Destination input — Search points of interest by category

STEP 1

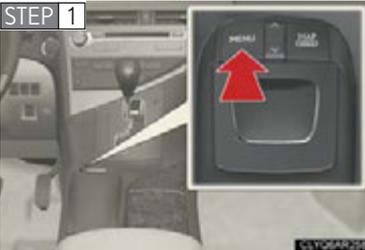

- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.

STEP 2




- 2 Select “Destination”.

STEP 3



- 3 Select “Point of Interest”.

STEP 4

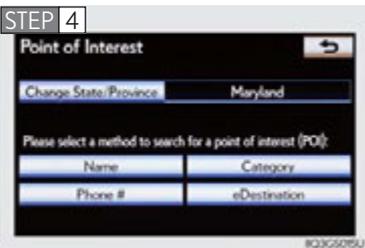


- 4 Select “Category”.



- 5 Select "Near a Destination".
- 6 Select the screen button of the desired destination and set screen the search point.
- 7 Select the desired point of interest category from the displayed list.
- 8 Select the screen button of the desired item.
- 9 Select "Go to".
- 10 Select "OK".

Destination input — Search by telephone number

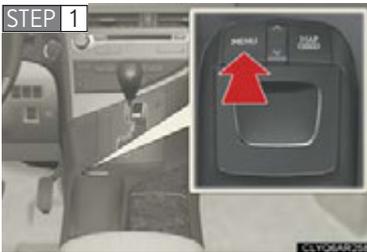


- 1 Press the "MENU" button on the Remote Touch. Please refer to P.41 for the Remote Touch operation.



- 2 Select "Destination".



- 3 Select "Point of Interest".

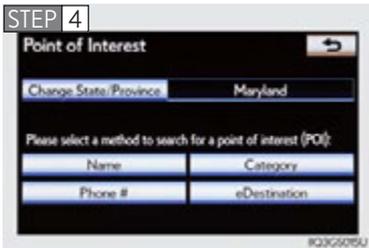

4 Select "Phone #".



5 Input a telephone number and select "OK".

6 Select "Go to".


7 Select "OK".

Hands-free System For Mobile Phone (with a navigation system or the Lexus Display Audio system)

Bluetooth® phone pairing

▶ with a navigation system

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

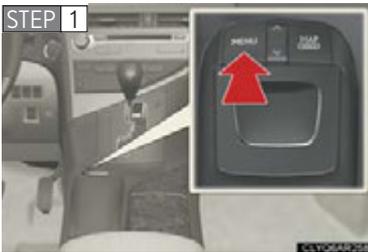

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press the "MENU" button on the Remote Touch.

Please refer to P.41 for the Remote Touch operation.



2 Select "Phone".





3 Select "Yes".



► **with the Lexus Display Audio system**

To use the hands-free system, you must register a Bluetooth® phone in the system.

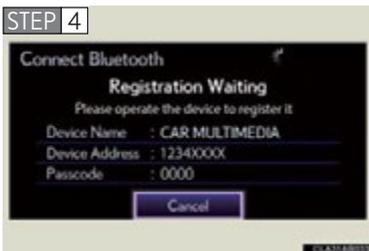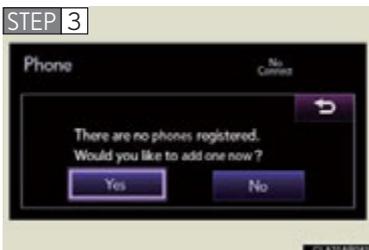



- 4 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 5 If a completion message is displayed, registration is complete.

- 1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.44 for the Lexus Display Audio controller operation.
- 2 Select "Phone".
- 3 Select "Yes".

- 4 Enter the passcode displayed on the screen into the phone.
Refer to the mobile phone user's manual for mobile phone operation.
- 5 If a completion message is displayed, registration is complete.

■ Phonebook transfer

► with a navigation system

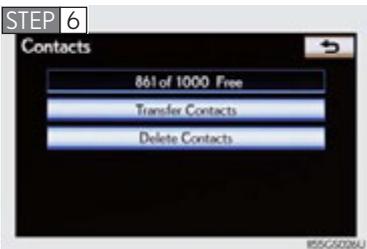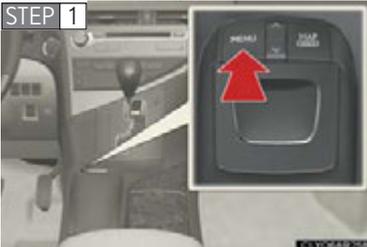

1 Press the "MENU" button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.

2 Select "Setup".

3 Select "Phone".

4 Select "Phonebook".

5 Select "Manage Contacts".

6 Select "Transfer Contacts".

7 Select "Update Phonebook".




- 8 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for mobile phone operation.

► with the Lexus Display Audio system

- 1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.44 for the Lexus Display Audio controller operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Contacts".
- 5 Select "Manage Contacts".
- 6 Select "Transfer".
- 7 Transfer the phonebook data to the system using the mobile phone.
Refer to the mobile phone user's manual for mobile phone operation.

■ Registering a speed dial

► with a navigation system

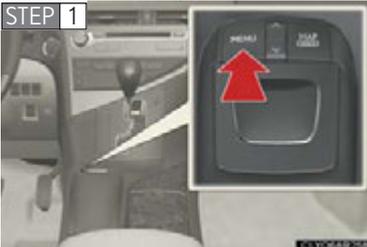


- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.



- 2 Select "Setup".



- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Speed Dials".

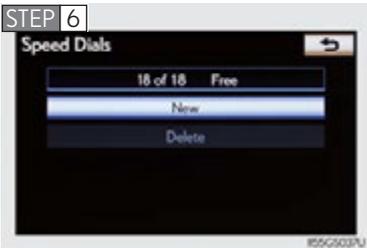


- 6 Select "New".



- 7 Select the data you want to register.
- 8 Select the desired phone number.
- 9 Select the button you want to register in.

► with the Lexus Display Audio system

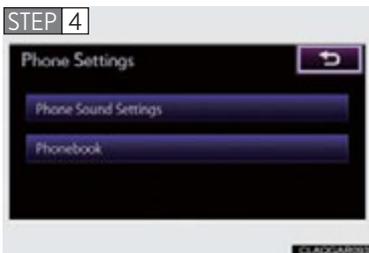


- 1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.44 for the Lexus Display Audio controller operation.

- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Speed Dials".
- 6 Select "New Speed Dial from Contacts".



- 7 Select the data you want to register.

STEP 8

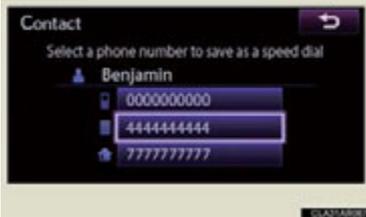

8 Select the desired phone number.

STEP 9



9 Select the button you want to register in.

■ Calling by speed dial

► with a navigation system

STEP 1



1 Press the "MENU" button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.

STEP 2




2 Select "Phone".

STEP 3



3 Select "Speed Dials".

STEP 4

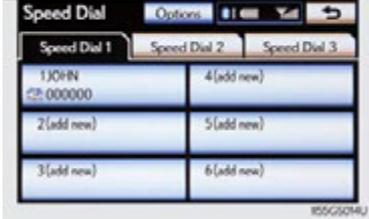

4 Select the desired number to call.

► with the Lexus Display Audio system

STEP 2



1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.44 for the Lexus Display Audio controller operation.

2 Select "Phone".


3 Select "Speed Dials".

STEP 4



4 Select the desired tab and choose the desired number to make a call.

■ Calling using SMS/MMS message (with a navigation system)

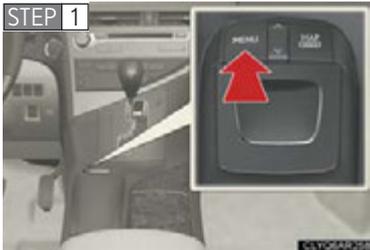

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.41 for the Remote Touch operation.



- 2 Select "Phone".



- 3 Select "Messages".
- 4 Select "SMS/MMS" tab.
- 5 Select the desired received message from the displayed list.
- 6 Press  on the steering wheel.

The tab display may vary depending on the type of cellular phone.

■ Receiving a call

▶ with a navigation system



1 When a call is received, this screen is displayed with a sound.

2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

▶ with the Lexus Display Audio system




1 When a call is received, this screen is displayed with a sound.

2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

■ Steering switches

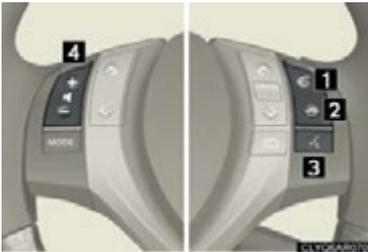

1 Sending/Receiving/"Phone" screen display

2 End call/Refuse call

3 Start the voice command system


4 Increases/decreases volume

Audio System (with a navigation system or the Lexus Display Audio system)

Audio control screen

Follow the procedure below to display the audio control screen.

▶ with a navigation system

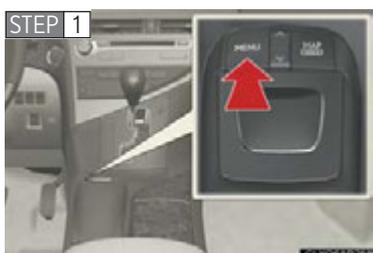

- 1 Press the “MENU” button on the Remote Touch.

Please refer to P.41 for the Remote Touch operation.

The “Menu” screen will be displayed.



- 2 Using the Remote Touch, select “Radio” or “Media” and select each tab.

▶ with the Lexus Display Audio system


- 1 Press the “AUDIO” button on the Lexus Display Audio controller.

Please refer to P.44 for the Lexus Display Audio controller operation.

- 2 Using the Lexus Display Audio controller, select “Source” and select each tab.

Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

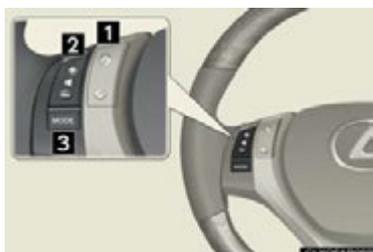

- 1 Radio mode: Selects a radio station
Audio CD mode: Selects a track
MP3/WMA disc mode: Selects a file and folder
DVD mode: Selects a chapter (if equipped)
iPod mode: Selects a song
- 2 Increases/decreases volume
- 3 Press: Turns the power on, selects audio source
Press and hold: Pause or mute

Basic operation

▶ with a navigation system



- 1 Audio sources
 - “RADIO” button:
 - AM: AM radio
 - FM: FM radio
 - SAT: Satellite radio
 - APPS (if equipped): Internet radio broadcast
 - “MEDIA” button:
 - DISC: DVD player/CD player
 - iPod: iPod
 - USB: USB memory
 - BT Audio: Bluetooth® audio
 - AUX: Auxiliary audio device

- 2 Sound quality modes
- 3 Power/Volume

▶ with the Lexus Display Audio system



- 1 Power/Volume
- 2 Audio sources
 - “RADIO” button:
 - AM·FM: AM radio/FM radio
 - SAT: Satellite radio
 - “MEDIA” button:
 - CD: CD player
 - AUX·USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

Radio

▶ with a navigation system



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Using HD Radio™ Technology
- 4 Adjusting the frequency
- 5 Preset tuning/seeking the frequency

▶ with the Lexus Display Audio system



- 1 Using HD Radio™ Technology
- 2 Station presets
- 3 Adjusting the frequency
- 4 Preset tuning/seeking the frequency
- 5 Scanning radio stations


■ Entering station presets

- 1 Select the desired station by using the tune or the seek function.
- 2 Using the Remote Touch, select one of the preset buttons (1-6) and hold it until a beep is heard, indicating that the station has been set.

DVD player/CD player


Playing an audio CD

▶ with a navigation system

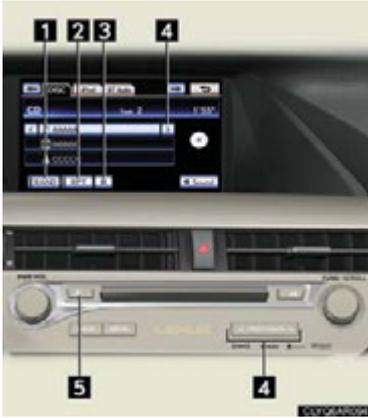

- 1 Random playback
- 2 Repeat play
- 3 Pause
- 4 Selecting a track
- 5 CD eject

▶ with the Lexus Display Audio system

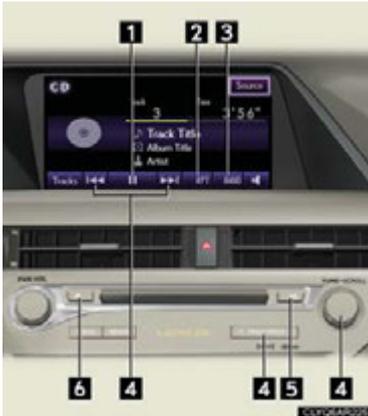

- 1 Pause/Playback
- 2 Repeat play
- 3 Random playback
- 4 Track select
- 5 Pause/Playback
- 6 Eject

■ Playing a CD with MP3/WMA files

▶ with a navigation system




- 1 Random playback
- 2 Repeat play
- 3 Pause
- 4 Selecting a file
- 5 Folder selection
- 6 CD eject

▶ with the Lexus Display Audio system



- 1 File select
- 2 Pause/Playback
- 3 Folder select
- 4 Pause/Playback
- 5 Random playback
- 6 Repeat play
- 7 Eject

■ Playing a DVD (with a navigation system)

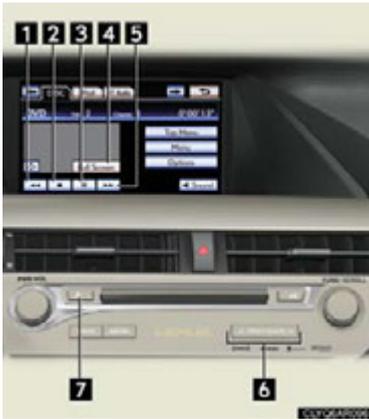

- 1 Reverse
- 2 Stop
- 3 Pause
- 4 Image display (full screen)
- 5 Fast forward
- 6 Chapter selection
- 7 DVD eject

■ Operating an iPod

▶ with a navigation system



- 1 Random playback
- 2 Repeat play
- 3 Pause
- 4 Select play mode
- 5 Song selection

▶ with the Lexus Display Audio system



- 1 Song list
- 2 Pause/Playback
- 3 Select play mode
- 4 Song selection
- 5 Playback/pause
- 6 Random playback
- 7 Repeat play

Air Conditioning System (with a navigation system or the Lexus Display Audio system)

▶ with a navigation system



- | | |
|---|--|
| 1 Outside temperature | 10 Fan speed control |
| 2 Passenger's side temperature control | 11 Automatic mode |
| 3 Passenger's side temperature display | 12 Off |
| 4 Air outlet selector | 13 DUAL mode |
| 5 Windshield wiper de-icer | 14 Cooling and dehumidification function on/off |
| 6 Windshield defogger | 15 Driver's side temperature display |
| 7 Rear window and outside rear view mirror defoggers | 16 Air flows to the feet and the windshield defogger operates |
| 8 Outside air/recirculated air mode | |
| 9 Driver's side temperature control | |

■ Using the automatic mode

Press **11** to turn on the airflow and **9** to adjust the temperature.

■ Adjusting the temperature

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the **2** to adjust the temperature for the passenger side.

To cancel the dual mode, press **13**.

► with the Lexus Display Audio system



- | | |
|---|--|
| 1 Driver's side temperature control | 9 Windshield defogger |
| 2 Driver's side temperature display | 10 Outside air/recirculated air mode |
| 3 Outside temperature | 11 Automatic mode |
| 4 Passenger's side temperature display | 12 Off |
| 5 Passenger's side temperature control | 13 DUAL mode |
| 6 Fan speed control | 14 Cooling and dehumidification function on/off |
| 7 Air outlet selector | |
| 8 Windshield wiper de-icer | |

■ Using the automatic mode

Press **11** to turn on the airflow and **1** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press **13** to turn the "DUAL" indicator off and then press **1**.

■ To individually adjust the driver's side and passenger's side temperature settings

Press **13** or **5** to turn the "DUAL" indicator on and then press **5** or **1**.

Hands-free System For Mobile Phone (without a navigation system or the Lexus Display Audio system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the mobile phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name*.
*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the mobile phone user's manual for mobile phone operation.
- 6 Once the voice guidance for registration completion is finished, press .



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by speed dial

STEP 1



1 Press  .

STEP 2



2 Press the desired preset button.

3 Press  .

■ Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the mobile phone.
Refer to the mobile phone user's manual for mobile phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Changing the registered name



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Registering a speed dial



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

Audio System (without a navigation system or the Lexus Display Audio system)

Basic operation

► Type A



- 1 Power/Volume
- 2 Audio sources
 - AM•FM: AM radio/FM radio
 - SAT: Satellite radio
 - CD: CD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

► Type B



- 1 Power/Volume
- 2 Audio sources
 - AM: AM radio
 - FM: FM radio
 - CD: CD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

Radio

► Type A



- 1 RBDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek

► Type B



- 1 RBDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek

■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ CD player


■ Playing an audio CD

▶ Type A



- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Disc load
- 6 Text information
- 7 Search playback
- 8 Disc select
- 9 Track select/rewind/fast-forward


▶ Type B

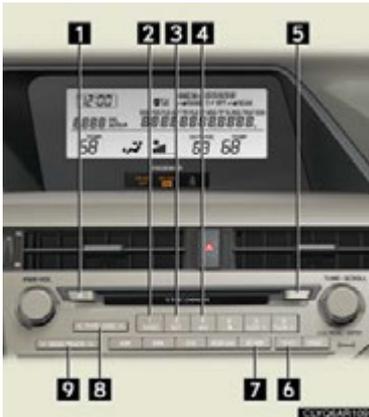

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Disc load
- 6 Text information
- 7 Search playback
- 8 Disc select
- 9 Track select/rewind/fast-forward


■ Playing a CD with MP3/WMA files

▶ Type A

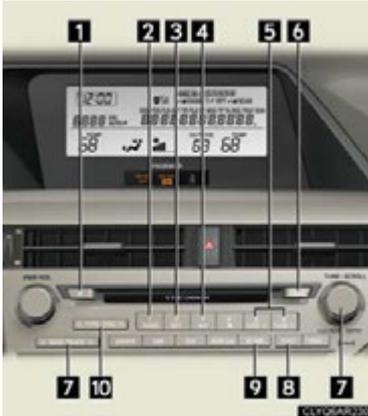

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Text information
- 9 Search playback
- 10 Disc select

▶ Type B

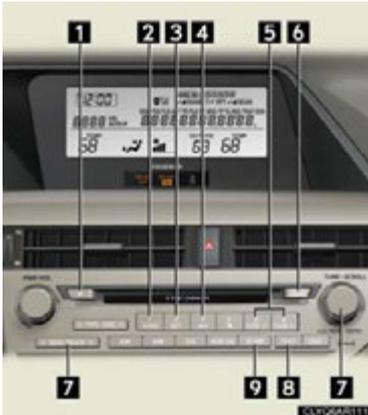

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Text information
- 9 Search playback

■ Loading a CD

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.

■ Operating an iPod

► Type A



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select


► Type B



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

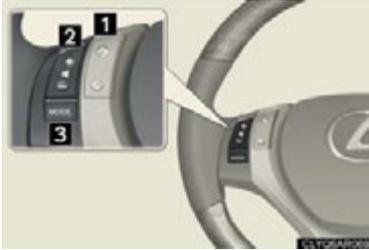

- 1** Radio mode: radio tuner
CD mode: disc/track/file (MP3/WMA) select
iPod mode: song select
- 2** Volume
- 3** Power on/change mode: press
Power off: press and hold

Air Conditioning System

(without a navigation system or the Lexus Display Audio system)



- | | |
|--|---|
| 1 Passenger side temperature display | 7 Windshield defogger |
| 2 Off | 8 Air outlet selector button |
| 3 Cooling and dehumidification function on/off button | 9 Driver side temperature control |
| 4 Dual mode button | 10 Fan speed control button |
| 5 Passenger side temperature control | 11 Automatic mode button |
| 6 Outside air/recirculated air mode button | 12 Driver side temperature display |

■ Using the automatic mode

Press **11** to turn on the airflow and **9** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings
Press **4** to turn the "DUAL" indicator off and then press **9**.

■ To individually adjust the driver's side and passenger's side temperature settings
Press **5** or **4** to turn the "DUAL" indicator on and then press **9** or **5**.

Voice Command System (with navigation system)

Basic operation

NOTE: When inputting voice commands you must wait until after the beep to speak.



- 1 Press .
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

■ Command list

Set a Destination

Command	Action
"Find Nearby <POI category>"	Displays a list of <POI category*> near the current position.
"Enter an Address"	Enables setting a destination by saying the address.
"Go Home"	Displays the route to home.
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.
"Destination by Phone Number"	Enables setting a destination by saying the phone number.

*: For example; Gas stations, Restaurants, etc.

Use the Phone

Command	Action
"Call <name> <type>"	Calls made by saying a name from the phonebook. For example: Say "Call John Smith", "Call John Smith, mobile" etc.
"Dial <number>"	Calls made by saying the phone number. For example: Say "Dial 911", "Dial 5556667777" etc.
"International Call"	Calls international numbers by saying the phone number.

Play Music

Command	Action
"Play Artist <name>"	Plays tracks by the selected artist. For example: Say "Play artist <XXXXXX>"*
"Play Album <name>"	Plays tracks from the selected album. For example: Say "Play album <XXXXXX>"*
"Play Song <name>"	Plays the selected track. For example: Say "Play song Summertime", "Play song Concerto in A Major" etc.
"Play Playlist <name>"	Plays tracks from the selected playlist. For example: Say "Play playlist My Favorite Songs", "Play Playlist Classic Hits" etc.

*: Say the desired artist name or album name in the place of the "<>".

Get Information

Command	Action
"Traffic"	Displays the traffic incident list.
"Weather"	Displays weather information.
"Sports Scores"	Displays the sports list.
"Stock Quotes"	Displays the stocks list.
"Fuel Prices"	Displays the fuel prices list.
"Lexus Insider"	Displays the Lexus insider list.

Select audio mode

Command	Action
"Radio", "AM", "FM", "Satellite radio", "Disc", "Auxiliary", "Bluetooth* audio", "iPod", "USB audio"	Change the audio mode.
"Audio on"	Turns the audio system on.
"Audio off"	Turns the audio system off.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Climate/air conditioning system command

Command	Action
"Automatic climate control"	Turns air conditioning system on and off.
"Warmer"	Turns temperature up.
"Cooler"	Turns temperature down.

"Select audio mode" and "Climate/air conditioning system command" are enable when expanded voice commands are turned "On". Refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



- 1 Pull up the lever to release the lock, and lift the armrest.



- 2 Open the cover.




- 1 USB port
- 2 AUX port

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

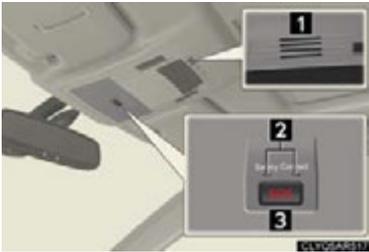

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally push the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can push the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.89)**

- Automatic collision notification^{*1}
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced Roadside assistance

● **Apps**

Apps is a service that enables the usable contents of a mobile phone to be displayed on and operated from the navigation screen. Before Apps can be used, a few settings need to be performed.

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM® Sports and Stocks***2

XM® Sports and Stocks is a service included with XM® satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

● **XM Fuel Prices***3

XM Fuel Prices is a service included with an XM TravelLink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

● **XM NavWeather™***3

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

● **XM® NavTraffic***3

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

● **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

● **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.


*3: Available via separate XM® subscription(s).

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-877-515-3987 (U.S.A.) or 1-877-438-9677 (Canada)), or push the "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

Door Locks

■ Locking the vehicle from inside

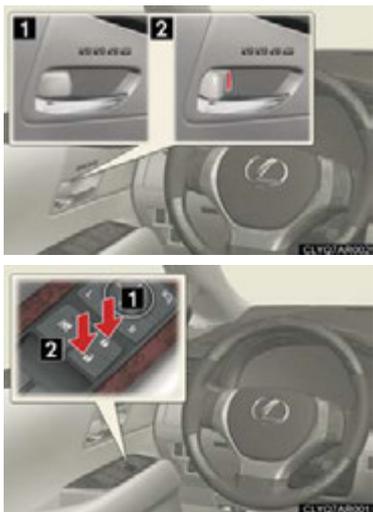

► Inside lock button

- 1 Locks
- 2 Unlocks

► Door lock switches

Operates all door locks/unlocks.

- 1 Locks
- 2 Unlocks

■ Locking the vehicle from outside

Using the entry function or wireless remote control (→P.16, 17)


■ Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows

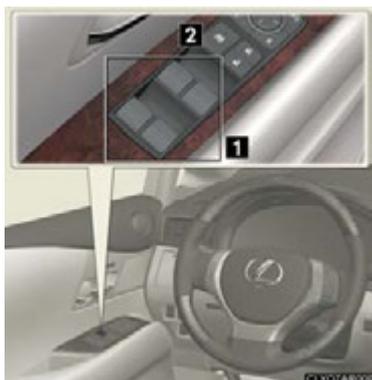

1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger and rear window switches.

Moon Roof (If Equipped)

Opening and closing

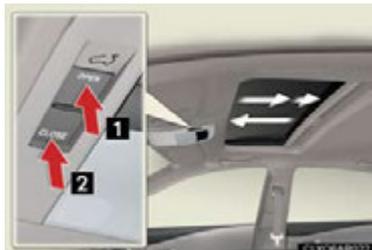

1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

To stop partway, press the switch lightly.

Tilt up and down



1 Tilts up

2 Tilts down

To stop partway, press the switch lightly.

Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Back Door

■ Back door opener button



To open the back door, push up the opener button and raise the door.

■ Power back door switches



▶ Instrument panel

To open or close the back door, press and hold the switch.



▶ Back door


To close the back door, press the switch.

▶ Wireless remote control (→P.16)

■ Back door closer

If the back door is left slightly open, it will close automatically.

■ Turning the power back door system on and off

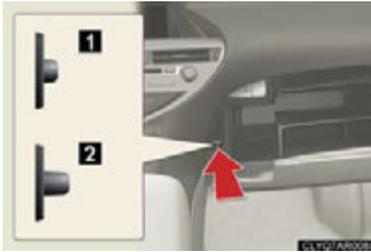

To disable the system, turn off the main switch in the glove box.

- 1** On
- 2** Off

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



(Comes on)

Slip indicator



Electric power steering system warning light



(Flashes)

Pre-collision system warning light^{*1}



(Blinking and then continuously on)

Tire pressure warning light

Follow the correction procedures.



Open door warning light



Low fuel level warning light



Driver's seat belt reminder light



Brake system warning light (RX450h)



(On the center panel)

Front passenger's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

What to do if ...

See the Owner's Manual



Turn signal indicator



BSM outside rear view mirror indicators^{*1}



Headlight high beam indicator



"PCS" warning^{*1,2}



Headlight indicator (U.S.A.)



"SPORT MODE" indicator (RX450h)



Tail light indicator (Canada)



Slip indicator
(Flashes)



Front fog light indicator



VSC off indicator



"Hybrid SNOW" indicator (RX450h)



Eco Driving Indicator Light (RX350)



Cruise control indicator



"ECO MODE" indicator (RX450h)



Radar cruise control indicator^{*1}



EV drive mode indicator (RX450h)



Intuitive parking assist indicator^{*1}



"READY" indicator (RX450h)



All-wheel drive lock indicator (RX350 AWD models only)



SRS airbag on-off indicator^{*1}



BSM indicator^{*1}



SRS airbag on-off indicator^{*1}



"ECT SNOW" indicator (RX350)

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: It also turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

^{*3}: The light comes on when the system is turned off. The light flashes faster than usual to indicate that the system is operating.

If the electronic key does not operate properly

Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key (driver's door only). The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

Starting the engine (RX350)



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

Starting the hybrid system (RX450h)



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if ...

If the engine doesn't start (RX350)

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

If the hybrid system doesn't start (RX450h)

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "POWER" switch while gently turning the wheel left or right.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2012 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.