

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System (with navigation system)*	
Using the automatic mode	44
Adjusting the temperature	44
To turn off the airflow	44
Air Conditioning System (without navigation system)	
Using the automatic mode	55
Adjusting the temperature	55
To turn off the airflow	55
Audio System (with navigation system)*	
Audio control screen	40
Basic operation	40
Radio	41
DVD player/CD player	41
Operating an iPod	43
Remote control (steering wheel switches)	43
Audio System (without navigation system)	
Basic operation	49
Radio	50
CD player	51
Operating an iPod	53
Remote control (steering wheel switches)	54
Automatic High Beam	22
Back Door	69
Cruise Control	15
Door Locks	67
Dynamic Radar Cruise Control	16
Eco Driving Indicator	14
Engine (Ignition) Switch	10
Fuel Tank Cap	70
Hands-free System For Cellular Phone (with navigation system)*	
Bluetooth [®] phone pairing	35
Phonebook transfer	36
Registering a speed dial	37
Calling by name	38
Receiving a call	39

*: This feature may be operated by Voice command (See P.56)

Hands-free System For Cellular Phone (without navigation system)*	
Bluetooth® phone pairing	45
Calling by number	46
Calling by name.....	46
Phonebook transfer	47
Registering a speed dial.....	48
Headlights	20
Head-up Display	19
Intuitive Parking Assist	11
Keys	7
Lexus Enform with Safety Connect	65
Moon Roof	68
Multi-information Display and Switch	12
Navigation System*	
Register home.....	30
Destination input — Search by address	31
Destination input — Search points of interest by name.....	32
Destination input — Search points of interest by category.....	33
Destination input — Search points of interest by telephone number.....	34
Voice Command System	56
Portable Audio Device Ports	62
Power Windows	68
Rear Window Wiper and Washer	27
Remote Touch	
Basic operation.....	28
Start	29
Display.....	29
Safety Connect	63
Smart Access System with Push-button Start	8
Theft Deterrent System	9
Turn Signal Lever	17
Voice Command System	
Basic operation.....	56
Command list.....	57
Windshield Wipers and Washer	24

*: This feature may be operated by Voice command (See P.56)

Overview

Instrument Panel

- Headlight switch P.20
- Automatic high beam * P.22
- Turn signal lever P.17

- Fuel filler door opener P.70
- Power back door switch * P.69


Multi-information display P.12

Inside lock buttons P.67

Window lock switch P.68

Power window switches P.68

Door lock switches P.67

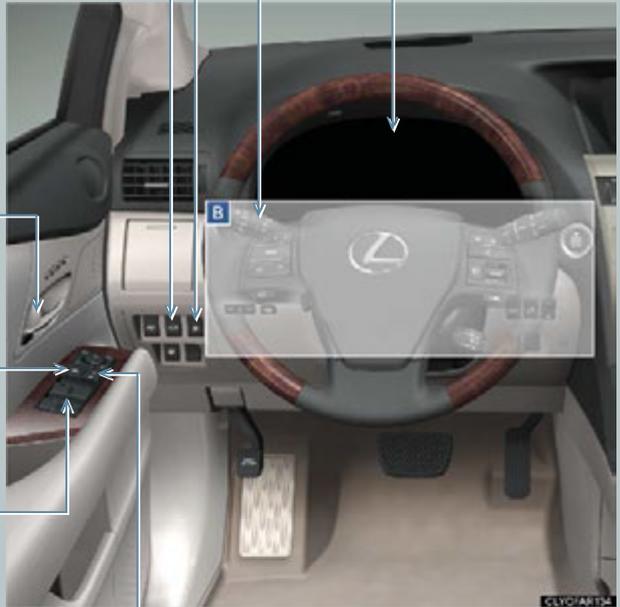

Windshield wiper and washer switch P.24

Rear window wiper and washer switch P.27

Engine (ignition) switch P.10



Power back door main switch * P.70

Remote Touch * P.28

Head-up display main switch * P.19

* : If equipped

A

▶ With navigation system



▶ Without navigation system



B

Multi-information switches P.12

Telephone switches * P.35, 45

Talk switch * P.35, 45, 56

Audio remote control switches P.43, 54



Cruise control switch P.15, 16

Distance switch * P.16

* : If equipped

Keys

Electronic key



Smart access system with push-button start
(→P.8, 10)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
- 3 Press and hold:** Opens and closes the back door*
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

*: If equipped

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 10.

■ Entering the vehicle



To unlock the vehicle, simply grasp either of the front door handles.

■ Exiting the vehicle



To lock the vehicle, touch the lock sensor on either of the front door handles.

■ Locking and unlocking the back door



- 1 Locks
- 2 Unlocks

For details on what to do when the electronic key does not operate properly, see page 73.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode, start the engine, or unlock the doors.

Steering lock



The steering wheel locks when the “ENGINE START STOP” switch is turned off and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, press the “ENGINE START STOP” switch while gently turning the steering wheel left or right.

Engine (Ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is set and the shift lever is in P.

- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.


Stopping the engine

- 1 Set the parking brake and shift the shift lever to P.
- 2 Press the “ENGINE START STOP” switch.

If the shift lever is in a position other than P when turning off the engine, the “ENGINE START STOP” switch will be turned to ACCESSORY mode, not to OFF. To avoid unexpected battery discharge, make sure the lever is in the P position when stopping the engine.

Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:

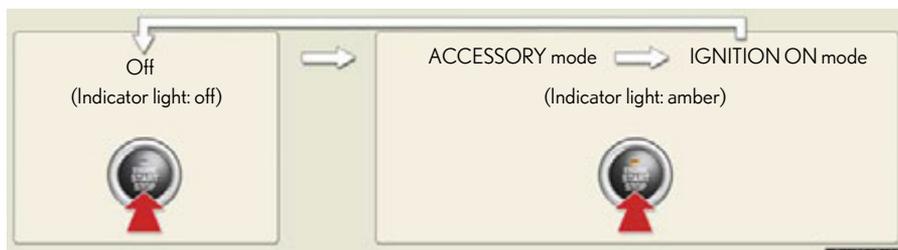

Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

Turning the system on and off




- 1 Press the menu switch
- 2 Press the “ENTER” switch upwards or downwards until the Intuitive parking assist-sensor mark appears in the multi-information display.



- 3 Press the “ENTER” switch to select on/off.

Press the menu switch to change to the normal display.

Screen display

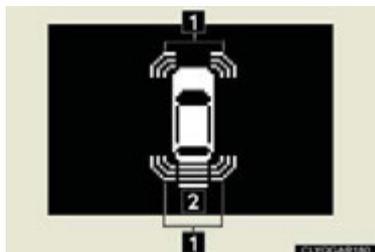

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors

Multi-information Display and Switch

The multi-information display shows information about your vehicle, including the items shown below.

Multi-information switches



- 1** Menu switch
Changes modes to electronic features control mode, customization mode or back to normal display mode.
- 2** “ENTER” switch
Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

Display contents



Trip information contents	Switching display items
1 Current fuel consumption	Pressing the “ENTER” switch upwards or downwards.
2 Average fuel consumption after refueling	
3 Average fuel consumption	
4 Average vehicle speed	
5 Cruising range	
6 Multi-information display OFF	
7 Eco Driving Indicator Zone Display	




Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P. 11
2 Snow mode	For details, see the Owner's Manual.
3 AFS*	For details, see the Owner's Manual.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Customization	
Dynamic radar cruise control settings*	
Warning message	

*: If equipped

- When using Intuitive parking assist-sensor or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Eco Driving Indicator

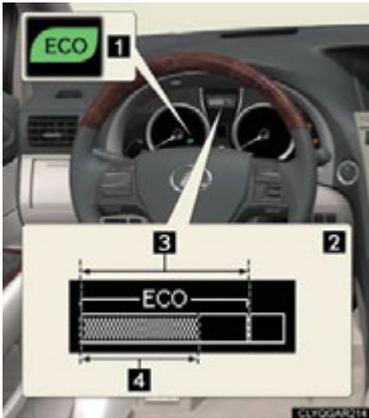

- 1** Eco Driving Indicator Light
During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on.
- 2** Eco Driving Indicator Zone Display
Suggests Eco driving range with current Eco driving ratio based on acceleration.
- 3** Zone of Eco driving
- 4** Eco driving ratio based on acceleration
If Zone of Eco driving is exceeded, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

Eco Driving Indicator will not operate in the following conditions:

- The shift lever is anything other than D.
- The driving mode is set to snow mode.
- The vehicle speed is approximately 80 mph (130 km/h) or higher.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



To increase speed: push the lever up.

To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant vehicle speed control mode)
- 3 Display
- 4 Distance switch
- 5 Cruise control switch

Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode




- 1 Press the "ON-OFF" button.
 - 2 Accelerate or decelerate to the desired speed, and then push the lever down.
- Vehicle-to-vehicle distance can be adjusted using the distance switch.

Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

■ Canceling

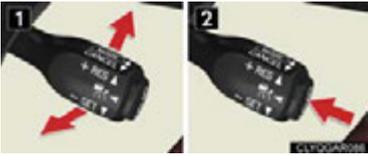

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the speed setting



- To increase speed: push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

Turn Signal Lever

► Type A




- 1 Right turn signal
- 2 Left turn signal

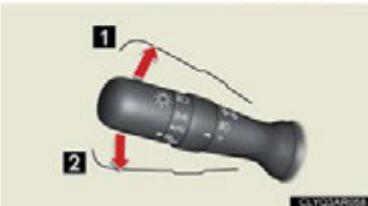

► Type B



- 1 Right turn signal
- 2 Left turn signal

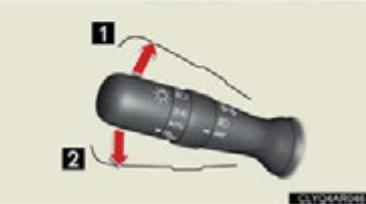

To signal a lane change, move the lever partway and hold.

Head-up Display (If Equipped)


The head-up display can be used to project vehicle speed and other information onto the windshield.

Head-up display switches



- 1 Pressing the switch turns the head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

Head-up display contents

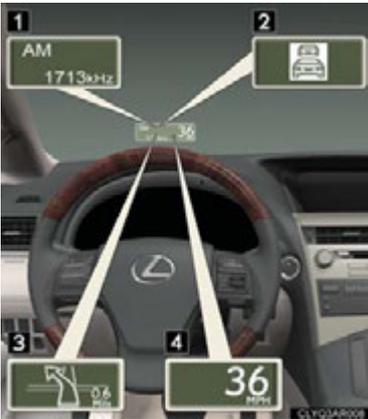

- 1 Audio display
- 2 Dynamic radar cruise control (if equipped)
- 3 Turn-by-turn navigation*
- 4 Vehicle speed display

- When using audio system or navigation system the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the head-up display.
- Pressing and holding the head-up display main switch for more than 2 seconds changes the display to audio display on/off mode. Press the head-up display main switch to turn the audio display on/off.
- The head-up display may seem dark and hard to see when head viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".

Headlights

► Type A




- 1 AUTO** The headlights, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically in accordance with ambient light levels.
- 2** The instrument panel, side marker, parking, tail, license plate and daytime running lights turn on.
- 3** The headlights and all lights listed above turn on.
- 4 DRL OFF** The daytime running light turn off.

► Type B



- 1 AUTO** The headlights, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically in accordance with ambient light levels.
- 2** The instrument panel, side marker, parking, tail, license plate and daytime running lights turn on.
- 3** The headlights and all lights listed above turn on.
- 4 DRL OFF** The daytime running light turn off.

► Type C

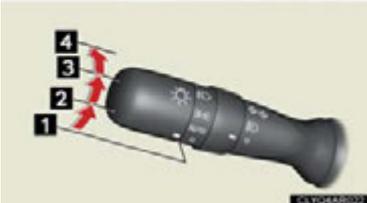

- 1  The daytime running lights turn on.
- 2  The headlights, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically in accordance with ambient light levels.
- 3  The instrument panel, side marker, parking, tail, license plate and daytime running lights turn on.
- 4  The headlights and all lights listed above turn on.

To engage the high beams, push the lever forward.
To flash the high beams temporarily, pull the lever toward you.


Automatic High Beam (If Equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

► Type A




1 Headlight switch in "AUTO" position.

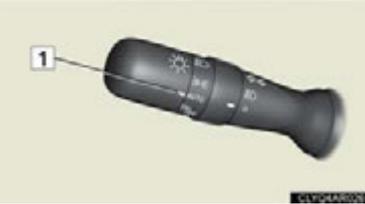

► Type B



1 Headlight switch in "AUTO" position.

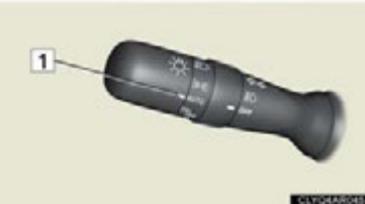



2 Push the lever away from you.

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 20 mph (32 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

Windshield Wipers and Washer

■ Intermittent wiper with interval adjuster (if equipped)

▶ Type A




- 1  Off
- 2  Intermittent operation
- 3  Low speed
- 4  High speed
- 5  Temporary operation




▶ Type B



- 1 **OFF** Off
- 2 **INT** Intermittent operation
- 3 **LO** Low speed
- 4 **HI** High speed
- 5 **MIST** Temporary operation

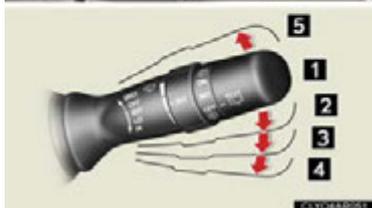

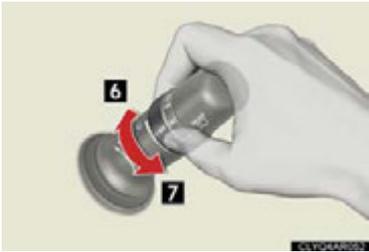

Intermittent operation: Wiper interval can be adjusted by turning the band.

6 Increases the intermittent windshield wiper frequency

7 Decreases the intermittent windshield wiper frequency




To spray washer fluid, pull the lever. The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)

► Type A




- 1** ○ Off
- 2** AUTO Automatic operation
- 3** ▼ Low speed
- 4** ▾ High speed
- 5** ▲ Temporary operation

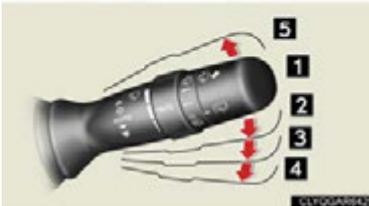

► Type B



- 1 **OFF** Off
- 2 **AUTO** Automatic operation
- 3 **LO** Low speed
- 4 **HI** High speed
- 5 **MIST** Temporary operation

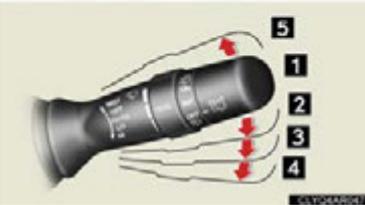

Automatic operation: sensitivity can be adjusted by turning the band.



- 6 Sensor sensitivity (high)
- 7 Sensor sensitivity (low)



To spray washer fluid, pull the lever. The wipers will operate automatically.

Rear Window Wiper and Washer

► Type A



- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

► Type B



- 1 **OFF** Off
- 2 **INT** Intermittent window wiper operation
- 3 **ON** Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Remote Touch (If Equipped)

The Remote Touch can be used to operate the navigation screens and configure settings.

Basic operation



- 1 Remote Touch knob**
Use this knob to move the cursor and select items on the screen.
Feedback force, selection sounds and pointer shape can be changed. Refer to the "Navigation System Owner's Manual".
- 2 "ENTER" button**
Press this button to confirm a selection.
- 3 "MAP/VOICE" button**
Press this button to display the vehicle's current position.
- 4 "^v" button**
Press these buttons to change map scale and scroll through lists.
- 5 "MENU" button**
Press this button to display the "Start" (menu) screen.
- 6 "DISP" button**
Press this button to adjust picture quality.

Start



Press the "MENU" button on the Remote Touch to display the "Start" screen.


- 1 Destination (→P.30)
- 2 Info.Phone
- 3 Setup (→P.30, 35)
- 4 Climate (→P.44)
- 5 Audio (→P.40)

Display



Press the "DISP" button on the Remote Touch to show the "Display" screen.

- 1 Turns the rear seat entertainment system on and off
- 2 Displays the screen in "Day Mode" with the headlight switch on
- 3 Turns the screen off
- 4 Adjust contrast
- 5 Adjust brightness
- 6 Adjust color tone
- 7 Adjust color

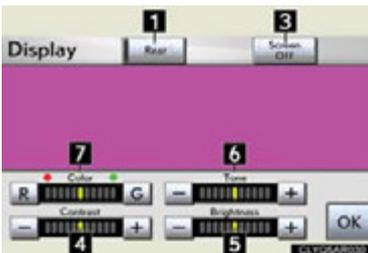


Navigation System (If Equipped)

Register home




- 1 Press the "MENU" button on the Remote Touch.
The "Start" screen will be displayed.

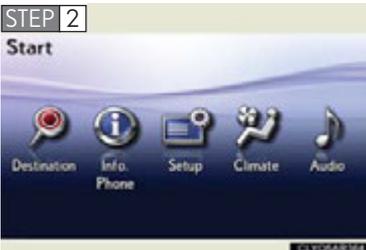


- 2 Select  .
- 3 Select  .



 - 4 Select  .
- 5 Select  .
- 6 Select  .

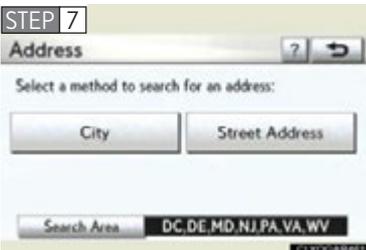

- 7 Select  .
- 8 Input a city name and select  .
- 9 Select the button of the desired city name from the displayed list.
- 10 Input the street name and select  .
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select  .
- 13 Select  .
- 14 Select  .


Destination input — Search by address




- 1 Press the “MENU” button on the Remote Touch.
The “Start” screen will be displayed.



- 2 Select  .
Destination

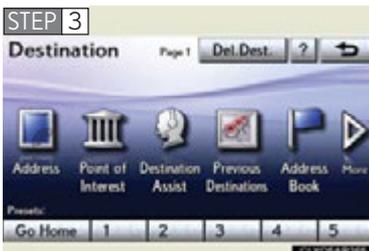

- 3 Select  .
Address

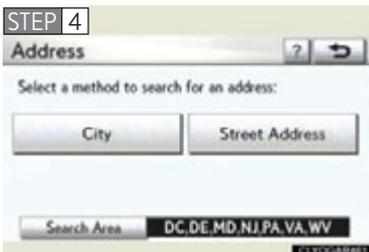

- 4 Select .
- 5 Input a city name and select .
- 6 Select the button of the desired city name from the displayed list.
- 7 Input the street name and select .
- 8 When the desired street name is found, select the corresponding button.
- 9 Input a house number and select .
- 10 Select .
- 11 Select .


Destination input — Search points of interest by name




- 1 Press the “MENU” button on the Remote Touch.
The “Start” screen will be displayed.



- 2 Select  .
Destination

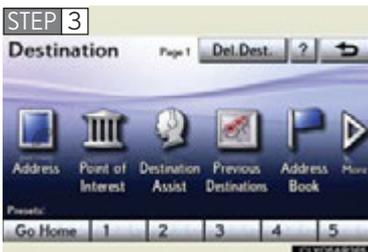

- 3 Select  .
Point of Interest

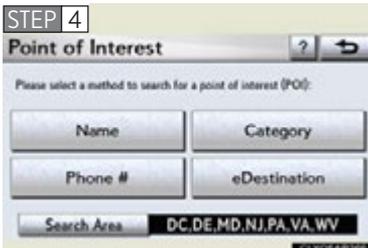

- 4 Select .
- 5 Input the name of the point of interest and select .
- 6 Select the button of the desired destination.
- 7 Select .
- 8 Select .


Destination input — Search points of interest by category




- 1 Press the “MENU” button on the Remote Touch.
The “Start” screen will be displayed.



- 2 Select  .
Destination

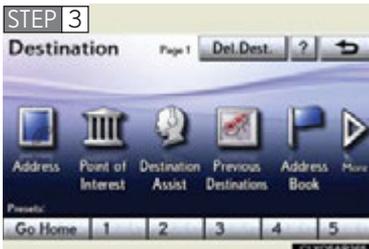

- 3 Select  .
Point of Interest

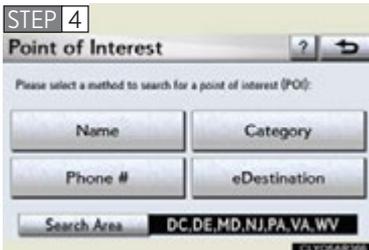

- 4 Select  .
- 5 Select  .
- 6 Select the button of the desired destination and set the search point.
- 7 Select the desired point of interest category.
- 8 Select the button of the desired item.
- 9 Select  .
- 10 Select  .


Destination input — Search points of interest by telephone number




- 1 Press the “MENU” button on the Remote Touch.
The “Start” screen will be displayed.



- 2 Select  .
Destination

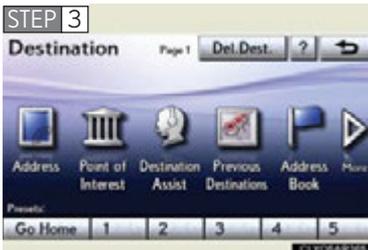

- 3 Select  .
Point of Interest

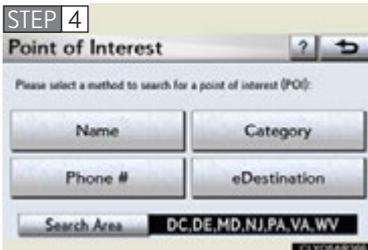

- 4 Select  .
- 5 Input a telephone number and select  .
- 6 Select  .
- 7 Select  .

Hands-free System For Cellular Phone (with navigation system)


Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to www.lexus.com/bluetooth for more phone information.




To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press the "MENU" button on the Remote Touch.
The "Start" screen will be displayed.

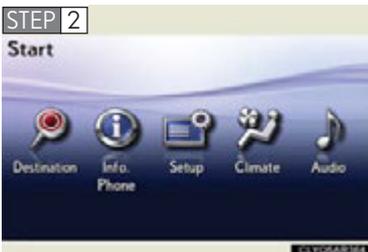

- 2 Select .

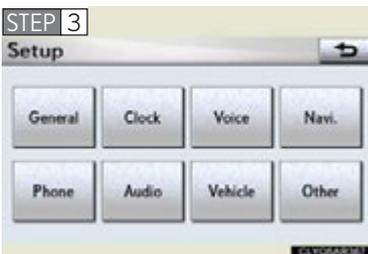

- 3 Select .

- 4 Select .

- 5 Select  to display the screen for connecting Bluetooth.




- 6 Enter the passcode displayed on the screen into the phone.

Refer to the cellular phone user's manual for cellular phone operation.

- 7 When the connection is completed, a message will appear indicating that the phone has been connected successfully.


Phonebook transfer

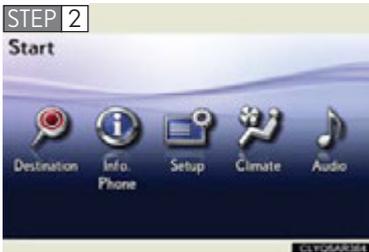

- 1 Press the "MENU" button on the Remote Touch.
The "Start" screen will be displayed.

- 2 Select  .

 - 3 Select  .

- 4 Select  .




- 5 Select  .

- 6 Select  .

- 7 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

■ Registering a speed dial

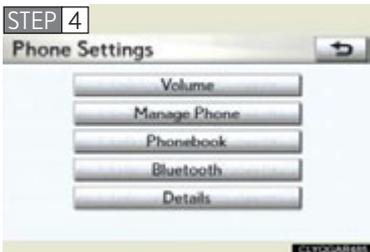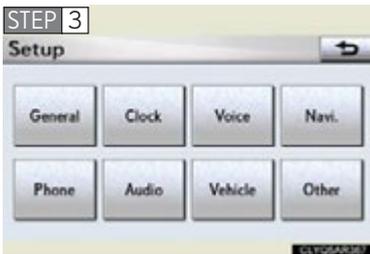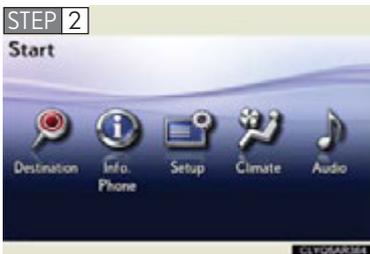


- 1 Press the "MENU" button on the Remote Touch.
The "Start" screen will be displayed.

- 2 Select  .

- 3 Select  .

- 4 Select  .

 - 5 Select  .

- 6 Select  .

- 7 Select the data you want to register.

- 8 Select the desired phone number.

- 9 Select the button you want to register in.

- 10 The registration completion message is displayed on the screen.

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)

STEP 1



1 Press .

STEP 2



2 Follow the voice guidance and say "Phone".

3 Follow the voice guidance and say "Dial by name".

 
STEP 4



4 Follow the voice guidance and say a contact name.


5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).

6 Follow the voice guidance and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Receiving a call

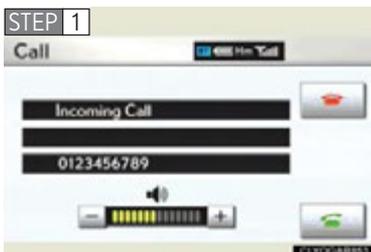

1 When a call is received, this screen is displayed with a sound.

2 Press  on the steering wheel to talk on the phone.

To ignore the call, press  on the steering wheel.

Audio System (with navigation system)

Audio control screen

Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.

Please refer to P.28 for the Remote Touch operation.

The "Start" screen will be displayed.

- 2 Using the Remote Touch, select "Audio" and press the "ENTER" button.

Basic operation



- 1 Sound quality modes

- 2 Audio sources

AM•FM: AM radio/FM radio

AM: AM radio

SAT: Satellite radio

FM: FM radio

DISC (if equipped): DVD player

CD (if equipped): CD player

AUX•USB (if equipped): Auxiliary audio device/USB memory/iPod/Bluetooth® audio

AUX (if equipped): Auxiliary audio device/USB memory/iPod/Bluetooth® audio

- 3 Power/Volume

Radio




- 1 Station presets
- 2 Scanning radio stations
- 3 Radio tuner
- 4 Station select
- 5 Seek

Entering station presets

- 1 Select the desired station by using the tune, seek or scan function.
- 2 Using the Remote Touch, select one of the preset switches (1-6), then press the “ENTER” button until a beep is heard, indicating that the station has been set.


DVD player/CD player

Playing an audio CD

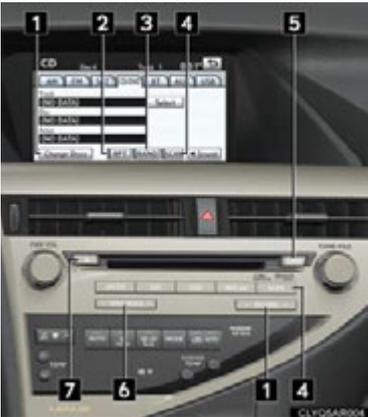


- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Disc load
- 6 Track select/rewind/fast-forward
- 7 Eject

Playing a CD with MP3/WMA files

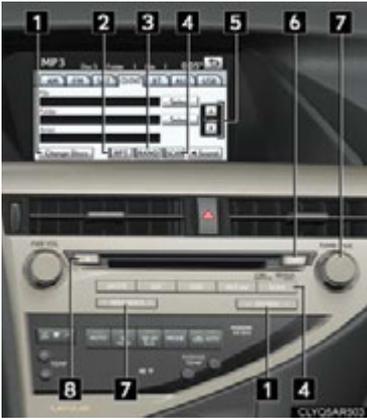

- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Eject

Playing a DVD (DVD player only)

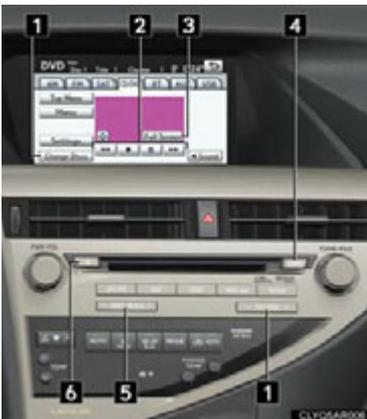

- 1 Disc select
- 2 DVD operation
- 3 Image display (full screen)
- 4 Disc load
- 5 Chapter select
- 6 Eject

■ Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.


■ Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat **2** and **3** until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ Operating an iPod

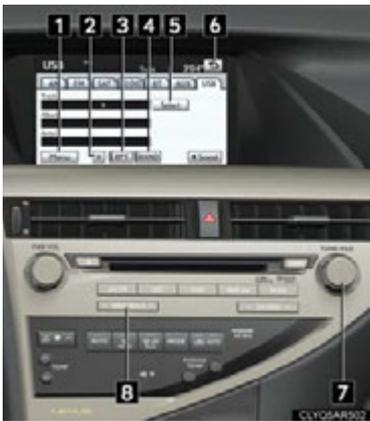

- 1 Menu
- 2 Pause/Playback
- 3 Repeat play
- 4 Random playback
- 5 Song list
- 6 Go back
- 7 Song select
- 8 Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Power on/change mode: press
Power off: press and hold
- 3 Radio mode: radio tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod mode: song select

Air Conditioning System (with navigation system)



- | | |
|---|---|
| 1 Dual mode button | 8 Automatic mode button |
| 2 Passenger side temperature display | 9 Driver side temperature control |
| 3 Fan speed display | 10 Fan speed control button/"OFF" button |
| 4 Outside air/recirculated air mode button | 11 Cooling and dehumidification function on/off button |
| 5 Passenger side temperature control | 12 Driver side temperature display |
| 6 Air outlet selector button | 13 Air outlet display |
| 7 Windshield defogger | |

■ Using the automatic mode

Press **8** to turn on the airflow and **9** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings

Select **1** to turn the "DUAL" indicator off (**DUAL**) and then press **9**.

■ To individually adjust the driver's side and passenger's side temperature settings

Select **1** or press **5** to turn the "DUAL" indicator on (**DUAL**) and then press **9** or **5**.

■ To turn off the airflow

Press and hold "V" on **10** until the airflow turns off.

Hands-free System For Cellular Phone (without navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name*.
*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by number

STEP 1



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

 
■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

STEP 1



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".




: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

 Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the speech command system on. Say a command after the beep.

 
■ Registering a speed dial

STEP 1



- 1 Press  .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".

STEP 7



: Pressing this switch turns the speech command system on. Say a command after the beep.

Audio System (without navigation system)

Basic operation

► Type A



1 Power/Volume

2 Audio sources

AM·FM: AM radio/FM radio

SAT: Satellite radio

CD: CD player

AUX·USB (if equipped): Auxiliary audio device/USB memory/iPod/Bluetooth® audio

AUX (if equipped): Auxiliary audio device/Bluetooth® audio

3 Sound quality modes

► Type B



1 Power/Volume

2 Audio sources

AM: AM radio

FM: FM radio

CD: CD player

AUX: Auxiliary audio device/USB memory/iPod

3 Mute

4 Sound quality modes

Radio

► Type A



- 1 RDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek

► Type B



- 1 Station select
- 2 Station presets
- 3 Radio tuner
- 4 Scanning radio stations
- 5 Seek


■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ CD player


■ Playing an audio CD

▶ Type A

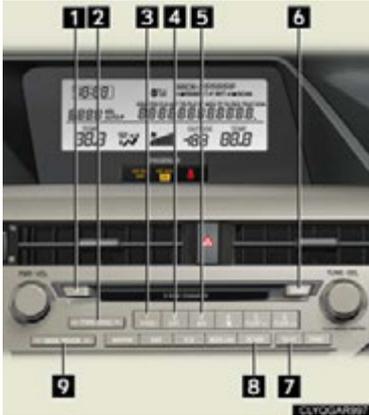

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Disc load
- 7 Text information
- 8 Search playback
- 9 Track select/rewind/fast-forward


▶ Type B

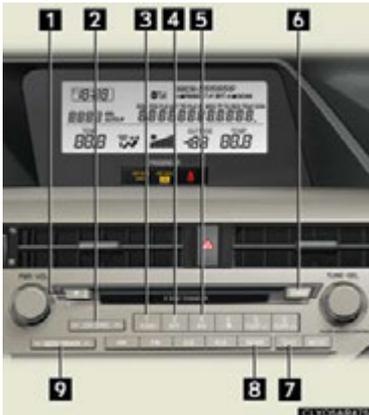

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Disc load
- 7 Text information
- 8 Search playback
- 9 Track select/rewind/fast-forward


■ Playing a CD with MP3/WMA files

▶ Type A

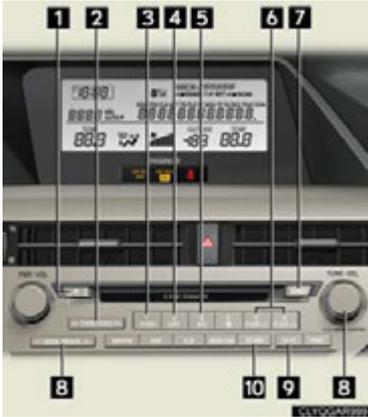

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Folder select
- 7 Disc load
- 8 File select
- 9 Text information
- 10 Search playback

▶ Type B

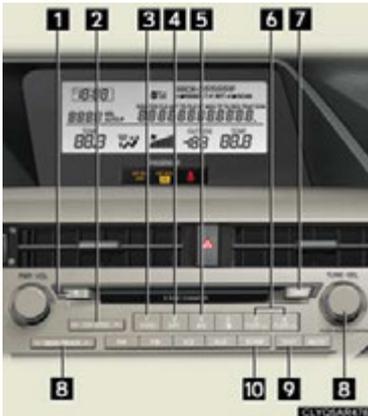

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Folder select
- 7 Disc load
- 8 File select
- 9 Text information
- 10 Search playback

■ Loading a CD


- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.

■ Operating an iPod (if equipped)

▶ Type A

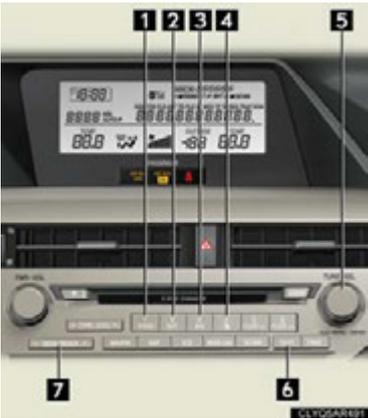

- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select/rewind/fast-forward

► Type B



- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Power on/change mode: press
Power off: press and hold
- 3 Radio mode: radio tuner
CD mode: disc/track/file (MP3/WMA) select
iPod mode (if equipped): song select

Air Conditioning System (without navigation system)



- | | |
|--|--|
| 1 Passenger side temperature display | 6 Air outlet selector button |
| 2 Passenger side temperature control | 7 Driver side temperature control |
| 3 Cooling and dehumidification function on/off button | 8 Fan speed control button/"OFF" button |
| 4 Outside air/recirculated air mode button | 9 Automatic mode button |
| 5 Windshield defogger | 10 Dual mode button |
| | 11 Driver side temperature display |

Using the automatic mode

Press **9** to turn on the airflow and **7** to adjust the temperature.

Adjusting the temperature

To simultaneously adjust the driver's side and passenger's side temperature settings

Press **10** to turn the "DUAL" indicator off () and then press **7**.

To individually adjust the driver's side and passenger's side temperature settings

Press **10** or **2** to turn the "DUAL" indicator on () and then press **7** or **2**.

To turn off the airflow

Press and hold "v" on **8** until the airflow turns off.

Voice Command System

Basic operation



- 1 Press .
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

■ Command list

► All vehicles

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

► With navigation system

Destinations				
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:		"Address" and then follow the prompts to enter city, state, street and house number	
To Enter a Point of Interest, SAY	A Point of Interest Category, Such As: "Dining," "Shopping Malls," "Police," "Gas," ETC.			
	"Destination" and then SAY:	"Point of Interest" and then SAY:	"Near Here"	And then follow the prompts
			"Along Route"	
"Emergency"				
"Phone Number"				
To Enter a Previous Destination, SAY:	"Destination" and then SAY:		"Previous Destinations"	
To Enter/Go to Preset Destinations, SAY:	"Destination" and then SAY:	"Presets" and then SAY:	"Home" (HOME must already be set using manual controls)	
			"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)	

General Navigation Commands

To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
	"North Up"
	"Heading Up"
	"Map Direction"
To Change the Map Orientation, SAY:	"Right Map North Up"
	"Right Map Heading Up"
	"Right Map Direction"
To Change the Guidance Mode, SAY:	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
	"Freeway Mode"
To Save a Point on the Map, SAY:	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

General Navigation Commands

To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Final Destination Map"
	"Delete Next Destination"
	"Delete Final Destination"
To Operate Guidance Options, SAY:	"Delete All Destinations"
	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
To Operate the Traffic Information, SAY:	"Louder"
	"Softer"
To Operate the Traffic Information, SAY:	"Traffic Information"
To Show the Icon, SAY:	"Show GAS", "Show PARKING" ETC.

PHONE

To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Send Tones"		NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Connect Phone" and then SAY:	"Send Phone"	
			"Add New Phone"	
			"Hands Free Power ON"	
			"Hands Free Power OFF"	

AUDIO


To Turn Audio On or Off, SAY:	"Audio ON"		
	"Audio OFF"		
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD*, CD Changer*, DVD**, DVD Changer**, Bluetooth® Audio, iPod, USB Audio *For systems w/o NAV **For systems w/NAV		
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"		
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"		
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"		
	"Type Up" or "Type Down"		
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:	"Select Channel Number"	
		"Select Channel Name" (English only)	
		"Select Channel Type" (English only)	
		"Command List" and then SAY:	"Seek Up" or "Seek Down" "Type Up" or "Type Down"

XM Information		
To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts
To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts


CLIMATE CONTROL/AIR CONDITIONING	
To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

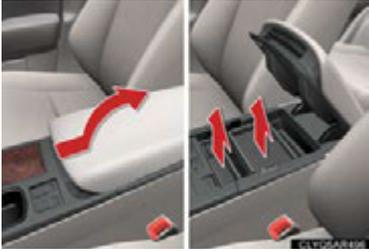

- 1 Slide the armrest while pulling up the lever, and lift the armrest.
Remove the upper trays. (if equipped)

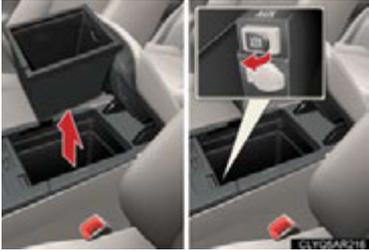

- 2 Remove the lower tray and open the cover.




- 1 USB port (if equipped)
- 2 AUX port

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

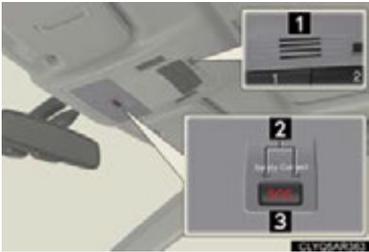

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally push the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can push the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

► **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.63)**

- Automatic collision notification^{*1}
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM[®] Sports and Stocks^{*2}**

XM[®] Sports and Stocks is a service included with XM[®] satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeather™*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

- **XM® NavTraffic*3**

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

Door Locks

Locking the vehicle from inside



▶ Inside lock button

- 1 Locks
- 2 Unlocks



▶ Door lock switches

Operates all door locks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Using the entry function or wireless remote control (→P.7, 8)

Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger window switches.

Moon Roof (If Equipped)

Opening and closing

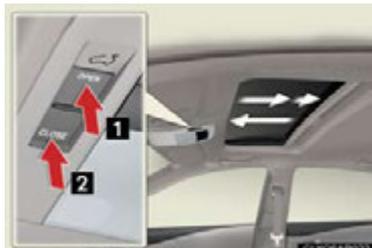

1 Opens


The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

To stop partway, press the switch lightly.

Tilt up and down

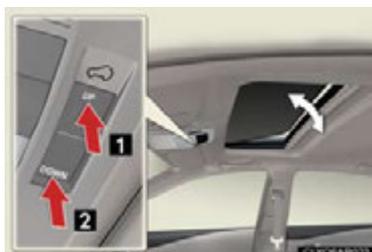

1 Tilts up

2 Tilts down

To stop partway, press the switch lightly.

Back Door

■ Back door opener button



To open the back door, push up the opener button and raise the door.

■ Power back door switches (with power back door)



▶ Instrument panel

To open or close the back door, press the switch.



▶ Back door

To close the back door, press the switch.

▶ Wireless remote control (→P.7)

■ Back door closer (with power back door)

If the back door is left slightly open, it will close automatically.

■ Turning the power back door system on and off (with power back door)



To disable the system, turn off the main switch in the glove box.

- 1 On
- 2 Off

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

Fuel Tank Cap



- 1 Press the fuel filler door opener.



- 2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



(Flashes)

Automatic high beam indicator^{*1}



Electric power steering system warning light



Pre-collision system warning light^{*1}



(Blinking and then continuously on)

Tire pressure warning light



(Comes on)

Slip indicator



(Flashes)

"AFS OFF" indicator^{*1}

Follow the correction procedures.



Open door warning light



Low fuel level warning light



(On the instrument panel)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Automatic high beam indicator^{*1}



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"ECT SNOW" indicator



All-wheel drive lock indicator^{*1}



Cruise control indicator



Radar cruise control indicator^{*1}



Intuitive parking assist-sensor indicator^{*1}



"AFS OFF" indicator^{*1}



(Flashes)

Slip indicator



VSC off indicator



Eco Driving Indicator Light



SRS airbag on-off indicator^{*1}



SRS airbag on-off indicator^{*1}

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: It also turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if ...

If the electronic key does not operate properly

Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key. (driver's door only) The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

What to do if ...

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings continuously.	The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "ENGINE START STOP" switch was in ACCESSORY mode).	Close the driver's door.
	The "ENGINE START STOP" switch was turned off while the driver's door was open.	Close the driver's door.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.