

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System (with navigation system)*	
Using the automatic mode	54
Adjusting the temperature	54
To turn off the airflow	54
Air Conditioning System (without navigation system)	
Using the automatic mode	67
Adjusting the temperature	67
To turn off the airflow	67
Audio System (with navigation system)*	
Audio control screen	50
Basic operation	50
Radio	51
DVD player/CD player	51
Operating an iPod	53
Remote control (steering wheel switches)	53
Audio System (without navigation system)	
Basic operation	61
Radio	62
CD player	63
Operating an iPod	66
Remote control (steering wheel switches)	66
Automatic High Beam	26
Back Door	82
Cruise Control	20
Door Locks	79
Dynamic Radar Cruise Control	21
Energy Monitor / Consumption Screens	9
Fuel Tank Cap	81
Hands-free System For Cellular Phone (with navigation system)*	
Bluetooth® phone pairing	42
Phonebook transfer	43
Registering a voice tag	44
Registering a speed dial	45
Calling by name	47
Calling by speed dial	48
Receiving a call	49
Hands-free System For Cellular Phone (without navigation system)*	
Bluetooth® phone pairing	55
Calling by number	56
Calling by name	56

*. This feature may be operated by Voice command (See P.68)

Calling by speed dial.....	57
Phonebook transfer.....	58
Changing the registered name.....	59
Registering a speed dial.....	60
Headlights	24
Head-up Display	23
Hybrid System	7
Intuitive Parking Assist	16
Keys	12
Lexus Enform with Safety Connect	77
Moon Roof	80
Multi-information Display and Switch	17
Navigation System*	
Register home.....	35
Destination input — Search by address.....	36
Destination input — Search points of interest by name.....	39
Destination input — Search points of interest by category.....	40
Destination input — Search points of interest by telephone number.....	41
Voice Command System.....	68
Portable Audio Device Ports	74
Power (Ignition) Switch	15
Power Windows	80
Rear Window Wiper and Washer	31
Remote Touch	
Basic operation.....	32
Start.....	33
Display.....	33
Screen scroll operation.....	34
Setting a route.....	34
Safety Connect	75
Smart Access System with Push-button Start	13
Theft Deterrent System	14
Turn Signal Lever	19
Voice Command System	
Basic operation.....	68
Command list.....	69
Windshield Wipers and Washer	27

*: This feature may be operated by Voice command (See P.68)

Overview

Instrument Panel

- Headlight switch P.24
- Automatic high beam * P.26
- Turn signal lever P.19

Fuel filler door opener P.81

Power back door switch * P.82


Multi-information display P.17

Inside lock buttons P.79

Window lock switch P.80

Power window switches P.80

Door lock switches P.79

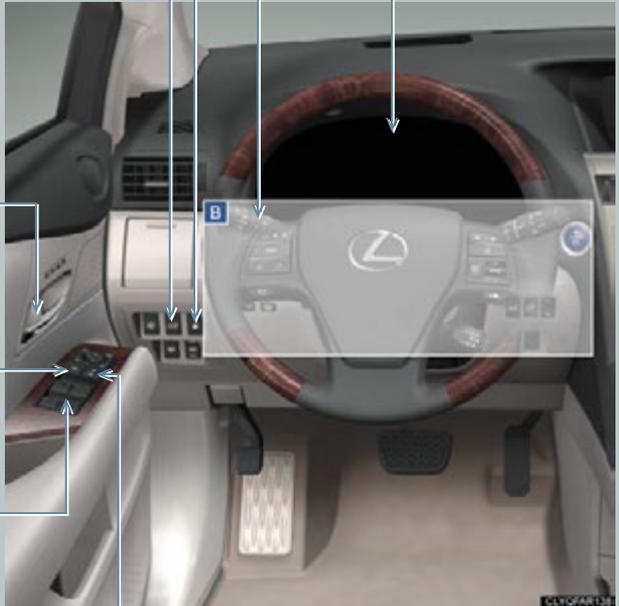

Windshield wiper and washer switch P.27

Rear window wiper and washer switch P.31

Power (ignition) switch P.15



Power back door main switch * P.83

Remote Touch * P.32

Head-up display main switch * P.23

* : If equipped

A

► With navigation system



► Without navigation system



B

Multi-information switches P.17

Telephone switches * P.42, 55

Talk switch * P.42, 55, 68

Audio remote control switches P.53, 66



Cruise control switch P.20, 21


Distance switch * P.21

* : If equipped

Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicles, and operate with care. The hybrid system combines a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions. For details, refer to the "Owner's Manual".

Hybrid System Indicator

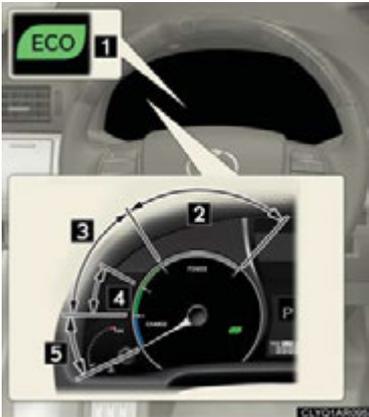

- 1 Eco Driving Indicator Light**
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on. Eco Driving Indicator Light will not operate in the following conditions:
 - The shift lever is in anything other than D.
 - The driving mode is set to snow mode or EV drive mode.
 - The vehicle speed is approximately 80 mph (130 km/h) or higher.
- 2 Power area**
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- 3 Eco area**
Shows that the vehicle is being driven in an Eco-friendly manner.
- 4 Hybrid Eco area**
Shows that gasoline engine power is not being used very often.

The gasoline engine will automatically stop and restart under various conditions.

- 5 Charge area**
Shows that energy is being recovered via regenerative braking.

■ Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released.
- The brake pedal is depressed with the shift lever in D or S.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibrations even though the vehicle is able to move. Always put the shift lever in P when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) under the rear seat when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the hybrid transmission when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Vibrations may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seat.

Energy Monitor / Consumption Screens

You can view the status of your hybrid system on the multi-information display and the Navigation system screen.

Energy monitor

The energy monitor can be displayed on both the Navigation system screen and the multi-information display.

- How to display on the Navigation system screen (→P.32):

Press the "MENU" button on the Remote Touch, and select




after that select



If the **Consumption** or **Past Record** screen is displayed, select the **Energy** and push the "ENTER" button.

- How to display on the multi-information display:

Toggle the "ENTER" switch on the steering wheel upward or downward through several items to select the energy monitor display.

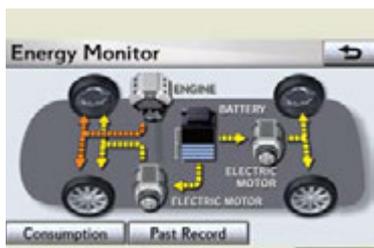

- The flow of energy is displayed on the Navigation system screen. (The rear electric motor is equipped AWD models only.)

Amber: gasoline energy

Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.


- The flow of energy is indicated by the movement of the arrows on the multi-information display.
- The battery display acts as a 9-step indicator of the hybrid battery level.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

■ Consumption (with navigation system)

Press the “MENU” button on the Remote Touch and select  , after that select  and push the “ENTER” button.

If the **Consumption** screen does not appear, select the **Consumption** and push the “ENTER” button.

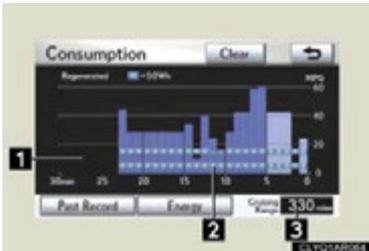


- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3 Cruising range

■ Past record (with navigation system)

Press the “MENU” button on the Remote Touch and select  , after that select  and push the “ENTER” button.

If the **Past Record** screen does not appear, select the **Past Record** and push the “ENTER” button.

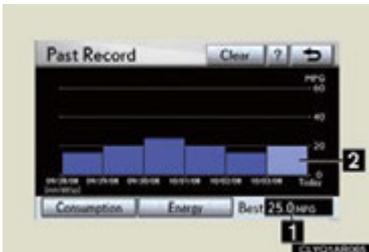

- 1 Best past fuel consumption
- 2 Average fuel consumption

■ Hybrid warning message

A message is automatically shown when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

Keys

Electronic key



Smart access system with push-button start
(→P.13, 15)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
- 3 Press and hold:** opens and closes the back door*
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

*: If equipped

Smart Access System with Push-button Start


The smart access system with push-button start allows you to enter and exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag. For details on starting the hybrid system, see page 15.

■ Entering the vehicle



To unlock the vehicle, simply grasp either of the front door handles.

■ Exiting the vehicle

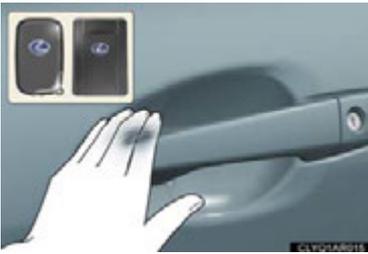

To lock the vehicle, touch the lock sensor on either of the front door handles.

■ Locking and unlocking the back door



- 1 Locks
- 2 Unlocks

For details on what to do when the electronic key does not operate properly, see page 87.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

■ Immobilizer system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

■ Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: start the hybrid system, or unlock the doors.

■ Steering lock



The steering wheel locks when the “POWER” switch is turned off and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “POWER” switch will flash and a message will be shown on the multi-information display. To release it, press the “POWER” switch while gently turning the steering wheel left or right.

Power (Ignition) Switch

With the electronic key on your person, the hybrid system can be started by simply pressing the “POWER” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the hybrid system.)

Starting the hybrid system



Make sure the parking brake is set and the shift lever is in P.

- 1 Depress the brake pedal.
The “POWER” switch indicator light turns green.
- 2 Press the “POWER” switch.
When the “READY” indicator changes from flashing to on, the hybrid system is properly started.


Stopping the hybrid system

- 1 Set the parking brake and shift the shift lever to P.
- 2 Press the “POWER” switch.

If the shift lever is in a position other than P when turning off the hybrid system, the “POWER” switch will be turned to ACCESSORY mode, not to off. To avoid unexpected 12-volt battery discharge, make sure the lever is in the P position when stopping the hybrid system.

Changing “POWER” switch mode

To change the “POWER” switch mode without turning on the hybrid system, press the “POWER” switch without depressing the brake pedal. The mode can be changed in the following order:

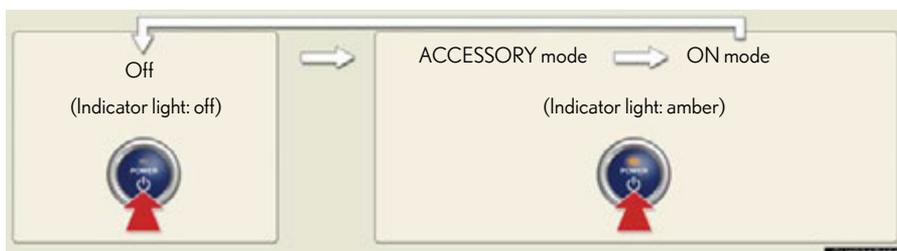

Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

Turning the system on and off




- 1 Press the menu switch
- 2 Press the “ENTER” switch upwards or downwards until the Intuitive parking assist mark appears in the multi-information display.



- 3 Press the “ENTER” switch to select on/off.

Press the menu switch to change to the normal display.

Screen display

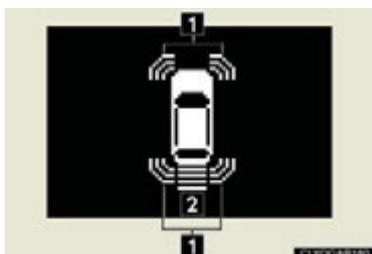

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors

Multi-information Display and Switch

The multi-information display shows information about your vehicle, including the items shown below.

Multi-information switches



- 1** Menu switch
Changes modes to electronic features control mode, customization mode or back to normal display mode.
- 2** "ENTER" switch
Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

Display contents



Trip information contents	Switching display items
1 Energy monitor	Press the "ENTER" switch upwards or downwards.
2 Current fuel consumption	
3 Average fuel consumption after refueling	
4 Average fuel consumption	
5 Average vehicle speed	
6 Cruising range	
7 Tire inflation pressure	
8 - (off)	



Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P. 16
2 Eco drive mode	For details, see the Owner's Manual.
3 Snow mode	For details, see the Owner's Manual.
4 AFS*	For details, see the Owner's Manual.
5 EV drive mode	For details, see the Owner's Manual.

Display order may vary depending on vehicle condition.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Customization	
Dynamic radar cruise control settings*	
Warning message	

*: If equipped

- When using intuitive parking assist or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


Turn Signal Lever

► Type A



1 Right turn signal

2 Left turn signal

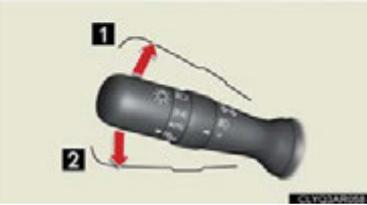


► Type B



1 Right turn signal

2 Left turn signal

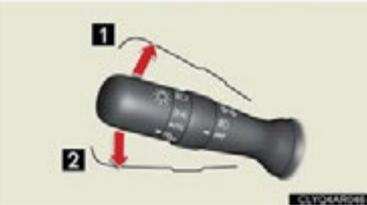

To signal a lane change, move the lever partway and hold.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant vehicle speed control mode)
- 3 Display
- 4 Distance switch
- 5 Cruise control switch

Cruise control display



Cruise control settings are shown on the multi-information display.


- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

Constant speed control mode

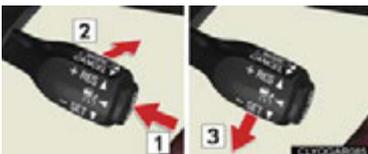

- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

■ Canceling



- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the speed setting



To **increase speed**: push the lever up.

To **decrease speed**: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

Head-up Display (If Equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.

Head-up display switches



- 1 Pressing the switch turns the head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

Head-up display contents



- 1 Audio display
- 2 Turn-by-turn navigation*
- 3 Vehicle speed display
- 4 Dynamic radar cruise control (if equipped)

- When using audio system or navigation system the appropriate display is shown on the screen.
- Warning messages will be displayed when necessary.
- Pressing and holding the head-up display main switch for more than 2 seconds changes the display to audio display on/off mode. Press the head-up display main switch to turn the audio display on/off.
- The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".

Headlights

► Type A




- 1 AUTO** The headlights, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically in accordance with ambient light levels.
- 2** The instrument panel, side marker, parking, tail, license plate and daytime running lights turn on.
- 3** The headlights and all lights listed above turn on.
- 4 DRL OFF** The daytime running light turn off.

► Type B



- 1 AUTO** The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically in accordance with ambient light levels.
- 2** The instrument panel, side marker, parking, tail, license plate and daytime running lights turn on.
- 3** The headlights and all lights listed above turn on.
- 4 DRL OFF** The daytime running light turn off.

► Type C

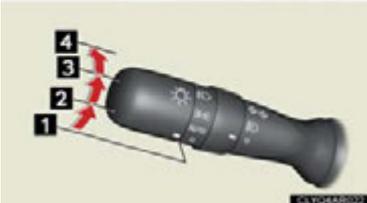

- 1  The daytime running lights turn on.
- 2  The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically in accordance with ambient light levels.
- 3  The instrument panel, side marker, parking, tail, license plate and daytime running lights turn on.
- 4  The headlights and all lights listed above turn on.

To engage the high beams, push the lever forward.
To flash the high beams temporarily, pull the lever toward you.


Automatic High Beam (If Equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

► Type A




1 Headlight switch in "AUTO" position.

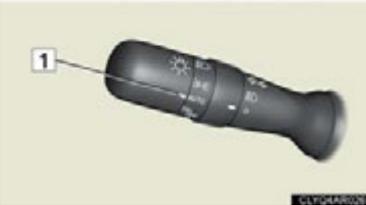

► Type B



1 Headlight switch in "AUTO" position.

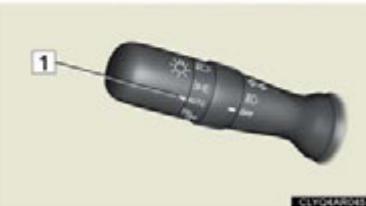

2 Push the lever away from you.



When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 20 mph (32 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

Windshield Wipers and Washer

Intermittent wiper with interval adjuster (if equipped)

► Type A



- | | | |
|---|--|------------------------|
| 1 | | Off |
| 2 | | Intermittent operation |
| 3 | | Low speed |
| 4 | | High speed |
| 5 | | Temporary operation |




► Type B



- | | | |
|---|-------------|------------------------|
| 1 | OFF | Off |
| 2 | INT | Intermittent operation |
| 3 | LO | Low speed |
| 4 | HI | High speed |
| 5 | MIST | Temporary operation |



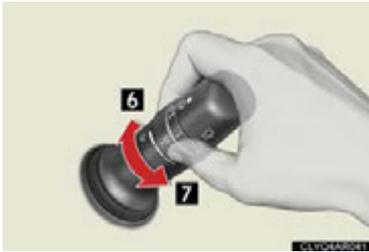

Intermittent operation: Wiper interval can be adjusted by turning the band.

6 Increases the intermittent windshield wiper frequency

7 Decreases the intermittent windshield wiper frequency




To spray washer fluid, pull the lever. The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)

▶ Type A



- 1 **O** Off
- 2 **AUTO** Automatic operation
- 3 **▼** Low speed
- 4 **▼** High speed
- 5 **▲** Temporary operation

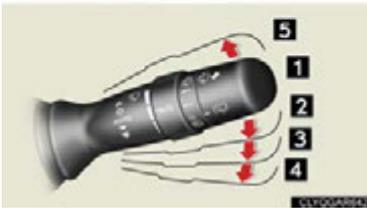


▶ Type B



- 1 **OFF** Off
- 2 **AUTO** Automatic operation
- 3 **LO** Low speed
- 4 **HI** High speed
- 5 **MIST** Temporary operation



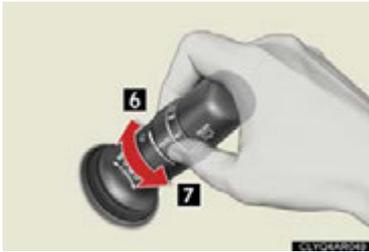

Automatic operation: sensitivity can be adjusted by turning the band.

6 Sensor sensitivity (high)

7 Sensor sensitivity (low)



To spray washer fluid, pull the lever. The wipers will operate automatically.

Rear Window Wiper and Washer

► Type A



- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

► Type B



- 1 **OFF** Off
- 2 **INT** Intermittent window wiper operation
- 3 **ON** Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Remote Touch (If Equipped)

The Remote Touch can be used to operate the navigation screens and configure settings.

Basic operation



- 1 Remote Touch knob**
Use this knob to move the cursor and select items on the screen.
Feedback force, pointer shape, and on or off of selection sounds can be changed. Refer to the "Navigation System Owner's Manual".
- 2 "ENTER" button**
Press this button to confirm a selection.
- 3 "MAP/VOICE" button**
Press this button to display the vehicle's current position.
- 4 "^v" button**
Press these buttons to change map scale and scroll through lists.
- 5 "MENU" button**
Press this button to display the "Start" (menu) screen.
- 6 "DISP" button**
Press this button to adjust picture quality.

Start



Press the "MENU" button on the Remote Touch to display the "Start" screen.


- 1 Destination (→P.35)
- 2 Info. Phone (→P.9)
- 3 Setup (→P.35, 42)
- 4 Climate (→P.54)
- 5 Audio (→P.50)

Display




Press the "DISP" button on the Remote Touch to show the "Display" screen.

- 1 Turns the rear seat entertainment system on and off
- 2 Displays the screen in "Day Mode" with the headlight switch on
- 3 Turns the screen off
- 4 Adjust contrast
- 5 Adjust brightness
- 6 Adjust color tone
- 7 Adjust color

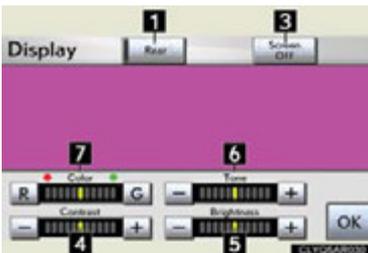

Screen scroll operation

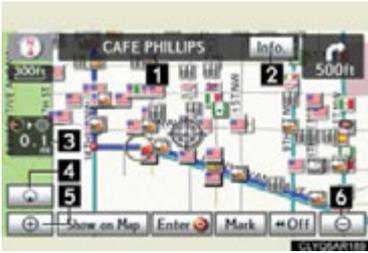

To scroll over the map, place the pointer in a position near the desired destination and then press and hold the “ENTER” button of the Remote Touch.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map


Setting a route

While route guidance is operating, you can change the route using the following method.



Select **Route**.

The following settings can be accessed

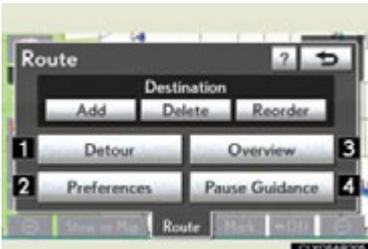

- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance


Some functions are unavailable while the vehicle is in motion. Refer to the “Navigation System Owner's Manual”.

Navigation System (If Equipped)


Register home




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The "Start" screen will be displayed.

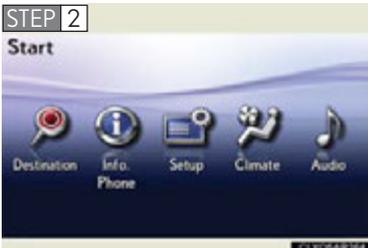


- 2 Select  .

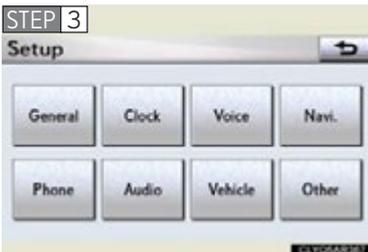

- 3 Select  .

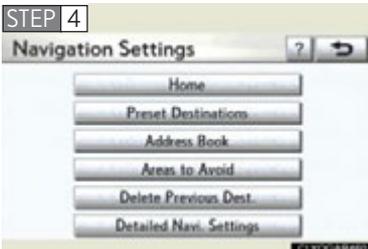

- 4 Select  .
- 5 Select  .
- 6 Select  .

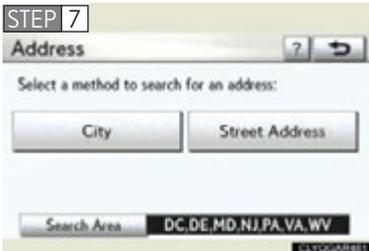


- 7 Select .
- 8 Input a city name and select .
- 9 Select the button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 10 Input the street name and select .
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select .
- 13 Select .
- 14 Select .

Destination input — Search by address


► Select by city name





- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The "Start" screen will be displayed.

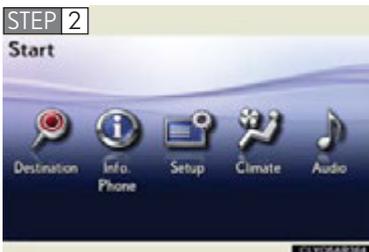

- 2 Select .

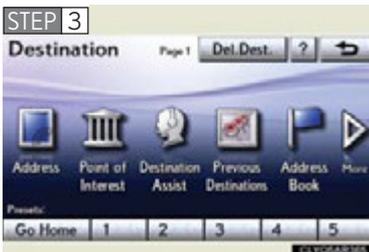

- 3 Select .

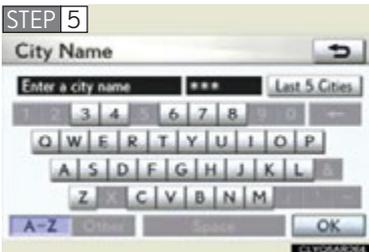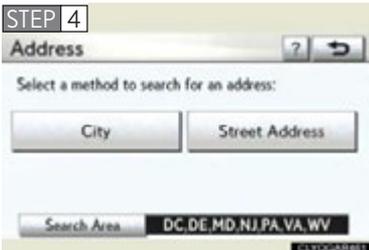

► **Select by street address**



 
4 Select  .

5 Input a city name and select  .

6 Select the button of the desired city name from the displayed list.

7 Input the street name and select  .

8 When the desired street name is found, select the corresponding button.

9 Input a house number and select  .

10 Select  .


11 Select  .

1 Press the "MENU" button on the Remote Touch.


Please refer to P.32 for the Remote Touch operation.


The "Start" screen will be displayed.


2 Select  .

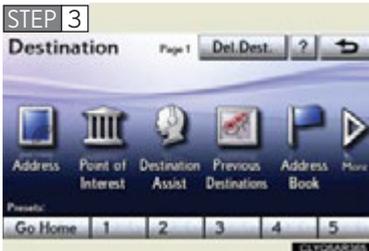

3 Select  .

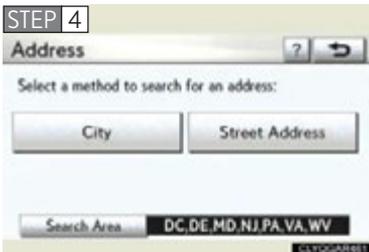

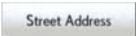4 Select  .

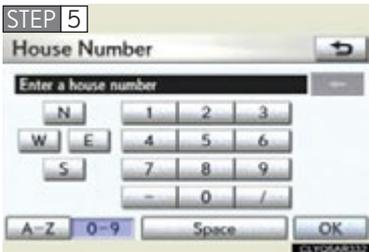

5 Input a house number and select  .

6 Input the street name and select  .

7 When the desired street name is found, select the corresponding button.

8 Input a city name and select  .

9 Select the button of the desired city name from the displayed list.


10 Select  .

11 Select  .


Destination input — Search points of interest by name




- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The “Start” screen will be displayed.

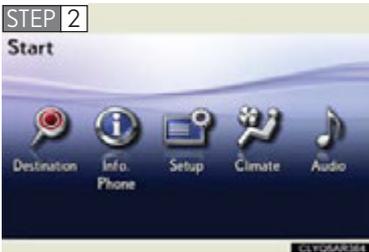


- 2 Select  .

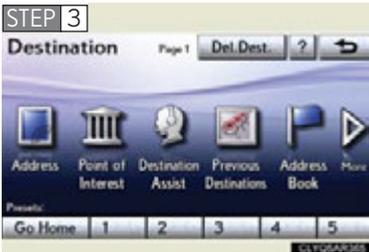

- 3 Select  .

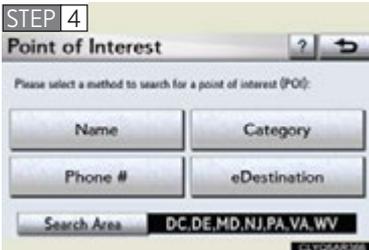

- 4 Select .

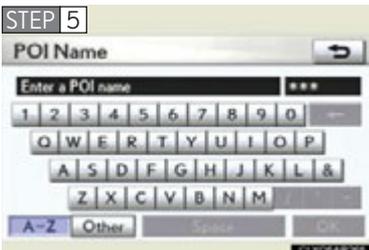

- 5 Input the name of the point of interest and select .
- 6 Select the button of the desired destination.
- 7 Select .
- 8 Select .


Destination input — Search points of interest by category




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The "Start" screen will be displayed.



- 2 Select  .
Destination

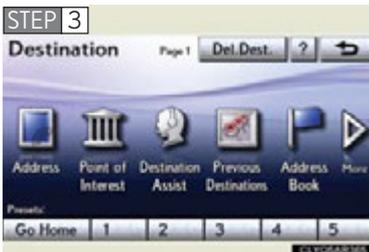


- 3 Select  .
Point of Interest

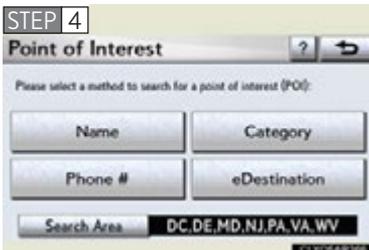

- 4 Select  .
Category

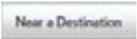


- 5 Select  .
- 6 Select the button of the desired destination and set the search point.
- 7 Select the desired point of interest category.
- 8 Select the button of the desired item.
- 9 Select  .
- 10 Select  .

Destination input — Search points of interest by telephone number




- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The “Start” screen will be displayed.

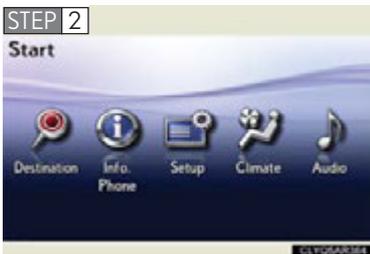



- 2 Select  .
Destination



- 3 Select  .
Point of Interest

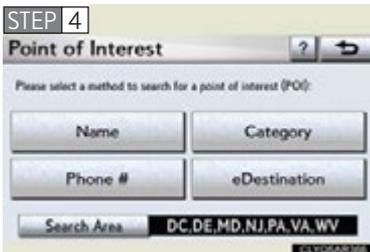

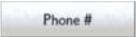- 4 Select  .
Phone #

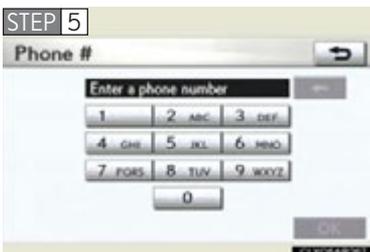

- 5 Input a telephone number and select  .
- 6 Select  .
- 7 Select  .

Hands-free System For Cellular Phone (with navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.


- 1 Press the "MENU" button on the Remote Touch.

Please refer to P.32 for the Remote Touch operation.


The "Start" screen will be displayed.



- 2 Select  .

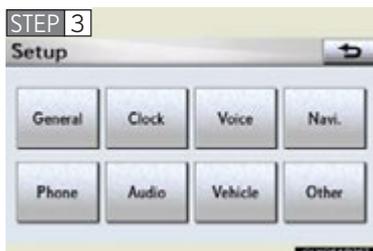

- 3 Select  .

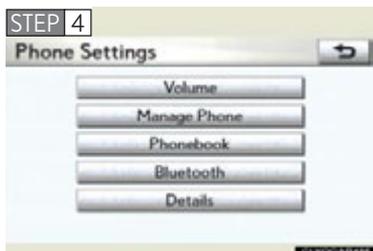

- 4 Select  .

- 5 Select  to display the screen for connecting Bluetooth® .




- 6 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 When the connection is completed, **Bluetooth connection successful** will appear and push the **MENU** button.


Phonebook transfer




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The "Start" screen will be displayed.

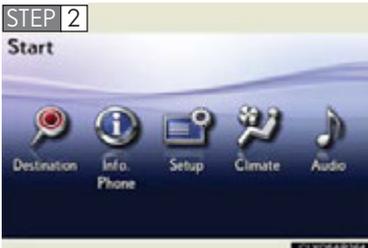


- 2 Select  .

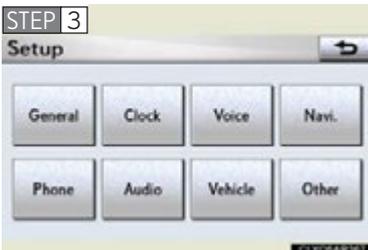

- 3 Select **Phone** .

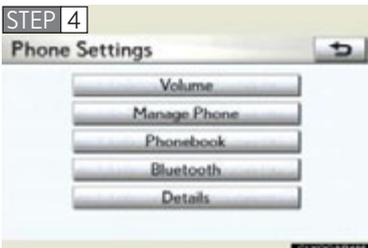

- 4 Select **Phonebook** .

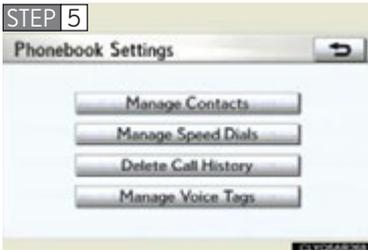

- 5 Select **Manage Contacts** .
- 6 Select **Transfer Contacts** .
- 7 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user’s manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

■ Registering a voice tag



- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The “Start” screen will be displayed.




- 2 Select  .



- 3 Select  .



4 Select **Phonebook** .

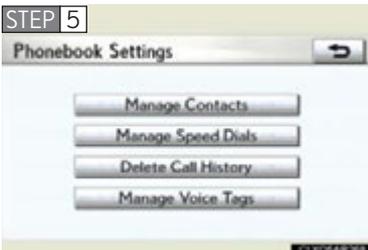

5 Select **Manage Voice Tags** .

6 Select **New Voice Tag** .

7 Select the data you want to register.

8 Select **REC** , and record a voice tag.

9 Select **OK** .

■ Registering a speed dial



1 Press the “MENU” button on the Remote Touch.

Please refer to P.32 for the Remote Touch operation.


The “Start” screen will be displayed.



2 Select **Setup** .



3 Select **Phone** .

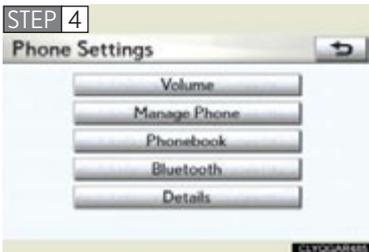

4 Select **Phonebook** .

5 Select **Manage Speed Dials** .

6 Select **New Speed Dial** .



7 Select the data you want to register.

8 Select the desired phone number.

9 Select the button you want to register in.

10 The registration completion message is displayed on the screen.

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)

STEP 1



1 Press .

STEP 2



2 Follow the voice guidance and say "Phone".

3 Follow the voice guidance and say "Dial by name".

STEP 4



4 Follow the voice guidance and say a contact name.

5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).

6 Follow the voice guidance and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.


■ Calling by speed dial

STEP 1



1 Press .

STEP 2

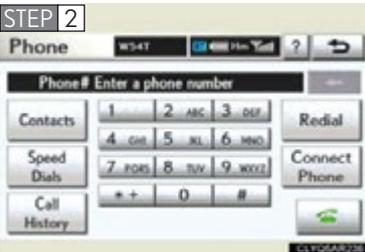


2 Select .

STEP 3



3 Select the desired number to call.

Receiving a call

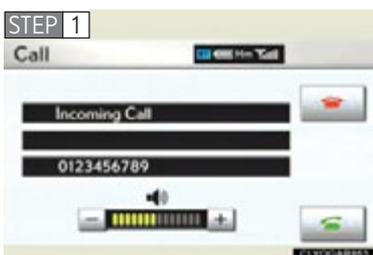

1 When a call is received, this screen is displayed with a sound.

2 Press  to talk on the phone.

To ignore the call, press .

Audio System (with navigation system)

Audio control screen

Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.

Please refer to P.32 for the Remote Touch operation.

The "Start" screen will be displayed.

- 2 Using the Remote Touch, select "Audio" and press the "ENTER" button.

Basic operation



- 1 Sound quality modes

- 2 Audio sources

AM•FM (if equipped): AM radio/FM radio

AM (if equipped): AM radio

SAT (if equipped): Satellite radio

FM (if equipped): FM radio

DISC (if equipped): DVD player

CD (if equipped): CD player

AUX•USB (if equipped): Auxiliary audio device/USB memory/iPod/Bluetooth® audio

AUX (if equipped): Auxiliary audio device/USB memory/iPod/Bluetooth® audio

- 3 Power/Volume

Radio




- 1 Station presets
- 2 Scanning radio stations
- 3 Radio tuner
- 4 Station select
- 5 Seek

Entering station presets

- 1 Select the desired station by using the tune, seek or scan function.
- 2 Using the Remote Touch, select one of the preset switches (1-6), then press the “ENTER” button until a beep is heard, indicating that the station has been set.

DVD player/CD player

Playing an audio CD

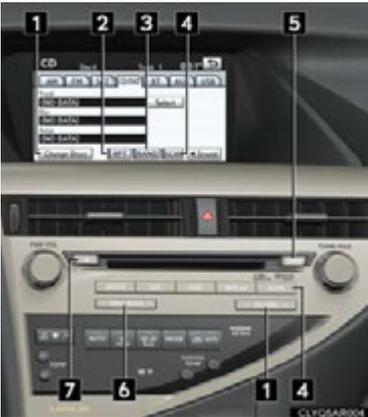


- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Disc load
- 6 Track select/rewind/fast-forward
- 7 Eject

Playing a CD with MP3/WMA files



- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Eject

Playing a DVD (DVD player only)

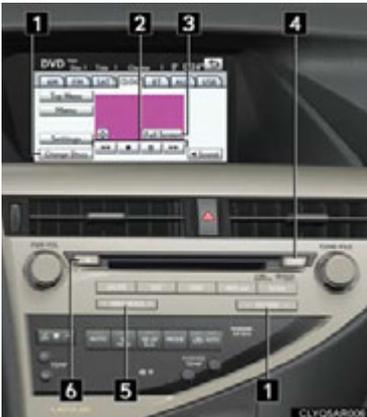

- 1 Disc select
- 2 DVD operation
- 3 Image display (full screen)
- 4 Disc load
- 5 Chapter select
- 6 Eject

■ Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.


■ Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat **2** and **3** until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ Operating an iPod

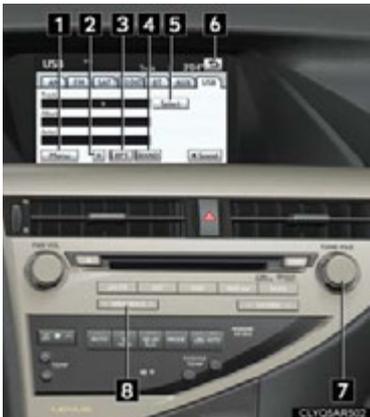

- 1 Menu
- 2 Pause/Playback
- 3 Repeat play
- 4 Random playback
- 5 Song list
- 6 Go back
- 7 Song select
- 8 Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Power on/change mode: press
Power off: press and hold
- 3 Radio mode: radio tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod mode: song select

Air Conditioning System (with navigation system)



- | | |
|---|---|
| 1 Dual mode button | 8 Automatic mode button |
| 2 Passenger side temperature display | 9 Driver side temperature control |
| 3 Fan speed display | 10 Fan speed control button/"OFF" button |
| 4 Outside air/recirculated air mode button | 11 Cooling and dehumidification function on/off button |
| 5 Passenger side temperature control | 12 Driver side temperature display |
| 6 Air outlet selector button | 13 Air outlet display |
| 7 Windshield defogger | |

■ Using the automatic mode

Press **8** to turn on the airflow and **9** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings

Select **1** to turn the "DUAL" indicator off (**DUAL**) and then press **9**.

■ To individually adjust the driver's side and passenger's side temperature settings

Select **1** or press **5** to turn the "DUAL" indicator on (**DUAL**) and then press **9** or **5**.

■ To turn off the airflow

Press and hold "V" on **10** until the airflow turns off.

Hands-free System For Cellular Phone (without navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or  .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name*.
*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press  .



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by number

STEP 1



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

STEP 1



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by speed dial

STEP 1



1 Press  .

STEP 2



2 Press the desired preset button.

3 Press  .


Phonebook transfer

STEP 1



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.

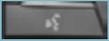


: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Changing the registered name

STEP 1



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".

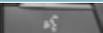 : Pressing this switch turns the speech command system on. Say a command after the beep.


■ Registering a speed dial

STEP 1



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".

STEP 7

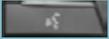

: Pressing this switch turns the speech command system on. Say a command after the beep.

Audio System (without navigation system)

Basic operation

► Type A



1 Power/Volume

2 Audio sources

AM·FM: AM radio/FM radio

SAT: Satellite radio

CD: CD player

AUX·USB (if equipped): Auxiliary audio device/USB memory/iPod/Bluetooth® audio

AUX (if equipped): Auxiliary audio device/Bluetooth® audio

3 Sound quality modes

► Type B



1 Power/Volume

2 Audio sources

AM: AM radio

FM: FM radio

CD: CD player

AUX: Auxiliary audio device/USB memory/iPod

3 Mute

4 Sound quality modes

Radio

► Type A



- 1 RDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek

► Type B



- 1 Station select
- 2 Station presets
- 3 Radio tuner
- 4 Scanning radio stations
- 5 Seek


Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ CD player


■ Playing an audio CD

▶ Type A

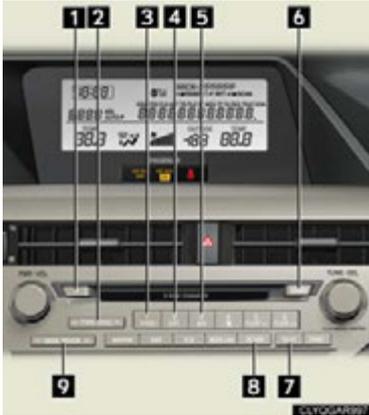

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Disc load
- 7 Text information
- 8 Search playback
- 9 Track select/rewind/fast-forward


▶ Type B

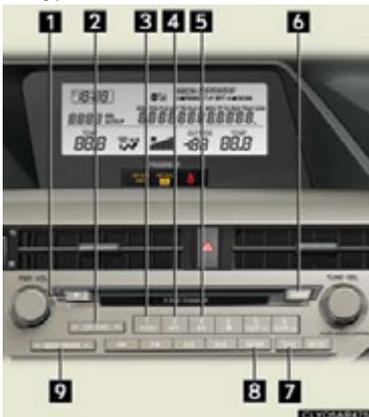

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Disc load
- 7 Text information
- 8 Search playback
- 9 Track select/rewind/fast-forward


■ Playing a CD with MP3/WMA files

▶ Type A

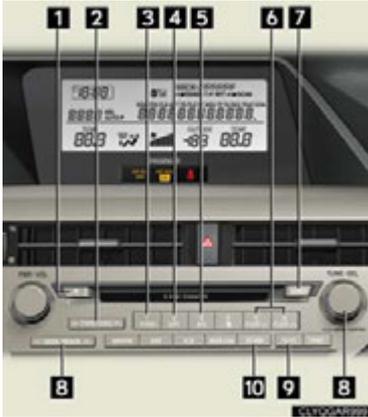

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Folder select
- 7 Disc load
- 8 File select
- 9 Text information
- 10 Search playback

▶ Type B

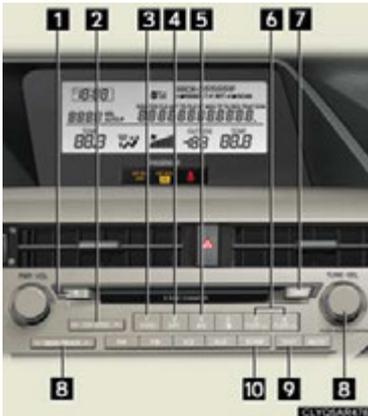

- 1 Eject
- 2 Disc select
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Folder select
- 7 Disc load
- 8 File select
- 9 Text information
- 10 Search playback

■ Loading a CD

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.


■ Operating an iPod (if equipped)

▶ Type A



- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select/rewind/fast-forward

▶ Type B

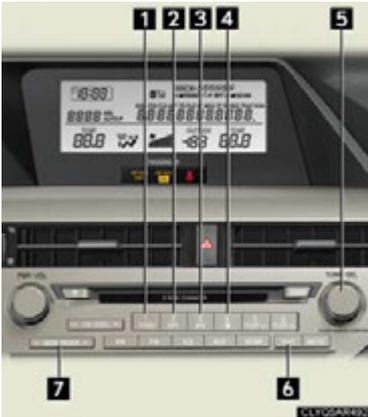

- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Power on/change mode: press
Power off: press and hold
- 3 Radio mode: radio tuner
CD mode: disc/track/file (MP3/WMA) select
iPod mode (if equipped): song select

Air Conditioning System (without navigation system)



- | | |
|--|--|
| 1 Passenger side temperature display | 6 Air outlet selector button |
| 2 Passenger side temperature control | 7 Driver side temperature control |
| 3 Cooling and dehumidification function on/off button | 8 Fan speed control button/"OFF" button |
| 4 Outside air/recirculated air mode button | 9 Automatic mode button |
| 5 Windshield defogger | 10 Dual mode button |
| | 11 Driver side temperature display |

Using the automatic mode

Press **9** to turn on the airflow and **7** to adjust the temperature.

Adjusting the temperature

To simultaneously adjust the driver's side and passenger's side temperature settings

Press **10** to turn the "DUAL" indicator off () and then press **7**.

To individually adjust the driver's side and passenger's side temperature settings

Press **10** or **2** to turn the "DUAL" indicator on () and then press **7** or **2**.

To turn off the airflow

Press and hold "v" on **8** until the airflow turns off.

Voice Command System

Basic operation



- 1 Press .
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

■ Command list

► All vehicles

PHONE			
To Operate a Bluetooth® Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

► With navigation system

Destinations				
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:	"Address" and then follow the prompts to enter city, state, street and house number		
To Enter a Point of Interest, SAY	A Point of Interest Category, Such As: "Dining," "Shopping Malls," "Police," "Gas," ETC.			
	"Destination" and then SAY:	"Point of Interest" and then SAY:	"Near Here"	And then follow the prompts
			"Along Route"	
			"Emergency"	
"Phone Number"				
To Enter a Previous Destination, SAY:	"Destination" and then SAY:	"Previous Destinations"		
To Enter/Go to Preset Destinations, SAY:	"Destination" and then SAY:	"Presets" and then SAY:	"Home" (HOME must already be set using manual controls)	And then follow the prompts
			"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)	

General Navigation Commands

To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
	"North Up"
	"Heading Up"
To Change the Map Orientation, SAY:	"Map Direction"
	"Right Map North Up"
	"Right Map Heading Up"
To Change the Guidance Mode, SAY:	"Right Map Direction"
	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
To Save a Point on the Map, SAY:	"Freeway Mode"
	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

General Navigation Commands

To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Final Destination Map"
	"Delete Next Destination"
	"Delete Final Destination"
To Operate Guidance Options, SAY:	"Delete All Destinations"
	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
To Operate the Traffic Information, SAY:	"Louder"
	"Softer"
To Operate the Traffic Information, SAY:	"Traffic Information"
To Show the Icon, SAY:	"Show GAS", "Show PARKING" ETC.

PHONE

To Operate a Bluetooth® Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Send Tones"		NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Connect Phone" and then SAY:	"Send Phone"	
			"Add New Phone"	
			"Hands Free Power ON"	
			"Hands Free Power OFF"	

AUDIO


To Turn Audio On or Off, SAY:	"Audio ON" "Audio OFF"		
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD*, CD Changer*, DVD**, DVD Changer**, Bluetooth® Audio, iPod, USB Audio *For systems w/o NAV **For systems w/NAV		
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"		
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"		
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down" "Type Up" or "Type Down"		
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:	"Select Channel Number"	
		"Select Channel Name" (English only)	
		"Select Channel Type" (English only)	
		"Command List" and then SAY:	"Seek Up" or "Seek Down"
			"Type Up" or "Type Down"

XM Information		
To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts
To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts

CLIMATE CONTROL/AIR CONDITIONING	
To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

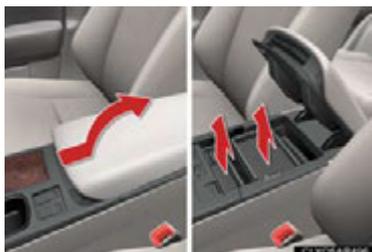

- 1 Slide the armrest while pulling up the lever, and lift the armrest.
Remove the upper trays. (if equipped)



- 2 Remove the lower tray and open the cover.




- 1 USB port (if equipped)
- 2 AUX port

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

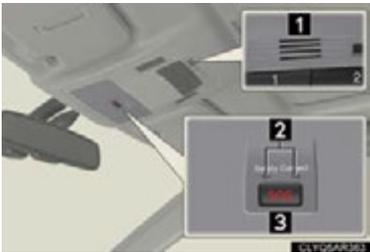

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally push the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can push the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.75)**

- Automatic collision notification*¹
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM[®] Sports and Stocks*²**

XM[®] Sports and Stocks is a service included with XM[®] satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

● **XM NavWeather™*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

● **XM® NavTraffic*3**

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

● **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

● **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

Door Locks

Locking the vehicle from inside



► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switches

Operates all door locks/unlocks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Using the entry function or wireless remote control (→P12, 13)

Rear door child-protector lock



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger and rear window switches.

Moon Roof (If Equipped)

Opening and closing

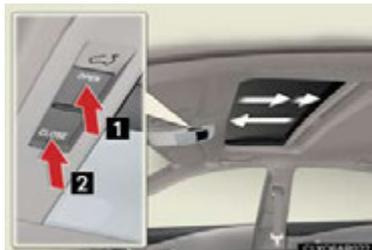

1 Opens


The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

To stop partway, press the switch lightly.

Tilt up and down

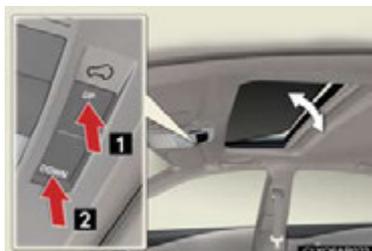

1 Tilts up

2 Tilts down

To stop partway, press the switch lightly.

Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Back Door

■ Back door opener button




To open the back door, push up the opener button and raise the door.

■ Power back door switches (with power back door)



▶ Instrument panel

To open or close the back door, press the switch.

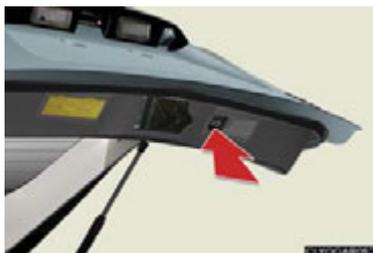

▶ Back door


To close the back door, press the switch.

▶ Wireless remote control (→P12)

■ Back door closer (with power back door)

If the back door is left slightly open, it will close automatically.

■ Turning the power back door system on and off (with power back door)

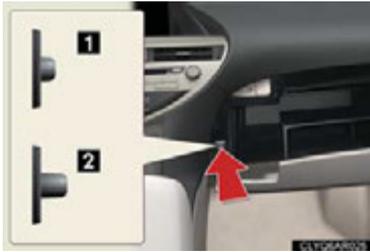

To disable the system, turn off the main switch in the glove box.

- 1 On
- 2 Off

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



Slip indicator

(Comes on)



Automatic high beam indicator

(Flashes)



Electric power steering system warning light



Pre-collision system warning light^{*1}



(Blinking and then continuously on)

Tire pressure warning light



Brake system warning light



(Flashes)

"AFS OFF" indicator^{*1}

For further information, refer to the Owner's Manual.

What to do if ...

Follow the correction procedures.



Open door warning light



Low fuel level warning light



(On the instrument panel)

Driver's seat belt reminder light



(On the center panel)

Front passenger's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light^{*2}



Master warning light

For further information, refer to the Owner's Manual.

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Automatic High Beam indicator^{*1}



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"Hybrid SNOW" indicator



Cruise control indicator



Radar cruise control indicator^{*1}



Intuitive parking assist indicator^{*1}



"AFS OFF" indicator^{*1}



Slip indicator



VSC off indicator



Electronically modulated air suspension indicator^{*1}



Eco Driving Indicator Light



"ECO MODE" indicator



EV drive mode indicator



"READY" indicator



SRS airbag on-off indicator^{*1}



SRS airbag on-off indicator^{*1}

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: It also turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

If the electronic key does not operate properly

Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key (driver's door only). The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "POWER" switch while gently turning the wheel left or right.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.