

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System

(with a navigation system or the Lexus Display Audio system)*

Using the automatic mode (with a navigation system).....	59
Adjusting the temperature (with a navigation system).....	59
Using the automatic mode (with the Lexus Display Audio system)	60
Adjusting the temperature (with the Lexus Display Audio system)	60

Air Conditioning System

(without a navigation system or the Lexus Display Audio system)

Using the automatic mode.....	73
Adjusting the temperature.....	73

Audio System

(with a navigation system or the Lexus Display Audio system)*

Audio control screen.....	52
Remote control (steering wheel switches).....	52
Basic operation	53
Radio.....	54
DVD player/CD player.....	55
Operating an iPod.....	58

Audio System

(without a navigation system or the Lexus Display Audio system)

Basic operation	66
Radio.....	67
CD player.....	68
Operating an iPod.....	71
Remote control (steering wheel switches).....	72

Back Door.....	85
----------------	----

BSM (Blind Spot Monitor).....	23
-------------------------------	----

Cruise Control	20
----------------------	----

Door Locks.....	82
-----------------	----

Dynamic Radar Cruise Control	21
------------------------------------	----

Eco Driving Indicator	18
-----------------------------	----

Engine (Ignition) Switch	14
--------------------------------	----

Floor Mat Installation	4
------------------------------	---

Fuel Tank Cap	84
---------------------	----

*: This feature may be operated by Voice command (See P.74)

Hands-free System For Mobile Phone

(with a navigation system or the Lexus Display Audio system)*

Bluetooth® phone pairing	42
Phonebook transfer	44
Registering a speed dial	46
Calling by speed dial	48
Calling using SMS/MMS message (with a navigation system)	50
Receiving a call	51
Steering switches	51

Hands-free System For Mobile Phone

(without a navigation system or the Lexus Display Audio system)

Bluetooth® phone pairing	61
Calling by number	62
Calling by name	62
Calling by speed dial	63
Phonebook transfer	64
Changing the registered name	65
Registering a speed dial	65

Headlights	25
-------------------------	----

Head-up Display	24
------------------------------	----

Intuitive Parking Assist	15
---------------------------------------	----

Keys	10
-------------------	----

Lexus Display Audio Controller

Basic operation	33
-----------------------	----

Menu	33
------------	----

Lexus Enform with Safety Connect	80
---	----

Moon Roof	83
------------------------	----

Multi-information Display and Switch	16
---	----

Navigation System*

Register home	34
---------------------	----

Destination input — Search by address	35
---	----

Destination input — Search points of interest by name	38
---	----

Destination input — Search points of interest by category	39
---	----

Destination input — Search by telephone number	40
--	----

Voice Command System	74
----------------------------	----

Portable Audio Device Ports	77
--	----

Power Windows	83
----------------------------	----


Rear Window Wiper and Washer	29
---	----

*: This feature may be operated by Voice command (See P.74)


Remote Touch	
Basic operation	30
Menu	31
Display	31
Screen scroll operation	32
Setting a route	32
Safety Connect	78
Smart Access System with Push-button Start	11
Theft Deterrent System	12
Turn Signal Lever	19
Voice Command System	
Basic operation	74
Command list	75
Windshield Wipers and Washer	26

Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

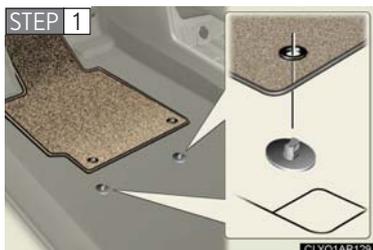

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

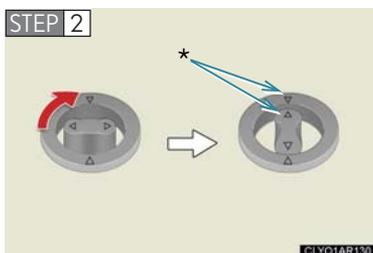


- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Overview

Instrument Panel

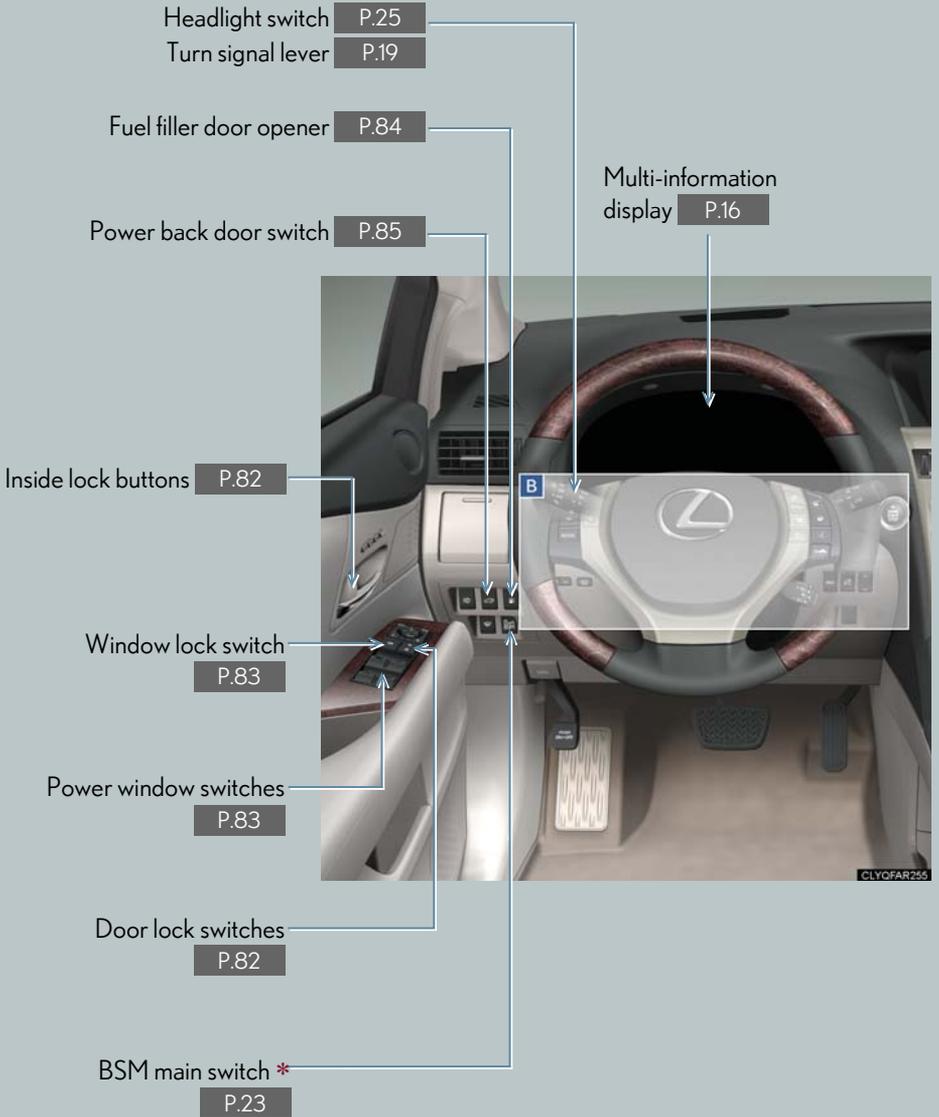

Windshield wiper and washer switch P.26

Rear window wiper and washer switch P.29

Engine (ignition) switch P.14



Power back door main switch P.85

Remote Touch *1 P.30

Lexus Display Audio controller *2 P.33

Head-up display main switch * P.24

* : If equipped

*1: With navigation system

*2: With Lexus Display Audio system

A

▶ Without a navigation system or Lexus Display Audio system



Air conditioning system P.73

Audio system P.66

A

▶ with the Lexus Display Audio system

Lexus Display
Audio system
P.33

Air conditioning
system P.59



Audio system
P.52

▶ with a navigation system

Navigation system
P.34

Air conditioning
system P.59




Audio system
P.52

B

Steering wheel audio switches P.52, 72

Telephone switch P.51, 61

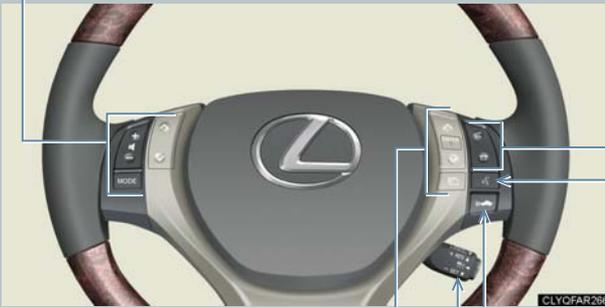

Multi-information switches P.16

Talk switch P.51, 61, 74

Cruise control switch P.20, 21

Vehicle-to-vehicle distance button* P.21

* : If equipped

Keys

Electronic key



Smart access system with push-button start
(→P:11, 14)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control




- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
- 3 Press and hold:** opens and closes the back door
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. (The driver should always carry the electronic key.)
For details on starting the engine, see page 14.

■ Entering the vehicle

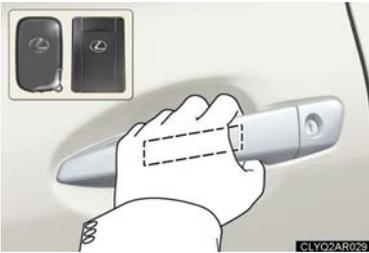


To unlock the vehicle, simply grasp either of the front door handles.

■ Exiting the vehicle



To lock the vehicle, touch the lock sensor on either of the front door handles.

■ Operating the back door

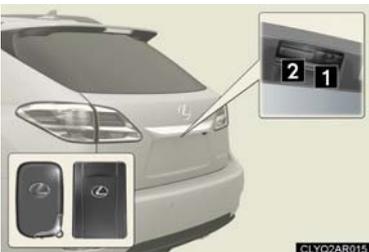

- 1 Locks
- 2 Opens


For details on what to do when the electronic key does not operate properly, see page 89.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

Engine immobilizer system

► Vehicles with a navigation system or the Lexus Display Audio system

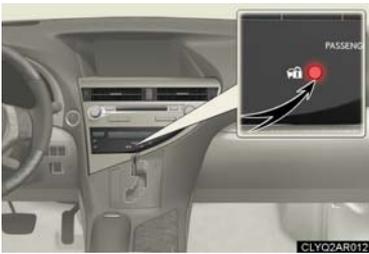

The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

► Vehicles without a navigation system or the Lexus Display Audio system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

■ Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode, start the engine, or unlock the doors.

■ Steering lock



The steering wheel locks when the “ENGINE START STOP” switch is turned off and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, press the “ENGINE START STOP” switch while gently turning the steering wheel left or right.

Engine (Ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is set and the shift lever is in P.

- 1] Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2] Press the “ENGINE START STOP” switch.


Stopping the engine

- 1] Set the parking brake and shift the shift lever to P.
- 2] Press the “ENGINE START STOP” switch.

If the shift lever is in a position other than P when turning off the engine, the “ENGINE START STOP” switch will be turned to ACCESSORY mode, not to off. To avoid unexpected battery discharge, make sure the lever is in the P position when stopping the engine.

Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:

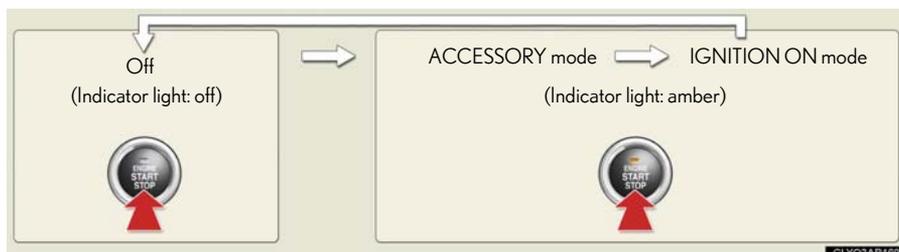

Intuitive Parking Assist (If Equipped)

The system uses a screen display, screen (vehicles with the Lexus Display Audio system) and a buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

Turning the system on and off




- 1 Press the menu switch
- 2 Press the "∧" or "∨" switch until the intuitive parking assist mark appears in the multi-information display.



- 3 Press the "ENTER" switch to select on/off.

Press the menu switch to change to the normal display.

Screen display

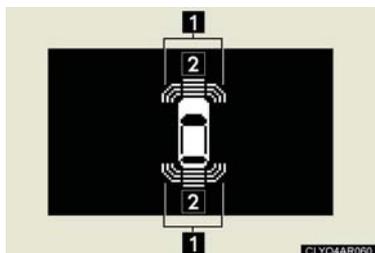


Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the center sensors

Multi-information Display and Switch


The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

Multi-information switches

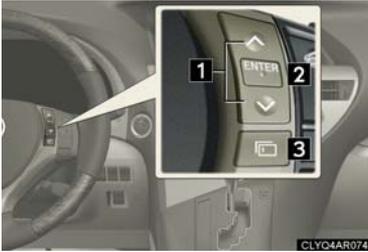


- 1 “^” “v” switch
Changes items.
- 2 “ENTER” switch
Turns on/off electronic features controls and changes customization settings.
- 3 Menu switch
Changes mode from normal display to electronic features, customization or back to normal display.

Display contents

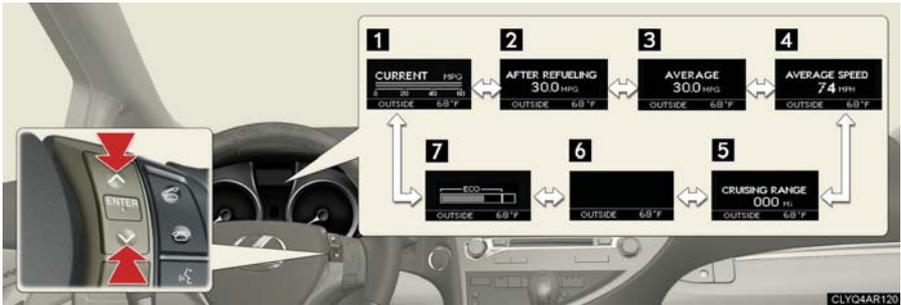

Trip information contents	Switching display items
1 Current fuel consumption	Press the “^” or “v” switch.
2 Average fuel consumption after refueling	
3 Average fuel consumption	
4 Average vehicle speed	
5 Cruising range	
6 Multi-information display off	
7 Eco Driving Indicator Zone Display	

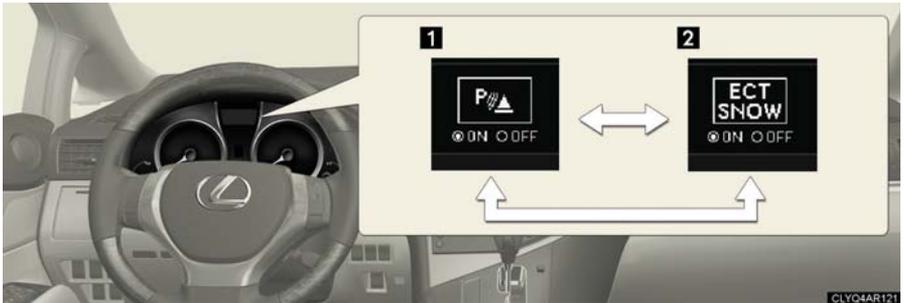

Electronic features control contents	Setting electronic features controls
1 Intuitive parking assist*	→P:15
2 Snow mode	For details, see the Owner's Manual.


Display order may vary depending on vehicle condition.

Other contents	Customizing settings and other information to be displayed
Outside temperature	For details, see the Owner's Manual.
Dynamic radar cruise control display*	
Customization	
Warning message	

*: If equipped

- When using Intuitive parking assist-sensor or dynamic radar cruise control the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


Eco Driving Indicator

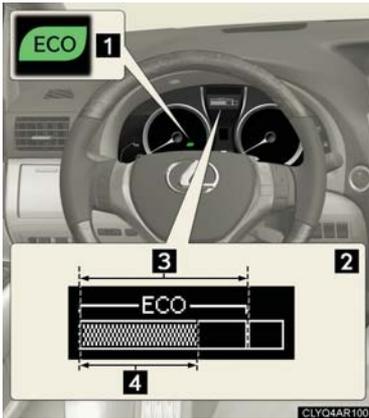

- 1** Eco Driving Indicator Light
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.
- 2** Eco Driving Indicator Zone Display
Suggests Eco driving range with current Eco driving ratio based on acceleration.
- 3** Zone of Eco driving
- 4** Eco driving ratio based on acceleration
If Zone of Eco driving is exceeded, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

Turn Signal Lever

► Type A

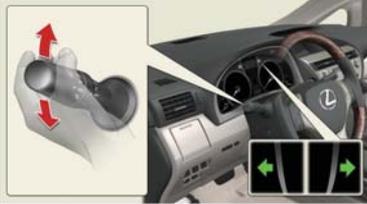

- 1 Right turn signal
- 2 Left turn signal




CLYC4AR081

► Type B



- 1 Right turn signal
- 2 Left turn signal

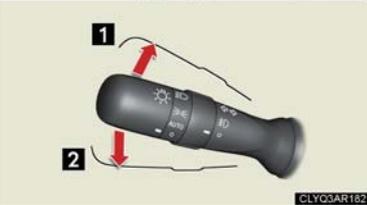

CLYC3AR182

To signal a lane change, move the lever partway and hold.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Display
- 3 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the set speed




- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.

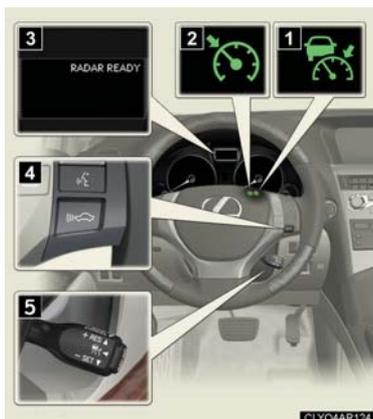

- 1 Indicator (vehicle-to-vehicle distance control mode)
- 2 Indicator (constant speed control mode)
- 3 Display
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode




- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

■ Canceling

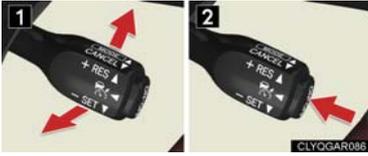

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the set speed



To increase speed: push the lever up.

To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

BSM (Blind Spot Monitor) (If Equipped)

The Blind Spot Monitor is a system that assists the driver in making the decision to change lanes.



- 1 BSM main switch**
Pressing the switch turns the system on or off.
- 2 Outside rear view mirror indicator**
When a vehicle is detected in the blind spot, the outside rear view mirror indicator on that side illuminates. If the turn signal lever is operated when a vehicle is in the blind spot, the outside rear view mirror indicator flashes.
- 3 BSM indicator**
When the system is on, the indicator will come on.

Head-up Display (If Equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.

Head-up display switches



- 1 Pressing the switch turns the head-up display on/off and changes the vehicle speed display units.
- 2 Adjusting display contrast
- 3 Adjusting display position

Head-up display contents




- 1 Audio display
- 2 Shift position and shift range display
- 3 Dynamic radar cruise control display (if equipped)
- 4 Pre-collision system display (if equipped)
- 5 Turn-by-turn navigation display*
- 6 Vehicle speed display

- When using audio system or navigation system the appropriate display is shown on the screen.
- Warning messages will be displayed when necessary.
- The audio mode display and/or the shift position and shift range display can be shown or hidden.
Press and hold the head-up display main switch changes the display to the display on/off mode.
Press the head-up display main switch to select the desired setting item. Press and hold the head-up display main switch to turn the display on/off.
- The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses.
Adjust the brightness of the head-up display or remove your sunglasses.

*: Refer to "Navigation System Owner's Manual".


Headlights

► Type A

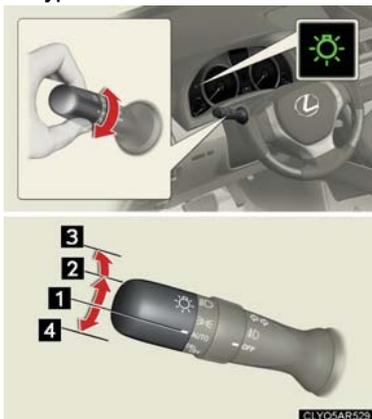


- 1 **AUTO** The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically.
- 2  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4 **DRL OFF** The daytime running light turn off.

► Type B

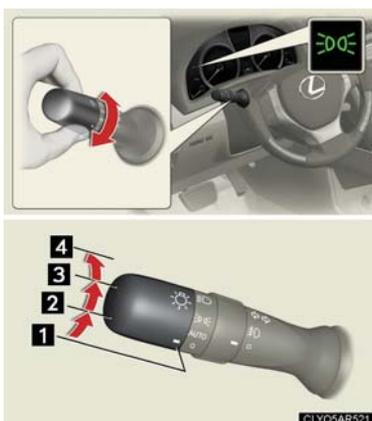

- 1  The daytime running lights turn on.
- 2 **AUTO** The headlight, side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on/off automatically.
- 3  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 4  The headlights and all the lights listed above (except daytime running lights) turn on.

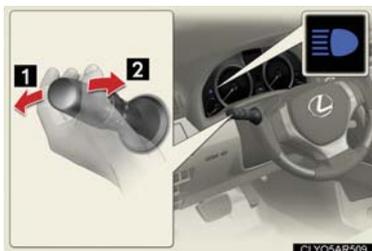


- 1 To engage the high beams, push the lever forward.
- 2 To flash the high beams temporarily, pull the lever toward you.

Windshield Wipers and Washer


■ Intermittent wiper with interval adjuster (if equipped)



- 1 OFF** Off
- 2 INT** Intermittent wiper operation
- 3 LO** Low speed wiper operation
- 4 HI** High speed wiper operation
- 5 MIST** Temporary operation

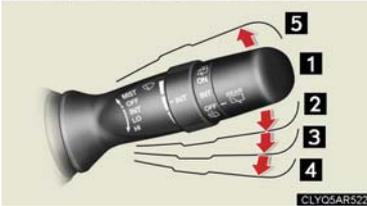

Intermittent wiper operation: Wiper interval can be adjusted by turning the ring.

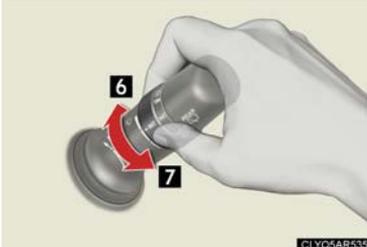

- 6** Increases the intermittent windshield wiper frequency
- 7** Decreases the intermittent windshield wiper frequency



To spray washer fluid, pull the lever. The wipers will operate automatically.

■ Rain-sensing windshield wipers (if equipped)

▶ Type A



- 1 **OFF** Off
- 2 **AUTO** Rain-sensing wiper operation
- 3 **LO** Low speed wiper operation
- 4 **HI** High speed wiper operation
- 5 **MIST** Temporary operation



CLYQ2AR523


▶ Type B



- 1 **○** Off
- 2 **AUTO** Rain-sensing wiper operation
- 3 **▼** Low speed wiper operation
- 4 **▼** High speed wiper operation
- 5 **▲** Temporary operation



CLYQ4AR069

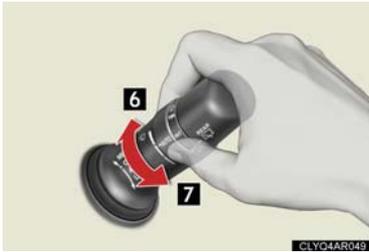

Rain-sensing wiper operation: the sensor sensitivity can be adjusted by turning the switch ring.

6 Sensor sensitivity (high)


7 Sensor sensitivity (low)



To spray washer fluid, pull the lever. The wipers will operate automatically.



Rear Window Wiper and Washer

► Type A

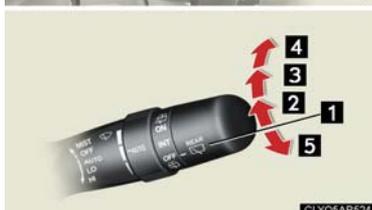

- 1 **OFF** Off
- 2 **INT** Intermittent window wiper operation
- 3 **ON** Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

► Type B

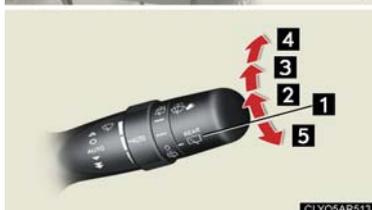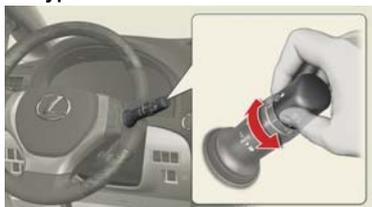

- 1  Off
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Remote Touch (with a navigation system)

The Remote Touch can be used to operate the Remote Touch screens.

Basic operation



- 1** “ \wedge • \vee ” button
Press this button to change map scale and scroll through lists.
- 2** “MAP/VOICE” button
Press this button to display the vehicle’s current position.
- 3** Remote Touch knob
Move in the desired direction to select a function, number and screen button.
Push the knob to enter the selected function, number and screen button.
- 4** “MENU” button
Press this button to display the “Menu” screen.


Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- 1 "Destination" (→P.34)
- 2 "Info/Apps" or "Info"
- 3 "Setup"
- 4 "Radio" (→P.54)
- 5 "Media" (→P.52)
- 6 "Climate" (→P.59)
- 7 "Phone" (→P.42)
- 8 "Display" (→P.31)

Display

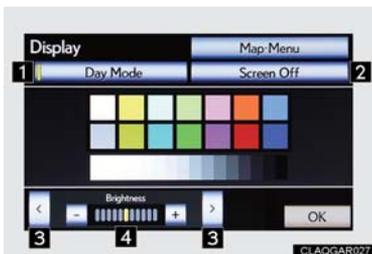

Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on
- 2 Turns the screen off
- 3 Change function
- 4 Adjust contrast/brightness

Screen scroll operation



To scroll over the map, place the pointer in a position near the desired destination and then press and hold the Remote Touch knob.

- 1 Indicates the street name, town name, etc. for the selected point
- 2 Displays various information for the selected point
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the map configurations
- 5 Zooms in on the map
- 6 Zooms out on the map

Setting a route

While route guidance is operating, you can change the route using the following method.

Select "Route".

The following settings can be accessed.



- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Lexus Display Audio Controller (with the Lexus Display Audio system)


By using the Lexus Display Audio controller, you can control the audio system and hands-free system, etc.

Basic operation



- 1 Displaying the audio control screen
- 2 Displaying the "Menu" screen
- 3 Displaying the previous screen
- 4 Turn or move the controller to select a function, number and screen button.
Push the controller to enter the selected function, number and screen button.

Menu

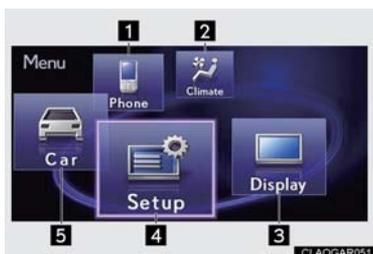


Press the "MENU" button on the Lexus Display Audio controller to display the "Menu" screen.

- 1 Phone (→P.42)
- 2 Climate (→P.59)
- 3 Display
- 4 Setup
- 5 Car

Navigation System (If Equipped)

Register home

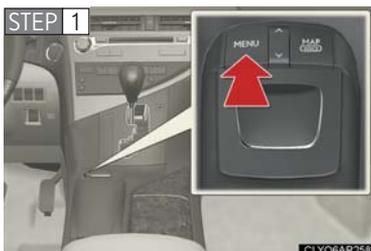


- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.



- 2 Select "Setup".



- 3 Select "Navigation".

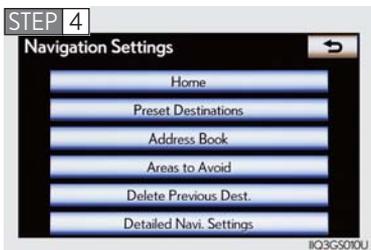


- 4 Select "Home".
- 5 Select "Set Home".
- 6 Select "Address".



- 7 Select "City".
- 8 Input a city name and select "OK".
- 9 Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 10 Input the street name and select "OK".
- 11 When the desired street name is found, select the corresponding screen button.
- 12 Input a house number and select "OK".
- 13 Select "Enter".
- 14 Select "OK".

Destination input — Search by address

Select by city name

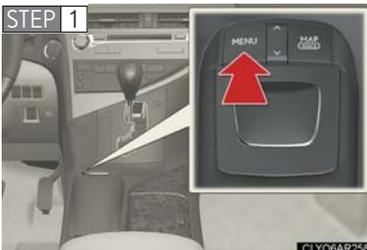

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.



- 2 Select "Destination".



- 3 Select "Address".



4 Select "City".



5 Input a city name and select "OK".

6 Select the screen button of the desired city name from the displayed list.

7 Input the street name and select "OK".


8 When the desired street name is found, select the corresponding screen button.

9 Input a house number and select "OK".

10 Select "Go to".

11 Select "OK".

Select by street address

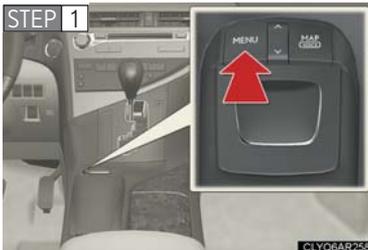

1 Press the "MENU" button on the Remote Touch.

Please refer to P.30 for the Remote Touch operation.



2 Select "Destination".



3 Select "Address".



4 Select "Street Address".



5 Input a house number and select "OK".

6 Input the street name and select "OK".

7 When the desired street name is found, select the corresponding screen button.


8 Input a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.

10 Select "Go to".

11 Select "OK".

Destination input — Search points of interest by name

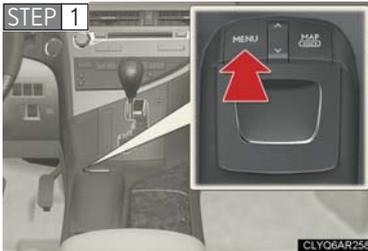


- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.



- 2 Select “Destination”.



- 3 Select “Point of Interest”.

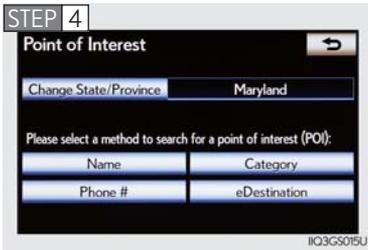


- 4 Select “Name”.



- 5 Input the name of the point of interest and select “OK”.
- 6 Select the screen button of the desired destination.
- 7 Select “Go to”.
- 8 Select “OK”.

Destination input — Search points of interest by category

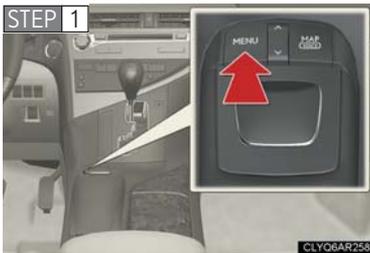


- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.



- 2 Select “Destination”.



- 3 Select “Point of Interest”.

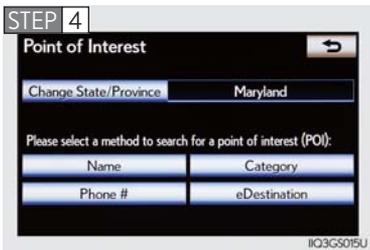

- 4 Select “Category”.



- 5 Select "Near a Destination".
- 6 Select the screen button of the desired destination and set screen the search point.
- 7 Select the desired point of interest category from the displayed list.
- 8 Select the screen button of the desired item.
- 9 Select "Go to".
- 10 Select "OK".

Destination input — Search by telephone number




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.



- 2 Select "Destination".



- 3 Select "Point of Interest".

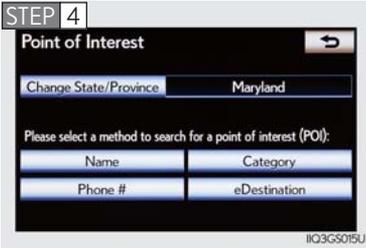

4 Select "Phone #".



5 Input a telephone number and select "OK".

6 Select "Go to".


7 Select "OK".

Hands-free System For Mobile Phone (with a navigation system or the Lexus Display Audio system)

Bluetooth® phone pairing

▶ with a navigation system

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.

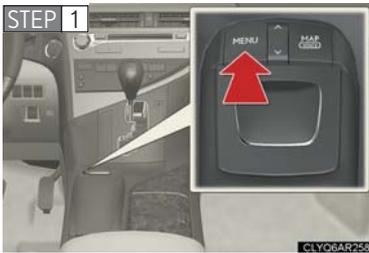

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press the "MENU" button on the Remote Touch.

Please refer to P.30 for the Remote Touch operation.



2 Select "Phone".



3 Select "Yes".



► with the Lexus Display Audio system

To use the hands-free system, you must register a Bluetooth® phone in the system.




- 4 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 5 If a completion message is displayed, registration is complete.

- 1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.33 for the Lexus Display Audio controller operation.
- 2 Select "Phone".
- 3 Select "Yes".

- 4 Enter the passcode displayed on the screen into the phone.
Refer to the mobile phone user's manual for mobile phone operation.
- 5 If a completion message is displayed, registration is complete.

Phonebook transfer

▶ with a navigation system

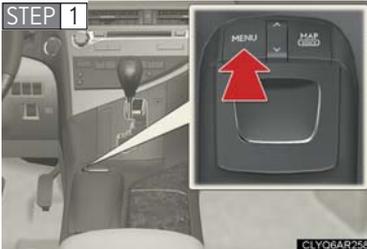

1 Press the “MENU” button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Phone”.

4 Select “Phonebook”.

5 Select “Manage Contacts”.

6 Select “Transfer Contacts”.

7 Select “Update Phonebook”.





- 8 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for mobile phone operation.

► with the Lexus Display Audio system

- 1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.33 for the Lexus Display Audio controller operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Contacts".
- 5 Select "Manage Contacts".
- 6 Select "Transfer".
- 7 Transfer the phonebook data to the system using the mobile phone.
Refer to the mobile phone user's manual for mobile phone operation.

■ Registering a speed dial

▶ with a navigation system

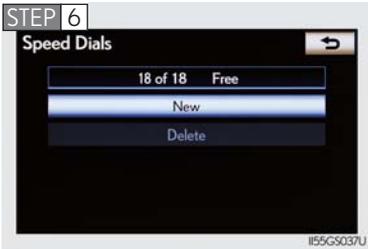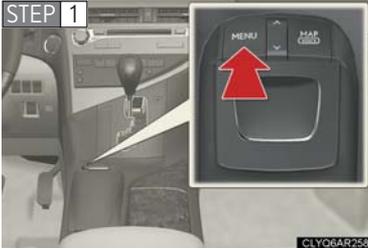

1 Press the "MENU" button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.

2 Select "Setup".

3 Select "Phone".



4 Select "Phonebook".

5 Select "Manage Speed Dials".

6 Select "New".



► with the Lexus Display Audio system

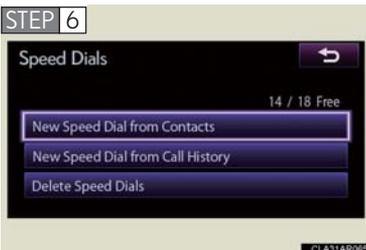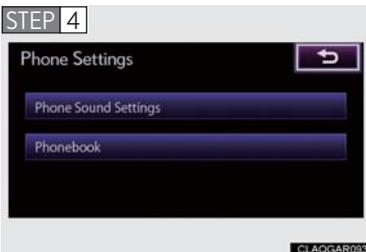


- 7 Select the data you want to register.
- 8 Select the desired phone number.
- 9 Select the button you want to register in.

- 1 Press the "MENU" button on the Lexus Display Audio controller.
Please refer to P.33 for the Lexus Display Audio controller operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Speed Dials".
- 6 Select "New Speed Dial from Contacts".

- 7 Select the data you want to register.

STEP 8

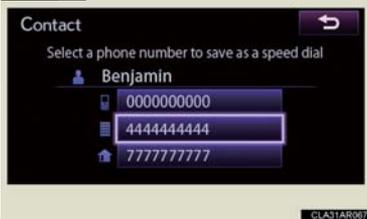

8 Select the desired phone number.

STEP 9




9 Select the button you want to register in.

Calling by speed dial

▶ with a navigation system

STEP 1

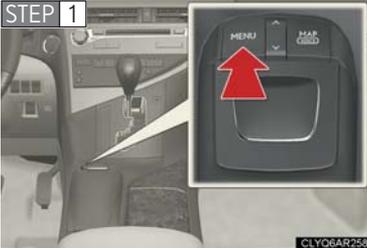

1 Press the "MENU" button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.


STEP 2



2 Select "Phone".



3 Select “Speed Dials”.

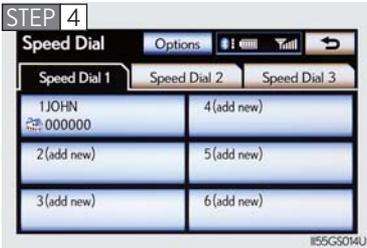

4 Select the desired number to call.

► with the Lexus Display Audio system




1 Press the “MENU” button on the Lexus Display Audio controller.
Please refer to P.33 for the Lexus Display Audio controller operation.

2 Select “Phone”.

3 Select “Speed Dials”.

4 Select the desired tab and choose the desired number to make a call.

■ Calling using SMS/MMS message (with a navigation system)

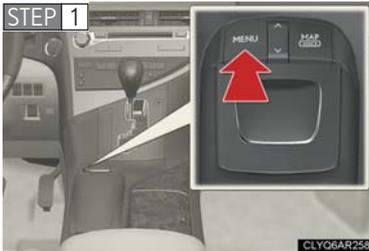

- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.



- 2 Select “Phone”.



- 3 Select “Messages”.
- 4 Select “SMS/MMS” tab.
- 5 Select the desired received message from the displayed list.
- 6 Press  on the steering wheel.

The tab display may vary depending on the type of cellular phone.

Receiving a call

▶ with a navigation system



- 1 When a call is received, this screen is displayed with a sound.
- 2 Press on the steering wheel to talk on the phone.

To refuse the call, press on the steering wheel.


▶ with the Lexus Display Audio system



- 1 When a call is received, this screen is displayed with a sound.
- 2 Press on the steering wheel to talk on the phone.

To refuse the call, press on the steering wheel.

Steering switches

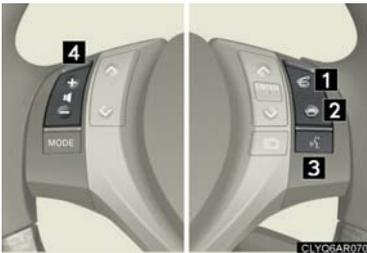


- 1 Sending/Receiving/"Phone" screen display
- 2 End call/Refuse call
- 3 Start the voice command system
- 4 Increases/decreases volume

Audio System (with a navigation system or the Lexus Display Audio system)

Audio control screen

Follow the procedure below to display the audio control screen.

▶ with a navigation system

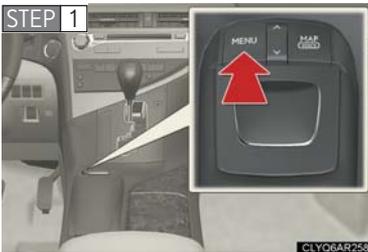

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.30 for the Remote Touch operation.
The "Menu" screen will be displayed.




- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.

▶ with the Lexus Display Audio system

- 1 Press the "AUDIO" button on the Lexus Display Audio controller.
Please refer to P.33 for the Lexus Display Audio controller operation.
- 2 Using the Lexus Display Audio controller, select "Source" and select each tab.

Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

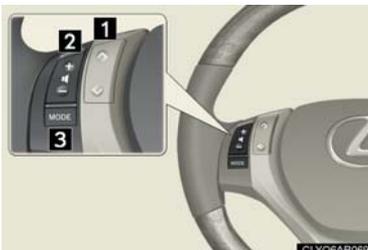

- 1 Radio mode: Selects a radio station
Audio CD mode: Selects a track
MP3/WMA disc mode: Selects a file and folder
DVD mode: Selects a chapter (if equipped)
iPod mode: Selects a song
- 2 Increases/decreases volume
- 3 Press: Turns the power on, selects audio source
Press and hold: Pause or mute

Basic operation

▶ with a navigation system



- 1 Audio sources
"RADIO" button:
AM: AM radio
FM: FM radio
SAT: Satellite radio
APPS (if equipped): Internet radio broadcast
"MEDIA" button:
DISC: DVD player/CD player
iPod: iPod
USB: USB memory
BT Audio: Bluetooth® audio
AUX: Auxiliary audio device
- 2 Sound quality modes
- 3 Power/Volume

▶ with the Lexus Display Audio system



- 1 Power/Volume
- 2 Audio sources
"RADIO" button:
AM-FM: AM radio/FM radio
SAT: Satellite radio
"MEDIA" button:
CD: CD player
AUX-USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

Radio

▶ with a navigation system



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Using HD Radio™ Technology
- 4 Adjusting the frequency
- 5 Preset tuning/seeking the frequency

▶ with the Lexus Display Audio system



- 1 Using HD Radio™ Technology
- 2 Station presets
- 3 Adjusting the frequency
- 4 Preset tuning/seeking the frequency
- 5 Scanning radio stations

■ Entering station presets

- 1 Select the desired station by using the tune or the seek function.
- 2 Using the Remote Touch, select one of the preset buttons (1-6) and hold it until a beep is heard, indicating that the station has been set.

DVD player/CD player


Playing an audio CD

▶ with a navigation system



- 1 Random playback
- 2 Repeat play
- 3 Pause
- 4 Selecting a track
- 5 CD eject

▶ with the Lexus Display Audio system

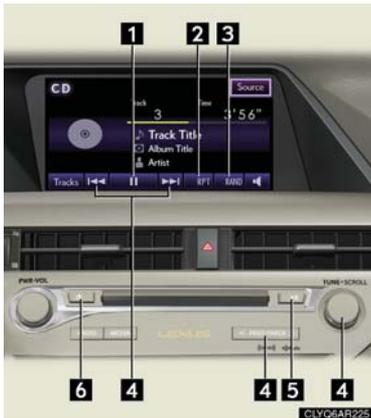

- 1 Pause/Playback
- 2 Repeat play
- 3 Random playback
- 4 Track select
- 5 Pause/Playback
- 6 Eject

■ Playing a CD with MP3/WMA files

▶ with a navigation system




- 1 Random playback
- 2 Repeat play
- 3 Pause
- 4 Selecting a file
- 5 Folder selection
- 6 CD eject

▶ with the Lexus Display Audio system



- 1 File select
- 2 Pause/Playback
- 3 Folder select
- 4 Pause/Playback
- 5 Random playback
- 6 Repeat play
- 7 Eject

■ Playing a DVD (with a navigation system)

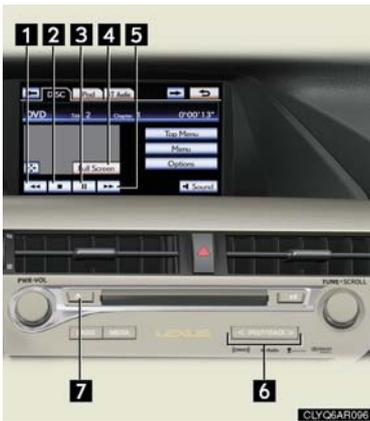

- 1 Reverse
- 2 Stop
- 3 Pause
- 4 Image display (full screen)
- 5 Fast forward
- 6 Chapter selection
- 7 DVD eject

■ Operating an iPod

▶ with a navigation system



- 1 Random playback
- 2 Repeat play
- 3 Pause
- 4 Select play mode
- 5 Song selection

▶ with the Lexus Display Audio system



- 1 Song list
- 2 Pause/Playback
- 3 Select play mode
- 4 Song selection
- 5 Playback/pause
- 6 Random playback
- 7 Repeat play

Air Conditioning System (with a navigation system or the Lexus Display Audio system)

► with a navigation system



- | | |
|--|---|
| 1 Outside temperature | 10 Fan speed control |
| 2 Passenger's side temperature control | 11 Automatic mode |
| 3 Passenger's side temperature display | 12 Off |
| 4 Air outlet selector | 13 DUAL mode |
| 5 Windshield wiper de-icer | 14 Cooling and dehumidification function on/off |
| 6 Windshield defogger | 15 Driver's side temperature display |
| 7 Rear window and outside rear view mirror defoggers | 16 Air flows to the feet and the windshield defogger operates |
| 8 Outside air/recirculated air mode | |
| 9 Driver's side temperature control | |

■ Using the automatic mode

Press **11** to turn on the airflow and **9** to adjust the temperature.

■ Adjusting the temperature

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the **2** to adjust the temperature for the passenger side.

To cancel the dual mode, press **13**.

► with the Lexus Display Audio system



- 1 Driver's side temperature control
- 2 Driver's side temperature display
- 3 Outside temperature
- 4 Passenger's side temperature display
- 5 Passenger's side temperature control
- 6 Fan speed control
- 7 Air outlet selector
- 8 Windshield wiper de-icer
- 9 Windshield defogger
- 10 Outside air/recirculated air mode
- 11 Automatic mode
- 12 Off
- 13 DUAL mode
- 14 Cooling and dehumidification function on/off

■ Using the automatic mode

Press **11** to turn on the airflow and **1** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press **13** to turn the "DUAL" indicator off and then press **1**.

■ To individually adjust the driver's side and passenger's side temperature settings

Press **13** or **5** to turn the "DUAL" indicator on and then press **5** or **1**.

Hands-free System For Mobile Phone (without a navigation system or the Lexus Display Audio system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the mobile phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press  or .

2 Press  and say "Pair phone".

3 Press  and say a name*.

*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

4 Press  and say "Confirm" to display the passkey.

5 Enter the passkey shown on the display into the phone.

Refer to the mobile phone user's manual for mobile phone operation.

6 Once the voice guidance for registration completion is finished, press .

 : Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Calling by speed dial



1 Press .



2 Press the desired preset button.

3 Press .

■ Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the mobile phone.
Refer to the mobile phone user's manual for mobile phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Changing the registered name



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

■ Registering a speed dial



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

Audio System (without a navigation system or the Lexus Display Audio system)

Basic operation

► Type A



- 1 Power/Volume
- 2 Audio sources
 - AM•FM: AM radio/FM radio
 - SAT: Satellite radio
 - CD: CD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes


► Type B



- 1 Power/Volume
- 2 Audio sources
 - AM: AM radio
 - FM: FM radio
 - CD: CD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes


Radio

▶ Type A

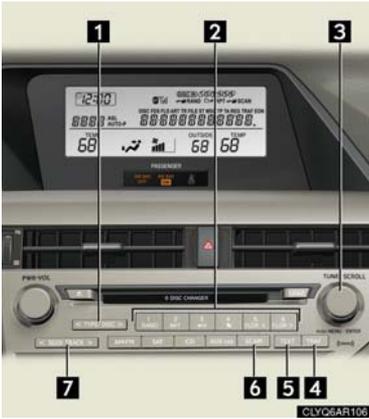

- 1 RBDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek

▶ Type B

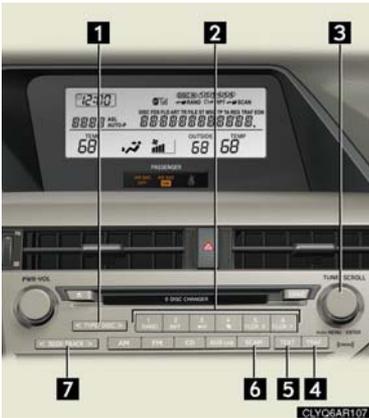

- 1 RBDS genre select
- 2 Station presets
- 3 Radio tuner
- 4 Traffic information
- 5 Text messages
- 6 Scanning radio stations
- 7 Seek


■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ CD player


■ Playing an audio CD

▶ Type A

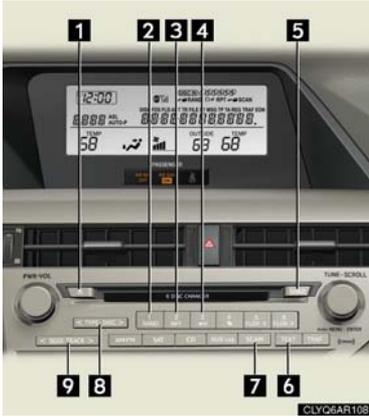

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Disc load
- 6 Text information
- 7 Search playback
- 8 Disc select
- 9 Track select/rewind/fast-forward


▶ Type B

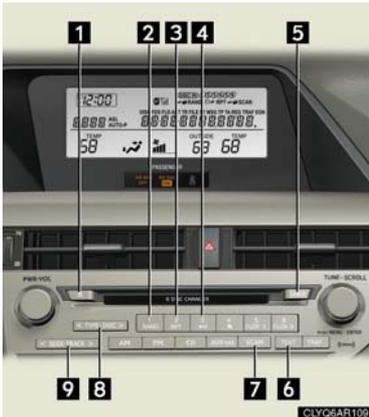

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Disc load
- 6 Text information
- 7 Search playback
- 8 Disc select
- 9 Track select/rewind/fast-forward


■ Playing a CD with MP3/WMA files

▶ Type A

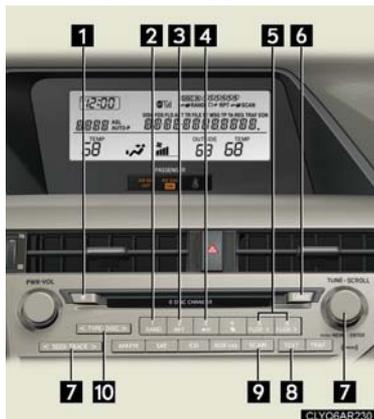

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Text information
- 9 Search playback
- 10 Disc select

▶ Type B

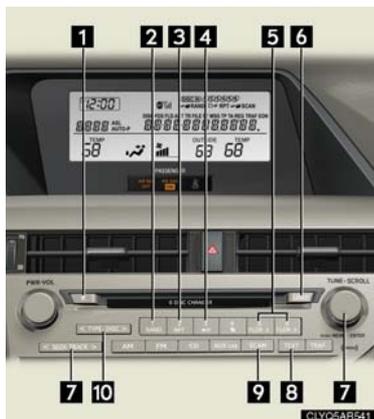

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Text information
- 9 Search playback
- 10 Disc select

■ Loading a CD


- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.


■ Operating an iPod

▶ Type A

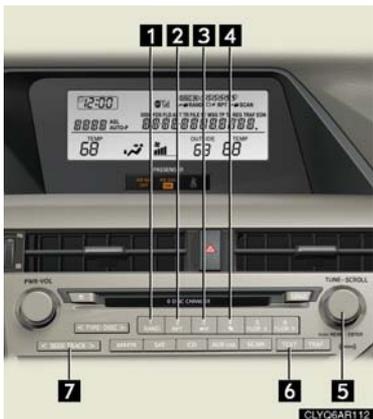

- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select


▶ Type B

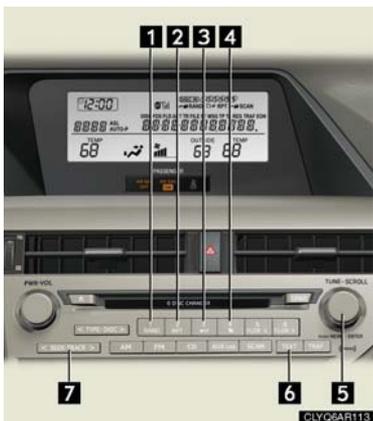

- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Song select
- 6 Text information
- 7 Song select

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

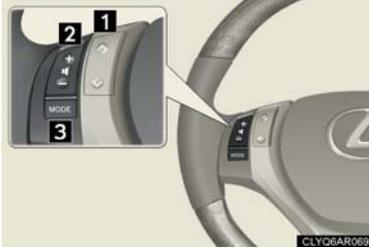

- 1** Radio mode: radio tuner
CD mode: disc/track/file (MP3/WMA) select
iPod mode: song select
- 2** Volume
- 3** Power on/change mode: press
Power off: press and hold

Air Conditioning System (without a navigation system or the Lexus Display Audio system)



- 1 Passenger side temperature display
- 2 Off
- 3 Cooling and dehumidification function on/off button
- 4 Dual mode button
- 5 Passenger side temperature control
- 6 Outside air/recirculated air mode button
- 7 Windshield defogger
- 8 Air outlet selector button
- 9 Driver side temperature control
- 10 Fan speed control button
- 11 Automatic mode button
- 12 Driver side temperature display

Using the automatic mode

Press **11** to turn on the airflow and **9** to adjust the temperature.

Adjusting the temperature

To simultaneously adjust the driver's side and passenger's side temperature settings

Press **4** to turn the "DUAL" indicator off and then press **9**.

To individually adjust the driver's side and passenger's side temperature settings

Press **5** or **4** to turn the "DUAL" indicator on and then press **9** or **5**.

Voice Command System (with navigation system)

Basic operation

NOTE: When inputting voice commands you must wait until after the beep to speak.



- 1 Press .
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

■ Command list

Set a Destination

Command	Action
"Find Nearby <POI category>"	Displays a list of <POI category*> near the current position.
"Enter an Address"	Enables setting a destination by saying the address.
"Go Home"	Displays the route to home.
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.
"Destination by Phone Number"	Enables setting a destination by saying the phone number.

*: For example; Gas stations, Restaurants, etc.

Use the Phone

Command	Action
"Call <name> <type>"	Calls made by saying a name from the phonebook. For example: Say "Call John Smith", "Call John Smith, mobile" etc.
"Dial <number>"	Calls made by saying the phone number. For example: Say "Dial 911", "Dial 5556667777" etc.
"International Call"	Calls international numbers by saying the phone number.

Play Music

Command	Action
"Play Artist <name>"	Plays tracks by the selected artist. For example: Say "Play artist <XXXXXX>"*
"Play Album <name>"	Plays tracks from the selected album. For example: Say "Play album <XXXXXX>"*
"Play Song <name>"	Plays the selected track. For example: Say "Play song Summertime", "Play song Concerto in A Major" etc.
"Play Playlist <name>"	Plays tracks from the selected playlist. For example: Say "Play playlist My Favorite Songs", "Play Playlist Classic Hits" etc.

*: Say the desired artist name or album name in the place of the "<>".

Get Information

Command	Action
"Traffic"	Displays the traffic incident list.
"Weather"	Displays weather information.
"Sports Scores"	Displays the sports list.
"Stock Quotes"	Displays the stocks list.
"Fuel Prices"	Displays the fuel prices list.
"Lexus Insider"	Displays the Lexus insider list.

Select audio mode

Command	Action
"Radio", "AM", "FM", "Satellite radio", "Disc", "Auxiliary", "Bluetooth* audio", "iPod", "USB audio"	Change the audio mode.
"Audio on"	Turns the audio system on.
"Audio off"	Turns the audio system off.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Climate/air conditioning system command

Command	Action
"Automatic climate control"	Turns air conditioning system on and off.
"Warmer"	Turns temperature up.
"Cooler"	Turns temperature down.

"Select audio mode" and "Climate/air conditioning system command" are enable when expanded voice commands are turned "On". Refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



- 1 Pull up the lever to release the lock, and lift the armrest.



- 2 Open the cover.




- 1 USB port
- 2 AUX port

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

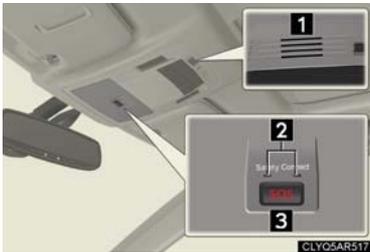

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally push the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can push the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.78)**

- Automatic collision notification^{*1}
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced Roadside assistance

● **Apps**

Apps is a service that enables the usable contents of a mobile phone to be displayed on and operated from the navigation screen. Before Apps can be used, a few settings need to be performed.

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● XM[®] Sports and Stocks^{*2}

XM[®] Sports and Stocks is a service included with XM[®] satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

● XM Fuel Prices^{*3}

XM Fuel Prices is a service included with an XM Travellink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

● XM NavWeather[™]*3

The subscription-based XM NavWeather[™] service allows the navigation system to display weather information on the map.

● XM[®] NavTraffic^{*3}

The subscription-based XM[®] NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

● Voice Command

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM[®] satellite radio subscription.

*3: Available via separate XM[®] subscription(s).

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-877-515-3987 [U.S.A.] or 1-877-438-9677 [Canada]), or push the "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic[®] and XM NavWeather[™] require separate XM[®] subscription(s). XM[®] Sports and Stocks is available with an XM[®] Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM[®] subscription(s) to continue receiving these services.

Door Locks

Locking the vehicle from inside



► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switches

Operates all door locks/unlocks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Using the entry function or wireless remote control (→P10, 11)

Rear door child-protector lock




Pushing down the switch prevents the rear doors from being opened from the inside.

- 1 Unlock
- 2 Lock

Always set the child protector locks when children are seated in the rear seat.

Power Windows

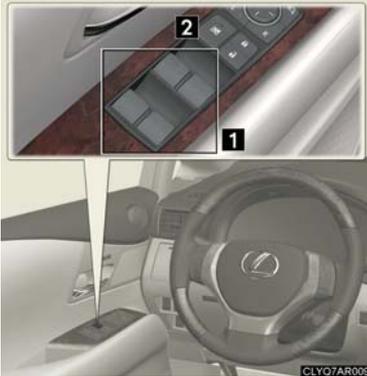

1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of passenger and rear window switches.

Moon Roof (If Equipped)

Opening and closing

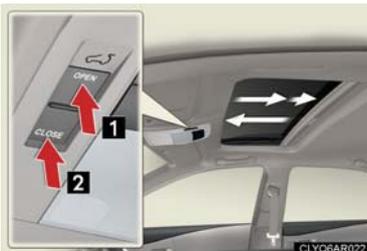

1 Opens


The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

To stop partway, press the switch lightly.

Tilt up and down

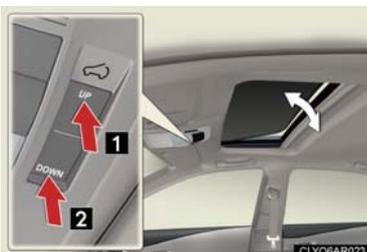

1 Tilts up


2 Tilts down

To stop partway, press the switch lightly.

Fuel Tank Cap



1 Press the fuel filler door opener.

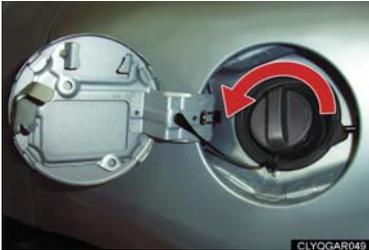

2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Back Door

Back door opener button



To open the back door, press the opener button.

Power back door switches



► Instrument panel

To open or close the back door, press and hold the switch.



► Back door


To close the back door, press the switch.

► Wireless remote control (→P10)

■ Back door closer

If the back door is left slightly open, it will close automatically.

■ Turning the power back door system on and off

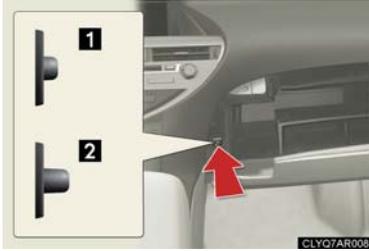

To disable the system, turn off the main switch in the glove box.

- 1** On
- 2** Off

When the power back door system is disabled, the back door cannot be opened using the wireless remote control or power back door switch.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



Electric power steering system warning light



(Flashes)

Pre-collision system warning light*¹



SRS warning light



(Comes on)

Slip indicator



(U.S.A.)

ABS warning light



(Blinking and then continuously on)

Tire pressure warning light



(Canada)

Follow the correction procedures.



Open door warning light



(On the center panel)

Front passenger's seat belt reminder light



Low fuel level warning light



Master warning light



(On the instrument panel)
Driver's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light*²

For further information, refer to the Owner's Manual.

See the Owner's Manual



Turn signal indicator



VSC off indicator



Headlight high beam indicator



Eco Driving Indicator Light



Headlight indicator (U.S.A.)



SRS airbag on-off indicator ^{*1}



Tail light indicator (Canada)



SRS airbag on-off indicator ^{*1}



Front fog light indicator



All-wheel drive lock indicator (AWD models only)



Cruise control indicator



BSM indicator ^{*1}



Radar cruise control indicator ^{*1}



BSM outside rear view mirror indicators ^{*1}



Intuitive parking assist indicator ^{*1}



"ECT SNOW" indicator



Slip indicator



Pre-collision system warning light ^{*1,3}

(Flashes)

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: It also turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature (the status of the full-sized spare tire, if equipped, is also checked). Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

^{*3}: The light comes on when the system is turned off. The light flashes faster than usual to indicate that the system is operating.

What to do if ...

If the electronic key does not operate properly

Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key (driver's door only). The mechanical key is stored inside the electronic key.

- 1 Locks
- 2 Unlocks

Starting the engine



- 1 Ensure that the shift lever is in P and depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2013 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.