

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

## Overview

### Topic 1

## Entering and Exiting

- Keys ▶ P.7
- Smart Access System ▶ P.9
- Theft Deterrent System ▶ P.10



### Topic 2

## Before Driving

- Front Seats ▶ P.13
- Rear Seats ▶ P.15
- Head Restraints ▶ P.15
- Seat Position  
Memory System ▶ P.17
- Seatbelts ▶ P.19
- Outside Rear View  
Mirrors ▶ P.20
- Anti-glare Inside Rear  
View Mirror ▶ P.20
- Steering Column ▶ P.21

### Topic 3

## When Driving

- Starting ▶ P.23
- Automatic Transmission ▶ P.24
- Parking Brake ▶ P.25
- Turn Signal Lever ▶ P.25
- Emergency Flasher Switch ▶ P.26
- ECT Switch ▶ P.26
- Electronic Modulated Air  
Suspension ▶ P.27
- Traction Control  
Off Mode ▶ P.27
- Cruise Control ▶ P.28



- ● Dynamic Radar/Laser Cruise  
Control ▶ P.29
- ● Multi-information Display ▶ P.31
- ● Lexus Park Assist System ▶ P.32
- ● Rear View Monitor ▶ P.32

Specifications, features, equipment, technical data, and options are based upon information available at the time of printing, are subject to change without notice, may differ from region to region. Optional equipment shown may not be available separately or in all regions.



### Topic 4

## Rain and Night Driving

- Headlights ▶ P.35
- Fog Lights ▶ P.35
- Headlight Cleaner ▶ P.36
- Windshield Wipers and Washers ▶ P.36
- Rear Window and Outside Mirror Defoggers ▶ P.37
- Instrument Panel Light Control ▶ P.37

### Topic 5

## Driving Comfort

- Audio System ▶ P.39
- Climate Control ▶ P.44
- Seat Heater Switches ▶ P.46
- Climate Control Seat Switches ▶ P.46
- Refreshing Rear Seat Switches ▶ P.47
- Sun Shades ▶ P.47
- Console Boxes ▶ P.48
- Cup holders ▶ P.49



- Cigarette Lighter and Ashtray ▶ P.50
- Glove Box ▶ P.50
- Trunk storage extension ▶ P.51
- Cool box ▶ P.51



### Topic 6

## Opening and Closing


- Doors ▶ P.53
- Moon roof ▶ P.55
- Fuel Tank Cap ▶ P.56
- Hood ▶ P.57
- Trunk ▶ P.58

**What to do if ...** Responding to warning/indicator lights and other problems that may arise.

**Customizing Your Lexus** A list of features that can be customized according to owner preference.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

# Instrument Panel

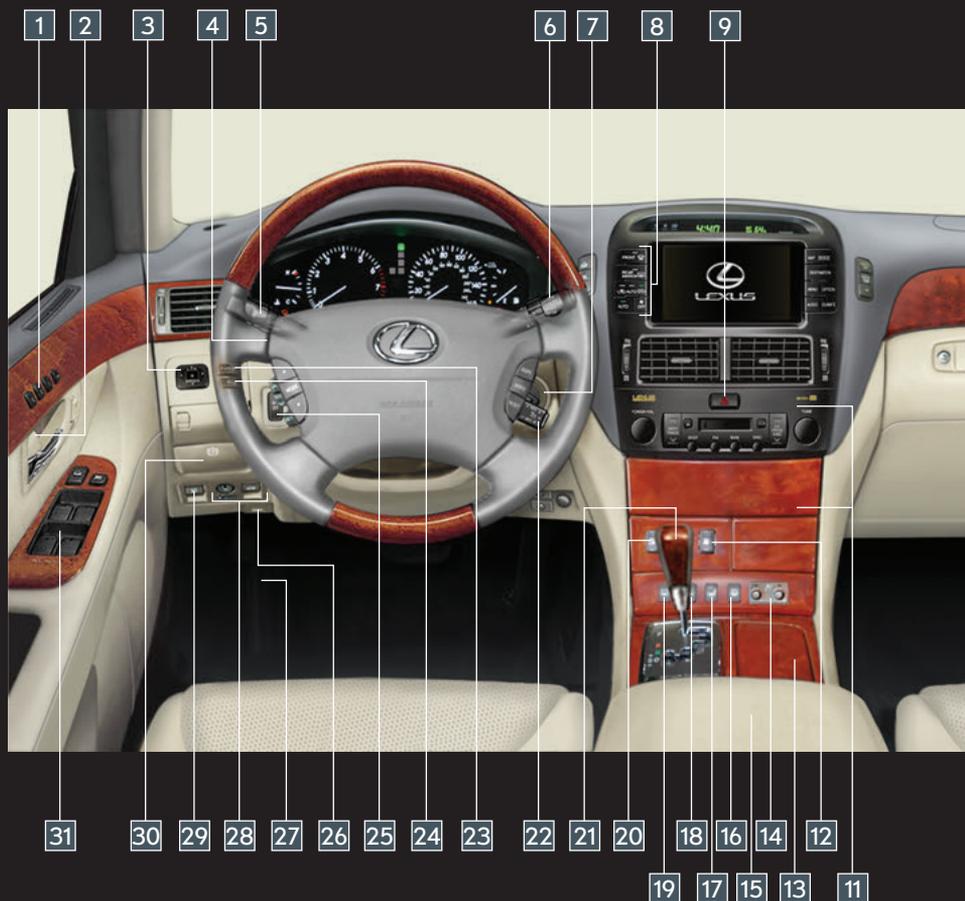



1	Seat position memory switch	P.17
2	Door lock button	P.53
3	Outside rear view mirror control switch	P.20
4	Instrument panel light control switch	P.37
5	Light switch/turn signal lever	P.35
6	Windshield wipers and washer switch	P.36
7	Ignition switch	P.23
8	Climate control	P.44
9	Emergency flasher switch	P.26
10	Glove box	P.50
11	Audio system	P.39
12	Driving pattern selector switch	P.26
13	Cigarette lighter and ash tray	P.50
14	Seat heater/Climate control seat switch	P.46
15	Cupholder	P.49
16	Headlight cleaner switch	P.36
17	Rear seat and rear headrest return switch*	P.15
18	Traction control off switch	P.27
19	Sun shade switch	P.47
20	Damping mode selector	P.27
21	Height control switch*	P.27
22	Cruise control switch	P.28
23	Rear view mirror folding switch	P.20
24	Lexus park assist system switch*	P.32
25	AFS off switch	P.35
26	Hood opener	P.57
27	Parking brake	P.25
28	Trunk lid opener	P.58
29	Fuel lid opener	P.56
30	Parking brake release lever	P.25
31	Power window switches	P.54

\*: If equipped

## Rear Armrest



- |           |   |      |
|-----------|---|------|
| <b>32</b> | Rear seat control switches*             | P.15 |
| <b>33</b> | Refreshing rear seat switches*          | P.47 |
| <b>34</b> | Rear air conditioning control switches* | P.46 |
| <b>35</b> | Cup holders                             | P.49 |
| <b>36</b> | Sun shade switches                      | P.47 |
| <b>37</b> | Rear seat heater switches               | P.46 |
| <b>38</b> | Rear climate control seat switches*     | P.46 |
| <b>39</b> | Audio rear control switches*            | P.40 |

\*: If equipped



**Topic 1**

# Entering and Exiting

- Keys ..... 7
- Smart Access System..... 9
- Theft Deterrent System..... 10



## Keys

### Keys

Vehicles equipped with smart access system (Type A)




- 1 Mechanical keys
- 2 Key number plate
- 3 Master keys
- 4 Valet key
- 5 Mechanical flat key
- 6 Engine start flat key

Vehicles not equipped with smart access system (Type B)



- 1 Master keys (black)
- 2 Valet keys (gray)
- 3 Key number plate
- 4 Flat key

## ■ Wireless remote control

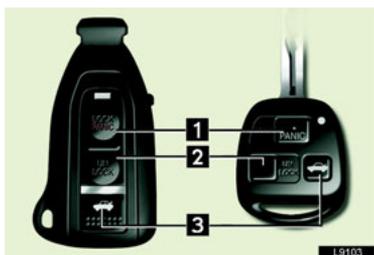

- 1** Lock button: Locks doors
- 2** Unlock button: Unlocks doors  
Push the button unlocks the driver's door.  
Push it again within 3 seconds unlocks all the doors.
- 3** Trunk button: Unlocks trunk  
Keep the button pushed for about 1 second.

Holding down the LOCK button will sound an alarm.

Holding down the UNLOCK button will open the windows and moon roof.



## Smart Access System

If the key is in your bag or pocket, it is not necessary to take it out in order to get in and out of the vehicle.

### ■ Entering the vehicle




Grasp the handle to unlock the door.

### ■ Leaving the vehicle



Push the door lock button to lock the door.

### ■ Opening the trunk

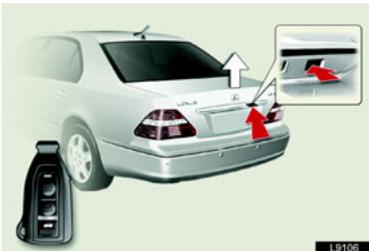

Push the trunk release button to unlock the trunk.

The mechanical key can also be used to lock and unlock the doors.

## Theft Deterrent System

This system is designed to help protect your vehicle from theft.

### Engine immobilizer



This system only allows the engine to start if a registered key is used.


This deters theft caused by the use of unauthorized keys.

### Alarm



Forcibly unlocking the doors, trunk, or hood without the key or wireless remote control causes the horn to blow and the exterior lights to flash, alerting those in the surrounding area.

### Steering lock

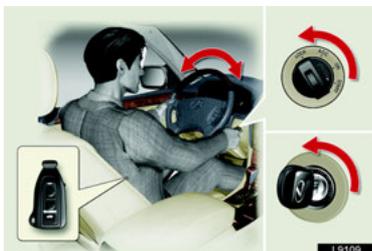

The steering wheel is locked when the ignition switch is turned to OFF position.

If the security indicator light is flashing when you leave the vehicle, the engine immobilizer and alarm are set.

To stop the alarm, unlock the doors or trunk with the key or wireless remote control or turn the ignition switch to the ON position.





## Topic 2

# Before Driving

Front Seats.....	13
Rear Seats.....	15
Head Restraints .....	15
Seat Position Memory System .....	17
Seatbelts.....	19
Outside Rear View Mirrors .....	20
Anti-glare Inside Rear View Mirror.....	20
Steering Column .....	21



## Front Seats

### ■ Adjusting seat position



- 1 Moves seat forward
- 2 Moves seat back  
Drivers seat only:  
Headrest moves upward and downward when the seat moves forward and backwards.

### ■ Adjusting seatback angle



- 1 Incline
- 2 Recline

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat
- 3 Adjusts the cushion length (driver's seat only)

## ■ Adjusting firmness

### Driver's seat



The lumbar support can be adjusted.

#### Upper portion

- 1 Firmer
- 2 Softer

#### Lower portion


- 3 Firmer
- 4 Softer

### Passenger's seat



- 1 Firmer
- 2 Softer

## ■ Adjusting the front passenger's seat from the driver's side

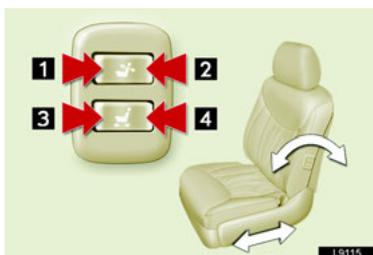

#### Seat back angle

- 1 Incline
- 2 Recline

#### Seat position

- 3 Moves seat forward
- 4 Moves seat backward



## Rear Seats

### Adjusting seat position



- 1 Moves seat forward
- 2 Moves seat backward


### Returning the rear seats and rear head restraints from the front seats



The rear seats move backward and the rear head restraints move downward while the switch is being pushed.


## Head Restraints

### Height adjustment for the front seat

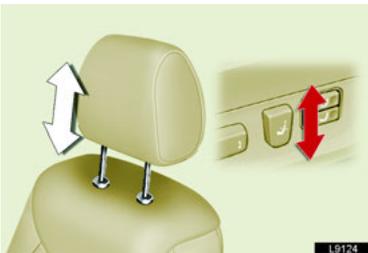


Move the control switch in the desired direction.

### ■ Angle adjustment for the front seat

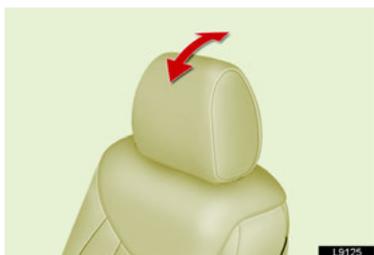


Move Forward and backward.

### ■ Out board rear seats (powered type)

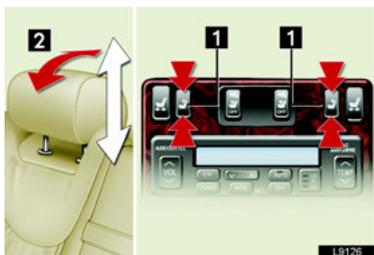


- 1 Height adjustment
- 2 Angle adjustment

### ■ Outboard rear seats (manual type)

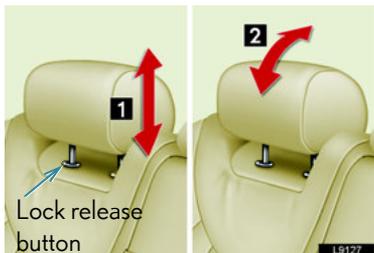

- 1 Height adjustment
- 2 Angle adjustment  
Push and hold the lock release button when lowering.

### ■ Center rear seat

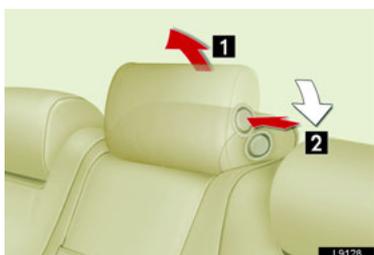

- 1 Pull on the top to raise.
- 2 Push the button to return.



## Seat Position Memory System

With the push of a button, you can adjust the seats to a set customized position.

The steering column and outside rear view mirrors are adjusted along with the driver's seat.

Positions can be conveniently recorded for drivers and frequent passengers.

### Setting positions for the front seats



While holding down the SET button, push and hold one of the memory buttons (1, 2, or 3) until you hear a beep.

### Recalling positions for the front seats



Push one of the memory buttons (1, 2, or 3).

### Linking with the electronic key (Driver's seat only)



While holding down the desired memory button, push and hold either the LOCK or UNLOCK button on the wireless remote control until you hear a beep.

Linking with the key causes the seat to be adjusted when the doors are opened using either the smart access function or the wireless remote control. The steering column and outside rear view mirrors are adjusted when the ignition switch is turned to the ON position.

## Setting positions for the rear seats



Push and hold the "SET" button until you hear a beep.

## Recalling positions for the rear seats



Keep pressing the "M" button until a beep sounds.

## Door opening linked seat sliding function for rear seats




The rear seat automatically moves backward when the rear door is opened if the seat is adjusted to a forward position.

- 1 Cancel  
Push the "C" button again will reactivate.




## Seatbelts

### ■ Adjusting shoulder strap height (Front seats only)

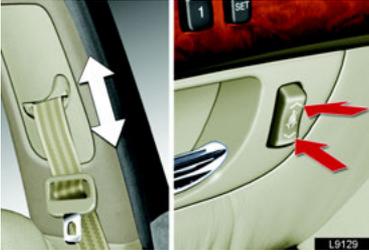

Press the control switch in the desired direction.

### ■ Seat belt comfort guide (Outboard rear seats only)

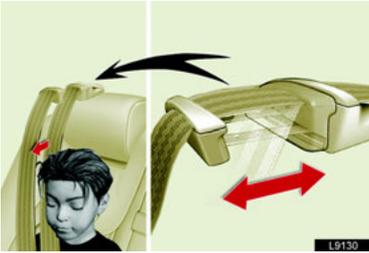

Slide the comfort guide forward if the seatbelt comes in contact with a passenger's face.

## Outside Rear View Mirrors

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

### Adjustment




- 1 Use the master switch to select which mirror to adjust (L or R).
- 2 Adjust the angle using the control switch.

Auto tilt:

Move selector to "R" or "L" Mirrors automatically tilt down when shifting into reverse. To deactivate, move selector to middle position.

### Folding rear view mirrors

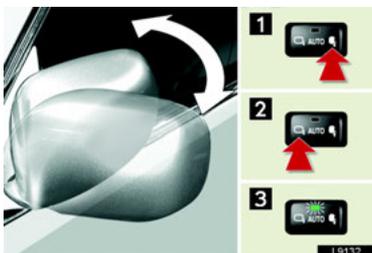

- 1 Folds the mirror
- 2 Extends the mirror
- 3 Automatic

## Anti-glare Inside Rear View Mirror

The auto-dimming function reduces glare from the headlights of vehicles behind you.

### Setting AUTO mode




Push the AUTO button.

The indicator light comes on when AUTO mode is selected.




## Steering Column

### Raising and lowering

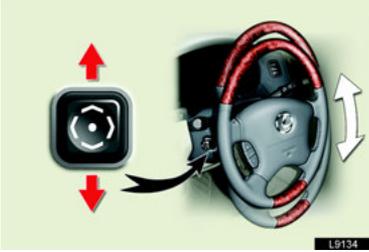

### Forward / back

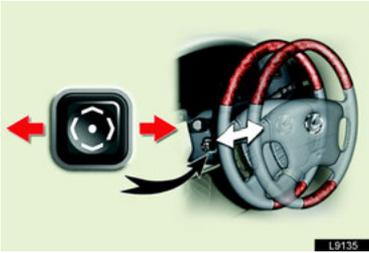

When the ignition switch is off, the steering column moves to provide easy exit and entry. When the ignition switch is turned on, the steering column returns to its previously set position.



**Topic 3**

# When Driving

- Starting ..... 23
- Automatic Transmission..... 24
- Parking Brake..... 25
- Turn Signal Lever..... 25
- Emergency Flasher Switch..... 26
- ECT Switch..... 26
- Electronic Modulated Air Suspension ..... 27
- Traction Control Off Mode..... 27
- Cruise Control ..... 28
- Dynamic Radar/Laser Cruise Control..... 29
- Multi-information Display ..... 31
- Lexus Park Assist System..... 32
- Rear View Monitor ..... 32



## Starting

### Starting the engine



- 1 Make sure the parking brake is engaged and the selector lever is in "P".




- 2 Depress the brake pedal.
- 3 Push the ignition switch and turn to START position.

### Turning the engine off



- 1 Depress the brake pedal and move the selector lever to "P".
- 2 Turn the ignition switch to ACC or OFF position.

### Ignition switch

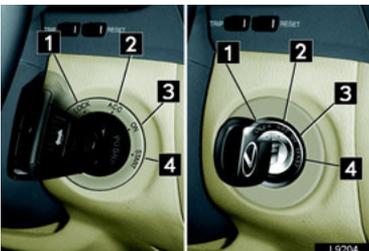

- 1 LOCK
- 2 ACC  
The audio system and other accessories can be used.
- 3 ON
- 4 START

## Automatic Transmission

### Shift range positions



- P Parking and engine starting
- R Reverse position
- N Neutral position
- D Normal driving position
- S Sequential mode driving


Switching out of "P" mode can only be performed while the brake pedal is depressed.

### Sequential mode

Sequential mode allows the driver to select gears based on driving conditions.



- 1 Move the shift lever to the "S" position

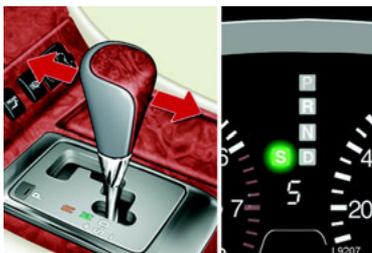


- 2 **Upshifting** :move the lever to the "+" side  
**Downshifting** :move the lever to the "-" side  
1<sup>st</sup> through 6<sup>th</sup> gear can be selected.

The selected shift range is displayed on the instrument cluster.

**NOTE:** Downshifting increases power going uphill, or increases engine braking going downhill or stopping. During normal driving conditions, always drive in "D" position for best fuel economy.



## Parking Brake

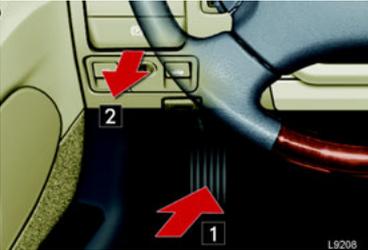

- 1** Set  
Firmly depress the brake pedal.
- 2** Release  
Pull the lever.

## Turn Signal Lever

### ■ Signalling right and left turns



- 1** Left turn
- 2** Right turn

Lane changes can be signaled by moving and holding the lever partway.

## Emergency Flasher Switch

Vehicles without navigation system



All the turn signal lights will flash.


The emergency flashers will work even when the engine is off.

Vehicles equipped with navigation system



## ECT Switch

Use to select a mode suitable to driving and road conditions.

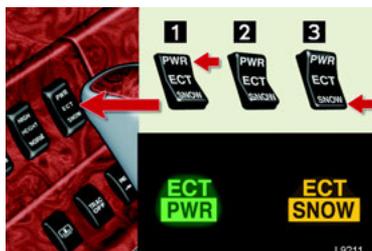


- 1 "Power" mode  
For more powerful acceleration and sporty driving.
- 2 "Normal" mode  
For ordinary driving.
- 3 "Snow" mode  
For slippery road surfaces and slower acceleration.

The indicator light comes on when in "Power" or "Snow" mode.



## Electronic Modulated Air Suspension


### Vehicle height adjustment

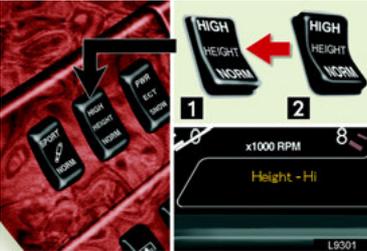

- 1 High
- 2 Normal

### Damping mode selection

Adjusts the damping effect on the shock absorbers to provide either a sportier (firmer) or more comfortable (softer) ride.

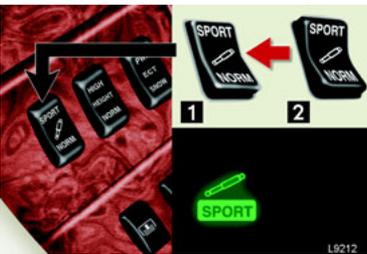

- 1 "Sports" mode  
For driving at high speeds or on winding roads.
- 2 "Normal" mode  
For ordinary driving.

The indicator light comes on when in "Sports" mode.

## Traction Control Off Mode

This switch turns off the traction control system.  
Use this function if the wheels get stuck in snow, mud, etc.



Pressing the "TRAC OFF" switch disables the traction control function and causes the indicator light to come on.


Press the switch again to turn the system back on.

## Cruise Control

The cruise control allows the vehicle to be driven at a fixed speed without using the accelerator pedal.


Use for highway driving or when traveling at the same speed for long periods of time.

### Setting the speed

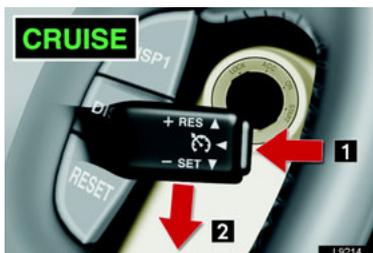

- 1 Push the "ON-OFF" button  
The system will turn on.
- 2 Push the lever down while traveling at the desired speed  
This sets the vehicle at that speed.


### Canceling the cruise control

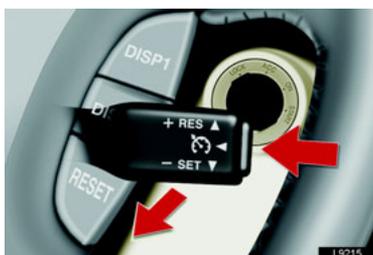

Pull the lever to temporarily cancel the preset speed.

Push the "ON-OFF" button to turn the system off.

### Resetting the speed

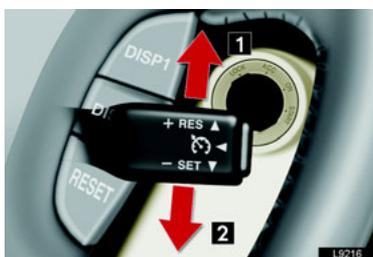

Using the lever

- 1 **To increase speed** :raise the lever
- 2 **To decrease speed** :lower the lever  
Release the lever when the desired speed is reached.

Using the acceleration/brake pedal

Push the lever down after accelerating/ decelerating to the desired speed.


Depressing the brake pedal cancels the preset speed. To return to the preset speed raise the lever.



## Dynamic Radar/Laser Cruise Control


Choose between vehicle-to-vehicle distance control mode and conventional (fixed speed) cruise control mode.

### Display indicator

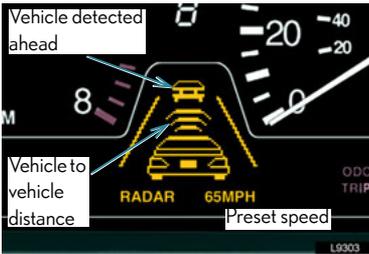


The multi-information display indicates the various cruise control settings.

### Vehicle distance control mode

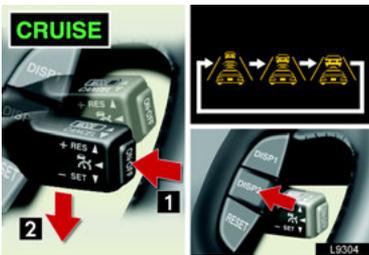


- 1 Push the "ON-OFF" button
  - 2 Push the lever down while traveling at the desired speed.
- One of three vehicle distance can be selected using the "DISP2" button.

### Conventional (fixed speed) cruise control mode

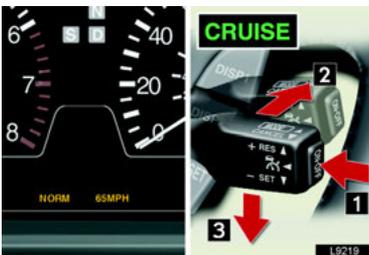

- 1 Push the "ON-OFF" button
- 2 Push the lever forward and hold for approx. 1 second.
- 3 Push the lever down when traveling at the desired speed.

## ■ Canceling

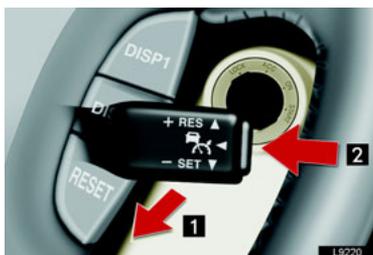

- 1 Pull the lever to temporarily cancel the preset speed.
- 2 Push the “ON-OFF” button to turn the system off.

## ■ Resetting the speed

Using the lever

**To increase speed** :raise the lever

**To decrease speed** :lower the lever

Using the acceleration/brake pedal

Push the lever down after accelerating/decelerating to the desired speed.

Depressing the brake pedal cancels the preset speed. To return to the preset speed, raise the lever.


When traveling in vehicle distance control mode and there is no vehicle detected ahead, the preset cruising speed is maintained.



## Multi-information Display


The following information concerning your vehicle is displayed.

### Display information

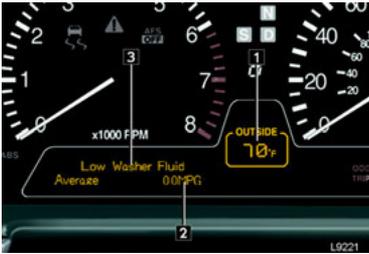

- 1** Graphic information
  - Outside temperature display
  - Compass display (if equipped)
  - Dynamic radar/laser cruise control
  - Lexus Park assist system
- 2** Cruise information
  - Available driving distance
  - Average fuel consumption
  - Current fuel consumption
  - Average fuel consumption after being refueling
  - Driving distance after being refueled
  - Elapsed time
  - Average vehicle speed
  - Blank
- 3** Warning message

### Changing display information

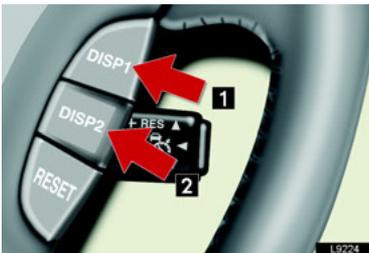

The display changes each time the button is pressed.

- 1** Changes cruise information
- 2** Changes graphic information\*  
\* Push and hold for 1 to 2 second.


When using the Lexus park assist system or dynamic radar cruise control, the appropriate display is shown on the screen.

Any problems (malfunctions) arising in the vehicle's systems are indicated on the warning display.

## Lexus Park Assist System

This system uses a screen display and alarm to inform the driver of obstacles near the vehicle when parking or driving at low speed.


### Turning the system on and off

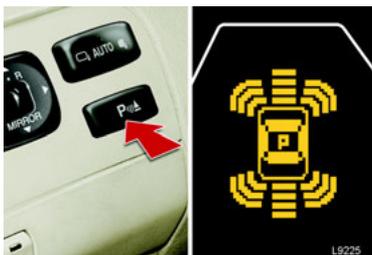

Press the Lexus park assist switch.

The indicator light will come on.

### Screen display

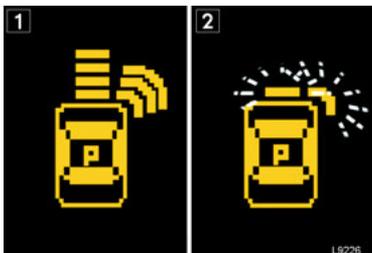

Distance to the obstacle is shown number of bars.

- 1 1.0 ft. (37.5 cm) or more
- 2 0.8 ft. (25 cm) or less  
Indicator bar flashes

## Rear View Monitor

The rear view monitor assists the driver when backing up or parking by displaying an image of the rear of the vehicle.



Information is displayed when the selector lever is in the "R" position.






**Topic 4**

# Rain and Night Driving


- Headlights..... 35
- Fog Lights..... 35
- Headlight Cleaner ..... 36
- Windshield Wipers and Washers ..... 36
- Rear Window and Outside Mirror
- Defoggers..... 37
- Instrument Panel Light Control ..... 37



## Headlights

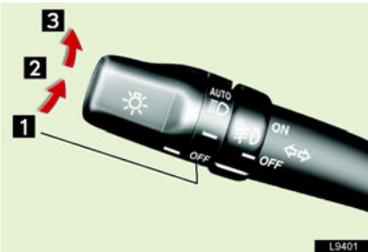

- 1 Parking lights, license plate lights, tail lights
- 2 Parking lights, license plate lights, tail lights, and headlights
- 3 Headlights come on automatically according to the surrounding light level

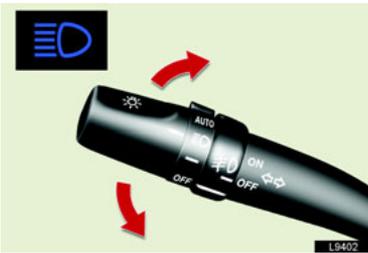


Push the lever forward to activate the high beams.  
Pull and hold the lever to temporarily activate the high beams.

## Adaptive Front Lighting System (AFS)



The headlights are set to automatically move left or right to match the turning angle of the vehicle.  
Press the "AFS OFF" button to cancel the system.  
The indicator light comes on when the system is off.

## Fog Lights

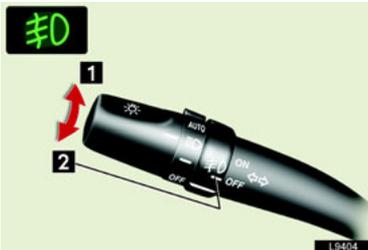

- 1 On
- 2 Off

## Headlight Cleaner



Can be used when the headlights are on.

## Windshield Wipers and Washers

### Variable intermittent wipers



- “MIST” Single wipe
- “INT” Intermittent operation (interval can be adjusted by twisting the knob)
- “LO” Low speed operation
- “HI” High speed operation

Push the button to spray washer fluid.

### Rain-sensing windshield wipers



- “MIST” Single wipe
- “AUTO” Automatic operation (sensitivity can be adjusted by twisting the knob)
- “LO” Low speed operation
- “HI” High speed operation

Push the button to spray washer fluid.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus



## Rear Window and Outside Mirror Defoggers

Vehicles with Rear Air Conditioning

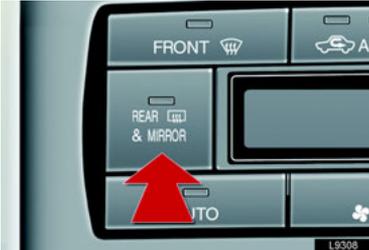

Press the switch to defog the outside mirrors and rear window.

Press again to cancel.

Vehicles without Rear Air Conditioning



Vehicles with Navigation System



## Instrument Panel Light Control



- 1** To brighten
- 2** To dim



## Topic 5

# Driving Comfort

Audio System .....	39
Climate Control.....	44
Seat Heater Switches.....	46
Climate Control Seat Switches .....	46
Refreshing Rear Seat Switches .....	47
Sun Shades .....	47
Console Boxes.....	48
Cup Holders.....	49
Cigarette Lighter and Ashtray .....	50
Glove Box .....	50
Trunk Storage Extension.....	51
Cool Box .....	51



# Audio System

## Basic Operation

With Navigation System



Without Navigation System



- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1 Function switch display</li> <li>2 Changes screen display</li> <li>3 Mode selectors</li> </ul> | <ul style="list-style-type: none"> <li>4 Power ON/OFF, volume adjustment</li> <li>5 Adjusts sound quality</li> <li>6 Adjusts sound level</li> </ul> |
|---|---|

L9554

• Switching modes



**Rear switches**


Some audio features can be controlled from the rear seat.



- 1 Volume adjustment
- 2 Radio mode: Selects radio station  
Tape mode: Selects other side of cassette tape  
CD mode: Selects desired CD
- 3 Radio mode: tuner  
Tape mode: fast forward / rewind  
CD mode: Selects desired track or disc
- 4 Power ON / OFF
- 5 Mode Selector / Child lock

**Audio remote control (steering switches)**

It is possible to operate the audio system without removing your hands from the steering wheel.

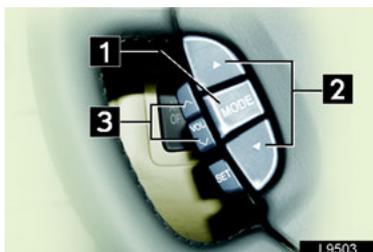

- 1 Switch modes
- 2 RADIO mode: select station / tuner  
TAPE mode: fast forward / rewind  
CD mode: select disc or track
- 3 Volume adjustment

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Radio mode

With Navigation System



- 1 Enter or select preset stations
- 2 Receive traffic information
- 3 Display - radio text messages
- 4 Tuning
- 5 Receive radio text messages

Without Navigation System



• Entering station presets

- 1 Turn the power on
- 2 Switch to radio modes
- 3 Turn  or push  to select the desired station
- 4 Hold down one of the buttons "1" through "6" until you hear a beep.

## Tape mode

### With Navigation System



### Without Navigation System



- 1 Rewind
- 2 Fast forward
- 3 Reverse playback direction
- 4 DOLBY NR ON/OFF
- 5 Skip to next track
- 6 Repeat current track
- 7 Eject

## CD mode

### With Navigation System




### Without Navigation System



- 1 Select disc
- 2 Repeat current disc
- 3 Random playback (all discs)
- 4 Play beginning of the first track of each disc
- 5 Fast forward
- 6 Repeat current track
- 7 Random playback (current disc only)
- 8 Play beginning of each track on current disc
- 9 Rewind
- 10 Select track
- 11 Load disc
- 12 Eject
- 13 Random playback



• Loading CD(s)

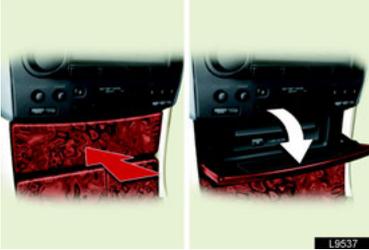

• Loading a single CD


- ② Press the **LOAD** button.  
“WAIT” appears on the display.
- ③ When the “WAIT” display changes to “LOAD”, insert the disc.

- ① Open the CD door

• Loading multiple CDs

- ② Hold down **LOAD** until you hear a beep.  
“WAIT” appears on the display.
- ③ When the “WAIT” display changes to “LOAD”, insert one disc.
- ④ Once the disc is inserted, “WAIT” appears again on the display.
- ⑤ Repeat steps ③ and ④.


## Climate Control

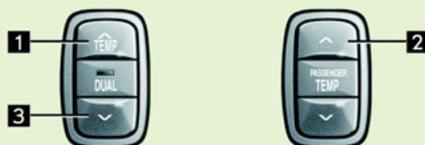

With Navigation System



Without Navigation System

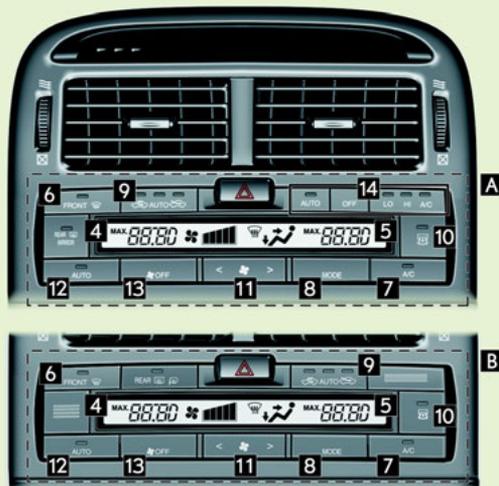

- A** With rear air conditioning control
- B** Without rear air conditioning control

L9555

Entering and Exiting

Before Driving

When Driving

Rain and  
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing  
Your Lexus



- 1 Drivers side temperature control
- 2 Passengers side temperature control
- 3 Switch to "DUAL" mode
- 4 Driver side temperature display
- 5 Passenger side temperature display
- 6 Wind shield defog / defrost
- 7 "A/C" switch
- 8 Air flow controls
- 9 Air intake controls
- 10 Swing center vent
- 11 Fan speed controls
- 12 Switch to "AUTO" mode
- 13 "OFF" button
- 14 Rear air conditioning control switches (if equipped)

### ■ "AUTO" mode

---

- 1 Push the "AUTO" button.
- 2 Adjust the temperature with the "TEMP" buttons.

### ■ "DUAL" mode


---

In "DUAL" mode, driver and passenger side temperature settings can be controlled separately.

- 1 Push the "DUAL" button.
- 2 Adjust the driver side temperature with the "TEMP" buttons, and the passenger side temperature with the "PASSENGER TEMP" buttons.

### ■ Swinging the center vents


---

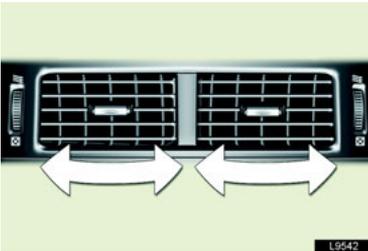

Push  or .

Pushing the "DUAL" button changes movement of the vanes when no passengers in the front seat.


## Rear air conditioning controls (if equipped)

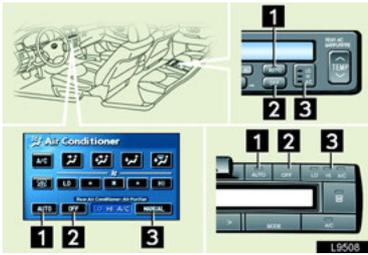

- 1 Switch to "AUTO" mode
- 2 "OFF" button
- 3 Change air flow mode


## Seat Heater Switches

Front seats

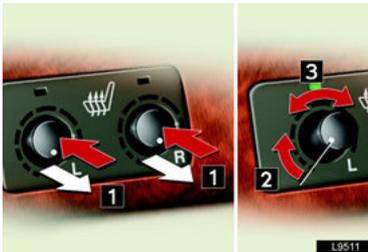

- 1 Activate / inactivate
- 2 Turn on
- 3 Adjusting


Rear seats

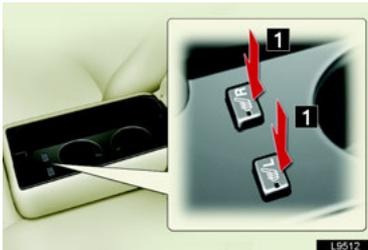

- 1 ON / OFF  
Push the button.

## Climate Control Seat Switches


Front seats

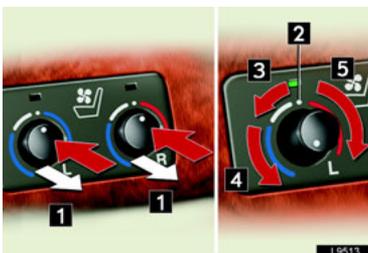

- 1 Activate / inactivate
- 2 Turn on
- 3 Adjusting



## Rear seats

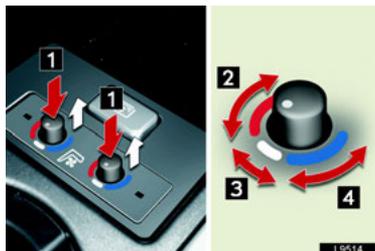

- 1 Activate / inactivate
- 2 Turn on
- 3 Adjusting

## Refleshing Rear Seat Switches



Built-in lumbar vibrators reduce lumbar fatigue for the occupant.

- 1 ON / changes vibration speed
- 2 OFF

## Sun Shades

### Rear electric sun shade



Raise or lower, push the button.

- 1 From front
- 2 From rear


### Manual sun shade (if equipped)



Pull the tab and hook.


## Console Boxes

### Over head console box

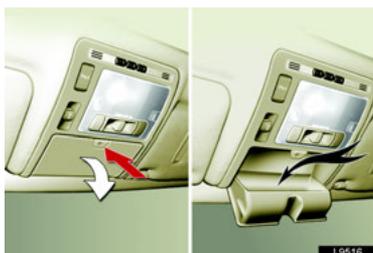

Push the lid gently to open and close.

### Rear console box

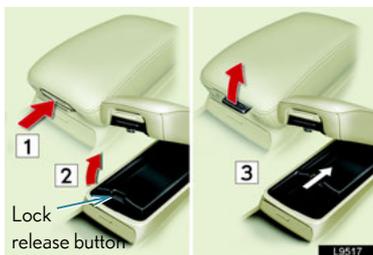

Upper box

- 1 Push the tab to release the lock.
- 2 Lift the armrest to open.

Lower box

- 3 Push the lockrelease button and side open.

There is an accessory 10 A / 12 V power outlet located inside the rear consol box.





## Cup Holders

Front




Push the cup holder gently to extend.

Rear (With powered seats)




Release the lock and lift the armrest.

Rear (with manual seats)

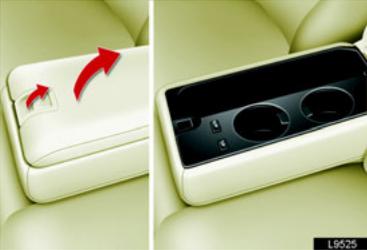

## Cigarette Lighter and Ashtray

Front

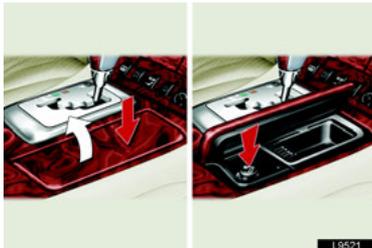


To remove the ashtray, raise the lid and pull it out.

Rear



To remove the ashtray, raise the lid and pull it out.

## Glove Box

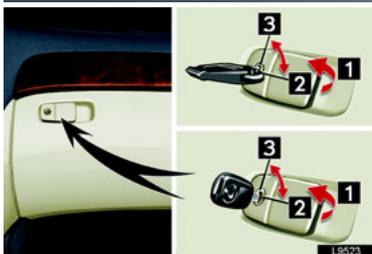

- 1 Open
- 2 Lock
- 3 Unlock

Entering and Exiting

Before Driving

When Driving

Rain and  
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing  
Your Lexus



## Trunk Storage Extension



Pull down the armrest in the rear seat.

- 1 Open
- 2 Lock
- 3 Unlock



Open the inner lid

- 1 From Passenger compartment side
- 2 From trunk side

## Cool Box

Keeps canned drinks cool whenever the rear air conditioning system is on.



Pull down the armrest in the rear seat.

- 1 Open the inner lid.
- 2 Pull the lever to open.

To use as luggage compartment



Close the cool air intake lid to turn off the cool box system.



## Topic 6


# Opening and Closing

Doors.....	53
Moon Roof.....	55
Fuel Tank Cap.....	56
Hood.....	57
Trunk.....	58



## Doors

### ■ Using the lock button

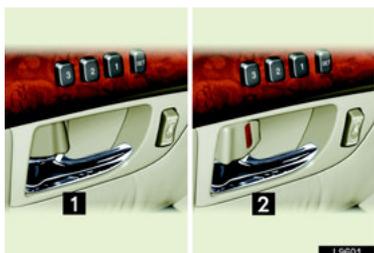

- 1** Lock
- 2** Unlock

### ■ Using the power door lock switch



- 1** Lock
- 2** Unlock

### ■ Using the smart access function (if equipped)




Lock



Unlock

## ■ Using the mechanical key

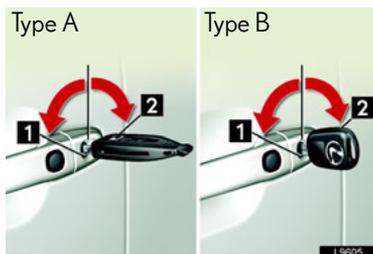

- 1 Lock
- 2 Unlock

## ■ Child door protectors



- 1 Lock  
Turning the knob to the "LOCK" position prevents the rear door from being opened from the inside.  
Use this function whenever small children are in the vehicle.

## ■ Door closer (if equipped)

If any door is partially latched, it will close automatically.

## ■ Power Windows




- 1 **Power window switches**  
To lower the window, push the switch down. To raise the window, pull the switch up.
- 2 **Window lock switch**  
When the window lock switch is pressed in, only the driver's window can be raised or lowered.

Fully lifting, pulling, or pressing the power window switch makes the window open fully or lower fully automatically.




## Moon Roof

### Opening and closing

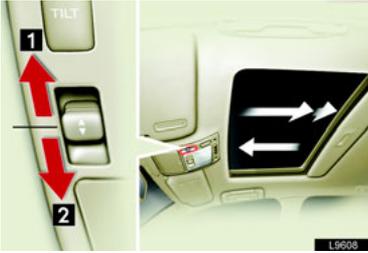

- 1 Pushing the "OPEN" button for about 1 second causes the moon roof to open and stop about 3 cm(1 in.) from the fully opened position. Push again to open completely.
- 2 Push and hold the "CLOSE" button for about 1 second to close completely.

### Tilt

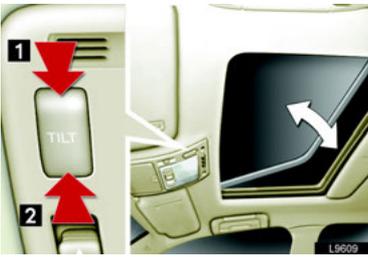

- 1 To tilt up the moon roof, push and hold the "UP" button for about 1 second.
- 2 To lower the moon roof, push and hold the "CLOSE" button for about 1 second.

To open the moonroof partially, push the switch in the opposite direction when the desired position is reached.

## Fuel Tank Cap



Pull the fuel filler door opener.



Remove the cap by slowly turning it counter-clockwise.

The removed cap can be stored on the fuel filler door.

Use premium (91 octane or higher) unleaded gasoline.

The display indicates that the fuel filler door is on the left side of the vehicle.



Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Hood




Pull the hood lock release lever under the instrument panel.



Inserting your fingers under the hood, push up the auxiliary catch lever and lift.

## Trunk

### Trunk lid opener switch

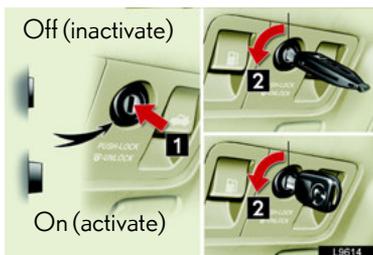


- 1 Make sure the main switch is on.
- 2 To activate the insert the masterkey and turn it to the left.



Pull the lever to open the trunk.

### Mechanical key

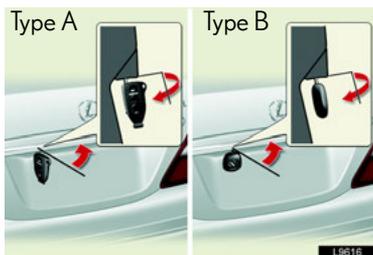

Turn the key clockwise to open.  
Only the master key can be used to open the trunk.

### Trunk lid closer

If the trunk lid is partially latched, it will close automatically.

The trunk can also be opened with the smart access system and the wireless remote control. See pages 8 and 9.

## What to do if ...

### If the following warning lights comes on ...



#### Stop the vehicle immediately

	Brake system warning light (U.S.A.)		Discharge warning light
	Brake system warning light (Canada)		

#### Have the vehicle checked at Lexus dealer immediately

	Malfunction indicator lamp (U.S.A.)		ABS & brake assist warning light (U.S.A.)
	Malfunction indicator lamp (Canada)		ABS & brake assist warning light (Canada)
	SRS warning light		Automatic headlight leveling system/Adaptive front lighting system warning light (when flashing)

#### Have the malfunction repaired immediately

	Open door warning light		Front passenger's seat belt reminder light
	Low fuel level warning light		Master warning light
	Driver's seat belt reminder light		

## See the owner's manual



Headlight high beam indicator light



Turn signal indicator light



Tail light indicator light  
(U.S.A.)



Tail light indicator light  
(Canada)



Slip indicator light



Front fog light indicator light



AFS off indicator light



TRAC off indicator light



ETC PWR indicator light



ETC SNOW indicator light



Cruise control indicator light



Damping mode indicator light

For further information, refer to the owner's manual.

## Location of Emergency Equipment

### Jack, tools, and spare tire



- 1 Tool box
- 2 Towing eyelet
- 3 Jack handle
- 4 Spare tire
- 5 Jack

### Removing the spare tire



- 1 Remove the spare tire cover.
- 2 Loosen the bolt and remove the spare tire.

## If the ignition switch does not turn easily. . .



Turn the ignition switch while lightly moving the steering wheel from left to right.

## If a warning message appears. . .

Stop the vehicle immediately

**Low Oil Pressure**

Have the vehicle checked at your Lexus dealer as soon as possible

**Brake Wear**

**Check VSC**

**(U) Check System**

**S/T Lock CBL Failure**

**Height Hi \***

**Check Park Sonar**

**Check Cruise System**

**Check PCS System**

\*: When the master warning light comes on and buzzer sounds.

Correct immediately

Message	Cause	Solution
<b>Low ENG Oil Level</b>	Low level of engine oil.	Fill the engine oil
<b>Right Front Door</b>	Door is not fully closed.	Check that all the doors are closed
<b>Left Front Door</b>		
<b>Right Rear Door</b>		
<b>Left Rear Door</b>		
<b>Trunk Open</b>		
<b>Moonroof Open</b>	If the driver's door is opened with the ignition switch turned off and the moon roof is left open.	Close the moon roof when you leave your vehicle.
<b>Park Brake</b>	Parking brake is not released.	Release the parking brake.

## What to do if ...

Message	Cause	Solution
 Low Tire	Low level of tire inflation pressure.	Adjust the tire inflation to the specified pressure.
Low Washer Fluid	Low level of washer fluid.	Fill the washer fluid tank.
Change A/C Filter	Air conditioning filter is clogged enough to require replacement.	Change the air conditioning filter.
Clean Park Sonar	Foreign matter (ice, snow, mud, etc.,) has adhered to the sonar.	Remove the foreign matter or deice the sonar.
Clean Radar Sensor	Foreign matter has adhered to the sensor.	Clean the sensor and try setting again.
Cruise not Available	<ul style="list-style-type: none"> <li>• Measurement is difficult in adverse weather conditions.</li> <li>• Driving pattern selector is in SNOW mode</li> </ul> <p>Dynamic radar cruise control -</p> <ul style="list-style-type: none"> <li>• The wipers are at HI speed with the AUTO position selected.</li> </ul> <p>Dynamic laser cruise control -</p> <ul style="list-style-type: none"> <li>• Wipers are at HI or LOW speed with the AUTO position selected.</li> <li>• Direct sunlight from the front.</li> </ul>	<p>Change the driving pattern selector to Normal or Power mode.</p> <p>Stop or switch wipers to Low or Intermittent position.</p> <p>Stop or switch wipers to Intermittent position</p>

Message	Cause	Solution
<b>PCS not Available</b>	<ul style="list-style-type: none"> <li>The millimeter radar sensor or the grill cover is dirty.</li> <li>System turned off for overheat protection because pre-collision seat belts have activated repeatedly within a short time.</li> </ul>	<p>Clean the sensor cover with a soft cloth.</p> <p>Wait for a while for the system to reactivate.</p>
<b>Check S/T Lock</b>	Steering lock engaged.	(→P.61)
(U.S.A. only)		
<b>Maint Redq soon</b>	The engine oil should be replaced soon.	
<b>Maint Redq</b>	The engine oil needs to be replaced.	Replace the engine oil as soon as possible.

For further information, refer to the owner's manual.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Smart access system failure warnings

The vehicle will issue a message certain conditions, such as forgetting master key in the vehicle or carrying it away from the vehicle with the engine running.

Problem	Cause	Solution
<p>Shift to P Range</p>	<ul style="list-style-type: none"><li>• Opening the driver's door with the ignition switch on or with the selector lever in a position other than "P"</li><li>• Closing the driver's door while carrying the master key outside of the vehicle with the ignition switch on or the selector lever in a position other than "P"</li></ul>	<p>The shift lever is in the "P" position</p>
<p>Key is not Detected</p>	<ul style="list-style-type: none"><li>• Pressing the door lock button while carrying the master key outside of the vehicle with the ignition switch on.</li><li>• Pressing the door lock button with the master key still in the vehicle and the ignition switch turned off.</li><li>• Closing a passenger's door with the ignition switch on and the master key outside of the vehicle</li></ul>	<ul style="list-style-type: none"><li>● The ignition switch is turned off</li><li>● You are carrying the master key with you</li></ul>

Problem	Cause	Solution
Key is Different	An attempt is made to use a key that does not match the vehicle	Always carry the master key when starting the engine
Low Key Battery	Master key battery is low	Replace the master key battery

For further information, refer to the owner's manual.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Item	Description	Setting (default setting at left)
Wireless remote control	Remote control operation	Enable/Disable
	Lights flash when operation is complete	Enable/Disable
	Open door warning function	Enable/Disable
	Automatic door locking function if a door is not opened after being unlocked	30 sec/60 sec
	Trunk opening function	Enable/Disable
	Unlocking the trunk	Ask your Lexus dealer
	Unlocking the doors	Ask your Lexus dealer
	Panic button alarm function	Enable/Disable
	Link with power window/ moon roof operation	Enable/Disable
Door lock	Unlocking the vehicle using a mechanical key	Ask your Lexus dealer
	Auto door lock	Ask your Lexus dealer
	Link with power window/ moon roof operation	Enable/Disable
Alarm	Horn	Enable/Disable
Illuminated entry system	Illumination period	15 sec/7 sec/30 sec
	Synchronize with door unlock	Enable/Disable
	Footlights	Enable/Disable
Headlights ("AUTO" mode)	Illumination period	Standard/Longer
	Sensor sensitivity	Desired levers
Windshield wiper operation	Switch to intermittent operation when the vehicle is stopped.	Enable/Disable
	After using the washer, wipers make another single wipe following a delay	Enable/ Disable/ Adjust interval
	Rain-sensing wiper mode	Rain-sensing/Interval
Steering Column	Automatic tilt-away function	Enable/Disable

### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:  
Lexus Roadside Assistance  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)
- In Hawaii:  
Servco Automotive Roadside Assistance/Customer Services  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:  
Lexus Roadside Assistance/Customer Service  
**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada : [www.lexus.ca](http://www.lexus.ca)

©2005 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.