

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Entering and Exiting

- Keys ▶ P.9
- Smart Access System with Push-button Start ▶ P.10
- Theft Deterrent System ▶ P.11



- Seat Belts ▶ P.20
- Outside Rear View Mirrors ▶ P.20
- Anti-glare Inside Rear View Mirror ▶ P.21
- Steering Wheel ▶ P.21

Topic 2

Before Driving

- Front Seats ▶ P.13
- Power Rear Seat (If Equipped on 5-seat models) ▶ P.15
- Power Rear Seat (4-seat models) ▶ P.16
- Driving and Seat Position Memory ▶ P.17
- Rear Seat Position Memory ▶ P.18
- Head Restraints ▶ P.19

Topic 3

When Driving

- Engine (Ignition) Switch ▶ P.23
- Automatic Transmission ▶ P.24
- "ECT" Switch ▶ P.25
- Parking Brake ▶ P.25
- Brake Hold ▶ P.26
- Multi-information Display ▶ P.27
- Turn Signal Lever ▶ P.28
- Emergency Flasher Switch ▶ P.28



- Cruise Control ▶ P.29
- Dynamic Radar Cruise Control ▶ P.30



Topic 4

Rain and Night Driving

- Headlights ▶ P.33
- Fog Lights ▶ P.34
- Windshield Wipers and Washer ▶ P.35
- Headlight Cleaner ▶ P.36
- Rear Window and Outside Rear View Mirror Defoggers ▶ P.36
- Instrument Panel Light Control ▶ P.37


Topic 5

Driving Comfort

- Touch Screen ▶ P.39
- Audio System ▶ P.40
- Front Air Conditioning System ▶ P.46
- Rear Air Conditioning System ▶ P.49
- Climate Control Seats/ Seat Heaters ▶ P.50
- Heated Steering Wheel ▶ P.51
- Glove Box ▶ P.51
- Console Box ▶ P.52
- Auxiliary Boxes ▶ P.52
- Cup Holders ▶ P.53



- Rear Sunshade/ Rear Door Sunshades ▶ P.54
- Compass ▶ P.55
- Trunk Storage Extension ▶ P.55
- Garage Door Opener ▶ P.56
- Lexus Link System ▶ P.58

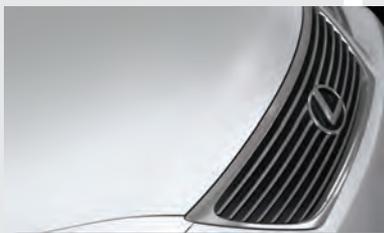

Topic 6

Opening and Closing

- Door Locks ▶ P.61
- Power Windows ▶ P.62
- Moon Roof ▶ P.62
- Fuel Tank Cap ▶ P.63
- Hood ▶ P.63
- Trunk ▶ P.64


What to do if ... ● Responding to warning/indicator lights and other problems that may arise.


Customizing Your Lexus ● A list of features that can be customized.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

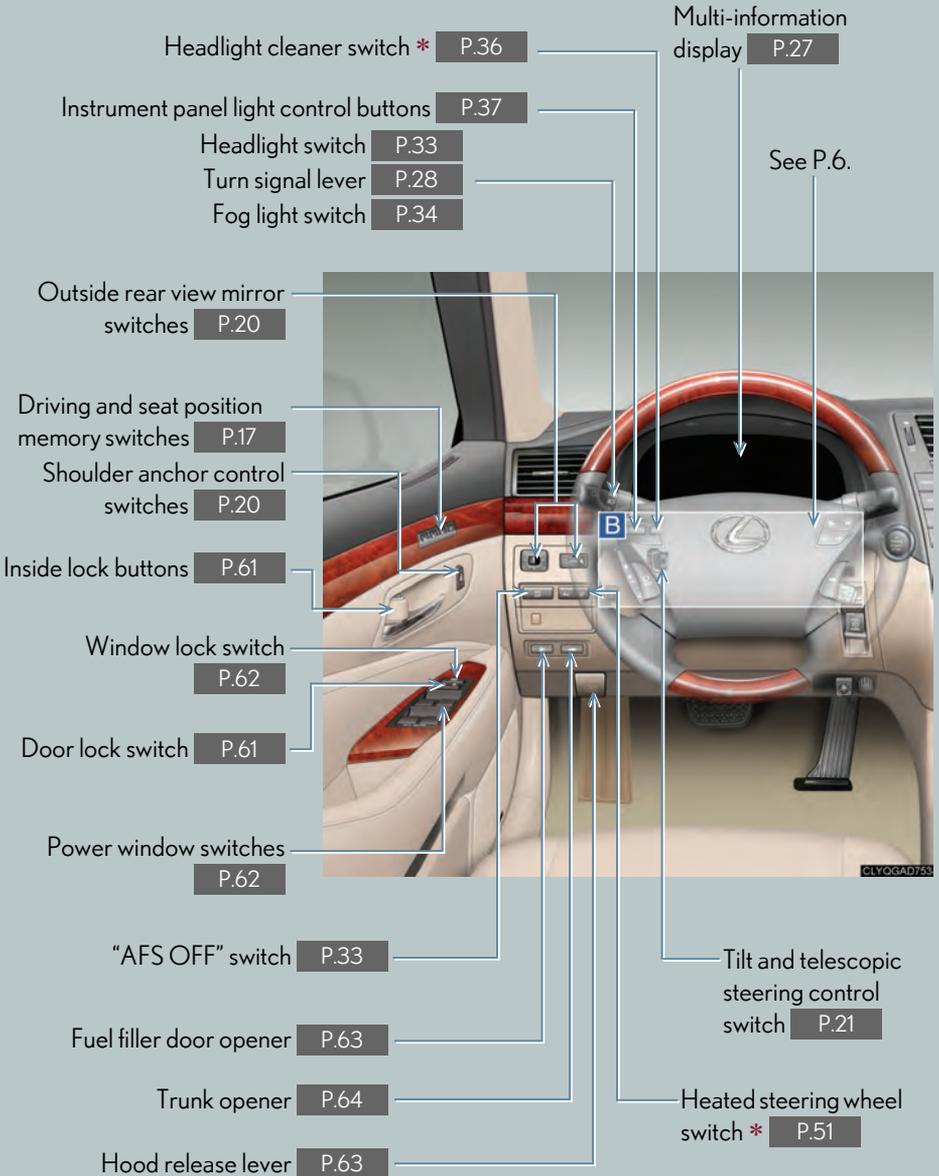

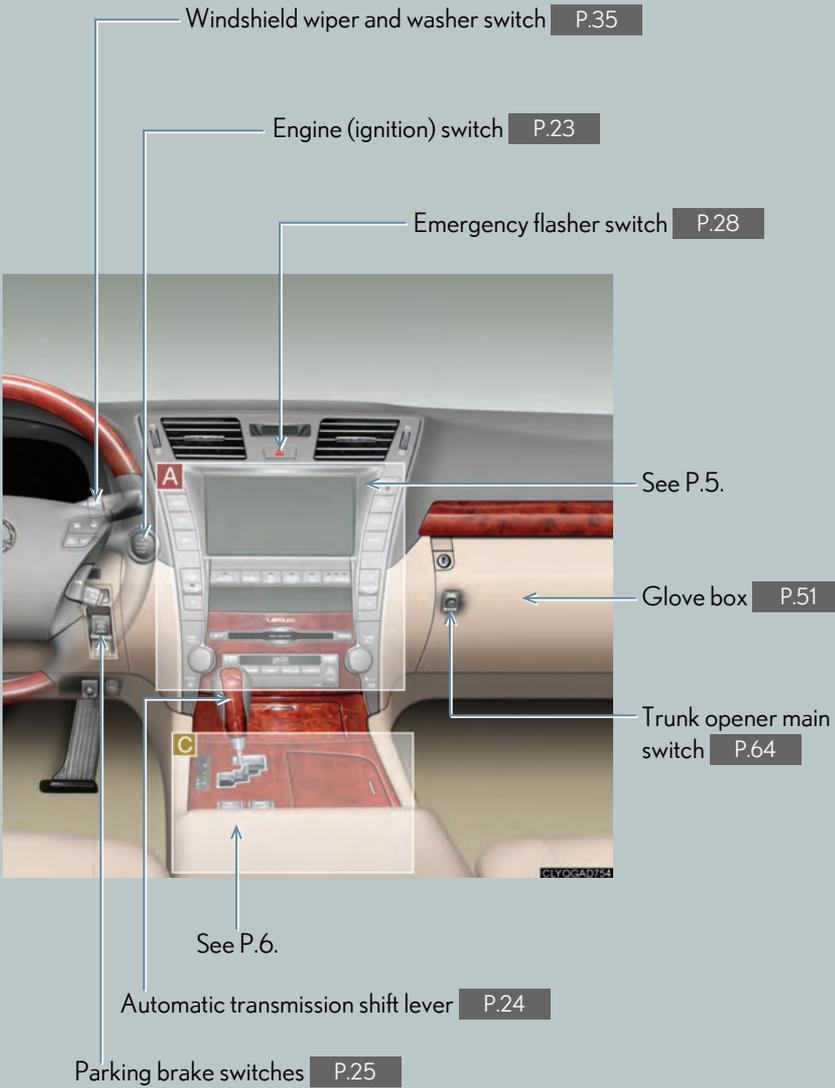

* : If equipped

A

► Type A



Rear window and outside rear view mirror defoggers **P.36**

Air conditioning system **P.46**

Audio system **P.40**

► Type B



Touch screen **P.39**

Rear window and outside rear view mirror defoggers **P.36**


Air conditioning system **P.47, 48**

Audio system **P.40**


Overview

Instrument Panel

B

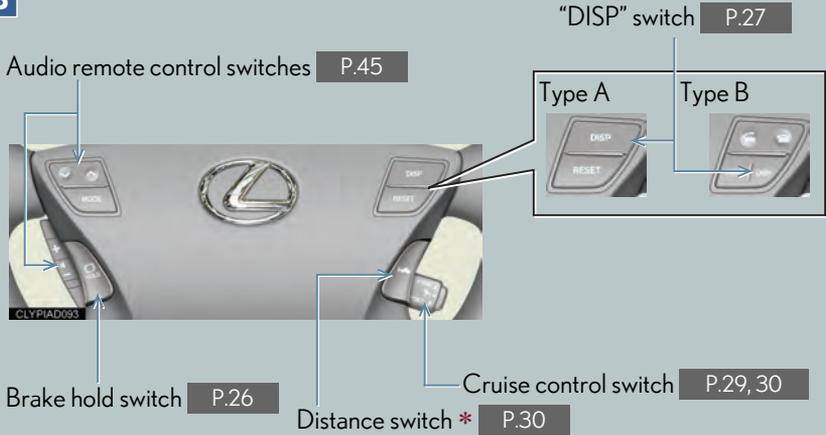

C

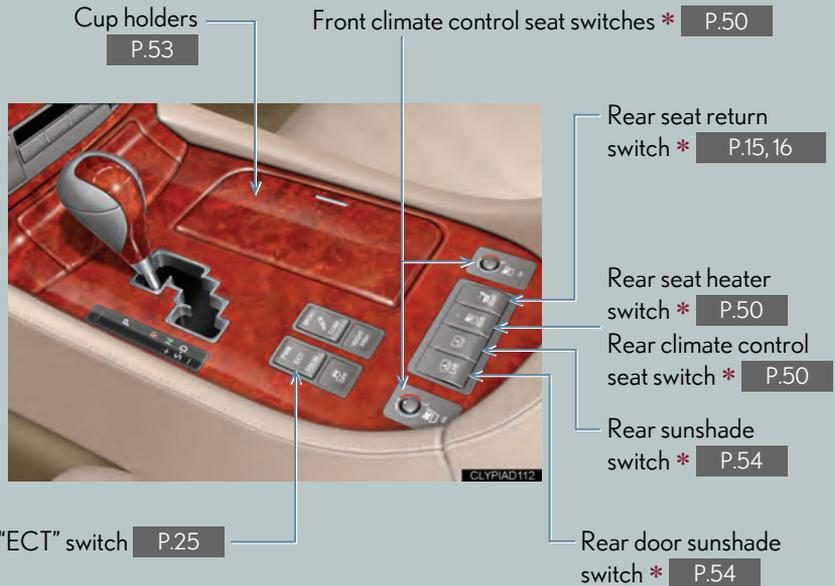

* : If equipped

Overview

Rear Armrest

► 5-seat models



Rear audio switches *
P.45

Power seat switches *
P.15

Rear air conditioning
switches * P.49

Seat heater switches *
P.50

Rear climate control seat
switches * P.50

Rear sunshade switch *
P.54

Rear door sunshade switches *
P.54

► 4-seat models



Rear air conditioning
switches P.49

Rear sunshade switch P.54

Rear door sunshade switches
P.54

Rear audio switches P.45

Power seat switches P.16

Rear climate control seat
switches P.50

* : If equipped



Topic 1

Entering and Exiting

Keys	9
Smart Access System with Push-button Start	10
Theft Deterrent System.....	11

Keys

Electronic key



Smart access system with push-button start
(→P10, 23)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box
- Locks and unlocks the trunk storage extension

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
Press and hold: opens the windows and moon roof*
- 3 Press and hold:** Opens the trunk
If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

*: If equipped

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 23.

Entering the vehicle



To unlock the vehicle, simply grasp one of the door handles.

Exiting the vehicle



To lock the vehicle, press the lock button on one of the door handles.
To close the windows and the moon roof*, press and hold the lock button.

*: If equipped

Opening the trunk



To open the trunk, press the trunk release button.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 67.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

Alarm

The system sounds the alarm and flashes lights when an attempt to steal the vehicle is detected.

To set the alarm: close the doors, trunk and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: start the engine, or unlock the doors or trunk.

Steering lock



The steering wheel locks when the "ENGINE START STOP" switch is turned OFF and the driver's door is opened.

When the steering lock cannot be released, the green indicator light on the "ENGINE START STOP" switch will flash and a message will be shown on the multi-information display. To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.



Topic 2

Before Driving

Front Seats.....	13
Power Rear Seat (If Equipped on 5-seat models)	15
Power Rear Seat (4-seat models)	16
Driving and Seat Position Memory	17
Rear Seat Position Memory	18
Head Restraints	19
Seat Belts.....	20
Outside Rear View Mirrors	20
Anti-glare Inside Rear View Mirror.....	21
Steering Wheel	21



Front Seats

Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

Adjusting vertical height



- 1 Raises the height of the seat
- 2 Lowers the height of the seat

Adjusting the seat cushion length (driver's seat)



- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

■ Adjusting the seat cushion (front) angle



- 1 Raises the front of the cushion
- 2 Lowers the front of the cushion

■ Adjusting the lumbar support



▶ Driver's seat

- 1 Firmer
- 2 Softer
- 3 Up
- 4 Down

▶ Front passenger's seat

- 1 Firmer
- 2 Softer

■ Operating the front passenger's seat from driver's seat or rear seat

■ Seat operation switches on the side of the front passenger's seat



▶ Seatback angle switch

- 1 Tilts the seatback forward
- 2 Reclines the seatback

▶ Seat position switch

- 3 Moves the seat forward
- 4 Moves the seat backward

■ Operating the front passenger's seat from the rear seat (4-seat models)



- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward
The seatback will return to the neutral position.

The operation can be performed when the "ENGINE START STOP" switch is in IGNITION ON mode.

Power Rear Seat (If Equipped on 5-seat models)



- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle

Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

When a rear door is opened, the seat on that side will automatically return to the neutral position.

Power Rear Seat (4-seat models)



- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle
- 4 Adjusting seatback angle
- 5 Adjusting ottoman angle

Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

Relaxation mode



- 1 Moves the seats to the relaxation mode
- 2 Returns the seats to the neutral position

The rear seat seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the "ENGINE START STOP" switch is in IGNITION ON mode.

When a rear door is opened, the seat on that side will automatically return to the neutral position.



Driving and Seat Position Memory

Your preferred driving position (the position of the driver's seat, steering wheel, angle of the outside rear view mirrors and height of seat belt) and front passenger seat position (the position of the passenger's seat and height of seat belt) can be memorized and recalled with the touch of a button.

Setting memory positions



Press the "SET" button, then within 3 seconds press one of the memory buttons ("1", "2" or "3") until you hear a beep.

The current position is recorded.

Recalling memory positions



Press one of the memory buttons ("1", "2" or "3").

Linking driving position memory with door unlock operation (driver's seat)



While holding down the desired memory button, press and hold  on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

Rear Seat Position Memory (If Equipped)

Your preferred rear seat position can be memorized and recalled with the touch of a button

Setting memory position



Press and hold the "SET" button until you hear a beep.

The current position of the seat is recorded.

Recalling memory position




Press the "M" button until you hear a beep.

When the door is opened, the rear seat will automatically return to its neutral position.



Head Restraints


Front seats

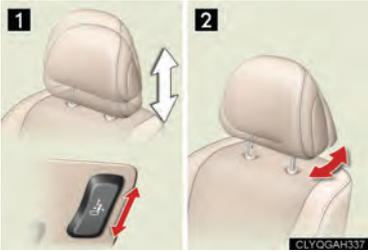

- 1 Vertical adjustment
- 2 Horizontal adjustment


Outside rear seats

► Power type

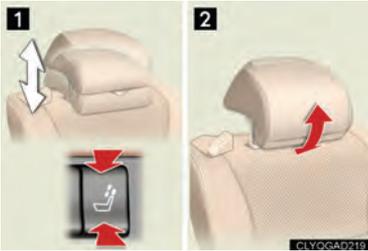


- 1 Vertical adjustment
- 2 Horizontal adjustment

► Manual type

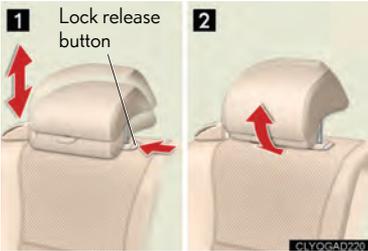

- 1 Vertical adjustment
Push and hold the lock release button when lowering.
- 2 Horizontal adjustment


Rear center seat (5-seat models)

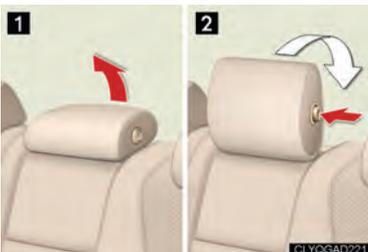

- 1 To use
- 2 To fold

Seat Belts

Adjusting shoulder belt height (front seats)

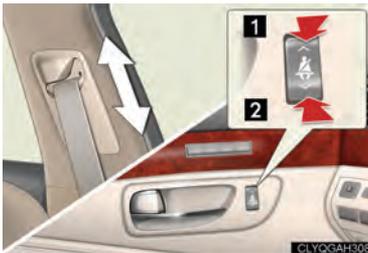

- 1 Up
- 2 Down

Seat Belts comfort guides (outside rear seats)



If the shoulder belt sits close to the neck, slide the comfort guide forward.

Outside Rear View Mirrors



- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjusts the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the mirror select switch in the neutral position (between "L" and "R").

Folding and extending the mirrors



- 1 Folds the mirrors
- 2 Extends the mirrors

Putting the switch in the neutral position allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.

Anti-glare Inside Rear View Mirror

The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn automatic mode on/off, press the "AUTO" button.

The indicator comes on when automatic mode is turned on.

Steering Wheel



- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the "ENGINE START STOP" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "ENGINE START STOP" switch is switched to ACCESSORY or IGNITION ON mode.



Topic 3

When Driving

Engine (Ignition) Switch.....	23
Automatic Transmission.....	24
“ECT” Switch.....	25
Parking Brake.....	25
Brake Hold.....	26
Multi-information Display.....	27
Turn Signal Lever.....	28
Emergency Flasher Switch.....	28
Cruise Control.....	29
Dynamic Radar Cruise Control.....	30



Engine (Ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is set and the shift lever is in “P”.

- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

Stopping the engine

- 1 Set the parking brake and shift the shift lever to “P”.
- 2 Press the “ENGINE START STOP” switch.

Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:



Automatic Transmission

Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

← The vehicle can only be shifted out of "P" when the "ENGINE START STOP" switch is in IGNITION ON mode and the brake pedal is depressed.

"S" mode

"S" mode allows the driver to select the shift range manually based on driving conditions.

1 Shift the shift lever to "S".



2 To upshift: shift the shift lever toward "+".
To downshift: shift the shift lever toward "-".



The selected shift range is displayed on the instrument cluster.



“ECT” Switch

Use the “ECT” switch to select the driving mode that best suits the driving and road conditions.



- 1 Power mode**
For more powerful acceleration and uphill driving.
- 2 Normal mode**
- 3 Snow mode**
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.

Parking Brake

For the parking brake, an electrical parking brake system is adopted.

Manual mode



- 1 To set the parking brake:** push the parking brake switch.
- 2 To release the parking brake:** pull the parking brake switch.
Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

Automatic mode



In automatic mode, the parking brake automatically sets according to shift lever operation. To use the automatic mode, press the “AUTO” button.

When the shift lever is moved out of “P”: The parking brake will be released.

When the shift lever is moved into “P”: The parking brake will be set.

Brake Hold

The brake hold system keeps the brake applied when the shift lever is in “D”, “S” or “N” with the system on and the brake pedal has been depressed to stop the vehicle.



To turn the system on, press the “HOLD” switch. An indicator comes on while the system is holding the brake.

The system releases the brake when the accelerator pedal is depressed with the shift lever in “D” or “S” to allow smooth start off.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Multi-information Display


The multi-information display shows information about your vehicle, including the items shown below.

Display information



- Trip information
 - Outside temperature
 - Cruising range
 - Average fuel consumption
 - Current fuel consumption
 - Average fuel consumption after refueling
 - Distance after refueling
 - Elapsed time
 - Average vehicle speed
 - Tire inflation pressure
- Shift position and shift range
- Intuitive parking assist-sensor information (if equipped)
- Dynamic radar cruise control settings (if equipped)
- Warning messages

Changing the display of trip information

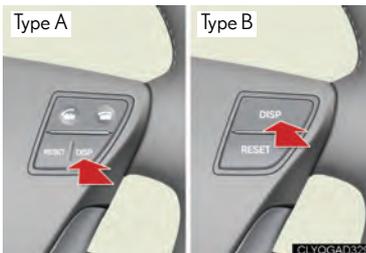


Trip information items can be switched by pressing the "DISP" switch.

- When using Intuitive parking assist-sensor, dynamic radar cruise control or lane keeping assist the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Turn Signal Lever



- 1 Right turn signal
- 2 Left turn signal

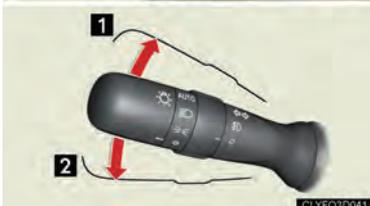

To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash. The emergency flashers can be operated even when the "ENGINE START STOP" switch is OFF.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



To increase speed: push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator
- 2 Display
- 3 Cruise control switch
- 4 Distance switch

Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.



■ Canceling



- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the speed setting



To increase speed: push the lever up.

To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.



Topic 4

Rain and Night Driving

Headlights.....	33
Fog Lights.....	34
Windshield Wipers and Washer.....	35
Headlight Cleaner.....	36
Rear Window and Outside Rear View	
Mirror Defoggers.....	36
Instrument Panel Light Control.....	37

Headlights



- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward. To flash the high beams temporarily, pull the lever toward you.

AFS (Adaptive Front-lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



To cancel the system, press the "AFS OFF" button. The indicator comes on when the system is off.

Press the button again to reactivate the AFS.

Fog Lights



The fog lights can be used only when the headlights (low beam) are on.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Windshield Wipers and Washer



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation



Sensitivity can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the “ENGINE START STOP” switch is in IGNITION ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.



The system turns off automatically after 15 minutes.

Instrument Panel Light Control



1 To dim: press “∨”.

2 To brighten: press “∧”.



Topic 5

Driving Comfort

Touch Screen	39
Audio System	40
Front Air Conditioning System (without touch screen)	46
Front Air Conditioning System (touch screen without rear air conditioning system)	47
Front Air Conditioning System (touch screen with rear air conditioning system) ...	48
Rear Air Conditioning System	49
Climate Control Seats/Seat Heaters	50
Heated Steering Wheel	51
Glove Box	51
Console Box	52
Auxiliary Boxes	52
Cup Holders	53
Rear Sunshade/Rear Door Sunshades	54
Compass	55
Trunk Storage Extension	55
Garage Door Opener	56
Lexus Link System	58

Touch Screen (If Equipped)

By touching the screen with your finger, you can control the audio system and air conditioning, adjust the screen display, etc. For details, refer to the “Owner’s Manual”.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.



Press the button to display the screen. The “Information” screen shown in the above illustration is displayed when the “INFO” button is pressed.

- 1 “CLIMATE”: Air conditioning operation screen
- 2 “AUDIO”: Audio control screen
- 3 “DISP”: Display screen
- 4 “INFO”: Information screen
- 5 “Adjust Clock”: Adjust clock screen
- 6 “Screen Setting”: Screen setting screen
- 7 “LEXUS Park Assist”: Intuitive parking assist setting screen
- 8 “Telephone”: Telephone screen

Audio System (without navigation system)

For detailed operation procedures and operation procedures for the DVD player (if equipped), refer to the "Owner's Manual". Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

Basic operation

► Type A (without touch screen)



- 1 Power/Volume
- 2 Sound quality modes
- 3 Listening position
- 4 Automatic Sound Levelizer ("ASL")
- 5 Audio sources
 "AM": AM radio
 "FM": FM radio
 "DISC·AUX": CD player/Auxiliary audio device

► Type B (with touch screen)



- 1 Displays the audio control screen
- 2 Automatic Sound Levelizer (ASL)
Listening position (if equipped)
- 3 Audio sources
 "AM": AM radio
 "FM": FM radio
 "DISC·AUX": CD player/Auxiliary audio device
- 4 Power/Volume
- 5 Sound quality and balance modes

Radio

► Type A (without touch screen)




- 1 Traffic information
- 2 RDS genre select
- 3 Station presets
- 4 Text messages
- 5 Radio tuner
- 6 Scan
 - All radio stations: press
 - Preset radio stations: press and hold
- 7 Seek

■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

► Type B (with touch screen)

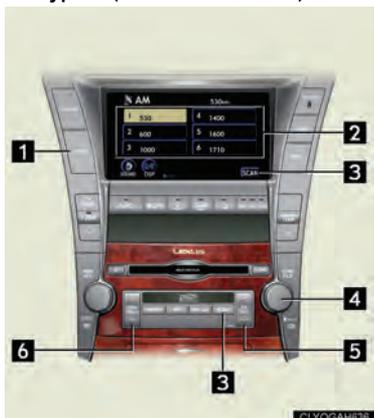

- 1 Displays the audio control screen
- 2 Station presets
- 3 Scan
 - All radio stations: press
 - Preset radio stations: press and hold
- 4 Radio tuner
- 5 Station select
- 6 Seek

■ Entering station presets

- 1 Select the desired station by using the tuner, or the seek or the scan functions.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

CD player


Playing an audio CD

► Type A (without touch screen)



- 1 Random playback
Current CD: press
All CDs: press and hold
- 2 Repeat
Current track: press
Current CD: press and hold
- 3 Rewind
- 4 Fast-forward
- 5 Text information
- 6 CD load
- 7 CD select
- 8 Scan
All tracks in current CD: press
First track of each CD: press and hold
- 9 Track select
- 10 Eject


► Type B (with touch screen)

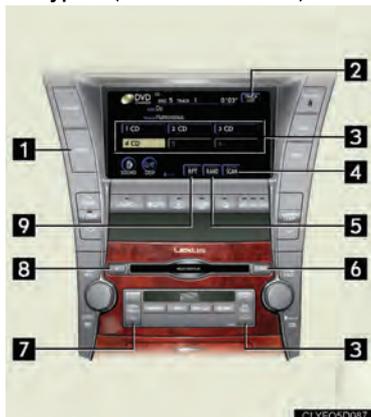

- 1 Displays the audio control screen
- 2 Display track list
- 3 CD select
- 4 Scan
All tracks in current CD: press
First track of each CD: press and hold
- 5 Random playback
Current CD: press
All CDs: press and hold
- 6 CD load
- 7 Track select/rewind/fast-forward
- 8 Eject
- 9 Repeat
Current track: press
Current CD: press and hold


■ Playing a CD with MP3/WMA files

▶ Type A (without touch screen)

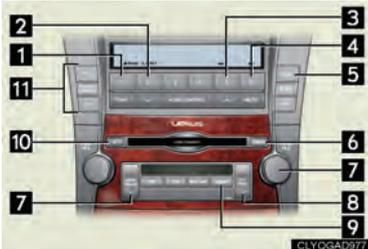

- 1** Random playback
Current file: press
All files in current folder: press and hold
- 2** Repeat
Current file: press
All files in current folder: press and hold
- 3** Rewind
- 4** Fast-forward
- 5** Text information
- 6** CD load
- 7** File select
- 8** CD select
- 9** Scan
All files in current folder: press
First file of each folder: press and hold
- 10** Eject
- 11** Folder select

▶ Type B (with touch screen)

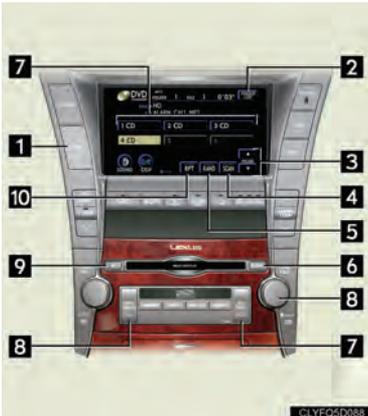

- 1** Displays the audio control screen
- 2** Display folder list
- 3** Folder select
- 4** Scan
All files in current folder: press
First file of each folder: press and hold
- 5** Random playback
Current folder: press
All folders: press and hold
- 6** CD load
- 7** CD select
- 8** File select
- 9** Eject
- 10** Repeat
Current file: press
All files in current folder: press and hold

■ Loading a CD

▶ Type A (without touch screen)

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".

▶ Type B (with touch screen)

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.

■ Loading multiple CDs

▶ Type A (without touch screen)

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the disc slot door turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the disc slot door turn from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the "DISC·AUX" button.

▶ Type B (with touch screen)

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.
- 3 After inserting a CD, wait until the indicator changes from flashing amber to green, then insert the next CD after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all CDs.

To cancel the operation, press the "LOAD" or "DISC·AUX" button. If you do not insert a CD within 15 seconds, loading will be canceled automatically.

Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.




- 1 Power on/change mode: press
Power off: press and hold
- 2 Volume
- 3 Radio: radio tuner
CD: disc/track/file (MP3/WMA) select

Rear seat audio controls (if equipped)

Some front audio features can be controlled from the rear seats.

► 5-seat models

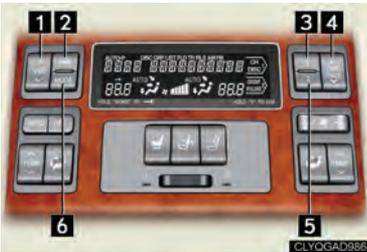


- 1 Volume
- 2 Power
- 3 Disc select
- 4 Radio: station select
Audio CD: track select
CD with MP3/WMA files: file select
- 5 Folder select
- 6 Audio sources

► 4-seat models



Front Air Conditioning System (without touch screen)

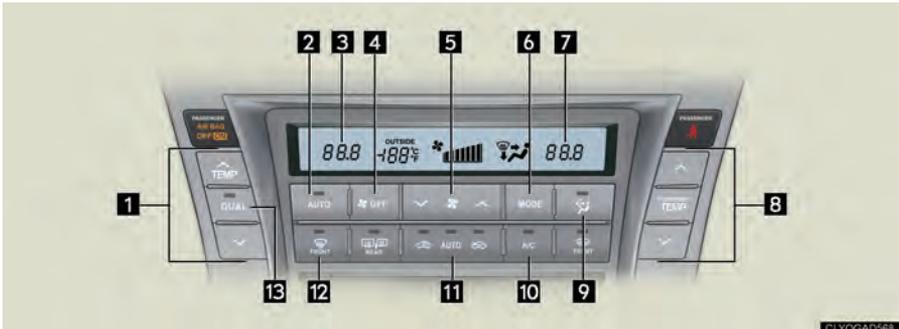

- | | |
|--------------------------------------|---|
| 1 Driver side temperature control | 8 Passenger side temperature control |
| 2 Automatic mode button | 9 Micro dust and pollen filter button |
| 3 Driver side temperature display | 10 "A/C" button |
| 4 "OFF" button | 11 Outside air/recirculated air mode button |
| 5 Air volume controls | 12 Windshield defog/defrost |
| 6 Air flow controls | 13 Dual mode button |
| 7 Passenger side temperature display | |

Using the automatic mode



- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

Adjusting the temperature in dual mode



In dual mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the "DUAL" button.
- 2 Adjust the driver side temperature using the "TEMP" buttons, and the passenger side temperature using the "PASSENGER TEMP" buttons.

Front Air Conditioning System (touch screen without rear air conditioning system)



- | | |
|--|---------------------------------------|
| 1 Air conditioning operation screen display button | 7 Micro dust and pollen filter button |
| 2 Air flow display | 8 Windshield defog/defrost |
| 3 Fan speed display | 9 "OFF" button |
| 4 Passenger side temperature control | 10 Driver side temperature display |
| 5 Outside air/recirculated air mode button | 11 Automatic mode button |
| 6 Passenger side temperature display | 12 Dual mode button |
| | 13 Driver side temperature control |
| | 14 "A/C" button |

Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

Adjusting the temperature in dual mode

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side. To cancel the dual mode, press the "DUAL" button.

Front Air Conditioning System (touch screen with rear air conditioning system)



- | | |
|---|--|
| 1 "A/C" button | 8 Outside air/recirculated air mode button |
| 2 Air flow display | 9 Passenger side temperature display |
| 3 Air conditioning operation screen display button | 10 Micro dust and pollen filter button |
| 4 Rear air conditioning operation screen display switch | 11 Windshield defog/defrost |
| 5 Fan speed display | 12 "OFF" button |
| 6 Air purifier and rear air conditioning operation switch | 13 Driver side temperature display |
| 7 Passenger side temperature control | 14 Automatic mode button |
| | 15 Individual mode button |
| | 16 Driver side temperature control |

Using the automatic mode

- 1 Press the "AUTO" button.
- 2 Adjust the temperature using the "TEMP" buttons.

Adjusting the temperature in individual mode

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.


Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.
To adjust the temperature for the rear seats, see page 49.
To cancel the individual mode, press the "4-ZONE" button.

Rear Air Conditioning System (If Equipped)

► 5-seat models




► 4-seat models

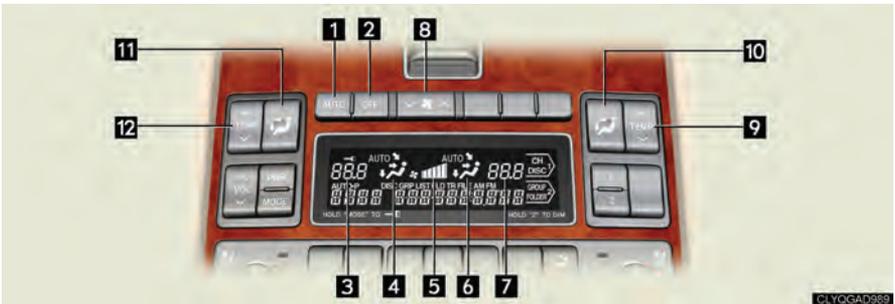

- | | |
|---------------------------------|---|
| 1 Automatic mode button | 7 Right side temperature display |
| 2 "OFF" button | 8 Air volume controls |
| 3 Left side temperature display | 9 Right side temperature control |
| 4 Left side airflow display | 10 Changes the right side air outlet used |
| 5 Air volume display | 11 Changes the left side air outlet used |
| 6 Right side airflow display | 12 Left side temperature control |

■ Front controller (touch screen)

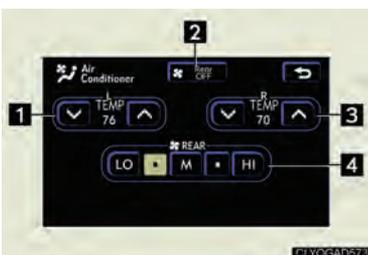

- | |
|---|
| 1 Left side temperature control switch and display |
| 2 Off |
| 3 Right side temperature control switch and display |
| 4 Fan speed display |

Climate Control Seats/Seat Heaters (If Equipped)

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Front climate control seats

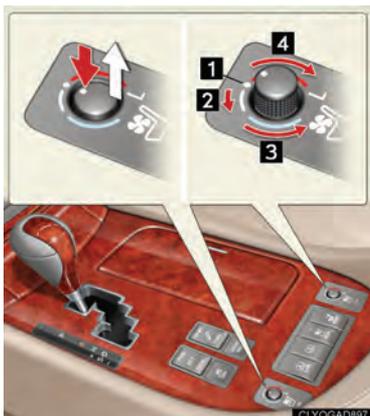

Press the knob to pop out, and turn the knob to adjust the seat temperature.

- 1** Off
- 2** Ventilation
- 3** Cool air
- 4** Warm air

Rear climate control seats


► 5-seat models



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

- 1** Ventilation
- 2** Cool air
- 3** Warm air

► 4-seat models

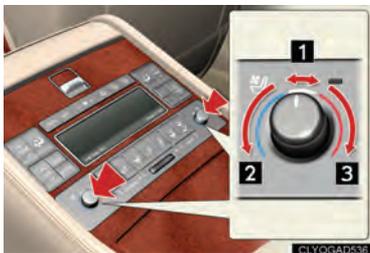

The rear climate control seats can also be turned on and off from the front seat by pressing the button.



Rear seat heaters



Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

The rear seat heaters can also be turned on and off from the front seat by pressing the button.




Heated Steering Wheel (If Equipped)



To heat the leather portion of the steering wheel, press the button.

Press again to cancel.

Glove Box

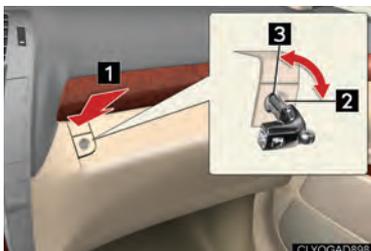

- 1 Opens: press the button.
- 2 Locks
- 3 Unlocks

The glove box can be locked and unlocked using the mechanical key.

Console Box




To open, slide and lift the armrest with the knob pushed in.

There is a power outlet located in the front console box.



Auxiliary Boxes

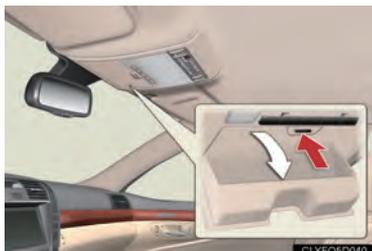

► Overhead

To open, press in the button.



► Rear seat (if equipped on 5-seat models)

To open, press the button and lift the lid.



► Rear seat (4-seat models)

To open, press in the lid.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus

Cup Holders




► **Front**

To open, press down the lid on the side farthest to the driver.

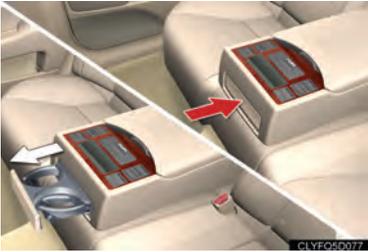

► **Rear (type A for 5-seat models)**

To open, press in and release.

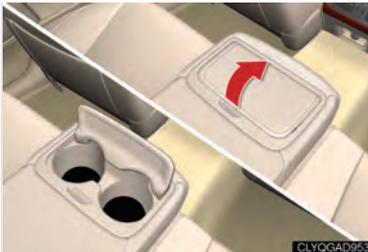

► **Rear (type B for 5-seat models)**


To open, pull up the lid.



► **Rear (4-seat models)**


To open, press in and release.

Rear Sunshade/Rear Door Sunshades (If Equipped)

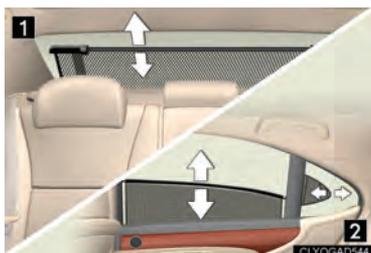


- 1 Rear sun shade
- 2 Rear door sunshades

Raising/Extending from the front seat

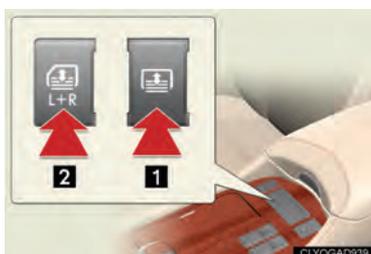


- 1 Raises the rear sunshade
Press the button again to lower it.
- 2 Extends the rear door sunshades
Press the button again to retract them.

Raising/Extending from the rear seat

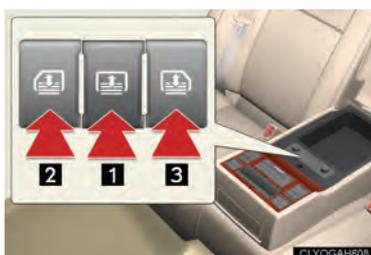

- **5-seat models**
- 1 Raises the rear sunshade
 - 2 Extends the rear door sunshades (left side)
 - 3 Extends the rear door sunshades (right side)

Press the button again to lower or retract the sunshade(s).

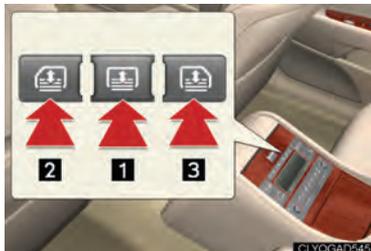

- **4-seat models**
- 1 Raises the rear sun shade
 - 2 Extends the rear door sunshades (left side)
 - 3 Extends the rear door sunshades (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

Compass (If Equipped)



To display the compass, press and hold the "AUTO" button for 3 or more seconds.

To cancel the display, press and hold the "AUTO" button again for 3 or more seconds.

Trunk Storage Extension (If Equipped)

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Unlock the armrest door using the mechanical key.

► Opening from the cabin



► Opening from the trunk



- 3 Open the inside trunk door from the cabin or trunk, and load baggage or other items.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

■ Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

Lexus Link System (If Equipped)

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

Buttons



- 1** Voice keypad button
Sends number tones to an automated phone system for example to access voice-mail, during a phone call
- 2** Volume control
Adjusts your Lexus Link System audio volume
- 3** Phone button
 - Makes or answers a phone call using the hands-free personal calling service
 - Ends a call
- 4** "SERVICES" button
 - Contacts the Lexus Link Call Center for information, directions or other services
 - Records a conversation for later playback
- 5** Emergency button
Makes a priority call to the Lexus Link Call Center



■ Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.
- Stolen vehicle location assistance
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- Remote horn /lights and remote door lock/unlock
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- Advisor record
You can record a conversation with the Lexus Link Advisor.
- Personal calling from OEM telematic services
The Lexus Link System provides access to personal calling, a hands-free phone service provided by OEM telematic services.
- Other services
Press the "SERVICES" button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

This system is only operational in GPS (Global Positioning System) and cellular coverage areas.



Topic 6

Opening and Closing

Door Locks.....	61
Power Windows.....	62
Moon Roof.....	62
Fuel Tank Cap.....	63
Hood.....	63
Trunk.....	64

Door Locks

Locking the vehicle from inside



▶ Inside lock button

- 1 Locks
- 2 Unlocks

▶ Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Using the entry function or wireless remote control (→P.9, 10)

Rear door child-protector lock




Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Door closer (if equipped)

If a door is left slightly open, it will close automatically.

Power Windows

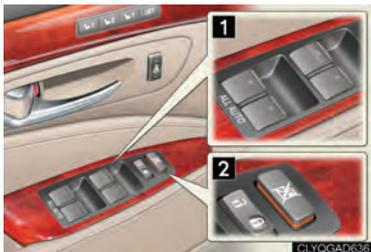

1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof (If Equipped)

Opening and closing



1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

Tilt up and down



1 Tilts up

2 Tilts down

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Hood



1 Pull the hood release lever.



2 Insert your fingers under the hood, pull the hood catch and lift the hood.


Trunk

Opening the trunk



▶ Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.

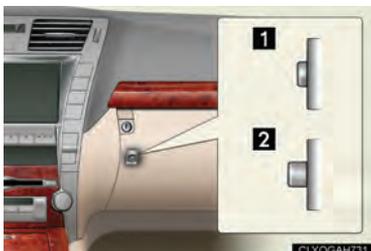

To disable the trunk opener, turn off the main switch in the glove box.

- 1 On
- 2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

▶ Entry function and wireless remote control (→P.9, 10)

Trunk easy closer

If the trunk lid is left slightly open, it will close automatically.

Trunk closer switch (if equipped)



Pressing the switch closes the trunk lid automatically.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

List of Warning/Indicator Lights



The units used on the speedometer, the tachometer gauge display, indicators and warning lights may differ depending on the model / type.

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light (red indicator)



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



Brake system warning light (yellow indicator)



Electric power steering warning light



Pre-collision system warning light^{*1}



(Flashing and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

Follow the correction procedures.



Open door warning light



(On the center panel)

Front passenger's seat belt reminder light



(In the fuel gauge)

Low fuel level warning light



(Illuminate no flashing)

Tire pressure warning light *2



Driver's seat belt reminder light



Master warning light

See the Owner's Manual



Turn signal indicator



Cruise control indicator



Headlight high beam indicator



"AFS OFF" indicator



Headlight indicator (U.S.A.)



Slip indicator



Tail light indicator (Canada)



Parking brake indicator (U.S.A.)



Front fog light indicator



Parking brake indicator (Canada)



"ECT SNOW" indicator



Brake hold standby indicator



"ECT PWR" indicator



Brake hold operated indicator



"SPORT" mode indicator *1



SRS airbag on-off indicator (without touch screen)



"COMFORT" mode indicator *1



SRS airbag on-off indicator (with touch screen)



"HEIGHT HIGH" indicator *1

For further information, refer to the Owner's Manual.

*1: If equipped

*2: Turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure.

Spare Tire and Tool Compartment

Jack, tools, and spare tire



- 1 Jack handle
- 2 Spare tire
- 3 Wrench
- 4 Jack


Taking out the spare tire



- 1 Lift up the panel on the trunk floor.
- 2 Loosen the center fastener and remove the spare tire.

If the electronic key does not operate properly

Unlocking and locking the doors

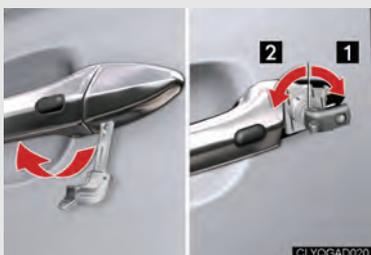

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.



Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.23)



Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right. (→P.11)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the "ENGINE START STOP" switch OFF.	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings continuously.	The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "ENGINE START STOP" switch was in ACCESSORY mode).	Turn the "ENGINE START STOP" switch OFF and close the driver's door.
	The "ENGINE START STOP" switch was turned OFF while the driver's door was open.	Close the driver's door.

Alarm	Situation	Correction procedure
Interior alarm sounds continuously. *1	When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P" and turn the "ENGINE START STOP" switch OFF.
Interior and exterior alarms sound continuously. *1	When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P", turn the "ENGINE START STOP" switch OFF and close the driver's door again.
Interior alarm pings once. *1	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally.	Start the engine with the electronic key present. *2
Interior alarm pings once and exterior alarm sounds 3 times. *1	The driver's door was closed after the key was carried outside the vehicle, and the "ENGINE START STOP" switch was not turned OFF.	Turn the "ENGINE START STOP" switch OFF and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the "ENGINE START STOP" switch was not OFF.	Bring the electronic key back into the vehicle.

*1: A message will be shown on the multi-information display in the instrument cluster.

*2: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key.

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Operation signal (Emergency flashers)	On	Off
Wireless remote control	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operational signal (Emergency flashers)	On	Off
	Door lock buzzer	On	Off
	Trunk unlocking operation	Press and hold	Press twice
			One short press
	Panic function	On	Off

Item	Function	Default setting	Customized setting
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting gears to "P" unlocks all doors.	On	Off
	Shifting gears to position other than "P" locks all doors.	On	Off
	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Trunk	Power trunk opener and closer function	On	Off
Power windows	Mechanical key linked operation	On	Off
	Mechanical key linked operation	Open and close	Open only Close only
	Wireless remote control linked operation	On	Off
	Linked entry operation	On	Off
Moon roof	Mechanical key linked operation	On	Off
	Mechanical key linked operation	Open and close	Open only Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	On	Off
	Linked operation of components when wireless remote control used	Slide only	Tilt only
	Linked entry function	On	Off

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Lights	Daytime running light system (U.S.A. only)	On	Off
Intuitive parking assist-sensor	Buzzer volume	Level 3	Level 1 to 5
	Distance at which the front and back sensors detect an obstacle	Level 1	Level 2
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	On	Off
	Operation after the "ENGINE START STOP" switch is turned OFF	On	Off
	Footwell lighting	On	Off
	Shift lever lighting	On	Off
	Outer foot lights	On	Off
Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	On	Off

Multi-information display

Country	Available languages
U.S.A.	English and Spanish
Canada	English, French, German, Spanish and Italian



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada : www.lexus.ca

©2008 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.