




# Overview

# Instrument Panel

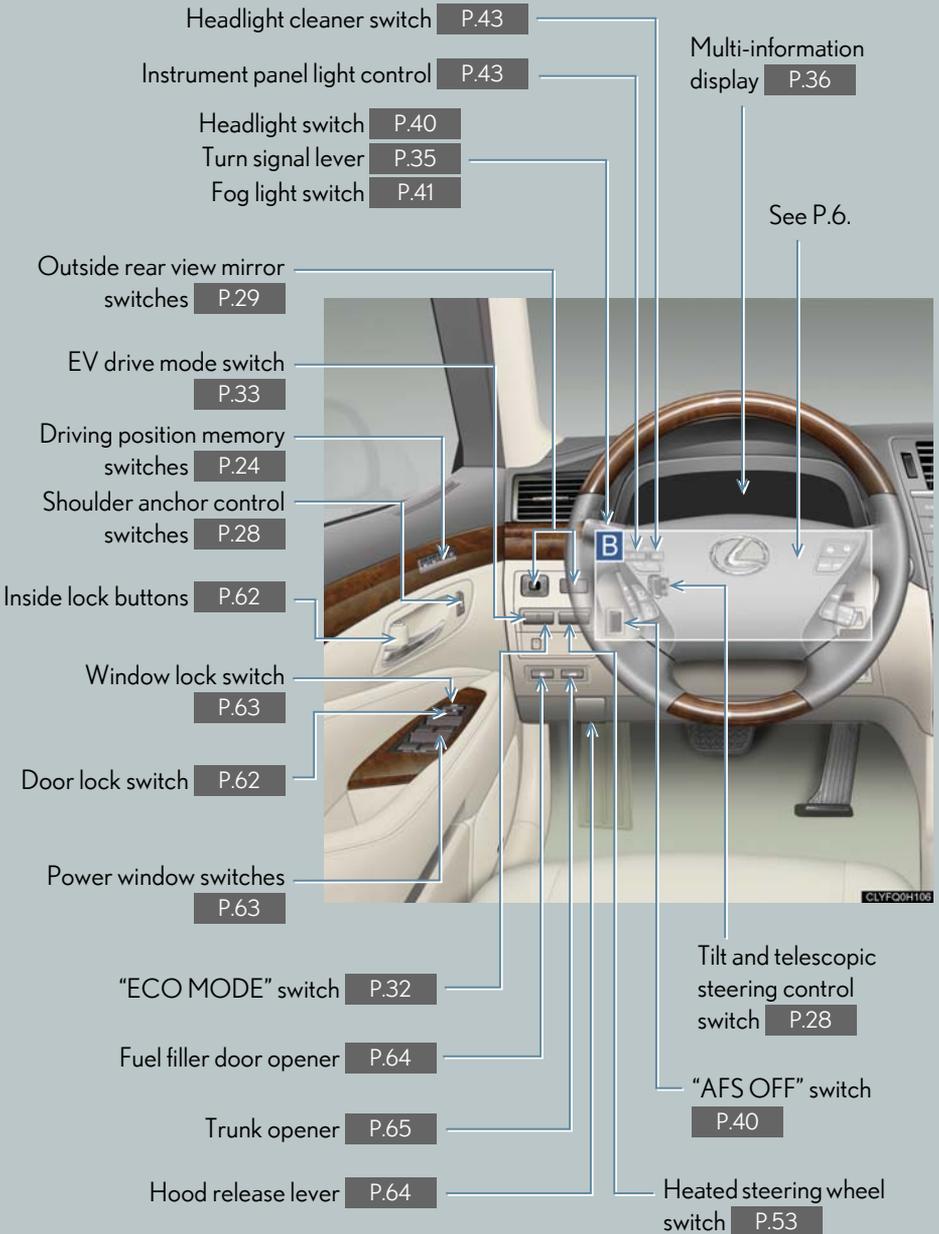

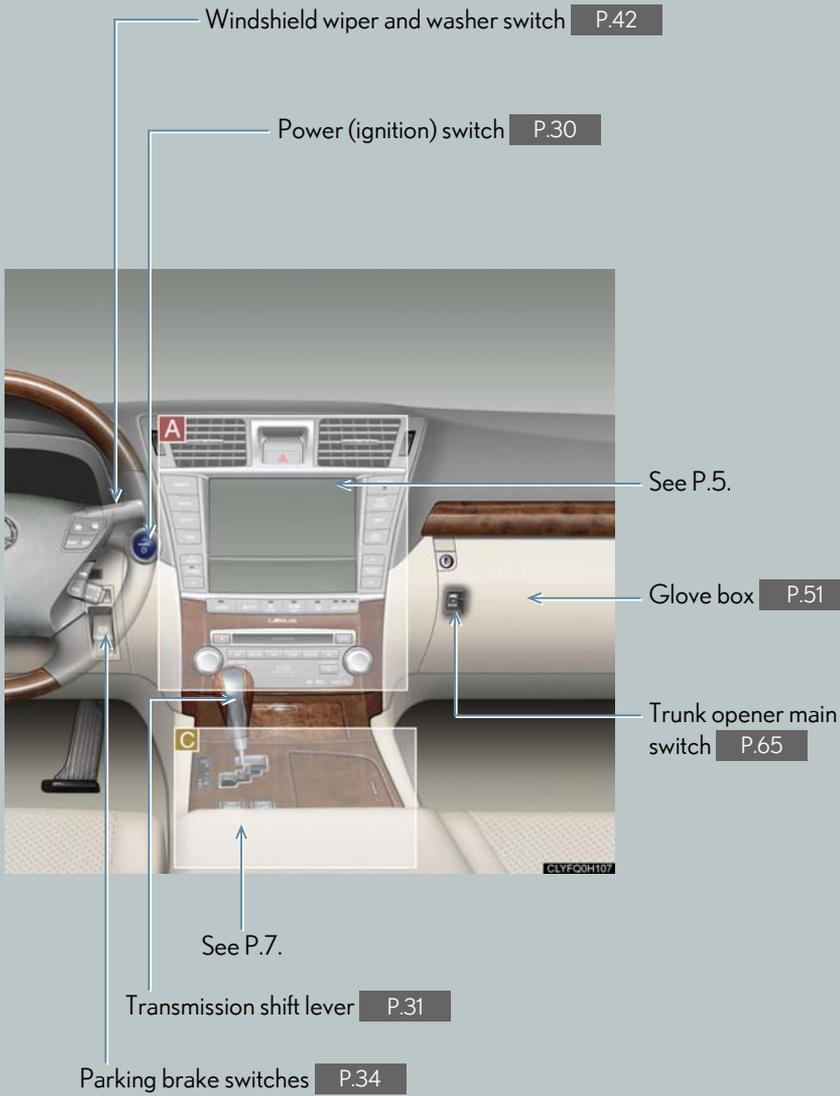


**A**

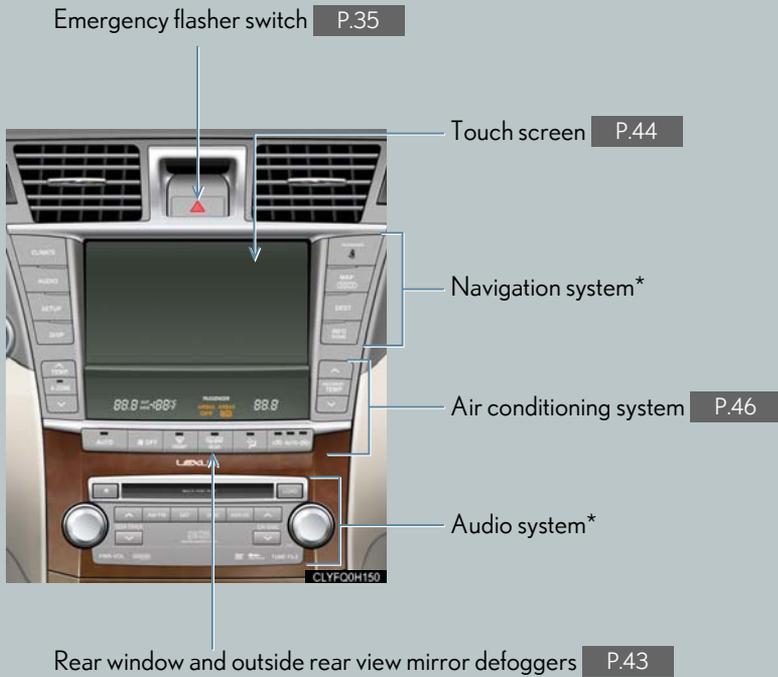


\*: Refer to "Navigation System Owner's Manual".

**B**

► Without LKA (Lane-Keeping Assist)

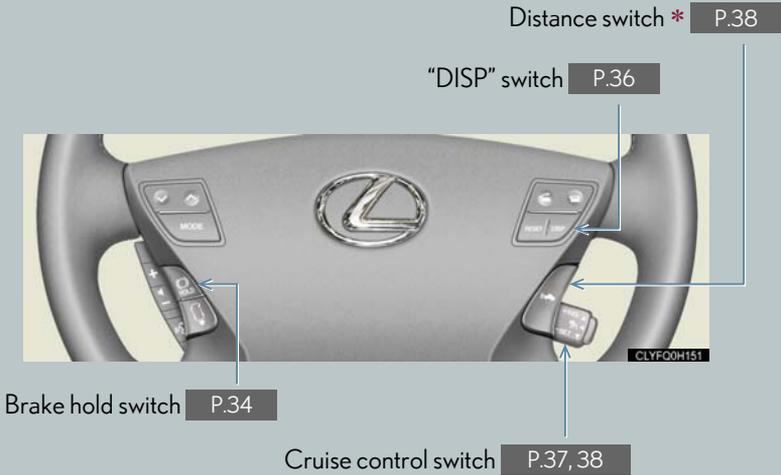


► With LKA (Lane-Keeping Assist)

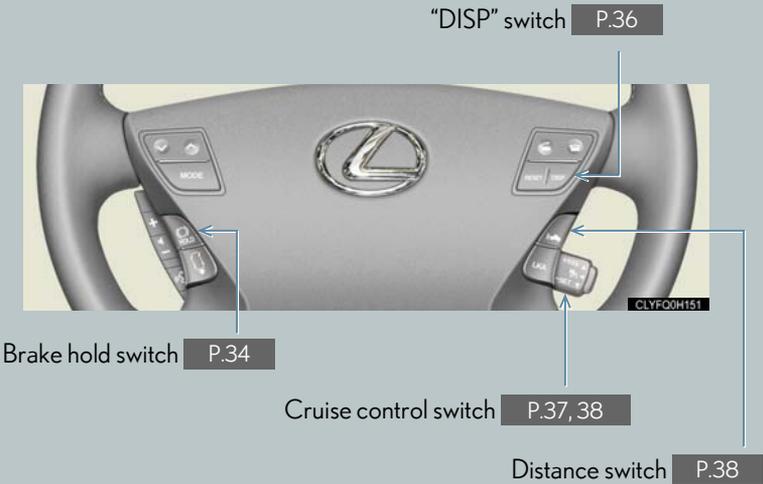


\* : If equipped

## C ▶ Without rear console display

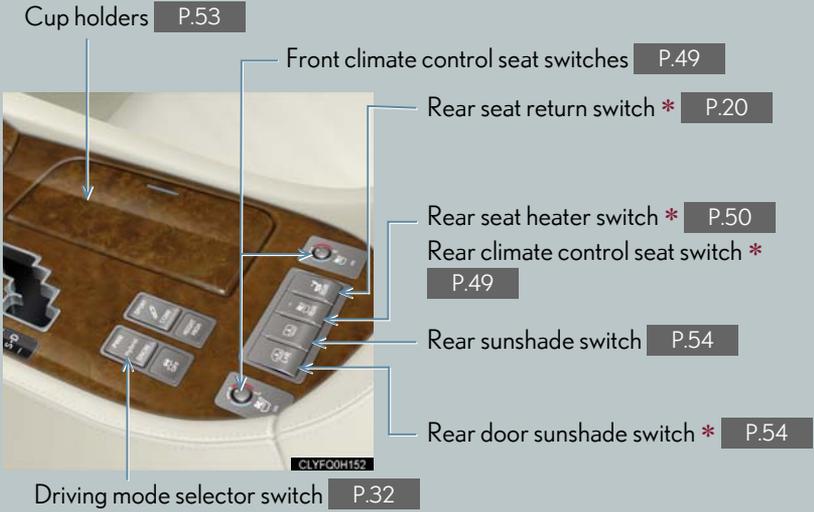

## ▶ With rear console display

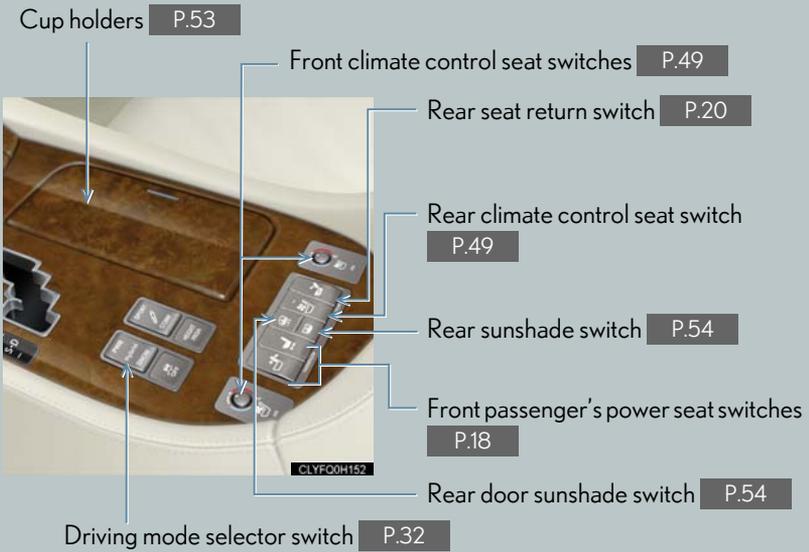

\* : If equipped

# Overview

# Rear Armrest (5-seat models)

## ► Without relaxation seat



Power seat switches \* P.20

Rear air conditioning switches \* P.48

Rear seat heater switches \* P.50

Rear climate control seat switches \* P.49

Rear sunshade switch P.54

Rear door sunshade switches \* P.54

## ► With relaxation seat



Power seat switches P.20


Rear air conditioning switches P.48

Rear climate control seat switches P.49

Rear sunshade switch P.54

Rear door sunshade switches P.54


\* : If equipped

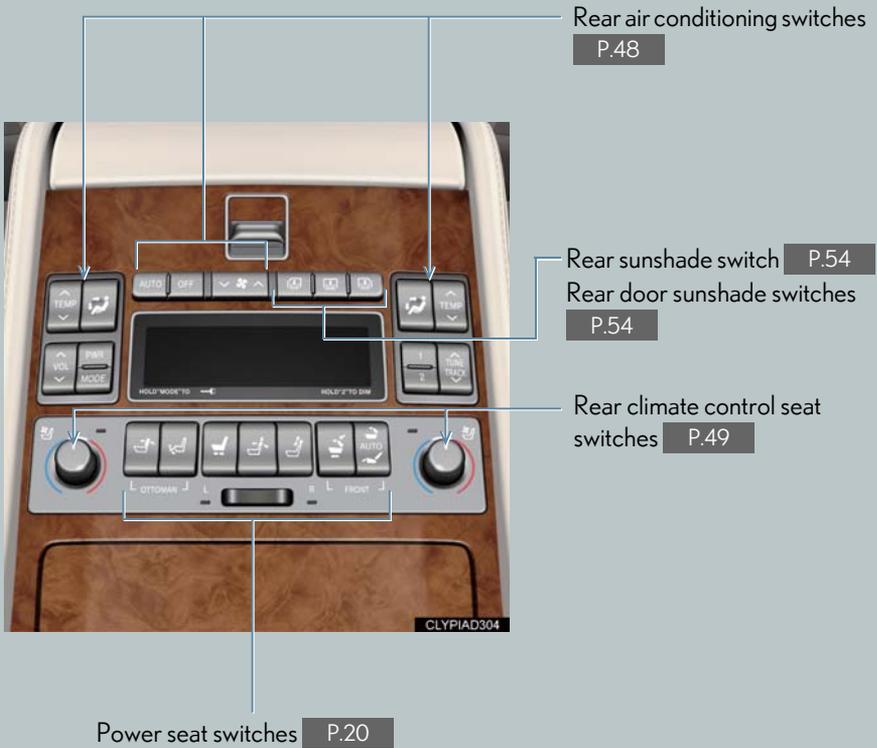

## Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicles, and operate with care. The hybrid system combines a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions. For details, refer to the "Owner's Manual".

### n Hybrid system indicator gauge

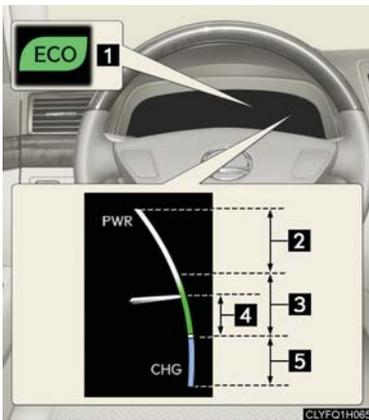

- 1 Eco Driving Indicator Light**  
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on. Eco Driving Indicator Light will operate when the vehicle is being driven with the shift lever in "D". Eco Driving Indicator Light will not operate when the vehicle is in EV mode, power mode or snow mode.
- 2 Power area**  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- 3 Eco area**  
Shows that the vehicle is being driven in an Eco-friendly manner.
- 4 Hybrid Eco area**  
Shows that gasoline engine power is not being used very often.  
  
The gasoline engine will automatically stop and restart under various conditions.
- 5 Charge area**  
Shows that energy is being recovered via the regenerative brake.

## **n Regenerative braking**

---

The motor generator converts kinetic energy to electric energy when:

- 1 The accelerator pedal is released.
- 1 The brake pedal is depressed with the shift lever in “D”, “S” or “R”.

## **n Sounds and vibrations specific to a hybrid vehicle**

---

There may be no engine sounds or vibrations even though the vehicle is able to move. Always put the shift lever in “P” when parked.

The following sounds or vibrations may occur when the hybrid system is operating, and are not a malfunction:

- 1 Motor sounds may be heard from under the vehicle.
- 1 Sounds may be heard from the hybrid battery (traction battery) behind the rear seat when the hybrid system starts or stops.
- 1 Sounds may be heard from the transmission when the hybrid system starts or stops.
- 1 Engine sounds may be heard when accelerating sharply.
- 1 Sounds may be heard due to energy regeneration when you depress the brake pedal.
- 1 Vibrations may be felt when the gasoline engine starts or stops.
- 1 You may hear cooling fan sounds coming from the air intake vents behind the rear seat.

## Energy Monitor / Consumption Screens

You can view the status of your hybrid system on the multi-information display and the touch screen.

### n Energy monitor


The energy monitor can be displayed on both the touch screen and the multi-information display.

1 How to display on the touch screen:

- 1 Press "INFO/TEL" beside the touch screen.
- 2 Touch "Fuel Consumption" on the "Information" screen.  
If the "Energy Monitor" screen does not appear, touch "Energy".

1 How to display on the multi-information display:

Press the "DISP" switch on the steering wheel several times to select the energy monitor display.

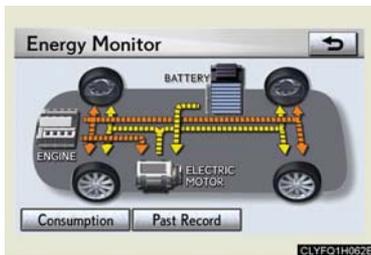


1 The flow of energy is displayed on the touch screen.

Amber: gasoline energy

Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.

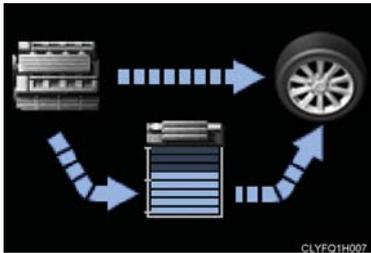

1 The flow of energy is indicated by the movement of the arrows on the multi-information display.


1 The battery display acts as an 8-step indicator of the hybrid battery level.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

## n Consumption

---

- 1 Press "INFO/TEL" beside the touch screen.
- 2 Touch "Fuel Consumption" on the "Information" screen.  
If the "Consumption" screen does not appear, touch "Consumption".

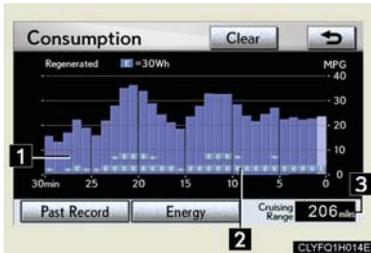


- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes  
One symbol indicates 30 Wh. Up to 4 symbols are shown.
- 3 Cruising range

## n Past record

---

- 1 Press "INFO/TEL" beside the touch screen.
- 2 Touch "Fuel Consumption" on the "Information" screen.  
If the "Past Record" screen does not appear, touch "Past Record".

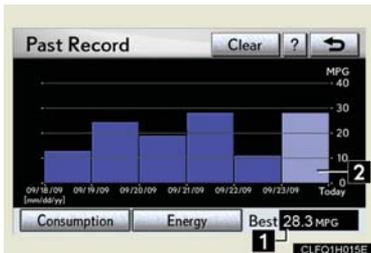

- 1 Best past fuel consumption
- 2 Average fuel consumption  
Displays the average fuel consumption between each reset of the average fuel consumption on the multi-information display.

When resetting, if the average consumption is better than the best past fuel consumption will be updated.

## n Hybrid warning message

---

A message is automatically shown when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

## Keys

### n Electronic key



Smart access system with push-button start  
(→P15, 30)

### n Mechanical key



- 1 Locks and unlocks the doors
- 1 Opens the trunk
- 1 Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or with the card key, press the button and pull.

### n Wireless remote control



- 1 **Press:** locks all doors
- 2 **Press once:** unlocks the driver's door  
**Press twice:** unlocks all doors
- 3 **Press and hold:** opens the trunk
- 4 **Press and hold:** sounds the alarm

(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the hybrid system by simply carrying the electronic key in your pocket or bag. For details on starting the hybrid system, see page 30.

### n Entering the vehicle



To unlock the vehicle, simply grasp one of the door handles.

### n Exiting the vehicle



To lock the vehicle, press the lock button on one of the door handles.

To close the windows and the moon roof, press and hold the lock button.

### n Opening the trunk



To open the trunk, press the trunk release button.

The trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 69.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### n Immobilizer system



The immobilizer system prevents the hybrid system from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The indicator light flashes to indicate that the system is set.

### n Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

**To set the alarm:** close the doors, trunk and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** start the hybrid system, or unlock the doors or trunk.

### n Steering lock



The steering wheel locks when the "POWER" switch is turned OFF and the driver's door is opened.

When the steering lock cannot be released, the green indicator light on the "POWER" switch will flash and a message will be shown on the multi-information display. To release it, press the "POWER" switch while gently turning the wheel left or right.

## Front Seats

### n Adjusting seat position

---



- 1 Moves the seat forward
- 2 Moves the seat backward

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

### n Adjusting seatback angle

---



- 1 Tilts the seatback forward
- 2 Reclines the seatback

### n Adjusting vertical height

---



- 1 Raises the height of the seat
- 2 Lowers the height of the seat

### n Adjusting the seat cushion length (driver's seat)

---



- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

## n Adjusting the seat cushion (front) angle

---



- 1 Raises the front of the cushion
- 2 Lowers the front of the cushion

## n Adjusting the lumbar support

---



### ► Driver's seat

- 1 Firmer
- 2 Softer
- 3 Up
- 4 Down

### ► Front passenger's seat


- 1 Firmer
- 2 Softer

## n Operating the front passenger's seat from driver's seat or rear seat

---

### n Operating the front passenger's seat from the driver's seat

#### ► Without rear console display

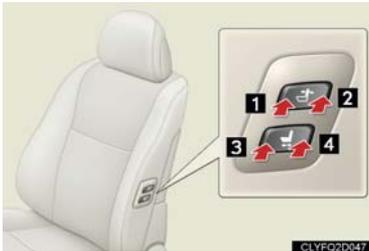

- 1 Tilts the seatback forward
- 2 Tilts the seatback backward
- 3 Moves the seat forward
- 4 Moves the seat backward


#### ► With rear console display



- 1 Tilts the seatback forward
- 2 Tilts the seatback backward
- 3 Moves the seat forward
- 4 Moves the seat backward


## Operating the front passenger's seat from the rear seat (with relaxation seat)

### ► 5-seat models

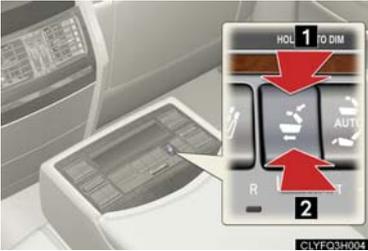

- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward  
The seatback will return to the neutral position.

### ► 4-seat models

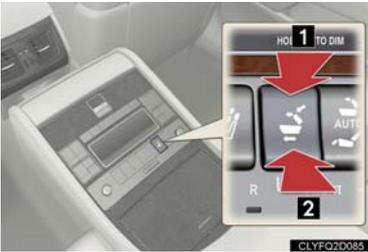

- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward  
The seatback will return to the neutral position.

The operation can be performed when the "POWER" switch is in ON mode.

## Power Rear Seat (If Equipped)

### ► 5-seat models without relaxation seat



1 Selecting the seat

2 Adjusting the seat position

3 Adjusting the seatback upper angle

4 Pelvic support seat controller

### ► 5-seat models with relaxation seat



1 Selecting the seat

2 Adjusting the seat position

3 Adjusting the seatback upper angle

4 Adjusting the seatback angle

5 Adjusting the ottoman angle

6 Rear seat relaxation system/pelvic support seat controller

► 4-seat models



- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle
- 4 Adjusting the seatback angle
- 5 Adjusting the ottoman angle
- 6 Rear seat relaxation system/pelvic support seat controller


n Returning the rear seat from the front seats



To return the rear seat to the neutral position, press and hold the button.

## n Relaxation mode (relaxation seat)

### ► 5-seat models

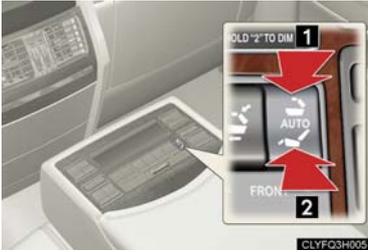


- 1 Moves the seats to the relaxation mode
- 2 Returns the seats to the neutral position

The rear seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the "POWER" switch is in ON mode.

### ► 4-seat models

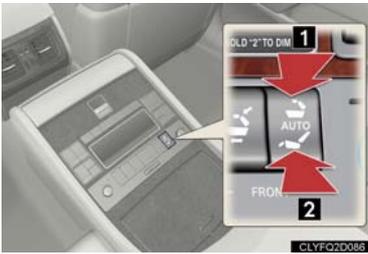


- 1 Moves the seats to the relaxation mode
- 2 Returns the seats to the neutral position

The rear seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the "POWER" switch is in ON mode.

When a rear door is opened, the seat on that side will automatically return to the neutral position.

## n Pelvic support seat with seat vibrator

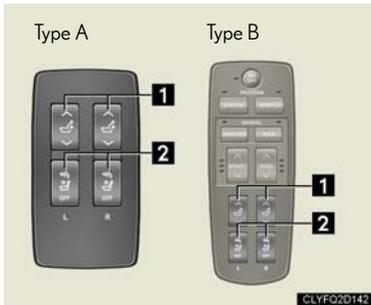


- 1 Support plate position adjustment switch
- 2 Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing “OFF” stops the vibration function.

Automatic stop function: Vibration will automatically stop approximately 15 minutes after starting.

## n Rear seat relaxation system (with relaxation seat)

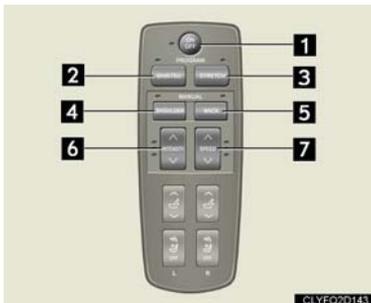

- 1 Turns the system on and off  
If no buttons are selected within approximately 3 minutes of operating this switch, the system will automatically turn off.
- 2 Starts the “SHIATSU” program  
Partial pressure for the whole back
- 3 Starts the “STRETCH” program  
Stretches and relaxes the lower back
- 4 Starts operation for the upper back
- 5 Starts operation for the lower back
- 6 Adjusts the intensity of the air pressure  
3 intensity levels are available.
- 7 Adjusts the speed of the air unit  
3 speed levels are available.

Automatic stop function: Each operation will automatically stop approximately 15 minutes after starting.

## Driving Position Memory

Your preferred driving position (the position of the driver's seat, steering wheel, angle of the outside rear view mirrors and height of seat belt shoulder anchor) and front passenger seat position (the position of the passenger's seat and height of seat belt shoulder anchor) can be memorized and recalled with the touch of a button.

### n Setting memory positions



Press the "SET" button, then within 3 seconds press one of the memory buttons ("1", "2" or "3") until you hear a beep.

The current position is recorded.

### n Recalling memory positions



Press one of the memory buttons ("1", "2" or "3").

### n Linking driving position memory with door unlock operation (driver's seat)



While holding down the desired memory button, press and hold  on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

- n One memorized driving position can be registered to each electronic key. The driving position will then be recalled when the driver's door is unlocked using the electronic key's entry function or wireless remote control and the driver's door is opened.
- n Power easy access system: The auto away/return function enables easy access by moving the driver's seat and steering wheel when the driver attempts to enter or exit the vehicle.

## Rear Seat Position Memory (If Equipped)

The rear seat position can be memorized and recalled with the touch of a button.

### n Setting memory position



Press and hold the "SET" button until you hear a beep.

The current position of the seat is recorded.

### n Recalling memory position




Press the "M" button until you hear a beep.

When the door is opened, the rear seat will automatically return to its neutral position.

## Head Restraints


### n Front seats

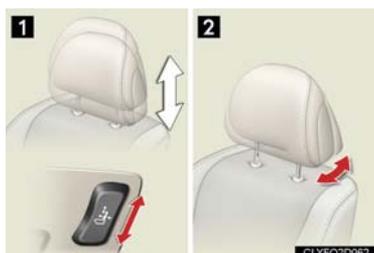

- 1 Vertical adjustment
- 2 Horizontal adjustment


### n Outside rear seats

#### ► Power type

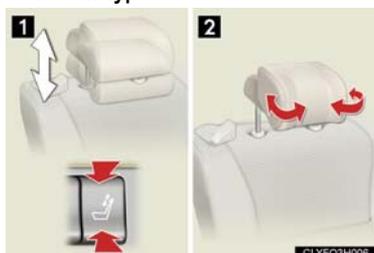


- 1 Vertical adjustment
- 2 Side support adjustment

#### ► Manual type

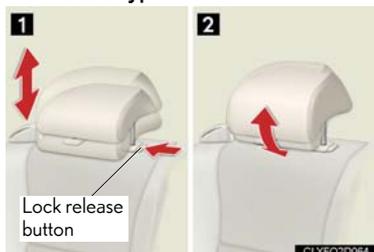

- 1 Vertical adjustment  
Pull the head restraints up when raising.  
Push and hold the lock release button when lowering.
- 2 Horizontal adjustment


### n Rear center seat (5-seat models)

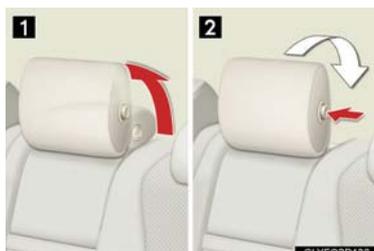

- 1 To use
- 2 To fold


## Seat Belts

### n Adjusting the seat belt shoulder anchor height (front seats)

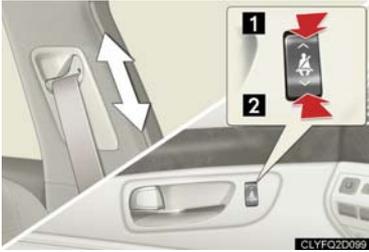


- 1 Up
- 2 Down

### n Seat belts comfort guides (outside rear seats)

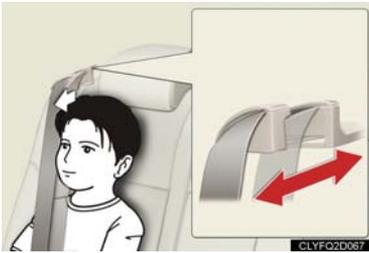

If the shoulder belt sits close to the neck, slide the comfort guide forward.

## Steering Wheel

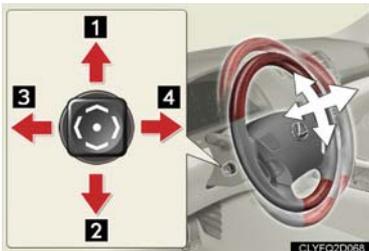


- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel and driver's seat move in accordance with "POWER" switch mode and the driver's seat belt condition. (→P.24)

## Outside Rear View Mirrors

### n Adjusting the mirrors

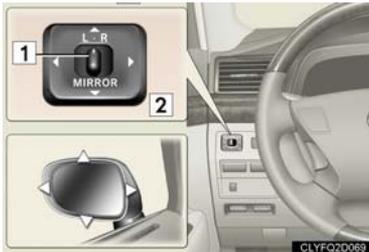


- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjusts the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the mirror select switch in the neutral position (between "L" and "R").

### n Folding and extending the mirrors

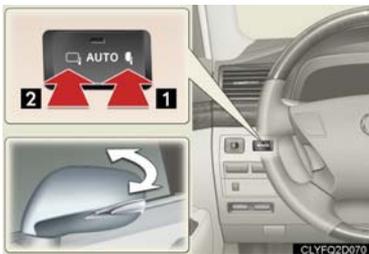


- 1 Folds the mirrors
- 2 Extends the mirrors

Putting the switch in the neutral position allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.

## Anti-glare Inside Rear View Mirror

The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.

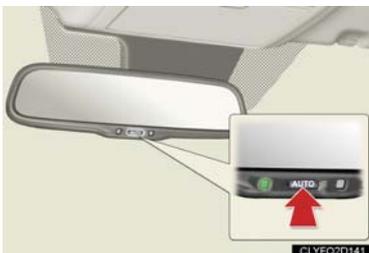

To turn automatic mode on/off, press the "AUTO" button.

The indicator comes on when automatic mode is turned on.



## Power (Ignition) Switch

With the electronic key on your person, the hybrid system can be started by simply pressing the “POWER” switch, while depressing the brake pedal.  
(The mechanical key cannot be used to start the hybrid system.)

### n Starting the hybrid system



Make sure the parking brake is set and the shift lever is in “P”.


- 1] Depress the brake pedal.  
The “POWER” switch indicator light turns green.
- 2] Press the “POWER” switch.  
When the “READY” indicator changes from flashing to on, the hybrid system is properly started.

### n Stopping the hybrid system

- 1] Set the parking brake and shift the shift lever to “P”.
- 2] Press the “POWER” switch.


### n Changing “POWER” switch mode

To change the “POWER” switch mode without turning on the hybrid system, press the “POWER” switch without depressing the brake pedal. The mode can be changed in the following order:

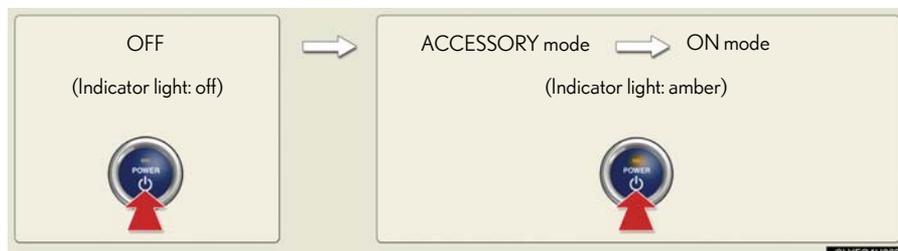

## Transmission

### n Shift positions

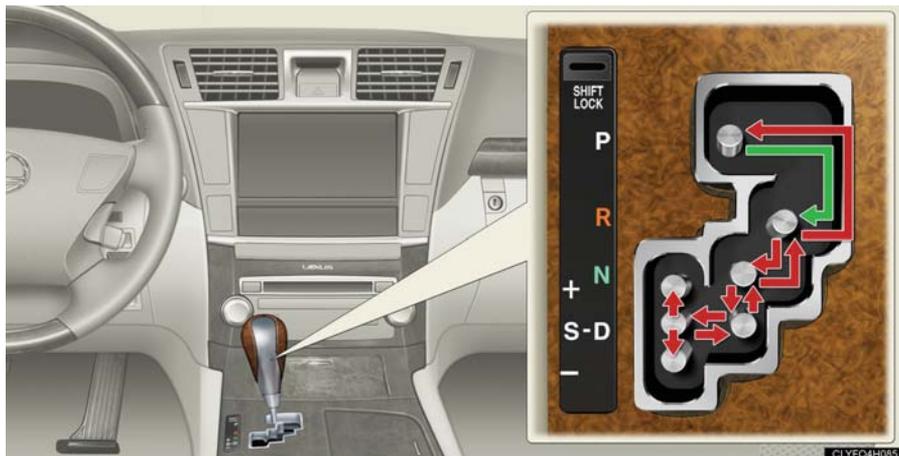

- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

← The vehicle can only be shifted out of "P" when the "POWER" switch is in ON mode and the brake pedal is depressed.

### n "S" mode

"S" mode allows the driver to select the shift range manually based on driving conditions.



1 Shift the shift lever to "S".




2 To upshift: shift the shift lever toward "+".  
To downshift: shift the shift lever toward "-".

The selected shift range is displayed in the meter.

## Driving Mode Selector Switch/ “ECO MODE” Switch

The following modes can be selected in any shift position to suit driving conditions.

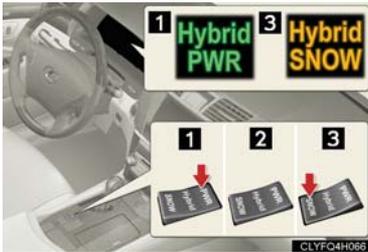


### 1 Power mode

For more powerful acceleration and uphill driving.

### 2 Normal mode

### 3 Snow mode

For starting or accelerating on snow-covered roads or other slippery surfaces.

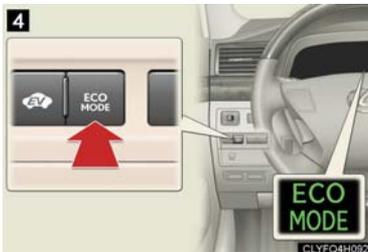

### 4 Eco mode

For controlling vehicle driving force and operation of the air conditioning system with the aim of improving fuel efficiency.

- n To cancel a mode (power, snow or eco mode), press that mode's switch again.
- n Only one mode can be selected at a time.

## EV Drive Mode

In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas early in the morning or late at night, or indoor parking lot etc. without concern for noises and gas emissions.



To turn EV drive mode on/off, press the EV drive mode switch.

The indicator comes on when EV drive mode is turned on.

## Parking Brake

For the parking brake, an electrical parking brake system is adopted.

### n Manual mode



**1 To set the parking brake:** push the parking brake switch.

**2 To release the parking brake:** pull the parking brake switch.

Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

### n Automatic mode




In automatic mode, the parking brake is set automatically according to shift lever operation. To use the automatic mode, press the "AUTO" switch.

**When the shift lever is moved out of "P":** The parking brake will be released.

**When the shift lever is moved into "P":** The parking brake will be set.

## Brake Hold


The brake hold system keeps the brake applied when the shift lever is in "D", "S" or "N" with the system on and the brake pedal has been depressed to stop the vehicle.

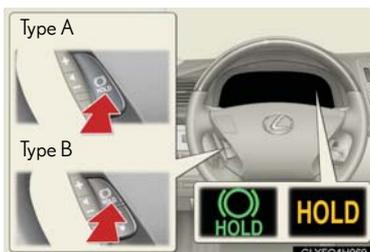

To turn the system on, press the "HOLD" switch. The brake hold standby indicator comes on. While the system is holding the brake, the brake hold operated indicator light comes on.


The system releases the brake when the accelerator pedal is depressed with the shift lever in "D" or "S" to allow smooth start off.

## Turn Signal Lever

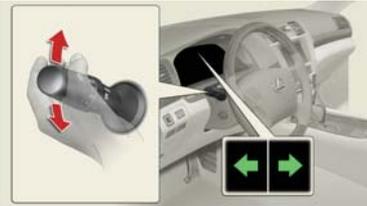

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and then release it. The turn signals will flash 3 times.

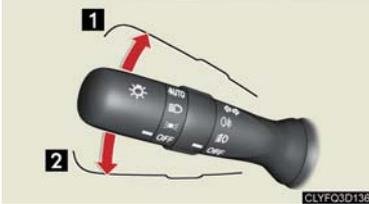

## Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash. The emergency flashers can be operated even when the "POWER" switch is OFF.

## Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

### n Display information



- 1 Trip information
    - Energy monitor
    - Cruising range
    - Average fuel consumption
    - Current fuel consumption
    - Average fuel consumption after refueling
    - Distance after refueling
    - Elapsed time
    - Average vehicle speed
    - Tire inflation pressure
    - Customization
  - 1 Intuitive parking assist display
  - 1 Dynamic radar cruise control display\*
  - 1 Lane-keeping assist display\*
  - 1 Turn-by-turn navigation
  - 1 Warning messages
- \*: If equipped

### n Changing the display of trip information




Trip information items can be switched by pressing the "DISP" switch.

- n When using intuitive parking assist or dynamic radar cruise control the appropriate display is shown on the screen.
- n In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

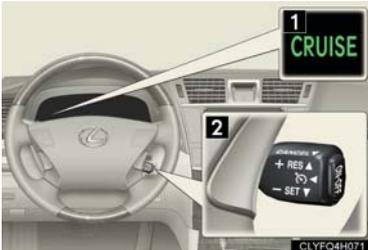

- 1 Indicator
- 2 Cruise control switch

### n Setting the speed



- 1 Press the "ON-OFF" button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### n Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

### n Adjusting the speed setting




**To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

## Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with vehicle-to-vehicle distance control mode.

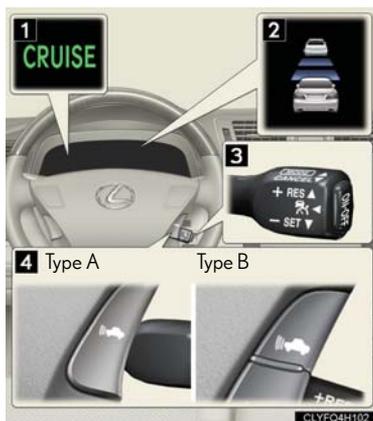

- 1 Indicator
- 2 Display
- 3 Cruise control switch
- 4 Distance switch


### n Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

### n Vehicle-to-vehicle distance control mode

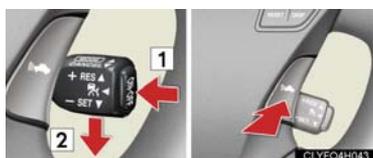

- 1 Press the "ON-OFF" button.
  - 2 Accelerate or decelerate to the desired speed, and then push the lever down.
- Vehicle-to-vehicle distance can be adjusted using the distance switch.

### n Constant speed control mode



- 1 Press the "ON-OFF" button.
- 2 Push the lever away from you and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

## n Canceling



- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

## n Adjusting the speed setting




**To increase speed:** push the lever up.

**To decrease speed:** push the lever down.



Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## Headlights

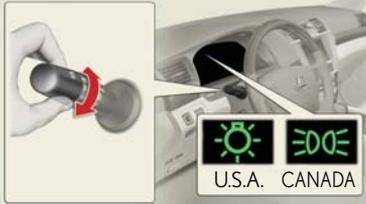

- 1 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The instrument panel, headlights and other exterior lights turn on/off automatically in accordance with ambient light levels.

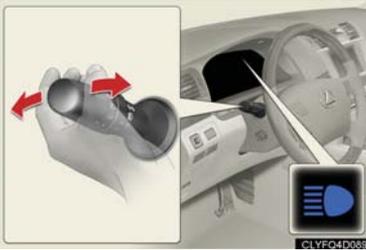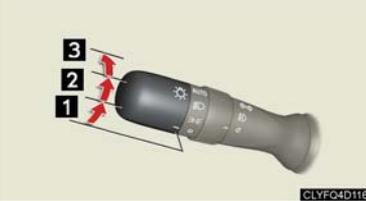

To engage the high beams, push the lever away from you.

To flash the high beams temporarily, pull the lever toward you.

Vehicles with the Automatic High Beam: Pushing the lever forward when the headlight switch is in the "AUTO" position activates the Automatic High Beam.

## n AFS (Adaptive Front-lighting System)



AFS improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



To cancel the system, press the "AFS OFF" switch. The indicator comes on when the system is off.

Press the switch again to reactivate the AFS.

## Fog Lights

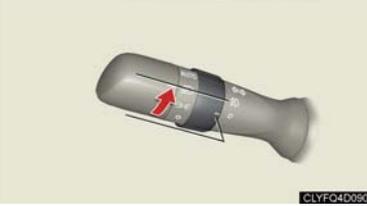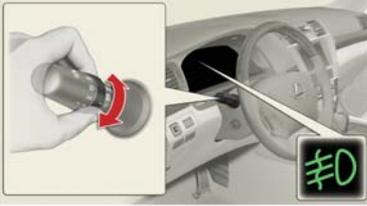



The fog lights can be used only when the headlights (low beam) are on.

CLYF04D090

## Windshield Wipers and Washer



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation

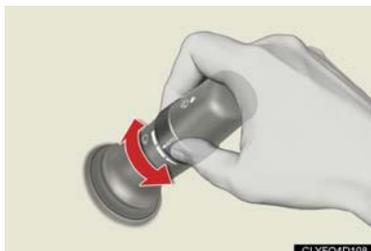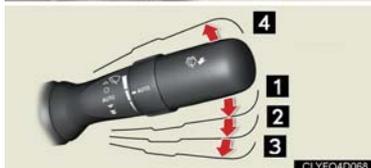

Sensitivity can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

## Headlight Cleaner



The headlight cleaner can be used only when the "POWER" switch is in ON mode and the headlights are on.

## Instrument Panel Light Control



- 1 To dim: press "∨".
- 2 To brighten: press "^".

## Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

## Touch Screen

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display, etc. For details, refer to the "Owner's Manual".




- 1 "CLIMATE": Air conditioning operation screen
  - 2 "AUDIO": Audio control screen\*
  - 3 "SETUP": Setup screen\*
  - 4 "DISP": Adjust picture quality\*
  - 5 "MAP/VOICE": Vehicle's current position\*
  - 6 "DEST": Destination screen\*
  - 7 "INFO/PHONE": Information screen\*
- \*: See "Navigation System Owner's Manual".

## n Set up screen

---

Press "SETUP" to display the "Setup" screen.

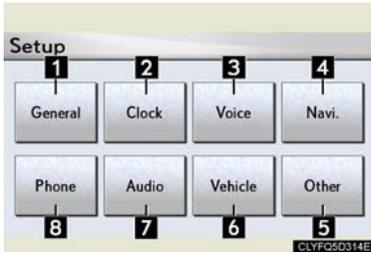


- 1 "General": General settings screen
- 2 "Clock": Clock settings screen
- 3 "Voice": Voice settings screen
- 4 "Navi.": Navigation settings screen
- 5 "Other": Other settings screen
- 6 "Vehicle": Vehicle settings screen
- 7 "Audio": Audio settings screen
- 8 "Phone": Phone settings screen

## n Information screen

---

Press "INFO/PHONE" to display the "Information" screen.

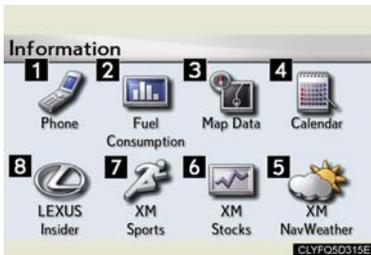

- 1 "Phone": Phone screen
- 2 "Fuel Consumption": Fuel consumption screen
- 3 "Map Data": HDD data screen
- 4 "Calendar": Calendar screen
- 5 "XM NavWeather": XM NavWeather™ screen
- 6 "XM Stocks": XM Stocks screen
- 7 "XM Sports": XM Sports screen
- 8 "LEXUS Insider": LEXUS Insider screen

## Front Air Conditioning System

### ► Without rear air conditioning system



CLYF050267E

### ► With rear air conditioning system



CLYF050268E

- |  |  |
|--|--|
| 1 "CLIMATE" (air conditioning operation screen display button) | 10 Driver side temperature display                         |
| 2 Air flow display   | 11 Automatic mode button                                   |
| 3 Fan speed display  | 12 Dual mode button  |
| 4 Passenger side temperature control                           | 13 Driver side temperature control                         |
| 5 Outside air/recirculated air mode button                     | 14 "A/C" button  |
| 6 Passenger side temperature display                           | 15 Rear air conditioning operation screen display switch   |
| 7 Micro dust and pollen filter button                          | 16 Air purifier and rear air conditioning operation switch |
| 8 Windshield defog/defrost                                     | 17 Individual mode button                                  |
| 9 "OFF" button   |  |

## **n Using the automatic mode**

---

- 1] Press the "AUTO" button.
- 2] Adjust the temperature using the "TEMP" buttons.

## **n Adjusting the temperature in dual mode (without rear air conditioning system)**

---

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.  
To cancel the dual mode, press the "DUAL" button.

## **n Adjusting the temperature in individual mode (with rear air conditioning system)**

---

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.


Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.  
To adjust the temperature for the rear seats, see P.48.  
To cancel the individual mode, press the "4-ZONE" button.

## Rear Air Conditioning System (If Equipped)

### ► 5-seat models




### ► 4-seat models

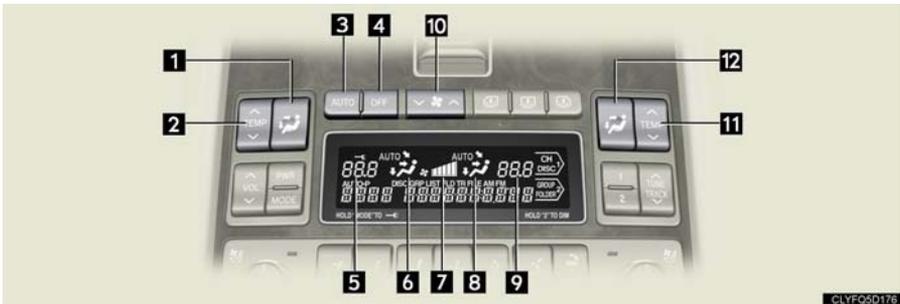

- 1 Changes the left side air outlet used
- 2 Left side temperature control
- 3 Automatic mode button
- 4 "OFF" button
- 5 Left side temperature display
- 6 Left side air flow display

- 7 Air volume display
- 8 Right side air flow display
- 9 Right side temperature display
- 10 Air volume controls
- 11 Right side temperature control
- 12 Changes the right side air outlet used


### n Front controller (touch screen)

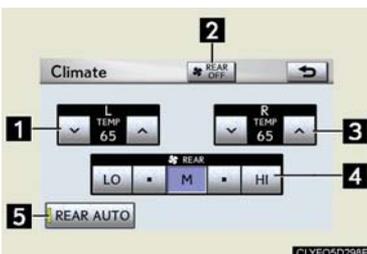

- 1 Left side temperature control switch and display
- 2 Off
- 3 Right side temperature control switch and display
- 4 Fan speed display
- 5 Automatic mode button

## Climate Control Seats/Seat Heaters

### n Front climate control seats

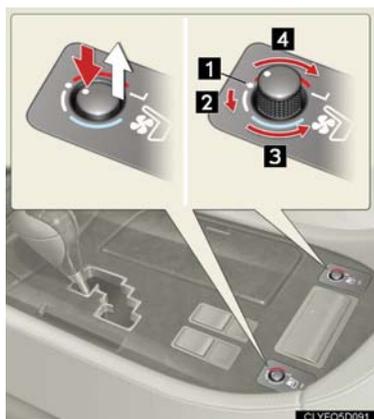


Press the knob to pop out, and turn the knob to adjust the seat temperature.

- 1 Off
- 2 Ventilation
- 3 Cool air
- 4 Warm air

### n Rear climate control seats (if equipped)


#### ► 5-seat models

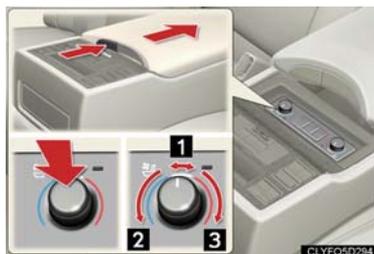

Slide the armrest lid. Press the knob to turn the system on and then turn it to adjust the temperature.

- 1 Ventilation
- 2 Cool air
- 3 Warm air

#### ► 4-seat models

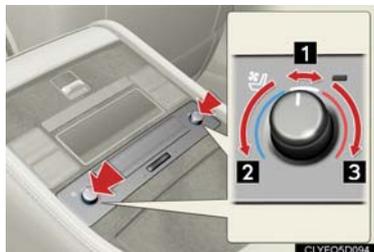


Press the knob to turn the system on and then turn it to adjust the temperature.

- 1 Ventilation
- 2 Cool air
- 3 Warm air

The rear climate control seats can also be turned on and off from the front seat by pressing the button.



## n Rear seat heaters (if equipped)

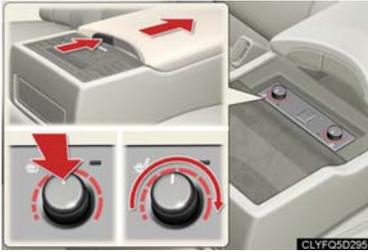

Press the knob to turn the system on, and turn the knob to adjust the seat temperature.

The rear seat heaters can also be turned on and off from the front seat by pressing the button.



## Console Box



### ► Without rear console display

To open, slide and lift the armrest with the button pushed in.




### ► With rear console display

To open, press the button and lift the armrest.

There is a power outlet located in the front console box.



## Glove Box

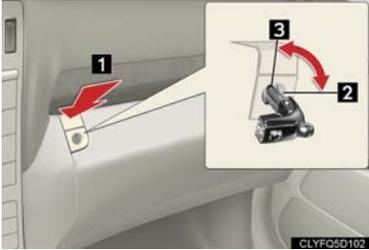

- 1 Opens: press the button.
- 2 Locks
- 3 Unlocks

The glove box can be locked and unlocked using the mechanical key.

## Auxiliary Boxes



- **Overhead**  
To open, press in the button.



- **Rear console (with rear console display)**  
To open, press in the lid.



- ▶ **Rear seat (5-seat models)**  
To open, press the button and lift the lid.



- ▶ **Rear seat (4-seat models—seatback)**  
To open, press in the lid.




- ▶ **Rear seat (4-seat model—armrest)**  
To open, pull up the lever to release the lock and lift the lid.

## Cup Holders



### ► Front

To open, press down the lid on the side farthest to the driver.

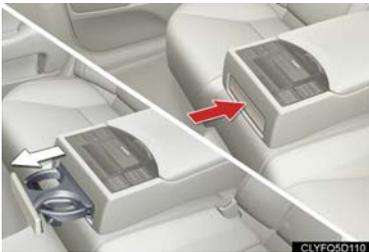

### ► Rear (5-seat models)

To open, press in and release.



### ► Rear (4-seat models)

To open, press in and release.


## Heated Steering Wheel



To heat the leather portion of the steering wheel, press the button.


Press again to cancel.

## Rear Sunshade/Rear Door Sunshades

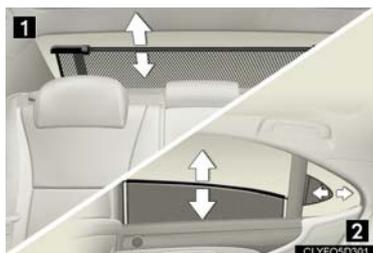


- 1 Rear sunshade
- 2 Rear door sunshades (if equipped)

### n Raising/Extending from the front seat

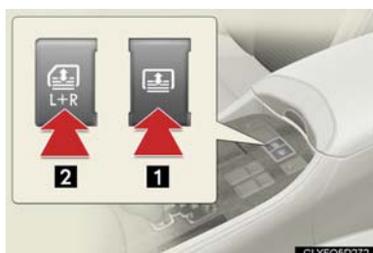

#### ► Without rear console display


- 1 Raises the rear sunshade  
Press the button again to lower it.
- 2 Extends the rear door sunshades  
Press the button again to retract them.

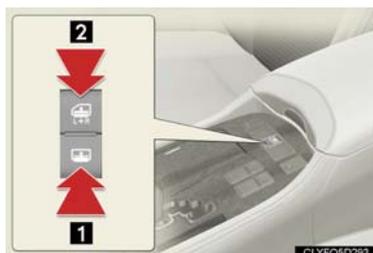

#### ► With rear console display

- 1 Raises the rear sunshade  
Press the button again to lower it.
- 2 Extends the rear door sunshades  
Press the button again to retract them.

## n Raising/Extending from the rear seat

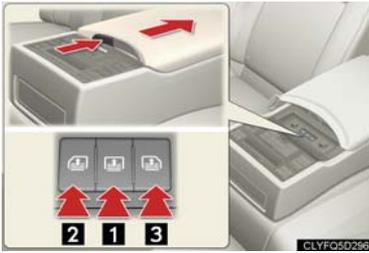


### ► 5-seat models

Slide the armrest lid.

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

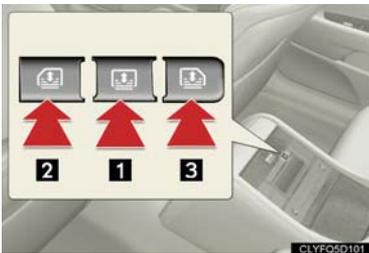

### ► 4-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

## Garage Door Opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

### n Programming HomeLink®

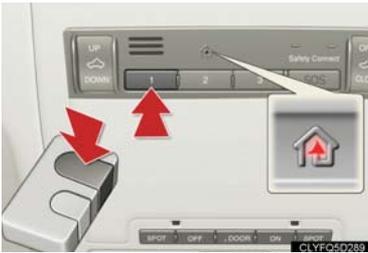

- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the learn button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

## n Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## n Operating HomeLink®

---



Press the appropriate HomeLink® button.  
The indicator light should come on.

## Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM<sup>®</sup> satellite data services to provide safety and security as well as convenience features to subscribers.


Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### n Safety Connect system components

---

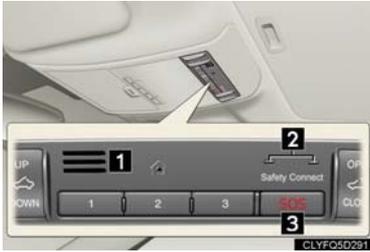

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

## n Services

---

► **With an active Lexus Enform subscription, the following features are available:**

### 1 Safety Connect

- Automatic collision notification <sup>\*1</sup>

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

- Stolen vehicle location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- Emergency assistance button (SOS)

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- Enhanced roadside assistance

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## 1 **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

## 1 **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com](http://www.lexus.com) and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

## 1 **XM® Sports and Stocks** \*2

XM® Sports and Stocks is a service included with XM® satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

## 1 **XM NavWeather™**\*3

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

## 1 **XM® NavTraffic** \*3

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

► **The following navigation-based Lexus Enform features are available without a subscription:**

**1 Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

**1 Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

\*1: U.S. Patent No. 7,508,298 B2

\*2: Available at no extra charge with an active XM<sup>®</sup> satellite radio subscription.

\*3: Available via separate XM<sup>®</sup> subscription(s).

## **n Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or touch "Destination Assist" or push the "SOS" button in your vehicle for further subscription details. XM NavTraffic<sup>®</sup> and XM NavWeather<sup>™</sup> require separate XM<sup>®</sup> subscription(s). XM<sup>®</sup> Sports and Stocks is available with an XM<sup>®</sup> Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM<sup>®</sup> subscription(s) to continue receiving these services.

## Door Locks

### n Locking the vehicle from inside

---



#### ► Inside lock button

- 1 Locks
- 2 Unlocks



#### ► Door lock switch Operates all door locks.

- 1 Locks
- 2 Unlocks

### n Locking the vehicle from outside

---

Using the entry function or wireless remote control (→P.14, 15)

### n Rear door child-protector lock

---



Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

## Power Windows



### 1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

## Moon Roof

### n Opening and closing



### 1 Opens

The moon roof stops slightly before the fully open position.

To fully open, press the switch again.

### 2 Closes

### n Tilting up and down



### 1 Tilts up

### 2 Tilts down

## Fuel Tank Cap



- 1 Press the fuel filler door opener.  
Refueling will be possible when a message on the multi-information display indicates that the door fuel filler door has opened.



- 2 Slowly remove the cap by turning it counter-clockwise.  
After the cap is removed, it can be hung on the inside of the fuel filler door.

## Hood



- 1 Pull the hood release lever.



- 2 Insert your fingers under the hood, pull the hood catch and lift the hood.

# Trunk

## n Opening the trunk



### ► Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.

The trunk lid automatically opens fully.



To disable the trunk opener, turn off the main switch in the glove box.

- 1 On
- 2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

► Entry function and wireless remote control (→P.14, 15)

## n Trunk easy closer

If the trunk lid is left slightly open, it will close automatically.

## n Trunk closer switch



Pressing the switch closes the trunk lid automatically.

## List of Warning/Indicator Lights



CLYFQ8H024

The units used on the speedometer, the tachometer gauge display, indicators and warning lights may differ depending on the model / type.

**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**



(U.S.A.)

Brake system warning light



(Canada)

**Stop the vehicle immediately.**



Charging system warning light

**Have the vehicle inspected immediately.**



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



Brake system warning light



Electric power steering system warning light



Pre-collision system warning light\*<sup>1</sup>

(Flashes)



(U.S.A.)

"ABS" warning light



(Canada)



Tire pressure warning light

(Flashing and then continuously on)



Slip indicator

(Comes on)

For further information, refer to the Owner's Manual.

## What to do if ...

### Follow the correction procedures.



Open door warning light



(In the fuel gauge)


Low fuel level warning light



Driver's seat belt reminder light



Master warning light

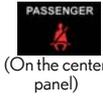

(On the center panel)

Front passenger's seat belt reminder light



(Illuminate no flashing)

Tire pressure warning light<sup>\*2</sup>



High coolant temperature warning light

### See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Automatic High Beam indicator<sup>\*1</sup>



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"Hybrid PWR" indicator



"Hybrid SNOW" indicator



"SPORT" mode indicator



"COMFORT" mode indicator



"HEIGHT HIGH" indicator



Lane keeping assist indicator<sup>\*1</sup>



"READY" indicator



EV drive mode indicator



Cruise control indicator



"AFS OFF" indicator



(Flashes)

Slip indicator



VSC off indicator



Parking brake indicator (U.S.A.)



Parking brake indicator (Canada)



Brake hold standby indicator



Brake hold operated indicator



(On the center panel)

"AIR BAG ON" and "AIR BAG OFF" indicators



Eco Driving Indicator Light



"ECO MODE" indicator

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: Turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure.

## Spare Tire and Tool Compartment

### n Jack, tools, and spare tire



- 1 Jack handle
- 2 Spare tire
- 3 Wrench
- 4 Jack


### n Taking out the spare tire



- 1 Lift up the panel on the trunk floor.
- 2 Loosen the center fastener and remove the spare tire.

## If the electronic key does not operate properly

### n Unlocking and locking the doors

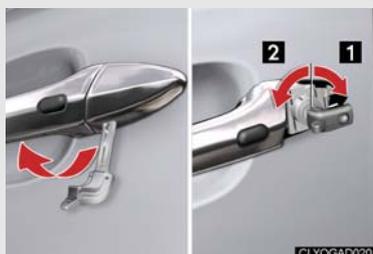

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

## What to do if ...

### n Starting the hybrid system




- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.
- 3 Press the "POWER" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

To change "POWER" switch mode, release the brake pedal and press the "POWER" switch within 10 seconds of the buzzer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

### If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

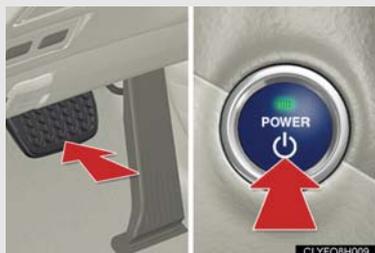

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.34)



#### Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "POWER" switch while gently turning the wheel left or right. (→P.16)

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

 
Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the "POWER" switch OFF.	Turn the "POWER" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings continuously.	The "POWER" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "POWER" switch was in ACCESSORY mode).	Turn the "POWER" switch OFF and close the driver's door.
	The "POWER" switch was turned OFF while the driver's door was open.	Close the driver's door.

## What to do if ...

Alarm	Situation	Correction procedure
Interior alarm sounds continuously. <sup>*1</sup>	When the "POWER" switch is in ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P" and turn the "POWER" switch OFF.
Interior and exterior alarms sound continuously. <sup>*1</sup>	When the "POWER" switch is in ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P", turn the "POWER" switch OFF and close the driver's door again.
Interior alarm pings once. <sup>*1</sup>	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the hybrid system without the electronic key being present, or the electronic key was not functioning normally.	Start the hybrid system with the electronic key present. <sup>*2</sup>
Interior alarm pings once and exterior alarm sounds 3 times. <sup>*1</sup>	The driver's door was closed after the key was carried outside the vehicle, and the "POWER" switch was not turned OFF.	Turn the "POWER" switch OFF and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the "POWER" switch was not OFF.	Bring the electronic key back into the vehicle.

<sup>\*1</sup>: A warning message will be shown on the multi-information display in the instrument cluster.

<sup>\*2</sup>: If the hybrid system does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key.



## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

### n Settings that can be customized at a dealer

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors
Wireless remote control	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
	Operational signal (emergency flashers)	On	Off
Trunk unlocking operation	Push and hold	Push twice	
		One short push	
Alarm (panic mode)	On	Off	
Smart access system with push-button start and wireless remote control	Operation signal (emergency flashers)	On	Off
	Open door warning buzzer	On	Off

Item	Function	Default setting	Customized setting
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting the shift lever to "P" unlocks all doors.	On	Off
	Shifting the shift lever to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Trunk	Power trunk opener and closer function	On	Off
Power easy access system	Driver's seat movement when exiting the vehicle	Full	Off
	Steering wheel auto away and return function		Partial
Power windows	One-touch close operation using the power window switches on the front passenger door and each rear door	On	Off
	One-touch front passenger window or rear window close operation using the power window switch on the driver's door	On	Off
	Mechanical key linked operation	Open and close	Off
			Open only
	Close only		
Wireless remote control linked operation	Off	On	
Linked entry function	On	Off	

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Moon roof	Mechanical key linked operation	Open and close	Off
			Open only
			Close only
	Linked operation of components when mechanical key is used	Slide only	Tilt only
	Wireless remote control linked operation	Off	On
Automatic light control system	Linked operation of components when wireless remote control used	Slide only	Tilt only
	Linked entry function	On	Off
Turn signal lever	Times of flashing of the lane change signal flashers	3	Off
			5
			7
			9
			11
Automatic light control system	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
Automatic high beam system	On	Off	
Air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights	Daytime running light system (U.S.A. only)	On	Off

Item	Function	Default setting	Customized setting
Illumination	Time elapsed before the interior lights turn off	15 seconds	Off 7.5 seconds 30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off 7.5 seconds 30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2
	Operation when the doors are unlocked	On	Off
	Operation after the "POWER" switch is turned OFF	On	Off
	Footwell lighting	On	Off
	Shift lever lighting	On	Off
Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	On	Off

### n Settings that can be customized using the navigation system display

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
Smart access system with push-button start and wireless remote control	Operation signal (emergency flashers)	On	Off
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting the shift lever to "P" unlocks all doors.	On	Off
	Shifting the shift lever to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Power easy access system	Driver's seat movement when exiting the vehicle	Full	Off
			Partial
Turn signal lever	Times of flashing of the lane change signal flashers	3	Off
			5
			7
			9
			11

Item	Function	Default setting	Customized setting
Automatic light control system	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 second
			60 seconds
			90 seconds
Air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights	Daytime running light system (U.S.A. only)	On	Off
Illumination	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2





### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### n U.S. OWNERS

l In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

l In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### n CANADIAN OWNERS

l In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

l The U.S. mainland: **[www.lexus.com](http://www.lexus.com)**

l Hawaii: **[www.servcolexus.com](http://www.servcolexus.com)**

l Canada : **[www.lexus.ca](http://www.lexus.ca)**

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.