

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.


Audio System (with navigation system)*	
Basic operation	66
Radio.....	66
DVD player/CD player.....	67
Operating an iPod.....	69
Remote control (steering wheel switches).....	69
Audio System (without navigation system)	
Basic operation	59
Radio.....	60
CD player.....	61
Operating an iPod.....	64
Remote control (steering wheel switches).....	64
Rear seat audio controls	65
Automatic Transmission (with paddle shift switches)	25
Automatic Transmission (without paddle shift switches)	23
Brake Hold	29
Compass	77
Cruise Control	32
Door Locks	84
Driving Pattern Selector Switch/"ECO MODE" Switch	28
Dynamic Radar Cruise Control	33
Eco Driving Indicator	31
Engine (Ignition) Switch	22
Fog Lights	37
Front Air Conditioning System (with touch screen)*	
Using the automatic mode.....	73
Adjusting the temperature in dual mode (without rear air conditioning system).....	73
Adjusting the temperature in individual mode (with rear air conditioning system).....	73
To turn off the airflow.....	73
Front Air Conditioning System (without touch screen)	
Using the automatic mode.....	70
Adjusting the temperature in dual mode.....	71
To turn off the airflow.....	71
Front Seats	13
Fuel Tank Cap	86
Hands-free System For Cellular Phone*	
Bluetooth® phone pairing.....	51
Phonebook transfer	53
Registering a voice tag	54
Registering a speed dial	55
*: This feature may be operated by Voice command (See P.79)	


Calling by name.....	56
Calling by speed dial.....	57
Receiving a call.....	58
Head Restraints	20
Headlights	35
Heated Steering Wheel	75
Instrument Panel Light Control	40
Keys	10
Lexus Enform with Safety Connect	82
Moon Roof	85
Multi-information Display	30
Navigation System*	
Register home.....	45
Destination input — Search by address.....	46
Destination input — Search points of interest by name.....	48
Destination input — Search points of interest by category.....	49
Destination input — Search points of interest by telephone number.....	50
Voice Command System.....	79
Parking Brake	29
Power Rear Seat	16
Power Windows	85
Rear Air Conditioning System	
Front controller (touch screen).....	74
Rear Sunshade/Rear Door Sunshades	75
Rear Window and Outside Rear View Mirror Defoggers	40
Safety Connect	80
Seat Belts	21
Smart Access System with Push-button Start	11
Theft Deterrent System	12
Touch Screen	
Set up screen.....	42
Display.....	43
Screen scroll operation.....	44
Setting a route.....	44
Trunk	87
Trunk Storage Extension	77
Turn Signal Lever	32
Voice Command System*	
Basic operation.....	79
Windshield Wipers and Washer	38

*: This feature may be operated by Voice command (See P.79)

Overview

Instrument Panel

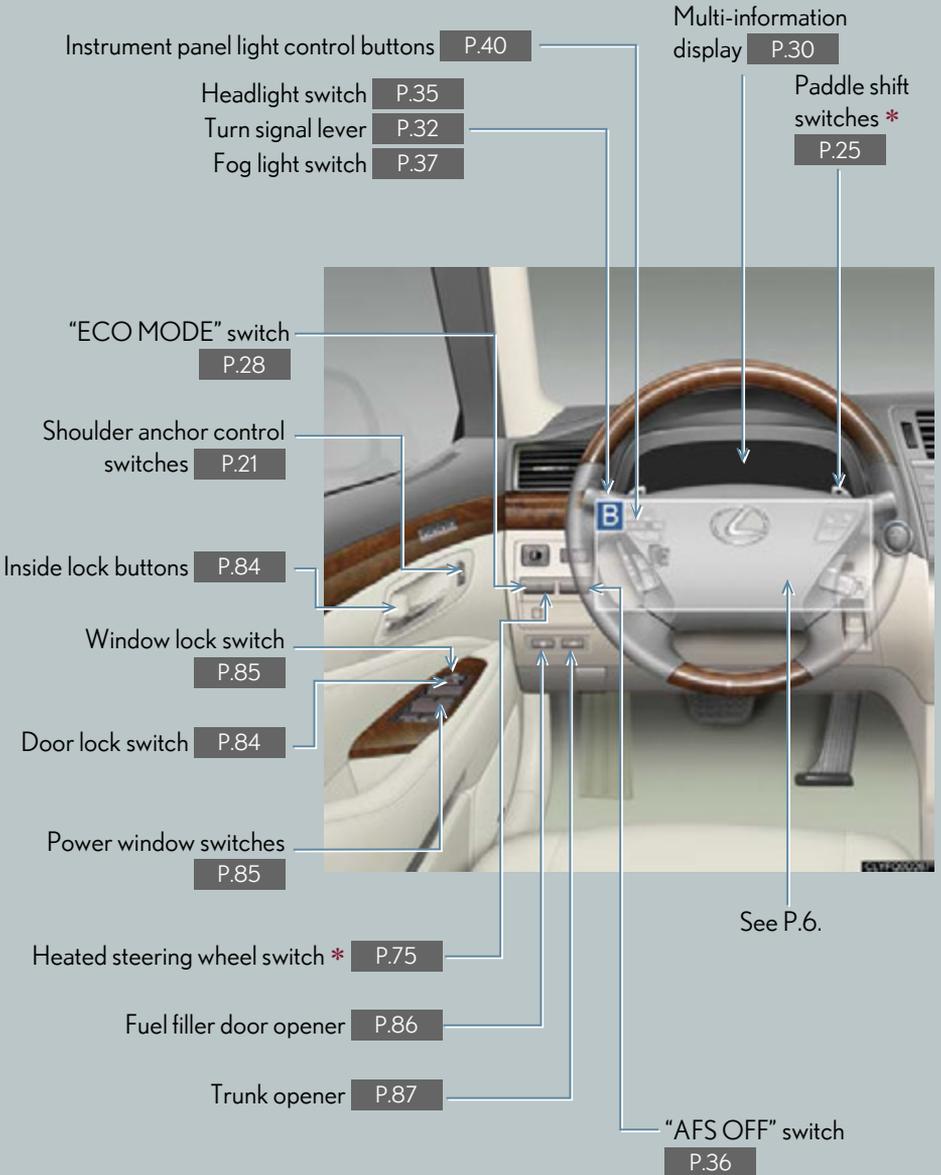

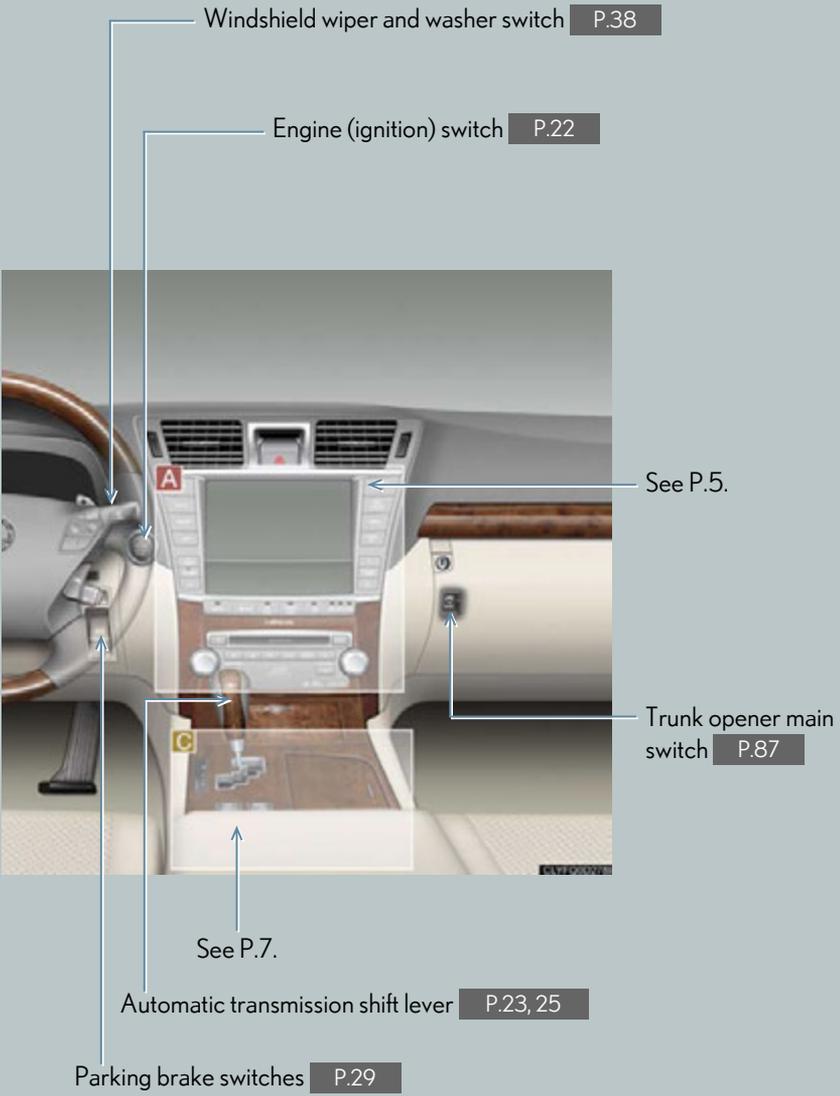

* : If equipped

A

► Type A



Rear window and outside rear view mirror defoggers P.40

Air conditioning system P.70

Audio system P.59

► Type B



Navigation system * P.45


Touch screen P.41

Rear window and outside rear view mirror defoggers P.40

Air conditioning system P.72

Audio system P.59, 66


B

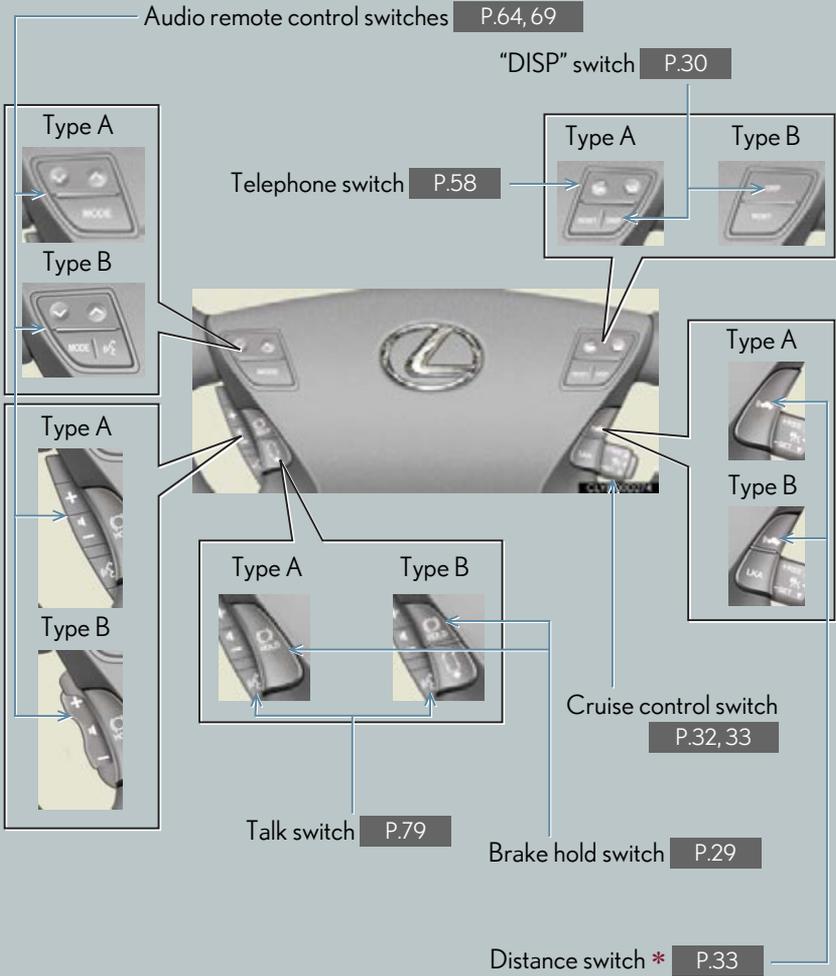

* : If equipped

C

▶ Without rear console display

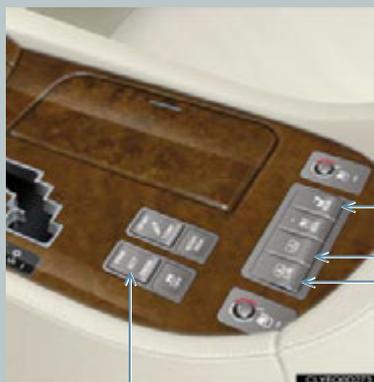


Driving pattern selector switch P.28

Rear seat return switch * P.16

Rear sunshade switch * P.75

Rear door sunshade switch * P.75

▶ With rear console display

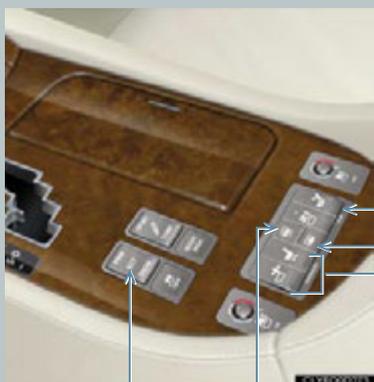

Driving pattern selector switch P.28

Rear seat return switch P.16

Rear sunshade switch P.75

Front passenger's power seat switches P.14

Rear door sunshade switch P.75

* : If equipped


Overview

Rear Armrest (5-seat models)

► Without relaxation seat



► With relaxation seat

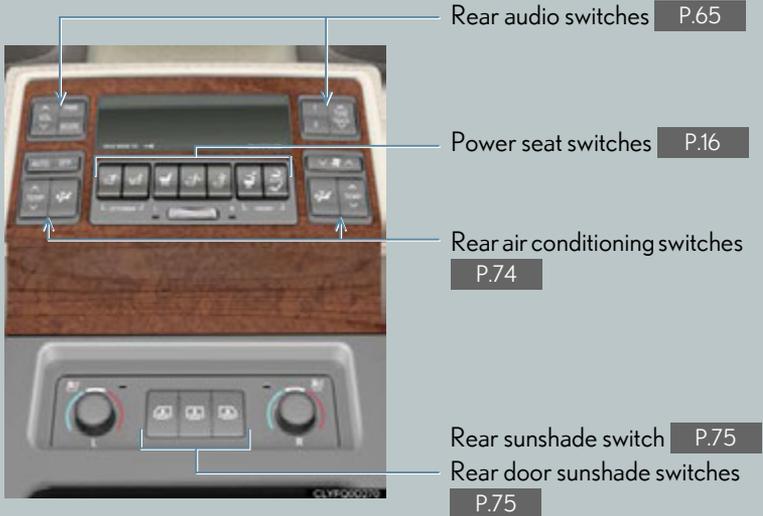

* : If equipped



Keys

Electronic key



Smart access system with push-button start
(→P11, 22)

*: If equipped

Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box
- Locks and unlocks the trunk storage extension

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

Wireless remote control




- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
- 3 Press and hold:** opens the trunk
If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 22.

■ Entering the vehicle

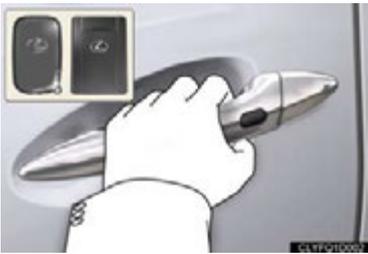

To unlock the vehicle, simply grasp one of the door handles.

■ Exiting the vehicle



To lock the vehicle, press the lock button on one of the door handles.

To close the windows and the moon roof, press and hold the lock button.

■ Opening the trunk



To open the trunk, press the trunk release button.

If the vehicle is equipped with a power trunk opener and closer, the trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 90.

Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

To set the alarm: close the doors, trunk and hood, and lock all doors. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: turn the “ENGINE START STOP” switch to IGNITION ON mode, start the engine, or unlock the doors or trunk.

Steering lock



The steering wheel locks when the “ENGINE START STOP” switch is turned OFF and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, press the “ENGINE START STOP” switch while gently turning the wheel left or right.

Front Seats

■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.

■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting vertical height



- 1 Raises the height of the seat
- 2 Lowers the height of the seat

■ Adjusting the seat cushion length (driver's seat)




- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

■ Adjusting the seat cushion (front) angle



- 1 Raises the front of the cushion
- 2 Lowers the front of the cushion

■ Adjusting the lumbar support

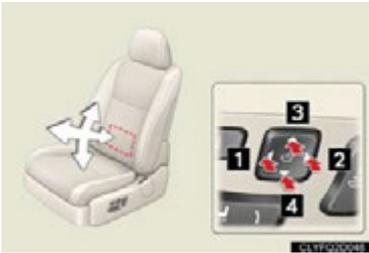

► Driver's seat

- 1 Firmer
- 2 Softer
- 3 Up
- 4 Down

► Front passenger's seat

- 1 Firmer
- 2 Softer

■ Operating the front passenger's seat from driver's seat or rear seat

■ Operating the front passenger's seat from the driver's seat

► Without rear console display



- 1 Tilts the seatback forward
- 2 Tilts the seatback backward
- 3 Moves the seat forward
- 4 Moves the seat backward

► With rear console display



- 1 Tilts the seatback forward
- 2 Tilts the seatback backward
- 3 Moves the seat forward
- 4 Moves the seat backward


■ Operating the front passenger's seat from the rear seat (with relaxation seat)

▶ 5-seat models



- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward
The seatback will return to the neutral position.

▶ 4-seat models

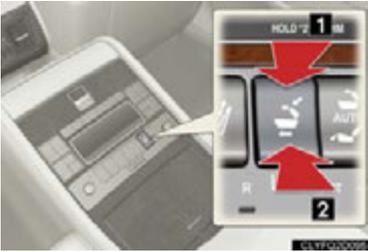

- 1 Moves the front passenger's seat forward
- 2 Moves the front passenger's seat backward
The seatback will return to the neutral position.

The operation can be performed when the "ENGINE START STOP" switch is in IGNITION ON mode.

Power Rear Seat (If Equipped)

► 5-seat models without relaxation seat



1 Selecting the seat

2 Adjusting the seat position

3 Adjusting the seatback upper angle

4 Pelvic support seat controller

► 5-seat models with relaxation seat



1 Selecting the seat

2 Adjusting the seat position

3 Adjusting the seatback upper angle

4 Adjusting the seatback angle

5 Adjusting the ottoman angle

6 Rear seat relaxation system/pelvic support seat controller

► 4-seat models



- 1 Selecting the seat
- 2 Adjusting the seat position
- 3 Adjusting the seatback upper angle
- 4 Adjusting the seatback angle
- 5 Adjusting the ottoman angle
- 6 Rear seat relaxation system/pelvic support seat controller


■ Returning the rear seat from the front seats



The seat will return to the neutral position while the button is pressed and held.

■ Relaxation mode (relaxation seat)

▶ 5-seat models

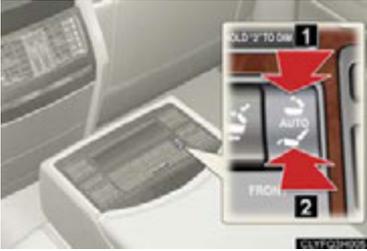


- 1 Moves the seats to the relaxation mode
- 2 Returns the seats to the neutral position

The rear seat seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the “ENGINE START STOP” switch is in IGNITION ON mode.

▶ 4-seat models

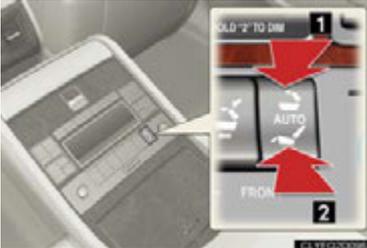


- 1 Moves the seats to the relaxation mode
- 2 Returns the seats to the neutral position

The rear seat seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the “ENGINE START STOP” switch is in IGNITION ON mode.

When a rear door is opened, the seat on that side will automatically return to the neutral position.

■ Pelvic support seat with seat vibrator

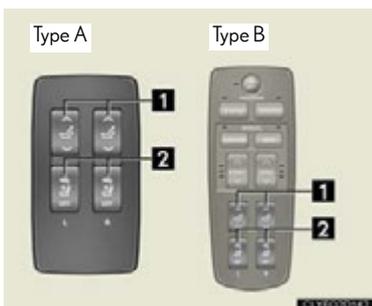


- 1 Support plate position adjustment switch
- 2 Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing “OFF” stops the vibration function.

Automatic stop function: Vibration will automatically stop approximately 15 minutes after starting.

■ Rear seat relaxation system (with relaxation seat)

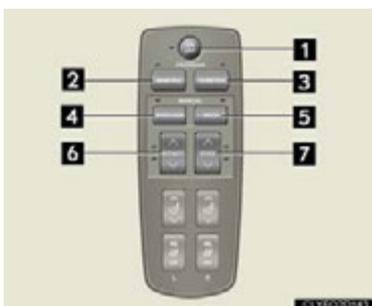


- 1 Turns the system on and off
If no buttons are selected within approximately 3 minutes of operating this switch, the system will automatically turn off.
- 2 Starts the “SHIATSU” program
Partial pressure for the whole back
- 3 Starts the “STRETCH” program
Stretches and relaxes the lower back
- 4 Starts operation for the upper back
- 5 Starts operation for the lower back
- 6 Adjusts the intensity of the air pressure
3 intensity levels are available.
- 7 Adjusts the speed of the air unit
3 speed levels are available.

Automatic stop function: Each operation will automatically stop approximately 15 minutes after starting.

Head Restraints


Front seats

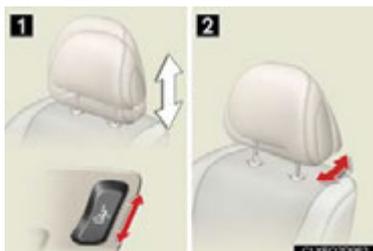

- 1 Vertical adjustment
- 2 Horizontal adjustment


Outside rear seats

► Power type

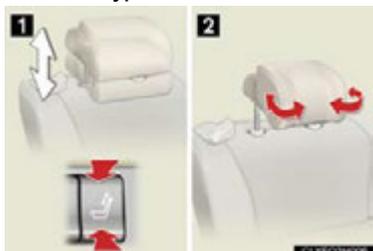


- 1 Vertical adjustment
- 2 Side support adjustment

► Manual type

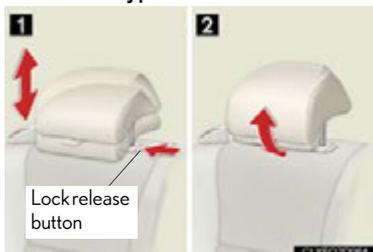

- 1 Vertical adjustment
Pull the head restraints up when raising.
Push and hold the lock release button when lowering.
- 2 Horizontal adjustment


■ Rear center seat (5-seat models)

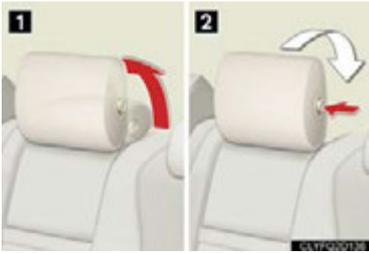

- 1 To use
- 2 To fold


■ Seat Belts

■ Adjusting the seat belt shoulder anchor height (front seats)

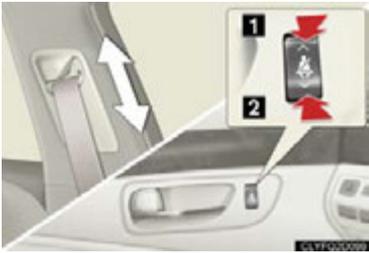

- 1 Up
- 2 Down

■ Seat belts comfort guides (outside rear seats)

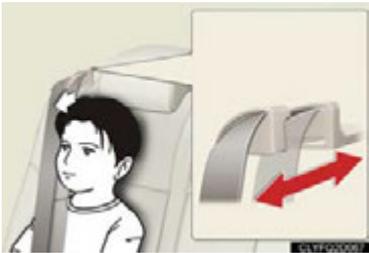

If the shoulder belt sits close to the neck, slide the comfort guide forward.

Engine (Ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is set and the shift lever is in “P”.

- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.


Stopping the engine

- 1 Set the parking brake and shift the shift lever to “P”.
- 2 Press the “ENGINE START STOP” switch.

If the shift lever is in a position other than “P” when turning off the engine, the “ENGINE START STOP” switch will be turned to ACCESSORY mode, not to OFF. To avoid unexpected battery discharge, make sure the lever is in the “P” position when stopping the engine.

Changing “ENGINE START STOP” switch mode

To change the “ENGINE START STOP” switch mode without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The mode can be changed in the following order:

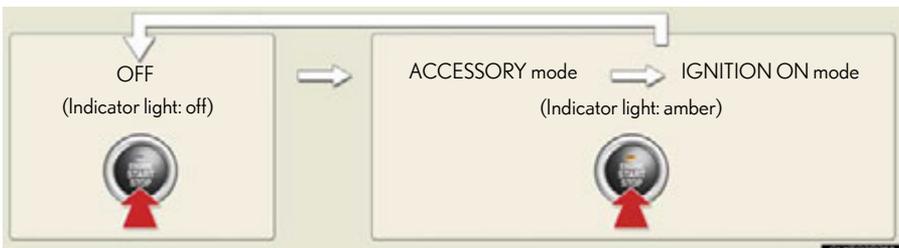

Automatic Transmission (without paddle shift switches)

Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

← The vehicle can only be shifted out of "P" when the "ENGINE START STOP" switch is in IGNITION ON mode and the brake pedal is depressed.

■ “S” mode

“S” mode allows the driver to select the shift range manually based on driving conditions.



1 Shift the shift lever to “S”.



2 To **upshift**: shift the shift lever toward “+”.
To **downshift**: shift the shift lever toward “-”.

The selected shift range is displayed in the meter.

Automatic Transmission (with paddle shift switches)

Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- M "M" mode

← The vehicle can only be shifted out of "P" when the "ENGINE START STOP" switch is in IGNITION ON mode and the brake pedal is depressed.

■ Changing shift ranges in the “D” position

Operating the paddle shift switches allows shift ranges to be selected to suit the driving conditions.



- 1 Pull the “-” paddle shift switch toward you.
The display in the meter will change to the display that indicates the selected shift range.

- 2 **Higher shift range:**
Pull the “+” paddle shift switch toward you.
Lower shift range:
Pull the “-” paddle shift switch toward you.

Pulling and holding the “+” paddle shift switch for a certain period of time allows you to return to normal “D” position driving. If the accelerator pedal is depressed for more than a certain period of time in “6”, “7” or “8” without changing the shift range, shift range selection in the “D” position will be automatically deactivated.

■ Changing gears in the “M” position

Operating the shift lever or paddle shift switches allows a gear to be selected and held, enabling you to time gear shifts as you please while driving.



- 1 Shift the shift lever to “M”.

The display in the meter will change to the display that indicates the selected gear.



- 2 **To upshift:**

Move the shift lever in the “+” direction or pull the “+” paddle shift switch toward you.

To downshift:


Move the shift lever in the “-” direction or pull the “-” paddle shift switch toward you.



In “M” mode, the gear will change only when the shift lever or paddle shift switches are operated. However, when the vehicle speed drops the gear will be automatically downshifted.

Driving Pattern Selector Switch/ “ECO MODE” Switch

The following modes can be selected in any shift position to suit driving conditions.

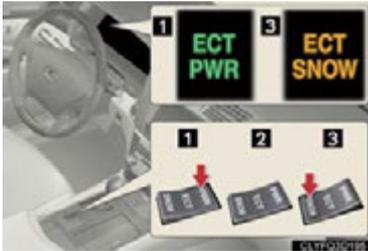


1 Power mode

For more powerful acceleration and uphill driving.

2 Normal mode

3 Snow mode

For starting or accelerating on snow-covered roads or other slippery surfaces.

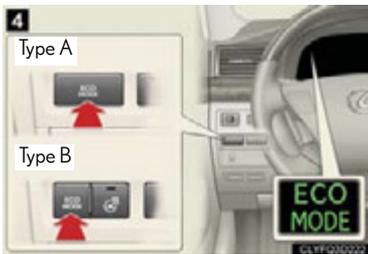

4 Eco drive mode

For controlling vehicle driving force and operation of the air conditioning system (heating/cooling) with the aim of improving fuel efficiency.

- To cancel a mode (power, snow or Eco drive mode), press that mode's switch again.
- Only one mode can be selected at a time.

Parking Brake

For the parking brake, an electrical parking brake system is adopted.

Manual mode



1 To set the parking brake: push the parking brake switch.

2 To release the parking brake: pull the parking brake switch.

Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

Automatic mode




In automatic mode, the parking brake automatically sets according to shift lever operation. To use the automatic mode, press the "AUTO" switch.

When the shift lever is moved out of "P": The parking brake will be released.

When the shift lever is moved into "P": The parking brake will be set.

Brake Hold

The brake hold system keeps the brake applied when the shift lever is in "D", "N", or "S" (without paddle shift switches) or "M" (with paddle shift switches) with the system on and the brake pedal has been depressed to stop the vehicle.

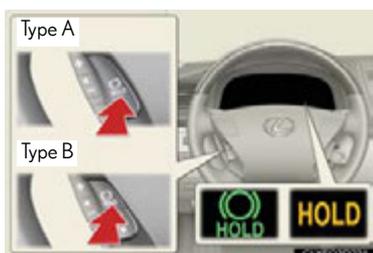


To turn the system on, press the "HOLD" switch. An indicator comes on while the system is holding the brake.

The system releases the brake when the accelerator pedal is depressed with the shift lever in "D", "S" or "M" to allow smooth start off.

Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.


Display information

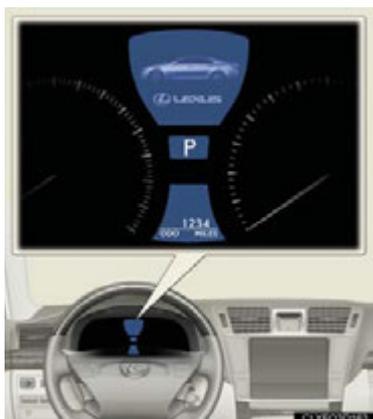

- Trip information
 - Outside temperature
 - Cruising range
 - Eco Driving Indicator Zone Display and Average fuel consumption
 - Current fuel consumption
 - Average fuel consumption after refueling
 - Distance after refueling
 - Elapsed time
 - Average vehicle speed
 - Tire inflation pressure
 - Eco Driving Indicator customization
- Intuitive parking assist display*
- Dynamic radar cruise control display*
- Warning messages

*: If equipped


Changing the display of trip information

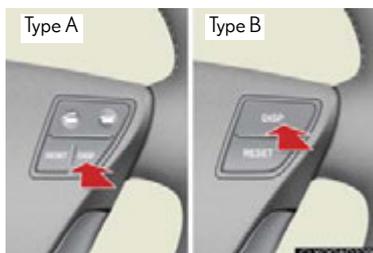

Trip information items can be switched by pressing the "DISP" switch.

- When using Intuitive parking assist-sensor, dynamic radar cruise control or lane keeping assist the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Eco Driving Indicator

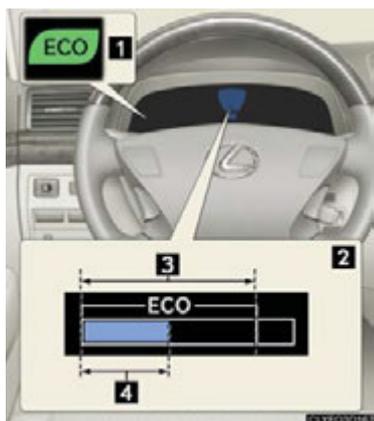

- 1 Eco Driving Indicator Light**
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.
- 2 Eco Driving Indicator Zone Display**
Suggests Zone of Eco driving with current Eco driving ratio based on acceleration.
- 3 Zone of Eco driving**
- 4 Eco driving ratio based on acceleration**
In case over-use of the accelerator causes the vehicle to exceed Zone of Eco driving, the right of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off.

► Without paddle shift switches

Eco Driving Indicator will not operate in the following conditions:


- The shift lever is in anything other than "D".
- The driving mode is set to power mode or snow mode.
- The vehicle speed is approximately 80 mph (130 km/h) or higher.

► With paddle shift switches

Eco Driving Indicator will not operate in the following conditions:

- The shift lever is in anything other than "D".
- The paddle shift switches are used.
- The driving mode is set to power mode or snow mode.
- The vehicle speed is approximately 80 mph (130 km/h) or higher.

Turn Signal Lever

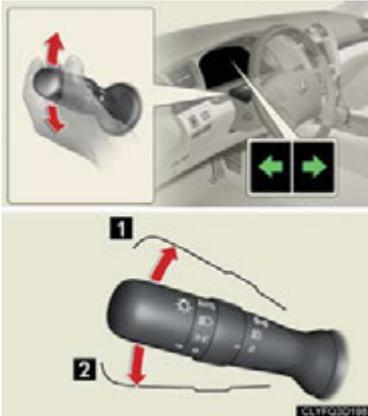


- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and then release it. The turn signals will flash 3 times.

Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

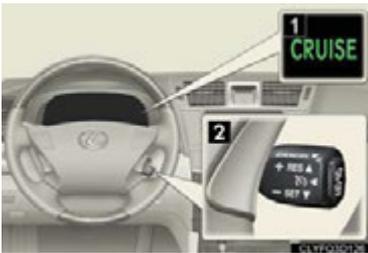


- 1 Indicator
- 2 Cruise control switch

Setting the speed



- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

■ Canceling

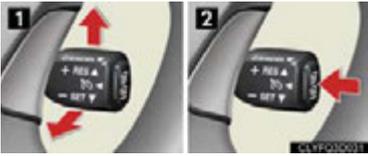

- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the “ON-OFF” button.

■ Adjusting the speed setting




To increase speed: push the lever up.

To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.

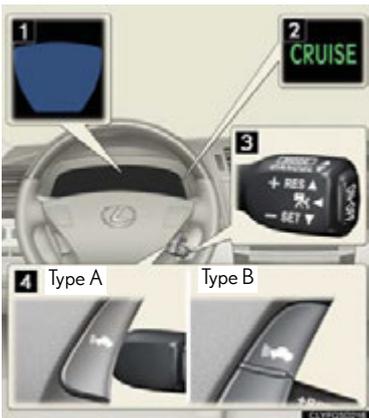

- 1 Display
- 2 Indicator
- 3 Cruise control switch
- 4 Distance switch


■ Cruise control display



Cruise control settings are shown on the multi-information display.


- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

■ Vehicle-to-vehicle distance control mode

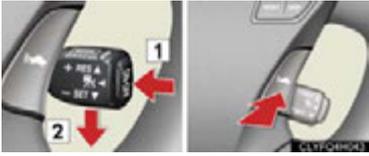


- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.

■ Constant speed control mode

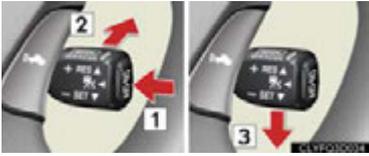

- 1 Press the "ON-OFF" button.
- 2 Push the lever away from you and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

■ Canceling

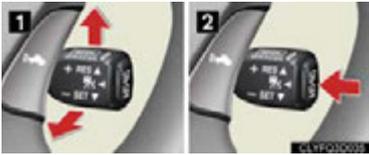

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

■ Adjusting the speed setting





- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.



Headlights

► Type A

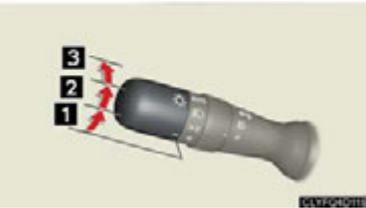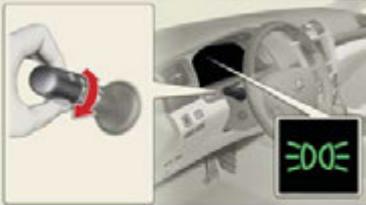


- 1 The instrument panel, side marker, parking, tail, daytime running lights and license plate lights turn on.
- 2 The headlights and all lights listed above (except daytime running lights) turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

► Type B

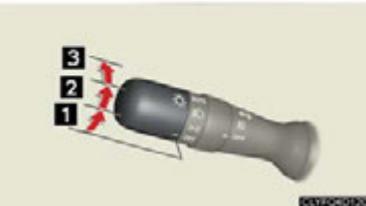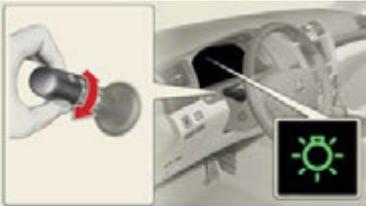

- 1 The instrument panel, side marker, parking, tail, daytime running lights and license plate lights turn on.
- 2 The headlights and all lights listed above (except daytime running lights) turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

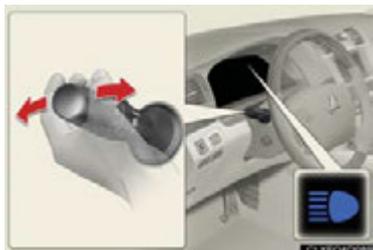

To engage the high beams, push the lever forward. To flash the high beams temporarily, pull the lever toward you.

Vehicles with the Automatic High Beam: Pushing the lever forward when the headlight switch is in the "AUTO" position activates the Automatic High Beam.

■ AFS (Adaptive Front-lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.




To cancel the system, press the "AFS OFF" switch. The indicator comes on when the system is off.


Press the switch again to reactivate the AFS.

Fog Lights


► Type A

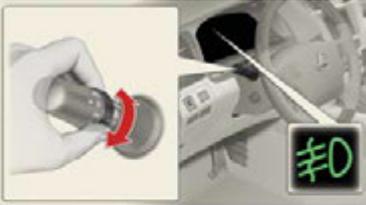


The fog lights can be used only when the headlights (low beam) are on.

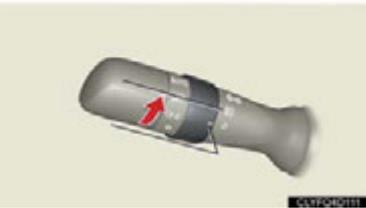

► Type B

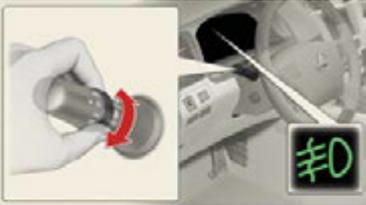

The fog lights can be used only when the headlights (low beam) are on.

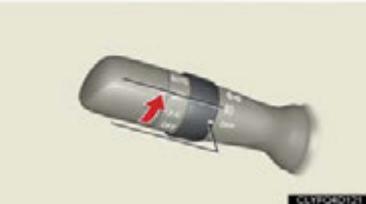

Windshield Wipers and Washer

► Type A




- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation




► Type B



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Temporary operation

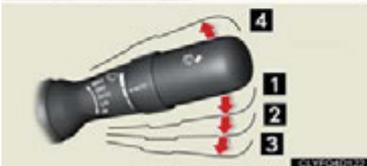

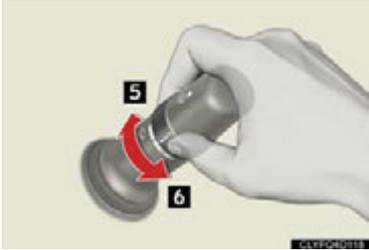

Sensitivity can be adjusted by turning the band.

5 Increases the sensitivity

6 Decreases the sensitivity




To spray washer fluid, pull the lever. The wipers will operate automatically.

Instrument Panel Light Control




- 1 Darker
- 2 Brighter

Rear Window and Outside Rear View Mirror Defoggers

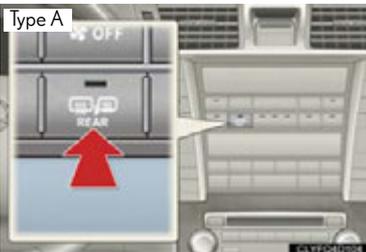

To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

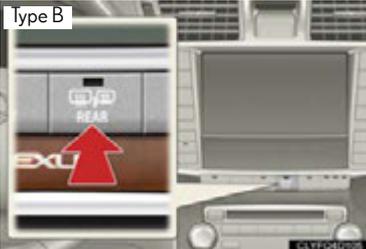

The system turns off automatically after 15 minutes.

Touch Screen (If Equipped)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc.

► With navigation system



► Without navigation system




- 1 "CLIMATE": Air conditioning operation screen
- 2 "AUDIO": Audio control screen
- 3 "SETUP": Setup screen
- 4 "DISP": Adjust picture quality
- 5 "MAP/VOICE": Vehicle's current position
- 6 "DEST": Destination screen
- 7 "INFO/PHONE": Information screen

■ Set up screen


Press "SETUP" to display the "Setup" screen.

▶ With navigation system

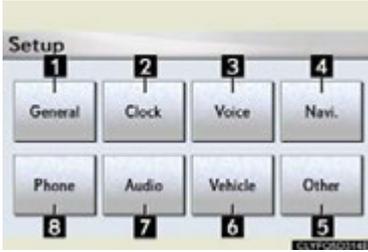


- 1 "General": General settings screen
- 2 "Clock": Clock settings screen
- 3 "Voice": Voice settings screen
- 4 "Navi.": Navigation settings screen
- 5 "Other": Other settings screen
- 6 "Vehicle": Vehicle settings screen
- 7 "Audio": Audio settings screen
- 8 "Phone": Phone settings screen

▶ Without navigation system

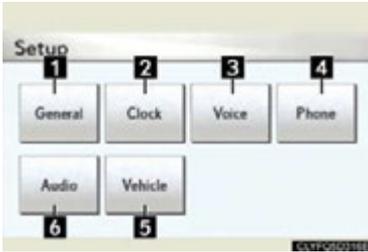

- 1 "General": General settings screen
- 2 "Clock": Clock settings screen
- 3 "Voice": Voice settings screen
- 4 "Phone": Phone settings screen
- 5 "Vehicle": Vehicle settings screen
- 6 "Audio": Audio settings screen


Display

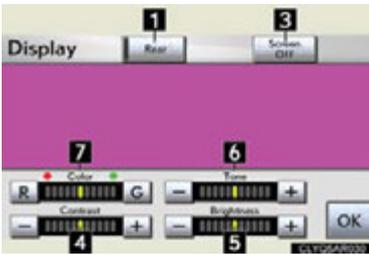

Push the  button on the side of the touch screen to show the “Display” screen.

- 1** Turns the rear seat entertainment system on and off
- 2** Displays the screen in “Day Mode” with the headlight switch on
- 3** Turns the screen off
- 4** Adjust contrast
- 5** Adjust brightness
- 6** Adjust color tone
- 7** Adjust color

Screen scroll operation (with navigation system)

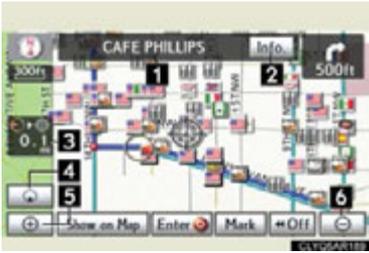


When any point on the map is touched, that point moves to the center of the screen.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map


Setting a route (with navigation system)

While route guidance is operating, you can change the route using the following method.

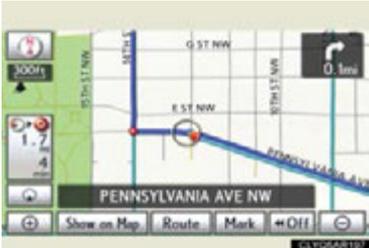

Touch **Route**.

The following settings can be accessed


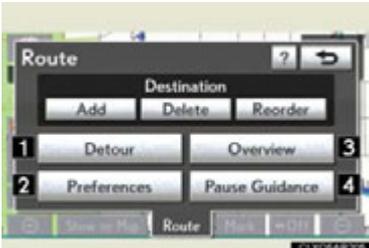


- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

Navigation System (If Equipped)

Register home

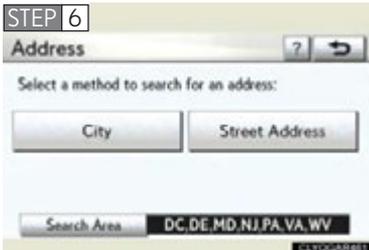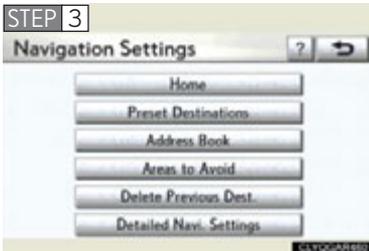

1 Push the  button on the side of the touch screen. (→P.41)

2 Touch .

3 Touch .

4 Touch .

5 Touch .

6 Touch .

7 Input a city name and touch .

8 Touch the button of the desired city name from the displayed list.

For security reasons, use a point close to your home instead of your actual home address.

9 Input the street name and touch .

10 When the desired street name is found, touch the corresponding button.



11 Input a house number and touch .

12 Touch .

13 Touch .


Destination input — Search by address

► Select by city name

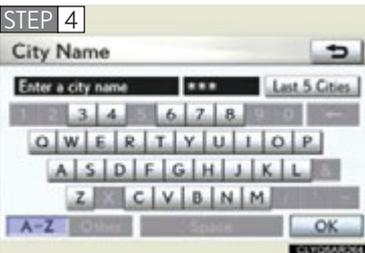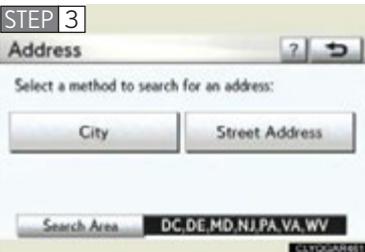

1 Push the  button on the side of the touch screen. (→P.41)

 2 Touch  .

3 Touch  .

4 Input a city name and touch  .

5 Touch the button of the desired city name from the displayed list.

6 Input the street name and touch  .



7 When the desired street name is found, touch the corresponding button.

8 Input a house number and touch  .

9 Touch  .

10 Touch  .

► Select by street address

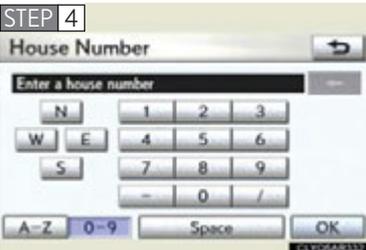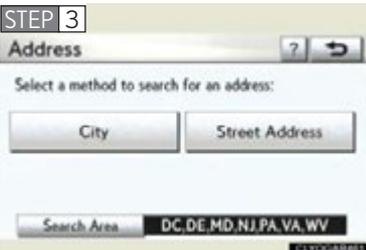

1 Push the  button on the side of the touch screen. (→P.41)

2 Touch  .

3 Touch  .

4 Input a house number and touch  .

5 Input the street name and touch  .

6 When the desired street name is found, touch the corresponding button.


7 Input a city name and touch  .

8 Touch the button of the desired city name from the displayed list.

9 Touch  .


10 Touch  .


Destination input — Search points of interest by name

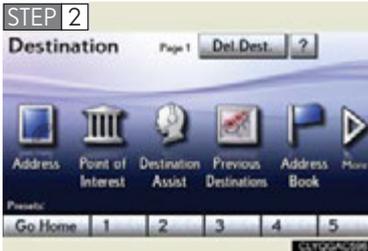

1 Push the  button on the side of the touch screen. (→P.41)

 2 Touch .

3 Touch .

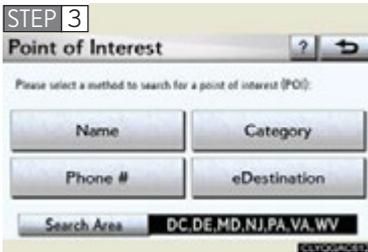


4 Input the name of the point of interest and touch .




5 Touch the button of the desired destination.

6 Touch .

7 Touch .

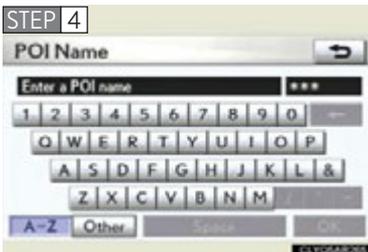


Destination input — Search points of interest by category

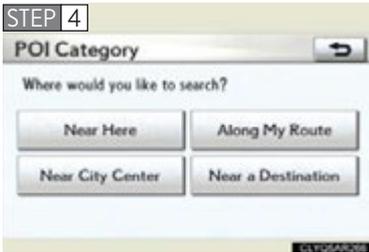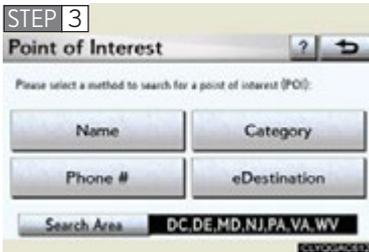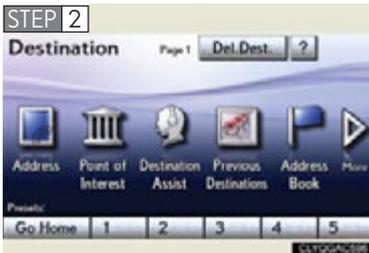

1 Push the  button on the side of the touch screen. (→P.41)

 2 Touch .

3 Touch .

4 Touch .

5 Touch the button of the desired destination and set the search point.


6 Touch the desired point of interest category.

7 Touch the button of the desired item.

8 Touch .

9 Touch .


Destination input — Search points of interest by telephone number

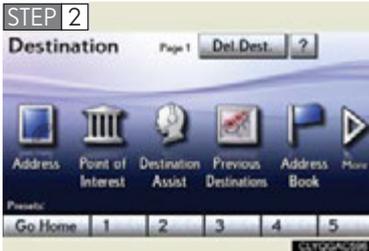

1 Push the  button on the side of the touch screen. (→P.41)

2 Touch .


3 Touch .

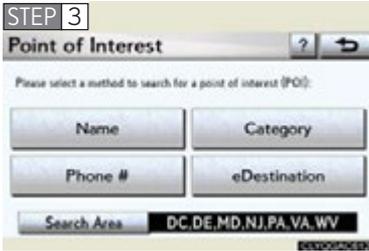

4 Input a telephone number and touch .

5 Touch .

6 Touch .

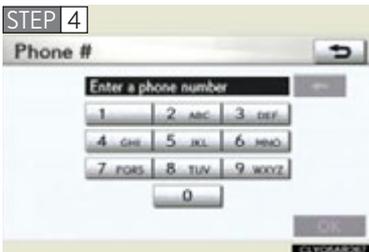


Hands-free System For Cellular Phone (If equipped)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

▶ With navigation system

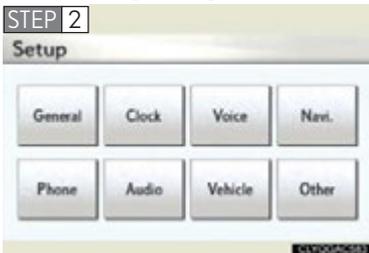



To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Push the  or  button on the side of the touch screen. (→P.41)


2 Touch .

 ▶ Without navigation system

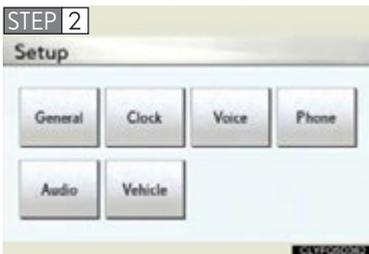

3 Touch .

4 Touch  to display the screen for connecting Bluetooth®.

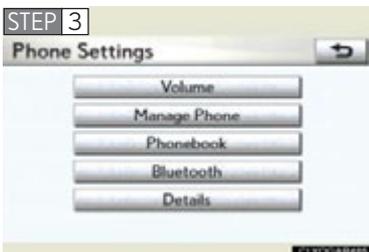




5 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.

6 When the connection is completed, **Bluetooth connection successful** will appear

and push the  or  button.

■ Phonebook transfer



▶ With navigation system

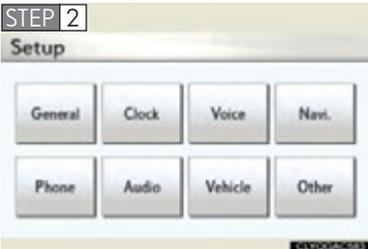

1 Push the  or  button on the side of the touch screen. (→P.41)

2 Touch  .

▶ Without navigation system

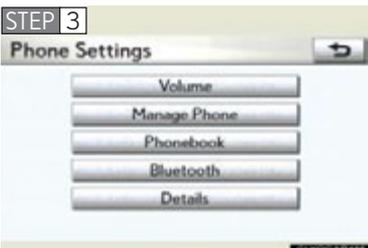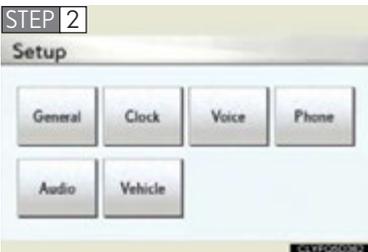

3 Touch  .



4 Touch  .

5 Touch  .

6 Transfer the phonebook data to the system using the cellular phone.


Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

■ Registering a voice tag

▶ With navigation system

STEP 2

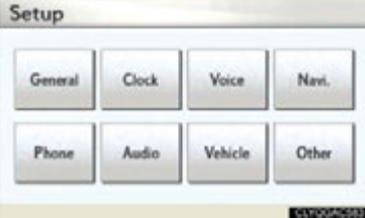



1 Push the  or  button on the side of the touch screen. (→P.41)

2 Touch .


▶ Without navigation system

 STEP 2

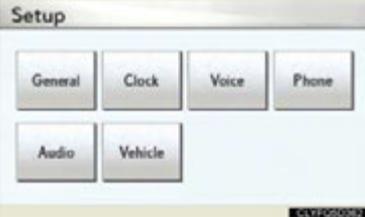

3 Touch .

STEP 3

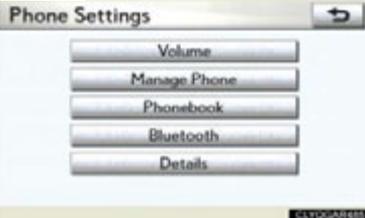

4 Touch .

5 Touch .

6 Touch the data you want to register.

7 Touch , and record a voice tag.

8 Touch .


STEP 4



■ Registering a speed dial

▶ With navigation system

STEP 2

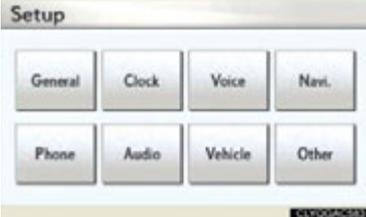


1 Push the  or  button on the side of the touch screen. (→P.41)


2 Touch .

▶ Without navigation system


STEP 2

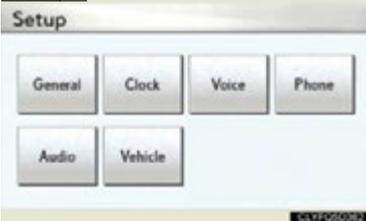


STEP 3

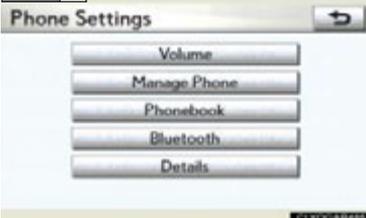

3 Touch .

 4 Touch .

 5 Touch .

STEP 6



6 Touch the data you want to register.


7 Touch the desired phone number.

8 Touch the button you want to register in.

9 The registration completion message is displayed on the screen.

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)

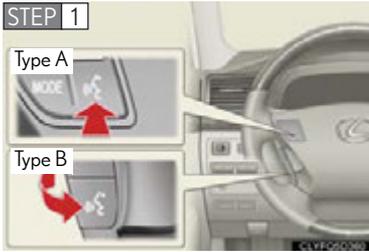

- 1 Press  or pull .
- 2 Follow the voice guidance and say "Phone". (with navigation system)
- 3 Follow the voice guidance and say "Dial by name".




- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".

Pressing  or pulling  switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial



1 Press .


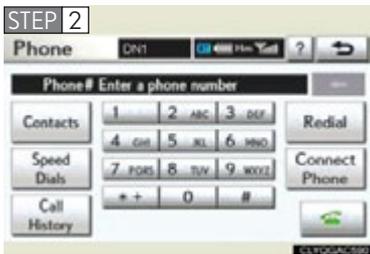


2 Touch .



3 Touch the desired number to call.

Receiving a call

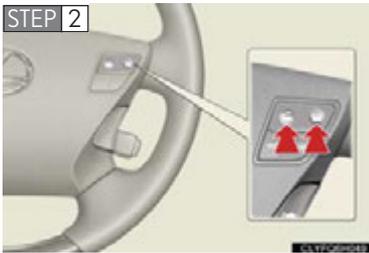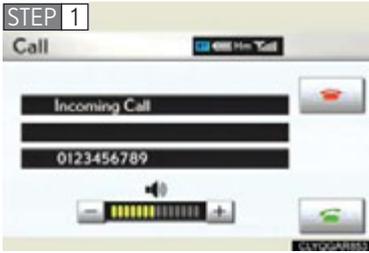

1 When a call is received, this screen is displayed with a sound.

2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

Audio System (without navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

Basic operation

▶ Without touch screen



- 1 Power/Volume
- 2 Sound quality modes
- 3 Listening position
- 4 Automatic Sound Levelizer ("ASL")
- 5 Audio sources
 - "AM": AM radio
 - "FM": FM radio
 - "CD-AUX": CD player/Auxiliary audio device

▶ With touch screen




- 1 Display the audio control screen
- 2 Sound quality modes
- 3 Audio sources
 - "AM-FM": AM radio /FM radio (Type A)
 - "SAT": Satellite radio (Type A)
 - "AM": AM radio (Type B)
 - "FM": FM radio (Type B)
 - "DISC": DVD player (if equipped)
 - "CD": CD player (if equipped)
 - "AUX-USB": Auxiliary audio device/Bluetooth® audio/iPod/USB memory
- 4 Power/Volume



Radio

► Without touch screen

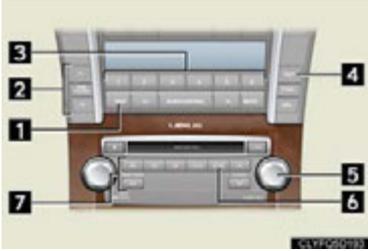

- 1 Traffic information
- 2 RDS genre select
- 3 Station presets
- 4 Text messages
- 5 Radio tuner
- 6 Scan
 - All radio stations: press
 - Preset radio stations: press and hold
- 7 Seek

■ Entering station presets

- 1 Select the desired station by using the tuner, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

► With touch screen



- 1 Display the audio control screen
- 2 Station presets
- 3 Scan
 - All radio stations: press
 - Preset radio stations: press and hold
- 4 Traffic information
- 5 Radio tuner
- 6 Station select
- 7 Seek
- 8 RDS genre select


■ Entering station presets

- 1 Select the desired station by using the tuner, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ CD player

■ Playing an audio CD

▶ Without touch screen

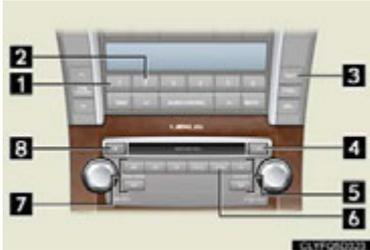

- 1** Random playback
Current CD: press
All CDs: press and hold
- 2** Repeat
Current track: press
Current CD: press and hold
- 3** Text information
- 4** CD load
- 5** CD select
- 6** Scan
All tracks in current CD: press
First track of each CD: press and hold
- 7** Track select/rewind/fast-forward
- 8** Eject


▶ With touch screen



- 1** Display the audio control screen
- 2** Display track list
- 3** Scan
All tracks in current CD: press
First track of each CD: press and hold
- 4** Random playback
Current CD: press
All CDs: press and hold
- 5** Repeat
Current track: press
Current CD: press and hold
- 6** CD load
- 7** CD select
- 8** Track select/rewind/fast-forward
- 9** Eject
- 10** Display disc list

■ Playing a CD with MP3/WMA files

▶ Without touch screen

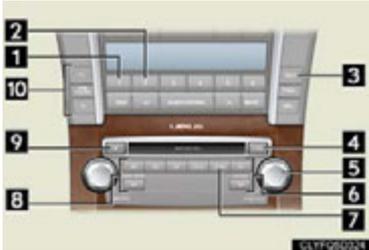

- 1 Random playback
Current file: press
All files in current folder: press and hold
- 2 Repeat
Current file: press
All files in current folder: press and hold
- 3 Text information
- 4 CD load
- 5 File select
- 6 CD select
- 7 Scan
All files in current folder: press
First file of each folder: press and hold
- 8 File select/rewind/fast-forward
- 9 Eject
- 10 Folder select

▶ With touch screen



- 1 Display the audio control screen
- 2 Display file list
- 3 Folder select
- 4 Display folder list
- 5 Scan
All files in current folder: press
First file of each folder: press and hold
- 6 Random playback
Current folder: press
All folders: press and hold
- 7 CD load
- 8 File select
- 9 CD select
- 10 File select/rewind/fast-forward
- 11 Eject
- 12 Repeat
Current file: press
All files in current folder: press and hold
- 13 Display disc list

■ Loading a CD

▶ Without touch screen

- 1] Press the "LOAD" button.
"WAIT" is shown on the display.
- 2] Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".

▶ With touch screen

- 1] Press the "LOAD" button.
- 2] When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.

■ Loading multiple CDs

▶ Without touch screen

- 1] Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2] Insert a CD when the indicators on the disc slot door turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the disc slot door turn to amber when the CD is inserted.
- 3] Insert the next CD when the indicators on the disc slot door turn from amber to green again.
Repeat the procedure for the remaining CDs.
To stop the operation, press the "CD·AUX" button.

▶ With touch screen

- 1] Press and hold the "LOAD" button until you hear a beep.
- 2] When the indicator changes from flashing amber to green, insert a CD after the disc slot door opens.
- 3] After inserting a CD, wait until the indicator changes from flashing amber to green, then insert the next CD after the disc slot door has opened.

Repeat **2]** and **3]** until you have inserted all CDs.

To cancel the operation, press the "LOAD", "DISC" or "CD" button. If you do not insert a CD within 15 seconds, loading will be canceled automatically.


■ Operating an iPod



- 1** Displays the audio control screen
- 2** Menu
- 3** Pause/Playback
- 4** Repeat play
- 5** Random playback
- 6** Song list
- 7** Song select
- 8** Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

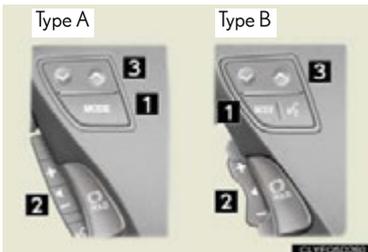

- 1** Power on/change mode: press
Power off: press and hold
- 2** Volume
- 3** Radio: station select
Audio CD, Video CD, DVD audio,
Bluetooth[®] audio (If equipped) or iPod: track
select
DVD video: chapter select
MP3 CD, WMA CD or USB memory: file
select

■ Rear seat audio controls (if equipped)


Some front audio features can be controlled from the rear seats.

► 5-seat models



- 1** Volume
- 2** Power
- 3** Disc select
- 4** Radio: station select
Audio CD, Video CD, DVD audio,
Bluetooth® audio or iPod: track select
DVD video: chapter select
MP3 CD, WMA CD or USB memory: file
select
- 5** Folder/album select
- 6** Audio sources

► 4-seat models

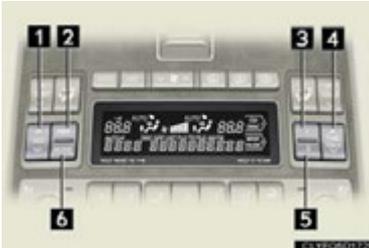

Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

Basic operation



- 1 Displays the audio control screen
- 2 Sound quality modes
- 3 Audio sources
 - ▶ **Type A**
 - AM•FM: AM radio/FM radio
 - SAT: Satellite radio
 - DISC: DVD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio player
 - ▶ **Type B**
 - AM: AM radio
 - FM: FM radio
 - DISC: DVD player
 - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio player
- 4 Power/Volume

Radio



- 1 Displays the audio control screen
- 2 Station presets
- 3 Scanning radio stations
- 4 Radio tuner
- 5 Station select
- 6 Seek

■ Entering station presets

- 1 Touch the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ DVD player/CD player

■ Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Track select/rewind/fast-forward
- 8 Eject

■ Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

■ Playing a DVD (DVD player only)



- 1 Displays the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Chapter select/rewind/fast-forward
- 7 Eject

■ Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

■ Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat **2** and **3** until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

■ Operating an iPod



- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random playback
- 6 Song list
- 7 Song select
- 8 Song select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

► Type A




- 1 Radio mode: radio tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod mode: song select
- 2 Power on/change mode: press
Power off: press and hold
- 3 Volume

► Type B



Front Air Conditioning System (without touch screen)

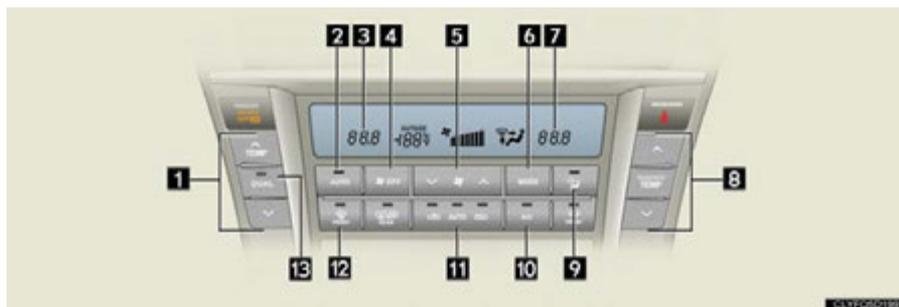

- | | |
|---|--|
| 1 Driver side temperature control | 8 Passenger side temperature control |
| 2 Automatic mode button | 9 Micro dust and pollen filter button |
| 3 Driver side temperature display | 10 "A/C" button |
| 4 "OFF" button | 11 Outside air/recirculated air mode button |
| 5 Fan speed controls | 12 Windshield defog/defrost |
| 6 Air flow controls | 13 Dual mode button |
| 7 Passenger side temperature display | |

Using the automatic mode



- 1** Press the "AUTO" button.
- 2** Adjust the temperature using the "TEMP" buttons.

■ Adjusting the temperature in dual mode



In dual mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press the "DUAL" button.
- 2 Adjust the driver side temperature using the "TEMP" buttons, and the passenger side temperature using the "PASSENGER TEMP" buttons.

■ To turn off the airflow

Press "OFF".

Front Air Conditioning System (with touch screen)

► Without rear air conditioning system



► With rear air conditioning system



- | | |
|---|---|
| 1 "CLIMATE" (air conditioning operation screen display button) | 10 Driver side temperature display |
| 2 Air flow display | 11 Automatic mode button |
| 3 Fan speed display | 12 Dual mode button |
| 4 Passenger side temperature control | 13 Driver side temperature control |
| 5 Outside air/recirculated air mode button | 14 "A/C" button |
| 6 Passenger side temperature display | 15 Rear air conditioning operation screen display switch |
| 7 Micro dust and pollen filter button | 16 Air purifier and rear air conditioning operation switch |
| 8 Windshield defog/defrost | 17 Individual mode button |
| 9 "OFF" button | |

■ Using the automatic mode

- 1] Press the "AUTO" button.
- 2] Adjust the temperature using the "TEMP" buttons.

■ Adjusting the temperature in dual mode (without rear air conditioning system)

In dual mode, driver and passenger side temperature settings can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.
To cancel the dual mode, press the "DUAL" button.

■ Adjusting the temperature in individual mode (with rear air conditioning system)

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

Press the "PASSENGER TEMP" button to adjust the temperature for the passenger side.
To adjust the temperature for the rear seats, see page 74.
To cancel the individual mode, press the "4-ZONE" button.

■ To turn off the airflow


Press "OFF".

Rear Air Conditioning System (If Equipped)

► 5-seat models




► 4-seat models

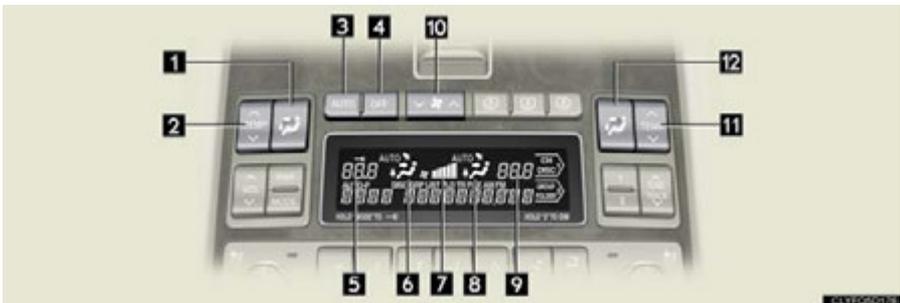

- 1 Changes the left side air outlet used
- 2 Left side temperature control
- 3 Automatic mode button
- 4 "OFF" button
- 5 Left side temperature display
- 6 Left side air flow display

- 7 Air volume display
- 8 Right side air flow display
- 9 Right side temperature display
- 10 Air volume controls
- 11 Right side temperature control
- 12 Changes the right side air outlet used

■ Front controller (touch screen)

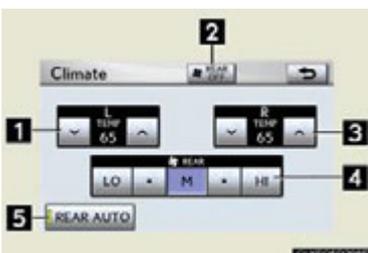

- 1 Left side temperature control switch and display
- 2 Off
- 3 Right side temperature control switch and display
- 4 Fan speed display
- 5 Automatic mode button


Heated Steering Wheel (If Equipped)



To heat the leather portion of the steering wheel, press the button.


Press again to cancel.

Rear Sunshade/Rear Door Sunshades (If Equipped)

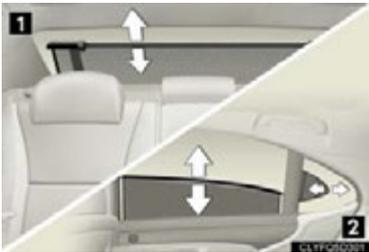


- 1 Rear sunshade
- 2 Rear door sunshades

Raising/Extending from the front seat

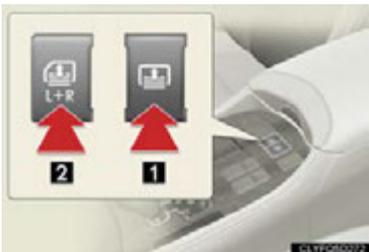

► Without rear console display


- 1 Raises the rear sunshade
Press the button again to lower it.
- 2 Extends the rear door sunshades
Press the button again to retract them.

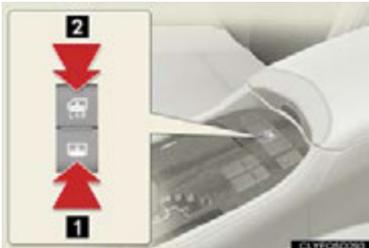

► With rear console display

- 1 Raises the rear sunshade
Press the button again to lower it.
- 2 Extends the rear door sunshades
Press the button again to retract them.

■ Raising/Extending from the rear seat

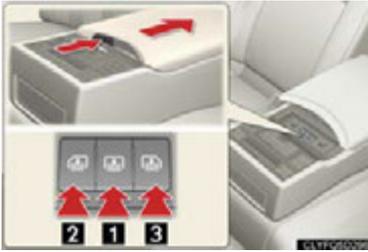


► 5-seat models

Slide the armrest lid

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

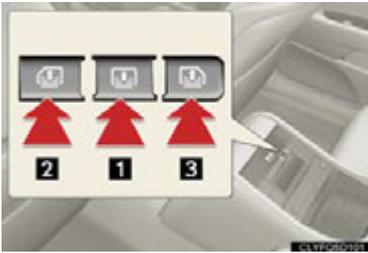

► 4-seat models

- 1 Raises the rear sunshade
- 2 Extends the rear door sunshade (left side)
- 3 Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

Compass (If Equipped)



To display the compass, press and hold the "AUTO" button for 3 or more seconds.

To cancel the display, press and hold the "AUTO" button again for 3 or more seconds.

Trunk Storage Extension (If Equipped)

Longer items can be loaded in the vehicle by utilizing the trunk space and rear seat area.



1 Pull down the rear armrest.



2 Unlock the armrest door using the mechanical key.

► Opening from the cabin



► Opening from the trunk




- 3 Open the inside trunk door from the cabin or trunk, and load baggage or other items.

Voice Command System (If Equipped)

Basic operation

NOTE: When inputting voice commands you must wait until after the beep to speak.

STEP 1

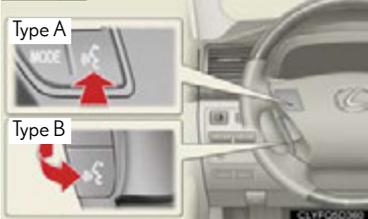

1 Press  or pull .

2 - If you know the command:

Press  or pull  again.

- If you do not know the command:

Follow the voice guidance to learn the command and then press  or pull  again.

3 Say a command after the beep.

Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- A large TALK icon  will appear on the touch screen to prompt you to say a command.
- If you know what command to use, you can press  or pull  at any time to interrupt the voice guidance.

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.80)**

- Automatic collision notification*¹
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM[®] Sports and Stocks*²**

XM[®] Sports and Stocks is a service included with XM[®] satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeather™*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

- **XM® NavTraffic*3**

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

- ▶ **The following navigation-based Lexus Enform features are available without a subscription:**

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or touch "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

Door Locks

Locking the vehicle from inside



► Inside lock button

- 1 Locks
- 2 Unlocks



► Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

Locking the vehicle from outside

Using the entry function or wireless remote control (→P:10, 11)

Rear door child-protector lock




Pushing down the switch prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

Door closer (if equipped)

If a door is left slightly open, it will close automatically.

Power Windows

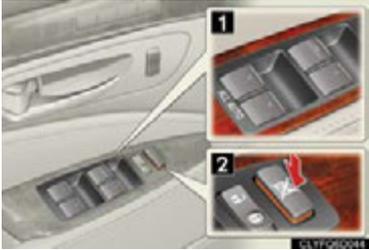

1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof

Opening and closing



1 Opens

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

2 Closes

Tilting up and down



1 Tilts up

2 Tilts down

Fuel Tank Cap



1 Press the fuel filler door opener.




2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Trunk

Opening the trunk

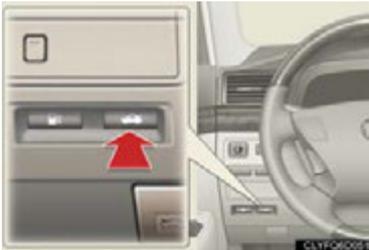

▶ Trunk opener

To open the trunk from inside the cabin, simply press the trunk opener.



To disable the trunk opener, turn off the main switch in the glove box.

1 On

2 Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

▶ Entry function and wireless remote control (→P.10, 11)

Trunk easy closer

If the trunk lid is left slightly open, it will close automatically.

Trunk closer switch (if equipped)



Pressing the switch closes the trunk lid automatically.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



Electric power steering system warning light



Pre-collision system warning light^{*1}



SRS warning light



(Blinking and then continuously on)

Tire pressure warning light



(U.S.A.)

ABS warning light



(Canada)



Cruise control indicator

(Flashes)



Slip indicator

(Comes on)



"AFS OFF" indicator

(Flashes)



Brake system warning light



Automatic High Beam indicator^{*1}

(Flashes)

Follow the correction procedures.



Open door warning light



(On the center panel)

Front passenger's seat belt reminder light



(In the fuel gauge)

Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light^{*2}



Driver's seat belt reminder light



Master warning light

For further information, refer to the Owner's Manual.

What to do if ...

See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Automatic High Beam indicator^{*1}



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Front fog light indicator



"ECT PWR" indicator



"ECT SNOW" indicator



Eco Driving Indicator Light



"ECO MODE" indicator



"SPORT" mode indicator^{*1}



"COMFORT" mode indicator^{*1}



Cruise control indicator



"AFS OFF" indicator



Slip indicator



VSC off indicator



Brake hold standby indicator



Brake hold operated indicator



(U.S.A.) Parking brake indicator



(Canada)



Lane keeping assist indicator^{*1}



"AIR BAG ON" and "AIR BAG OFF" indicators (without touch screen)



"AIR BAG ON" and "AIR BAG OFF" indicators (with touch screen)



"HEIGHT HIGH" indicator^{*1}

For further information, refer to the Owner's Manual.

^{*1}: If equipped

^{*2}: Turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.


Spare Tire and Tool Compartment

Jack, tools, and spare tire



- 1 Jack handle
- 2 Spare tire
- 3 Wheel nut wrench
- 4 Jack

Taking out the spare tire

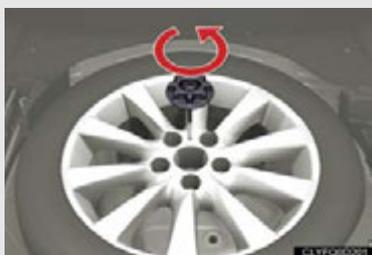

- 1 Lift up the panel on the trunk floor.
- 2 Loosen the center fastener and remove the spare tire.

If the electronic key does not operate properly

Unlocking and locking the doors



To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

What to do if ...

Starting the engine




- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal depressed.

*: If equipped

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

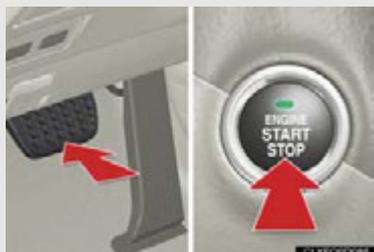

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.22)



Steering wheel lock

Make sure that the steering wheel lock is released.

To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right. (→P.12)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds.	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment.	Retrieve the electronic key from the passenger compartment and lock the doors again.
	The trunk was closed with the electronic key inside and all doors were locked.	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds.	An attempt was made to exit the vehicle and lock the doors while carrying the electronic key without first turning the "ENGINE START STOP" switch OFF.	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds.	An attempt was made to lock the vehicle while a door was open.	Close all of the doors and lock the doors again.
Interior alarm pings continuously.	The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "ENGINE START STOP" switch was in ACCESSORY mode).	Turn the "ENGINE START STOP" switch OFF and close the driver's door.
	The "ENGINE START STOP" switch was turned OFF while the driver's door was open.	Close the driver's door.

What to do if ...

Alarm	Situation	Correction procedure
Interior alarm sounds continuously. ^{*1}	When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P" and turn the "ENGINE START STOP" switch OFF.
Interior and exterior alarms sound continuously. ^{*1}	When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever was not in "P".	Shift the shift lever to "P", turn the "ENGINE START STOP" switch OFF and close the driver's door again.
Interior alarm pings once. ^{*1}	The electronic key has a low battery.	Replace the electronic key battery.
	An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally.	Start the engine with the electronic key present. ^{*2}
Interior alarm pings once and exterior alarm sounds 3 times. ^{*1}	The driver's door was closed after the key was carried outside the vehicle, and the "ENGINE START STOP" switch was not turned OFF.	Turn the "ENGINE START STOP" switch OFF and close the driver's door again.
	An occupant carried the electronic key outside the vehicle and closed the door while the "ENGINE START STOP" switch was not OFF.	Bring the electronic key back into the vehicle.

^{*1}: A message will be shown on the multi-information display in the instrument cluster.

^{*2}: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving the signal from the key.

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

It is also possible to customize certain vehicle features yourself using the navigation screen.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Settings that can be customized at a dealer

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
Same side doors			
Wireless remote control	Wireless remote control	On	Off
	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
	Operational signal (emergency flashers)	On	Off
Trunk unlocking operation	Push and hold	Push twice	
		One short push	
Alarm (panic mode)	On	Off	
Smart access system with push-button start and wireless remote control	Operation signal (emergency flashers)	On	Off
	Open door warning buzzer	On	Off

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting gears to "P" unlocks all doors.	On	Off
	Shifting gears to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Trunk	Power trunk opener and closer function	On	Off
Power easy access system	Driver's seat movement when exiting the vehicle	Full	Off
	Steering wheel auto away and return function		Partial
Power windows	One-touch close operation using the power window switches on the front passenger door and each rear door	On	Off
	One-touch front passenger window or rear window close operation using the power window switch on the driver's door	On	Off
	Mechanical key linked operation	Open and close	Off
			Open only
	Wireless remote control linked operation	Off	Close only
On			
Linked entry function	On	Off	

Item	Function	Default setting	Customized setting
Moon roof	Mechanical key linked operation	Open and close	Off
			Open only
			Close only
	Linked operation of components when mechanical key is used	Slide only	Tilt only
	Wireless remote control linked operation	Off	On
Turn signal lever	Times of flashing of the lane change signal flashers	3	Off
			5
7			
9			
11			
Automatic light control system	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
	Automatic high beam system	On	Off
Air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
	Air conditioning control of Eco drive mode	On	Off
Lights	Daytime running light system (U.S.A. only)	On	Off
Intuitive parking assist	Buzzer volume	Level 3	Level 1 to 5
	Distance at which the front and back sensors detect an obstacle	Level 1	Level 2

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Illumination	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
			-2 to 2
Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2	
		-2 to 2	
Operation when the doors are unlocked	On	Off	
		Off	
Operation after the "ENGINE START STOP" switch is turned OFF	On	Off	
		Off	
Footwell lighting	On	Off	
		Off	
Shift lever lighting	On	Off	
		Off	
Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	On	Off

Settings that can be customized using the navigation system display

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start	On	Off
	Door unlock function	Driver's door	All the doors
			Each door
			Same side doors

Item	Function	Default setting	Customized setting
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Time elapsed before automatic lock function is activated if door is not opened after being unlocked	60 seconds	Off
			30 seconds
			120 seconds
Smart access system with push-button start and wireless remote control	Operation signal (emergency flashers)	On	Off
Door lock	Speed-detecting automatic door lock function	Off	On
	Opening driver's door unlocks all doors.	Off	On
	Shifting gears to "P" unlocks all doors.	On	Off
	Shifting gears to position other than "P" locks all doors.	On	Off
	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
Power easy access system	Driver's seat movement when exiting the vehicle	Full	Off
			Partial
Turn signal lever	Times of flashing of the lane change signal flashers	3	Off
			5
			7
			9
			11

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Automatic light control system	Light sensor sensitivity	Standard	-2 to 2
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 second
			60 seconds
			90 seconds
Air conditioning system	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C auto switch operation	Auto	Manual
	Exhaust gas sensor sensitivity	Standard	-3 to 3
Lights	Daytime running light system (U.S.A. only)	On	Off
Illumination	Time elapsed before the interior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Time elapsed before the exterior lights turn off	15 seconds	Off
			7.5 seconds
			30 seconds
	Sensitivity of the ambient light sensor used for dimming the meter lights etc.	Standard	-2 to 2
	Sensitivity of the ambient light sensor used for brightening the meter lights etc.	Standard	-2 to 2

Multi-information display

Country	Available languages
U.S.A.	English and Spanish
Canada	English, French, German, Spanish and Italian



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada : www.lexus.ca

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.