

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Audio System*	
Audio control screen.....	77
Side Display.....	77
Remote control (steering wheel switches).....	77
Basic operation.....	78
Radio.....	78
DVD player/CD player.....	79
Operating an iPod.....	80
Rear seat audio controls.....	81
Automatic High Beam.....	47
Brake Hold.....	43
BSM (Blind Spot Monitor).....	57
Climate Control Seats.....	87
Cruise Control.....	51
Door Locks.....	104
Driving Mode Select Switch.....	41
Driving Position Memory.....	30
Dynamic Radar Cruise Control with Full-speed Range.....	53
Energy Monitor/Consumption Screen.....	14
EV Drive Mode.....	39
Fog Lights.....	49
Front Air Conditioning System*	
Side Display.....	84
Using the automatic mode.....	84
Adjusting the temperature.....	84
Front Seats.....	20
Fuel Tank Cap.....	106
Garage Door Opener.....	95

 
*: This feature may be operated by Voice command (See P.92)

Hands-free System For Cellular Phone*	
Bluetooth® phone pairing.....	71
Phonebook transfer	72
Registering a speed dial	73
Calling by name	74
Calling by speed dial.....	74
Calling using SMS/MMS message.....	75
Receiving a call.....	76
Steering switches	76
Headlights	46
Heated Steering Wheel	86
Hood	107
Hybrid System	12
Hybrid Transmission	39
Inside Rear View Mirror	33
Intuitive Parking Assist	56
Keys	17
Lexus Climate Concierge	82
Lexus Enform with Safety Connect	99
Lexus Night View	60
List of Storage Features	102
LKA (Lane-Keeping Assist)	58
Moon Roof	106
Multi-information Display	44
Navigation System*	
Register home	66
Destination input.....	67
Voice Command System	92
Outside Rear View Mirrors	34
Parking Brake	42
Portable Audio Device Ports	81
Power (Ignition) Switch	36
Power Rear Seat	23
Power Windows	105

*: This feature may be operated by Voice command (See P.92)


Rear Air Conditioning System	
Front controller	85
Rear Seat Position Memory	32
Rear Sunshade/Rear Door Sunshades	90
Rear Window and Outside Rear View Mirror Defoggers	50
Remote Touch	63
Safety Connect	97
Seat Belts	34
Smart Access System with Push-button Start	18
Steering Wheel	33
Theft Deterrent System	19
Tire Pressure Warning System	62
Trunk	108
Voice Command System*	
Basic operation	92
Command list	93
Windshield Wipers and Washer	49
XM Services	101


*: This feature may be operated by Voice command (See P.92)



Overview

Instrument Panel

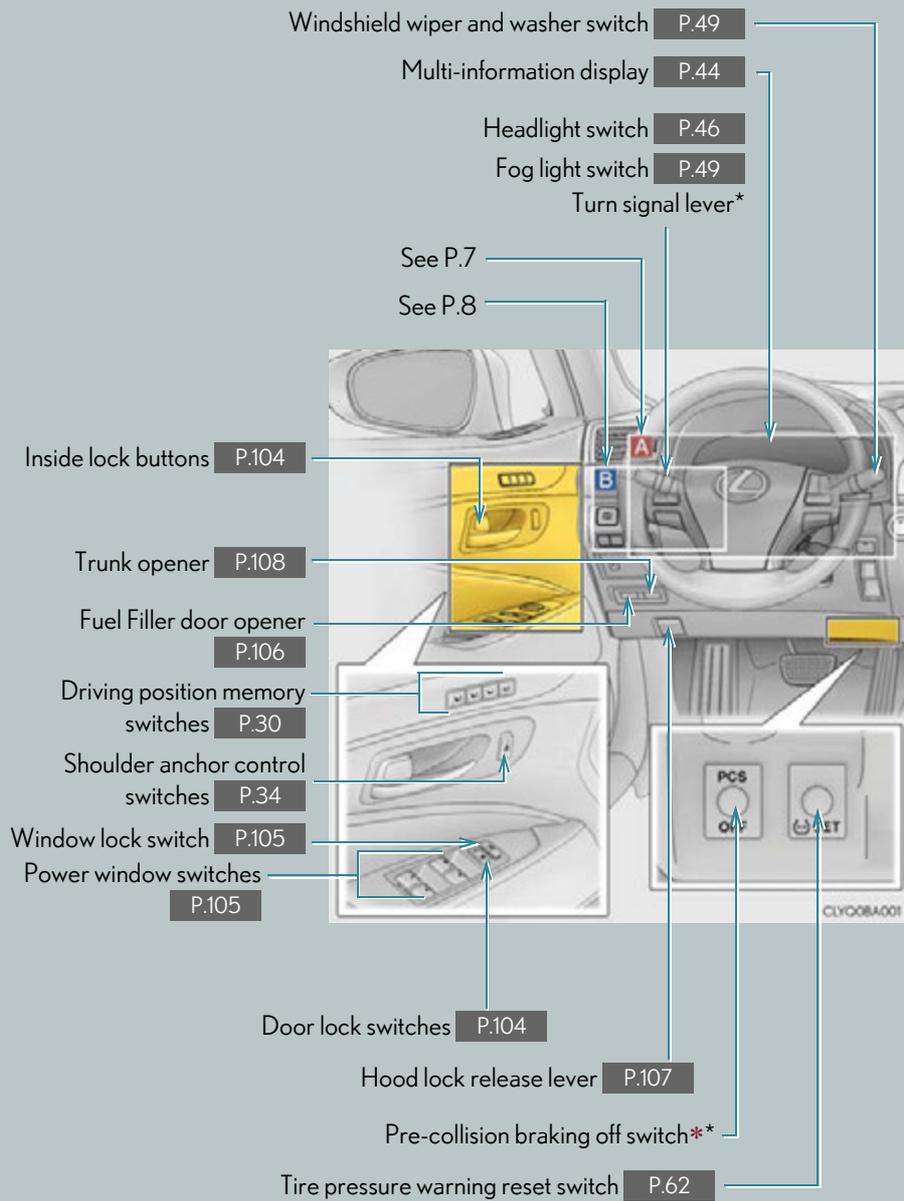


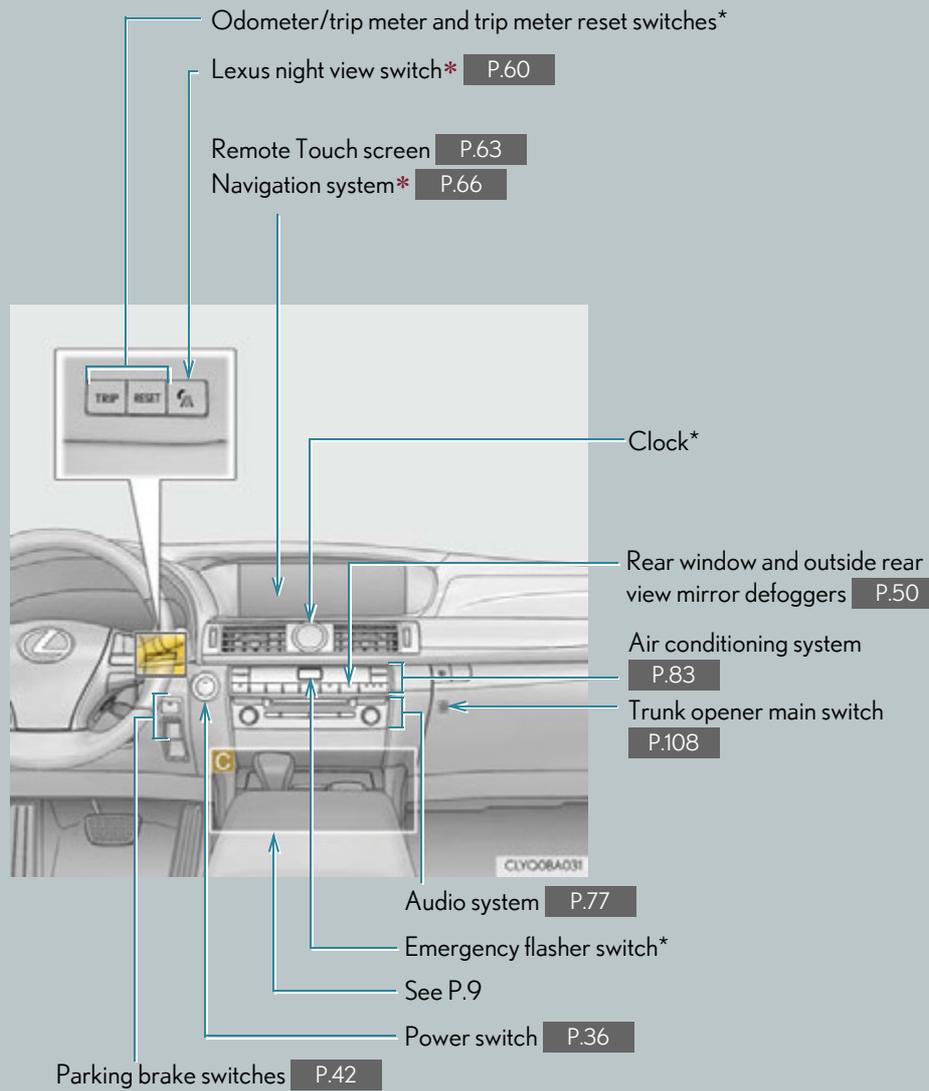

*: If equipped
 *: Refer to "Owner's Manual".

Overview

Instrument Panel

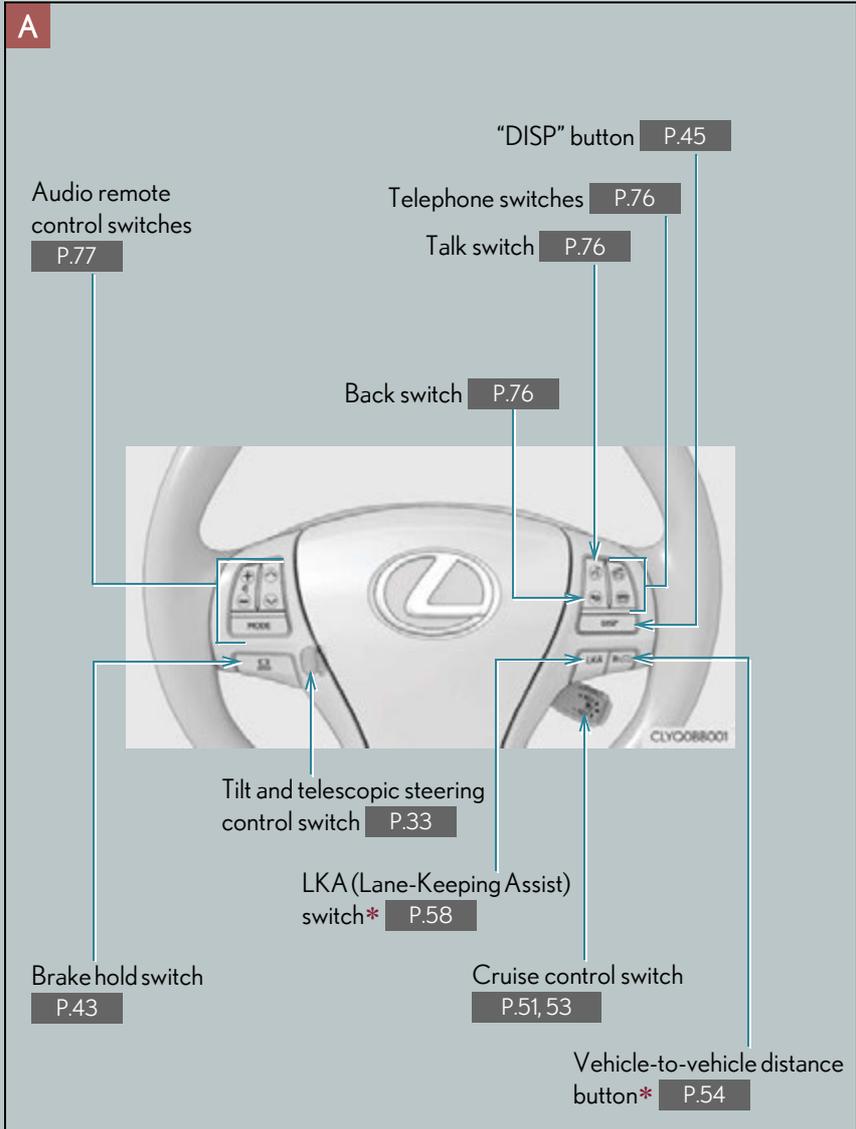


B

Outside rear view mirror switches P.34

Instrument panel light control switches*

Headlight cleaner switch*

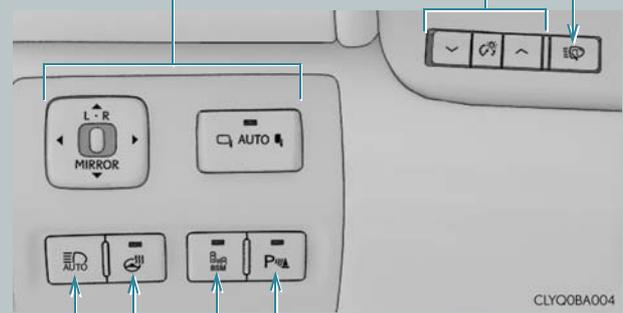

Intuitive parking assist switch P.56

BSM (Blind Spot Monitor) main switch* P.57


Heated steering wheel switch P.86

Automatic High Beam switch P.47

*: If equipped
*: Refer to "Owner's Manual".

Overview

Instrument Panel

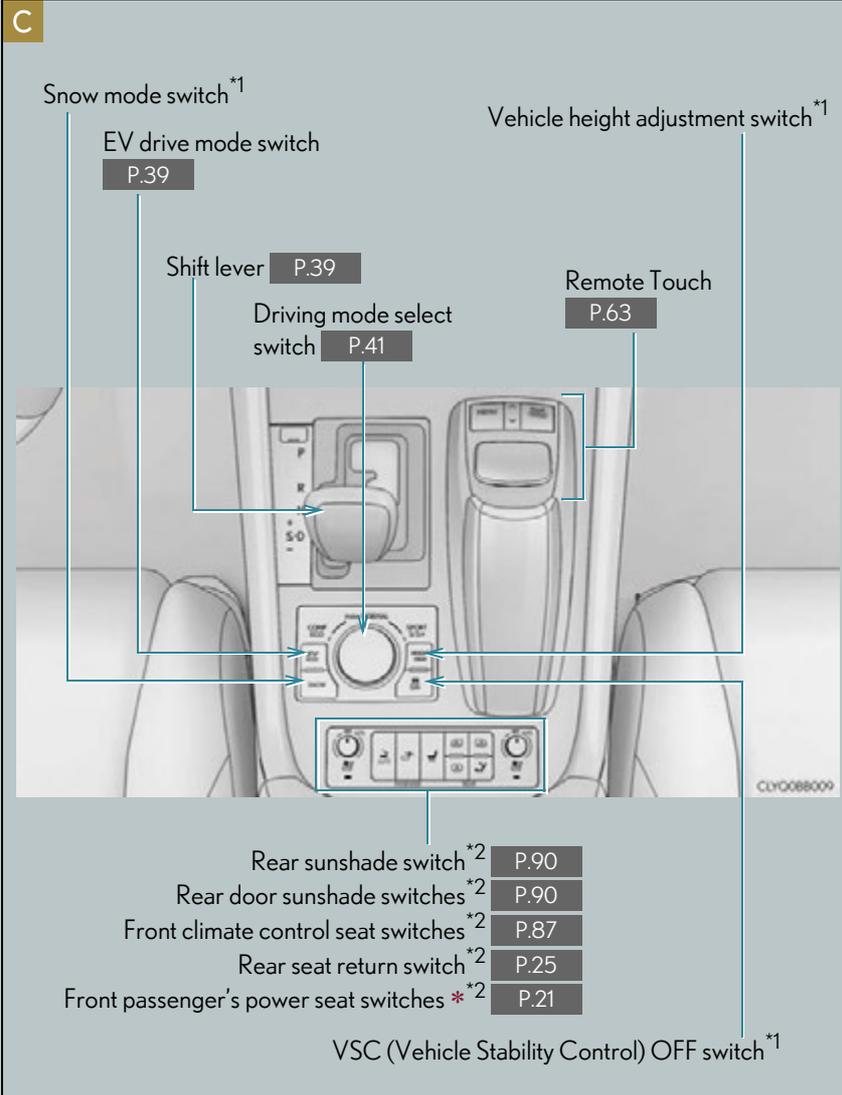

*: If equipped

*¹: Refer to "Owner's Manual".

*²: Location of the switches varies according to the vehicle grade level.


Overview

Roof

Interior light*
Personal lights*

Moon roof switches
P.106

Vanity lights*

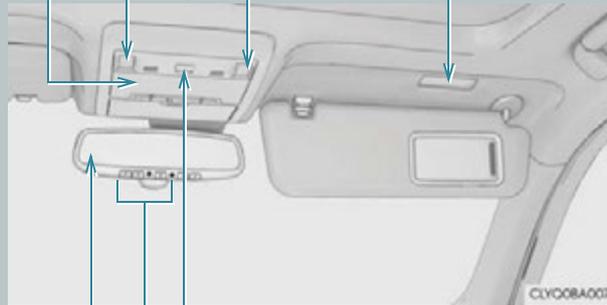

"SOS" button* P.97

Garage door opener switches
P.95


Inside rear view mirror P.33

*: If equipped

*: Refer to "Owner's Manual".

Overview

Rear Armrest

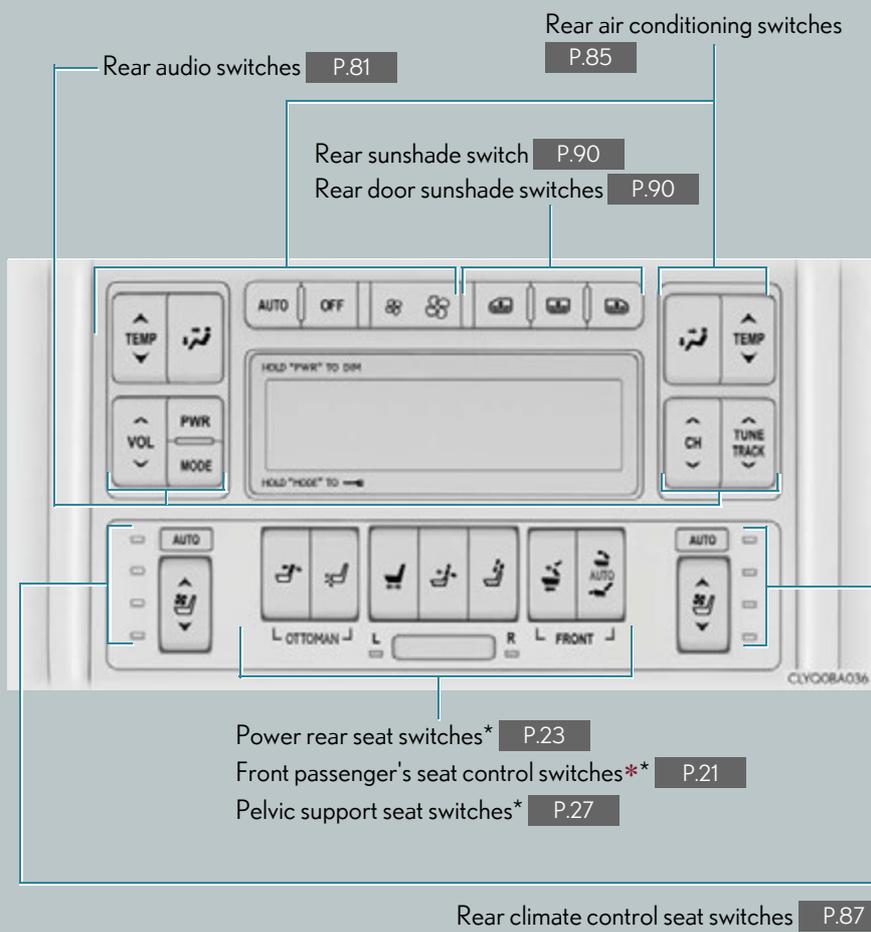

*: If equipped

*: Location of the switches varies according to the vehicle grade level.

Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "Owner's Manual".

Hybrid System Indicator



- ① Charge area
Shows regenerative charging.
- ② Hybrid Eco area
Shows that gasoline engine power is not being used very often. The gasoline engine will automatically stop and restart under various conditions.
- ③ Eco area
Shows that the vehicle is being driven in an Eco-friendly manner.
- ④ Power area
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)

- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration* status. Regenerated energy will be used to charge the battery.

*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ Charging the hybrid battery (traction battery)

- If the shift lever is in N, the hybrid battery (traction battery) will not be charged. Always put the shift lever in P when the vehicle is stopped. When driving in heavy traffic, operate the vehicle with the shift lever in D or S to avoid discharging the battery.
- To help prevent the 12-volt battery from becoming discharged, drive the vehicle at least once a month, and operate the accessories only when the "READY" indicator is on. When parking the vehicle, make sure the doors and trunk are closed and all lights are turned off.

■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift position in D or S.
- The brake pedal is depressed while driving with the shift position in D or S.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibration even though the vehicle is able to move. For safety, apply the parking brake and make sure to shift the shift lever to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the trunk lid is open.
- Sounds may be heard from the hybrid transmission when the hybrid system starts or stops.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the accelerator pedal is released or the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents on the package tray.

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.4 gal. [13 L, 2.8 Imp. gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

Energy Monitor/Consumption Screen

You can view the status of your hybrid system on the multi-information display and the Remote Touch screen.

Energy monitor

● How to display on the Remote Touch screen

▶ Vehicles without a navigation system

1 Press the "MENU" button on the Remote Touch.

2 Select "Info" on the "Menu" screen.

If the "Trip Information" or "Past Record" screen is displayed, select "Energy".

The "Energy Monitor" screen can be displayed on the "Side Display". For details, refer to the "Owner's Manual".

▶ Vehicles with a navigation system

1 Press the "MENU" button on the Remote Touch.

2 Select "Info/Apps" on the "Menu" screen.

3 Select "Fuel Consumption" on the "Information" screen.

If the "Trip Information" or "Past Record" screen is displayed, select "Energy".

The "Energy Monitor" screen can be displayed on the "Side Display". For details, refer to the "Owner's Manual".



The flow of energy is displayed on the Remote Touch screen.

Amber: gasoline energy

Yellow: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

● How to display on the multi-information display

Press the "DISP" button on the steering wheel several times to select the energy monitor display.



The flow of energy is indicated by the movement of the arrows on the multi-information display.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

■ Consumption

The consumption screen can be displayed on the "Side Display". For details, refer to the "Owner's Manual".

▶ Vehicles without a navigation system

1 Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen.

2 If the "Energy Monitor" screen is displayed, select "Fuel Consumption".

▶ Vehicles with a navigation system

1 Press the "MENU" button on the Remote Touch, then select "Info/Apps" on the "Menu" screen.

2 Select "Fuel Consumption" on the "Information" screen.

3 If the "Energy Monitor" screen is displayed, select "Fuel Consumption".

● Trip information

If the "Past Record" screen is displayed, select "Trip Information".



1 Resetting the consumption data

2 Fuel consumption in the past 15 minutes

3 Regenerated energy in the past 15 minutes

4 Displays the average vehicle speed since the hybrid system was started.

5 Displays the elapsed time since the hybrid system was started.

6 Cruising range

● Past record

If the "Trip Information" screen is displayed, select "Past Record".



1 Updating the average fuel consumption data

2 Resetting the past record data

3 Best recorded fuel consumption

4 Average fuel consumption

5 Previous fuel consumption record

■ Hybrid warning message


A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

Keys

■ Electronic key

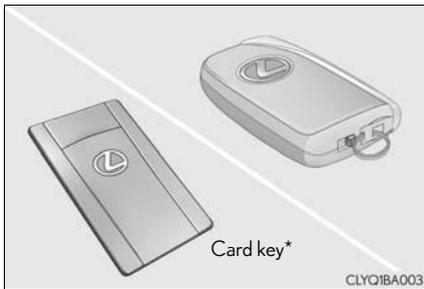


Smart access system with push-button start (→P:18)

Wireless remote control (→P:18)

*: If equipped

■ Mechanical key

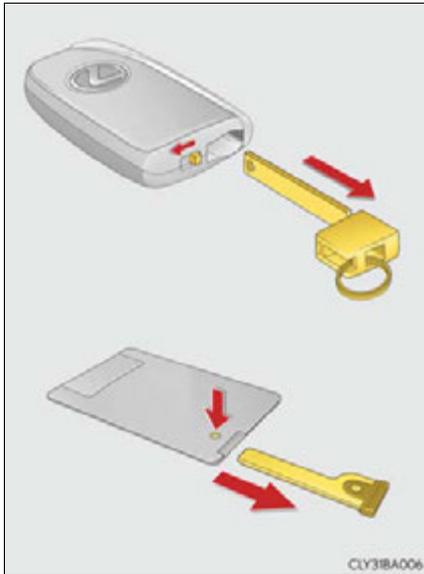


To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

■ Wireless remote control

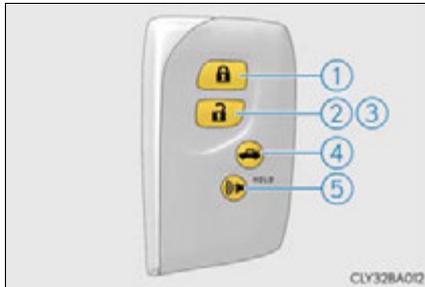

- ① Locks all the doors
- ② Unlocks all the doors
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
- ③ Opens the windows and moon roof (press and hold)*
- ④ Opens the trunk (press and hold)
The trunk lid automatically opens fully.
- ⑤ Sounds the alarm (press and hold)

*: This setting must be changed using the customize function.

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. (The driver should always carry the electronic key.)

For details on starting the hybrid system, see page 36.

■ Entering the vehicle




Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.


■ Exiting the vehicle

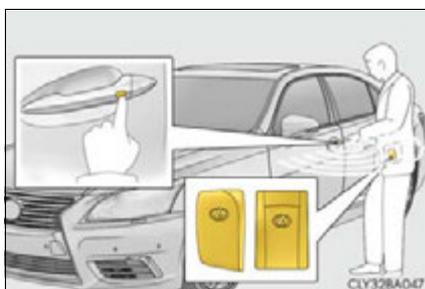

Press the lock button to lock the door.

Pressing and holding the button closes the windows and moon roof.

■ Opening the trunk

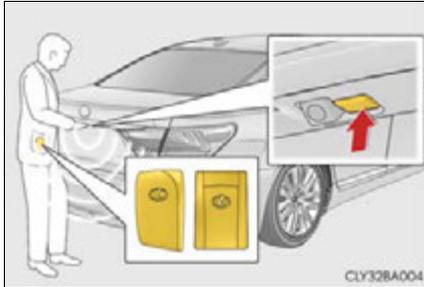

Press the button.
The trunk lid automatically opens fully.

For details on what to do when the electronic key does not operate properly, see page 112.

■ Theft Deterrent System

■ Immobilizer system



The indicator light flashes after the power switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the power switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

■ Alarm

The alarm uses light and sound to give an alert when an intrusion is detected.

To set the alarm:

Close the doors, trunk and hood, and lock all the doors. The system will be set automatically after 30 seconds.


The indicator light changes from being on to flashing when the system is set.

To deactivate or stop the alarm:

- Unlock the doors or open the trunk.
- Turn the power switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

Front Seats

■ Adjustment procedure

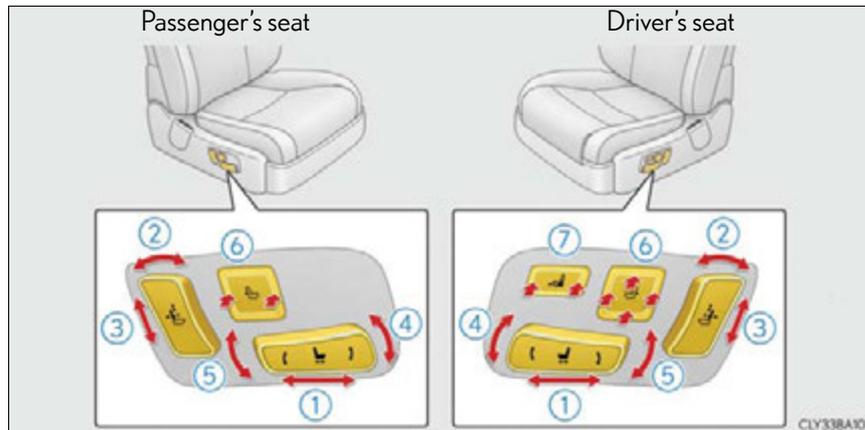

- ① Seat position adjustment switch
The height of the driver's head restraint is automatically adjusted simultaneously with the seat position adjustment operation.
- ② Seatback angle adjustment switch
- ③ Head restraint height adjustment switch
- ④ Seat cushion (front) angle adjustment switch
- ⑤ Vertical height adjustment switch
- ⑥ Lumbar/pelvic support adjustment switch
Driver's seat: firmness, vertical, backward and forward positioning
Front passenger's seat: firmness, backward and forward positioning
- ⑦ Seat cushion length adjustment switch

■ Operating the front passenger's seat from driver's seat or rear seat


■ Operating the front passenger's seat from the driver's seat

▶ Vehicles without relaxation seat



- ① Tilts the seatback forward
- ② Tilts the seatback backward
- ③ Moves the seat forward
- ④ Moves the seat backward

▶ Vehicles with relaxation seat

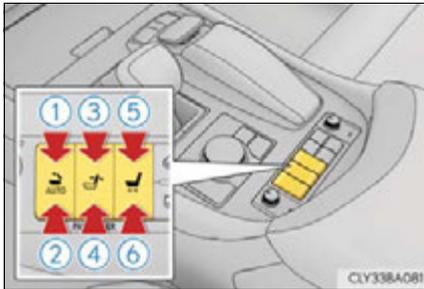

- ① Tilts the seatback forward and moves the seat forward
- ② Tilts the seatback backward and moves the seat backward
If the rear seat is not in the neutral position, pressing the button once will move the rear seat to the neutral position. Pressing the button again will move the front passenger's seat to the neutral position.
- ③ Tilts the seatback forward
- ④ Tilts the seatback backward
- ⑤ Moves the seat forward
- ⑥ Moves the seat backward

■ Operating the front passenger's seat from the rear seat (vehicles with relaxation seat)

▶ 5-seat models



- ① Moves the front passenger's seat forward
The signal beeps when the seat operation stops at the forward limit.
- ② Moves the front passenger's seat backward
The seatback will return to the neutral position. If the head restraint is folded, it will rise before the seatback moves.

▶ 4-seat models




- ① Moves the front passenger's seat forward
The signal beeps when the seat operation stops at the forward limit.
- ② Moves the front passenger's seat backward
The seatback will return to the neutral position. If the head restraint is folded, it will rise before the seatback moves.

The operation can be performed when the power switch is in ON mode.


Power Rear Seat

► 5-seat models without relaxation seat

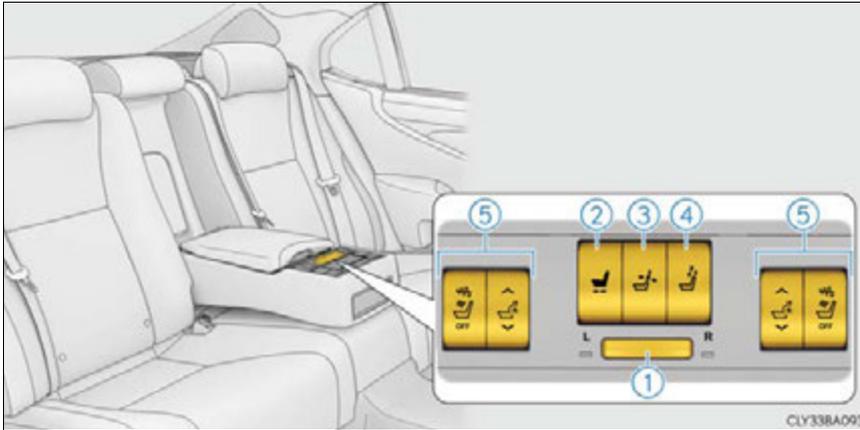

- ① Seat selection switch
- ② Seat position adjustment switch
- ③ Seatback upper angle adjustment switch
- ④ Head restraint height adjustment switch
- ⑤ Pelvic support seat switches

► 5-seat models with relaxation seat

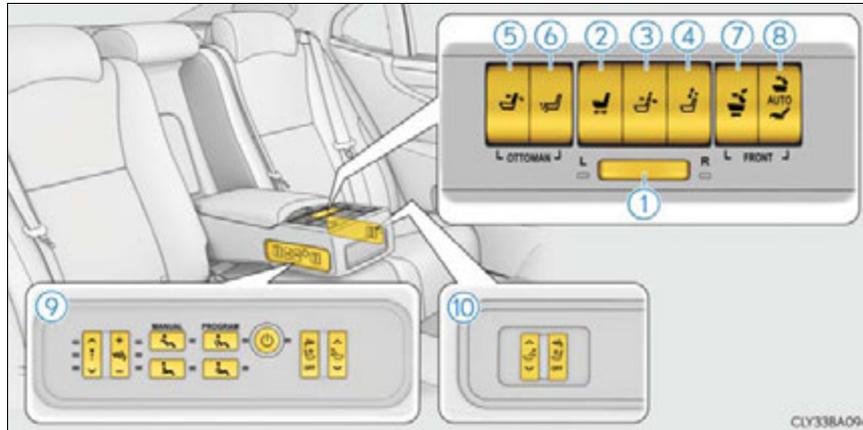

- | | |
|---|--|
| ① Seat selection switch | ⑥ Ottoman angle adjustment switch |
| ② Seat position adjustment switch | ⑦ Front passenger's seat control switch |
| ③ Seatback upper angle adjustment switch | ⑧ Relaxation mode switch |
| ④ Head restraint height adjustment switch | ⑨ Rear seat relaxation system/pelvic support seat switches |
| ⑤ Seatback angle adjustment switch | ⑩ Pelvic support seat switches |

► 4-seat models



- ① Seat selection switch
- ② Seat position adjustment switch
- ③ Seatback upper angle adjustment switch
- ④ Head restraint height adjustment switch
- ⑤ Seatback angle adjustment switch
- ⑥ Ottoman angle adjustment switch
- ⑦ Front passenger's seat control switch
- ⑧ Relaxation mode switch
- ⑨ Rear seat relaxation system/pelvic support seat controller


■ Returning the rear seat from the front seats

► Vehicles without relaxation seat



The seat will return to the neutral position while the button is pressed and held.


► Vehicles with relaxation seat

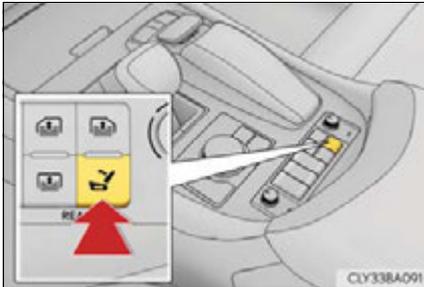

The seat will return to the neutral position while the button is pressed and held.

■ Relaxation mode (relaxation seat)

► 5-seat models

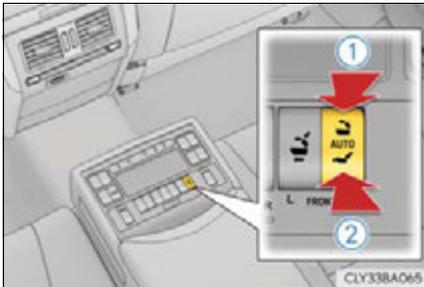

- ① Enters relaxation mode
- ② Returns to the neutral position

The rear seat seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the power switch is in ON mode.

► 4-seat models



- ① Enters relaxation mode
- ② Returns to the neutral position

The rear seat seatback, ottoman and the front passenger seat operate simultaneously.

The operation can be performed when the power switch is in ON mode.

When a rear door is opened, the seat on that side will automatically return to the neutral position.

■ Pelvic support seat with seat vibrator

▶ 5-seat models without relaxation seat




① Support plate position adjustment switch

② Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing "OFF" stops the vibration function.

▶ 5-seat models with relaxation seat

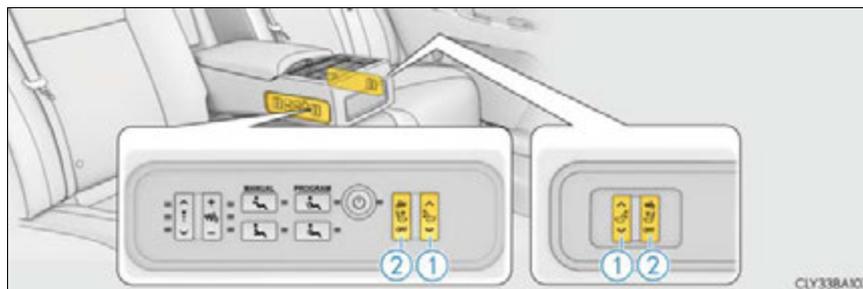


① Support plate position adjustment switch

② Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing "OFF" stops the vibration function.

► 4-seat models

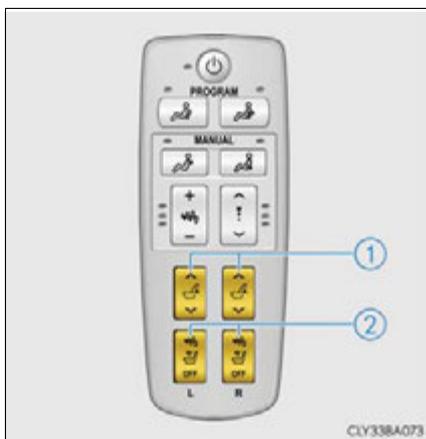


- ① Support plate position adjustment switch
- ② Vibration switch

Press  to operate the vibration function. Vibration will start in the same speed level as when previously operated. Each time  is pressed, the speed changes between 3 levels. Pressing "OFF" stops the vibration function.

Automatic stop function: Vibration will automatically stop approximately 15 minutes after starting.


■ Rear seat relaxation system (vehicles with relaxation seat)

► 5-seat models

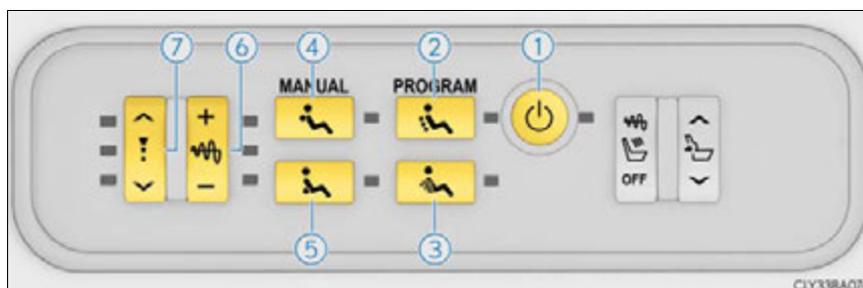

- ① Turns the system on and off
If no buttons are selected within approximately 3 minutes of operating this switch, the system will automatically turn off.
- ② Starts the  program
Partial pressure for the whole back
- ③ Starts the  program
Stretches and relaxes the lower back
- ④ Starts operation for the upper back
- ⑤ Starts operation for the lower back
- ⑥ Adjusts the intensity of the air pressure
3 intensity levels are available.
- ⑦ Adjusts the speed of the air unit
3 speed levels are available.

► 4-seat models

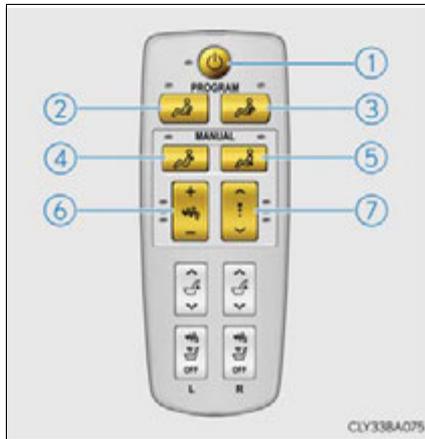

- ① Turns the system on and off
If no buttons are selected within approximately 3 minutes of operating this switch, the system will automatically turn off.
- ② Starts the  program
Partial pressure for the whole back
- ③ Starts the  program
Stretches and relaxes the lower back
- ④ Starts operation for the upper back
- ⑤ Starts operation for the lower back
- ⑥ Adjusts the intensity of the air pressure
3 intensity levels are available.
- ⑦ Adjusts the speed of the air unit
3 speed levels are available.

Automatic stop function: Each operation will automatically stop approximately 15 minutes after starting.


Driving Position Memory

Your preferred driving position (the position of the driver's seat and steering wheel, angle of the outside rear view mirrors, and height of seat belt shoulder anchor) can be memorized and recalled with the touch of a button.

The same buttons are found on the front passenger's side, allowing the front passenger's seat position and seat belt shoulder anchor height to be memorized.

Entering a position to memory

- 1 Adjust the driver's seat, steering wheel, outside rear view mirrors and seat belt shoulder anchor height to the desired positions. (When memorizing the front passenger's seat, adjust the front passenger's seat to the desired positions.)

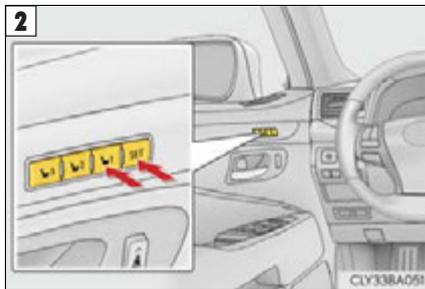

Press the "SET" button, then within 3 seconds press button "1", "2" or "3" until the signal beeps.

If the selected button has already been pre-set, the previously recorded position will be overwritten.

Recalling the memorized position



Press button "1", "2" or "3" to recall the desired position.

Vehicles with relaxation seat:

When retractable table (4-seat models) or ottoman is used, rearward memories cannot be recalled.

■ Linking driving position memory with door unlock operation (driver's side)

▶ Using the wireless remote control




While pressing the desired button ("1", "2" or "3"), press  on the wireless remote control until the signal beeps.

To prevent unintended triggering of the alarm, open and close a door once after a driving position has been recorded. (If a door is not opened within 30 seconds after  is pressed, the doors will be locked again and the alarm will automatically be set.)

▶ Using the door lock switch

Carry only one of the keys (including the card key) to which you want to link the driving position. If 2 or more keys are in the vehicle, the driving position cannot be linked properly.

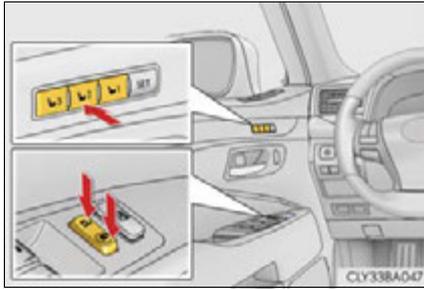


While pressing the desired button ("1", "2" or "3"), press the lock or unlock side on the door lock switch (either the driver or passenger side) until the signal beeps.

Rear Seat Position Memory

The rear seat position can be memorized and recalled with the touch of a button.


■ Entering a position to memory

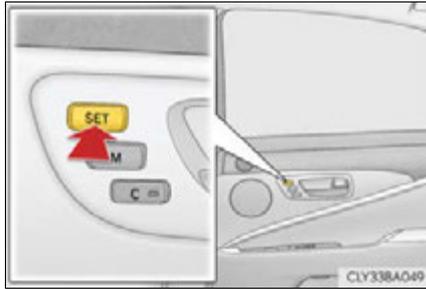

Press the "SET" button until the signal beeps.


If the preset is being used, the previously recorded seat position will be overwritten.

■ Recalling the memorized position

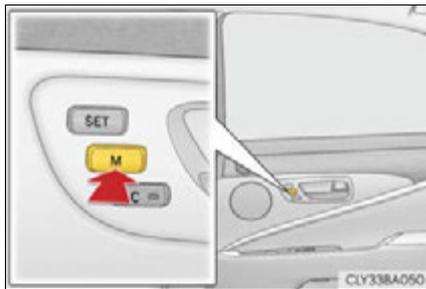

Press the "M" button until the signal beeps.

■ Disabling the seat return function

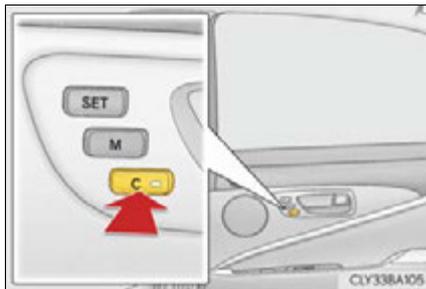


Pressing the "C" button will disable the seat position recall or seat return function.

The indicator light comes on when the function is disabled.
Pressing the button again will enable the seat position recall or seat return function.

When the door is opened, the rear seat will automatically return to the neutral position.

Steering Wheel

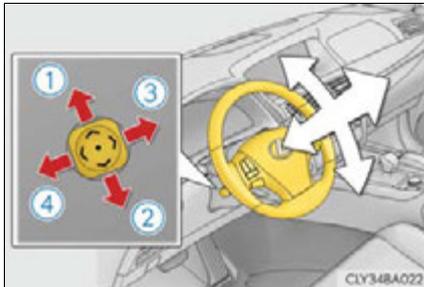


- ① Up
- ② Down
- ③ Toward the driver
- ④ Away from the driver

The steering wheel and driver's seat move in accordance with engine switch mode and the driver's seat belt condition. (→P.30)

Inside Rear View Mirror

■ Anti-glare function

Responding to the level of brightness of the headlights of vehicles behind, the reflected light is automatically reduced.

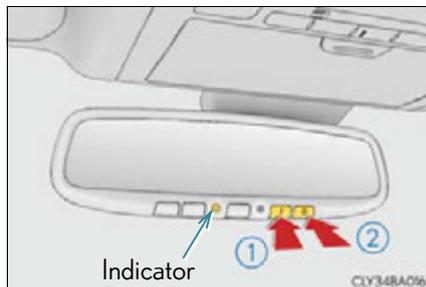

Changing automatic anti-glare function mode

- ① ON
- ② OFF

When the automatic anti-glare function is in ON mode, the indicator illuminates.

The function will set to ON mode each time the power switch is turned to ON mode.

Pressing the button turns the function to OFF mode. (The indicator also turns off.)


Seat Belts

Adjusting the seat belt shoulder anchor height (front seats)



- ① Moves the seat belt shoulder anchor up
- ② Moves the seat belt shoulder anchor down

Seat belts comfort guides (outer rear seats)

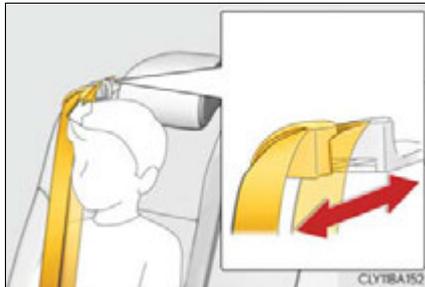


For children or smaller-than-average people, slide the seat belt comfort guide forward so that the shoulder belt does not sit close to the person's neck.

Outside Rear View Mirrors

Adjustment procedure



- 1 Select the mirror to be adjusted.
 - ① Left
 - ② Neutral position
 - ③ Right

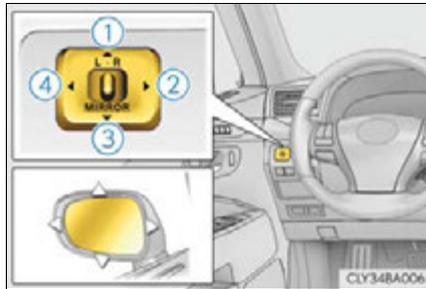


2 To adjust the mirror, press the switch.

- ① Up
- ② Right
- ③ Down
- ④ Left

■ Folding and extending the mirrors


■ Using the switch

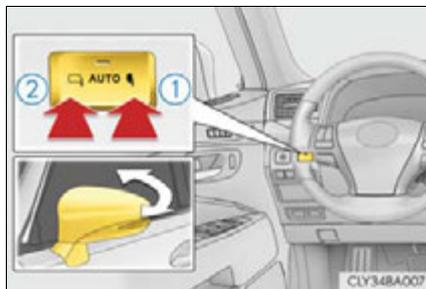

- ① Folds the mirrors
- ② Extends the mirrors

■ Setting automatic mode

Automatic mode allows the folding or extending of the mirrors to be linked to locking/unlocking of the doors.

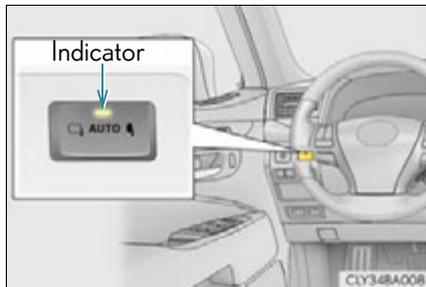

To set to automatic mode, put the switch in the neutral position.

The indicator will come on.

■ Linked mirror function when reversing

When the mirror select switch is in the "L" or "R" position, the outside rear view mirrors will automatically angle downwards when the vehicle is reversing in order to give a better view of the ground. To disable this function, move the mirror select switch to the neutral position (between "L" and "R").

Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

Starting the hybrid system




- 1** Turn the power switch to ON mode and check that the parking brake is set.
- 2** Check that the shift lever is set in P.
- 3** Firmly depress the brake pedal.
The power switch indicator will turn green. If the indicator does not turn green, the hybrid system cannot be started.
- 4** Press the power switch.
After a while, the "READY" indicator comes on with a beep sound.
The vehicle can move when the "READY" indicator is on even if the engine is stopped.
Continue depressing the brake pedal until the hybrid system is completely started.
The hybrid system can be started from any power switch mode.
- 5** Check that the "READY" indicator is on.
The vehicle will not move when the "READY" indicator is off.

Stopping the hybrid system

- 1** Stop the vehicle.
- 2** Shift the shift lever to P.
- 3** Set the parking brake.
- 4** Press the power switch.
- 5** Release the brake pedal and check that the indicator on the power switch is off.

■ Changing power switch modes

Modes can be changed by pressing the power switch with the brake pedal released. (The mode changes each time the switch is pressed.)

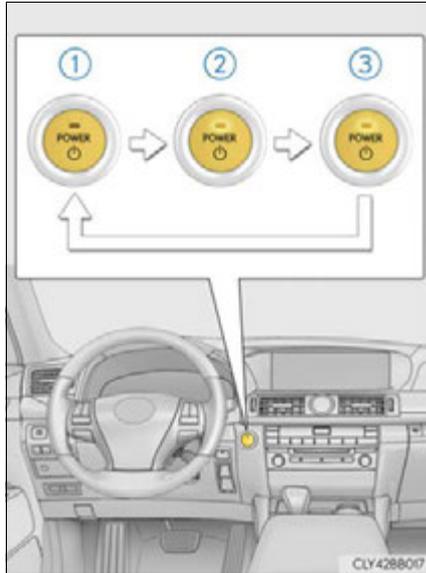

- ① Off*
The emergency flashers can be used.
- ② ACCESSORY mode
Some electrical components such as the audio system can be used.
The power switch indicator turns amber.
- ③ ON mode
All electrical components can be used.
The power switch indicator turns green.

*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACCESSORY mode, not to off.

■ If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.
 - ▶ If the shift lever is shifted to N
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the hybrid system.
 - ▶ If the shift lever cannot be shifted to N
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.




To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

EV Drive Mode

In EV drive mode the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

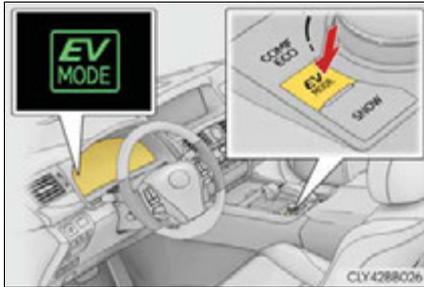


Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

EV drive mode's possible driving distance ranges from a few hundred meters to approximately 0.6 mile (1 km). Driving is possible at speeds of less than approximately 25 mph (40 km/h).

Hybrid Transmission

Shifting the shift lever

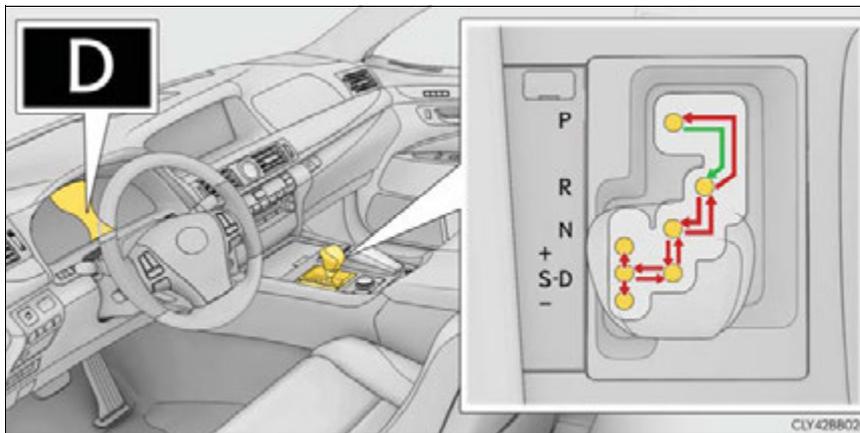

- While the power switch is in ON mode, move the shift lever with the brake pedal depressed. When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

■ Shift position purpose


Shift position	Purpose and condition
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Condition in which the power is not transmitted
D	Normal driving ^{*1}
S	S mode driving ^{*2}

*1: To improve fuel efficiency and reduce noises, set the shift lever in D for normal driving.

*2: By selecting shift ranges using S mode, you can control accelerating forces and engine braking forces.

■ Selecting shift ranges in S mode

To enter S mode, shift the shift lever to the S position. The shift range can be selected by the shift lever.

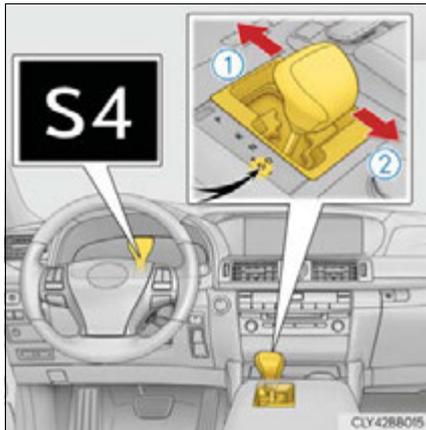

① Upshifting


② Downshifting

The selected shift range, from S1 to S8, will be displayed in the meter.

The initial shift range in S mode is automatically set to S4, S5, S6 or S7 according to vehicle speed.

Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

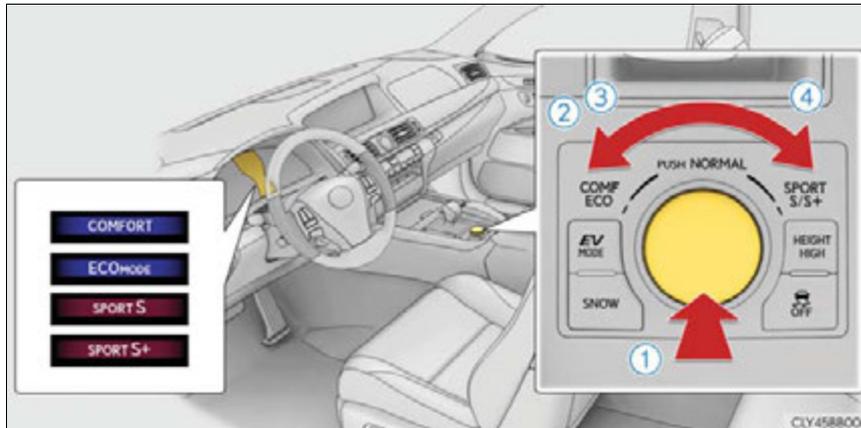

- ① Normal mode
For normal driving.
Press the switch to change the driving mode to normal mode when not in normal mode.
- ② Comfort mode
By controlling the suspension, riding comfort is further enhanced. Suitable for city driving.
When not in comfort mode and the driving mode select switch is turned to the left, the "COMFORT" indicator comes on in the multi-information display.
- ③ Eco drive mode
Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.
When in comfort mode and the driving mode select switch is turned to the left, the "ECO MODE" indicator comes on in the multi-information display.
- ④ Sport mode
 - SPORT S mode
Assists acceleration response by controlling the hybrid system. Suitable for when precise handling is desirable, for example when driving on mountain roads.
When not in SPORT S mode and the driving mode select switch is turned to the right, the "SPORT S" indicator comes on in the multi-information display, and the hybrid system Indicator changes to the tachometer.
 - SPORT S+ mode
Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the hybrid system. Suitable for sporty driving.
When in SPORT S mode and the driving mode select switch is turned to the right, the "SPORT S+" indicator comes on in the multi-information display.

Parking Brake

Manual mode



- ① Sets the parking brake
The parking brake indicator light will come on.
- ② Releases the parking brake
Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light goes off.

Automatic mode

The parking brake is set or released automatically according to shift lever operation.



- Turns automatic mode on/off
When automatic mode is turned on, it operates in the following manner:
- When the shift lever is moved into P, the parking brake will be set.
 - When the shift lever is moved out of P, the parking brake will be released.
- Operate the shift lever with the brake pedal depressed.

Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle.



Turns the brake hold system on

The brake hold standby indicator (green) comes on. While the system is holding the brake, the brake hold operated indicator (yellow) comes on.

The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.

Multi-information Display


The multi-information display presents the driver with a variety of driving-related data.

Display contents



- Trip information
 - Energy monitor
 - Driving range
 - Average fuel consumption
 - Current fuel consumption
 - Average fuel consumption after refueling
 - Distance after refueling
 - Elapsed time
 - Average vehicle speed
 - Tire inflation pressure (→P.62)
 - Customization
 - Drive monitor
 - Displays either the average fuel consumption after refueling or the driving range
 - Intuitive parking assist display*
 - Dynamic radar cruise control with full-speed range display* (if equipped)
 - LKA (Lane-Keeping Assist) display* (if equipped)
 - Warning messages
- *: Automatically displayed when the system is used. Display can be switched by pressing the "DISP" button.


■ Switching the display of trip information

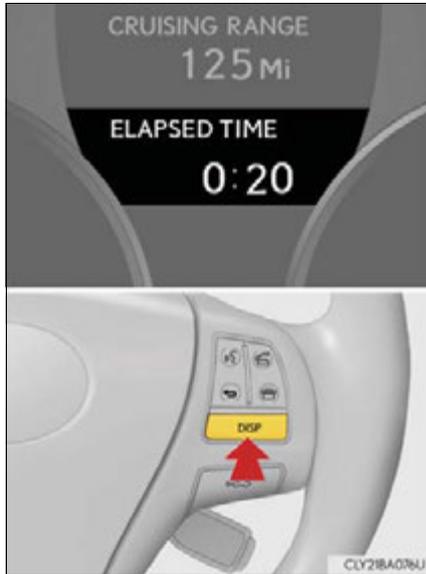

Items displayed can be switched by pressing the “DISP” button.


If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Headlights

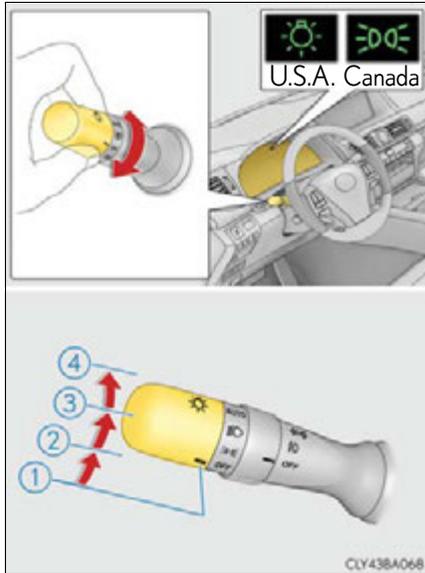

- ① OFF (U.S.A.) or ○ (Canada)
The daytime running lights turn on.
- ② ≡ The side marker, tail, license plate, instrument panel and daytime running lights turn on.
- ③ ≡ The headlights, parking lights and all lights listed (except daytime running lights) above turn on.
- ④ AUTO The headlights, parking lights, daytime running lights and all the lights listed above turn on and off automatically.
(When the power switch is in ON mode.)

■ Turning on the high beam headlights

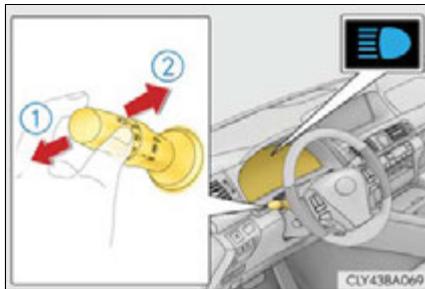


- ① With the headlights on, push the lever away from you to turn on the high beams.
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.

■ AFS (Adaptive Front-lighting System)


AFS (Adaptive Front-lighting System) secures excellent visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire's angle as controlled by steering input.

Automatic High Beam

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

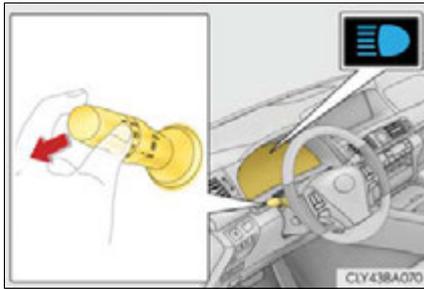


- 1** Push the lever away from you with the headlight switch in **AUTO** or  position.

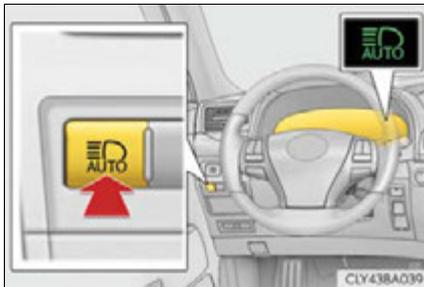

- 2** Press the Automatic High Beam switch. The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

■ Turning the high beam on/off manually

● Switching to low beam

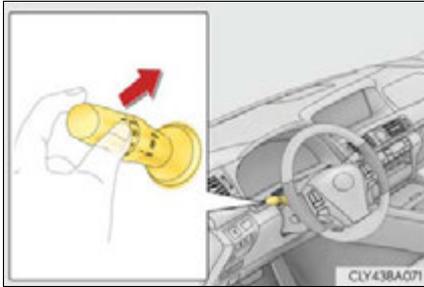

Pull the lever to original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

● Switching to high beam




Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.


For conditions in which the Automatic High Beam automatically turns the high beams on or off, refer to the "Owner's Manual".

Fog Lights

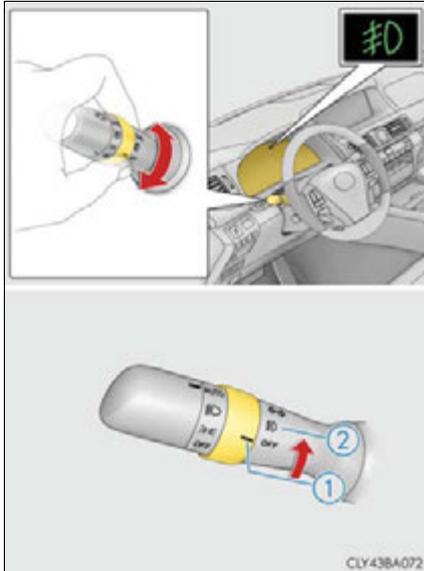


- ① OFF (U.S.A.) or ○ (Canada)
Turns the front fog lights off
- ② $\neq 0$ Turns the front fog lights on

Windshield Wipers and Washer

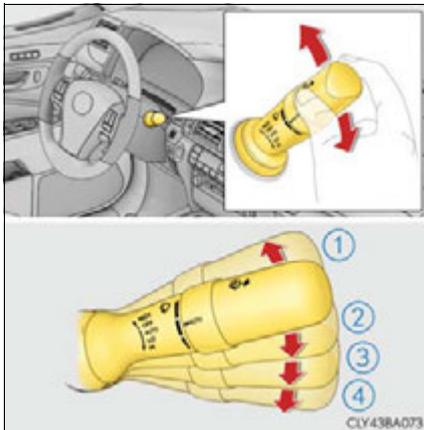

- ① **MIST** (U.S.A.) or \triangle (Canada)
Temporary operation
- ② **AUTO** Rain-sensing wiper operation
The wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.
- ③ **LO** (U.S.A.) or \blacktriangledown (Canada)
Low speed wiper operation
- ④ **HI** (U.S.A.) or \blacktriangledown (Canada)
High speed wiper operation

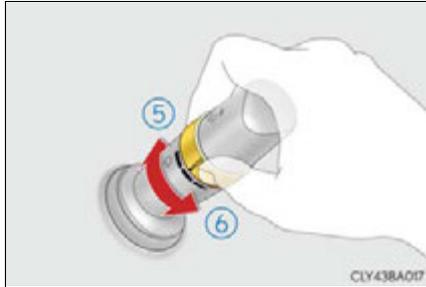


When "AUTO" mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity



- ⑦ Washer/wiper dual operation
Wipers will automatically operate a couple of times after the washer squirts.

Rear Window and Outside Rear View Mirror Defoggers

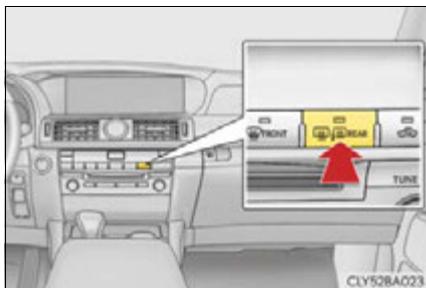

On/off

The defoggers will automatically turn off after approximately 15 minutes.


Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.




- ① Indicators
- ② Cruise control switch

Setting the vehicle speed

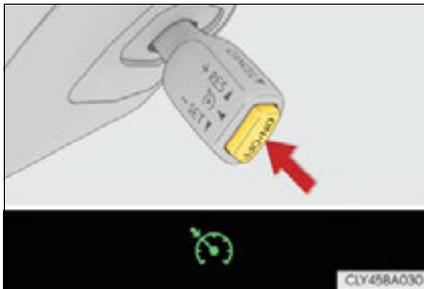


- 1** Press the "ON•OFF" button to activate the cruise control. Cruise control indicator will come on. Press the button again to deactivate the cruise control.

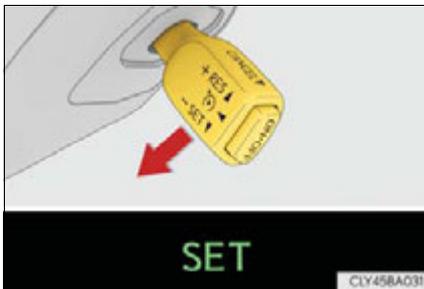


- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed. "SET" indicator will come on. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

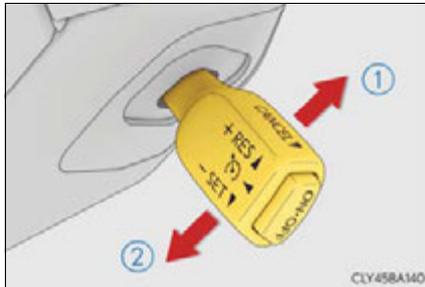

- ① Increases the speed
 - ② Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

■ Canceling and resuming the constant speed control

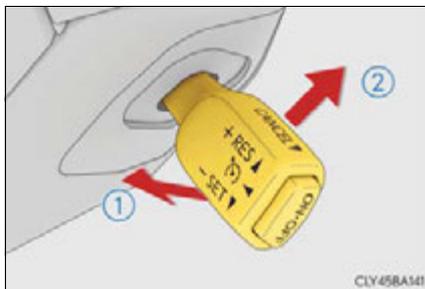

- ① Pulling the lever toward you cancels the constant speed control. The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).


Dynamic Radar Cruise Control with Full-speed Range (if equipped)

Dynamic radar cruise control with full-speed range supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates or stops in order to maintain a set following distance from vehicles ahead.




- ① Vehicle-to-vehicle distance button
- ② Display
- ③ Set speed
- ④ Indicators
- ⑤ Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

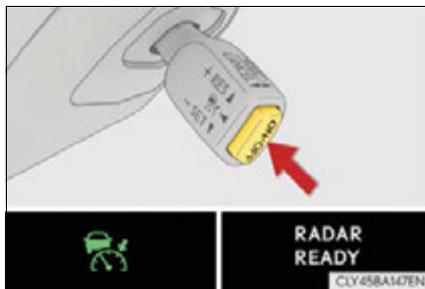


- 1 Press the "ON•OFF" button to activate the cruise control. Radar cruise control indicator will come on and a message will be shown on the multi-information display. Press the button again to deactivate the cruise control.

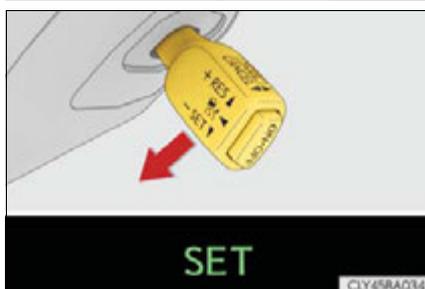


- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed. "SET" indicator will be displayed. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

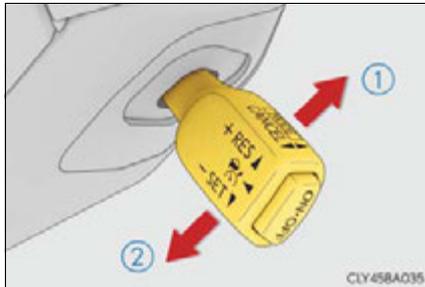

- ① Increases the speed
(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

■ Changing the vehicle-to-vehicle distance

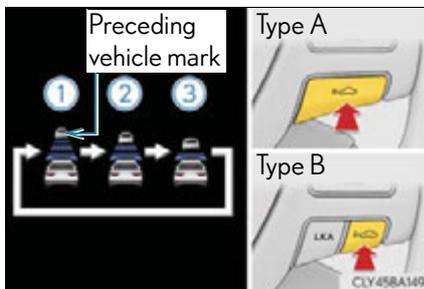

Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
 - ② Medium
 - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode. If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.


■ Resuming follow-up cruising when the vehicle has been stopped by system control



After the vehicle ahead of you starts off, push the lever up.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

■ Canceling and resuming the speed control

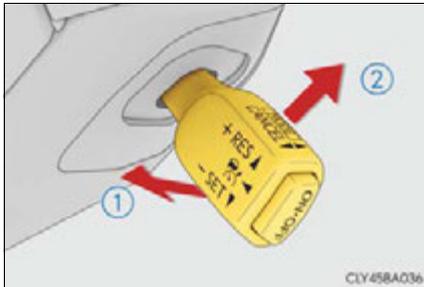


- ① Pulling the lever toward you cancels the cruise control.

The setting is also canceled when the brake pedal is depressed while driving. (When the vehicle has been stopped by system control, applying the brakes does not cancel the setting.)

- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, when a vehicle ahead is not detected in vehicle-to-vehicle distance control mode, cruise control does not resume when the actual vehicle speed is approximately 25 mph (40 km/h) or less. Also, when the vehicle is in constant speed control mode and the actual vehicle speed is approximately 25 mph (40 km/h) or less, cruise control does not resume as the set speed is cleared.

■ Selecting conventional constant speed control mode

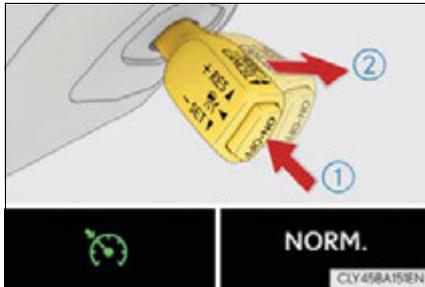


- ① Press the "ON•OFF" button to activate the cruise control.
Radar cruise control indicator will come on and a message will be shown on the multi-information display.
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.
(Push the lever forward and hold for approximately 1 second.)
Cruise control indicator will come on and a message will be shown on the multi-information display.
When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

■ Intuitive Parking Assist

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Remote Touch screen and a buzzer. Always check the surrounding area when using this system.

■ Turning the system on and off

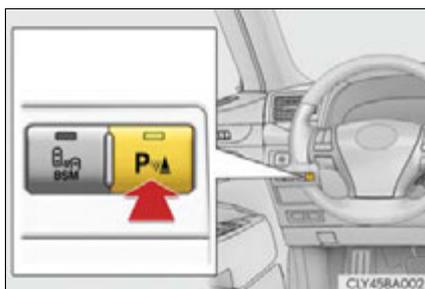


Turns the intuitive parking assist on/off

When on, the indicator light comes on and the buzzer sounds to inform the driver that the system is operational.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;


- The Blind Spot Monitor function
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function
Assists the driver when backing up

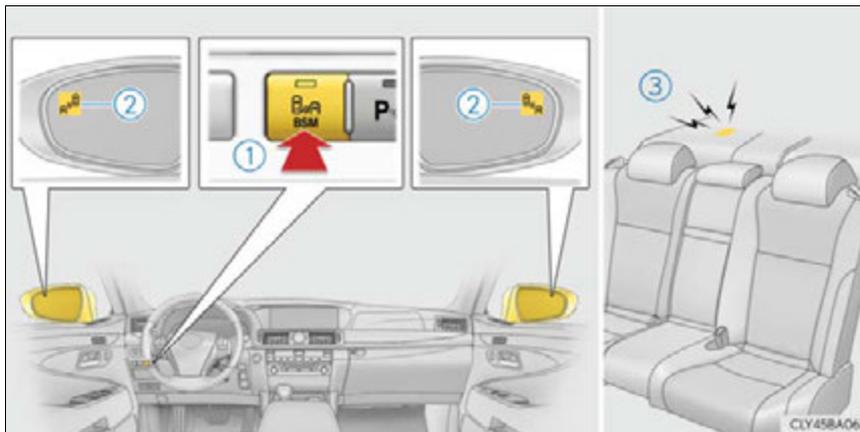

- ① BSM main switch
Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. Common switch for Blind Spot Monitor function and Rear Cross Traffic Alert function.
- ② Outside rear view mirror indicator
Blind Spot Monitor function:
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.
Rear Cross Traffic Alert function:
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

LKA (Lane-Keeping Assist) (if equipped)

While driving on a freeway or motor highway that has lane markers and no sharp curves, the system recognizes the lanes using a camera located above the inside rear view mirror as a sensor to assist the driver with staying in the lane. The LKA system has two functions.

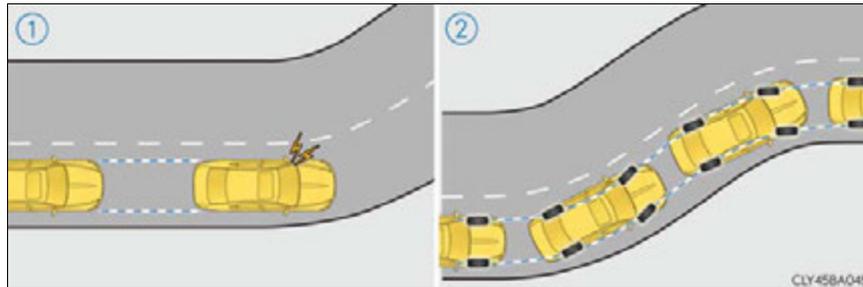

① Lane departure warning function

If the system judges that the vehicle may deviate from its lane, it alerts the driver using rapid beeping, indications on the multi-information display, and a sensory warning* given via the steering wheel.


*: A slight steering torque is applied for a short period of time in the direction of the center of the lane.

② Lane keeping assist function

- This function will be active when the vehicle-to-vehicle distance control mode of the dynamic radar cruise control with full-speed range is set with vehicle speed above approximately 45 mph (72 km/h) and while the lane departure warning function is active.

- When the lane keeping assist function is active, a slight steering torque will be applied, to help the driver maintain the vehicle inside the lane.


■ Turning the LKA system on

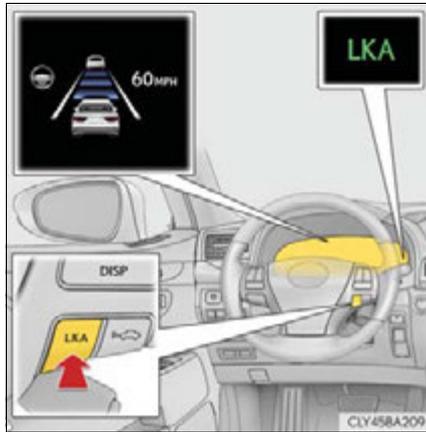

Press the LKA switch to activate the system. LKA indicator will come on. Press the switch again to turn the LKA system off. The LKA system will revert to off each time the power switch is turned to ON mode.

■ Indication on the multi-information display

When the LKA system is on, the lane line display and steering wheel display are shown.

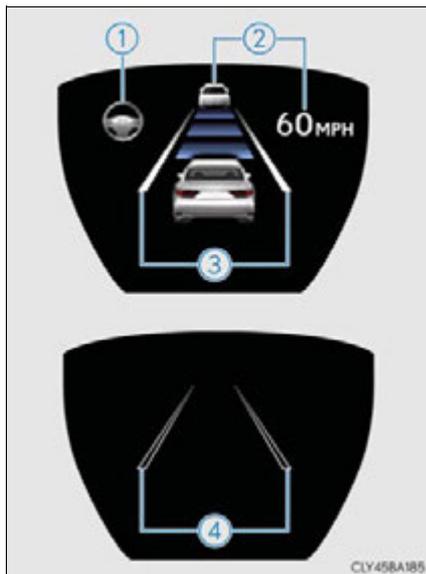

- ① Lane keeping assist function operation indication
Steering wheel displayed:
Indicates that the function is currently operating.
Steering wheel not displayed:
Indicates that the function is not currently operating.
- ② Dynamic radar cruise control with full-speed range display
- ③ Lane departure warning function indication (when the inside of the white line is white):
The function has recognized lane markers.
- ④ Lane departure warning function indication (when the inside of the white line is black):
A lane marker is not recognized by the system, or the LKA system functions are temporarily canceled.

Lexus Night View (if equipped)

Lexus night view is a system which assists with nighttime driving. Near-infrared rays are irradiated forward and an image converted from the irradiated light is shown on the Remote Touch screen. The image shows pedestrians, obstacles, and road conditions ahead of the vehicle, which are difficult to see at nighttime with the naked eye.

■ Displaying the Lexus night view

- 1 Turn the power switch to ON mode.
- 2 Turn the headlights on.



Press the Lexus night view switch.

The Lexus night view is displayed on the Remote Touch screen.

To return the screen to its previous state, press the switch again.

When the light sensor determines that it is currently night time from the brightness of the surrounding area, the Lexus night view can be operated by pressing the Lexus night view switch while the headlights are on.

■ The Lexus night view display

- When displaying on the “Main Display”



- ① Lexus night view screen
- ② “Side Display” switching button
- ③ Brightness adjustment button

- When displaying on the “Side Display”



When another screen is displayed on the “Main Display” while the Lexus night view is being shown on the “Main Display”, the Lexus night view screen will be displayed on the “Side Display”.

- ① Lexus night view screen
- ② “Main Display” switching button

Tire Pressure Warning System


Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

Initializing the tire pressure warning system

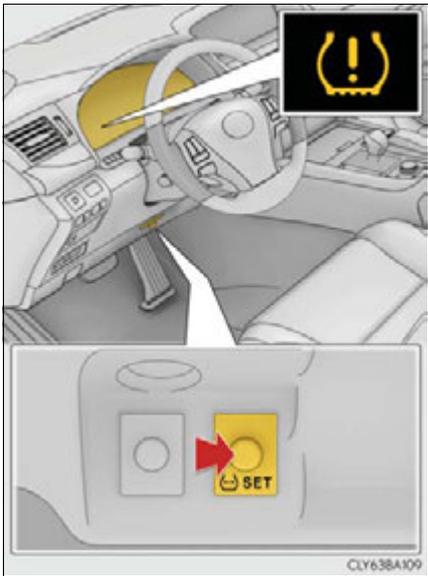


Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.

Basic operation

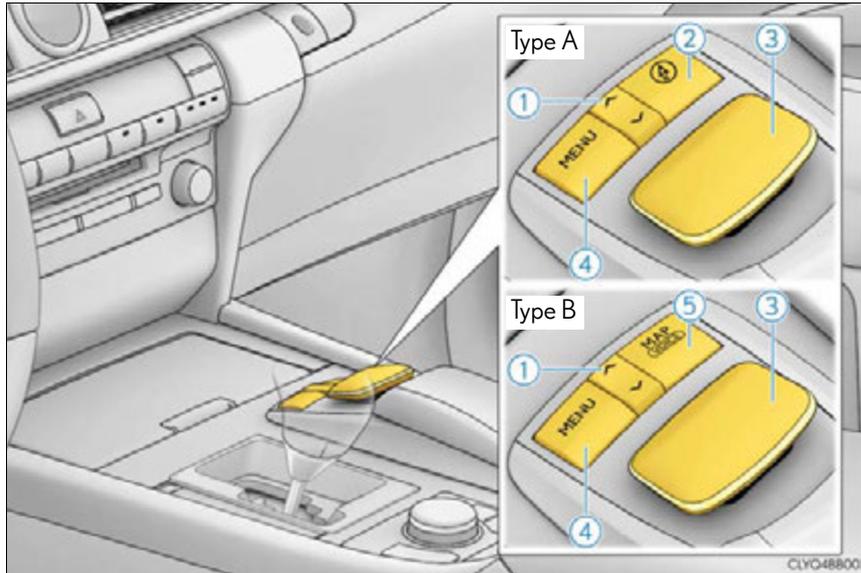


- ① “^•v” button
Press this button to change map scale and scroll through lists.
- ② “COMPASS” button
Press this button to display the compass mode screen.
- ③ Remote Touch knob
Move in the desired direction to select a function, number and screen button.
Push the knob to enter the selected function, number and screen button.
Feedback force, pointer sound volume, on or off of selection sounds, etc. can be changed. Refer to the “Owner’s Manual” and “Navigation System Owner’s Manual”.
- ④ “MENU” button
Press this button to display the “Menu” screen.
- ⑤ “MAP/VOICE” button
Press this button to display the vehicle’s current position.

■ Menu

▶ Vehicles without navigation system




▶ Vehicles with navigation system

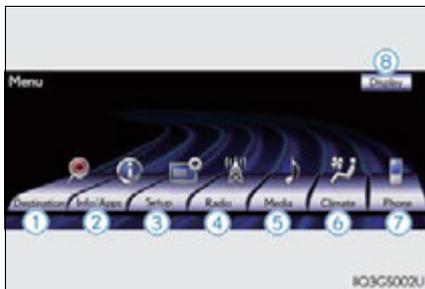

Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Destination" (→P.66)
- ② "Info" or "Info/Apps"
- ③ "Setup"
- ④ "Radio" (→P.78)
- ⑤ "Media" (→P.77)
- ⑥ "Climate" (→P.83)
- ⑦ "Phone" (→P.71)
- ⑧ "Display" (→P.65)

■ Side Display

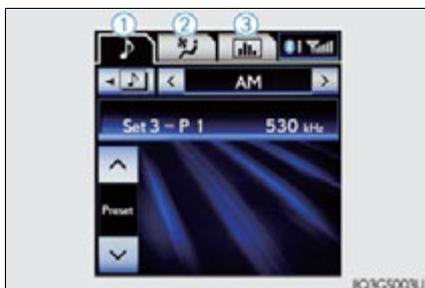

The following functions can be displayed and operated on the "Side Display".

- ① Audio (→P.77)
- ② Air conditioning system (→P.83)
- ③ Vehicle information




To display detailed information on the "Main Display".

■ Selecting the operation screen

When selecting the "Side Display", move the Remote Touch knob to the right until  is displayed at the boundary between the "Main Display" and the "Side Display", and then move it further to the right. When selecting the "Main Display", move the Remote Touch knob to the left until  is displayed at the boundary between the "Main Display" and the "Side Display", and then move it further to the left.

■ Display

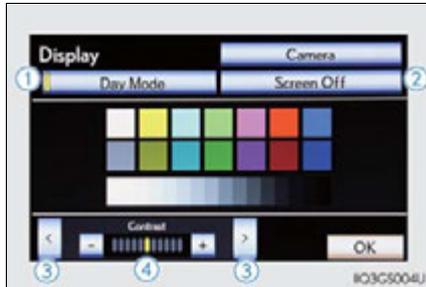

Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- ① Displays the screen in "Day Mode" with the headlight switch on
- ② Turns the screen off
- ③ Change function
- ④ Adjust contrast/brightness

■ Screen scroll operation



To scroll over the map, place the pointer in a position near the desired destination and then press and hold the Remote Touch knob.


- ① Indicates the street name, city name, etc. for the selected point
- ② Displays various information for the selected point
- ③ Indicates the distance from the current position to the pointer
- ④ Switches the screens
- ⑤ Zooms in on the map
- ⑥ Zooms out on the map


■ Setting a route

While route guidance is operating, you can change the route using the following method.

Select "Route".

The following settings can be accessed

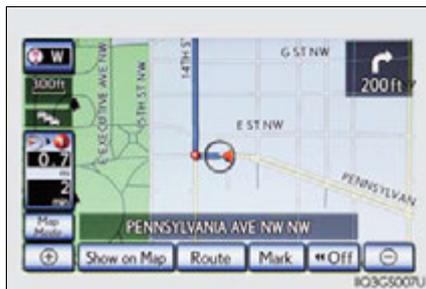

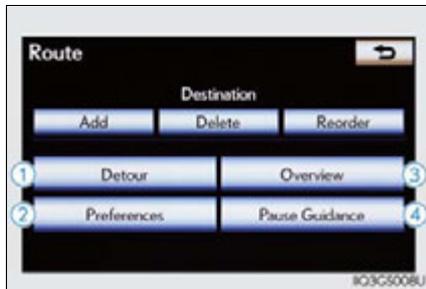


- ① Detour setting
- ② Route preferences
- ③ Route overview
- ④ Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

Navigation System (if equipped)

Register home

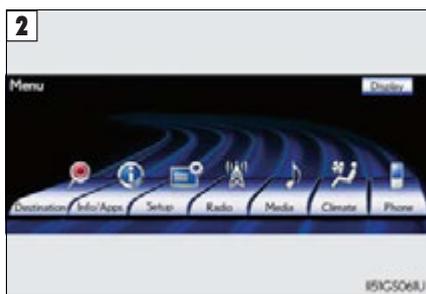


- ① Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.


- ② Select "Setup".



- ③ Select "Navigation".

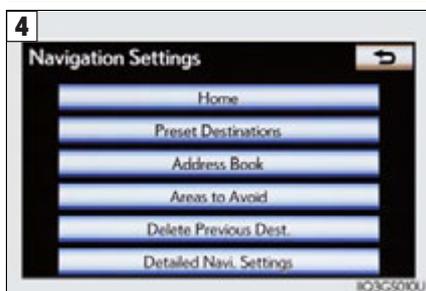

- ④ Select "Home".
- ⑤ Select "Set Home".
- ⑥ Select "Address".

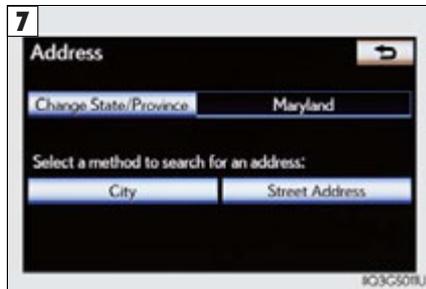

- 7** Select "City".
- 8** Input a city name and select "OK".
- 9** Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 10** Input the street name and select "OK".
- 11** When the desired street name is found, select the corresponding screen button.
- 12** Input a house number and select "OK".
- 13** Select "Enter".
- 14** Select "OK".

■ Destination input

■ Search by address




- 1** Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.
- 2** Select "Destination".



- 3** Select "Address".

► Select by city name

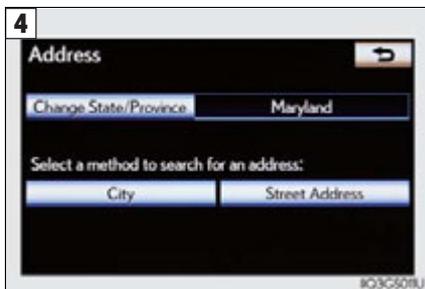

4 Select "City".



5 Input a city name and select "OK".

6 Select the screen button of the desired city name from the displayed list.

7 Input the street name and select "OK".


8 When the desired street name is found, select the corresponding screen button.

9 Input a house number and select "OK".

10 Select "Go to".

11 Select "OK".

► Select by street address

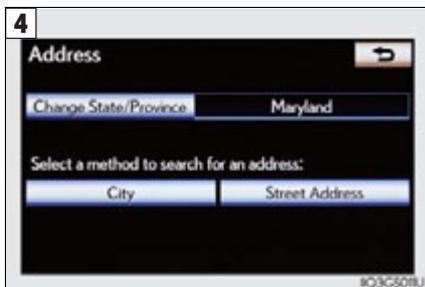

4 Select "Street Address".

5 Input a house number and select "OK".

6 Input the street name and select "OK".


7 When the desired street name is found, select the corresponding screen button.

8 Input a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.

10 Select "Go to".

11 Select "OK".

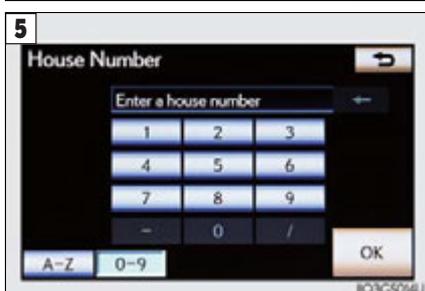

■ Search points of interest




- 1** Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.

- 2** Select "Destination".



- 3** Select "Point of Interest".

► Search by name

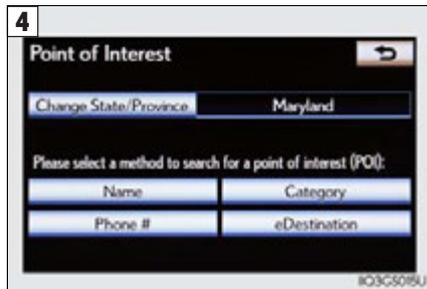

- 4** Select "Name".




- 5** Input the name of the point of interest and select "OK".

- 6** Select the screen button of the desired destination.

- 7** Select "Go to".

- 8** Select "OK".

► Search by category

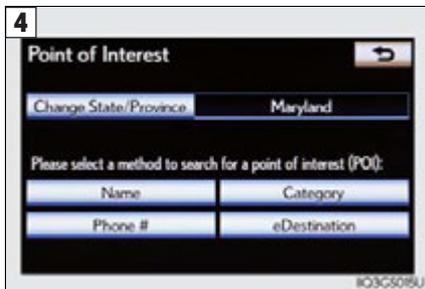

4 Select "Category".



5 Select "Near a Destination".

6 Select the screen button of the desired destination and set screen the search point.


7 Select the desired point of interest category from the displayed list.

8 Select the screen button of the desired item.

9 Select "Go to".

10 Select "OK".

► Search by telephone number

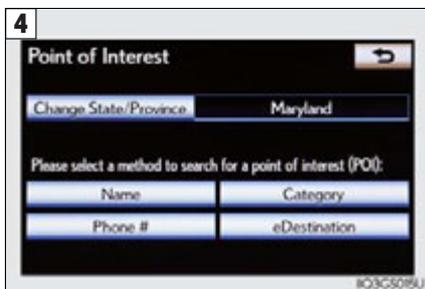

4 Select "Phone #".



5 Input a telephone number and select "OK".


6 Select "Go to".

7 Select "OK".

Hands-free System For Cellular Phone

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.

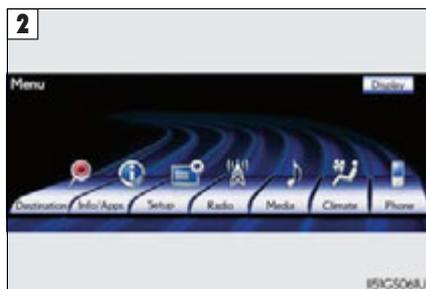

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.


2 Select "Phone".

3 Select "Yes".

4 When this screen is displayed, operate the Bluetooth® device.
Refer to the cellular phone user's manual for cellular phone operation.

5 If a completion message is displayed, registration is complete.

■ Phonebook transfer

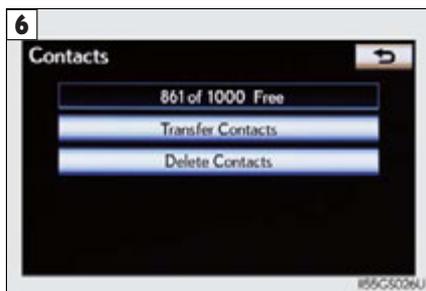

1 Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.

2 Select "Setup".

3 Select "Phone".

4 Select "Phonebook".

5 Select "Manage Contacts".

6 Select "Transfer Contacts".

7 Select "Update Contacts".

8 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

■ Registering a speed dial



1 Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.


2 Select "Setup".




3 Select "Phone".

4 Select "Phonebook".

5 Select "Manage Speed Dials".

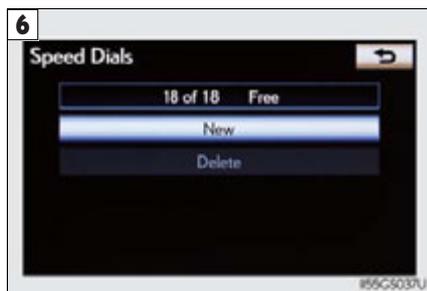

6 Select "New".

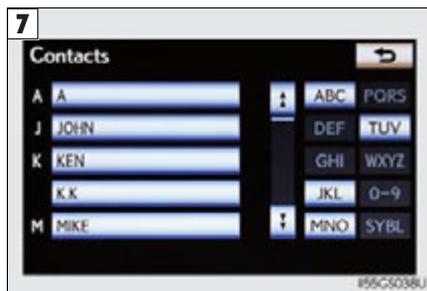

7 Select the data you want to register.

8 Select the desired phone number.

9 Select the button you want to register in.

■ Calling by name

You can call by giving a name registered in the phonebook. For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".



1

1 Press .



2

2 Following the system guidance, wait for the beep and then after saying "Call" say the desired name, or the name and type of phone.

3 Following the system guidance, wait for the beep and then say "Dial".



Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial




2

1 Press the "MENU" button on the Remote Touch. Please refer to P.63 for the Remote Touch operation.

2 Select "Phone".



- 3 Select "Speed Dials".

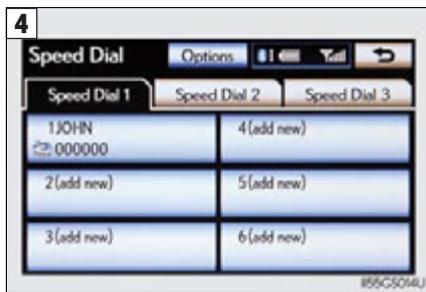

- 4 Select the desired number to call.

■ Calling using SMS/MMS message



- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.63 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select "Messages".
- 4 Select "SMS/MMS" tab.
- 5 Select the desired received message from the displayed list.
- 6 Press  on the steering wheel.

The tab display may vary depending on the type of cellular phone.

■ Receiving a call




- 1 When a call is received, this screen is displayed with a sound.



- 2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

■ Steering switches

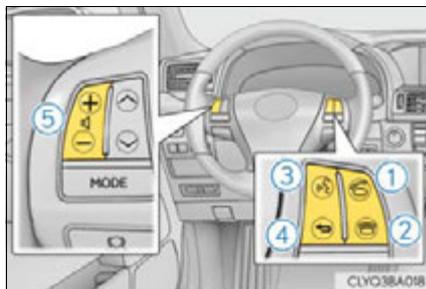


- ① Sending/Receiving/"Phone" screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Return to the previous screen
- ⑤ Increases/decreases volume

Audio System

Audio control screen

Follow the procedure below to display the audio control screen.

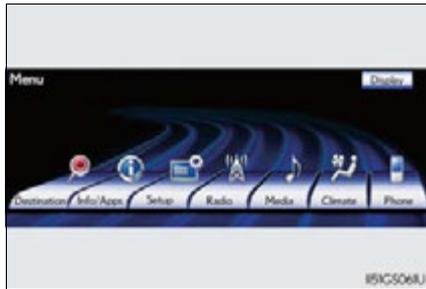

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 63 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.

Side Display




Operations such as selecting a preset station or track are carried out on the screen.

- 1 Changing the audio mode
- 2 Selecting a radio station that has been registered to the preset buttons, track/file or chapter

Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

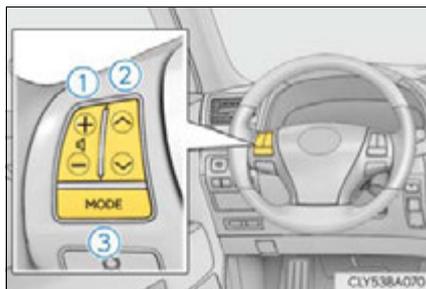

- 1 Increases/decreases volume
- 2 Radio mode: Selects a radio station/channel
Audio CD mode: Selects a track
MP3/WMA disc mode: Selects a file and folder
DVD mode: Selects a chapter
iPod mode: Selects a track
- 3 Press: Turns the power on, selects audio source
Press and hold: Mute/unmute or pause/resume the current operation

■ Basic operation



- ① Audio sources
 - AM: AM radio
 - FM: FM radio
 - SAT: Satellite radio
 - Apps (if equipped): Internet radio broadcast
 - DISC: DVD player/CD player
 - iPod: iPod
 - USB: USB memory
 - BT Audio: Bluetooth® audio
 - AUX: Auxiliary audio device
- ② Sound quality modes
- ③ Power/Volume
- ④ Mute/unmute or pause/resume the current operation

■ Radio



- ① Preset stations/channels
- ② Scanning for receivable stations/channels
- ③ Using HD Radio™ Technology (if equipped)
- ④ Adjusting the frequency
- ⑤ Preset turning/seeking the frequency

■ Entering station presets

- ① Select the desired station by using the tune, the seek or the scan function.
- ② Using the Remote Touch, select one of the left side screen buttons and hold it until a beep is heard, indicating that the station has been set.
There are 6 sets of 6 presets. There is a total of 36 presets.

■ DVD player/CD player

■ Playing an audio CD



- ① Random playback
- ② Repeat play
- ③ Playback/pause
- ④ Selecting a track
- ⑤ CD eject

■ Playing a CD with MP3/WMA files



- ① Random playback
- ② Repeat play
- ③ Playback/pause
- ④ Selecting a file
- ⑤ Folder selection
- ⑥ File selection/fast forward/rewind
- ⑦ CD eject

■ Playing a DVD



- ① Image display (full screen)
- ② Reverse
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Chapter selection
- ⑦ DVD eject


■ Operating an iPod



- ① Select play mode
- ② Playback/pause
- ③ Song selection
- ④ Repeat play
- ⑤ Shuffle playback

■ Rear seat audio controls

Some front audio features can be controlled from the rear seats.

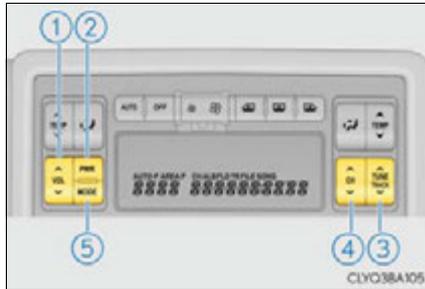

- ① Volume
- ② Power
- ③ Track or file etc.
- ④ Preset station or folder etc.
- ⑤ Audio sources

■ Portable Audio Device Ports


These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Open the console box, open the cover and connect the portable audio device.

Lexus Climate Concierge

The climate control seats on each seat and heated steering wheel are automatically controlled according to the set temperature of the air conditioning system, outside temperature, cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

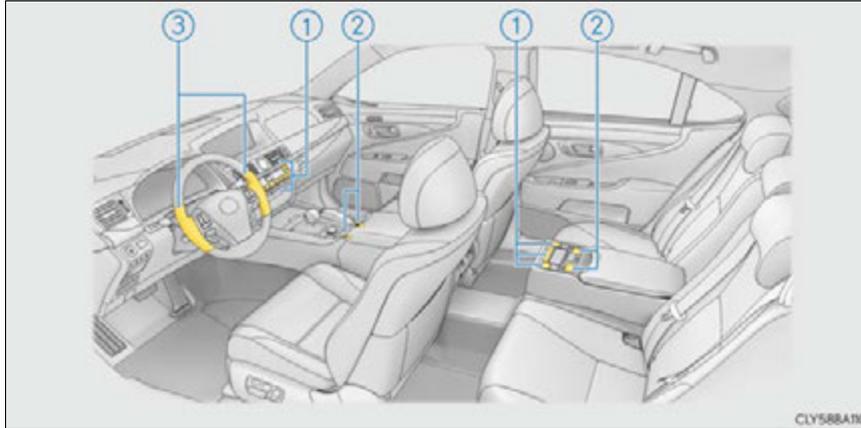


- ① Automatic air conditioning system (→P.83, 85)
Set the air conditioning system to automatic mode.
The temperature for the driver's seat, front passenger's seat and both rear seats can be adjusted individually.
- ② Climate control seats (→P.87)
Select "AUTO" mode on each seat.
Seat heater, off, ventilation or seat cooler is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.
- ③ Heated steering wheel (→P.86)
Turned on automatically according to the outside and cabin temperature when the engine is started.
Operates for a maximum of 30 minutes.

Front Air Conditioning System

► Control screen



► Control panel

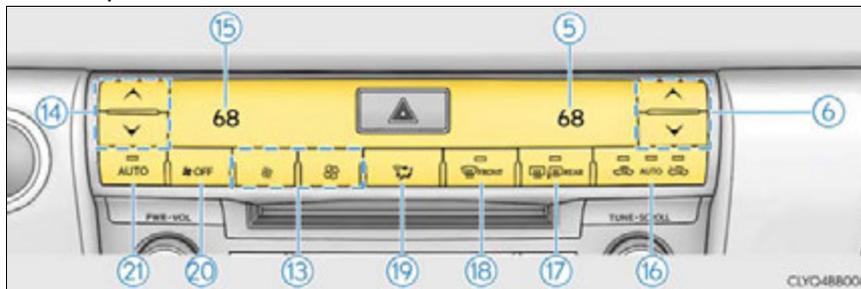

- | | |
|--|--|
| ① Left-hand front seat side air outlet selector | ⑩ Micro dust and pollen filter |
| ② Air flows to the feet and the windshield defogger operates | ⑪ 4-ZONE mode |
| ③ Outside temperature | ⑫ Cooling and dehumidification function on/off |
| ④ Rear air conditioning operation screen | ⑬ Fan speed control |
| ⑤ Right-hand front seat side temperature display | ⑭ Left-hand front seat side temperature control |
| ⑥ Right-hand front seat side temperature control | ⑮ Left-hand front seat side temperature display |
| ⑦ Right-hand front seat side air outlet selector | ⑯ Outside air or recirculated mode |
| ⑧ Air purifier and rear air conditioning function on/off | ⑰ Rear window and outside rear view mirror defoggers |
| ⑨ Windshield wiper de-icer (if equipped) | ⑱ Windshield defogger |
| | ⑲ Air outlet selector |
| | ⑳ Off |
| | ㉑ Automatic mode |

■ Side Display



Operations such as changing the air outlets or fan speed are carried out on the screen.

- ① Fan speed control
- ② Right-hand front seat side air outlet selector
- ③ Right-hand front seat side temperature control
- ④ Right-hand front seat side temperature display
- ⑤ 4-ZONE mode
- ⑥ Automatic mode
- ⑦ Cooling and dehumidification function on/off
- ⑧ Left-hand front seat side temperature display
- ⑨ Left-hand front seat side temperature control
- ⑩ Left-hand front seat side air outlet selector

■ Using the automatic mode

Press the automatic mode button to turn on the airflow and the driver's side temperature control buttons to adjust the temperature.

■ Adjusting the temperature


In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

Press the passenger's side temperature control buttons to adjust the temperature for the passenger side.

To adjust the temperature for the rear seats, see page 85.


To cancel the individual mode, press the 4-ZONE mode button.

Rear Air Conditioning System

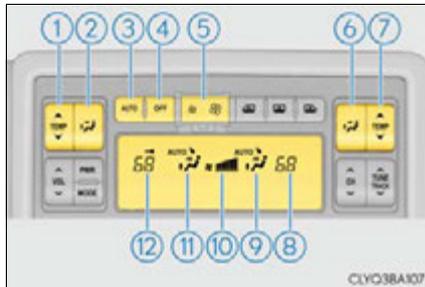

- ① Left-hand rear seat side temperature control
- ② Left-hand rear seat side air outlet selector
- ③ Automatic mode
- ④ Off
- ⑤ Fan speed control
- ⑥ Right-hand rear seat side air outlet selector
- ⑦ Right-hand rear seat side temperature control
- ⑧ Right-hand rear seat side temperature display
- ⑨ Right-hand rear seat side air flow display
- ⑩ Fan speed display
- ⑪ Left-hand rear seat side air flow display
- ⑫ Left-hand rear seat side temperature display

Front controller

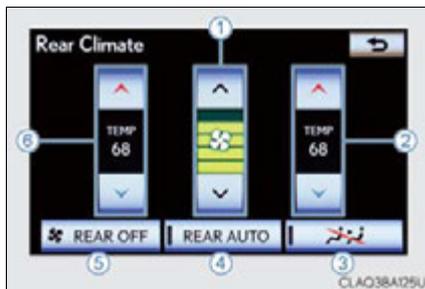

- ① Fan speed control
- ② Right-hand rear seat side temperature control and display
- ③ Disabling the switches on the rear arm-rest
- ④ Automatic mode
- ⑤ Off
- ⑥ Left-hand rear seat side temperature control and display

Heated Steering Wheel

The left and right grip portions of the steering wheel can be warmed.



► Automatic operation

Operates automatically according to the outside and cabin temperature when the power switch is turned to ON mode. Automatic operation can be turned off using the switch.

The indicator light comes on when the heater is operating.

► Manual operation


Turns the heated steering wheel on/off.

The indicator light comes on when the heater is operating.

Climate Control Seats


The seats can be heated or cooled.

Front climate control seats

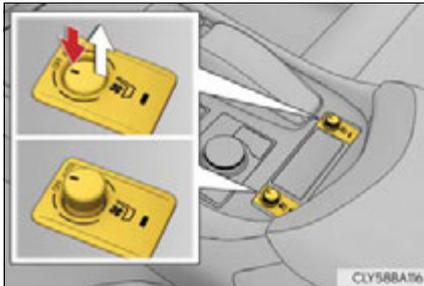


- 1** Press the knob to release the lock. Press the knob to lock it when not in use.

► AUTO setting

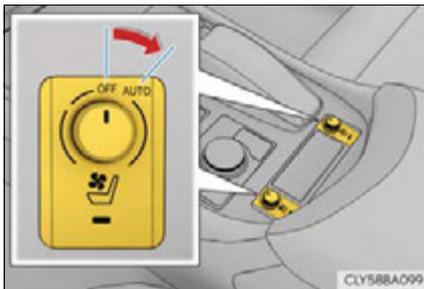

- 2** Turn the knob to the "AUTO" position. When set to "AUTO" mode, seat heater, off, ventilation or seat cooler is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.


► Manual setting

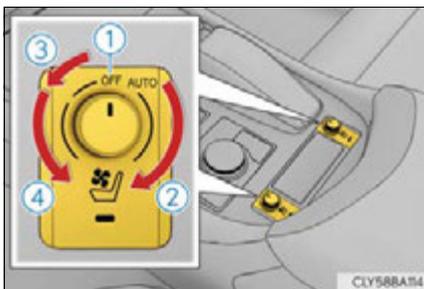

- 2** Set the temperature by turning the knob to the left or right.
 - ① Off
 - ② Seat heater
 - ③ Ventilation
 - ④ Seat cooler

■ Rear climate control seats

▶ 5-seat models

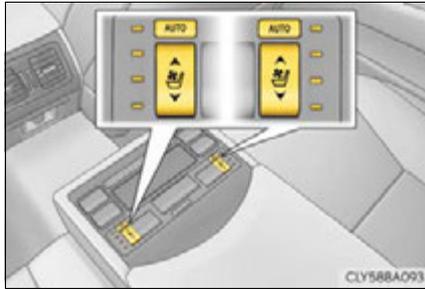

▶ 4-seat models



■ AUTO setting



The switch turned on/off.

When set to "AUTO" mode, the indicator illuminates.

When set to "AUTO" mode, seat heater, off, ventilation or seat cooler is automatically selected according to the set temperature of the air conditioning system, outside temperature, etc.

Manual setting

The strength of the seat heater and seat cooler can be adjusted to 3 levels each.

Seat heater ^{*1}: When the system is off, pressing “▲” turns the seat heater on.

Pressing “▲” increases the level and pressing “▼” lowers the level.

Seat cooler ^{*2}: When the system is off, pressing “▼” turns the seat cooler on.

Pressing “▼” increases the level and pressing “▲” lowers the level.



Seat heater ^{*1}

- ① Low
- ② Mid
- ③ Hi


Seat cooler ^{*2}

- ④ Low
- ⑤ Mid
- ⑥ Hi

^{*1}: The indicator illuminates in amber.

^{*2}: The indicator illuminates in blue.


Rear Sunshade/Rear Door Sunshades

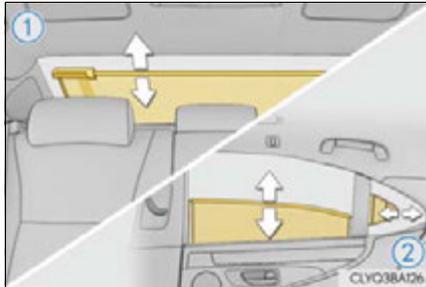

- ① Rear sunshade
- ② Rear door sunshades

■ Raising/Extending from the front seat


► Vehicles with power rear seat

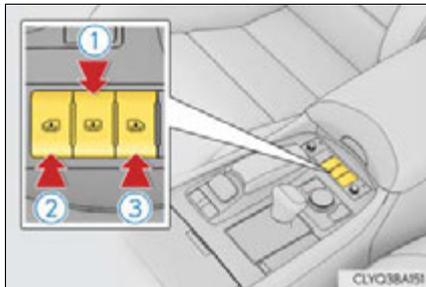

- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

► Vehicles with relaxation seat

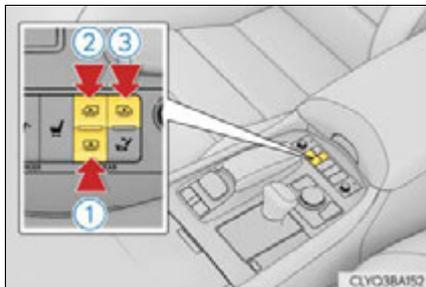


- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

■ Raising/Extending from the rear seat


► 5-seat models

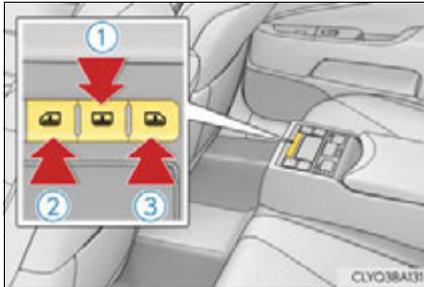

- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

► 4-seat models

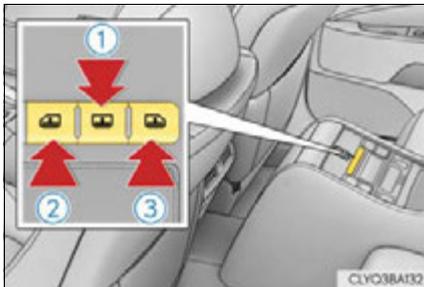

- ① Raises the rear sunshade
- ② Extends the rear door sunshade (left side)
- ③ Extends the rear door sunshade (right side)

Press the button again to lower or retract the sunshade(s).

The rear sunshade automatically lowers to ensure visibility when reversing.

Voice Command System

Basic operation



- 1 Press  on the steering wheel.
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

Continue on to pages 93-94 for a detailed list of Voice Commands for the following categories:

Set a Destination	page 93
Use the Phone.....	page 93
Play Music.....	page 93
Get Information	page 94
Select audio mode.....	page 94
Climate/air conditioning system command	page 94

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.
- If a desired outcome is not shown, or if no selections are available, press  on the steering wheel to return to the previous screen.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

Set a Destination (vehicles with navigation system)

Command	Action
"Find Nearby <POI category>"	Displays a list of <POI category*> near the current position.
"Enter an Address"	Enables setting a destination by saying the address.
"Go Home"	Displays the route to home.
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.
"Destination by Phone Number"	Enables setting a destination by saying the phone number.

*: For example; Gas stations, Restaurants, etc.

Use the Phone

Command	Action
"Call <name> <type>"	Calls made by saying a name from the phonebook. For example: Say "Call John Smith", "Call John Smith, mobile" etc.
"Dial <number>"	Calls made by saying the phone number. For example: Say "Dial 911", "Dial 5556667777" etc.
"International Call"	Calls international numbers by saying the phone number.

Play Music

Command	Action
"Play Artist <name>"	Plays tracks by the selected artist. For example: Say "Play artist <XXXXX>"*
"Play Album <name>"	Plays tracks from the selected album. For example: Say "Play album <XXXXX>"*
"Play Song <name>"	Plays the selected track. For example: Say "Play song Summertime", "Play song Concerto in A Major" etc.
"Play Playlist <name>"	Plays tracks from the selected playlist. For example: Say "Play playlist My Favorite Songs", "Play Playlist Classic Hits" etc.

*: Say the desired artist name or album name in the place of the "<>".

Get Information (vehicles with navigation system)

Command	Action
"Traffic"	Displays the traffic incident list.
"Weather"	Displays weather information.
"Sports Scores"	Displays the sports list.
"Stock Quotes"	Displays the stocks list.
"Fuel Prices"	Displays the fuel prices list.
"Lexus Insider"	Displays the Lexus insider list.

Select audio mode

Command	Action
"Radio", "AM", "FM", "Satellite radio", "Disc", "Auxiliary", "Bluetooth* audio", "iPod", "USB audio"	Change the audio mode.
"Audio on"	Turns the audio system on.
"Audio off"	Turns the audio system off.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Climate/air conditioning system command

Command	Action
"Automatic climate control"	Turns air conditioning system on and off.
"Warmer"	Turns temperature up.
"Cooler"	Turns temperature down.

"Select audio mode" and "Climate/air conditioning system command" are enable when expanded voice commands are turned "On". Refer to the "Owner's Manual" and "Navigation System Owner's Manual".


Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].

■ Programming the HomeLink[®] (for U.S.A. owners)


The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

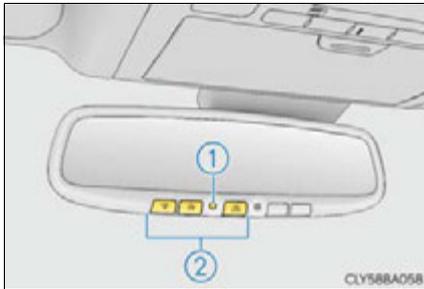

① Indicator light

② Buttons

■ Programming HomeLink®

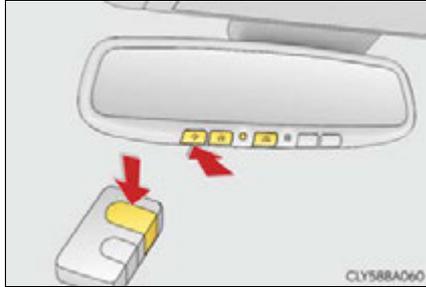

- 1** Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.
- 2** Press and hold down the desired HomeLink® button.
- 3** For U.S.A. owners:
While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.
For Canadian owners:
While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the Rolling Code type:

- 4** Press the learn button.
- 5** Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.
If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:


To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®

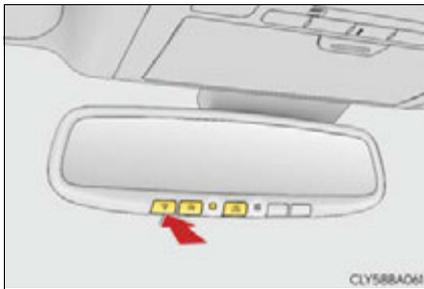

Press the appropriate HomeLink® button.
The indicator light should come on.

■ Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

■ System components



- ① Microphone
- ② "SOS" button
- ③ LED light indicators

■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (if equipped)

Lexus Enform with Safety Connect is a generic name for Apps, Destination Assist, eDestination, Lexus Insider, and Safety Connect.

The functions included in Lexus Enform with Safety Connect are classified into the following three functions.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Function achieved by using a cellular phone

Services

Of the functions included with Lexus Enform with Safety Connect, only Apps can be achieved by using a cellular phone.

Apps is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen.

● APPS

Each time "Apps" is activated, the system checks for updates. When there are no updates available, the main menu screen will be displayed right after a screen indicating that updates are being checked for has been displayed.

Subscription

Apps will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system

Services

Of the functions included with Lexus Enform with Safety Connect, Destination Assist, eDestination, and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform with Safety Connect response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform with Safety Connect Guide for more information.)

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

You may opt out of receiving Lexus Insider messages at any time.

- **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

- **Function achieved by using DCM**

- **Services**

Of the functions included with Lexus Enform with Safety Connect, Safety Connect can be achieved by using DCM.

- Safety Connect (→P.97)

XM Services (if equipped)

XM services are subscription-based XM Satellite Radio services to provide convenient features to subscribers.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

With an active XM subscription, the following features are available:

- **XM Sports and Stocks*¹**

XM Sports and Stocks is a service included with an XM Satellite Radio subscription. This service is also available with an XM TravelLink subscription. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM Fuel Prices*²**

XM Fuel Prices is a service included with an XM TravelLink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

- **XM NavWeather™*²**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map screen.

- **XM NavTraffic®*²**

The subscription-based XM NavTraffic® service allows the navigation system to display traffic information on the map screen.

*¹: Available at no extra charge with an active XM Satellite Radio subscription.

*²: Available via separate XM subscription(s).


Subscription

XM NavTraffic®, XM NavWeather™ and XM TravelLink require separate XM subscription(s). XM Sports*, XM Stocks* and XM Fuel Prices are available with an XM TravelLink subscription. After a 90-day trial, you must contact XM and set up the appropriate XM subscription(s) to continue receiving these services.

*: XM Sports and XM Stocks are included with an XM Satellite Radio subscription.


List of Storage Features

► 5-seat models

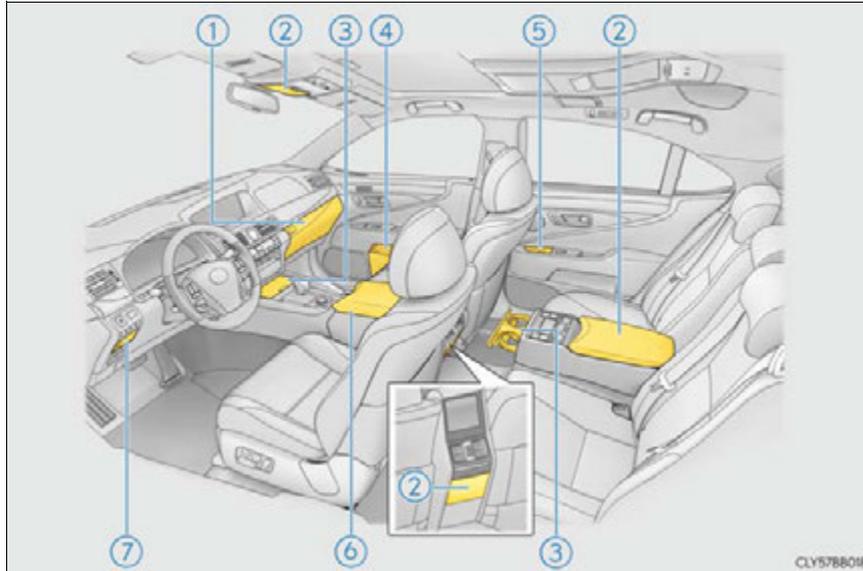

- ① Glove box
- ② Auxiliary boxes (if equipped)
- ③ Cup holders
- ④ Door pockets
- ⑤ Auxiliary boxes (if equipped)
Ashtrays (if equipped)
- ⑥ Console box
- ⑦ Coin holder

► 4-seat models

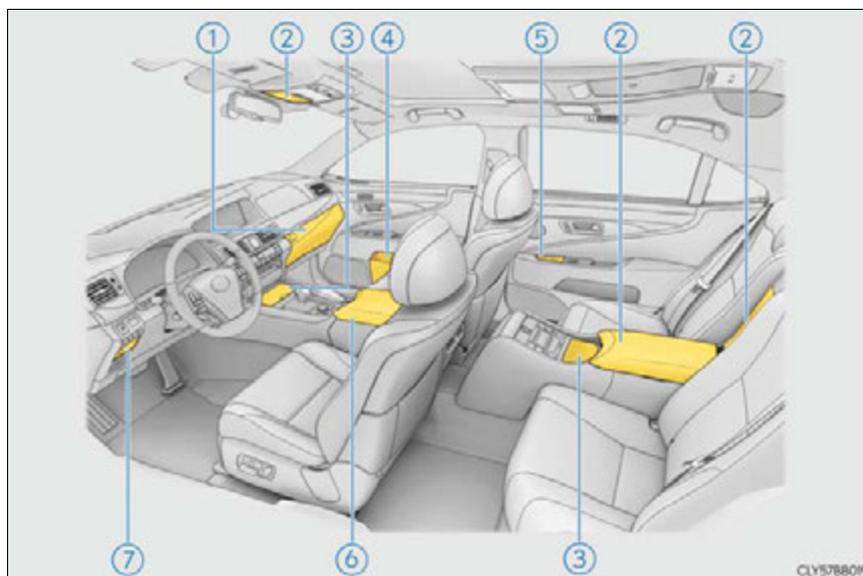


- ① Glove box
- ② Auxiliary boxes
- ③ Cup holders
- ④ Door pockets
- ⑤ Auxiliary boxes (if equipped)
Ashtrays (if equipped)
- ⑥ Console box
- ⑦ Coin holder

Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

For details the entry function or wireless remote control (→ P.17, 18)

■ Door lock switches

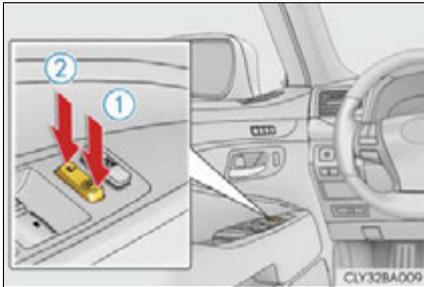


- ① Locks all the doors
- ② Unlocks all the doors

■ Inside lock buttons



- ① Locks the door
 - ② Unlocks the door
- The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

■ Rear door child-protector lock

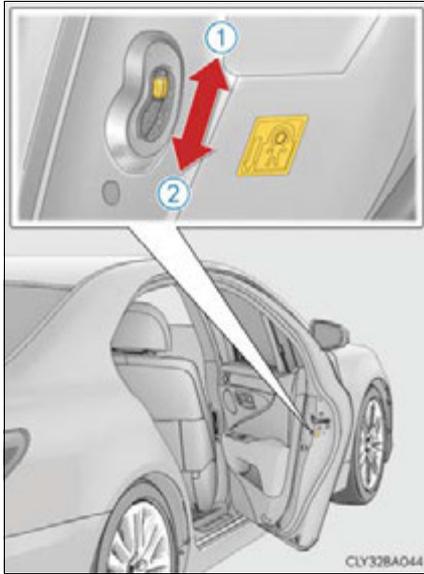

The door cannot be opened from inside the vehicle when the lock is set.


① Unlock

② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

■ Power Windows

■ Power window switches

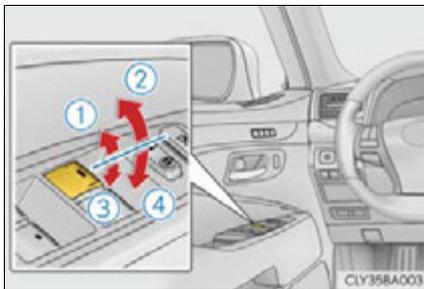

① Closing

② One-touch closing*

③ Opening

④ One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

■ Window lock switch




Press the switch down to lock the passenger window switches.

Use this switch to prevent children from accidentally opening or closing a passenger window.

Moon Roof


Opening and closing

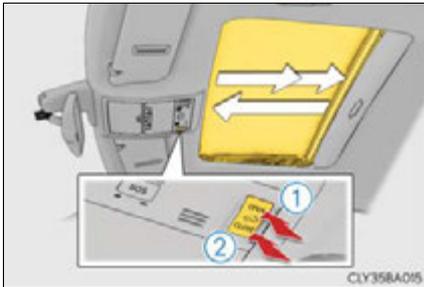

① Opens the moon roof*
The moon roof stops slightly before the fully open position to reduce wind noise.
Press the switch again to fully open the moon roof.

② Closes the moon roof*
*: Lightly press either way of the moon roof switch to stop the moon roof partway.

Tilting up and down

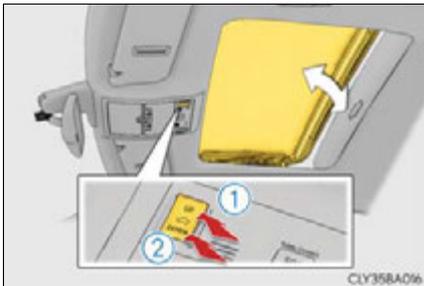

① Tilts the moon roof up*
② Tilts the moon roof down*

*: Lightly press either way of the moon roof switch to stop the moon roof partway.

Fuel Tank Cap


Before refueling the vehicle

- Close all the doors and windows, and turn the power switch off.
- Confirm the type of fuel.


Opening the fuel tank cap



1 Press the opener switch.
Refueling will be possible when a message on the multi-information display indicates that the door fuel filler door has opened.

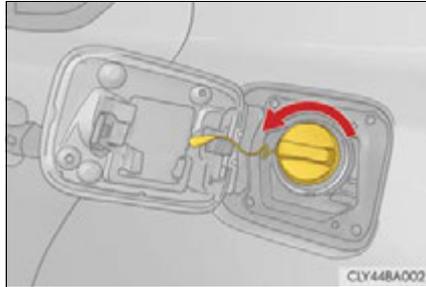


2 Turn the fuel tank cap slowly to open.

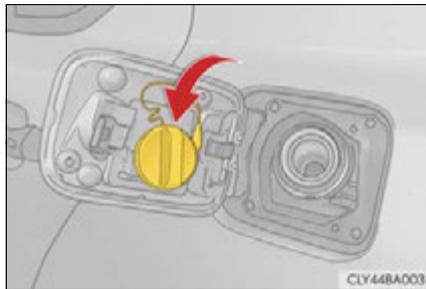


3 Hang the fuel tank cap on the back of the fuel filler door.

Hood

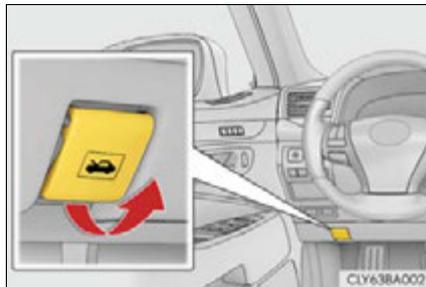

1 Pull the hood lock release lever.
The hood will pop up slightly.

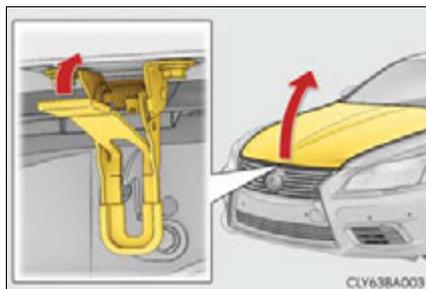


2 Pull up the auxiliary catch lever and lift the hood.

Trunk

Opening the trunk

- From inside the vehicle

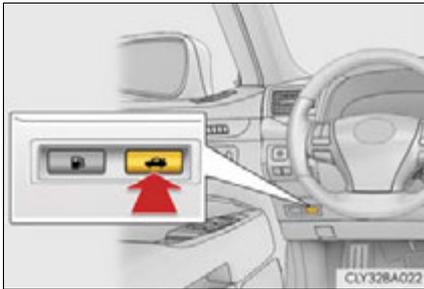

Press the opener switch.
The trunk lid automatically opens fully.

- From outside the vehicle
 - Entry function
→P.18
 - Wireless remote control
→P.17

Trunk easy closer

In the event that the trunk lid is left slightly open, the trunk easy closer will automatically close it to the fully closed position.


Trunk closer switch



Pressing the switch closes the trunk lid automatically. (A buzzer sounds.)

Pressing the switch while the trunk lid is closing opens the trunk lid again.

Luggage security system

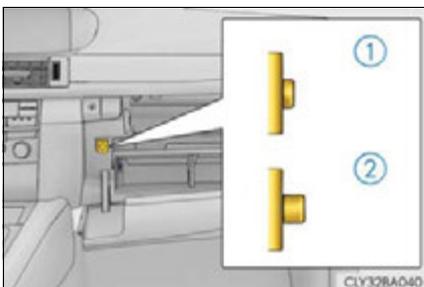

Turn the main switch in the glove box off to disable the trunk opener.

① On

② Off

The trunk lid cannot be opened even with the wireless remote control or the entry function.

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



Slip indicator



(Flashes)

Brake hold operated indicator



(Flashes)

(U.S.A.)

Parking brake indicator



(Flashes)

(Canada)



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



(Blinking and then continuously on)

Tire pressure warning light



(Flashes)

Pre-collision system warning light (if equipped)

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



Tire pressure warning light*



Seat belt reminder light

(Illuminates
without
blinking)

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...

See the Owner's Manual


	Turn signal indicator		Brake hold standby indicator
	Headlight indicator (U.S.A.)		Brake hold operated indicator
	Tail light indicator (Canada)		Cruise control "SET" indicator
	Headlight high beam indicator		Cruise control indicator
	Automatic High Beam indicator		Radar cruise control indicator (if equipped)
	Front fog light indicator		LKA (Lane-Keeping assist) indicator (if equipped)
	"READY" indicator		"HEIGHT HIGH" indicator
	EV indicator		Slip indicator (Flashes)
	EV drive mode indicator		VSC (Vehicle Stability Control) OFF indicator
	Snow mode indicator		BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)
	(U.S.A.) Parking brake indicator		PCS (Flashes faster) Pre-collision system warning light (if equipped)
	(Canada) Parking brake indicator		"AIR BAG ON/OFF" indicator

For further information, refer to the Owner's Manual.

What to do if...

If the electronic key does not operate properly


■ Unlocking and locking the doors

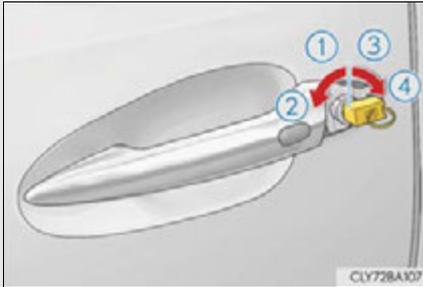

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- ① Locks all the doors
- ② Closes the windows and moon roof (turn and hold)
- ③ Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- ④ Opens the windows and moon roof (turn and hold)


■ Unlocking the trunk

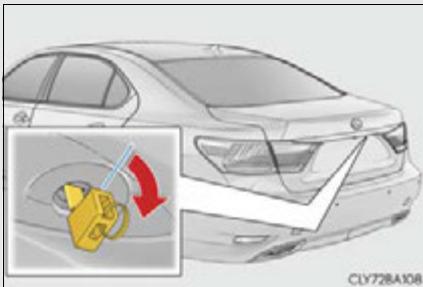

Turn the mechanical key clockwise to open.

What to do if...

Starting the hybrid system

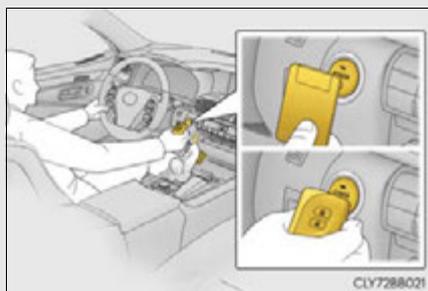

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch.
If any of the doors is opened or closed after the key was touched to the switch to start the vehicle, an alarm will sound to indicate that the start function cannot detect the key.
- 3** Press the power switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be started, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "Owner's Manual". If you need further assistance, contact your Lexus dealer.

If the hybrid system does not start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.36)

If the hybrid system still does not start, see the "Owner's Manual" for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2012 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.