

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

## Overview

### Topic 1

#### Entering and Exiting

- Keys ▶ P.9
- Smart Access System with Push-button Start ▶ P.10
- Theft Deterrent System ▶ P.11



### Topic 2

#### Before Driving

- Seats ▶ P.13
- Driving and Seat Position Memory System ▶ P.15
- Head Restraints ▶ P.16
- Seat belts ▶ P.16
- Outside Rear View Mirrors ▶ P.17
- Anti-glare Inside Rear View Mirror ▶ P.17
- Steering Wheel ▶ P.17

### Topic 3

#### When Driving

- Engine (ignition) Switch ▶ P.19
- Automatic Transmission ▶ P.20
- Manual Transmission ▶ P.23
- Parking Brake ▶ P.23
- Multi-information Display ▶ P.24
- Satellite Switches ▶ P.25
- Turn Signal Lever ▶ P.26
- Emergency Flasher Switch ▶ P.26
- ECT Switch ▶ P.27



- ETCS Switch ▶ P.27
- Intuitive Parking Assist ▶ P.28
- Cruise Control ▶ P.29
- Dynamic Radar Cruise Control ▶ P.30



#### Topic 4

### Rain and Night Driving

- Headlights ▶ P.33
- Fog Lights ▶ P.34
- Windshield Wipers and Washer ▶ P.35
- Headlight Cleaner ▶ P.37
- Rear Window and Outside Rear View Mirror Defoggers ▶ P.37
- Instrument Panel Light Control ▶ P.37

#### Topic 5

### Driving Comfort

- Touch Screen ▶ P.39
- Navigation System ▶ P.42
- Hands-free System For Cellular Phone ▶ P.48, 61
- Audio System ▶ P.56, 67
- Air Conditioning System ▶ P.60, 72



- Speech Command System ▶ P.73
- Garage Door Opener ▶ P.79



#### Topic 6

### Opening and Closing

- Door Locks ▶ P.83
- Power Windows ▶ P.83
- Retractable Hardtop ▶ P.84
- Fuel Tank Cap ▶ P.86
- Hood ▶ P.87
- Trunk ▶ P.88

What to do if ...



Responding to warning/indicator lights and other problems that may arise.

Customizing Your Lexus





A list of features that can be customized.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

# Overview

# Instrument Panel

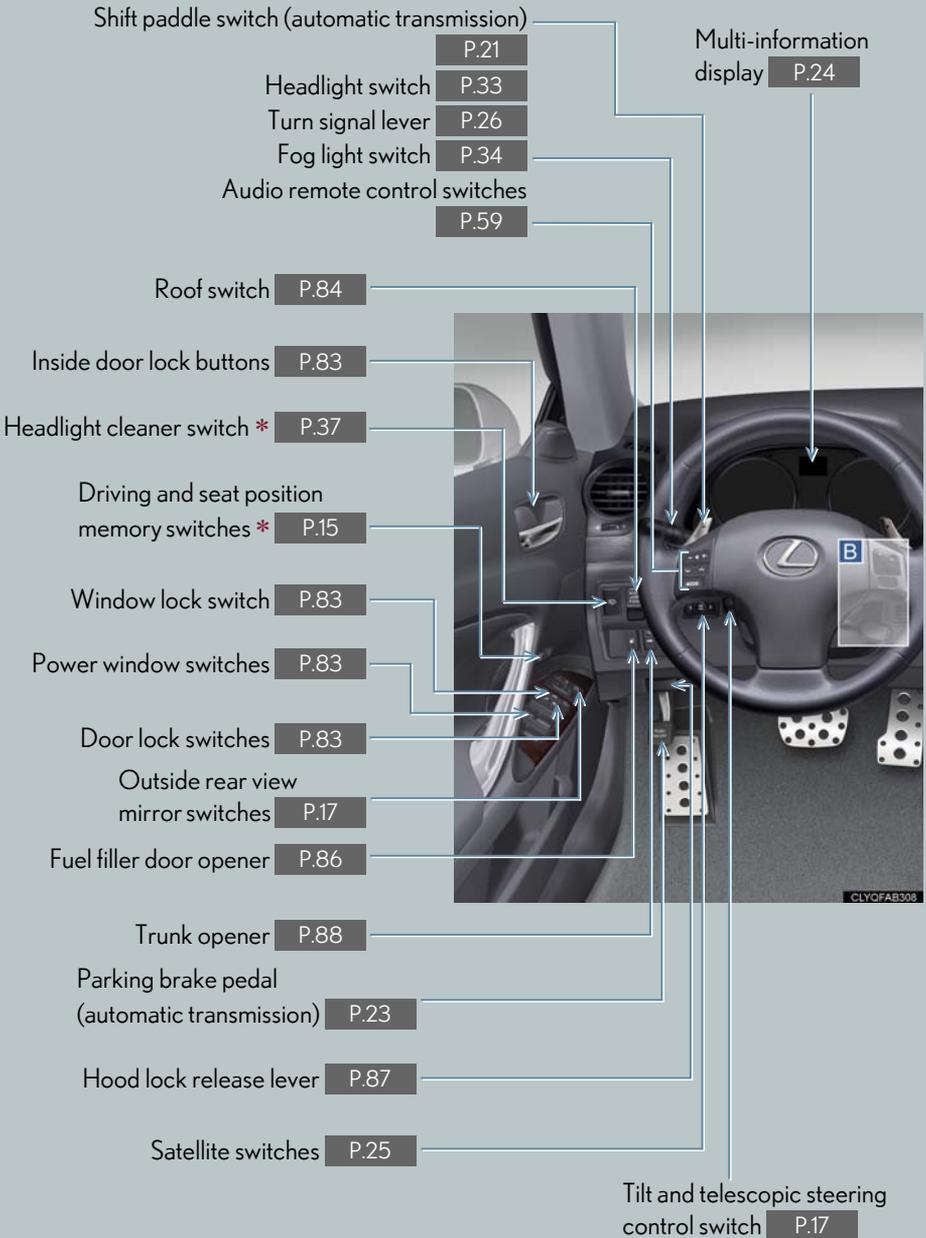

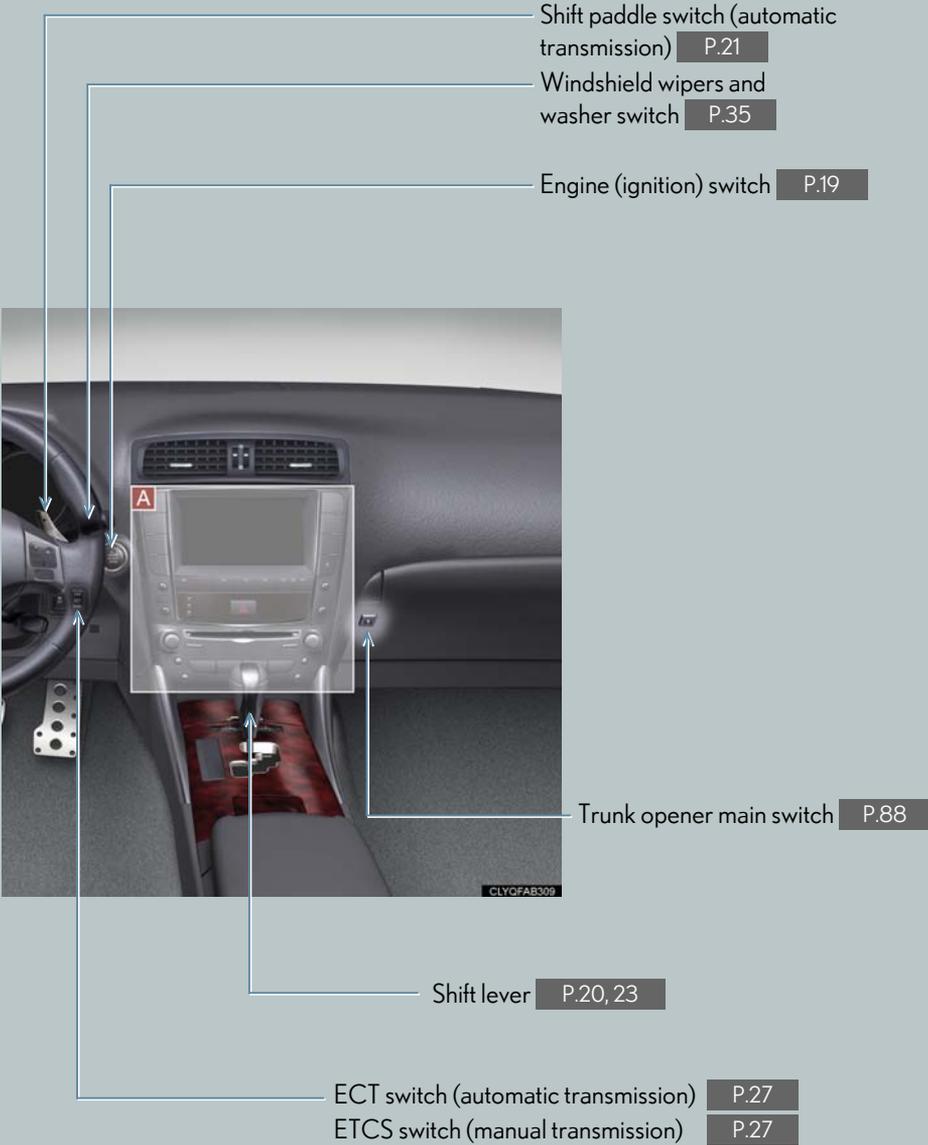

\* : If equipped

## A

▶ Without navigation system (type A)

Air conditioning system P.72

Audio system P.67

Rear window and outside rear view mirror defoggers P.37

Security indicator P.11

Emergency flasher switch P.26



▶ Without navigation system (type B)

Air conditioning system P.72

Audio system P.67

Rear window and outside rear view mirror defoggers P.37


Security indicator P.11

Emergency flasher switch P.26



**A**

► With navigation system

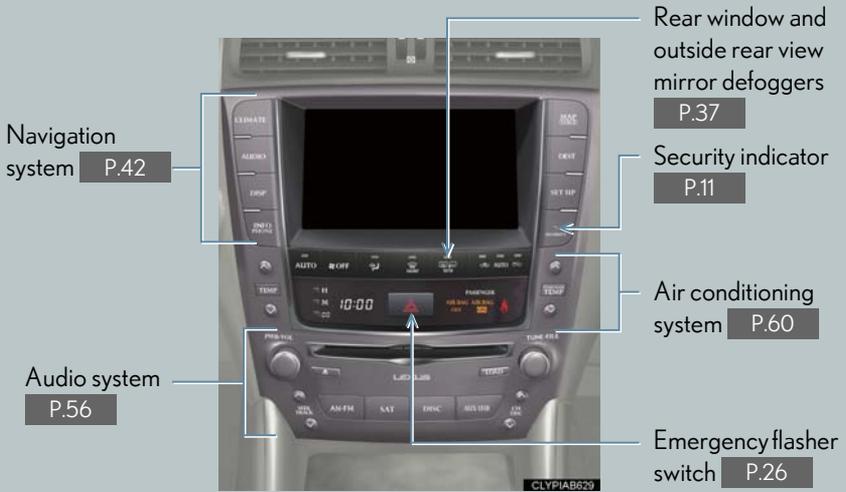

## B

### ► Type A

“DISP” switch P.24



Distance switch \* P.30

Cruise control switch \* P.29

Dynamic radar cruise control switch \* P.30

### ► Type B

Telephone switch P.48

“DISP” switch P.24



Distance switch \* P.30

Cruise control switch \* P.29

Dynamic radar cruise control switch \* P.30

Talk switch P.73

\* : If equipped



## Topic 1

# Entering and Exiting

Keys .....	9
Smart Access System with Push-button Start .....	10
Theft Deterrent System.....	11

## Keys

### Electronic key



Smart access system with push-button start  
(→P.10, 19)

\*: If equipped

### Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

### Wireless remote control



- 1 Press:** locks both side doors
- 2 Press once:** unlocks the driver's door  
**Press twice:** unlocks passenger's door  
**Press and hold:** opens the windows
- 3 Press and hold:** opens the trunk
- 4 Press and hold:** sounds the alarm

(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 19.

### ■ Entering the vehicle



To unlock the vehicle, simply grasp either of the door handles.

### ■ Exiting the vehicle



To lock the vehicle, press the lock button on either of the door handles.

### ■ Opening the trunk



To open the trunk, press and hold the trunk release button.

For details on what to do when the electronic key does not operate properly, see page 91.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

**To set the alarm:** lock both side doors from outside the vehicle. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode, or unlock the doors or trunk using the electronic key or the wireless remote control.

### Steering lock



The steering wheel locks when the “ENGINE START STOP” switch is OFF and the driver’s door is opened.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, gently turn the wheel left or right while pressing the “ENGINE START STOP” switch.



## Topic 2

# Before Driving

Seats .....	13
Driving and Seat Position Memory System .....	15
Head Restraints .....	16
Seat belts .....	16
Outside Rear View Mirrors .....	17
Anti-glare Inside Rear View Mirror .....	17
Steering Wheel .....	17

## Seats

### ■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer

## Folding the seatback



Folds

## Entering or exiting the rear seat

### ► Type A — Switch-operated “Front, Fold & Return” seat



- 1 Moves the front seat forward automatically
- 2 Moves the front seat backward automatically

### ► Type B — Seat slide switch (front passenger seat)



- 1 Moves the front seat forward
  - 2 Moves the front seat backward
- When enter or exit, fold the seatback.

## Driving and Seat Position Memory System (If Equipped)

The seats can be returned to a previously set position by simply pressing a button. The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat. Positions can be conveniently recorded for the vehicle's primary drivers and passengers.

### Setting memory positions



Press the SET button, then within 3 seconds press one of the memory buttons (1, 2, or 3) until you hear a beep.

The current position of the seat, as well as the position of the steering wheel and the outside rear view mirrors (for the driver's seat only) is recorded.

### Recalling memory positions



Press one of the memory buttons (1, 2, or 3).

### Linking driving position memory with door unlock operation (driver's seat only)



While holding down the desired memory button, press and hold the  button on the wireless remote control or door lock switch until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 180 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

## Head Restraints

### Vertical adjustment (front seats only)



To raise: push the head restraint upward.

To lower: push the head restraint down while pressing the lock release button.

### Folding (rear seats only)



Pull the lever.


## Seat belts

### Seat belt guide (front)



When fastening a front seat belt, always ensure that it passes through the seat belt guide.

### Seat belt guide (rear)

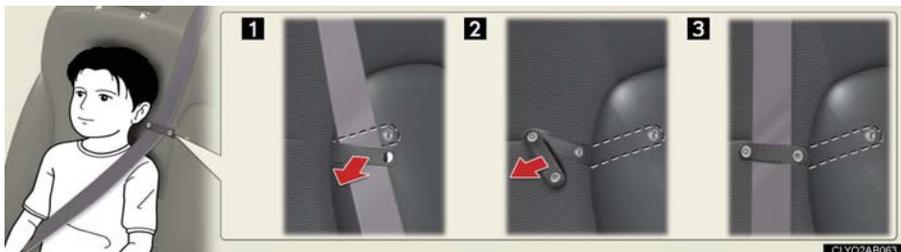

If the shoulder belt sits close to the occupant's neck, secure the seat belt in the guide position.

## Outside Rear View Mirrors



- 1 To select the mirror you wish to adjust (L or R), use the master switch.
- 2 To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing. To disable this function, set the master switch in the neutral position (between L and R).

## Anti-glare Inside Rear View Mirror

The anti-glare mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn AUTO mode ON/OFF, press the AUTO button. The indicator comes on when AUTO mode is turned ON.

## Steering Wheel



- 1 Up
- 2 Down
- 3 Away from the driver
- 4 Toward the driver

The steering wheel retracts automatically when the “ENGINE START STOP” switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the “ENGINE START STOP” switch is switched to ACCESSORY or IGNITION ON mode.



**Topic 3**

# When Driving

- Engine (ignition) Switch..... 19
- Automatic Transmission..... 20
- Manual Transmission..... 23
- Parking Brake..... 23
- Multi-information Display..... 24
- Satellite Switches ..... 25
- Turn Signal Lever..... 26
- Emergency Flasher Switch..... 26
- ECT Switch..... 27
- ETCS Switch ..... 27
- Intuitive Parking Assist ..... 28
- Cruise Control ..... 29
- Dynamic Radar Cruise Control..... 30



## Engine (ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal or clutch pedal. (The mechanical key cannot be used to start the engine.)

### Starting the engine



#### ► Automatic transmission

Make sure the parking brake is engaged and the shift lever is in P.

- 1 Depress the brake pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.



#### ► Manual transmission

Make sure the parking brake is engaged and the shift lever is in N.


- 1 Depress the clutch pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

### Stopping the engine

- 1 Engage the parking brake and shift the shift lever to P (for automatic transmission) or N (for manual transmission).
- 2 Press the “ENGINE START STOP” switch.

## ■ Changing power modes

To change power modes without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal (for automatic transmission) or the clutch pedal (for manual transmission). The modes can be changed in the following order:

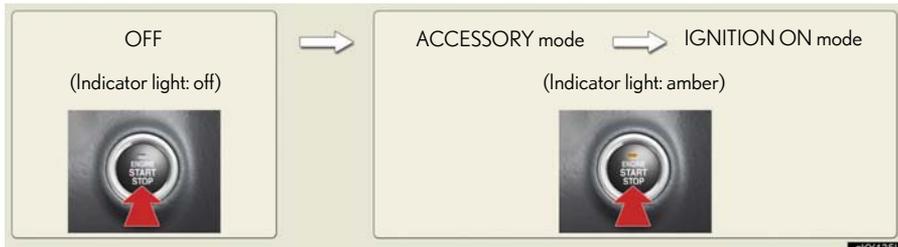

## ■ Automatic Transmission (If Equipped)

### ■ Shift positions



- P Park\*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

\*: The engine can only be started in P.

← The vehicle can only be shifted out of P when the “ENGINE START STOP” switch is in IGNITION ON mode and the brake pedal is depressed.



## ■ Changing shift ranges in the D position

Operating the shift paddle switches allows shift ranges to be selected to suit the driving conditions.



- 1 Pull the “-” shift paddle switch toward you.  
The indicator in the meter cluster will display the selected shift range.




- 2 **Higher shift range:**  
Pull the “+” shift paddle switch toward you.  
**Lower shift range:**  
Pull the “-” shift paddle switch toward you.

Pulling and holding the “+” shift paddle switch for a certain period of time allows you to return to normal D position driving. If the accelerator pedal is depressed for more than a certain period of time in one range, shift range selection in the D position will be automatically deactivated.

## ■ Changing shift ranges in the S position

Operating the shift lever or shift paddle switches allows shift ranges to be selected to suit the driving conditions.

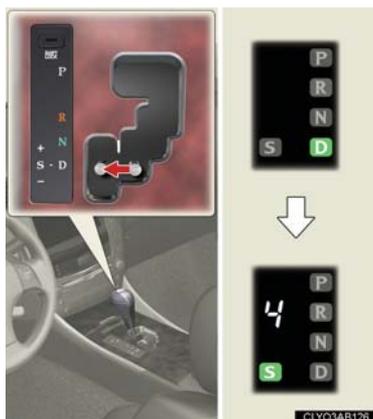

- 1 Shift the shift lever to S.

The indicator in the meter cluster will display the selected shift range.

- 2 **Higher shift range:**


Move the shift lever in the "+" direction or pull the "+" shift paddle switch toward you.

**Lower shift range:**

Move the shift lever in the "-" direction or pull the "-" shift paddle switch toward you.



## Manual Transmission (If Equipped)

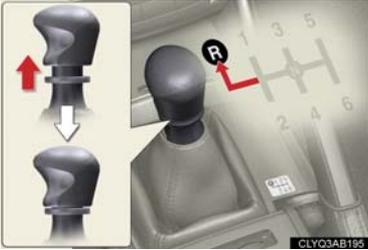

To operate the shift lever, the clutch pedal must be fully depressed.  
To shift into R, the ring on the shift lever must be pulled up.  
Shift the shift lever to R only when the vehicle is stationary.

## Parking Brake

### Automatic transmission



**To set the parking brake:** firmly depress the parking brake pedal.

**To release the parking brake:** depress the parking brake pedal again.

### Manual transmission



**1** To set the parking brake: pull the parking brake lever firmly upward.

**2 3 4** To release the parking brake: press and hold the lock release button and lift the lever slightly before lowering it as far as it will go.

## Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus

### Display information



- Trip information
  - Outside temperature
  - Driving range
  - Average fuel consumption
  - Average fuel consumption after refueling
  - Current fuel consumption
  - Average vehicle speed
  - Gear position (automatic transmission only)
- Satellite switch mode
- Retractable hardtop status
- Dynamic radar cruise control settings (if equipped)
- Intuitive parking assist information (if equipped)
- Warning messages

### Changing the display of trip information

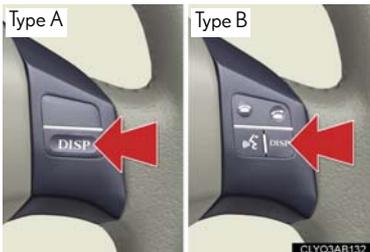

Trip information items can be switched by pressing the DISP switch.

- When using intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.



## Satellite Switches

The satellite switches can be used to change the settings of various functions. Settings are shown on the multi-information display.



The satellite switches can be used to change the settings of the following items.

- Intuitive parking assist (if equipped)
- Tire inflation pressure warning system initialization
- ID code selection for tire inflation pressure warning system
- AFS (Adaptive Front-lighting System) (if equipped)
- Speed indicator
- Tacho indicator

## Changing the ON/OFF settings




1 To cycle through the functions, press either the left or right selector switch.




2 To change the settings, press the ON/OFF button.

For detailed information of changing the settings, see the Owner's Manual.

## Turn Signal Lever

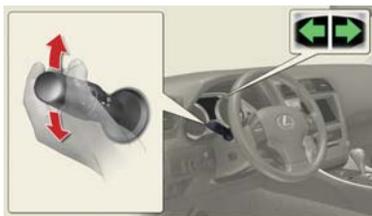

- 1 Right turn signal
- 2 Left turn signal

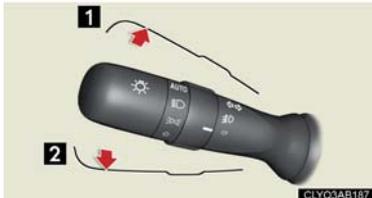

To signal a lane change, move the lever partway and hold.

## Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

The emergency flashers can be operated even when the "ENGINE START STOP" switch is OFF.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## ECT Switch (Automatic Transmission)

Use the ECT switch to select the driving mode that best suits the driving and road conditions.



**1 Power mode**

For more powerful acceleration and uphill driving.

**2 Normal mode**

**3 Snow mode**

For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.

## ETCS Switch (Manual Transmission)

Use the ETCS switch to change to snow mode when starting or accelerating on snow-covered roads or other slippery surfaces.



An indicator comes on when in snow mode. Press again to return to normal mode.

## Intuitive Parking Assist (If Equipped)


The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.

### Turning the system on and off

The system can be turned on and off using the satellite switch. (→P.25)

### Screen display

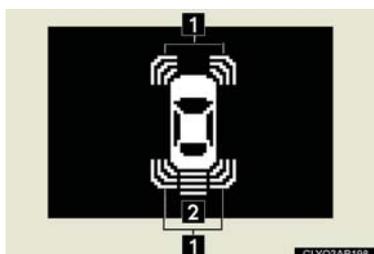

Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.


- 1 Indicates obstacles detected by the corner sensors
- 2 Indicates obstacles detected by the back sensors



## Cruise Control (If Equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

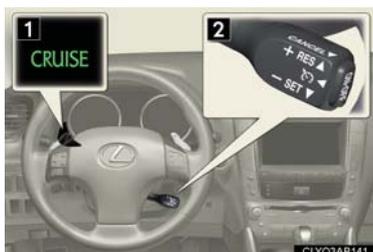

- 1 Indicator
- 2 Cruise control switch

### Setting the speed



- 1 Press the ON-OFF button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the ON-OFF button.

### Adjusting the speed setting



To **increase speed**: push the lever up.  
To **decrease speed**: push the lever down.

Release the lever when the desired speed is reached.

## Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.



- 1 Indicator
- 2 Display
- 3 Distance switch
- 4 Cruise control switch


### Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

### Vehicle-to-vehicle distance control mode

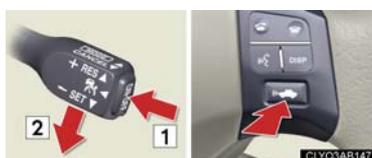

- 1 Press the ON-OFF button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Vehicle-to-vehicle distance can be adjusted using the distance switch.


### Constant speed control mode



- 1 Press the ON-OFF button.
- 2 Push the lever forward and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.



## ■ Canceling

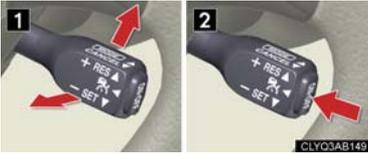

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the ON-OFF button.


## ■ Adjusting the speed setting



- To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.



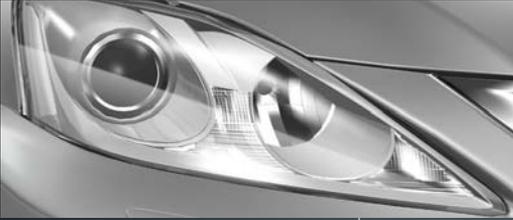


#### Topic 4

## Rain and Night Driving

Headlights.....	33
Fog Lights.....	34
Windshield Wipers and Washer.....	35
Headlight Cleaner.....	37
Rear Window and Outside Rear View Mirror Defoggers.....	37
Instrument Panel Light Control.....	37

## Headlights

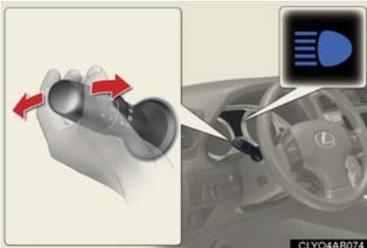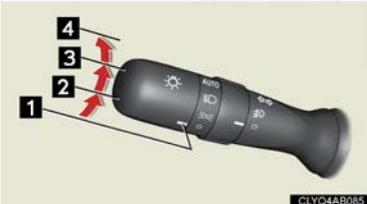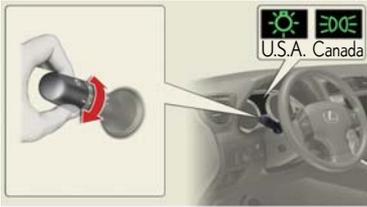

- 1 Off
- 2 The instrument panel, side marker, parking, tail and license plate lights turn on.
- 3 The headlights and all lights listed above turn on.
- 4 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

### ■ AFS (Adaptive Front-lighting System) (if equipped)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.

The system can be turned on and off using the satellite switch. (→P.25)

## Fog Lights

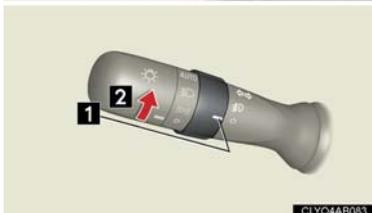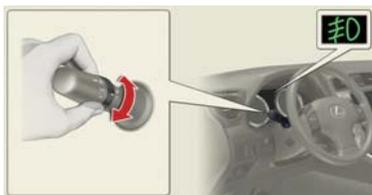

The fog lights can be used only when the headlights (low beam) are on.


- 1 Front fog lights off
- 2 Front fog lights on

## Windshield Wipers and Washer

### Intermittent windshield wipers (if equipped)



- 1 Off
- 2 Intermittent operation
- 3 Low speed
- 4 High speed
- 5 Single wipe

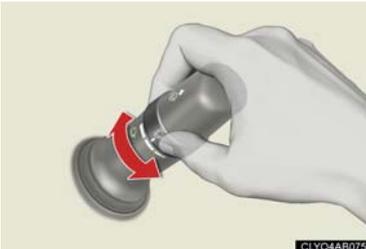


Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

## Rain-sensing windshield wipers (if equipped)

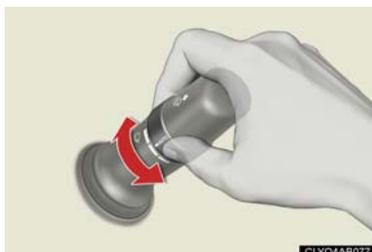

- 1 Off
- 2 Automatic operation
- 3 Low speed
- 4 High speed
- 5 Single wipe

Automatic operation: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever. The wipers will operate automatically.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus

## Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

## Rear Window and Outside Rear View Mirror Defoggers

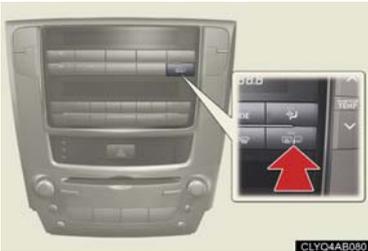

To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 to 60 minutes.

## Instrument Panel Light Control



- 1 To dim:** turn the dial counterclockwise.
- 2 To brighten:** turn the dial clockwise.



## Topic 5


# Driving Comfort

Touch Screen .....	39
Navigation System .....	42
Hands-free System For Cellular Phone (with navigation system) .....	48
Audio System (with navigation system) .....	56
Air Conditioning System (with navigation system) .....	60
Hands-free System For Cellular Phone (without navigation system) .....	61
Audio System (without navigation system) .....	67
Air Conditioning System (without navigation system) .....	72
Speech Command System .....	73
Garage Door Opener .....	79

## Touch Screen (with navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the "Navigation System Owner's Manual".


The button positions, shapes and screen may slightly vary depending on the type of the touch screen.

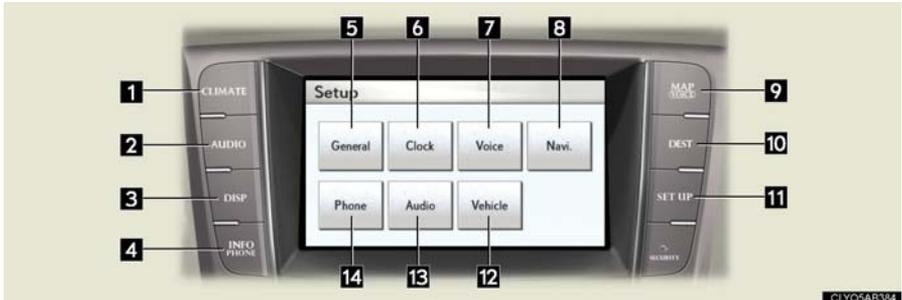

Press the button to display the screen. The "Setup" screen shown in the above illustration is displayed when the "SET UP" button is pressed.

- 1** "CLIMATE": Air conditioning operation screen
- 2** "AUDIO": Audio control screen
- 3** "DISP": Adjust picture quality
- 4** "INFO PHONE": Information screen
- 5** "General": General settings screen
- 6** "Clock": Clock settings screen
- 7** "Voice": Voice settings screen
- 8** "Navi.": Navigation settings screen
- 9** "MAP VOICE": Vehicle's current position
- 10** "DEST": Destination screen
- 11** "SET UP": Setup screen
- 12** "Vehicle": Vehicle settings screen
- 13** "Audio": Audio settings screen
- 14** "Phone": Phone settings screen

## Display

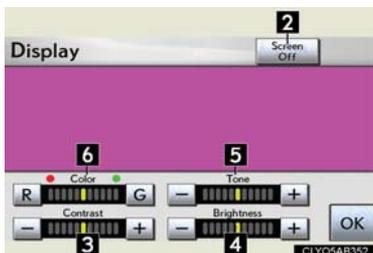

Push the  button on the side of the touch screen to show the “Display” screen.

- 1 Displays the screen in “Day Mode” with the headlight switch on
- 2 Turns the screen off
- 3 Adjust contrast
- 4 Adjust brightness
- 5 Adjust color tone
- 6 Adjust color

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort


Opening and Closing

What to do if ...

Customizing Your Lexus



## Screen scroll operation

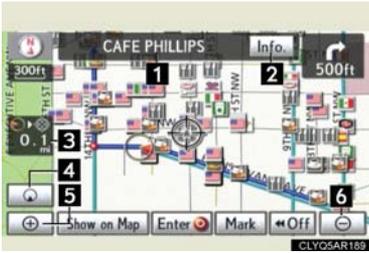

When any point on the map is touched, that point moves to the center of the screen.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

## Setting a route

While route guidance is operating, you can change the route using the following method.



Touch **Route**.

The following settings can be accessed



- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

## Navigation System (If Equipped)

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort


Opening and Closing

What to do if ...

Customizing Your Lexus

### Register home

#### STEP 2 Setup

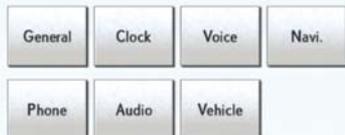

CLYGGAR358

#### STEP 3 Navigation Settings



CLYGGAR460

#### STEP 6 Address

Select a method to search for an address:



Search Area DC, DE, MD, NJ, PA, VA, WV



CLYGGAR461

- 1 Push the **SET UP** button on the side of the touch screen. (→P.39)
- 2 Touch **Navi.**
- 3 Touch **Home**
- 4 Touch **Set Home**
- 5 Touch **Address**
- 6 Touch **City**
- 7 Input a city name and touch **OK**
- 8 Touch the button of the desired city name from the displayed list.
- 9 Input the street name and touch **OK**
- 10 When the desired street name is found, touch the corresponding button.
- 11 Input a house number and touch **OK**
- 12 Touch **Enter**
- 13 Touch **OK**



## Destination input — Search by address




### ► Select by city name

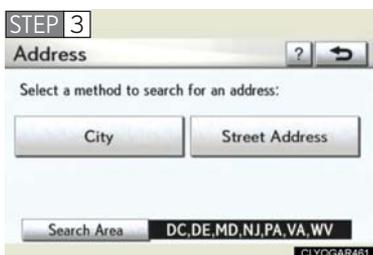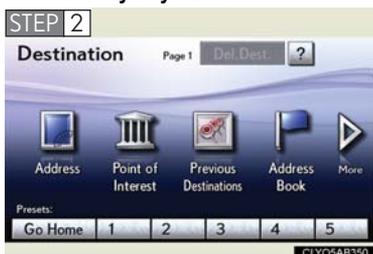

- 1 Push the  button on the side of the touch screen. (→P.39)
- 2 Touch .
- 3 Touch .
- 4 Input a city name and touch .
- 5 Touch the button of the desired city name from the displayed list.
- 6 Input the street name and touch .
- 7 When the desired street name is found, touch the corresponding button.
- 8 Input a house number and touch .
- 9 Touch .
- 10 Touch .

## Destination input — Search by address



### ► Select by street address

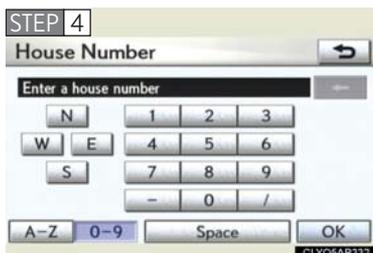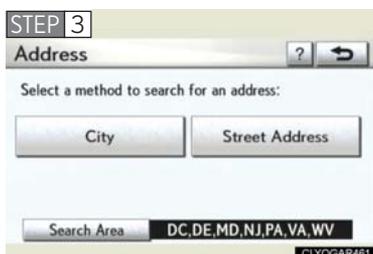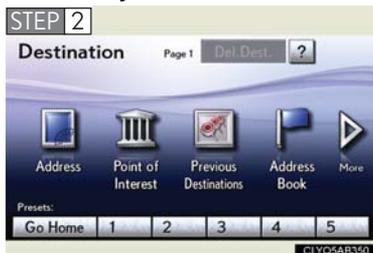

- 1 Push the **DEST** button on the side of the touch screen. (→P.39)
- 2 Touch **Address**.
- 3 Touch **Street Address**.
- 4 Input a house number and touch **OK**.
- 5 Input the street name and touch **OK**.
- 6 When the desired street name is found, touch the corresponding button.
- 7 Input a city name and touch **OK**.
- 8 Touch the button of the desired city name from the displayed list.
- 9 Touch **Go to**.
- 10 Touch **OK**.






## Destination input — Search points of interest by name

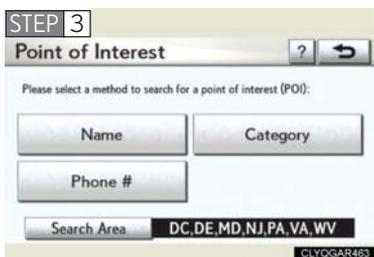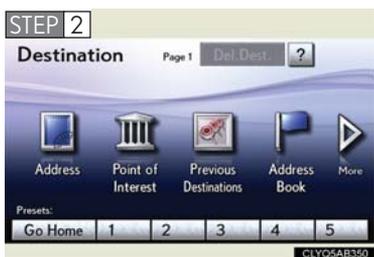

- 1 Push the  button on the side of the touch screen. (→P.39)
- 2 Touch .
- 3 Touch .
- 4 Input the name of the point of interest and touch .
- 5 Touch the button of the desired destination.
- 6 Touch .
- 7 Touch .

## Destination input — Search points of interest by category

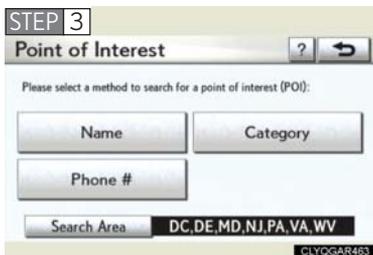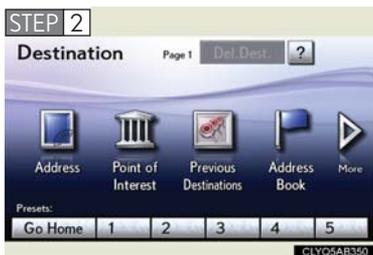

 - 1 Push the  button on the side of the touch screen. (→P.39)
- 2 Touch .
- 3 Touch .
- 4 Touch .
- 5 Touch the button of the desired destination and set the search point.
- 6 Touch the desired point of interest category.
- 7 Touch the button of the desired item.
- 8 Touch .
- 9 Touch .

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort




Opening and Closing

What to do if ...

Customizing Your Lexus



## Destination input — Search points of interest by telephone number

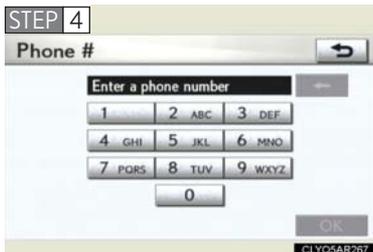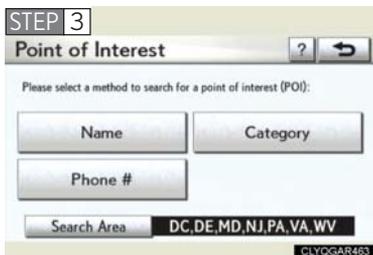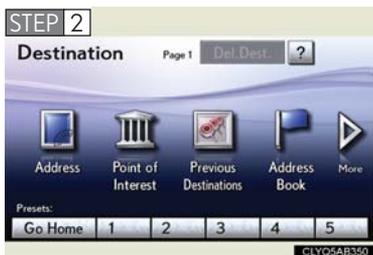

1 Push the  button on the side of the touch screen. (→P.39)

2 Touch .

3 Touch .

4 Input a telephone number and touch .

5 Touch .

6 Touch .

## Hands-free System For Cellular Phone (with navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.




To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Push the **SET UP** button on the side of the touch screen. (→P.39)
- 2 Touch **Phone**.
- 3 Touch **Manage Phone**.
- 4 Touch **(add new)** to display the screen for connecting Bluetooth.
- 5 Enter the passcode displayed on the screen into the phone. Refer to the cellular phone user's manual for cellular phone operation.
- 6 When the connection is completed, **Bluetooth connection successful.** will appear and push the **SET UP** button.





## Phonebook transfer

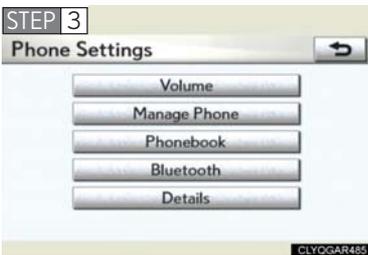


- 1 Push the **SET UP** button on the side of the touch screen. (→P.39)
- 2 Touch **Phone**.
- 3 Touch **Phonebook**.
- 4 Touch **Manage Contacts**.
- 5 Touch **Transfer Contacts**.
- 6 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.


## ■ Registering a voice tag

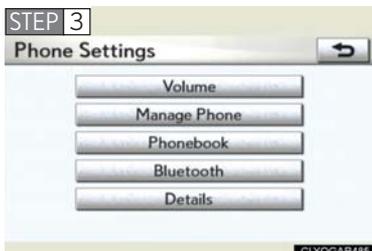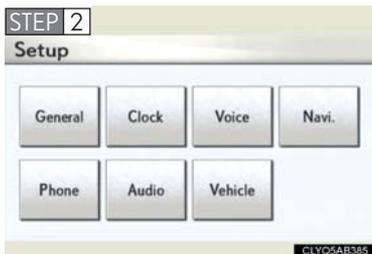

 - 1 Push the  button on the side of the touch screen. (→P.39)
- 2 Touch .
- 3 Touch .
- 4 Touch .
- 5 Touch .
- 6 Touch the data you want to register.
- 7 Touch , and record a voice tag.
- 8 Touch .



## ■ Registering a speed dial

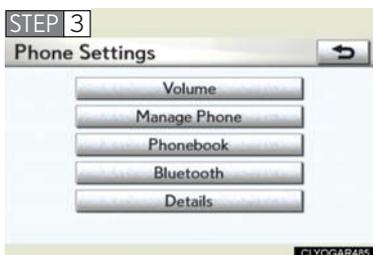

- 1 Push the **SET UP** button on the side of the touch screen. (→P.39)
- 2 Touch **Phone**.
- 3 Touch **Phonebook**.
- 4 Touch **Manage Speed Dials**.
- 5 Touch **New Speed Dial**.
- 6 Touch the data you want to register.
- 7 Touch the desired phone number.
- 8 Touch the button you want to register in.
- 9 The registration completion message is displayed on the screen.

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



- 1 Press .
- 2 Follow the voice guidance and say "Phone".
- 3 Follow the voice guidance and say "Dial by name".
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.




## ■ Calling by speed dial




1 Press  .

2 Touch  .

3 Touch the desired number to call.

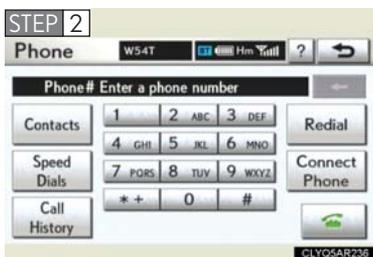

## Receiving a call

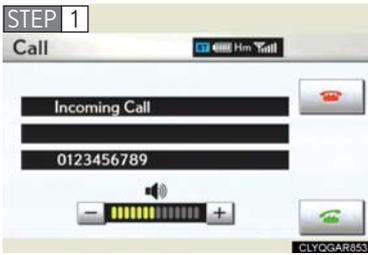

1 When a call is received, this screen is displayed with a sound.

2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.



## ■ XM<sup>®</sup> NavWeather

---

The XM<sup>®</sup> NavWeather service that allows the navigation system to display weather information on the map is available if your satellite radio tuner can receive weather information. For details, refer to the “Navigation System Owner’s Manual”.

To receive the XM<sup>®</sup> NavWeather service, a subscription to the XM<sup>®</sup> Satellite Radio with NavWeather is necessary.

The XM<sup>®</sup> NavWeather is available in the contiguous 48 U.S. states. For details about the XM<sup>®</sup> NavWeather service coverage area, refer to [www.xmradio.com](http://www.xmradio.com).

### ● How to activate the XM<sup>®</sup> NavWeather service

To receive the XM<sup>®</sup> NavWeather service, it is necessary to activate the service. To activate the service, an extra fee is required in addition to subscription fees for the XM<sup>®</sup> Satellite Radio. For details about service and activation, call XM<sup>®</sup> Listener Care Center at 1-877-515-3987.

Customers should have their radio ID ready; the radio ID can be found by selecting “channel 000” on the radio.

XM<sup>®</sup> Satellite Radio has the responsibility for all fees and service, they are subject to change.

The following operations can be performed.

- Show XM<sup>®</sup> NavWeather information
- Weather information
- Weather warnings

## Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

### Basic operation



- 1 Displays the audio control screen
- 2 Sound quality modes
- 3 Audio sources
  - AM·FM: AM radio/FM radio
  - SAT: Satellite radio
  - DISC: DVD player (if equipped)
  - CD: CD player (if equipped)
  - AUX·USB: Auxiliary audio device/USB memory player/iPod® player/Bluetooth® audio player
- 4 Power/Volume

### Radio



- 1 Displays the audio control screen
- 2 Station presets
- 3 Scanning radio stations
- 4 Radio tuner
- 5 Station select
- 6 Seek

### Entering station presets

- 1 Touch the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.



## DVD player/CD player

### Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Eject
- 8 Track select/rewind/fast-forward

### Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

### Playing a DVD (DVD player only)



- 1 Displays the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Eject
- 7 Chapter select/rewind/fast-forward

### Operating an ipod®



- 1 Displays the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random playback
- 6 Track list
- 7 Track select
- 8 Track select/rewind/fast-forward



### ■ Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

### ■ Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

### ■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Radio mode: radio tuner  
DVD mode: track/chapter/disc select  
CD mode: disc/track/file (MP3/WMA) select  
iPod® player mode: song select
- 3 Power on/change mode: press  
Power off: press and hold

## Air Conditioning System (with navigation system)



- |  |  |
|--|--|
| 1 Dual mode button                         | 8 Driver side temperature control                      |
| 2 Passenger side temperature display       | 9 "OFF" button   |
| 3 Fan speed display                        | 10 Cooling and dehumidification function on/off button |
| 4 Outside air/recirculated air mode button | 11 Driver side temperature display                     |
| 5 Passenger side temperature control       | 12 Air conditioning operation screen display button    |
| 6 Windshield defogger                      | 13 Air outlet display                                  |
| 7 Automatic mode button                    |  |

### Using the automatic mode

Press **7** to turn on the airflow and **8** to adjust the temperature.

### Adjusting the temperature

**To simultaneously adjust the driver's side and passenger's side temperature settings**  
Touch **1** to turn the "DUAL" indicator off (**DUAL**) and then press **8**.

**To individually adjust the driver's side and passenger's side temperature settings**  
Touch **1** or press **5** to turn the "DUAL" indicator on (**DUAL**) and then press **8** or **5**.

### To turn off the airflow

Press **9**.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus

## Hands-free System For Cellular Phone (without navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

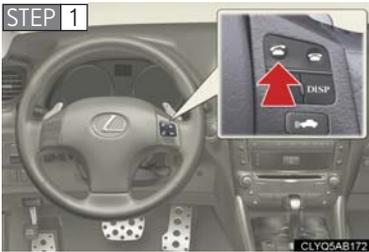

To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
  - 2 Press  and say "Pair phone".
  - 3 Press  and say a name\*.
- \*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
  - 5 Enter the passkey shown on the display into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
  - 6 Once the voice guidance for registration completion is finished, press .



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".



: Pressing this switch turns the speech command system on. Say a command after the beep.



## ■ Calling by speed dial



1 Press  .

2 Press the desired preset button (1-6).

3 Press  .



## Phonebook transfer



- 1 Press  .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the speech command system on. Say a command after the beep.



## ■ Changing the registered name



- 1 Press  .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

## ■ Registering a speed dial



- 1 Press  .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button (1-6).
- 8 Press  and say "Confirm".



: Pressing this switch turns the speech command system on. Say a command after the beep.

## Audio System (without navigation system)

### Basic operation

#### ▶ Type A



- 1 Sound quality modes
- 2 Automatic Sound Levelizer (ASL)
- 3 Mute
- 4 Audio sources
  - AM•FM: AM radio/FM radio
  - SAT: Satellite radio
  - CD•AUX: CD player/Auxiliary audio device/USB memory player/iPod® player/Bluetooth® audio player
- 5 Power/Volume

#### ▶ Type B



- 1 Sound quality modes
- 2 Automatic Sound Levelizer (ASL)
- 3 Mute
- 4 Audio sources
  - AM: AM radio
  - FM: FM radio
  - CD: CD player
  - AUX: Auxiliary audio device
- 5 Power/Volume

## Radio

### ► Type A



- 1 Traffic information
- 2 Station presets
- 3 Text messages
- 4 Radio tuner
- 5 RDS genre select
- 6 Scanning radio stations
- 7 Seek

### ■ Entering station presets

- 1 Press the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

### ► Type B



- 1 Scanning radio stations
- 2 Station presets
- 3 Radio tuner
- 4 Station select
- 5 Seek

### ■ Entering station presets

- 1 Press the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## ■ CD player

### ■ Playing an audio CD

#### ▶ Type A



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Text information
- 5 Disc select
- 6 Disc load
- 7 Search playback
- 8 Playback
- 9 Eject
- 10 Track select/rewind/fast-forward

#### ▶ Type B



- 1 Search playback
- 2 Random playback
- 3 Repeat play
- 4 Text information
- 5 Disc select
- 6 Disc load
- 7 Playback
- 8 Eject
- 9 Track select/rewind/fast-forward

## ■ Playing a CD with MP3/WMA files

### ► Type A



### ► Type B



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Folder select
- 5 Text information
- 6 File select
- 7 Disc select
- 8 Disc load
- 9 Search playback
- 10 Playback
- 11 Eject

- 1 Search playback
- 2 Random playback
- 3 Repeat play
- 4 Folder select
- 5 Text information
- 6 File select
- 7 Disc select
- 8 Disc load
- 9 Playback
- 10 Eject

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## ■ Operating an ipod®

### ▶ Type A only



- 1 Random play
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Text information
- 6 Playback
- 7 Menu/Track select
- 8 Track select/rewind/fast-forward

### ■ Loading a CD

- 1 Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".

### ■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".  
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.  
Repeat the procedure for the remaining CDs.  
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will cancelled automatically.

### ■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Radio mode: radio tuner  
CD mode: disc/track/file (MP3/WMA) select  
iPod® player mode (if equipped): song select
- 3 Power on/change mode: press  
Power off: press and hold

## Air Conditioning System (without navigation system)



- |   |                                   |
|---|-----------------------------------|
| 1 Passenger side temperature display                  | 6 Dual mode button                |
| 2 Passenger side temperature control                  | 7 Driver side temperature control |
| 3 Windshield defogger                                 | 8 Automatic mode button           |
| 4 Outside air/recirculated air mode button            | 9 Driver side temperature display |
| 5 Cooling and dehumidification function on/off button | 10 "OFF" button                   |
|   | 11 Fan speed controls             |
|   | 12 Air outlet selector button     |

### Using the automatic mode

Press **8** to turn on the airflow and **7** to adjust the temperature.

### Adjusting the temperature

**To simultaneously adjust the driver's side and passenger's side temperature settings**

Press **6** to turn the "DUAL" indicator off (  ) and then press **7**.

**To individually adjust the driver's side and passenger's side temperature settings**

Press **6** or **2** to turn the "DUAL" indicator on (  ) and then press **7** or **2**.

### To turn off the airflow

Press **10**.

## Speech Command System

### Basic operation



- 1 Press .
- 2 - If you know the command:  
Press  again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

- Important speech commands information and tips
  - Speech commands can be used while driving.
  - You must wait until after the beep to say a command.
  - In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
  - If you know what command to use, you can press  at any time to interrupt the voice guidance.

## ■ Command list

### ► All vehicles

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

### ► With navigation system

Destinations				
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:		"Address" and then follow the prompts to enter city, state, street and house number	
To Enter a Point of Interest, SAY	A Point of Interest Category, Such As: "Dining," "Shopping Malls," "Police," "Gas," ETC.			
	"Destination" and then SAY:	"Point of Interest" and then SAY:	"Near Here"	And then follow the prompts
			"Along Route"	
"Emergency"				
To Enter a Previous Destination, SAY:	"Destination" and then SAY:		"Previous Destinations"	
	"Destination" and then SAY:	"Presets" and then SAY:	"Home" (HOME must already be set using manual controls)	
"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)				

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



### General Navigation Commands

To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
	"North Up"
	"Heading Up"
	"Map Direction"
To Change the Map Orientation, SAY:	"Right Map North Up"
	"Right Map Heading Up"
	"Right Map Direction"
To Change the Guidance Mode, SAY:	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
	"Freeway Mode"
To Save a Point on the Map, SAY:	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

General Navigation Commands	
To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Final Destination Map"
	"Delete Next Destination"
	"Delete Final Destination"
To Operate Guidance Options, SAY:	"Delete All Destinations"
	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
To Operate the Traffic Information, SAY:	"Louder"
	"Softer"
To Show the Icon, SAY:	"Traffic Information"
To Show the Icon, SAY:	"GAS", "PARKING" ETC.

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Connect Phone" and then SAY:	"Send Tones"
			"Select Phone"
			"Add New Phone"
			"Hands Free Power ON"
			"Hands Free Power OFF"
			NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



AUDIO			
To Turn Audio On or Off, SAY:	"Audio ON"		
	"Audio OFF"		
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD*, CD Changer*, DVD**, DVD Changer**, Bluetooth® Audio, iPod®, USB Audio		
	*For systems w/o NAV **For systems w/NAV		
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"		
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"		
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"		
	"Type Up" or "Type Down"		
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:	"Select Channel Number"	
		"Select Channel Name" (English only)	
		"Select Channel Type" (English only)	
		"Command List" and then SAY:	
		"Seek Up" or "Seek Down"	
		"Type Up" or "Type Down"	



XM Information		
To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts
To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts

CLIMATE CONTROL/AIR CONDITIONING	
To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink<sup>®</sup> Universal Transceiver) is manufactured under license from HomeLink<sup>®</sup>.

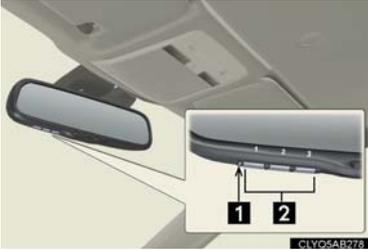

The HomeLink<sup>®</sup> compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

## ■ Programming HomeLink®



1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.

2 Press and hold down the desired HomeLink® button.

3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

4 Press the training button on the motor-head unit in your garage.

5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.



## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink®

---



Press the appropriate HomeLink® button.  
The indicator light should come on.



## Topic 6

# Opening and Closing

Door Locks .....	83
Power Windows .....	83
Retractable Hardtop .....	84
Fuel Tank Cap .....	86
Hood .....	87
Trunk .....	88


## Door Locks

### Locking the vehicle from inside



#### ▶ Inside lock button

- 1 Locks
- 2 Unlocks

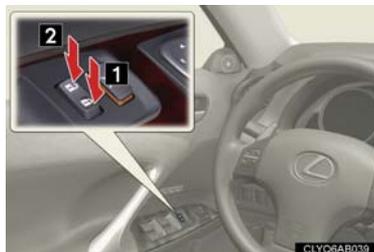

#### ▶ Door lock switch

Operates both side door locks.

- 1 Locks
- 2 Unlocks

### Locking the vehicle from outside

Using the entry function or wireless remote control (→P.9, 10)

## Power Windows



#### 1 Power window switches

**To open:** press the switch.

**To close:** pull the switch up.


**Front windows:** fully pulling up and releasing the switches causes the windows to close fully.

**All windows:** fully pressing down and releasing the switches causes the windows to open fully.

#### 2 Window lock switch

The window lock switch disables the operation of passenger window switches.

## Retractable Hardtop

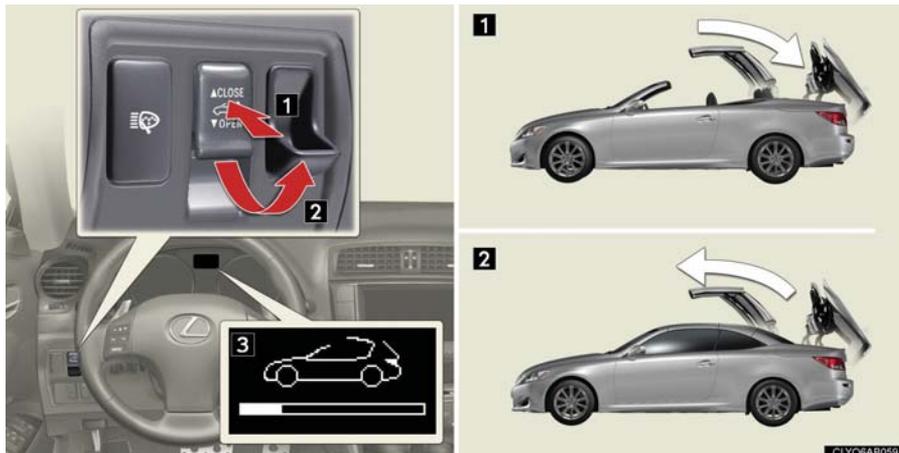

- 1** Opening the retractable hardtop  
Press and hold the switch until “COMPLETE” is shown on the display.
- 2** Closing the retractable hardtop  
Pull up and hold the switch until “COMPLETE” is shown on the display.
- 3** Retractable hardtop status display  
Warnings, advice and the operational status of the retractable hardtop will be displayed.

### To operate the retractable hardtop

When the following conditions are met, the retractable hardtop can be operated:


Operating condition	Details
The vehicle is stopped	—
The trunk lid is closed	—
The “ENGINE START STOP” switch is in IGNITION ON mode	(→P.20)
The luggage cover is installed	(→P.85)
The trunk opener main switch is on	(→P.88)
No obstacles are detected by the intuitive parking assist	Refer to the Owner’s Manual for details.



## ■ Installing the luggage cover



- 1 Pull the board of the luggage cover toward you to unhook the hooks.

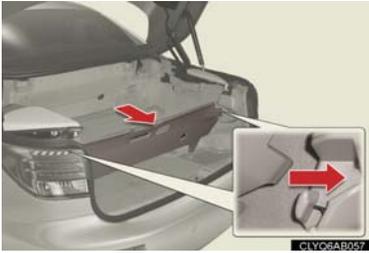

- 2 Pull the luggage cover further until the tabs on the sides of the cover fit securely into the holders on the sides of the trunk.

Make sure the upper part of the board is securely positioned in the holders.



- 3 Fit the tabs on the bottom of the luggage cover into the holders on the floor of the trunk.

Make sure the lower part of the board is securely positioned in the holders on the floor.

If the retractable hardtop still does not operate, see the owner's manual for more information or contact your Lexus dealer.

## Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

Entering and Exiting

Before Driving

When Driving

Rain and  
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing  
Your Lexus

## Hood



1 Pull the hood release lever.



2 Insert your fingers under the hood, pull the hood catch and lift the hood.


## Trunk

### Trunk opener



CLY06AB049

To open the trunk from inside the cabin, simply press the trunk opener.

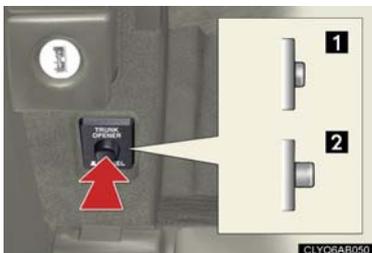

CLY06AB050

To disable the trunk opener, turn OFF the main switch in the glove box.

**1** ON

**2** OFF

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.

### Entry function and wireless remote control

→P9, 10

## List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering warning light



Pre-collision system warning light \*1



(Flashing and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

### Follow the correction procedures.



Open door warning light



(On the center panel)

Front passenger's seat belt reminder light



Low fuel level warning light



(Illuminate no flashing)

Tire pressure warning light\*<sup>4</sup>



(On the instrument cluster)

Driver's seat belt reminder light



Master warning light

### See the Owner's Manual



Turn signal indicator



Cruise control indicator



Headlight high beam indicator



AFS OFF indicator\*<sup>1</sup>



Headlight indicator (U.S.A.)



Front fog light indicator



Tail light indicator (Canada)



Intuitive parking assist indicator\*<sup>1</sup>



ECT SNOW indicator\*<sup>2</sup>



Slip indicator



ETCS SNOW indicator\*<sup>3</sup>



VSC off indicator



ECT PWR indicator\*<sup>2</sup>



SRS airbag on-off indicator



Shift position and shift range indicators\*<sup>1</sup>

For further information, refer to the Owner's Manual.

\*<sup>1</sup>: If equipped


\*<sup>2</sup>: Vehicles with automatic transmission

\*<sup>3</sup>: Vehicles with manual transmission

\*<sup>4</sup>: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature excluding the spare tire. Adjust the tire inflation pressure.

### If the electronic key does not operate properly

#### Unlocking and locking the doors

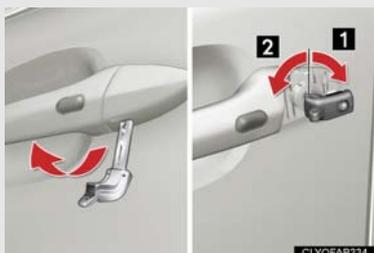

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1** Unlocks
- 2** Locks

#### Starting the engine



- 1** Depress the brake pedal (for automatic transmission) or clutch pedal (for manual transmission).
- 2** Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3** Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal (for automatic transmission) or clutch pedal (for manual transmission) depressed.



If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## If the engine doesn't start

Make sure that the correct operating procedures have been followed.

### ► Automatic transmission



### Brake/clutch pedal

Make sure that the brake pedal (for automatic transmission) or clutch pedal (for manual transmission) is firmly depressed when attempting to start the engine. (→P.19)

### ► Manual transmission



### Steering wheel lock

Make sure that the steering wheel lock is released.

To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. (→P.11)



If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside and both side doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close both side doors and lock the doors again.
Interior alarm sounds continuously*	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm pings continuously	Switched to ACCESSORY mode while the driver's door is open (Opened the driver's door when the "ENGINE START STOP" switch is in ACCESSORY mode.)	Close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door is still open	Close the driver's door.

\*: Vehicles with automatic transmission only

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, both side doors unlocked in two steps	Both side doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
	Door lock buzzer	On	Off
	Trunk unlocking function	On	Off
	Trunk unlocking operation	Push and hold	Push twice
			One short push
Panic function	On	Off	

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, both side doors unlocked in two steps	Both side doors unlocked in one step
	Speed-detecting automatic door lock function (Manual transmissions)	On	Off
	Speed-detecting automatic door lock function (Automatic transmissions)	Off	On
	Opening driver's door unlocks both side doors (Manual transmissions)	On	Off
	Opening driver's door unlocks both side doors (Automatic transmissions)	Off	On
	Shifting gears to P unlocks both side doors	On	Off
	Shifting gears to position other than P locks both side doors	On	Off
Steering wheel	Auto tilt-away function	On	Off
Power windows	Wireless remote control linked operation	On	Off

Item	Function	Default setting	Customized setting
Retractable hardtop	Retractable hardtop operation control linked to the intuitive parking assist	On	Off
Automatic light control system	Light sensor sensitivity	Level 3	Level 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Lights	Daytime running light system (U.S.A. only)	On	Off
Windshield wipers and washer	Switching operation when the vehicle is stationary	On	Off
	Drip prevention function	On	Off
	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds
Intuitive parking assist	Back sensor operation display and buzzer	On	Off
	Buzzer volume	Level 3	Level 1 to 5
	Distance which a sensor detects	4.9 ft. (150 cm)	2.0 ft. (60 cm)
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	On	Off
	Operation after the "ENGINE START STOP" switch turned OFF	On	Off
	Front foot well lights	On	Off
	Shift lever light	On	Off
	Outer foot lights	On	Off

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus





### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada : [www.lexus.ca](http://www.lexus.ca)

©2009 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.