

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

## **Air Conditioning System (with navigation system)\***

Using the automatic mode .....	50
Adjusting the temperature .....	50
To turn off the airflow .....	50

## **Air Conditioning System (without navigation system)**

Using the automatic mode .....	63
Adjusting the temperature .....	63
To turn off the airflow .....	63

## **Audio System (with navigation system)\***

Basic operation .....	46
Radio.....	46
DVD player/CD player.....	47
Operating an iPod.....	49
Remote control (steering wheel switches).....	49

## **Audio System (without navigation system)**

Basic operation .....	57
Radio.....	58
CD player.....	59
Operating an iPod.....	62
Remote control (steering wheel switches).....	62

## **Automatic Transmission**

.....	15
-------	----

## **Cruise Control**

.....	22
-------	----

## **Door Locks**

.....	69
-------	----

## **ECT Switch (Automatic Transmission)**

.....	20
-------	----

## **Engine (ignition) Switch**

.....	14
-------	----

## **ETCS Switch (Manual Transmission)**

.....	21
-------	----

## **Fog Lights**

.....	24
-------	----

## **Fuel Tank Cap**

.....	71
-------	----

## **Hands-free System For Cellular Phone (with navigation system)\***

Bluetooth® phone pairing.....	39
Phonebook transfer .....	40
Registering a voice tag .....	41
Registering a speed dial .....	42
Calling by name .....	43
Calling by speed dial.....	44
Receiving a call.....	45

## **Hands-free System For Cellular Phone (without navigation system)\***

Bluetooth® phone pairing.....	51
Calling by number .....	52
Calling by name .....	52
Calling by speed dial.....	53


\*: This feature may be operated by Voice command (See P.64)


Phonebook transfer .....	54
Changing the registered name.....	55
Registering a speed dial.....	56
<b>Head Restraints</b> .....	13
<b>Headlights</b> .....	23
<b>Instrument Panel Light Control</b> .....	29
<b>Intuitive Parking Assist</b> .....	21
<b>Keys</b> .....	8
<b>Lexus Enform with Safety Connect</b> .....	67
<b>Manual Transmission</b> .....	17
<b>Moon Roof</b> .....	70
<b>Multi-information Display</b> .....	18
<b>Navigation System*</b>	
Register home.....	33
Destination input — Search by address .....	34
Destination input — Search points of interest by name.....	36
Destination input — Search points of interest by category.....	37
Destination input — Search points of interest by telephone number.....	38
Voice Command System .....	64
<b>Power Windows</b> .....	70
<b>Rear Window and Outside Rear View Mirror Defoggers</b> .....	29
<b>Safety Connect</b> .....	65
<b>Satellite Switches</b> .....	19
<b>Seat Belts</b> .....	13
<b>Seats (Manual)</b> .....	11
<b>Seats (Power)</b> .....	12
<b>Smart Access System with Push-button Start</b> .....	9
<b>Theft Deterrent System</b> .....	10
<b>Touch Screen (with navigation system)</b>	
Basic operation.....	30
Display.....	31
Screen scroll operation.....	32
Setting a route.....	32
<b>Trunk</b> .....	72
<b>Turn Signal Lever</b> .....	20
<b>Voice Command System*</b>	
Basic operation.....	64
<b>Windshield Wipers and Washer</b> .....	25

\*: This feature may be operated by Voice command (See P.64)

# Overview

# Instrument Panel

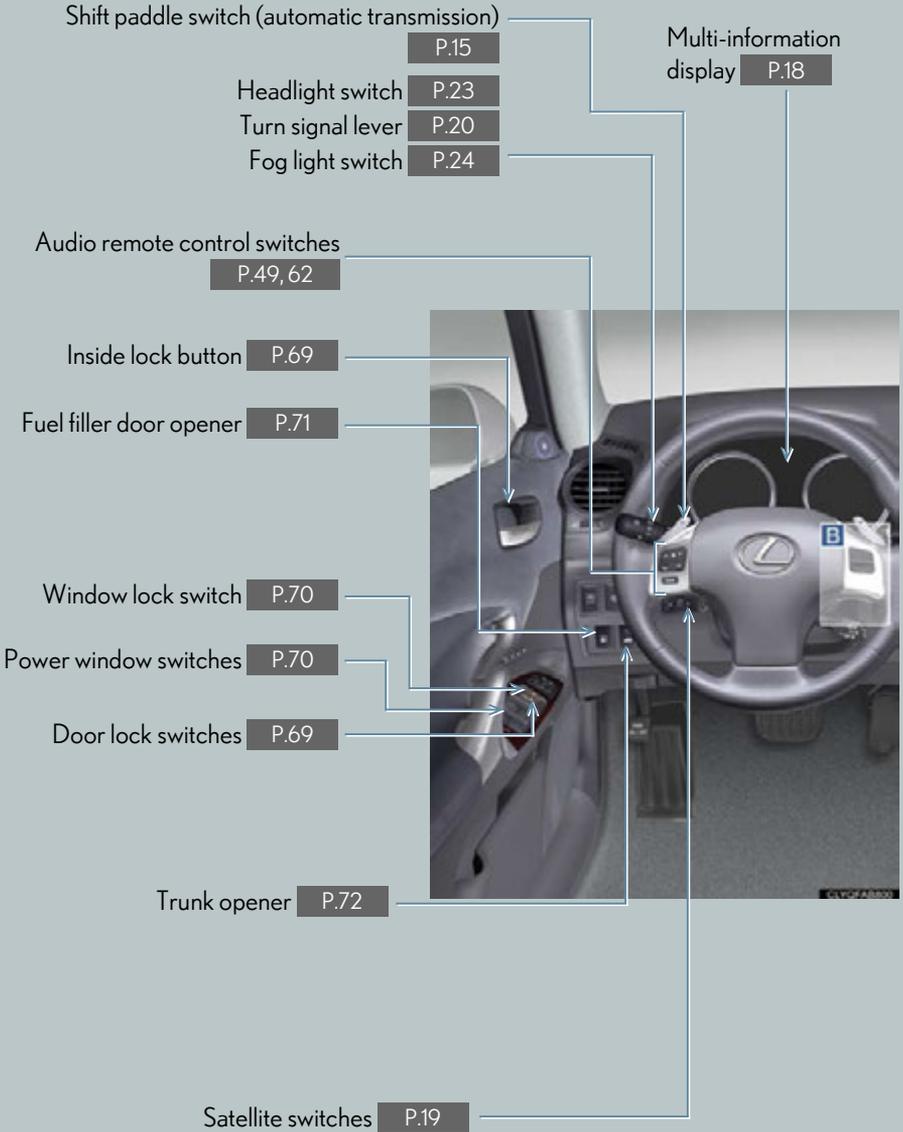

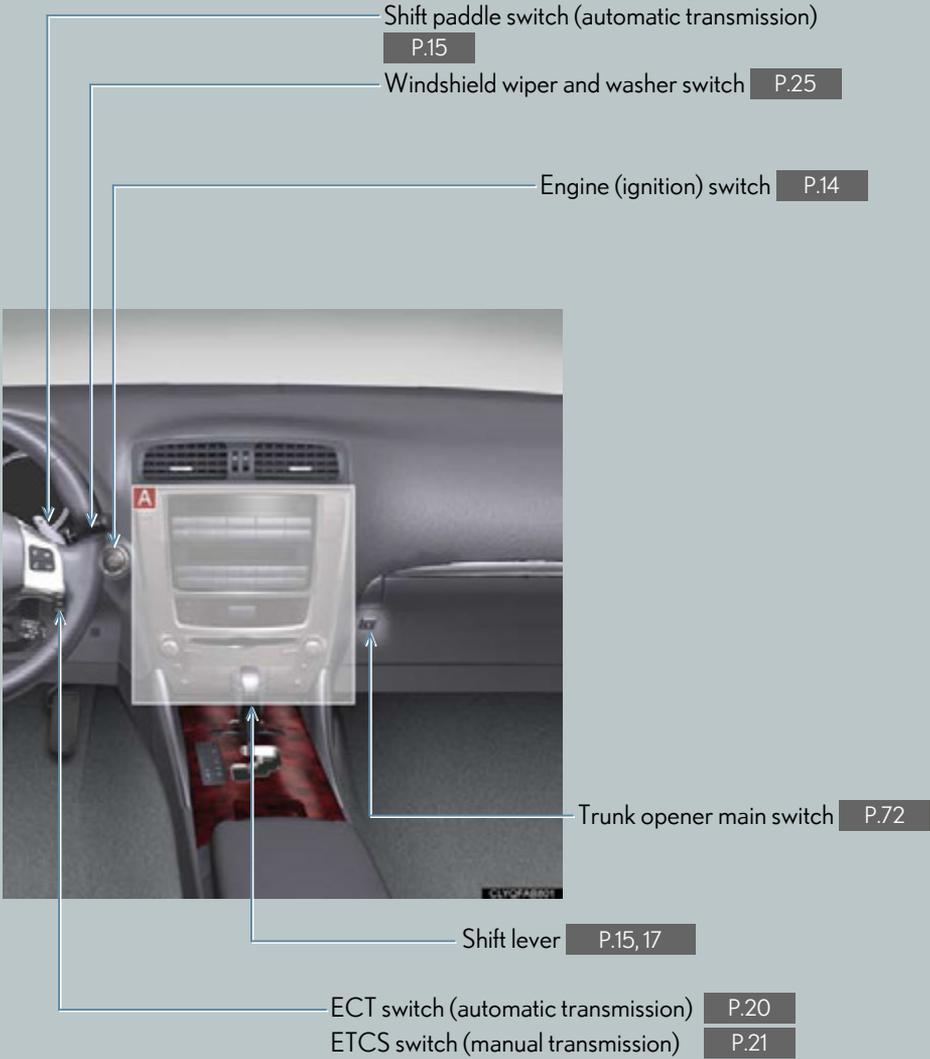

**A**

► Without navigation system

Air conditioning system P.63

Audio system P.57

Rear window and outside rear view mirror defoggers switch P.29

Security indicator P.10



**A**

► With navigation system

Navigation system  
P.33

Audio system  
P.46




Rear window and  
outside rear  
view mirror  
defoggers switch  
P.29

Security indicator  
P.10

Air conditioning  
system P.50

B

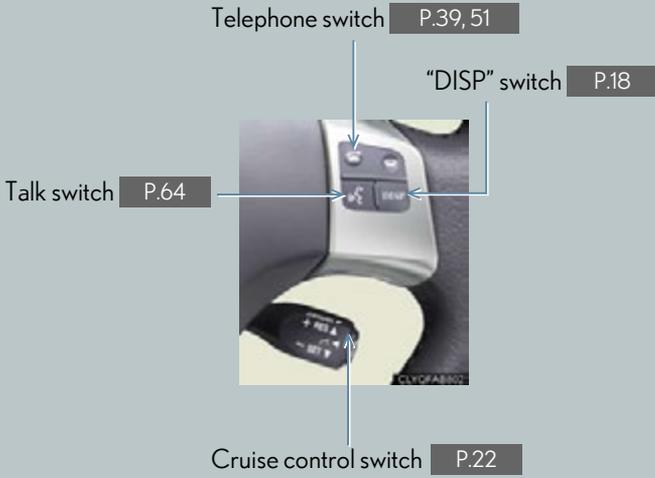

## Keys

### Electronic key



Smart access system with push-button start  
(→P.9, 14)

\*: If equipped

### Mechanical key



- Locks and unlocks the doors
- Opens the trunk
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull, or if equipped with a card key, press the button and pull.

### Wireless remote control



- 1 Locks all doors
- 2 Unlocks all doors
- 3 Unlocks the trunk (press and hold)
- 4 Sounds alarm (press and hold)

(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

## Smart Access System with Push-button Start


The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 14.

### ■ Entering the vehicle



To unlock the vehicle, simply grasp either of the front door handles.

### ■ Exiting the vehicle

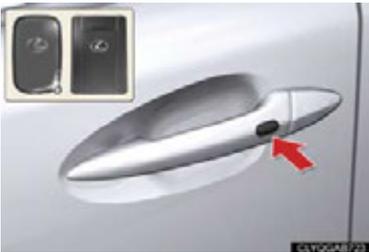

To lock the vehicle, press the lock button on either of the front door handles.

### ■ Opening the trunk



To open the trunk, press and hold the trunk release button.

For details on what to do when the electronic key does not operate properly, see page 75.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

### Alarm

The system sounds the alarm and flashes lights when forcible entry is detected.

**To set the alarm:** lock all the doors from outside the vehicle. The security indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** turn the “ENGINE START STOP” switch to ACCESSORY or IGNITION ON mode, start the engine by pressing the “ENGINE START STOP” switch, or unlock the doors or trunk.

### Steering lock



The steering wheel locks when the “ENGINE START STOP” switch is OFF.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. To release it, gently turn the wheel left or right while pressing the “ENGINE START STOP” switch.

## Seats (Manual)

### ■ Adjusting seat position



With the lever raised, slide the seat forward or backward.

### ■ Adjusting seatback angle



With the lever raised, tilt the seatback forward or backward.

### ■ Adjusting seat height



- 1 Raises the seat
- 2 Lowers the seat

### ■ Adjusting the front of the seat cushion



- 1 Raises the front of the seat cushion
- 2 Lowers the front of the seat cushion

## Seats (Power)

### ■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat


### ■ Adjusting the lumbar support (driver's seat only)



- 1 Firmer
- 2 Softer

## Head Restraints

### Vertical adjustment

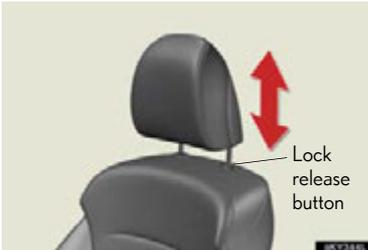

**To raise:** push the head restraint upward.

**To lower (front and center rear seats):** push the head restraint down while pressing the lock release button.

**To lower (outside rear seats):** push the head restraint down.

### Folding (outside rear seats only)



Pull the head restraint up while pressing the lock release button.

## Seat Belts

### Adjusting shoulder belt height (front seats only)



**To raise:** pull the anchor upward.

**To lower:** depress the button and push the anchor down.

### Seat belt comfort guides (outside rear seats only)



If the shoulder belt sits close to the neck, slide the comfort guide forward.

## Engine (ignition) Switch

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal or clutch pedal. (The mechanical key cannot be used to start the engine.)

### Starting the engine



#### ► Automatic transmission

Make sure the parking brake is engaged and the shift lever is in P.

- 1 Depress the brake pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.



#### ► Manual transmission

Make sure the parking brake is engaged and the shift lever is in N.


- 1 Depress the clutch pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

### Stopping the engine

- 1 Engage the parking brake and shift the shift lever to P (for automatic transmission) or N (for manual transmission).
- 2 Press the “ENGINE START STOP” switch.


## ■ Changing power modes

To change power modes without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal (for automatic transmission) or the clutch pedal (for manual transmission). The modes can be changed in the following order:

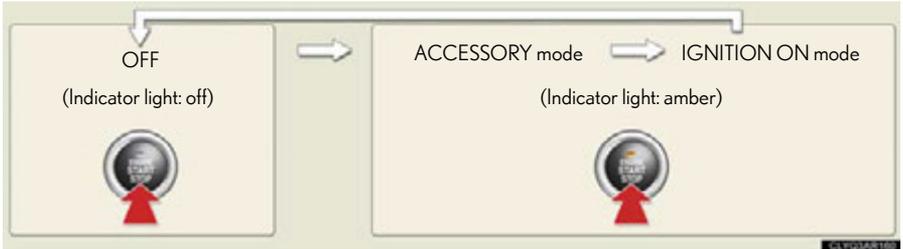

## Automatic Transmission (If Equipped)

### ■ Shift positions

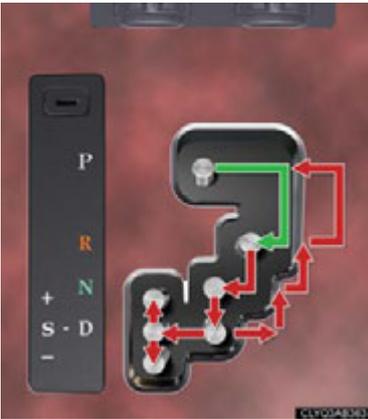

- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S S mode

← The vehicle can only be shifted out of P when the “ENGINE START STOP” switch is in IGNITION ON mode and the brake pedal is depressed.

## ■ Changing shift ranges in the D position

Operating the shift paddle switches allows shift ranges to be selected to suit the driving conditions.



- 1 Pull the “-” shift paddle switch toward you.  
The indicator in the meter cluster will display the selected shift range.



- 2 **Higher shift range:**  
Pull the “+” shift paddle switch toward you.  
**Lower shift range:**  
Pull the “-” shift paddle switch toward you.

Pulling and holding the “+” shift paddle switch for a certain period of time allows you to return to normal D position driving. If the accelerator pedal is depressed for more than a certain period of time in one range, shift range selection in the D position will be automatically deactivated.

## ■ Changing shift ranges in the S position

Operating the shift lever or shift paddle switches allows shift ranges to be selected to suit the driving conditions.



- 1 Shift the shift lever to S.

The indicator in the meter cluster will display the selected shift range.



- 2 **Higher shift range:**


Move the shift lever in the "+" direction, or pull the "+" shift paddle switch toward you.

### **Lower shift range:**

Move the shift lever in the "-" direction, or pull the "-" shift paddle switch toward you.



## ■ Manual Transmission (If Equipped)

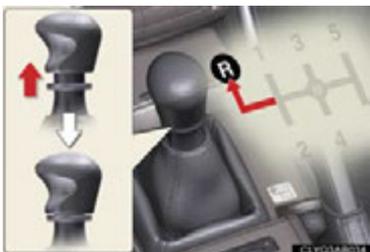

To operate the shift lever, the clutch pedal must be fully depressed.

To shift into R, the ring on the shift lever must be pulled up.

Shift the shift lever to R only when the vehicle is stationary.

## Multi-information Display


The multi-information display shows information about your vehicle, including the items shown below.

### Display information



- Trip information
  - Outside temperature
  - Driving range
  - Average fuel consumption
  - Average fuel consumption after refueling
  - Current fuel consumption
  - Average vehicle speed
  - Gear position display (automatic transmission only)
- Satellite switch mode display
- Intuitive parking assist display (if equipped)
- Warning messages

### Changing the display of trip information

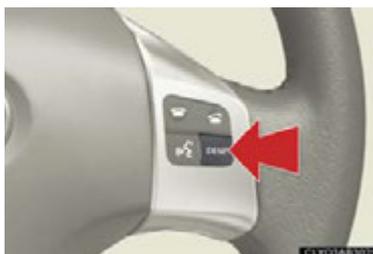

Trip information items can be switched by pressing the DISP switch.

- When using intuitive parking assist, the appropriate display is shown on the screen.
- In the event that a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Satellite Switches

The satellite switches can be used to change the settings of various functions. Settings are shown on the multi-information display.



The satellite switches can be used to change the settings of the following items.

- Intuitive parking assist (if equipped)
- Tire pressure warning system initialization
- ID code selection for the tire pressure warning system
- Vehicle speed indicator
- Tacho indicator

### ■ Changing the ON/OFF settings




- 1 To cycle through the functions, press either the left or right selector switch.



- 2 To change the settings, press the ON/OFF button.

For detailed information of changing the settings, see the Owner's Manual.

## Turn Signal Lever

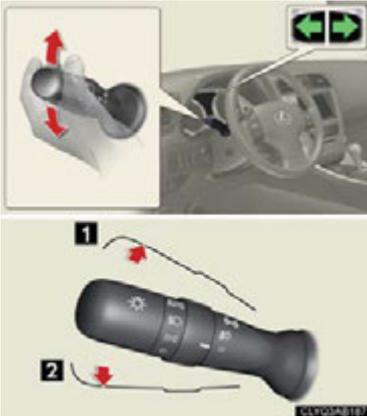

- 1 Right turn signal
- 2 Left turn signal

To signal a lane change, move the lever partway and hold.

## ECT Switch (Automatic Transmission)

Use the ECT switch to select the driving mode that best suits the driving and road conditions.



- 1 **Power mode**  
For more powerful acceleration and uphill driving.
- 2 **Normal mode**
- 3 **Snow mode**  
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or snow mode.

## ETCS Switch (Manual Transmission)

Use the ETCS switch to change to snow mode when starting or accelerating on snow-covered roads or other slippery surfaces.



An indicator comes on when in snow mode. Press again to return to normal mode.

## Intuitive Parking Assist (If Equipped)


The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

### Turning the system on and off

The system can be turned on and off using the satellite switch. (→P.19)

### Multi-information display

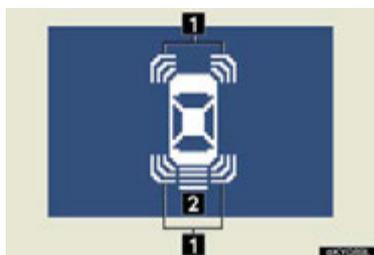


Sensors are used to detect obstacles near the vehicle. The distance to a detected obstacle is shown by the number of indicator bars.

- 1** Indicates obstacles detected by the corner sensors
- 2** Indicates obstacles detected by the back sensors

## Cruise Control

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

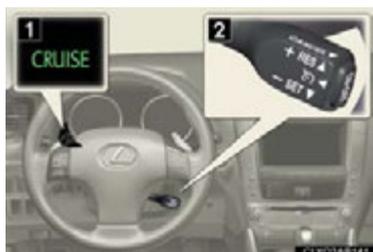

- 1 Indicator
- 2 Cruise control switch

### Setting the speed



- 1 Press the ON-OFF button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### Canceling



- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the ON-OFF button.

### Adjusting the speed setting





- To **increase speed**: push the lever up.
- To **decrease speed**: push the lever down.

Release the lever when the desired speed is reached.


# Headlights

## ► Type A

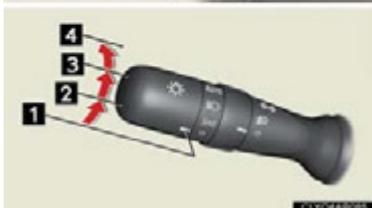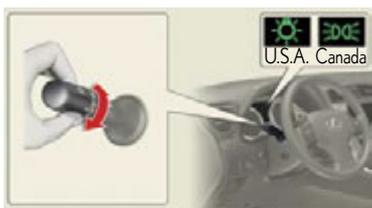


- 1**  The daytime running lights turn on.
- 2**  The side marker, parking (vehicles with halogen headlights), daytime running lights, tail, license plate and instrument panel lights turn on.
- 3**  The headlights and all lights listed above (except daytime running lights) turn on.
- 4** **AUTO** The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

## ► Type B

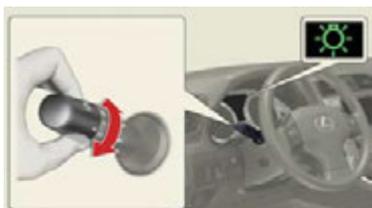



- 1** **OFF** The daytime running lights turn on.
- 2**  The side marker, parking (vehicles with halogen headlights), daytime running lights, tail, license plate and instrument panel lights turn on.
- 3**  The headlights and all lights listed above (except daytime running lights) turn on.
- 4** **AUTO** The headlights, parking lights, daytime running lights and other lights turn on/off automatically in accordance with ambient light levels.

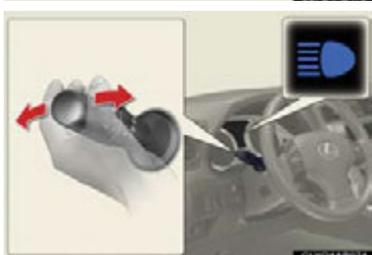

To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

## Fog Lights



### ► Type A

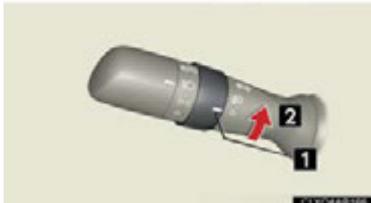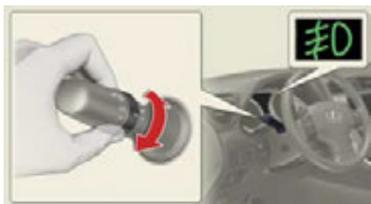

The fog lights can be used only when the headlights (low beam) are on.

- 1  Turns the front fog lights off
- 2  Turns the front fog lights on

### ► Type B

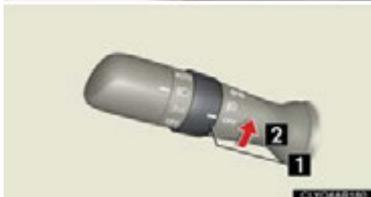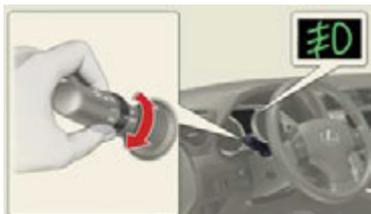

The fog lights can be used only when the headlights (low beam) are on.

- 1 **OFF** Turns the front fog lights off
- 2  Turns the front fog lights on

## Windshield Wipers and Washer

### Intermittent wiper with interval adjuster (if equipped)

#### ► Type A



- 1  Off
  - 2  Intermittent windshield wiper operation
  - 3  Low speed windshield wiper operation
  - 4  High speed windshield wiper operation
  - 5  Temporary operation
- Releasing the lever returns to .

#### ► Type B



- 1 **OFF** Off
  - 2 **INT** Intermittent windshield wiper operation
  - 3 **LO** Low speed windshield wiper operation
  - 4 **HI** High speed windshield wiper operation
  - 5 **MIST** Temporary operation
- Releasing the lever returns to **OFF**.



Intermittent operation: Wiper interval can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

## ■ Rain-sensing windshield wipers (if equipped)

### ▶ Type A



- 1 **○** Off
- 2 **AUTO** Rain-sensing windshield wiper operation
- 3 **▼** Low speed windshield wiper operation
- 4 **▼▼** High speed windshield wiper operation
- 5 **▲** Temporary operation  
Releasing the lever returns to **○**.


### ▶ Type B



- 1 **OFF** Off
- 2 **AUTO** Rain-sensing windshield wiper operation
- 3 **LO** Low speed windshield wiper operation
- 4 **HI** High speed windshield wiper operation
- 5 **MIST** Temporary operation  
Releasing the lever returns to **OFF**.



Automatic operation: Sensitivity can be adjusted by turning the band.

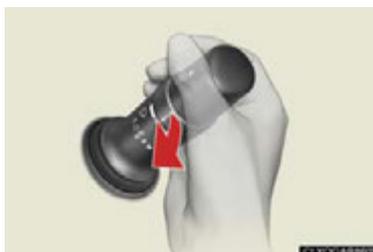

To spray washer fluid, pull the lever. The wipers will operate automatically.

## Rear Window and Outside Rear View Mirror Defoggers

### ► Without navigation system



To defog the rear window and the outside rear view mirrors, press the switch.

Press again to cancel.

### ► With navigation system



To defog the rear window and the outside rear view mirrors, press the switch.

Press again to cancel.

The system turns off automatically after 15 to 60 minutes.

## Instrument Panel Light Control



1 Darker


2 Brighter

## Touch Screen (with navigation system)

By touching the screen with your finger, you can control the audio system and air conditioning system, and adjust the screen display etc. For details, refer to the "Navigation System Owner's Manual".

### Basic operation


The button positions, shapes and screen may slightly vary depending on the type of the touch screen.

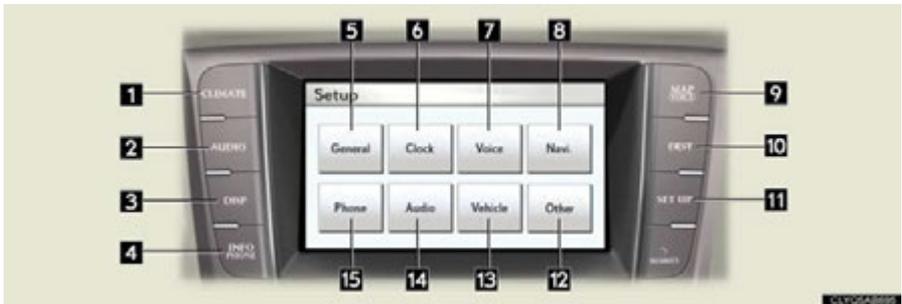

Press the button to display the screen. The "Setup" screen shown in the above illustration is displayed when the "SET UP" button is pressed.

- 1 "CLIMATE": Air conditioning operation screen
- 2 "AUDIO": Audio control screen
- 3 "DISP": Adjust picture quality
- 4 "INFO PHONE": Information screen
- 5 "General": General settings screen
- 6 "Clock": Clock settings screen
- 7 "Voice": Voice settings screen
- 8 "Navi.": Navigation settings screen
- 9 "MAP VOICE": Vehicle's current position
- 10 "DEST": Destination screen
- 11 "SET UP": Setup screen
- 12 "Other": Other settings screen
- 13 "Vehicle": Vehicle settings screen
- 14 "Audio": Audio settings screen
- 15 "Phone": Phone settings screen


## Display

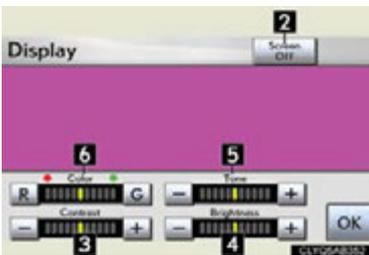

Push the  button on the side of the touch screen to show the “Display” screen.

- 1 Displays the screen in “Day Mode” with the headlight switch on
- 2 Turns the screen off
- 3 Adjust contrast
- 4 Adjust brightness
- 5 Adjust color tone
- 6 Adjust color

## Screen scroll operation

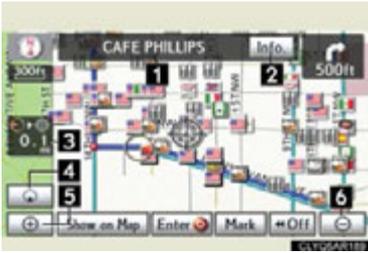

When any point on the map is touched, that point moves to the center of the screen.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

## Setting a route

While route guidance is operating, you can change the route using the following method.



Touch **Route**.

The following settings can be accessed






- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the "Navigation System Owner's Manual".

## Navigation System (If Equipped)

### Register home

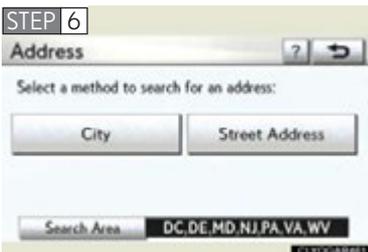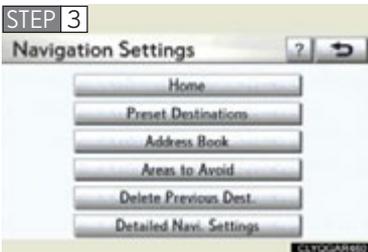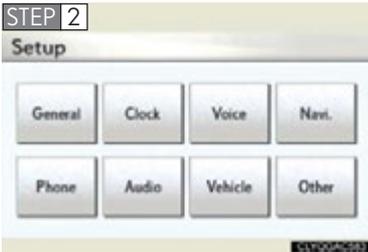

1 Push the **SET UP** button on the side of the touch screen. (→P.30)

2 Touch **Nav.**.

3 Touch **Home**.

4 Touch **Set Home**.

5 Touch **Address**.

6 Touch **City**.

7 Input a city name and touch **OK**.

8 Touch the button of the desired city name from the displayed list.

For security reasons, use a point close to your home instead of your actual home address.

9 Input the street name and touch **OK**.

10 When the desired street name is found, touch the corresponding button.

11 Input a house number and touch **OK**.

12 Touch **Enter**.

13 Touch **OK**.


## Destination input — Search by address


### ► Select by city name



1 Push the  button on the side of the touch screen. (→P.30)

2 Touch  .

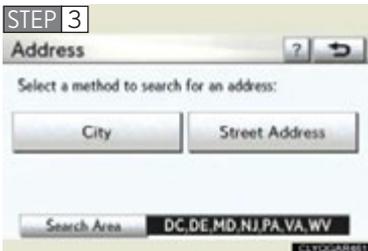

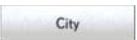3 Touch  .



4 Input a city name and touch  .

5 Touch the button of the desired city name from the displayed list.

6 Input the street name and touch  .




7 When the desired street name is found, touch the corresponding button.

8 Input a house number and touch  .

9 Touch  .

10 Touch  .

► Select by street address

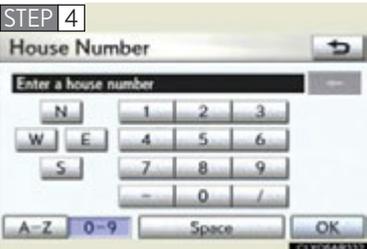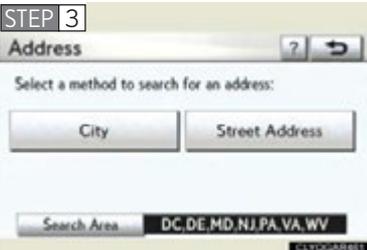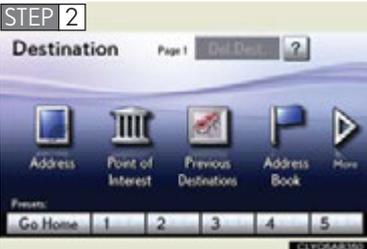

1 Push the  button on the side of the touch screen. (→P.30)

2 Touch  .

3 Touch  .

4 Input a house number and touch  .

5 Input the street name and touch  .

6 When the desired street name is found, touch the corresponding button.


7 Input a city name and touch  .

8 Touch the button of the desired city name from the displayed list.

9 Touch  .


10 Touch  .

## Destination input — Search points of interest by name

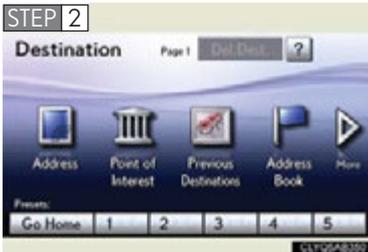


1 Push the  button on the side of the touch screen. (→P.30)

2 Touch .

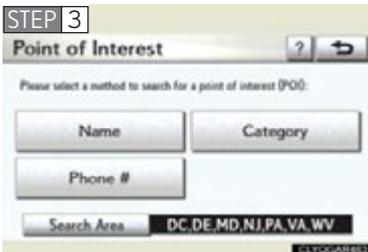

3 Touch .

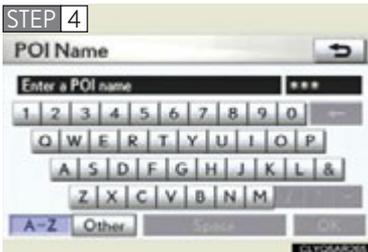


4 Input the name of the point of interest and touch .

5 Touch the button of the desired destination.

6 Touch .


7 Touch .


## Destination input — Search points of interest by category

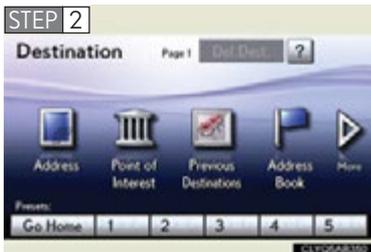

1 Push the  button on the side of the touch screen. (→P.30)

2 Touch .

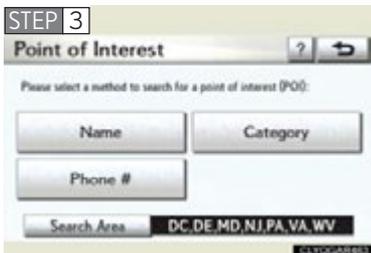

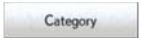3 Touch .



4 Touch .

5 Touch the button of the desired destination and set the search point.


6 Touch the desired point of interest category.

7 Touch the button of the desired item.

8 Touch .


9 Touch .


## Destination input — Search points of interest by telephone number

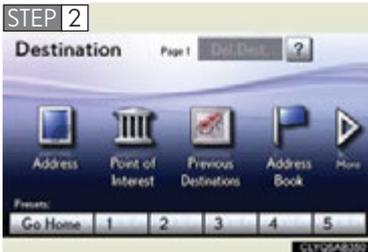

1 Push the  button on the side of the touch screen. (→P.30)

2 Touch .

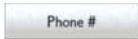
3 Touch .

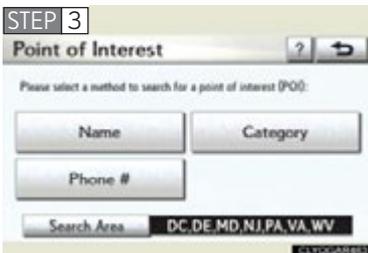

4 Input a telephone number and touch .

5 Touch .



6 Touch .

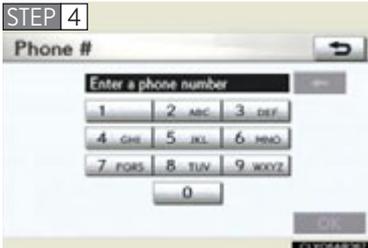

## Hands-free System For Cellular Phone (with navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

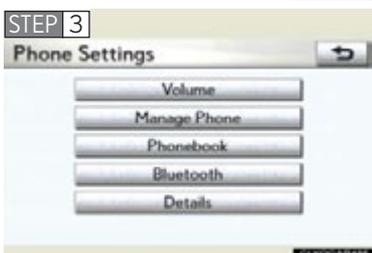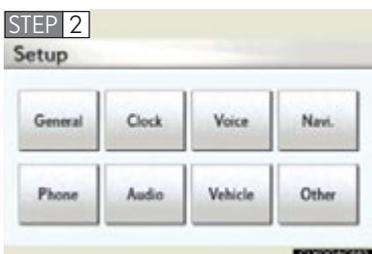

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Push the **SETUP** button on the side of the touch screen. (→P.30)

2 Touch **Phone**.

3 Touch **Manage Phone**.

4 Touch **(add new)** to display the screen for connecting Bluetooth®.

5 Enter the passcode displayed on the screen into the phone.

Refer to the cellular phone user's manual for cellular phone operation.

6 When the connection is completed, **Bluetooth connection successful.** will appear and push the **SETUP** button.

## Phonebook transfer



1 Push the **SET UP** button on the side of the touch screen. (→P.30)

2 Touch **Phone**.



3 Touch **Phonebook**.



4 Touch **Manage Contacts**.

5 Touch **Transfer Contacts**.

6 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.


Phonebook transfer may not be possible depending on phone model.

## ■ Registering a voice tag



1 Push the **SET UP** button on the side of the touch screen. (→P.30)

2 Touch **Phone**.

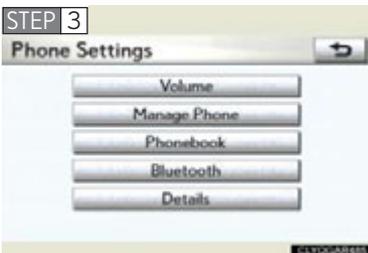

3 Touch **Phonebook**.



4 Touch **Manage Voice Tags**.



5 Touch **New Voice Tag**.

6 Touch the data you want to register.

7 Touch **REC**, and record a voice tag.

8 Touch **OK**.

## ■ Registering a speed dial

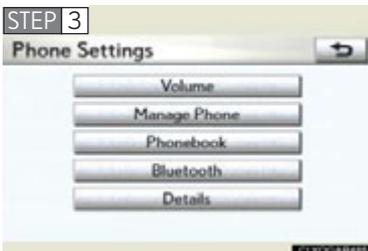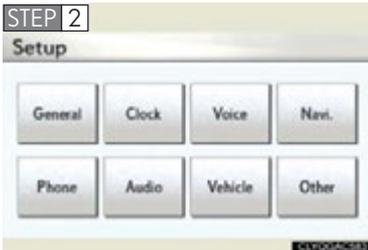

1 Push the **SET UP** button on the side of the touch screen. (→P.30)

2 Touch **Phone**.

3 Touch **Phonebook**.

4 Touch **Manage Speed Dials**.

5 Touch **New Speed Dial**.

6 Touch the data you want to register.

7 Touch the desired phone number.

8 Touch the button you want to register in.

9 The registration completion message is displayed on the screen.

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



1 Press .



2 Follow the voice guidance and say "Phone".

3 Follow the voice guidance and say "Dial by name".



4 Follow the voice guidance and say a contact name.

5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).

6 Follow the voice guidance and say "Dial".




: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial



1 Press .

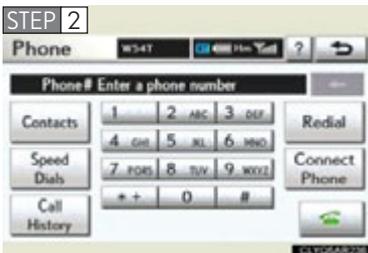


2 Touch .



3 Touch the desired number to call.

## ■ Receiving a call

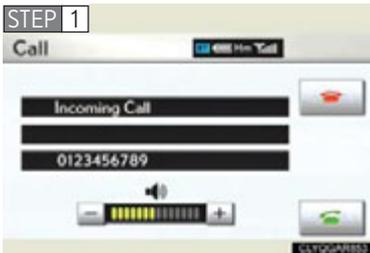

1 When a call is received, this screen is displayed with a sound.

2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

## Audio System (with navigation system)

The button positions, shapes and screen may slightly vary depending on the type of the audio system.

### Basic operation



1 Displays the audio control screen

2 Sound quality modes

3 Audio sources

#### ► Type A

AM•FM: AM radio/FM radio

SAT: Satellite radio

DISC: DVD player (if equipped)

CD: CD player (if equipped)

AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio player

#### ► Type B

AM: AM radio

FM: FM radio

DISC: DVD player (if equipped)

CD: CD player (if equipped)

AUX: Auxiliary audio device/USB memory/iPod/Bluetooth® audio player

4 Power/Volume

### Radio



1 Displays the audio control screen

2 Station presets

3 Scanning radio stations

4 Radio tuner

5 Station select

6 Seek

## ■ Entering station presets

- 1 Touch the desired station by using the tune, seek or scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

## ■ DVD player/CD player

---

### ■ Playing an audio CD



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Eject
- 8 Track select/rewind/fast-forward

### ■ Playing a CD with MP3/WMA files



- 1 Displays the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

## ■ Playing a DVD (DVD player only)



- 1 Displays the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Eject
- 7 Chapter select/rewind/fast-forward

## ■ Loading a disc

- 1 Press the “LOAD” button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

## ■ Loading multiple discs

- 1 Press and hold the “LOAD” button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the “LOAD” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

## ■ Operating an iPod

---



- 1** Displays the audio control screen
- 2** Menu
- 3** Pause/Playback
- 4** Repeat play
- 5** Random playback
- 6** Song list
- 7** Song select
- 8** Song select/rewind/fast-forward

## ■ Remote control (steering wheel switches)

---

The audio system can be operated using the remote control located on the steering wheel.



- 1** Volume
- 2** Radio mode: radio tuner  
DVD mode: track/chapter/disc select  
CD mode: disc/track/file (MP3/WMA) select  
iPod mode: song select
- 3** Power on/change mode: press  
Power off: press and hold

## Air Conditioning System (with navigation system)



- |   |   |
|---|---|
| <b>1</b> Dual mode button                         | <b>8</b> Driver side temperature control                      |
| <b>2</b> Passenger side temperature display       | <b>9</b> "OFF" button   |
| <b>3</b> Fan speed display                        | <b>10</b> Cooling and dehumidification function on/off button |
| <b>4</b> Outside air/recirculated air mode button | <b>11</b> Driver side temperature display                     |
| <b>5</b> Passenger side temperature control       | <b>12</b> Air conditioning operation screen display button    |
| <b>6</b> Windshield defogger                      | <b>13</b> Air outlet display                                  |
| <b>7</b> Automatic mode button                    |   |

### ■ Using the automatic mode

Press **7** to turn on the airflow and **8** to adjust the temperature.

### ■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings  
Touch **1** to turn the "DUAL" indicator off (**DUAL**) and then press **8**.

■ To individually adjust the driver's side and passenger's side temperature settings  
Touch **1** or press **5** to turn the "DUAL" indicator on (**DUAL**) and then press **8** or **5**.

### ■ To turn off the airflow

Press **9**.

## Hands-free System For Cellular Phone (without navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
  - 2 Press  and say "Pair phone".
  - 3 Press  and say a name\*.
- \*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4 Press  and say "Confirm" to display the passkey.
  - 5 Enter the passkey shown on the display into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
  - 6 Once the voice guidance for registration completion is finished, press .



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by number

STEP 1



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

STEP 1



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial

STEP 1



1 Press  .

STEP 2



2 Press the desired preset button (1-6).

3 Press  .

## ■ Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Changing the registered name




- 1 Press  .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Registering a speed dial

STEP 1

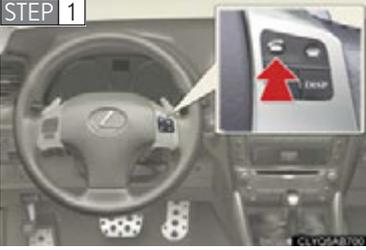

- 1 Press  .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button (1-6).
- 8 Press  and say "Confirm".

STEP 7



: Pressing this switch turns the voice command system on. Say a command after the beep.

## Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

### Basic operation

#### ► Type A



- 1 Sound quality modes
- 2 Automatic Sound Levelizer (ASL)
- 3 Mute
- 4 Audio sources
  - AM·FM: AM radio/FM radio
  - SAT: Satellite radio
  - CD·AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio player
- 5 Power/Volume

#### ► Type B



- 1 Sound quality modes
- 2 Automatic Sound Levelizer (ASL)
- 3 Mute
- 4 Audio sources
  - AM: AM radio
  - FM: FM radio
  - CD: CD player
  - AUX: Auxiliary audio device/USB memory/iPod/Bluetooth® audio player
- 5 Power/Volume

## Radio

### ► Type A



- 1 Traffic information
- 2 Station presets
- 3 Text messages
- 4 Radio tuner
- 5 RDS genre select
- 6 Scanning radio stations
- 7 Seek

### ► Type B



- 1 Traffic information
- 2 Station presets
- 3 Radio tuner
- 4 Station select
- 5 Seek

## Entering station presets

- 1 Press the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

## ■ CD player

### ■ Playing an audio CD

#### ▶ Type A



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Text information
- 5 Disc select
- 6 Disc load
- 7 Search playback
- 8 Playback
- 9 Eject
- 10 Track select/rewind/fast-forward

#### ▶ Type B



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Text information
- 5 Disc select
- 6 Disc load
- 7 Playback
- 8 Eject
- 9 Track select/rewind/fast-forward

## ■ Playing a CD with MP3/WMA files

### ▶ Type A



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Folder select
- 5 Text information
- 6 File select
- 7 Disc select
- 8 Disc load
- 9 Search playback
- 10 Playback
- 11 Eject

### ▶ Type B



- 1 Random playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Folder select
- 5 Text information
- 6 File select
- 7 Disc select
- 8 Disc load
- 9 Playback
- 10 Eject

## ■ Loading a CD

- 1 Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".

## ■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".  
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.  
Repeat the procedure for the remaining CDs.  
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.



## Air Conditioning System (without navigation system)

Owners of models equipped with a navigation system should refer to the “Navigation System Owner’s Manual”.



- |  |  |
|--|--|
| <b>1</b> Driver side temperature control | <b>7</b> Passenger side temperature display        |
| <b>2</b> Switch to automatic mode        | <b>8</b> Micro dust and pollen filter              |
| <b>3</b> Driver side temperature display | <b>9</b> Passenger side temperature control        |
| <b>4</b> OFF button                      | <b>10</b> Windshield defog/defrost                 |
| <b>5</b> Fan speed controls              | <b>11</b> Outside air/recirculated air mode switch |
| <b>6</b> Air flow controls               | <b>12</b> A/C switch                               |
|  | <b>13</b> Dual mode switch                         |

### Using the automatic mode

Press **2** to turn on the airflow and **1** to adjust the temperature.

### Adjusting the temperature

#### To simultaneously adjust the driver's side and passenger's side temperature settings

Press **13** to turn the “DUAL” indicator off (  ) and then press **1**.

#### To individually adjust the driver's side and passenger's side temperature settings

Press **13** or **9** to turn the “DUAL” indicator on (  ) and then press **1** or **9**.

#### To turn off the airflow

Press **4**.

## Voice Command System

### Basic operation

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

STEP 1



1 Press .

2 - If you know the command:

Press  again.

- If you do not know the command:

Follow the voice guidance to learn the command and then press  again.

3 Say a command after the beep.

#### ■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

## Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

#### ● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Enhanced Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM<sup>®</sup> satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### Services

---

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.65)**

- Automatic collision notification<sup>\*1</sup>
- Stolen vehicle location
- Emergency assistance button (SOS)
- Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com](http://www.lexus.com) and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM<sup>®</sup> Sports and Stocks<sup>\*2</sup>**

XM<sup>®</sup> Sports and Stocks is a service included with XM<sup>®</sup> satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeather™\*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

- **XM® NavTraffic\*3**

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

\*1: U.S. Patent No. 7,508,298 B2

\*2: Available at no extra charge with an active XM® satellite radio subscription.

\*3: Available via separate XM® subscription(s).


## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM NavTraffic® and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

## Door Locks

### Locking the vehicle from inside

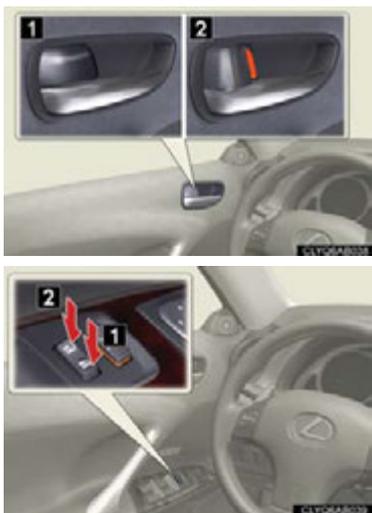

#### ► Inside lock button

- 1 Locks
- 2 Unlocks

#### ► Door lock switch

Operates all door locks.

- 1 Locks
- 2 Unlocks

### Locking the vehicle from outside

Using the entry function or wireless remote control (→P.8, 9)

### Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Always set the child protector locks when children are seated in the rear seat.

## Power Windows



### 1 Power window switches

To open: press the switch.

To close: pull the switch up.


Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

### 2 Window lock switch

The window lock switch disables the operation of passenger window switches.

## Moon Roof (If Equipped)

### Opening and closing

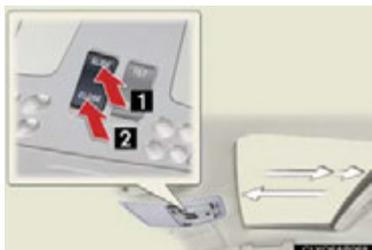


### 1 Open

The moon roof stops slightly before the fully opened position.

To fully open, press the switch again.

### 2 Close

### Tilt up and down

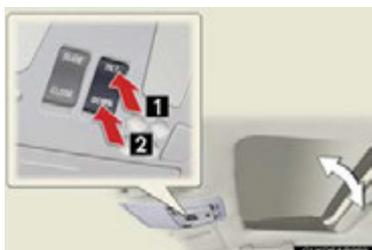

### 1 Tilt up

### 2 Tilt down

## Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

After the cap is removed, it can be hung on the inside of the fuel filler door.

## Trunk

### Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.



To disable the trunk opener, turn off the main switch in the glove box.

**1** On

**2** Off

When the trunk opener is disabled, the trunk cannot be opened using the wireless remote control or the entry function.


### Entry function and wireless remote control

→P.8, 9


## What to do if ...

### List of Warning/Indicator Lights




Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

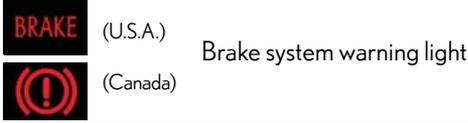



Stop the vehicle immediately.

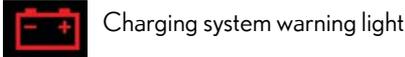

Have the vehicle inspected immediately.

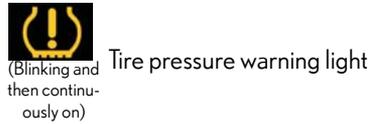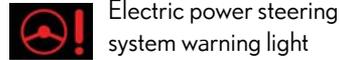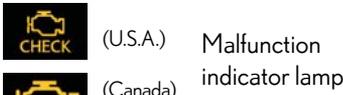

Have the malfunction repaired immediately.

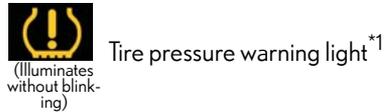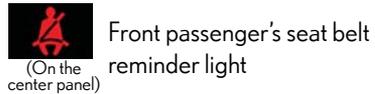

For further information, refer to the Owner's Manual.

## See the Owner's Manual



Turn signal indicator



Headlight high beam indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



ECT SNOW indicator <sup>\*2</sup>



ETCS SNOW indicator <sup>\*3</sup>



ECT PWR indicator <sup>\*2</sup>



Shift position and shift range indicators <sup>\*2</sup>



Cruise control indicator



Front fog light indicator



Intuitive parking assist indicator <sup>\*4</sup>



(Flashes)

Slip indicator



SRS airbag on-off indicator



VSC off indicator

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

<sup>\*2</sup>: Vehicles with automatic transmission


<sup>\*3</sup>: Vehicles with manual transmission

<sup>\*4</sup>: If equipped

## What to do if ...

### If the electronic key does not operate properly

#### Unlocking and locking the doors

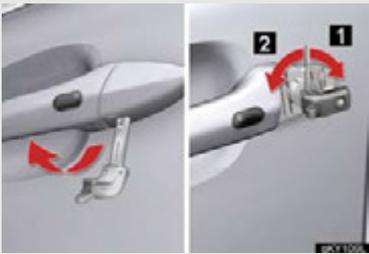

To unlock or lock the vehicle, use the mechanical key to remove the lock cover on the driver's door handle. The mechanical key is stored inside the electronic key.

- 1** Unlocks
- 2** Locks

#### Starting the engine



- 1** Depress the brake pedal (for automatic transmission) or clutch pedal (for manual transmission).
- 2** Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3** Press the "ENGINE START STOP" switch within 10 seconds of the buzzer, keeping the brake pedal (for automatic transmission) or clutch pedal (for manual transmission) depressed.




If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## If the engine doesn't start

Make sure that the correct operating procedures have been followed.


### ► Automatic transmission

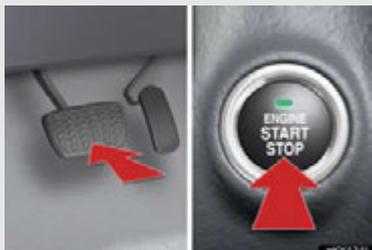

#### Brake/clutch pedal

Make sure that the brake pedal (for automatic transmission) or clutch pedal (for manual transmission) is firmly depressed when attempting to start the engine. (→P.14)

### ► Manual transmission

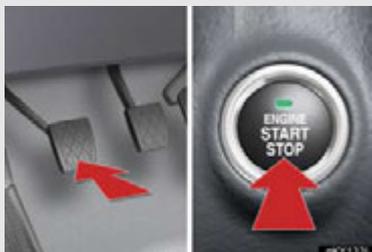

#### Steering wheel lock

Make sure that the steering wheel lock is released.



To release the steering wheel lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. (→P.10)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

### Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	Tried to lock the doors using the entry function while the electronic key is still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
	Closed the trunk while the electronic key is still inside and all doors are locked	Retrieve the electronic key from the trunk and close the trunk lid.
Exterior alarm sounds once for 60 seconds	Tried to exit the vehicle with the electronic key and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	Tried to lock the vehicle using the entry function while a door is open	Close all of the doors and lock the doors again.
Interior alarm sounds continuously*	Tried to open the door and exit the vehicle without shifting the shift lever to P	Shift the shift lever to P.
Interior alarm pings continuously	Switched to ACCESSORY mode while the driver's door is open (Opened the driver's door when the "ENGINE START STOP" switch is in ACCESSORY mode.)	Close the driver's door.
	Turned the "ENGINE START STOP" switch OFF while the driver's door is still open	Close the driver's door.

\*: Vehicles with automatic transmission only

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
Wireless remote control	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Automatic door lock function to be activated if door is not opened after being unlocked	On	Off
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	60 seconds	30 seconds
			120 seconds
	Operation signal (Emergency flashers)	On	Off
	Operation signal (Buzzer)	On	Off
	Door lock buzzer	On	Off
	Trunk unlocking function	On	Off
	Trunk unlocking operation	Push and hold	Push twice
			One short push
Panic function	On	Off	

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Speed-detecting automatic door lock function (Manual transmissions)	On	Off
	Speed-detecting automatic door lock function (Automatic transmissions)	Off	On
	Opening driver's door unlocks all doors (Manual transmissions)	On	Off
	Opening driver's door unlocks all doors (Automatic transmissions)	Off	On
	Shifting gears to P unlocks all doors	On	Off
	Shifting gears to position other than P locks all doors	On	Off
Steering wheel	Auto tilt-away function	On	Off
Power windows	Linked door key operation	Open and close	Off
			Open only Close only
	Wireless remote control linked operation	Off	Open only
Moon roof	Linked door key operation	Open and close	Off
			Open only Close only
			Slide only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	Off	Open only
	Linked operation of components when wireless remote control is used	Slide only	Tilt only

Item	Function	Default setting	Customized setting
Automatic light control system	Light sensor sensitivity	Level 3	Level 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Lights	Daytime running light system (U.S.A. only)	On	Off
Windshield wipers and washer	Switching operation when the vehicle is stationary	On	Off
	Drip prevention function	On	Off
	Time elapsed before the drip prevention function operates	Variable depending on the vehicle speed	3 seconds
Intuitive parking assist	Back sensor operation display and buzzer	On	Off
	Buzzer volume	Level 3	Level 1 to 5
	Distance which a sensor detects	4.9 ft. (150 cm)	2.0 ft. (60 cm)
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	On	Off
	Operation after the "ENGINE START STOP" switch is turned OFF	On	Off
	Front footwell lights	On	Off
	Shift lever light	On	Off
	Outer foot lights	On	Off
	Seat belt reminder	Vehicle speed linked seat belt reminder buzzer	On





### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.