

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System*	
Adjusting the temperature	58
Air conditioning control screen	59
Using automatic mode.....	60
Adjusting the temperature for driver and passenger seats separately ("DUAL" mode).....	60
Audio System (with Lexus Display Audio)*	
Display Audio operation buttons.....	54
Using the steering wheel switches to change audio sources	54
Audio menu screen	55
Operating the audio system using the steering wheel switches	57
Audio System (with navigation system)*	
Audio control screen.....	44
Remote control (steering wheel switches).....	44
Basic operation	45
Radio.....	46
DVD player/CD player.....	46
Operating an iPod.....	48
Automatic High Beam	15
BSM (Blind Spot Monitor)	28
Cruise Control	21
Dynamic Radar Cruise Control	23
Floor Mat Installation	4
Garage Door Opener	68

*: This feature may be operated by Voice command (See P.62)

Hands-free System For Cellular Phone (with Lexus Display Audio)*	
How to register a Bluetooth® phone.....	51
Registering favorites.....	51
Dialing.....	51
Dialing from the phonebook.....	51
When the phonebook is empty.....	52
Dialing from favorites.....	52
To answer the phone.....	53
To refuse a call.....	53
Operating a telephone using the steering wheel switches.....	53
Hands-free System For Cellular Phone (with navigation system)*	
Bluetooth® phone pairing.....	39
Contacts transfer.....	40
Registering the contacts in the favorites list.....	41
Calling by name.....	42
Calling by favorites list.....	42
Calling using e-mail/SMS/MMS message.....	43
Receiving a call.....	43
Steering switches.....	43
Headlights	14
Intuitive Parking Assist	27
LDA (Lane Departure Alert)	26
Lexus Display Audio Controller	49
Lexus Enform	72
Lexus Enform Safety Connect	70
Multi-information Display	12


*: This feature may be operated by Voice command (See P.62)

Navigation System*	
Register home	33
Destination input — Search by address	34
Destination input — Search points of interest by name	36
Destination input — Search points of interest by category	37
Destination input — Search points of interest by telephone number	38
Voice Command System.....	62
Portable Audio Device Ports	68
Remote Touch	30
Seat Heaters/Seat Ventilators	61
Tire Pressure Warning System	29
Turn Signal Lever	11
Voice Command System*	
Basic operation	62
Command list.....	63
Windshield Wipers and Washer	17
XM Satellite Radio	74


*: This feature may be operated by Voice command (See P.62)

Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

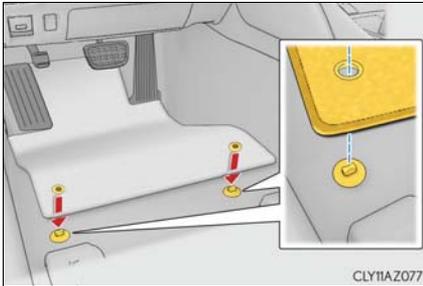

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

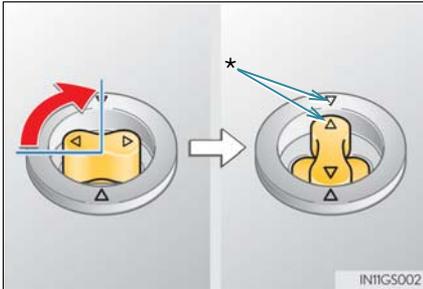

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the \triangle marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Overview

Instrument Panel

Windshield wiper and washer switch P.17

Multi-information display P.12


Turn signal lever P.11

Headlight switch P.14

Fog light switch*^{*}

See P.8

See P.7

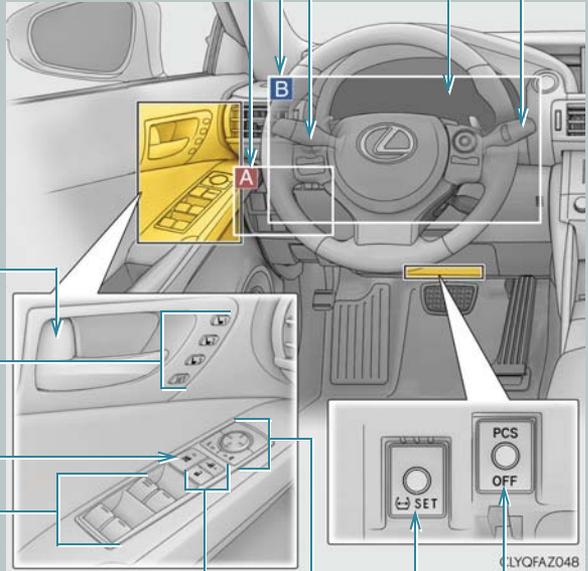

Inside lock buttons*^{*}

Driving position memory switches*^{*}

Window lock switch*^{*}

Power window switches*^{*}


Door lock switches*^{*}

Outside rear view mirror switches*^{*}

Tire pressure warning reset switch P.29

PCS OFF switch*^{*}

CLY0FAZ048

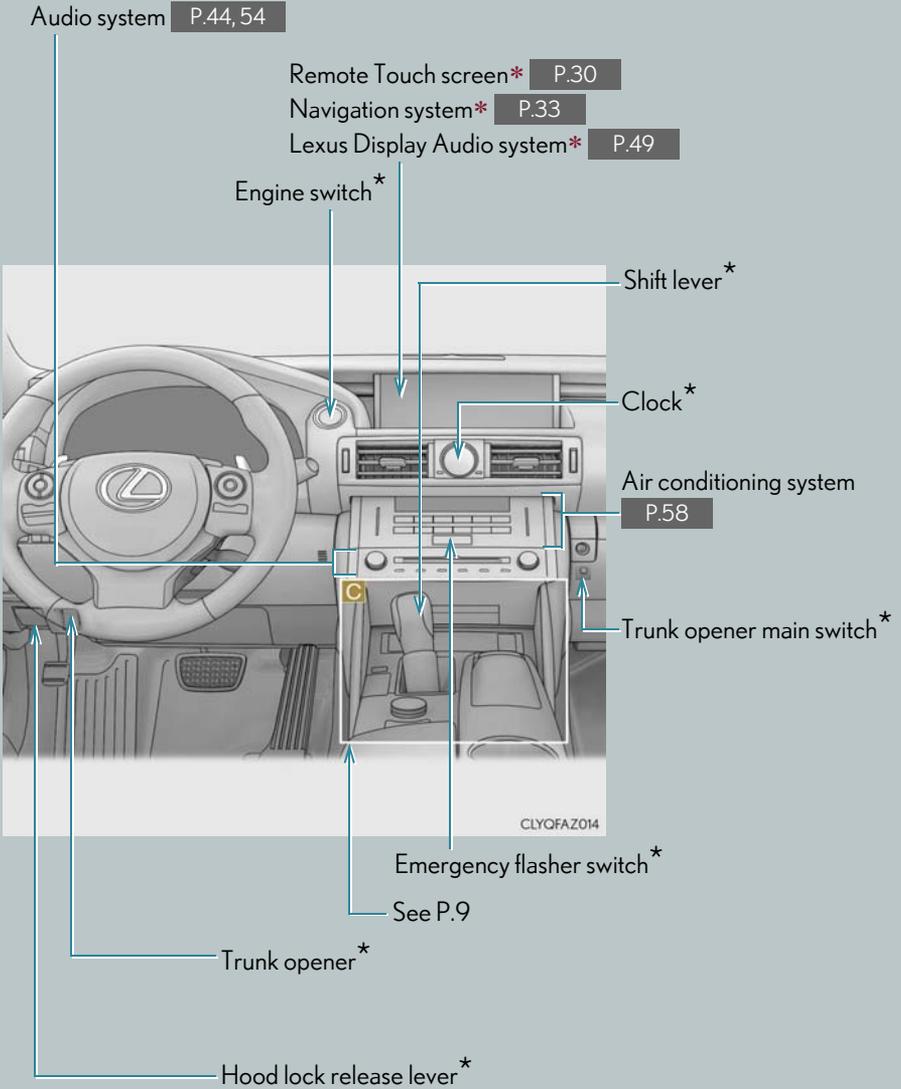

*: If equipped
 *: Refer to "OWNER'S MANUAL".

Overview

Instrument Panel


A

Windshield wiper de-icer switch*^{*1}

Automatic high beam switch* P.15

Odometer/trip meter and trip meter reset button^{*1}

Instrument panel light control switches^{*1}

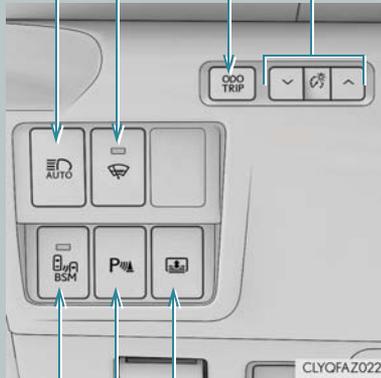

Rear sunshade switch*^{*1}

Intuitive parking assist switch*^{*2} P.27


BSM (Blind Spot Monitor) main switch* P.28

B

Meter control switches P.13

Audio remote control switches
P.44, 57

Paddle shift switches*¹

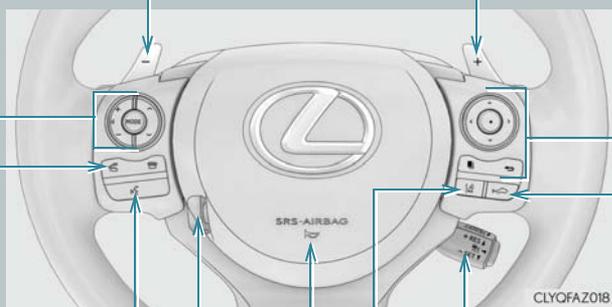

Talk switch
P.43, 53

Horn*¹

Cruise control switch
P.21, 23

Tilt and telescopic
steering control switch*¹

Telephone switches
P.43, 53

LDA (Lane Departure Alert)
switch* P.26

Vehicle-to-vehicle distance button* P.24

*: If equipped


*¹: Refer to "OWNER'S MANUAL".

*²: For vehicles with a navigation system, refer to "NAVIGATION SYSTEM OWNER'S MANUAL".

Overview


Instrument Panel

C

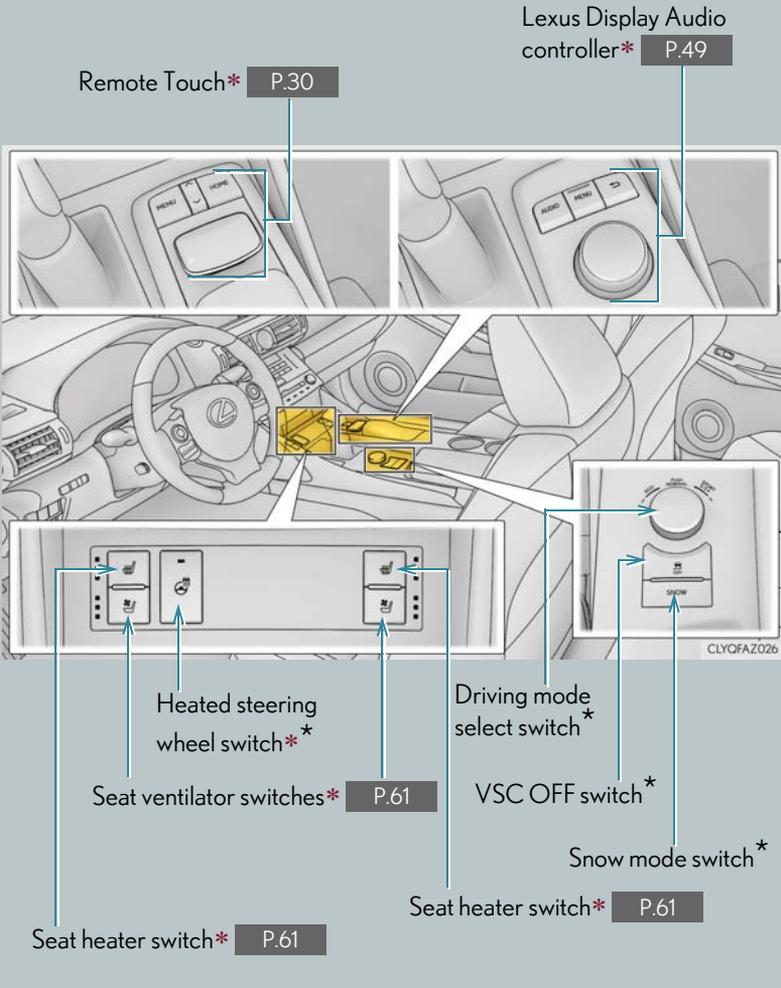

*: If equipped

*: Refer to "OWNER'S MANUAL".

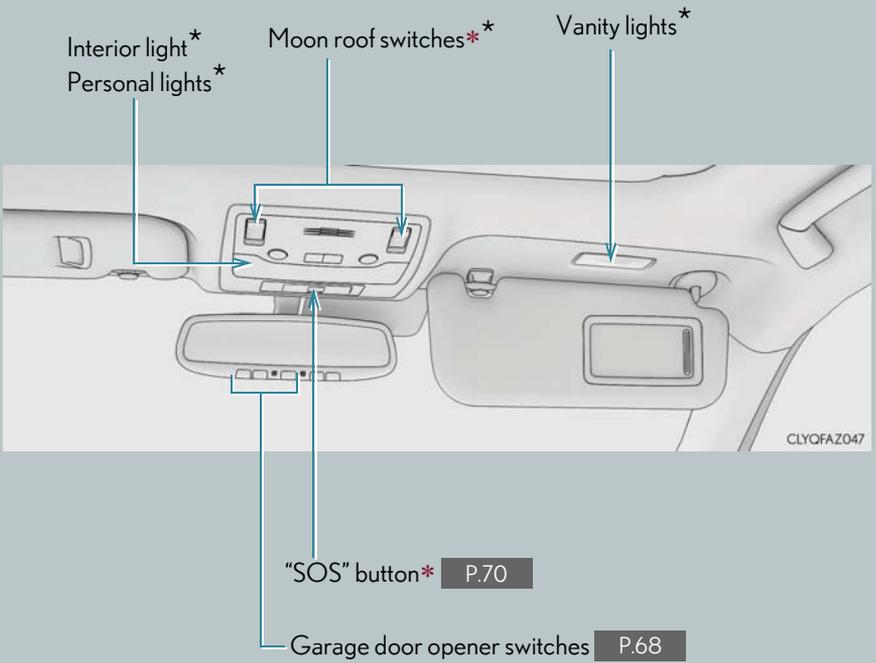


*: If equipped

*: Refer to "OWNER'S MANUAL".

Turn Signal Lever

The lever will return to its original position after operation.

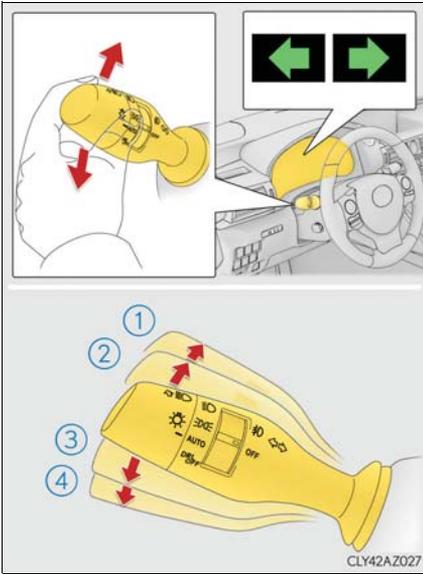

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing

Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.

■ Customization

The number of times the turn signals flash during a lane change can be changed.

Multi-information Display

The multi-information display presents the driver with a variety of vehicle data.



Drive information

Select to display various drive data.



Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the meter using the meter control switches.



Dynamic radar cruise control operational status

(vehicles with a dynamic radar cruise control)

Select to display the operational status of the dynamic radar cruise control.

(→P. 23)

The  tab will change to  when the vehicle is in constant speed control mode. (→P. 25)

If LDA (Lane Departure Alert) is activated, the operational status of the LDA system will also be displayed. (If equipped)



LDA (Lane Departure Alert) operational status

(vehicles with LDA but without a dynamic radar cruise control)

Select to display the operational status of the LDA.



Warning message display


Select to display warning messages and measures to be taken if a malfunction is detected.



Settings display

Select to change the meter display settings.

■ Operating the meter control switches

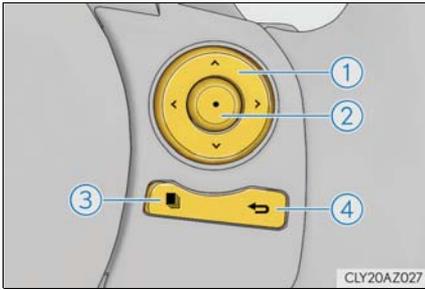

The multi-information display is operated using the meter control switches.

① Select an item/change pages

② Enter/Set

► Except F SPORT models

③ Press: Displays the screen registered to

When no screen has been registered, the drive information screen will be displayed.

Press and hold: Registers the currently displayed screen to

When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.

► F SPORT models

③ Move the main meter

④ Return to the previous screen


■ If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

■ Move the main meter (F SPORT models)

Moves between center and right-side positions.




Headlights

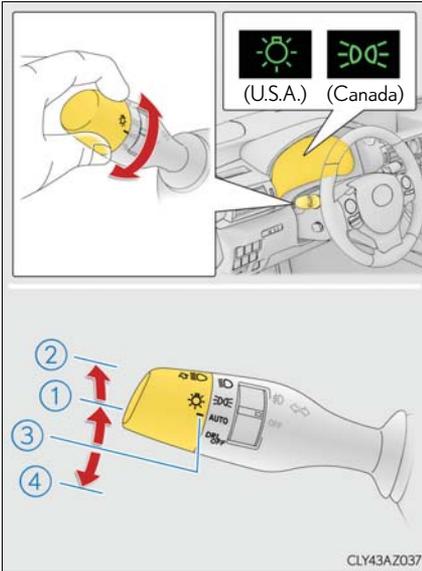

- ① The side marker, tail, license plate, instrument panel and daytime running lights turn on.
- ② The headlights, parking lights and all lights listed (except daytime running lights) above turn on.
- ③ **AUTO** The headlights, parking lights, daytime running lights and all the lights listed above turn on and off automatically. (When the engine switch is in **IGNITION ON** mode.)
- ④ **DRL** **OFF** (U.S.A.)
○ The daytime running lights turn (Canada) on.

Turning on the high beam headlights

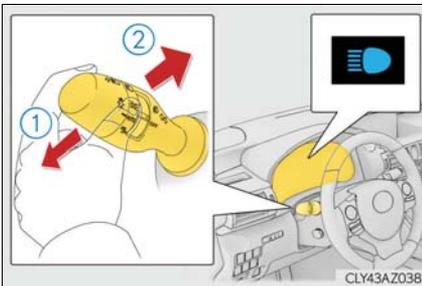


- ① With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


Automatic High Beam (if equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns the high beam on or off as necessary.

■ Activating the Automatic High Beam system

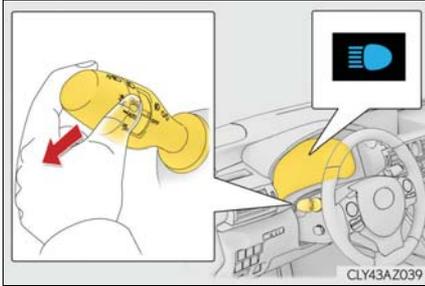


- 1** Push the lever away from you with the headlight switch in the **AUTO** or  position.

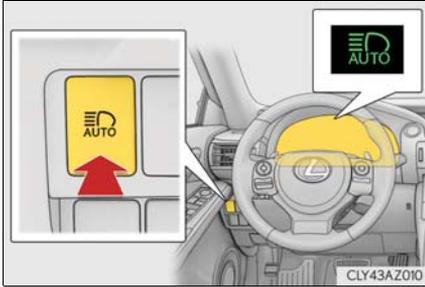

- 2** Press the Automatic High Beam switch. The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

■ Turning the high beam on/off manually

● Switching to low beam

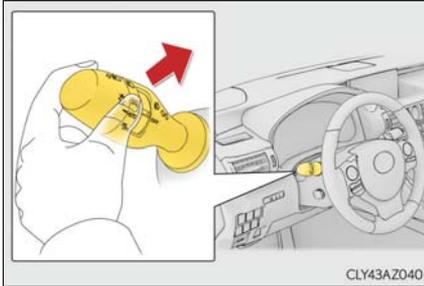


Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

● Switching to high beam

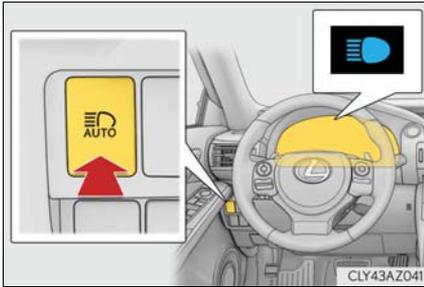

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

Windshield Wipers and Washer



The lever will return to its original position after operation.

► Intermittent windshield wipers with interval adjuster



- ① OFF (U.S.A.) or (Canada)
Up 2 levels
- ② Up 1 level
- ③ (U.S.A.) or (Canada)
Down 1 level
- ④ HI (U.S.A.) or (Canada)
Down 2 levels


Operation Status before operation	OFF or		or	HI or
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change

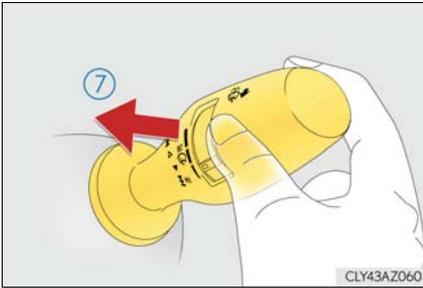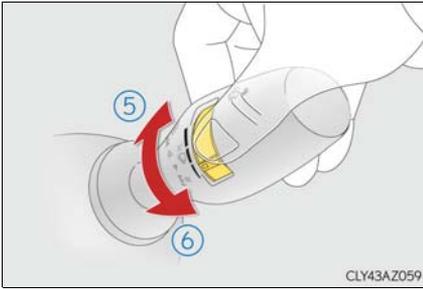

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency
The intermittent windshield wiper operates more frequently as vehicle speed becomes higher.
- ⑦ Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners: When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Rain-sensing windshield wipers

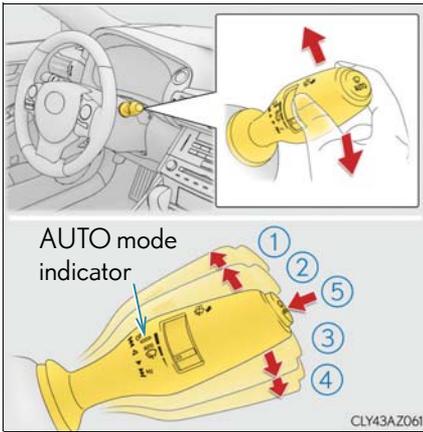


- ① OFF (U.S.A.) or (Canada)
Up 2 levels
- ② Up 1 level
- ③ (U.S.A.) or (Canada)
Down 1 level
- ④ HI (U.S.A.) or (Canada)
Down 2 levels
- ⑤ AUTO AUTO mode on/off switch

With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The AUTO mode indicator will turn on when AUTO mode is selected.

Operation		Status before operation			
		OFF or		or	HI or
Off		Temporary operation	Temporary operation	Low speed operation	High speed operation
Low speed operation		Off	Off	High speed operation	High speed operation
High speed operation		Off	Low speed operation	No change	No change
AUTO mode	Intermittent operation	Off	Temporary operation*	Low speed operation	High speed operation
	Continuously		No change		

*: After temporary operation, the mode will return to AUTO mode.

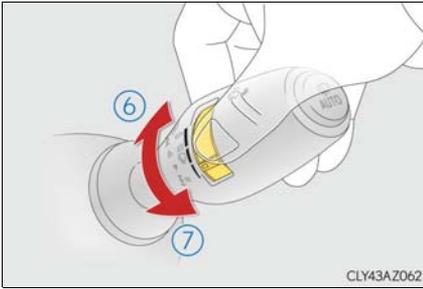

When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity




- ⑧ Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:
When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.


Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

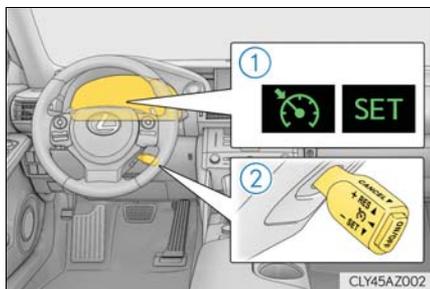


- 1 Indicators
- 2 Cruise control switch

Setting the vehicle speed

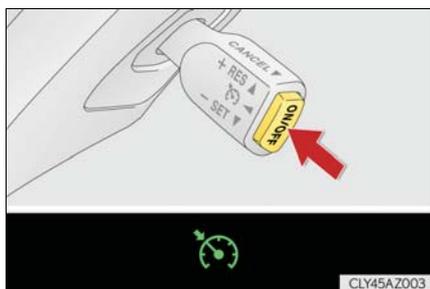


- 1 Press the "ON/OFF" button to activate the cruise control. Cruise control indicator will come on. Press the button again to deactivate the cruise control.

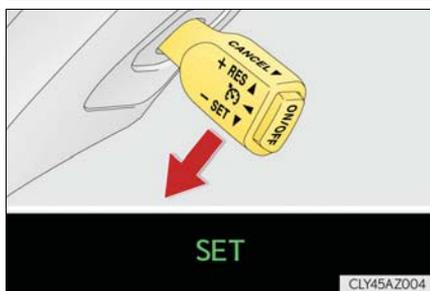


- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed. "SET" indicator will come on. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

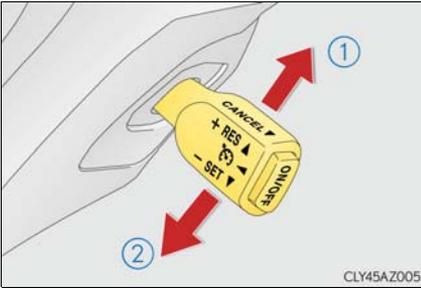

- ① Increases the speed
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

■ Canceling and resuming the constant speed control

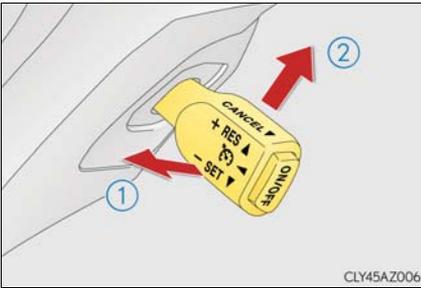


- ① Pulling the lever toward you cancels the constant speed control. The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Dynamic Radar Cruise Control (if equipped)


Without accelerator pedal operation by the driver, in vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates in accordance to the changes in speed of the preceding vehicle. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control on freeways and highways.

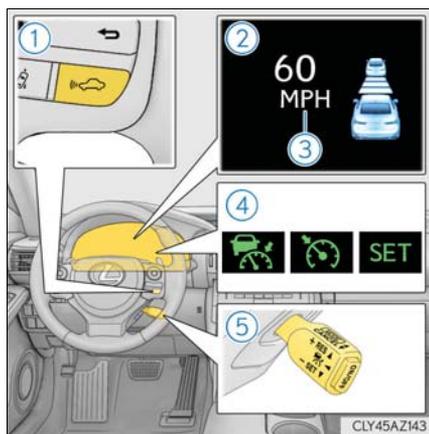


- 1 Vehicle-to-vehicle distance button
- 2 Display
- 3 Set speed
- 4 Indicators
- 5 Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)

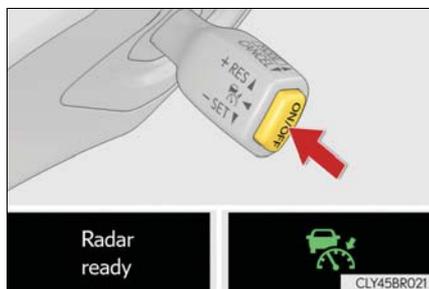


- 1 Press the "ON/OFF" button to activate the cruise control. Radar cruise control indicator will come on and a message will be displayed on the multi-information display. Press the button again to deactivate the cruise control.

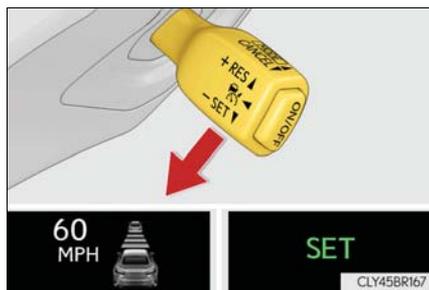

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed. Cruise control "SET" indicator and set speed will be displayed. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

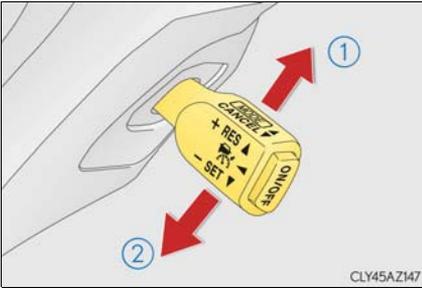


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

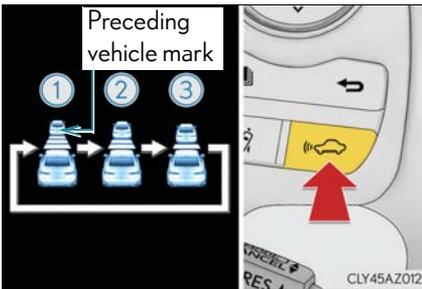

Pressing the button changes the vehicle-to-vehicle distance as follows:

① Long

② Medium

 
③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ Canceling and resuming the speed control



- ① Pulling the lever toward you cancels the speed control. The speed setting is also canceled when the brake pedal is depressed.
- ② Pushing the lever up resumes the speed control and returns vehicle speed to the set speed. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

■ Selecting constant speed control mode

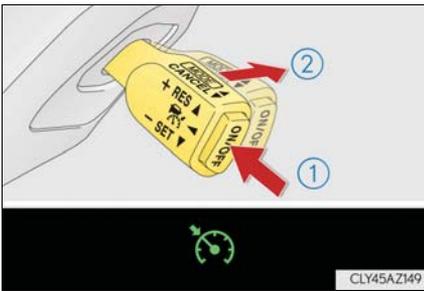


- ① Press the "ON/OFF" button to activate the cruise control. Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode. (Push the lever forward and hold for approximately one second.) Cruise control indicator will come on. When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

LDA (Lane Departure Alert) (if equipped)

While driving on a road that has lane markers, this system recognizes the lane markers using a camera as a sensor to alert the driver when the vehicle deviates from its lane. If the system judges that the vehicle has deviated from its lane, it alerts the driver using a buzzer and indications on the multi-information display.

Turning the LDA system on

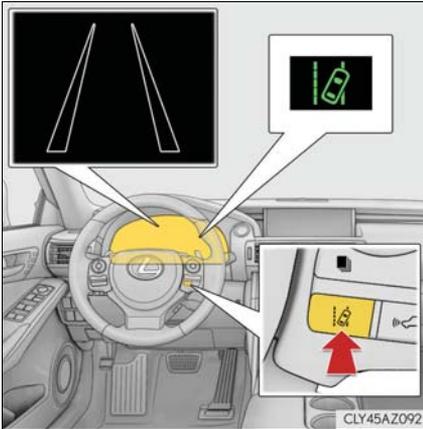

Press the LDA switch to activate the system.

The LDA indicator and lane lines will come on.


Press the switch again to turn the LDA system off.

The LDA system will remain on or off even if the engine switch is turned to IGNITION ON mode.

Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Lexus Display Audio screen (if equipped) and a buzzer. Always check the surrounding area when using this system.

Turning the system on and off

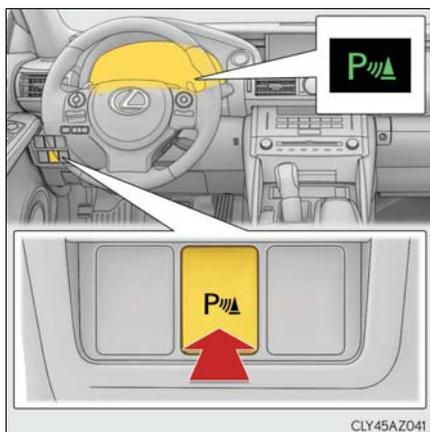


Turns the intuitive parking assist on/off

When on, the indicator light comes on to inform the driver that the system is operational.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function
Assists the driver when backing up

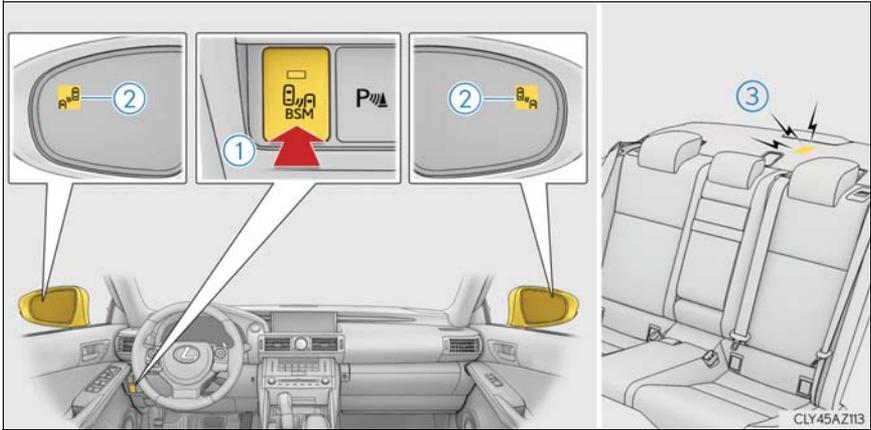

- ① BSM main switch
Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. Common switch for Blind Spot Monitor function and Rear Cross Traffic Alert function.
- ② Outside rear view mirror indicators
Blind Spot Monitor function:
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated and the outside rear view mirror indicator flashes while the turn signal lever is operated.
Rear Cross Traffic Alert function:
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

Initializing the tire pressure warning system




Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

Remote Touch (with navigation system)

The Remote Touch can be used to operate the Remote Touch screens.

Basic operation

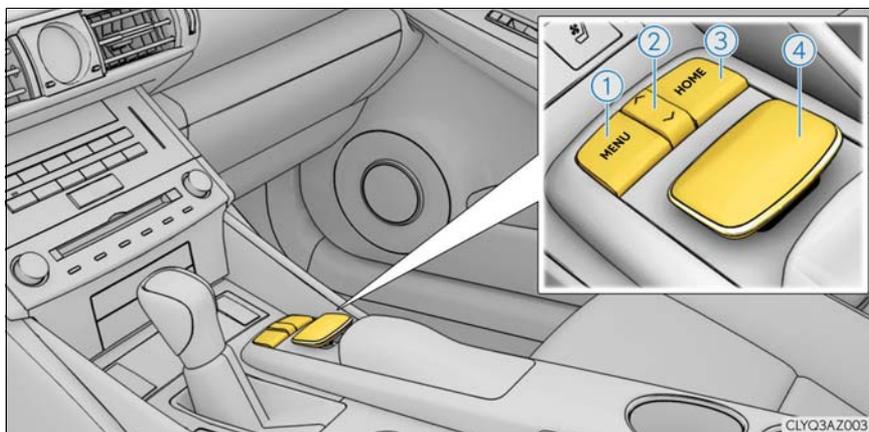

- ① “MENU” button
Press to display the “Menu” screen.
- ② “^•v” button
Press to change the scale of the map and to scroll the list screen.
- ③ “HOME” button
Press to display the home screen.
- ④ Remote Touch knob
Move in the desired direction to select a function, letter and screen button.
Press to enter the selected function, letter or screen button.

Menu



Press the “MENU” button on the Remote Touch to display the “Menu” screen.

- ① “Climate” (→P. 58)
- ② “Nav” (→P. 33)
- ③ “LEXUS App Suite”
- ④ “Info”
- ⑤ “Radio” (→P. 46)
- ⑥ “Media” (→P. 44)
- ⑦ “Phone” (→P. 39)
- ⑧ “Setup”
- ⑨ “Display”

■ Home

▶ Three-way split screen



Press the "HOME" button on the Remote Touch to display the home screen.

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth[®] connection
- ② Select to change the display items/area and the home screen layout.

▶ Two-way split screen



■ Screen scroll operation



To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.


- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

Setting a route


While route guidance is operating, you can change the route using the following method.



1 Select "Options".

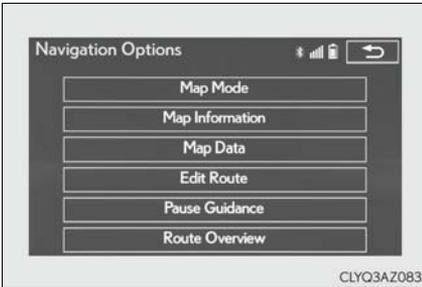

2 Select "Edit Route".

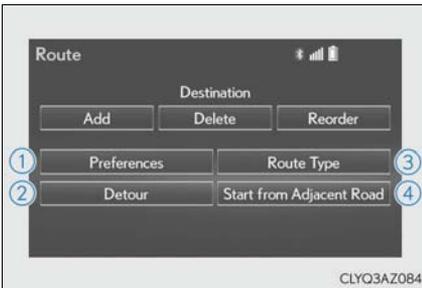



3 Select the item to be set.

- 1 Set route preferences
- 2 Set detours
- 3 Change route type
- 4 Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

Navigation System (if equipped)

Register home

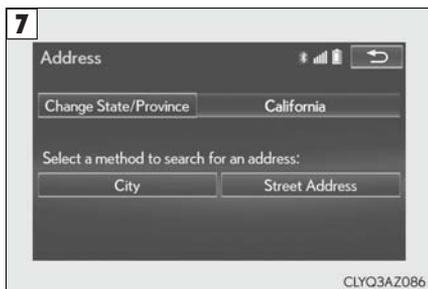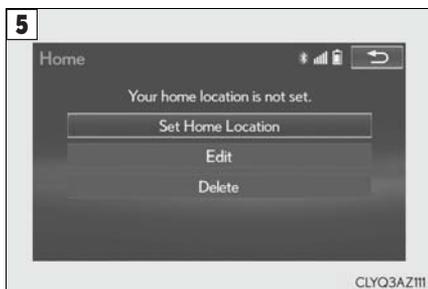

1 Press the “MENU” button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Navigation”.

4 Select “Home”.

5 Select “Set Home Location”.

6 Select “Address”.

7 Select “City”.

8 Enter a city name and select “OK”.

9 Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.

10 Enter a street name and select “OK”.


11 When the desired street name is found, select the corresponding screen button.

12 Enter a house number and select “OK”.

13 Select “OK”.




Destination input — Search by address

Select by city name

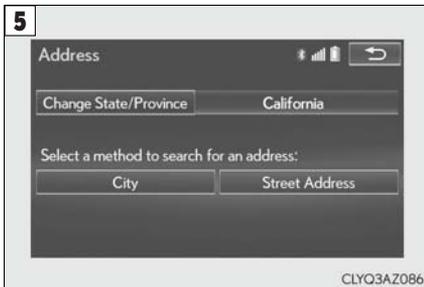


- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.
- 2 Select "Nav".
- 3 Select "Dest".
- 4 Select "Address".
- 5 Select "City".
- 6 Enter a city name and select "OK".
- 7 Select the screen button of the desired city name from the displayed list.
- 8 Enter a street name and select "OK".
- 9 When the desired street name is found, select the corresponding screen button.
- 10 Enter a house number and select "OK".
- 11 Select "Go".
- 12 Select "OK".

Select by street address

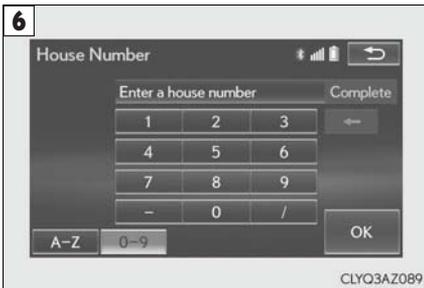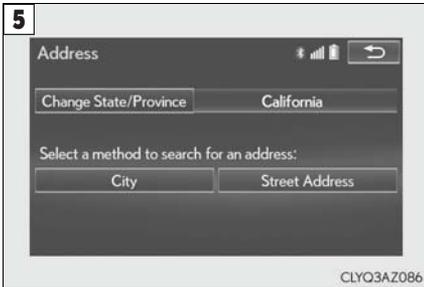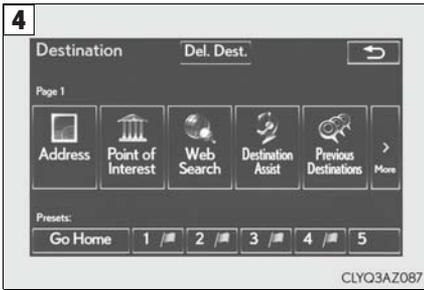

- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.
- 2** Select “Nav”.
- 3** Select “Dest”.
- 4** Select “Address”.
- 5** Select “Street Address”.
- 6** Enter a house number and select “OK”.
- 7** Enter a street name and select “OK”.
- 8** When the desired street name is found, select the corresponding screen button.
- 9** Enter a city name and select “OK”.
- 10** Select the screen button of the desired city name from the displayed list.
- 11** Select “Go”.
- 12** Select “OK”.

Destination input — Search points of interest by name

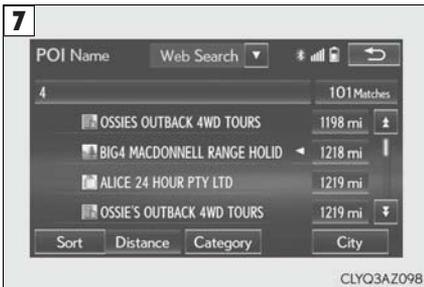

1 Press the “MENU” button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.

2 Select “Nav”.

3 Select “Dest”.

4 Select “Point of Interest”.

5 Select “Name”.

6 Enter a POI name and select “OK”.


7 Select the screen button of the desired POI.

8 Select “Go”.

9 Select “OK”.

Destination input — Search points of interest by category

4

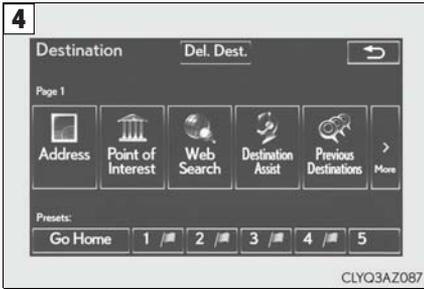

1 Press the "MENU" button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.

2 Select "Nav".

3 Select "Dest".


4 Select "Point of Interest".

5



5 Select "Category".


6

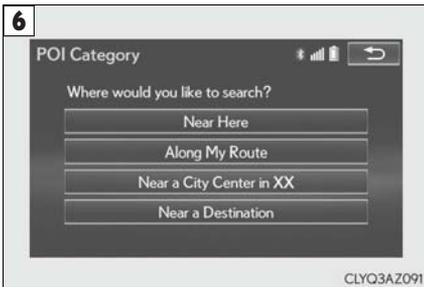

6 Select "Near a Destination".

7 Select the desired POI category from the displayed list.

8

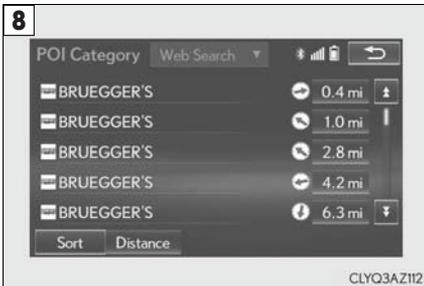


8 Select the screen button of the desired POI.

9 Select "Go".

10 Select "OK".

Destination input — Search points of interest by telephone number

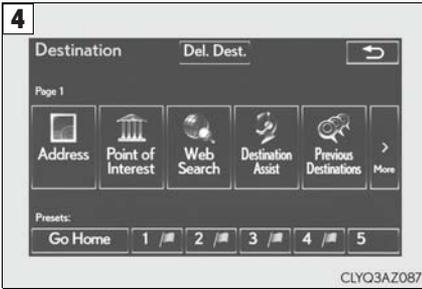

- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.
- 2** Select “Nav”.
- 3** Select “Dest.”.
- 4** Select “Point of Interest”.
- 5** Select “Phone #”.
- 6** Enter a phone number and select “OK”.
- 7** Select “Go”.
- 8** Select “OK”.

Hands-free System For Cellular Phone (with navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press  on the steering wheel.

2 Select "Yes" or "OK".




3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

Refer to the cellular phone user's manual for cellular phone operation.

4 Register the Bluetooth® device using your Bluetooth® device.



5 Check that the following screen is displayed when registration is complete.

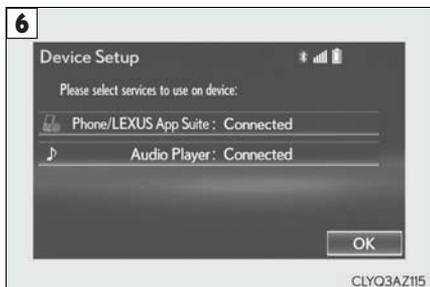

6 Select "OK" when the connection status changes from "Connecting..." to "Connected".

■ Contacts transfer



- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.
- 2** Select “Setup”.
- 3** Select “Phone”.
- 4** Select “Contact/Call History Settings”.
- 5** Select “Update Contacts from Phone”.
- 6** Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

■ Registering the contacts in the favorites list



1 Press the “MENU” button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Phone”.



4 Select “Contact/Call History Settings”.



5 Select “Add Favorite”.




6 Select the desired contact to add to the favorites list.

7 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name

You can call by giving a name registered in the contacts. For details, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.


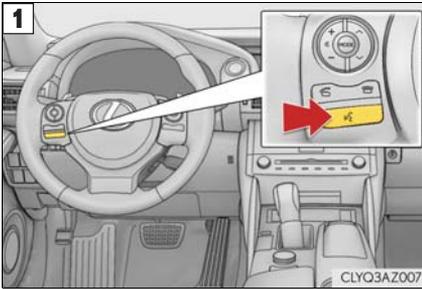


- 1 Press .
- 2 Say “Call <contacts> <phone types>”.




Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by favorites list

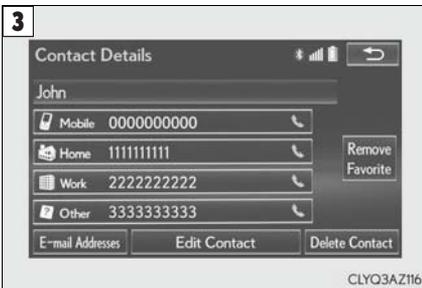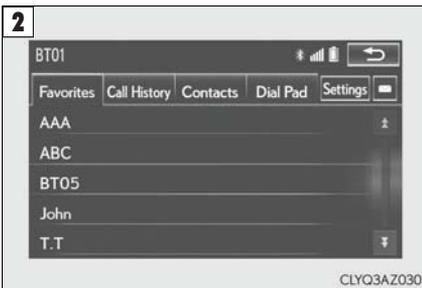

- 1 Press  on the steering wheel.
- 2 Select the “Favorites” tab and select the desired contact.
- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.


■ Calling using e-mail/SMS/MMS message

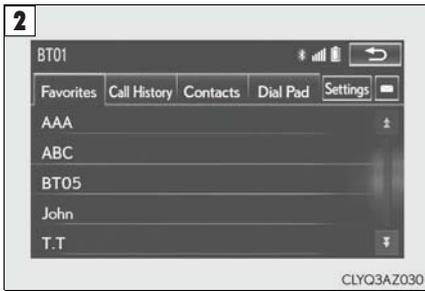

- 1 Press on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the "Call" screen is displayed.

The tab display may vary depending on the type of cellular phone.

 
■ Receiving a call



- 1 When a call is received, this screen is displayed with a sound.
- 2 Press on the steering wheel to talk on the phone.

To refuse the call, press on the steering wheel.

■ Steering switches

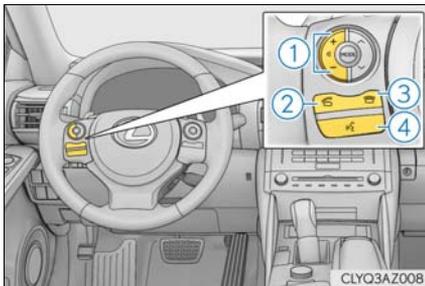

- ① Increases/decreases volume
- ② Sending/Receiving/"Phone" screen display
- ③ End call/Refuse call
- ④ Start the voice command system

Audio System (with navigation system)

Audio control screen


Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 30 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.


Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

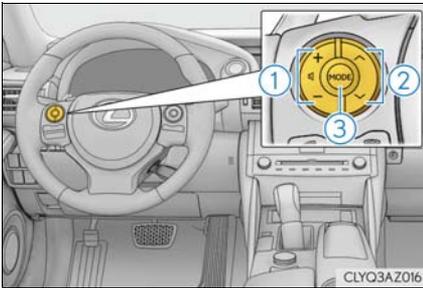

- 1 Increases/decreases volume
- 2 Radio mode: Selects a radio station/channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
iPod mode: Selects a track/file
- 3 Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

Basic operation

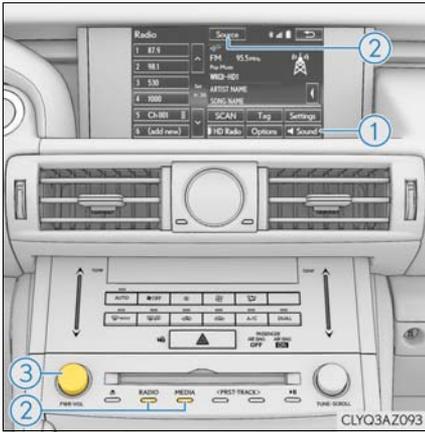

① Sound settings

② Audio sources

“RADIO” button:

AM: AM radio

FM: FM radio

SAT: Satellite radio*¹

APPS (if equipped):

Internet radio broadcast

“MEDIA” button:

DISC: DVD player/CD player

iPod: iPod

USB: USB memory

Bluetooth*²: Bluetooth[®] audio


AUX: Auxiliary audio device

③ Power/Volume

*¹: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 74)

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Radio

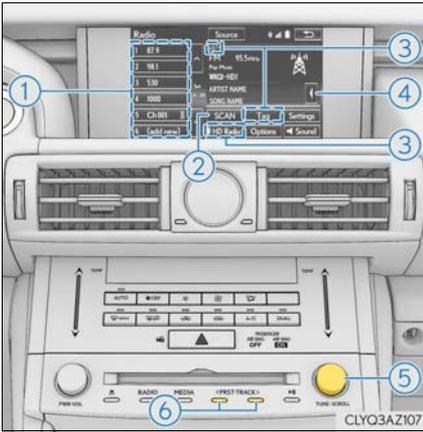

- 1 Tuning to preset stations/channels
- 2 Scanning for receivable stations
- 3 Using HD Radio™ Technology (for U.S.A., if equipped)
- 4 Cache radio operation buttons
- 5 Adjusting the frequency
- 6 Press: Selects a preset station
Press and hold: Seeks for a station


Entering station presets

- 1 Tune in the desired station.
- 2 Select "add new".
- 3 Select "Yes" on the confirmation screen.
- 4 Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


DVD player/CD player

Playing an audio CD

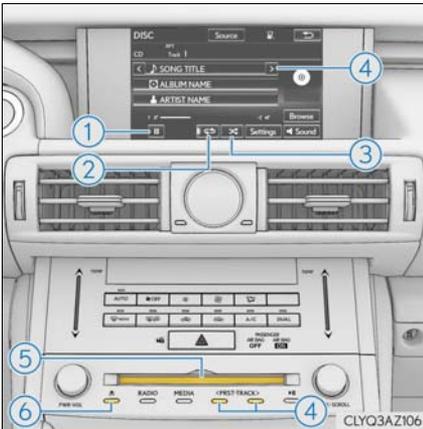


- 1 Playback/pause
- 2 Repeat playback
- 3 Random playback
- 4 Selecting a track
- 5 Disc slot
- 6 CD eject

■ Playing a CD with MP3/WMA/AAC files

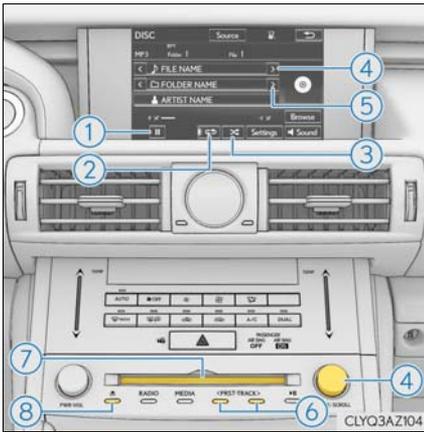

- 1 Playback/pause
- 2 Repeat playback
- 3 Random playback
- 4 Selecting a file
- 5 Selecting a folder
- 6 Selecting a file/fast forward/rewind
- 7 Disc slot
- 8 CD eject


■ Playing a DVD

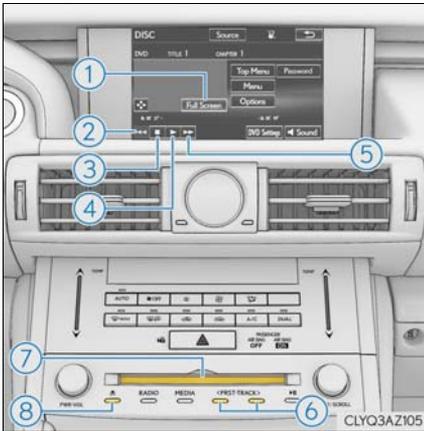

- 1 Image display (full screen)
- 2 Rewind
- 3 Stop
- 4 Playback/pause
- 5 Fast forward
- 6 Selecting a chapter
- 7 Disc slot
- 8 DVD eject


■ Operating an iPod

■ Playing an iPod audio

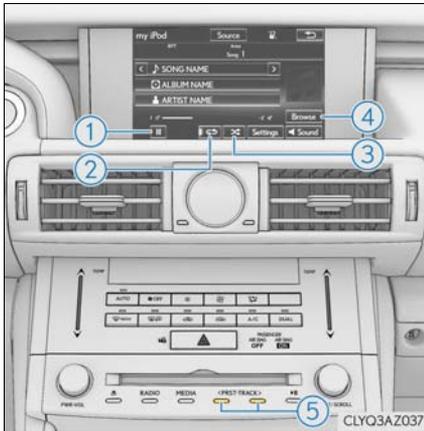

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a play mode
- ⑤ Selecting a track/fast forward/rewind

■ Playing an iPod video

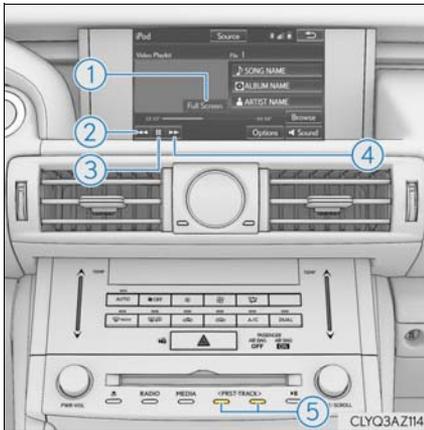


- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

Lexus Display Audio Controller (with Lexus Display Audio)

By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.

Basic operation

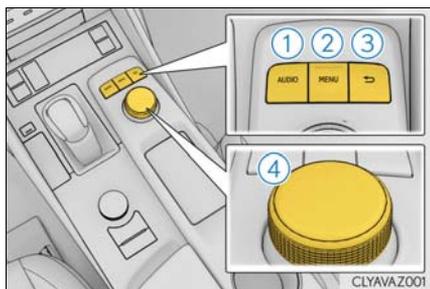

- ① Display the "Source" screen or audio top screen
- ② Display the "Menu" screen (→P. 50)
- ③ Display the previous screen
- ④ Turn or move the controller to select a function and number.
Move the controller to display the left or right side of screen.
Push the controller to enter the selected function and number.

■ “Menu” screen


To display the “Menu” screen, press the “MENU” button on the controller unit.



Button	Function
“Radio”	Display the radio top screen (→P. 55)
“Media”	Display the media top screen (→P. 55)
“Climate”	Automatic air conditioning system (→P. 58)
“Phone”	Display the phone top screen
“Info”	Display the “Information” screen
“Setup”	Setup menu
“Display”	Display settings

■ Screen for display settings

Go to “Display”: “MENU”→ “Display”

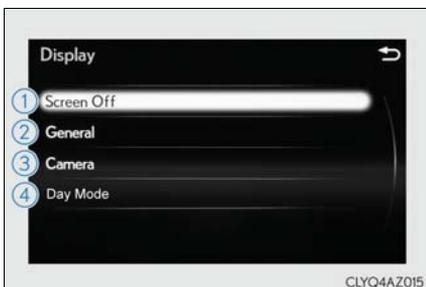

- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the rear view monitor camera.
- ④ Change to day mode.

Hands-free System For Cellular Phone (with Lexus Display Audio)

How to register a Bluetooth® phone

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to "Bluetooth* Setup": "MENU" → "Setup" → "Bluetooth*"
- 3 Move the controller to the left and then select "Add Device"



- 4 When this screen is displayed, input the passcode displayed on the screen into your Bluetooth® phone.

- 5 Register the Bluetooth® phone using your Bluetooth® phone.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "MENU" → "Setup" → "Phone" → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

Dialing

- 1 Go to "Dial Pad": Press the  switch on the steering wheel. → "Dial Pad".
- 2 Input a phone number.
- 3 Press the  switch on the steering wheel or select .

Dialing from the phonebook

- 1 Go to "Contacts": Press the  switch on the steering wheel. → "Contacts".
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the  switch on the steering wheel or press the controller.

■ When the phonebook is empty

You can transfer the phone numbers in a Bluetooth® phone to the system. Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.

- 1 Press the  switch on the steering wheel.
If the phonebook is empty, a message will be displayed.

► For a PBAP compatible Bluetooth® phone and “Automatic Transfer” is off



- 2 To transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Transfer”.
Select “Once” if you want to transfer new contacts from a cellular phone.

► For a PBAP incompatible and OPP compatible Bluetooth® phone



 
- 2 Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.
Select “Add” if you want to add a new contact manually.

■ Dialing from favorites

You can make a call using numbers registered in the favorites.

- 1 Go to “Favorites”: Press the  switch on the steering wheel. → “Favorites”.
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the  switch on the steering wheel or press the controller.

■ To answer the phone




- 1 When a call is received, the following screen is displayed together with a sound.
- 2 Press the  switch on the steering wheel or select .

■ To refuse a call

Press the  switch on the steering wheel or select .


■ Operating a telephone using the steering wheel switches

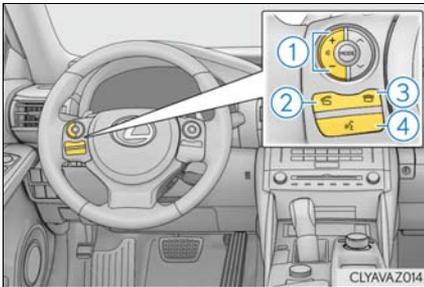

- 1 Volume switch
During an incoming call: Adjusts the ring tone volume
During speaking on the phone: Adjusts in call volume
The voice guidance volume cannot be adjusted using this button.
- 2 Off hook switch
 - Start call
 - Receiving
 - Phone top screen display
- 3 On hook switch
 - End call
 - Refuse call
- 4 Talk switch
Press: Turns the voice command system on
Press and hold: Turns the voice command system off

Audio System (with Lexus Display Audio)

Display Audio operation buttons

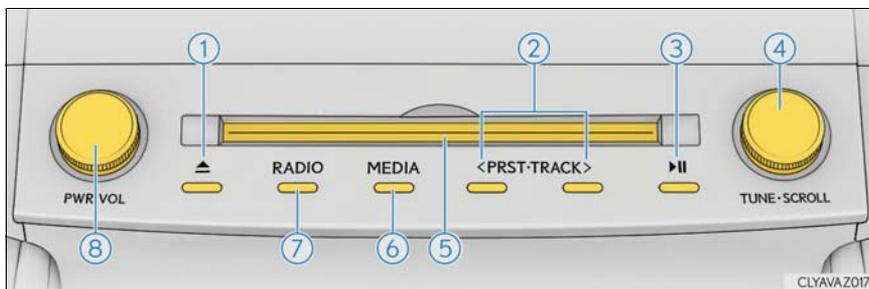

- 1 Eject a disc.
- 2 Seek up or down for a radio station, or to access a desired track or file.
- 3 Except radio and A/V mode: Pause or resume playing a track.
Radio and A/V mode: Turn mute on/off
- 4 Select a radio station band, track or file.
- 5 Disc slot
- 6 Display the media top screen.
- 7 Display the radio top screen.
- 8 Press to turn the audio system on/off, and turn to adjust the volume.

Using the steering wheel switches to change audio sources

Press the "MODE" switch when the audio system is turned on. The audio source changes each time the "MODE" switch is pressed.

■ Audio menu screen

To display the audio menu screen, move the controller to the left while on an audio top screen.

▶ AM, FM radio or XM Satellite Radio*



- ① Scan for receivable stations (AM, FM radio)
- ② Seek a station of the nearest frequency (stops when a station is found) (AM, FM radio)
- ③ Captures the song title and artist name information for potential purchase (when the "HD" indicator on the selected station is appears) (FM radio)
- ④ Changes the channel of HD Radio (HD2, HD3, HD4 where applicable) (FM radio) (for U.S.A., if equipped)
- ⑤ Seek a station of the traffic announcement (FM radio)
- ⑥ Turn HD Radio on/off (AM, FM radio) (for U.S.A., if equipped)
- ⑦ Change radio settings
- ⑧ Change sound settings


*: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 74)

► CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth®




- ① Play or pause a track/file
- ② Select a track/file
- ③ Select a folder/album (MP3/WMA/AAC disc or USB)
- ④ Select and hold: Fast-forward or reverse a track/file
- ⑤ Select a repeat mode.
- ⑥ Select a random/shuffle play mode.
- ⑦ Select a full screen mode (iPod video mode)
- ⑧ Change iPod settings (iPod)
- ⑨ Change USB settings (USB)
- ⑩ Connect a Bluetooth device (Bluetooth®)
- ⑪ Change the cover art settings (CD or MP3/WMA/AAC disc)
- ⑫ Change sound settings

► A/V

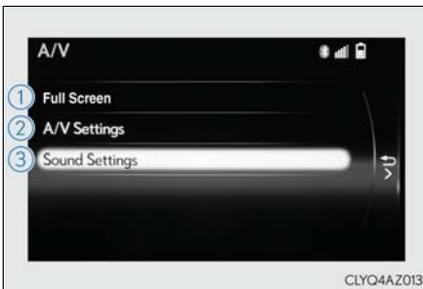


- ① Select full screen mode
- ② Change A/V settings
- ③ Change sound settings

■ Operating the audio system using the steering wheel switches

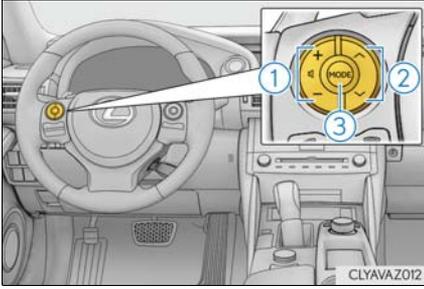


- ① Volume switch
 - Increases/decreases volume
 - Press and hold: Continuously increases/decreases volume
- ② Radio mode:
 - Press: Select a radio station
 - Press and hold: Seek up/down CD, MP3/WMA/AAC disc, Bluetooth[®], iPod or USB mode:
 - Press: Select a track/file/video
 - Press and hold: Fast up/down tracks/files/videos (MP3/WMA/AAC disc, iPod or USB)
- ③ "MODE" switch
 - Turns the power on, selects audio source
 - Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.

Air Conditioning System

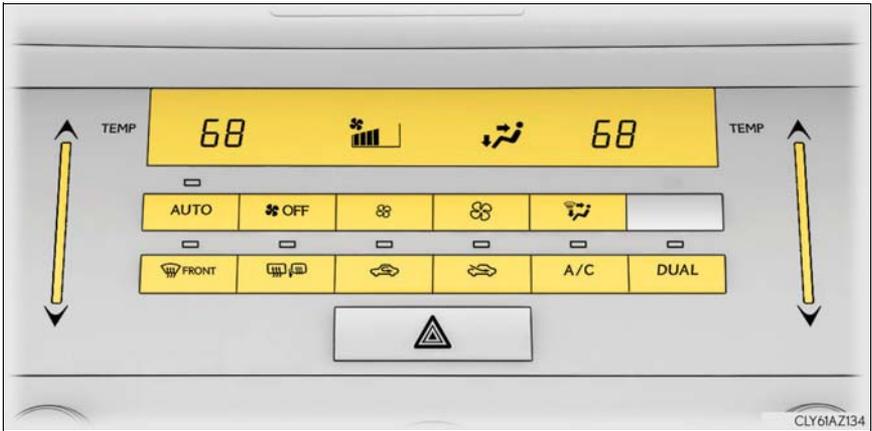

Adjusting the temperature

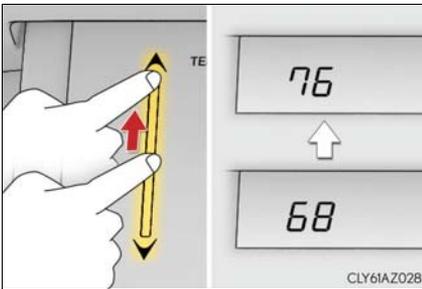

To adjust the temperature setting, touch and slide your finger up or down on the sensor. The temperature setting can also be adjusted by touching on the sensor. When the temperature setting is changed, a buzzer sounds.

Air conditioning control screen

► With a Lexus Display Audio



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select to set auto mode on/off, fan off and displaying the option control screen.
- ④ Select the air flow mode
- ⑤ Adjust the right-hand side temperature setting

► With a navigation system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen
- ⑥ Turn the fan off
- ⑦ Select to set auto mode on/off

Option control screen

The functions can be switched on and off.



- ① Cooling and dehumidification function
- ② Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)
- ③ Removing pollen from the air (Micro dust and pollen filter)

■ Using automatic mode

Press the automatic mode button to turn on the airflow and adjust the temperature setting.

■ Adjusting the temperature for driver and passenger seats separately (“DUAL” mode)

In dual mode, driver and passenger side temperature settings can be adjusted separately.


To turn on the “DUAL” mode, perform any of the following procedures:

- Press “DUAL”.
- Select “DUAL” on the option control screen.
- Adjust the passenger’s side temperature setting.

To cancel the dual mode, press “DUAL”.

Seat Heaters (if equipped)/ Seat Ventilators (if equipped)

■ Seat heaters

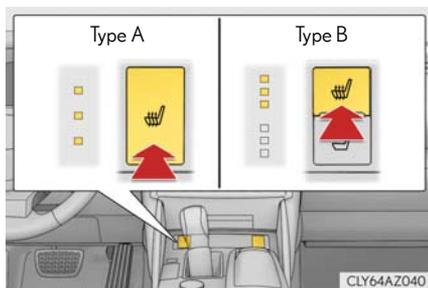

Each time the switch is pressed, the intensity of the seat heater changes and the level indicator lights (amber) light as follows:
Hi (3 segments lit) → Mid (2 segments lit)
→ Lo (1 segment lit) → Off

■ Seat ventilators



Each time the switch is pressed, the intensity of the seat ventilator changes and the level indicator lights (green) light as follows:
Hi (3 segments lit) → Mid (2 segments lit)
→ Lo (1 segment lit) → Off

■ Seat heater timer control


To enable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds once. If a seat heater is turned on while seat heater timer control is enabled, the intensity of the seat heater will automatically change from Hi→Mid→Lo.

The timing of the change in seat heater intensity differs depending on the temperature inside the cabin, etc. when the seat heater is operating.

To disable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds twice.

Voice Command System

Basic operation

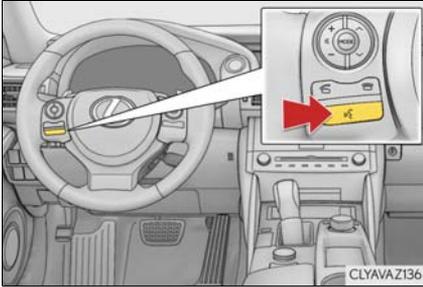

- 1** Press the talk switch.
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.
On the list screen, you can select the desired command.

Continue on to pages 63-67 for a detailed list of Voice Commands for the following categories:

Basic	page 63
Apps	page 63
Navi.....	page 64
Phone	page 64
Radio.....	page 65
Audio	page 65
Info.....	page 66
Other	page 67

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

▶ Basic (vehicles with a Lexus Display Audio System)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab

▶ Basic (vehicles with a navigation system)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hint"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

▶ Apps (vehicles with a navigation system) (for U.S.A., if equipped)

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

► Navi (vehicles with a navigation system)

Command	Action
"Find <POI category>"	Displays a list of <POI category> ^{*1} near the current position ^{*2}
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination(s)
"Previous Destination"	Displays previous destinations

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► **Radio (vehicles with a navigation system)**

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

► **Audio (vehicles with a Lexus Display Audio System)**

Command	Action
"Play Playlist <playlists>"	Plays tracks from the selected playlist
"Play Artist <artist>"	Plays tracks from the selected artist
"Play Song <songs>"	Plays the selected track
"Play Album <albums>"	Plays tracks from the selected album
"Turn Music On/Off"	Turns the audio system on/off
Audio source name	Selects audio source

► **Audio (vehicles with a navigation system)**

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album

► **Info (vehicles with a Lexus Display Audio System)**

Command	Action
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

► **Info (vehicles with a navigation system) (for U.S.A., if equipped)**

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"	Displays the Lexus insider list

► Other (vehicles with a navigation system)

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<XX> degrees"	Changes the set temperature of the air conditioning system to <xx> degrees* ¹
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* ² Audio"	Selects Bluetooth® audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode


*¹: Only within the possible temperature range of the air conditioning system

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

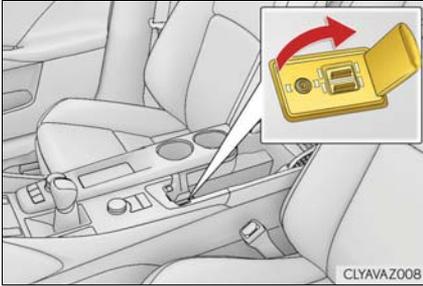

Open the cover and connect the portable audio device.


Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].


Programming the HomeLink[®]

The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

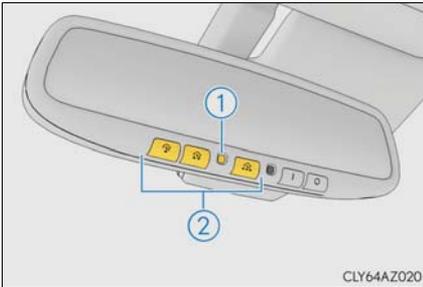

- ① Indicator light
- ② Buttons

■ Programming HomeLink®

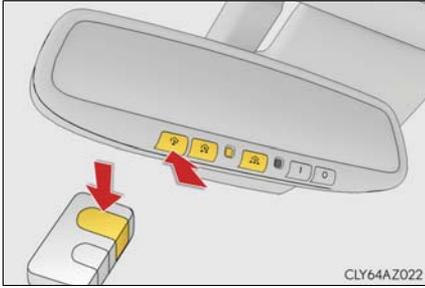

1 Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.

2 Press and hold down the desired HomeLink® button.

3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

4 Press the training button on the motor-head unit in your garage.

5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:


To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®

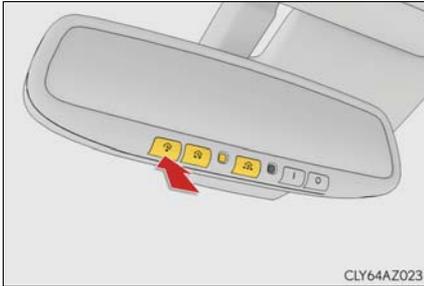


Press the appropriate HomeLink® button.
The indicator light should come on.

Lexus Enform Safety Connect (for U.S.A., if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

■ System components

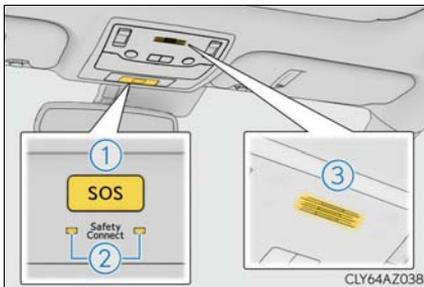

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform (for U.S.A., if equipped)

Lexus Enform is a service that includes Safety Connect, Service Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Function achieved by using a cellular phone (with navigation system)

Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● LEXUS App Suite

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system (with navigation system)

Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● eDestination

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ Function achieved by using DCM

■ Services

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 70)

■ LEXUS Enform Remote

■ Services

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

■ Subscription

→P. 73

XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

- ▶ U.S.A. Customers:
Visit www.siriusxm.com or call 1-877-515-3987
- ▶ Canadian Customers:
Visit www.xmradio.ca or call 1-877-438-9677

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light

ABS

(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light

PCS

(Flashes)

Pre-collision system warning light (if equipped)



Slip indicator



Automatic headlight leveling system warning light



(Blinking and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light*¹



Seat belt reminder light

See the Owner's Manual



Turn signal indicator



Intuitive parking assist indicator (if equipped)



Headlight indicator (U.S.A.)



(Flashes)

Slip indicator



Tail light indicator (Canada)



VSC OFF indicator



Headlight high beam indicator



(Flashes faster)

Pre-collision system warning light (if equipped)



Automatic High Beam indicator (if equipped)



BSM (Blind Spot Monitor) outside rear view mirror indicators (if equipped)



Fog light indicator (if equipped)



Security indicator



Cruise control indicator



Low outside temperature indicator



Dynamic radar cruise control indicator (if equipped)



Eco Driving Indicator Light



Cruise control "SET" indicator



Eco drive mode indicator*²



LDA (Lane Departure Alert) indicator (if equipped)

What to do if...

 Eco drive mode indicator *3	 "SPORT S+" indicator (if equipped) *3
 "SPORT" indicator *2	 Snow mode indicator *2
 "SPORT" indicator (if equipped) *3	 Snow mode indicator *3
 "SPORT S" indicator (if equipped) *3	 "AIR BAG ON/OFF" indicator

For further information, refer to the Owner's Manual.

- *1: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.
- *2: Except F SPORT models
- *3: F SPORT models

If the engine doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal


Make sure that the brake pedal is firmly depressed when attempting to start the engine.

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.

What to do if...

If the electronic key does not operate properly

Unlocking and locking the doors

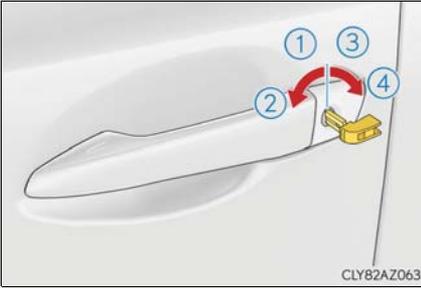


Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof (turn and hold)*
- ③ Unlocks all the doors
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof (turn and hold)*

*: This setting must be customized at your Lexus dealer.


Unlocking the trunk

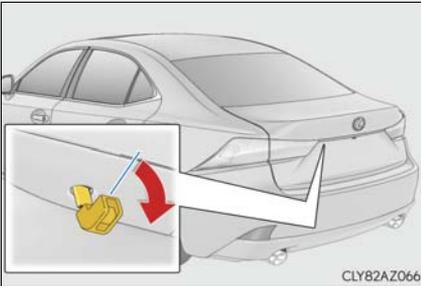

Turn the mechanical key clockwise to open.

What to do if...

 Starting the engine



- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch. When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.

Memo

A large rectangular area with horizontal lines, intended for writing a memo. The lines are evenly spaced and cover the majority of the page's content area.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2015 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.