

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Air Conditioning System*</b>	
Adjusting the temperature .....	53
Air conditioning control screen .....	54
Using automatic mode.....	56
Adjusting the temperature for driver and passenger seats separately ("DUAL" mode).....	56
<b>Audio System (with Lexus Display Audio)*</b>	
Lexus Display Audio operation buttons .....	49
Using the steering wheel switches to change audio sources .....	49
Audio menu screen .....	50
Operating the audio system using the steering wheel switches .....	52
<b>Audio System (with Navigation System)*</b>	
Audio control screen.....	40
Remote control (steering wheel audio switches) .....	40
Basic operation .....	41
Radio.....	41
DVD player/CD player.....	42
Operating an iPod.....	43
<b>Automatic High Beam .....</b>	<b>18</b>
<b>BSM (Blind Spot Monitor).....</b>	<b>30</b>
<b>Dynamic Radar Cruise Control .....</b>	<b>25</b>
<b>Floor Mat Installation .....</b>	<b>4</b>
<b>Garage Door Opener .....</b>	<b>62</b>

\*: This feature may be operated by Voice command (See P.58)

<b>Hands-Free System For Cellular Phone (with Lexus Display Audio)*</b>	
How to register a Bluetooth® device .....	46
Registering favorites.....	46
Dialing.....	46
Dialing from the phonebook .....	46
When the phonebook is empty.....	47
Dialing from favorites.....	47
To answer the phone.....	48
Operating a phone using the steering wheel switches.....	48
<b>Hands-free System For Cellular Phone (with Navigation System)*</b>	
Bluetooth® phone pairing .....	37
Contact transfer .....	38
Calling by name.....	39
Receiving a call.....	39
Steering switches.....	39
<b>Headlights</b> .....	17
<b>Intuitive Parking Assist</b> .....	29
<b>LDA (Lane Departure Alert with Steering Control)</b> .....	28
<b>Lexus Display Audio Controller (with Lexus Display Audio)</b> .....	44
<b>Lexus Enform</b> .....	66
<b>Lexus Enform Safety Connect</b> .....	64
<b>Lexus Safety System +</b> .....	24
<b>Multi-information Display</b> .....	12


\*: This feature may be operated by Voice command (See P.58)

<b>Navigation System*</b>	
Register home .....	35
Destination search.....	36
Voice Command System.....	58
<b>Portable Audio Device Ports .....</b>	<b>52</b>
<b>Remote Touch.....</b>	<b>32</b>
<b>Seat Heaters/Seat Ventilators.....</b>	<b>57</b>
<b>SiriusXM Satellite Radio .....</b>	<b>68</b>
<b>Tire Pressure Warning System.....</b>	<b>31</b>
<b>Turn Signal Lever.....</b>	<b>11</b>
<b>Voice Command System*</b>	
Basic operation .....	58
Command list.....	59
<b>Windshield Wipers and Washer .....</b>	<b>20</b>


\*: This feature may be operated by Voice command (See P.58)

## Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

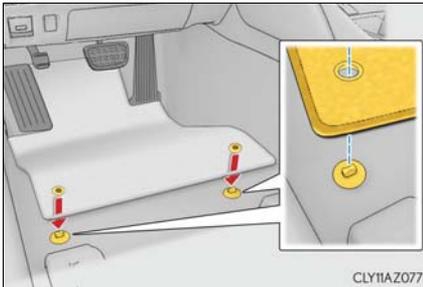

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

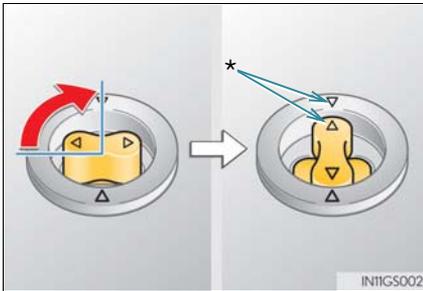

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

# Overview

# Instrument Panel

Windshield wiper and washer switch P.20


Multi-information display P.12

Turn signal lever P.11

Headlight switch P.17

See P.8

See P.7

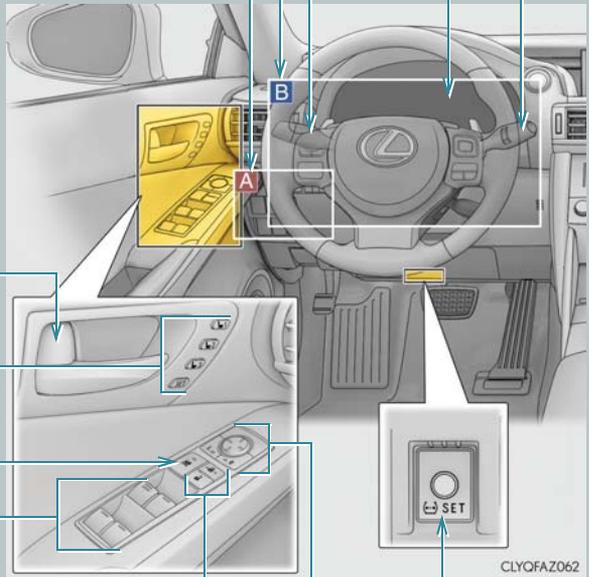

Inside lock buttons \*

Driving position memory switches\*\*

Window lock switch \*

Power window switches \*

Door lock switches \*

Outside rear view mirror switches \*

Tire pressure warning reset switch P.31

CLYQFAZ062

Audio system P.40, 49

Remote Touch screen\* P.32

Navigation system\* P.35

Lexus Display Audio system\* P.44


Engine switch\*

Shift lever\*

Clock\*

Air conditioning system  
P.53

Trunk opener main switch\*

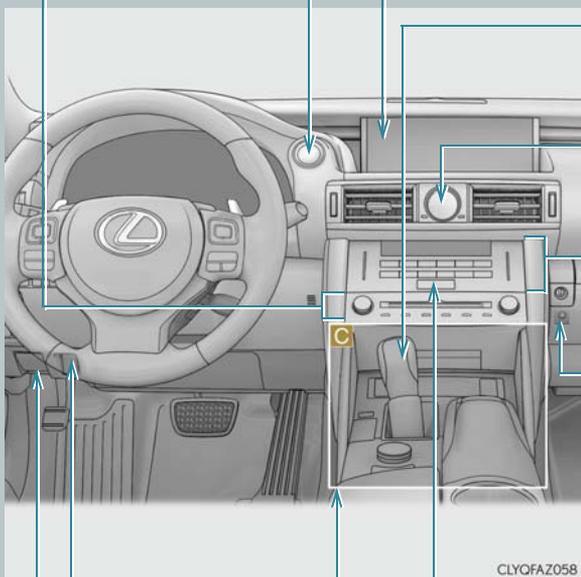

CLYQFAZ058

Emergency flasher switch\*

See P.9


Trunk opener\*

Hood lock release lever\*

\*: If equipped

\*: Refer to "OWNER'S MANUAL".

A

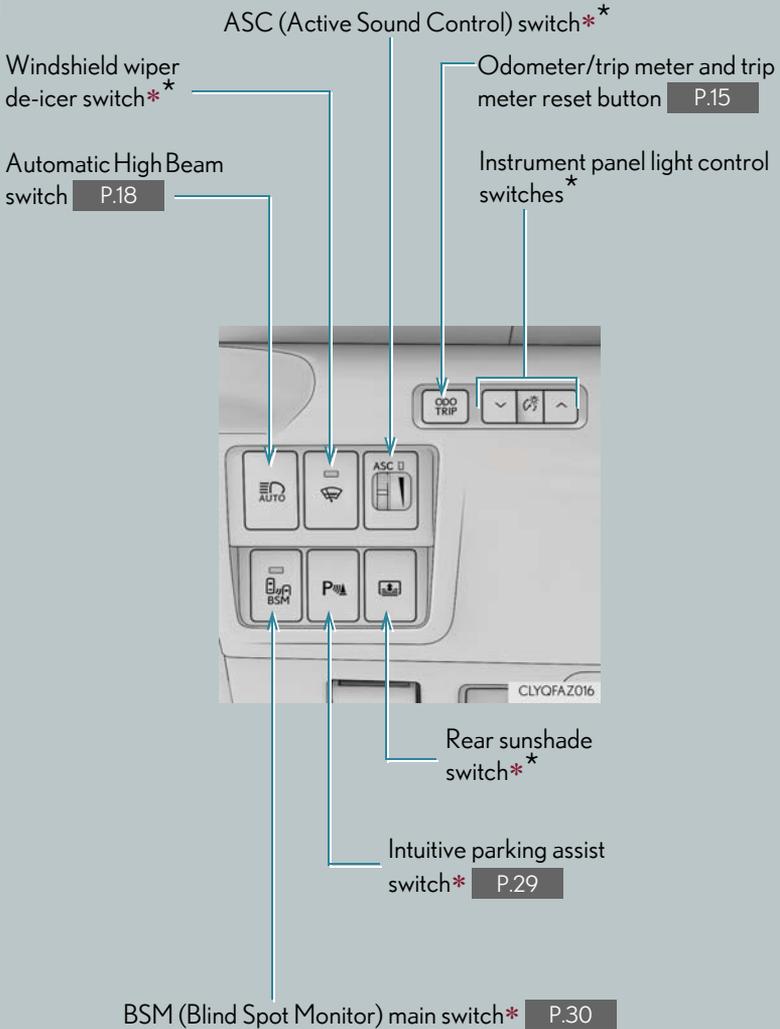


B

Meter control switches P.15

Audio remote control switches  
P.40, 52

Paddle shift switches\*

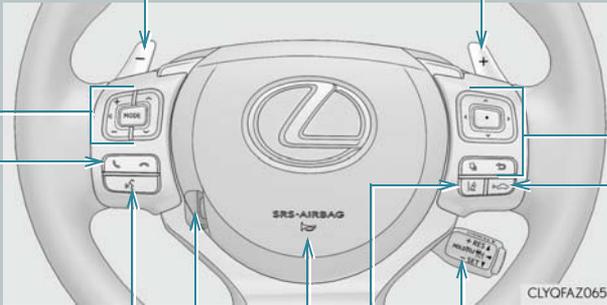

Talk switch  
P.39, 48

Horn\*

Cruise control switch  
P.25

Tilt and telescopic  
steering control switch\*

Telephone switches  
P.39, 48

LDA (Lane Departure Alert with  
steering control) switch P.28

Vehicle-to-vehicle distance switch P.26

\*: If equipped


\*: Refer to "OWNER'S MANUAL".

C

Seat heater switch\* P.57

Lexus Display Audio controller\* P.44

Remote Touch\* P.32

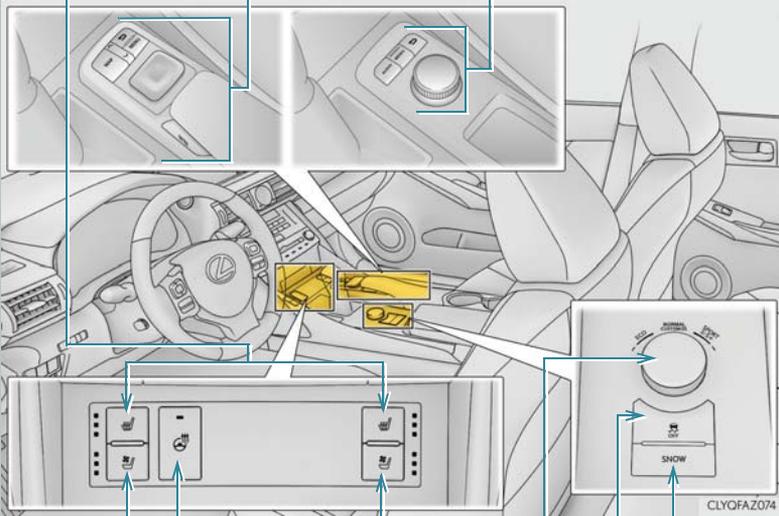

Heated steering wheel switch\*

Driving mode select switch\*

Seat ventilator switches\* P.57


VSC OFF switch\*

Seat ventilator switches\* P.57

Snow mode switch\*

\*: If equipped

\*: Refer to "OWNER'S MANUAL".

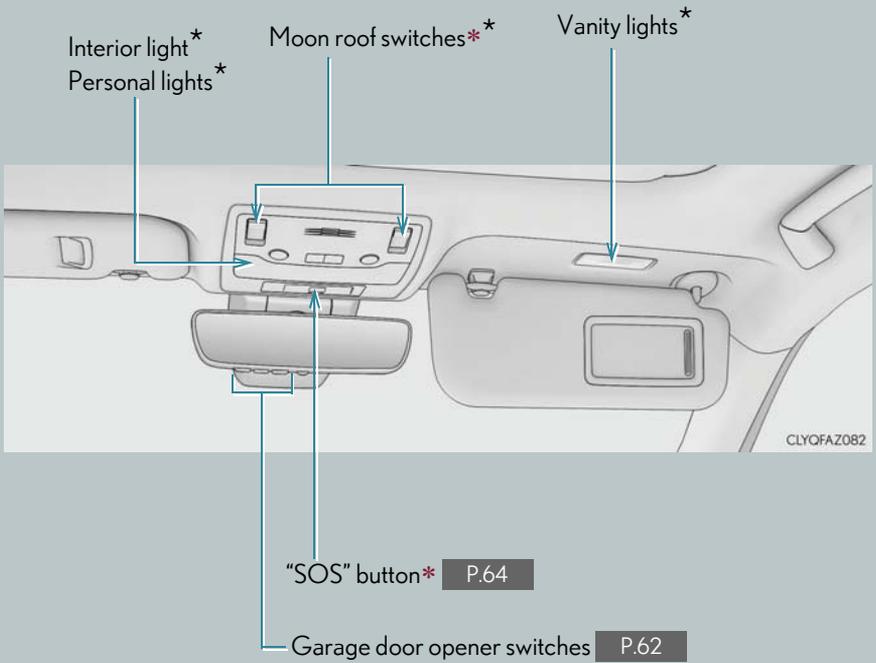


\*: If equipped

\*: Refer to "OWNER'S MANUAL".

## Turn Signal Lever

The lever will return to its original position after operation.

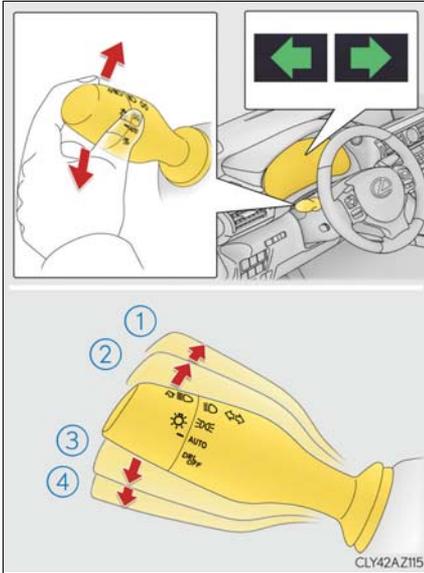

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- ④ Left turn

### ■ If the turn signals do not stop flashing after turning left or right, or if you want to stop them flashing

Operate the lever in the opposite direction to either position ② or ③. If you move the lever to either position ① or ④, the selected turn signals will flash.


#### ■ Customization

The number of times the turn signals flash during a lane change can be changed.

## Multi-information Display

The multi-information display presents the driver with a variety of driving-related data, such as the current outside temperature. The multi-information display can also be used to change the display settings and other settings.


### Except F SPORT models

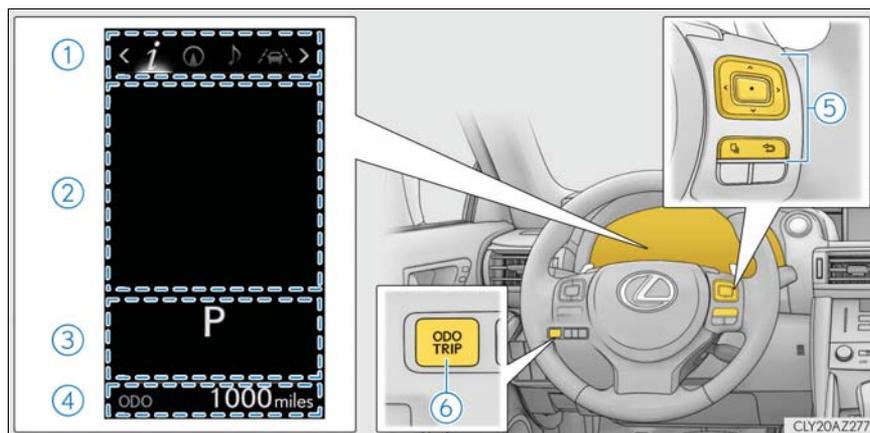


- ① **Menu icon display area (→P. 16)**  
Displays the following items.  
When a menu icon is not selected, the outside temperature and clock are displayed.
  - Menu icons
  - Outside temperature
  - Clock
- ② **Content display area**  
A variety of information can be displayed by selecting a menu icon. Additionally, warning or advice pop-up displays will be displayed in some situations.
  - Menu icon content
  - Warning message
- ③ **Indicator/shift position display area**  
Displays the following items:
  - Indicators
  - Shift position display
- ④ **Odometer/trip meter display area**  
Displays the following items:
  - Odometer/trip meter
  -  Distance until next engine oil change
- ⑤ **Meter control switches (→P. 15)**
- ⑥ **Odometer/trip meter and trip meter reset button (→P. 15)**

F SPORT models

► Main meter in center position

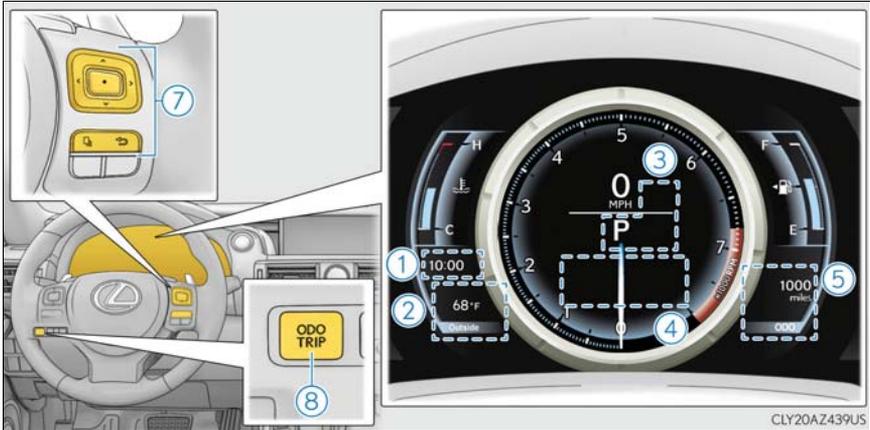

► Main meter moved to the right

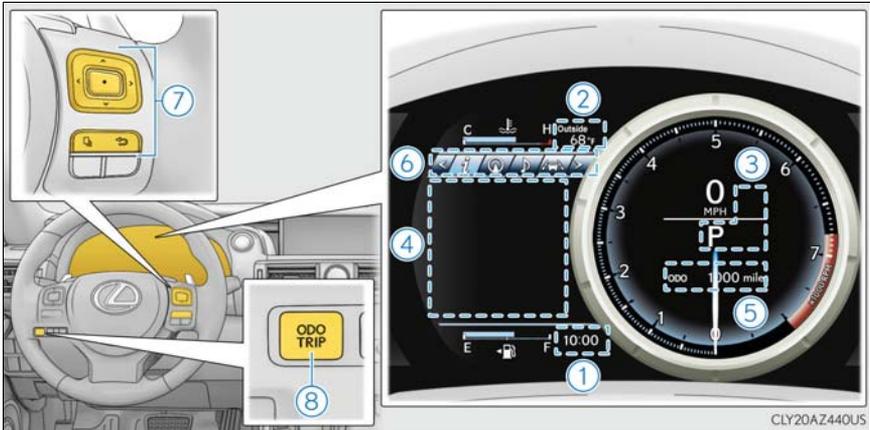


- ① Clock
- ② Outside temperature
- ③ Indicator/shift position display area  
Displays the following items:
  - Indicators
  - Shift position display
- ④ Content display area  
Main meter in center position:  
Displays various drive information on the main meter. Additionally, warning or advice pop-up displays will be displayed in some situations.
  - Drive information
  - Warning messageMain meter moved to the right:  
A variety of information can be displayed by selecting a menu icon. Additionally, warning or advice pop-up displays will be displayed in some situations.
  - Menu icon content
  - Warning message
- ⑤ Odometer/trip meter display area  
Displays the following items:
  - Odometer/trip meter
  -  Distance until next engine oil change
- ⑥ Menu icons (→P. 16)
- ⑦ Meter control switches (→P. 15)
- ⑧ Odometer/trip meter and trip meter reset button (→P. 15)

## ■ Using the multi-information display

### ■ Using the content display area

The content display area is operated using the meter control switches.

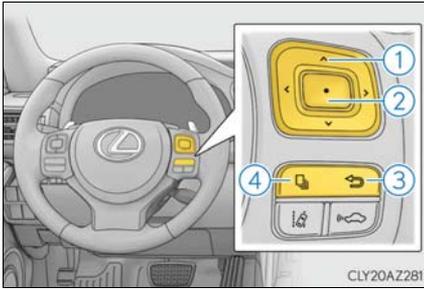

- ①   : Select menu icons  
  : Change displayed content, scroll up/down the screen and move the cursor

- ② Press: Enter/Set  
Press and hold: Reset
- ③ Return to the previous screen  
Pressing and holding the switch will display the first screen of the selected menu icon.

#### ► Except F SPORT models

- ④ Press: Display the top screen  
Press and hold: Register current screen as the top screen

#### ► F SPORT models


- ④ Move the main meter  
When the main meter moves to the right, the menu icons will be displayed on the left side.

- Move the main meter (F SPORT models)  
Moves between center and right-side positions.



### ■ Using the odometer/trip meter display area

Items in this area are operated using the odometer/trip meter and trip meter reset button.

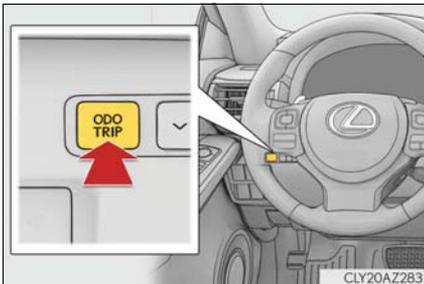

- Press: Change displayed item  
Each time the button is pressed, the displayed item will be changed.

- Press and hold: Reset  
Display the desired trip meter and press and hold the button to reset the trip meter.

## ■ Menu icons

---

Select a menu icon to display its content.



Drive information

Select to display various drive data.



Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the meter using the meter control switches.



Driving assist system information

Select to display the operational status of the following systems:

- Dynamic radar cruise control
- LDA (Lane Departure Alert with steering control)



Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.




Settings display

Select to change the meter display settings and other settings.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


# Headlights

Operating the  switch turns on the lights as follows:

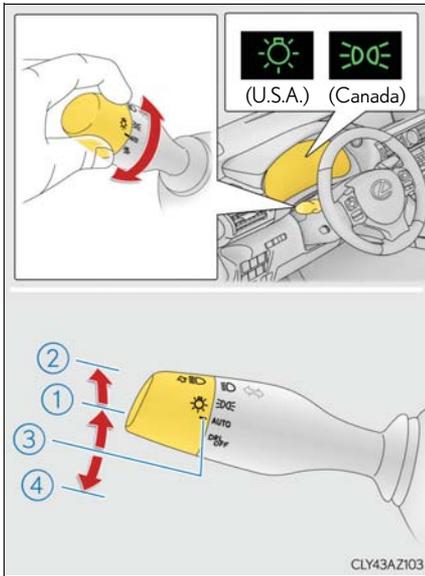

- ①  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- ②  The headlights and all lights listed above (except daytime running lights) turn on.
- ③ **AUTO** The headlights, parking lights, daytime running lights and all the lights listed above turn on and off automatically. (When the engine switch is in IGNITION ON mode.)
- ④ **DRL OFF (U.S.A.)** Off  
 The daytime running lights turn (Canada) on.

## Turning on the high beam headlights

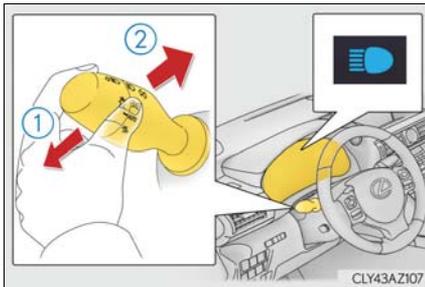


- ① With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


## Automatic High Beam

The Automatic High Beam uses a camera sensor located behind the upper portion of the windshield to assess the brightness of the lights of vehicles ahead, streetlights, etc., and automatically turns the high beams on or off as necessary.

### ■ Activating the Automatic High Beam

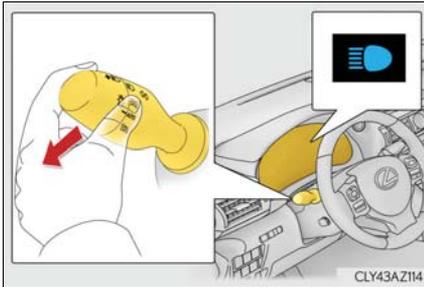


- 1** Push the lever away from you with the headlight switch in the  or AUTO position.

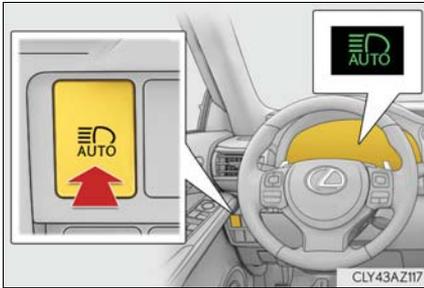

- 2** Press the Automatic High Beam switch. The Automatic High Beam indicator will come on when the system is operating.

## ■ Turning the high beam on/off manually

### ● Switching to the low beams

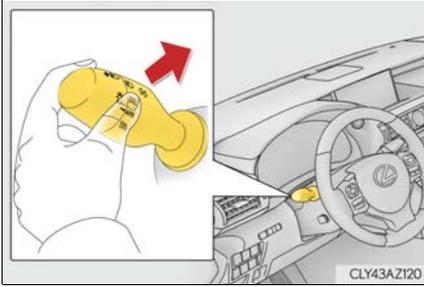


Pull the lever to its original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

### ● Switching to the high beams

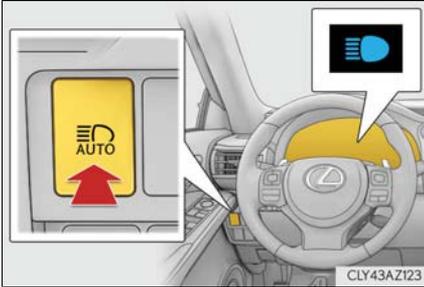

Press the Automatic High Beam switch.


The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

## Windshield Wipers and Washer


Operating the  lever operates the wipers or washer as follows. The lever will return to its original position after operation.

### ► Intermittent windshield wipers with interval adjuster

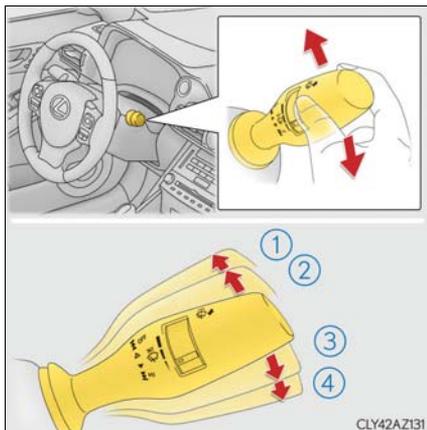


- ①  OFF (U.S.A.) or  (Canada)  
Up 2 levels
- ②  Up 1 level
- ③  (U.S.A.) or  (Canada)  
Down 1 level
- ④  HI (U.S.A.) or  (Canada)  
Down 2 levels

Operation Status before operation	 OFF or 		 or 	 HI or 
Off	Temporary operation	Temporary operation	Intermittent operation	High speed operation
Intermittent operation	Off	Off	Low speed operation	High speed operation
Low speed operation	Off	Intermittent operation	High speed operation	High speed operation
High speed operation	Off	Low speed operation	No change	No change

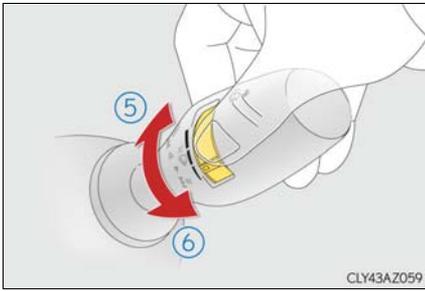


Wiper intervals can be adjusted when intermittent operation is selected.

 - ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency  
The intermittent windshield wiper operates more frequently as vehicle speed becomes higher.



- ⑦  Washer/wiper dual operation  
Pulling the lever operates the wipers and washer.  
The wipers will automatically operate a couple of times after the washer squirts.  
Vehicles with headlight cleaners:  
When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Rain-sensing windshield wipers

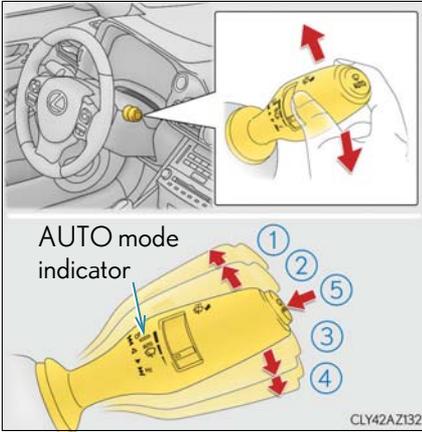


- ① **OFF** (U.S.A.) or **o** (Canada)  
Up 2 levels
- ② **▲** Up 1 level
- ③ **▼** (U.S.A.) or **▽** (Canada)  
Down 1 level
- ④ **HI** (U.S.A.) or **HI** (Canada)  
Down 2 levels
- ⑤ **AUTO** AUTO mode on/off switch

With AUTO mode selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.  
The AUTO mode indicator will turn on when AUTO mode is selected.


Status before operation \ Operation		<b>OFF</b> or <b>o</b>	<b>▲</b>	<b>▼</b> or <b>▽</b>	<b>HI</b> or <b>HI</b>
		<b>Off</b>	Temporary operation	Temporary operation	Low speed operation
<b>Low speed operation</b>	Off	Off	High speed operation	High speed operation	
<b>High speed operation</b>	Off	Low speed operation	No change	No change	
<b>AUTO mode</b>	<b>Intermittent operation</b>	Off	Temporary operation *	Low speed operation	High speed operation
	<b>Continuously</b>		No change		

\*: After temporary operation, the mode will return to AUTO mode.

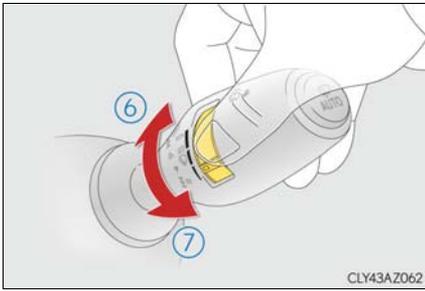

When AUTO mode is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity

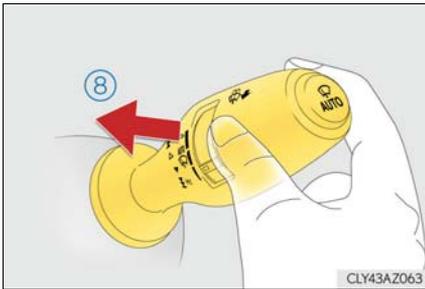

- ⑧  Washer/wiper dual operation  
Pulling the lever operates the wipers and washer.  
The wipers will automatically operate a couple of times after the washer squirts.  
Vehicles with headlight cleaners:  
When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## **Lexus Safety System +**

The Lexus Safety System + consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

### **■ PCS (Pre-Collision System)**

---

The pre-collision system uses a radar sensor and camera sensor to detect vehicles and pedestrians in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

### **■ LDA (Lane Departure Alert with steering control)**

---

→P. 28

### **■ Automatic High Beam**

---

→P. 18


### **■ Dynamic radar cruise control**

---

→P. 25


## Dynamic Radar Cruise Control

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed. Use the dynamic radar cruise control on freeways and highways.

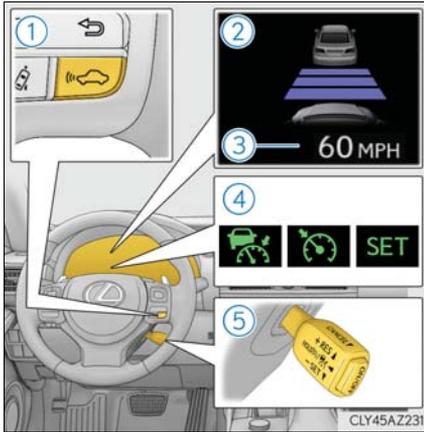

- 1 Vehicle-to-vehicle distance switch
- 2 Display
- 3 Set speed
- 4 Indicators
- 5 Cruise control switch


### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

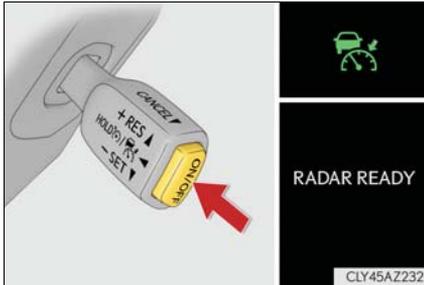

- 1 Press the “ON/OFF” button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

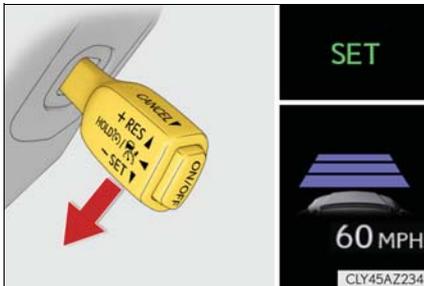


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

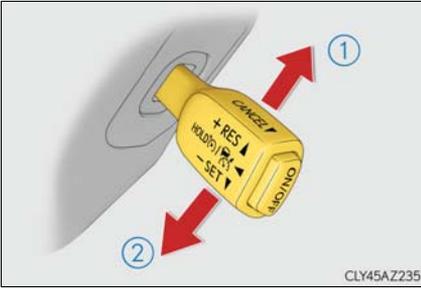


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

## ■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

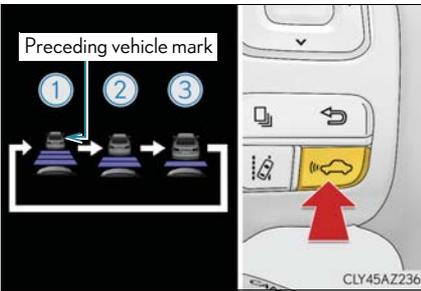

Pressing the switch changes the vehicle-to-vehicle distance as follows:

① Long

② Medium


③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## ■ Canceling and resuming the speed control

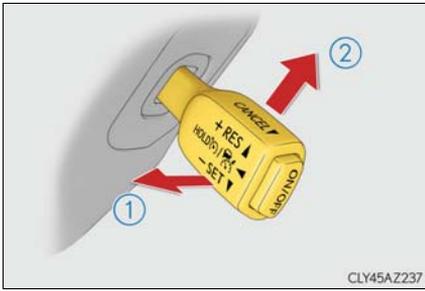


① Pulling the lever toward you cancels the speed control.

The speed control is also canceled when the brake pedal is depressed.

② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.


## ■ Selecting constant speed control mode

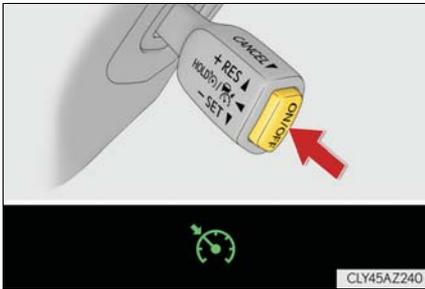

① With the cruise control off, press and hold the “ON/OFF” button for 1.5 seconds or more.

Immediately after the “ON/OFF” button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

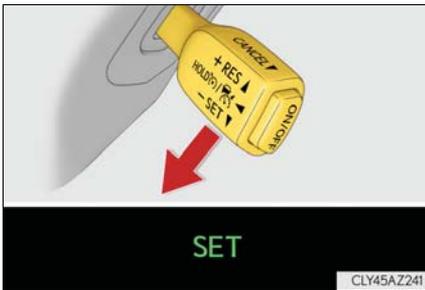

② Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

## LDA (Lane Departure Alert with Steering Control)

When driving on highways and freeways with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane.

### ■ Turning LDA system on



Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates and a message is displayed on the multi-information display.


Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

## Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, Lexus Display Audio screen (if equipped) and a buzzer. Always check the surrounding area when using this system.

### Turning the system on and off

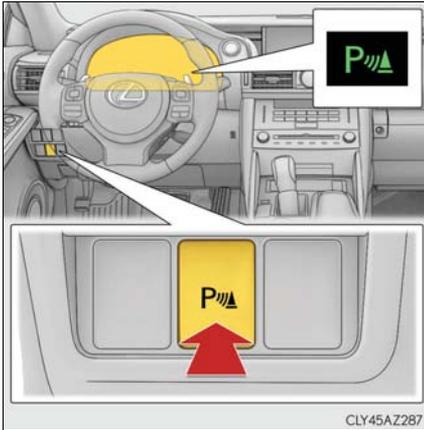

Turns the intuitive parking assist on/off


When on, the indicator light comes on to inform the driver that the system is operational.

## BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions:

- The BSM (Blind Spot Monitor) function  
Assists the driver in making a decision when changing lanes
- The RCTA (Rear Cross Traffic Alert) function  
Assists the driver when backing up

These functions use same sensors.

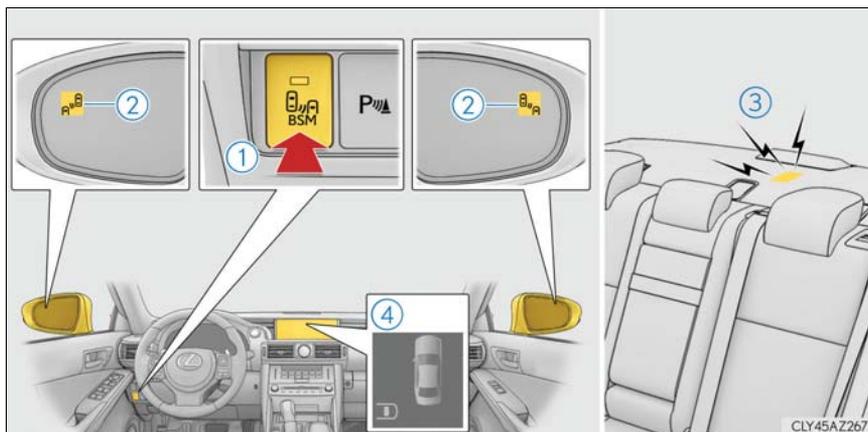

- ① BSM main switch  
Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. Common switch for BSM function and RCTA function.
- ② Outside rear view mirror indicators  
BSM function:  
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.  
RCTA function:  
When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.
- ③ RCTA buzzer (RCTA function)  
If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM function is operated to turn the system on.
- ④ Monitor screen display (RCTA function)  
If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon for the detected side will be displayed on the monitor screen.  
This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.

## Tire Pressure Warning System


Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

### The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

### Initializing the tire pressure warning system

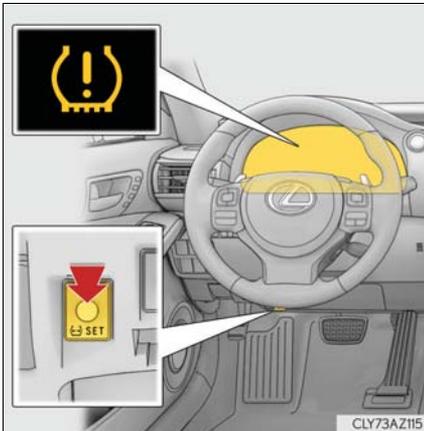


Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

## Remote Touch (if equipped)

The Remote Touch can be used to operate the Remote Touch screens.

### Basic operation

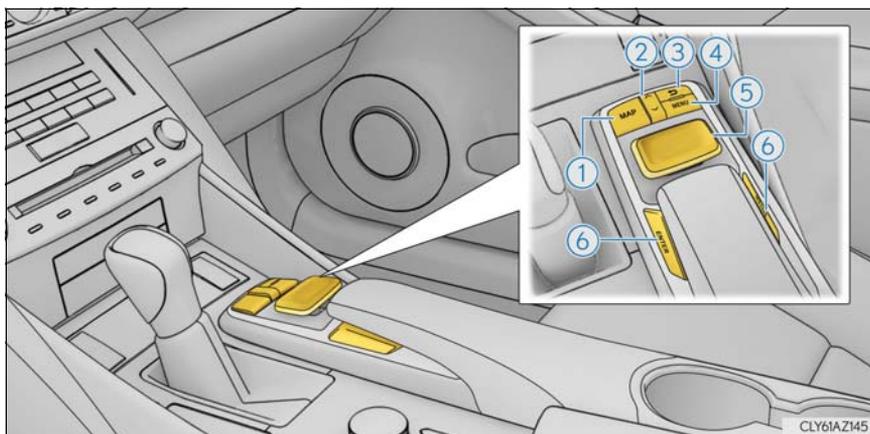

- ① "MAP" button  
Press this button to display the vehicle's current position.
- ② "∧•∨" button  
Press this button to change map scale and scroll through lists.
- ③ Back button  
Press to display the previous screen.
- ④ "MENU" button  
Press to display the "Menu" screen. (→P. 33)
- ⑤ Remote Touch knob  
Move in the desired direction to select a function, letter and screen button.  
Press the knob to enter the selected function, letter or screen button.
- ⑥ "ENTER" button  
Press to enter the selected function, letter or screen button.

## Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Destination" (→P. 36)
- ② "Radio" (→P. 41)
- ③ "Media" (→P. 40)
- ④ "Phone" (→P. 37)
- ⑤ "LEXUS App Suite"
- ⑥ "Info"
- ⑦ "Climate" (→P. 53)
- ⑧ "Setup"
- ⑨ "Display" (→P. 34)

## Side Display



The following functions can be displayed and operated on the side display.

- ① Navigation
- ② Audio
- ③ Phone
- ④ Vehicle information
- ⑤ Air conditioning system (→P. 53)

## Display



Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- ① Turns the screen off
- ② Displays the screen in "Day Mode" with the headlight switch on
- ③ Adjust the screen display
- ④ Adjust the camera display

## Screen scroll operation



To scroll over the map, place the cursor in the desired position and then press and hold the Remote Touch knob.

- ① Indicates the street name, city name, etc. for the selected point
- ② Displays various information for the selected point
- ③ Indicates the distance from the current position to the cursor mark
- ④ Zooms in on the map
- ⑤ Zooms out on the map

## Setting a route

While route guidance is operating, you can change the route using the following method.



- ① Press the "MAP" button on the Remote Touch.
- ② Select .
- ③ Select "Edit Route".



- 4** The following settings can be accessed.
- ① Adding destinations
  - ② Deleting destinations
  - ③ Reordering destinations
  - ④ Route preferences
  - ⑤ Route type
  - ⑥ Detour setting
  - ⑦ Starting from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## Navigation System (if equipped)

### Register home



- 1** Press the "MENU" button on the Remote Touch.  
Please refer to page 32 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Navigation".
- 4** Select "Home".



- 5** Select "Set Home Location".
- 6** Select "Address".
- 7** Select "City".
- 8** Enter a city name and select "OK".
- 9** Select the desired city name.
- 10** Enter a street name and select "OK".
- 11** Select the desired street name.
- 12** Enter a house number and select "OK".
- 13** Select "Enter".
- 14** Select "OK".

## Destination search

### Search by address



#### ► Search by city



#### ► Search by street address



**1** Press the "MAP" button on the Remote Touch.  
Please refer to page 32 for the Remote Touch operation.

**2** Select "Dest."

**3** Select "Address".

**4** Select "City".

**5** Enter a city name and select "OK".

**6** Select the desired city name.

**7** Enter a street name and select "OK".

**8** Select the desired street name.

**9** Enter a house number and select "OK".

**10** Select "Go".

**11** Select "OK".

**4** Select "Street Address".

**5** Enter a house number and select "OK".

**6** Enter a street name and select "OK".

**7** Select the desired street name.

**8** Enter a city name and select "OK".

**9** Select the desired city name.

**10** Select "Go".

**11** Select "OK".

## Search by point of interest



- 1 Press the “MAP” button on the Remote Touch.  
Please refer to page 32 for the Remote Touch operation.
- 2 Select “Dest.”.
- 3 Select “Point of Interest”.

## Hands-free System For Cellular Phone (with Navigation System)

### Bluetooth® phone pairing

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer’s user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.



- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the “MENU” button on the Remote Touch.  
Please refer to page 32 for the Remote Touch operation.
- 3 Select “Phone”.



- 4 Select “Yes” to register a phone.



**5** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

**6** Register the Bluetooth® device using your Bluetooth® device.



**7** Check that a confirmation screen is displayed indicating pairing was successful.

**8** Check that "Connected" is displayed and registration is complete.

## Contact transfer



**1** Press the "MENU" button on the Remote Touch.  
Please refer to page 32 for the Remote Touch operation.

**2** Select "Setup".

**3** Select "Phone".

**4** Select "Contact/Call History".


**5** Select the desired contact to add to the favorites list.

**6** Check that a confirmation screen is displayed when the operation is complete.

Contact transfer may not be possible depending on phone model.

## ■ Calling by name

You can call by giving a name registered in the contact list. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

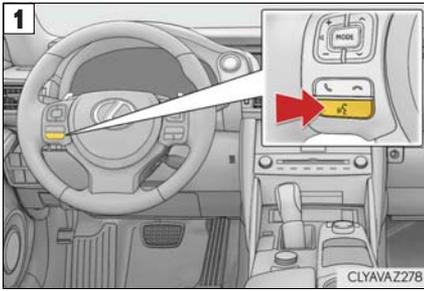

- 1 Press the talk switch.
- 2 Say "Call <contacts> <phone types>". In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact. For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"

Talk switch: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Receiving a call

 
When a call is received, call screen is displayed with a sound.

Call screen can also be displayed on the side display.

Press  on the steering wheel to talk on the phone.

To refuse to receive the call, press  on the steering wheel.

## ■ Steering switches



- ① Increases/decreases volume
- ② Sending/Receiving/Phone top screen display
- ③ End call/Refuse call
- ④ Start the voice command system

## Audio System (with Navigation System)

### Audio control screen


Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 32 for the Remote Touch operation.  
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media".

### Remote control (steering wheel audio switches)

Some audio features can be controlled using the switches on the steering wheel.

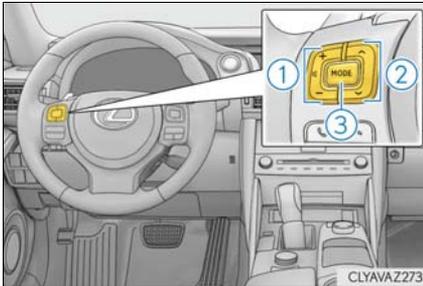

- 1 Adjust volume
- 2 Radio mode: Select a radio station/channel  
Audio CD mode: Select a track  
MP3/WMA/AAC disc mode: Select a file  
DVD mode: Select a chapter  
iPod mode: Select a track/file
- 3 Select audio source  
Play/Pause  
Turn mute on/off

## Basic operation



- 1 Display the audio source selection screen
- 2 Display the sound setting screen
- 3 Adjust volume  
Turn the audio system on/off
- 4 Select a radio/media mode
- 5 Play/Pause  
Turn mute on/off

## Radio



- 1 Display the cache radio operation buttons
- 2 Display the radio preset buttons
- 3 Scan for receivable stations/channels
- 4 Select to store artist and song title information
- 5 Display a list of receivable stations
- 6 Select a preset station/channel  
Seek for a station/channel
- 7 Step up/down frequencies/channels  
Move up/down the list

## Entering station/channel presets

- 1 Select the desired station/channel by using the tune, the seek or the scan function.
- 2 Select "Presets".
- 3 Select one of the screen buttons and hold it until a beep is heard, indicating that the station/channel has been set.

## DVD player/CD player

### Playing an audio CD



- 1 Select a track  
Rewind
- 2 Play/Pause
- 3 Select a track  
Fast forward
- 4 Set repeat playback
- 5 Set random playback
- 6 Display a track list
- 7 Eject a disc
- 8 Select a track  
Fast forward/rewind
- 9 Select a track  
Move up/down the list

### Playing a CD with MP3/WMA/AAC files



- 1 Select a folder
- 2 Select a file  
Rewind
- 3 Play/Pause
- 4 Select a file  
Fast forward
- 5 Set repeat playback
- 6 Set random playback
- 7 Display a folder list
- 8 Eject a disc
- 9 Select a file  
Fast forward/rewind
- 10 Select a file  
Move up/down the list

## ■ Playing a DVD



- ① Display full screen video
- ② Select a chapter  
Rewind
- ③ Stop the video screen
- ④ Play/Pause
- ⑤ Select a chapter  
Fast forward/Slow forward
- ⑥ Eject a disc
- ⑦ Select a chapter  
Fast forward/rewind
- ⑧ Select a chapter


## ■ Operating an iPod



- ① Select a track  
Rewind
- ② Play/Pause
- ③ Select a track  
Fast forward
- ④ Set repeat playback
- ⑤ Set random playback
- ⑥ Display the play mode selection screen
- ⑦ Select a track  
Fast forward/rewind
- ⑧ Select a track  
Move up/down the list

## Lexus Display Audio Controller (with Lexus Display Audio)


By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.

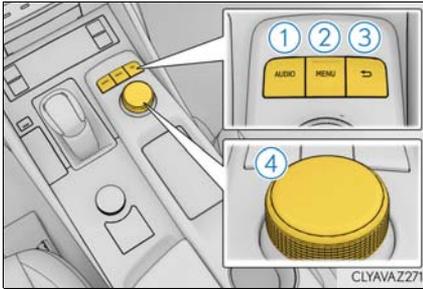

- ① Display the "Source" screen or audio top screen
- ② Display the "Menu" screen (→P. 45)
- ③ Back button  
Display the previous screen
- ④ Turn or move the controller to select a function and number.  
Move the controller to display the left or right side of the screen.  
Push the controller to enter the selected function and number.

## ■ “Menu” screen

To display the “Menu” screen, press the “MENU” button on the Lexus Display Audio controller.

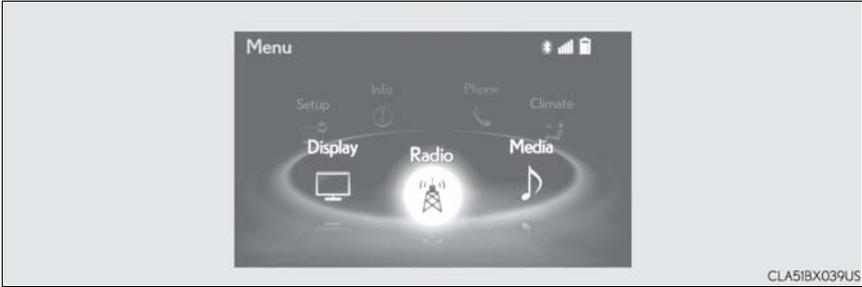

Button	Function
“Radio”	Display the radio top screen
“Media”	Display the media top screen
“Climate”	Display the air conditioning control screen (→P. 53)
“Phone”	Display the phone top screen
“Connected Navi”*	If a turn-by-turn navigation application has been downloaded to a connected phone, the application will be displayed and can be used.
“Info”	Display the “Information” screen
“Setup”	Display the “Setup” screen
“Display”	Display the display settings screen

\*: Available in the 48 states, D.C. and Alaska

## ■ Screen for display settings

Go to “Display”: “MENU” button → “Display”



- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the rear view monitor camera.
- ④ Change to day mode.

# Hands-Free System For Cellular Phone (with Lexus Display Audio)

## How to register a Bluetooth® device

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to “Bluetooth\* Setup”: “MENU” button → “Setup” → “Bluetooth\*”
- 3 Move the controller to the left and then select “Add Device”.



- 4 When this screen is displayed, search for the device name displayed on this screen on your Bluetooth® device.
- 5 Register the Bluetooth® device using your Bluetooth® device.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to “Add Favorite”: “MENU” button → “Setup” → “Phone” → “Contact/Call History” → “Add Favorite”
- 2 Choose the contact to register.

## Dialing

- 1 Go to “Dial Pad”: “MENU” button → “Phone” → “Dial Pad”
- 2 Input a phone number.
- 3 Press the off-hook switch on the steering wheel or select .

## Dialing from the phonebook

- 1 Go to “Contacts”: “MENU” button → “Phone” → “Contacts”
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

## ■ When the phonebook is empty

---

You can transfer the phone numbers in a Bluetooth® phone to the system.

Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.

- 1** Press the off-hook switch on the steering wheel.  
If the phonebook is empty, a message will be displayed.
- ▶ **For a PBAP compatible Bluetooth® phone and “Automatic Transfer” is off**
- 2** To enable automatic transfer of new contacts from a cellular phone every time it is connected, select “Always”.  
Select “Once” if you want to transfer new contacts from a cellular phone.
- ▶ **For a PBAP incompatible and OPP compatible Bluetooth® phone**
- 2** Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.  
Select “Add” if you want to add a new contact manually.

## ■ Dialing from favorites

---

You can make a call using numbers registered in the favorites.


- 1** Go to “Favorites”: “MENU” button → “Phone” → “Favorites”
- 2** Choose the desired contact to call from the list.
- 3** Choose the number and then press the off-hook switch on the steering wheel or press the controller.

## ■ To answer the phone



Press the off-hook switch on the steering wheel or select .


## ■ Operating a phone using the steering wheel switches

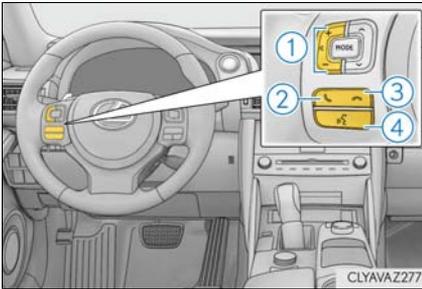

- ① Volume switch  
During an incoming call: Adjusts the ring tone volume  
During speaking on the phone: Adjusts in call volume  
The voice guidance volume cannot be adjusted using this button.
- ② Off-hook switch
  - Start call
  - Receiving
  - Phone top screen display
- ③ On-hook switch
  - End call
  - Refuse call
- ④ Talk switch  
Press: Turns the voice command system on  
Press and hold: Turns the voice command system off

## Audio System (with Lexus Display Audio)

### Lexus Display Audio operation buttons

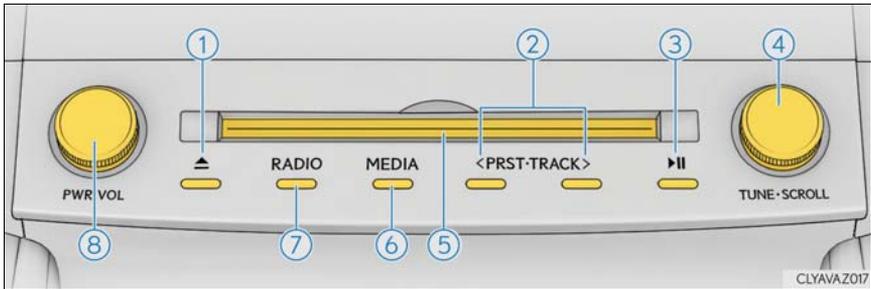

- 1 Eject a disc.
- 2 Select a radio station band, track or file.
- 3 Except radio and A/V mode: Pause or resume playing a track.  
Radio and A/V mode: Turn mute on/off.
- 4 Seek up or down for a radio station, or to access a desired track or file.
- 5 Disc slot
- 6 Display the media top screen.
- 7 Display the radio top screen.
- 8 Press to turn the audio system on/off, and turn to adjust the volume.

### Using the steering wheel switches to change audio sources

Press the "MODE" switch when the audio system is turned on. The audio source changes each time the "MODE" switch is pressed.

## ■ Audio menu screen

To display the audio menu screen, move the controller to the left while on an audio top screen.

### ► Radio mode




Button	Function	Target radio mode
"SCAN"	Scans for receivable stations	AM, FM
"SEEK"	Seeks a station of the nearest frequency (stops when a station is found)	AM, FM
"Tag"	Captures the song title and artist name information for potential purchase (when the "HD") indicator on the selected station is appears)	FM
"Multicast"	Changes the channel of HD Radio (HD2, HD3, HD4 where applicable)	FM
"Traffic"	Seeks a station of the traffic announcement	FM
"HD Radio"	Selects to set the station list shows of HD radio on/off	AM, FM
"Radio Settings"	Changes radio settings	All mode
"Sound Settings"	Changes sound settings	All mode

► Media mode



Button	Function	Target audio source
"Play"	Plays or pauses a track/file	All media (except A/V)
"Pause"		
"Track Up"	Selects a track/file	All media (except A/V)
"Track Down"		
"File Up"		
"File Down"		
"Folder Up"		
"Folder Down"	Selects a folder/album	MP3/WMA/AAC disc, USB
"Fast Forward"	Selects and hold: Fast-forward or rewind a track/file	All media (except A/V)
"Rewind"		
"Repeat"	Selects a repeat mode	All media (except A/V)
"Random"	Selects a random/shuffle play mode	All media (except A/V)
"Shuffle"		
"Full Screen"	Selects a full screen mode	iPod, A/V
"Connect"	Connects a Bluetooth® device	Bluetooth®
"Cover Art Settings"	Changes the cover art settings	CD, MP3/WMA/AAC disc
"iPod Settings"	Changes iPod settings	iPod
"USB Settings"	Changes USB settings	USB
"External Video Settings"	Changes A/V settings	A/V
"Sound Settings"	Changes sound settings	All media


## ■ Operating the audio system using the steering wheel switches

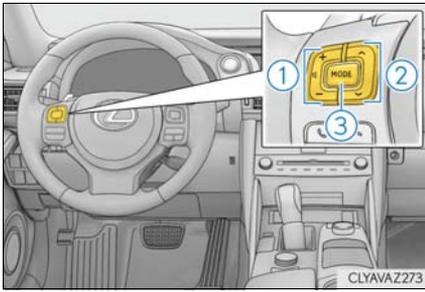

- ① Volume switch
  - Increases/decreases volume
  - Press and hold: Continuously increases/decreases volume
- ② Radio mode:
  - Press: Select a radio station
  - Press and hold: Seek up/down CD, MP3/WMA/AAC disc, Bluetooth<sup>®</sup>, iPod or USB mode:
  - Press: Select a track/file/video
  - Press and hold: Continuously tracks/files/videos up/down. (MP3/WMA/AAC disc, iPod or USB)
- ③ "MODE" switch
  - Turns the power on, selects audio source
  - Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.


## Portable Audio Device Ports

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

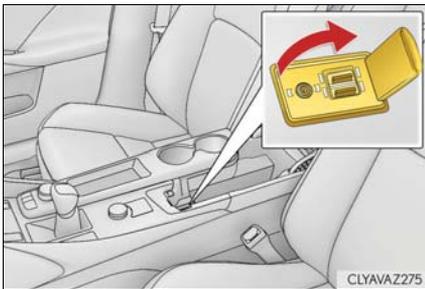


Press the console box knob, open the cover and connect the portable audio device.

## Air Conditioning System

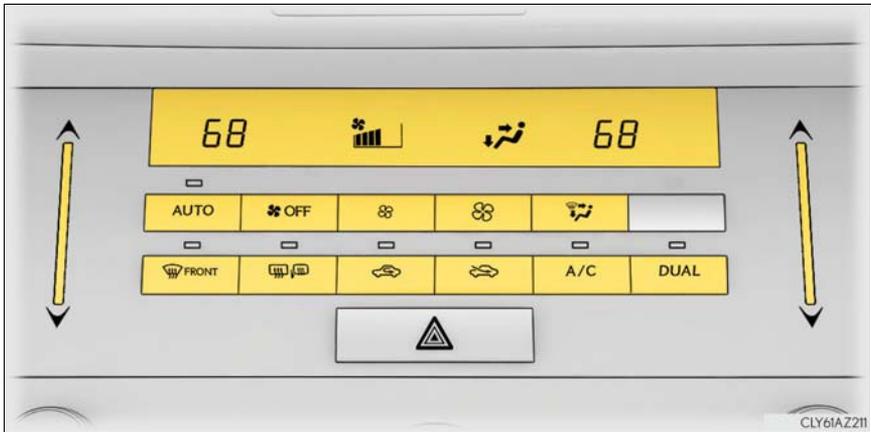

### Adjusting the temperature

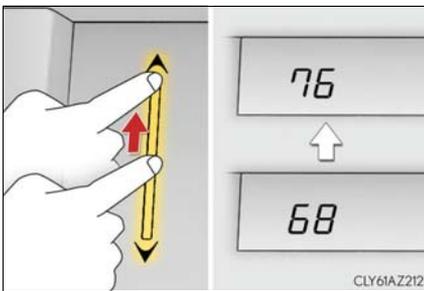

To adjust the temperature setting, touch and slide your finger up or down on the sensor. The temperature setting can also be adjusted by touching on the sensor. When the temperature setting is changed, a buzzer sounds.

If  A/C is not pressed, the system will blow ambient temperature air or heated air.

## ■ Air conditioning control screen

### ▶ With a Lexus Display Audio



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select to set auto mode on/off
- ④ Select to set eco mode on/off
- ⑤ Select to set cooling and dehumidification function on/off  
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- ⑥ Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ⑦ Display the option control screen
- ⑧ Select the air flow mode
- ⑨ Adjust the right-hand side temperature setting

### ▶ With a navigation system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen
- ⑥ Select to set automatic mode on/off
- ⑦ Select to set cooling and dehumidification function on/off  
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- ⑧ Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ⑨ Select to set eco mode on/off

## Option control screen

Select  on the air conditioning control screen to display the option control screen. The functions can be switched on and off.

### ► With a Lexus Display Audio



### ► With a navigation system



- ① Removing pollen from the air (Micro dust and pollen filter)

## Side display operation screen (vehicles with a navigation system)



- ① Select the air flow mode
- ② Adjust the left-hand side temperature setting
- ③ Adjust the fan speed setting
- ④ Adjust the right-hand side temperature setting
- ⑤ Select to set auto mode on/off
- ⑥ Select to set cooling and dehumidification function on/off  
If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.
- ⑦ Adjust the temperature for driver and passenger seats separately ("DUAL" mode)

## ■ Using automatic mode

---

Press the automatic mode button to turn on the airflow and adjust the temperature setting.

## ■ Adjusting the temperature for driver and passenger seats separately (“DUAL” mode)

---

In dual mode, driver and passenger side temperature settings can be adjusted separately.

To turn on the “DUAL” mode, perform any of the following procedures:


- Press  or select “DUAL” on the air conditioning control screen.
- Select “DUAL” on the side display operation screen. (vehicles with a navigation system)
- Adjust the passenger’s side temperature setting.

The indicator comes on when the “DUAL” mode is on.

While in “DUAL” mode, the temperature of the rear air outlets is set at the right-hand side temperature setting.

## Seat Heaters (if equipped)/ Seat Ventilators (if equipped)

### ■ Seat heaters

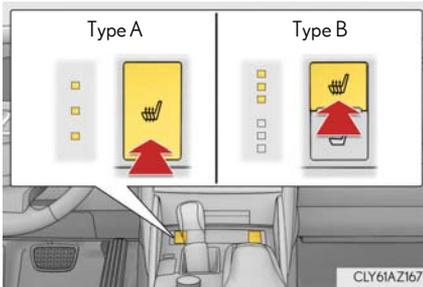

Each time the switch is pressed, the intensity of the seat heater changes and the level indicator lights (amber) light as follows:  
Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

### ■ Seat ventilators



Each time the switch is pressed, the intensity of the seat ventilator changes and the level indicator lights (green) light as follows:  
Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

### ■ Seat heater timer control


To enable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds once. If a seat heater is turned on while seat heater timer control is enabled, the intensity of the seat heater will automatically change from Hi→Mid→Lo.

The timing of the change in seat heater intensity differs depending on the temperature inside the cabin, etc. when the seat heater is operating.

To disable seat heater timer control, press and hold the driver and front passenger seat heater switches at the same time until a buzzer sounds twice.

# Voice Command System

## Basic operation

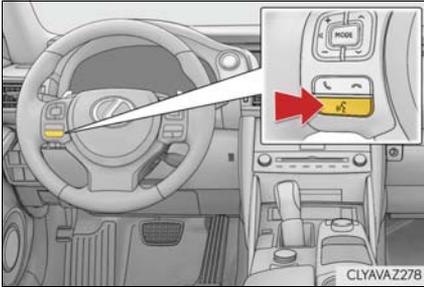

- 1** Press the talk switch on the steering wheel.
- 2** **▶ If you know the command:**  
Press the talk switch again.  
**▶ If you do not know the command:**  
Follow the voice guidance to learn the command and then press the talk switch again.
- 3** Say a command after the beep.

Continue on to pages 59-61 for a detailed list of Voice Commands for the following categories:

Basic .....	page 59
Apps .....	page 59
Navi.....	page 59
Phone .....	page 59
Radio.....	page 60
Audio .....	page 60
Info.....	page 61
Climate.....	page 61

### ■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.
- If a desired outcome is not shown, or if no selections are available, press  on the steering wheel to return to the previous screen.

**NOTE:** When entering voice commands you must wait until after the beep to speak.

## ■ Command list

### ▶ Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints" *	Displays more commonly used commands
"Cancel" *	Cancels the voice command system

\*: Vehicles with navigation system

### ▶ Apps (vehicles with navigation system)

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

### ▶ Navi (vehicles with navigation system)

Command	Action
"Find <POI category>"	Displays a list of <POI category*> near the current position
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

\*: For example; "Gas stations", "Restaurants", etc.

### ▶ Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book
"Mobile Assistant" *	Activates Apple's Siri® Eyes Free mode

\*: Vehicles with navigation system

## ► Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode

## ► Audio

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"Play the <audio sources>" *1	Selects audio source
"Disc" *2	Selects the selected disc mode
"USB" *2	Selects USB audio mode
"iPod" *2	Selects iPod audio mode
"Bluetooth" *3 Audio" *2	Selects Bluetooth® audio mode
"External" *2	Selects VTR mode
"Auxiliary" *2	Selects AUX audio mode

\*1: Vehicles with Lexus Display Audio system

\*2: Vehicles with navigation system

\*3: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

► Info

Command	Action
"Destination Assist" *	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

\*: Vehicles with navigation system

► Climate (vehicles with navigation system)

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees*

\*: Only within the possible temperature range of the air conditioning system


Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

### Programming the HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

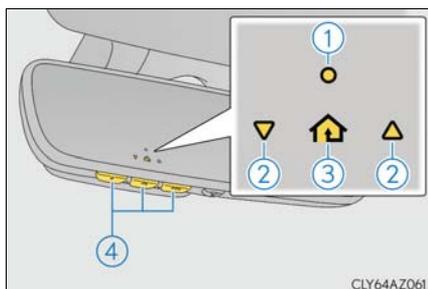

① HomeLink® indicator light

② Garage door operation indicators

③ HomeLink® icon


Illuminates while HomeLink® is operating.

④ Buttons

### Programming HomeLink®


Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

**1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

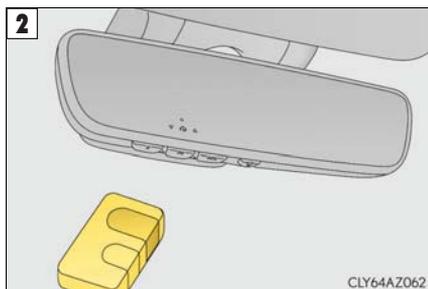

Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

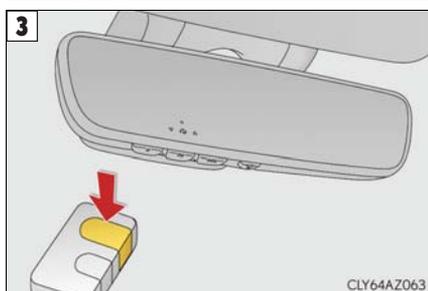

Program a device.

### ► Programming a device other than an entry gate (for U.S.A. owners)

Press and hold the handheld transmitter button until the HomeLink<sup>®</sup> indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

### ► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink<sup>®</sup> indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).

**4** Test the HomeLink<sup>®</sup> operation by pressing the newly programmed button and observing the indicator light:

- Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink<sup>®</sup> button is pressed and released.
- Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink<sup>®</sup> button for 2 seconds then release it.
- If the garage door or other device does not operate, proceed to "If your garage door is of the rolling code type:".

**5** Repeat the steps above to program another device for any of the remaining HomeLink<sup>®</sup> buttons.

If your garage door is of the rolling code type:

**6** Press the training button on the motor-head unit in your garage.

**7** Press and hold the vehicle's programmed HomeLink<sup>®</sup> button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink<sup>®</sup>

---


Press the appropriate HomeLink<sup>®</sup> button. The HomeLink<sup>®</sup> indicator light should turn on.

## Lexus Enform Safety Connect (for U.S.A., if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components

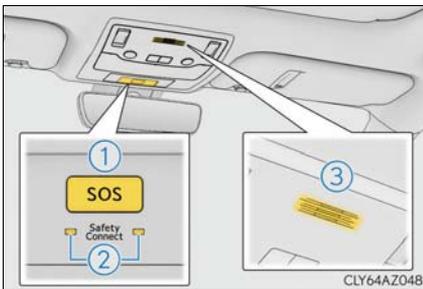

- ① "SOS" button
- ② LED light indicators
- ③ Microphone

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico or 1-800-265-3987 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## **Lexus Enform (for U.S.A., if equipped)**

Lexus Enform is a service that includes Safety Connect, Service Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### **Function achieved by using a cellular phone (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

#### **● LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

#### **Subscription**

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

### ● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

### ● eDestination

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

### ● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

### ■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call the following, or select the "Destination Assist" in your vehicle for further subscription details.

- The United States  
1-800-25-LEXUS (1-800-255-3987)
- Canada  
1-800-26-LEXUS (1-800-265-3987)
- Puerto Rico  
1-877-539-8777

## ■ Function achieved by using DCM

---

### ■ Services

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 64)

## ■ LEXUS Enform Remote

---

### ■ Services

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

### ■ Subscription

→P. 67

## SiriusXM Satellite Radio

Most in-car trials today include SiriusXM's best package — All Access. It includes every channel available on your radio, plus streaming.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### ■ Subscription

---

All SiriusXM services, including satellite radio and data services, plus streaming services, require a subscription, sold separately or as a package by Sirius XM Radio Inc. (U.S.A.) or Sirius XM Canada Inc. (Canada), after any trial subscription which may be included with your vehicle purchase or lease. To subscribe after your trial subscription, call 1-877-447-0011 (U.S.A.) or 1-877-438-9677 (Canada).

## What to do if...

### List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

**BRAKE**

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light (if equipped)

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light

**ABS**

(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



(flashes or illuminates)

PCS warning light



Slip indicator



(Flashes)

"AFS OFF" indicator (if equipped)



(Blinking and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

## What to do if...

### Follow the correction procedures.

	(U.S.A.) Parking brake warning light		Low fuel level warning light
	(Canada) Parking brake warning light		Driver's and front passenger's seat belt reminder light
	LDA (Lane Departure Alert) indicator		Rear passengers' seat belt reminder lights
	PCS warning light (flashes or illuminates)		Master warning light
	Open door warning light		Tire pressure warning light* <sup>1</sup> (Illuminates without blinking)

### See the Owner's Manual

	Turn signal indicator		Intuitive parking assist indicator (if equipped)
	Headlight indicator (U.S.A.)		Slip indicator (Flashes)
	Tail light indicator (Canada)		VSC OFF indicator
	Headlight high beam indicator		PCS warning light
	Automatic High Beam indicator		"AFS OFF" indicator (if equipped)
	Cruise control indicator		BSM (Blind Spot Monitor)
	Dynamic radar cruise control indicator		outside rear view mirror indicators (if equipped)
	Cruise control "SET" indicator		Security indicator
	LDA (Lane Departure Alert) indicator		Low outside temperature indicator
	LDA (Lane Departure Alert) indicator		Eco Driving Indicator Light
	LDA (Lane Departure Alert) indicator (Flashes)		Eco drive mode indicator* <sup>2</sup>

## What to do if...

 Eco drive mode indicator *3	 "CUSTOMIZE" indicator (if equipped) *3
 "SPORT" indicator *2	 Snow mode indicator
 "SPORT" indicator (if equipped) *3	 "AIR BAG ON/OFF" indicator (U.S.A.)
 "SPORT S" indicator (if equipped) *3	 "AIR BAG ON/OFF" indicator (Canada)
 "SPORT S+" indicator (if equipped) *3	

For further information, refer to the Owner's Manual.

\*1: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

\*2: Except F SPORT models

\*3: F SPORT models

## If the engine doesn't start

Make sure that the correct operating procedures have been followed.

**Brake pedal**


Make sure that the brake pedal is firmly depressed when attempting to start the engine.

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.

## What to do if...

### If the electronic key does not operate properly

#### Unlocking and locking the doors

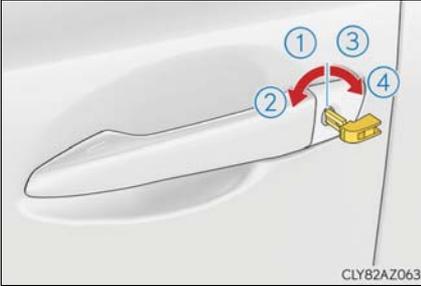


Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows and moon roof (turn and hold)\*
- ③ Unlocks the doors  
Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.
- ④ Opens the windows and moon roof (turn and hold)\*

\*: This setting must be customized at your Lexus dealer.


#### Unlocking the trunk

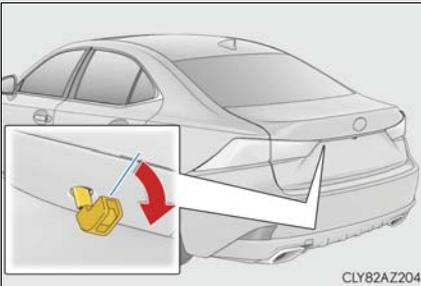

Turn the mechanical key clockwise to open.

## What to do if...

### Starting the engine

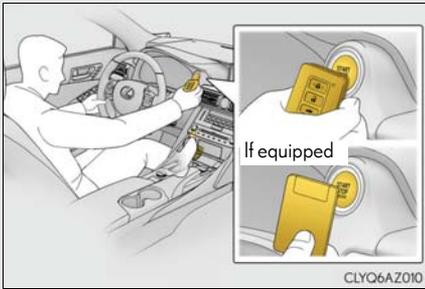

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch. When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.



### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2018 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.