



2026

IS350 AWD / IS350

OWNER'S MANUAL QUICK GUIDE

# Contents

The Quick Guide is not intended as a substitute for your *OWNER'S MANUAL*. We strongly encourage you to review the *OWNER'S MANUAL* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Pictorial Index</b> .....	<b>3</b>
<b>Floor Mat Installation</b>	
Floor Mat Installation.....	11
<b>Entering and Exiting</b>	
Keys.....	12
Smart Access System with Push-button Start.....	14
<b>When Driving</b>	
Engine (Ignition) Switch.....	15
Automatic Transmission.....	18
Turn Signal Lever.....	21
Parking Brake.....	22
Brake Hold.....	24
Multi-information Display.....	25
Displayed content.....	26
Headlight switch.....	29
AHB (Automatic High Beam).....	30
Windshield Wipers and Washer.....	32
Driving Mode Select Switch.....	34

## Driving Comfort

Basic Operation of Multimedia System *	36
Navigation *	37
Connecting a Smartphone or Communication Device *	41
Basic Operation of Audio System *	46
Automatic air conditioning system *	51

## Interior features

Starting Voice Control *	52
Connecting a device via the USB Type-C port	56

## Connected Services

Safety Connect	57
----------------	----

## Opening and Closing

Door Locks	59
Power Windows	60
Moon Roof	61
Fuel Tank Cap	62
Trunk	63
Garage Door Opener	64


## What to do if...

List of Warning/Indicator Lights	68
If the electronic key does not operate properly	72
If the engine doesn't start	74

\*: This feature may be operated by Voice command (See P.52)

# Pictorial Index

## Instrument panel

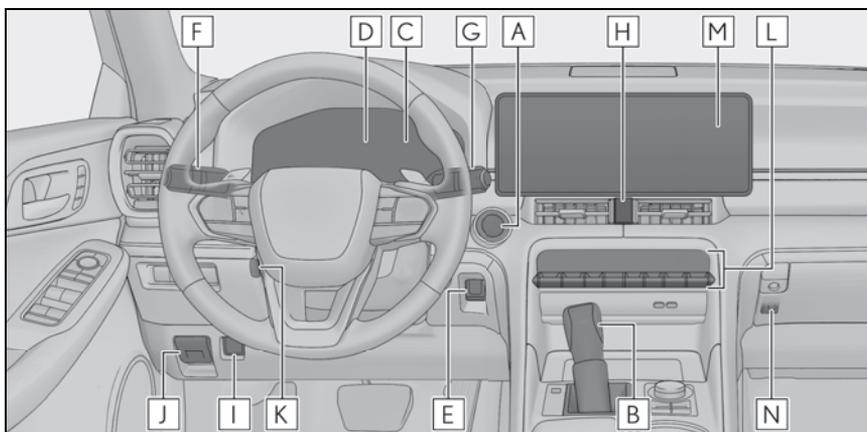


- A Engine switch**..... P.15
  - Starting the engine/changing the modes..... P.15
  - Emergency stop of the engine ..... P.17
  - When the engine will not start .....P.74
  - Warning messages <sup>\*1</sup>
- B Shift lever** ..... P.18
  - Changing the shift position.....P.18
  - Precautions for towing <sup>\*1</sup>
  - When the shift lever does not move <sup>\*1</sup>
- C Meters** <sup>\*1</sup>
  - Reading the meters/adjusting the instrument panel light <sup>\*1</sup>
  - Warning lights/indicator lights ..... P.68
  - When a warning light comes on <sup>\*1</sup>
- D Multi-information display** ..... P.25
  - Display.....P.25
  - When a warning message is displayed <sup>\*1</sup>
- E Parking brake switch**..... P.22
  - Applying/releasing.....P.22
  - Precautions for winter season <sup>\*1</sup>
  - Warning buzzer/messages <sup>\*1</sup>

<b>F</b>	<b>Turn signal lever</b> .....	P.21
	<b>Headlight switch</b> .....	P.29
	Headlights/parking lights/tail lights/daytime running lights .....	P.29
<b>G</b>	<b>Windshield wiper and washer switch</b> .....	P.32
	Usage .....	P.32
	Adding washer fluid <sup>*1</sup>	
	Warning messages <sup>*1</sup>	
<b>H</b>	<b>Emergency flasher switch</b> <sup>*1</sup>	
<b>I</b>	<b>Trunk opener</b> .....	P.63
<b>J</b>	<b>Hood lock release lever</b> <sup>*1</sup>	
<b>K</b>	<b>Tilt and telescopic steering control switch</b> <sup>*1</sup>	
	Adjustment <sup>*1</sup>	
	Driving position memory <sup>*1,2</sup>	
<b>L</b>	<b>Air conditioning system</b> .....	P.51
	Usage .....	P.51
	Rear window defogger .....	P.51
<b>M</b>	<b>Audio system</b> .....	P.46
<b>N</b>	<b>Trunk opener main switch</b> .....	P.63

<sup>\*1</sup>: Refer to the "Owner's Manual".

<sup>\*2</sup>: If equipped

## ■ Switches

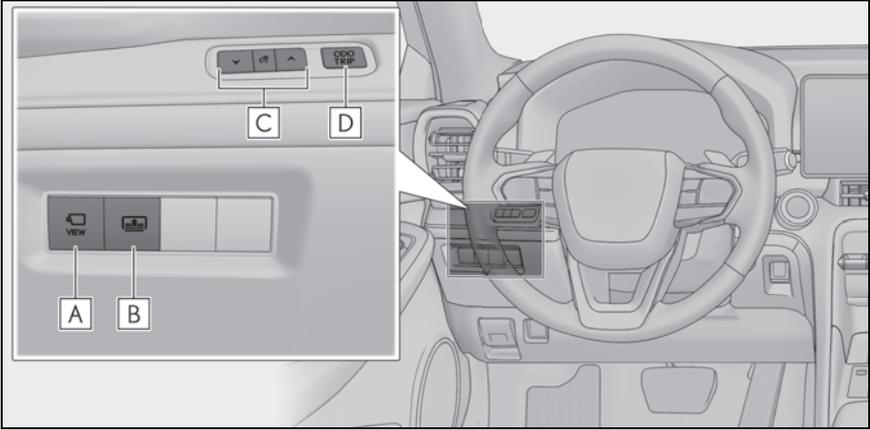


- A** Camera switch \*1,3
- B** Rear sunshade switch \*1,2
- C** Instrument panel light control switches \*2
- D** "ODO TRIP" switch \*2

\*1: If equipped

\*2: Refer to the "Owner's Manual".


\*3: Refer to the "MULTIMEDIA OWNER'S MANUAL".

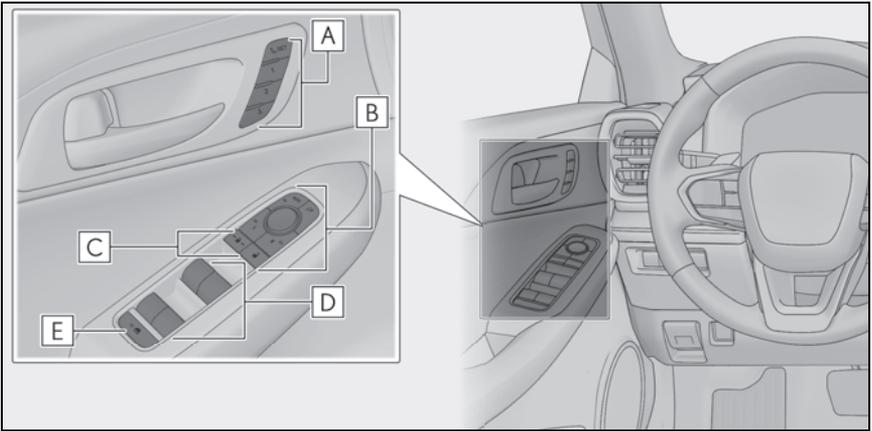

- A** Driving position memory switches \*1,2
- B** Outside rear view mirror switches \*2
- C** Door lock switches..... P.59
- D** Power window switches..... P.60
- E** Window lock switch..... P.60

\*1: If equipped


\*2: Refer to the "Owner's Manual".

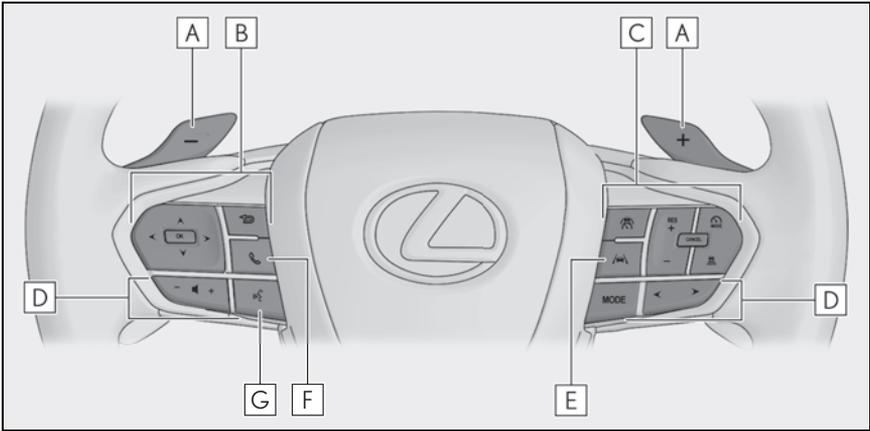

- A** Paddle shift switches ..... P.19, 20
- B** Meter control switches ..... P.26
- C** Cruise control switch
  - Dynamic radar cruise control\*1
  - Cruise control\*1
- D** Audio remote control switches \*2
- E** LTA (Lane Tracing Assist) switch \*1
- F** Phone switch ..... P.48
- G** Talk switch ..... P.48

\*1: Refer to the "Owner's Manual".

\*2: Refer to the "MULTIMEDIA OWNER'S MANUAL".

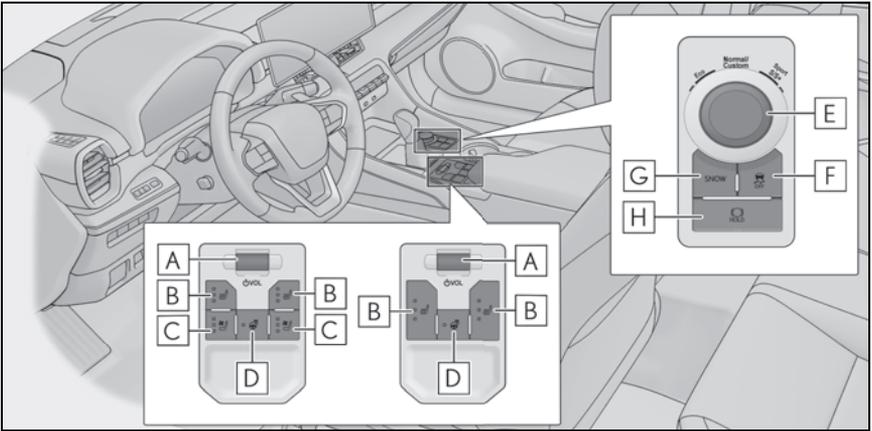


- A** “ ⏻ VOL ” switch \*1
- B** Seat heater switches \*2
- C** Seat ventilator switches \*2,3
- D** Heated steering wheel switch \*2,3
- E** Driving mode select switch ..... P.34
- F** VSC OFF switch \*2
- G** Snow mode switch \*2
- H** Brake hold switch ..... P.24

\*1: Refer to the “MULTIMEDIA OWNER’S MANUAL”.

\*2: Refer to the “Owner’s Manual”.

\*3: If equipped

## ■ Interior

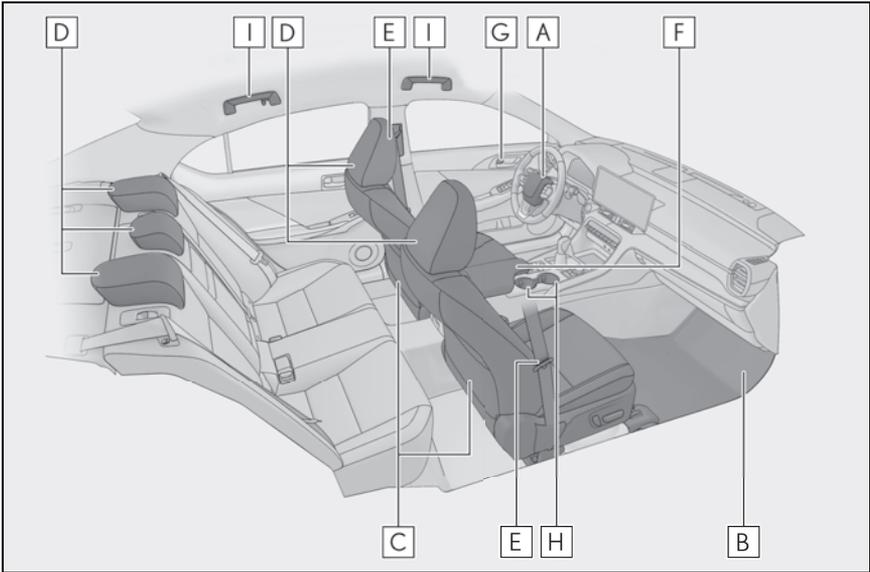

**A** SRS airbags\*

**B** Floor mats ..... P.11

**C** Front seats\*

**D** Head restraints\*

**E** Seat belts\*

**F** Console box\*


**G** Inside lock buttons ..... P.59

**H** Cup holders\*

**I** Assist grips\*

\*: Refer to the "Owner's Manual".

## ■ Ceiling

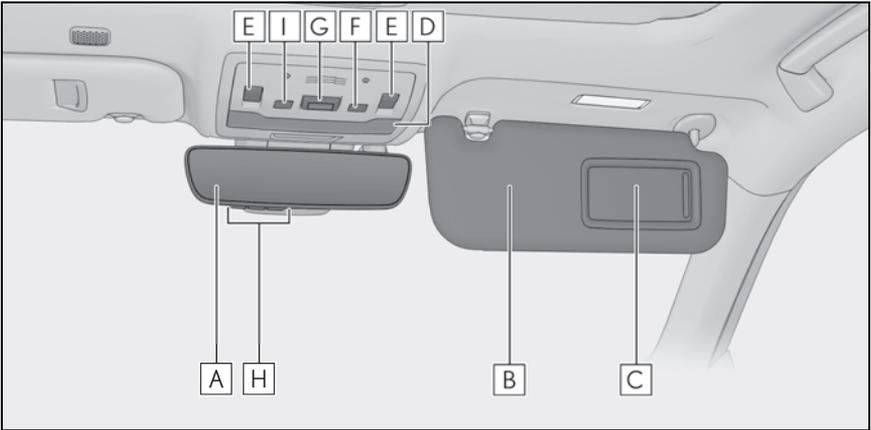


- A** Inside rear view mirror \*1
- B** Sun visors \*1
- C** Vanity mirrors \*1
- D** Interior light \*1  
Personal lights \*1
- E** Moon roof switches \*2 ..... P.61
- F** Door-linked interior light switch \*1
- G** "SOS" button \*1,2
- H** Garage door opener switches \*2 ..... P.64
- I** Intrusion sensor and tilt sensor cancel switch \*1

\*1: Refer to the "Owner's Manual".


\*2: If equipped

## Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

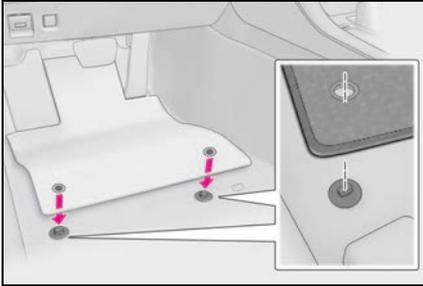

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

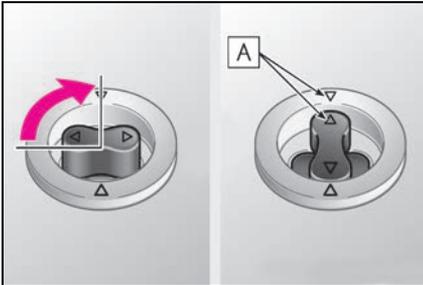


- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

Always align the  $\triangle$  marks **A**.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

# Keys

## The keys

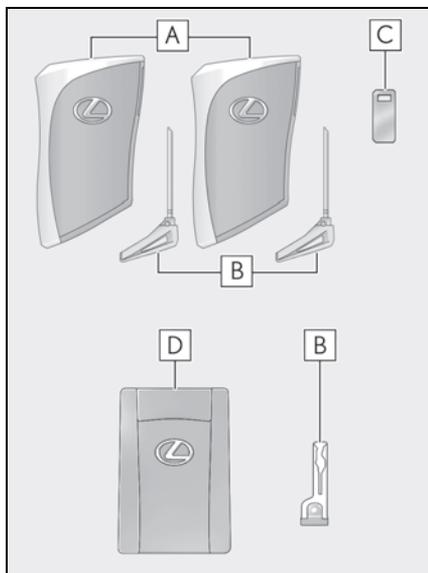

### **A** Electronic keys

- Operating the smart access system with push-button start (→P.14)
- Operating the wireless remote control function


### **B** Mechanical keys

### **C** Key number plate

### **D** Card key (electronic key) (if equipped)

Operating the smart access system with push-button start (→P.14)

## Wireless remote control

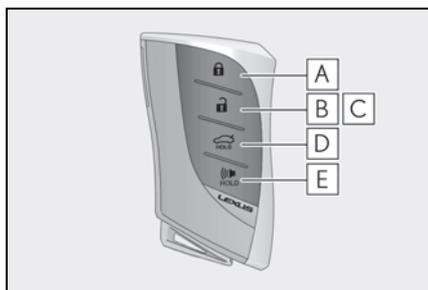

### **A** Locks the doors

### **B** Unlocks the doors

### **C** Opens the windows\*<sup>1</sup> and moon roof\*<sup>1,2</sup>


### **D** Opens the trunk

### **E** Sounds the alarm

\*<sup>1</sup>: This setting must be customized at your Lexus dealer.

\*<sup>2</sup>: If equipped

## Mechanical key

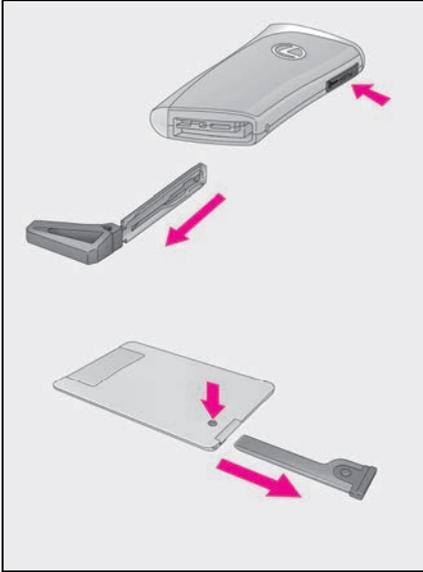

To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.


After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key.

For details on starting the engine, see page 15.

### Unlocking and locking the doors from the outside

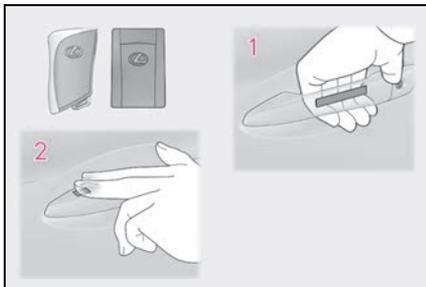

- 1 Grip the driver's door handle to unlock the door. Grip any passenger door handle to unlock all the doors.\*

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

- \*: The door unlock settings can be changed.

- 2 Touch the lock sensor (indentation on the upper part of the door handle) to lock all the doors.

Check that the door is securely locked.

### Opening the trunk from outside the vehicle

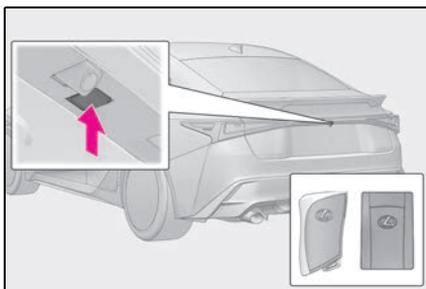

While carrying the electronic key, press the button on the trunk lid.

When all the doors are unlocked with the power door lock system, the trunk can be opened without carrying the electronic key.

For details on what to do when the electronic key does not operate properly, see page 72.

## Engine (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.


### Starting the engine

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the engine cannot be started.

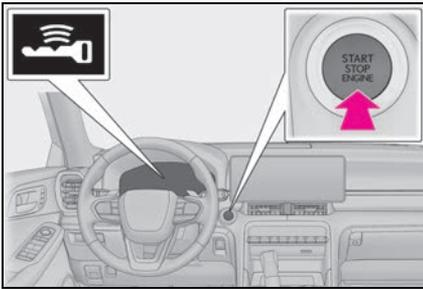

- 4 Press the engine switch shortly and firmly.

When operating the engine switch, one short, firm press is enough. It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.


The engine can be started from any engine switch mode.

### Stopping the engine

- 1 Stop the vehicle.
- 2 Set the parking brake, and shift the shift lever to P.
- 3 Press the engine switch.
- 4 Release the brake pedal and check that the display on the meters is off.

## Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

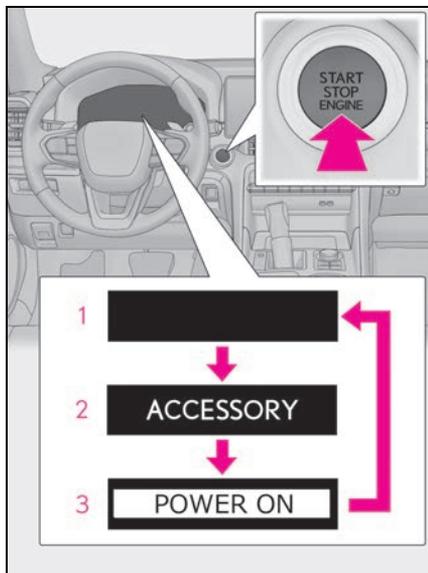

### 1 Off\*1

The emergency flashers can be used.

The multi-information display will not be displayed.

### 2 ACCESSORY mode\*2

Some electrical components such as the audio system can be used.

"ACCESSORY" will be displayed on the meters.

### 3 IGNITION ON mode

All electrical components can be used.

"POWER ON" will be displayed on the meters.


\*1: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

\*2: ACCESSORY mode can be enabled/disabled on the customize menu.

## If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.  
**▶ If the shift lever is shifted to N**
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the engine.  
**▶ If the shift lever cannot be shifted to N**
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

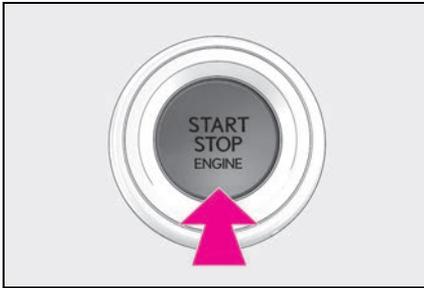


- 4** To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

# Automatic Transmission

## Shifting the shift lever

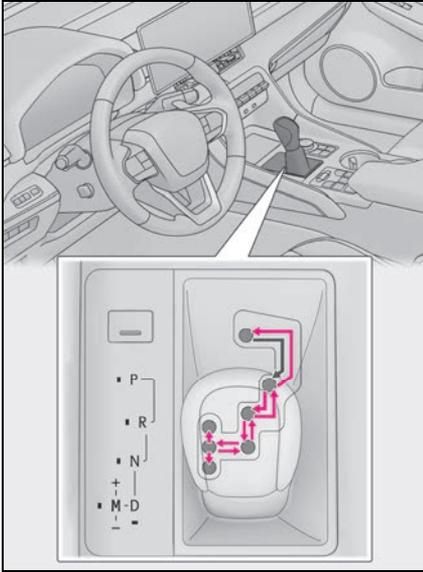

← While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed.

When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

## Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the engine
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving <sup>*1</sup>
M	M mode driving <sup>*2</sup>

\*1: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.

\*2: Any gear range can be fixed when driving in M mode.

## Selecting the driving mode

### Driving mode

→P.34


## Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the “-” or “+” paddle shift switch.

When the “-” paddle shift switch is operated, the shift range will be downshifted to a range that enables engine braking force that is suitable to driving conditions.

When the “+” paddle shift switch is operated, the shift range will be one gear higher than the gear in use during normal D position driving.

Changing the shift range allows restriction of the highest gear, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

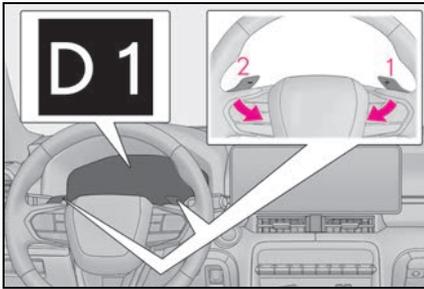

**1** Upshifting

**2** Downshifting

8-speed models: The selected shift range, from D1 to D8, will be displayed on the multi-information display.

6-speed models: The selected shift range, from D1 to D6, will be displayed on the multi-information display.

To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.


### Shift ranges and their functions

Meter display	Function
D2 - D8 (8-speed models)	A gear in the range between 1 and the selected gear is automatically chosen depending on vehicle speed and driving conditions
D2 - D6 (6-speed models)	
D1	1st gear is set

A lower shift range will provide greater engine braking forces than a higher shift range.

## Selecting gears in the M position

To enter M mode, shift the shift lever to M. Gears can then be selected by operating the shift lever or paddle shift switches, allowing you to drive in the gear of your choice.

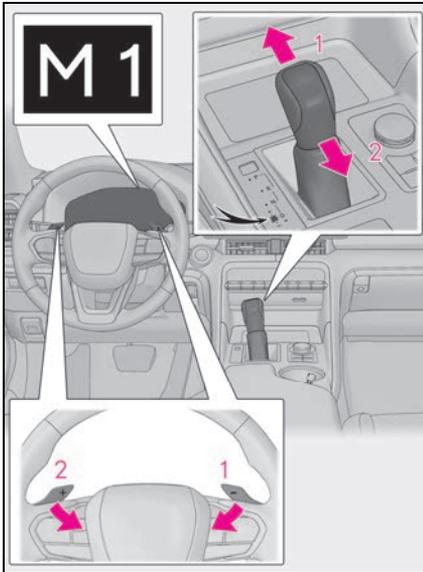

**1** Upshifting

**2** Downshifting

The gear changes once every time the shift lever or paddle shift switch is operated.

8-speed models: The selected gear, from M1 to M8, will be fixed and displayed on the multi-information display.

6-speed models: The selected gear, from M1 to M6, will be fixed and displayed on the multi-information display.

When in the M position, the gear will not change unless the shift lever or paddle shift switches are operated.


However, even when in the M position, the gears will be automatically changed in the following situation:

- When vehicle speed drops (downshift only).
- When the automatic transmission fluid or engine coolant temperature is low.
- When automatic transmission fluid temperature is high.
- When the needle of the tachometer is in the red zone (the range which exceeds the allowable revs of the engine).

In the following situations, the gear will not shift even if the shift lever or paddle shift switches are operated.

- "Slippery Road Cannot Shift to Lower Gear" is displayed on the multi-information display.
- The vehicle speed is low (upshift only).

## Turn Signal Lever

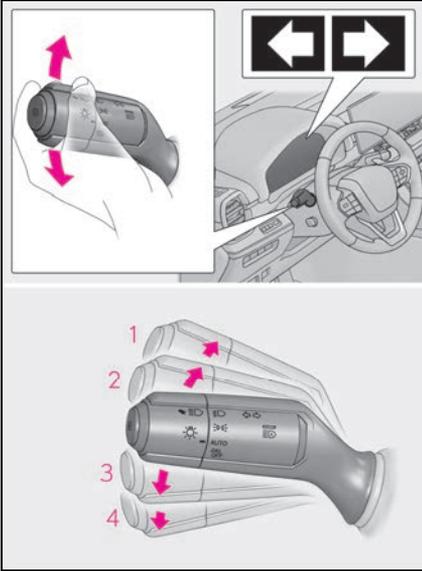

- 1** Right turn
- 2** Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- 3** Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- 4** Left turn


# Parking Brake

The parking brake can be set or released automatically or manually.

In automatic mode, the parking brake can be set or released automatically. Also, even in automatic mode, the parking brake can be set or released manually.

## Using the manual mode

The parking brake can be set and released manually.

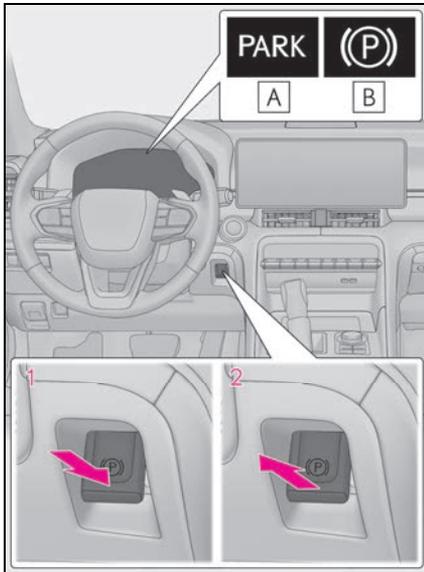

**A** U.S.A.

**B** Canada

- 1** Push the switch to set the parking brake

The parking brake indicator light will turn on.

Press and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

- 2** Pull the switch to release the parking brake


- Operate the parking brake switch while depressing the brake pedal.
- Using the parking brake automatic release function, the parking brake can be released by depressing the accelerator pedal. When using this function, slowly depress the accelerator pedal.

Make sure that the parking brake indicator light turn off.

If the parking brake indicator light flashes, operate the switch again.

## Turns automatic mode on

While the vehicle is stopped, press and hold the parking brake switch until a message is shown on the multi-information display.

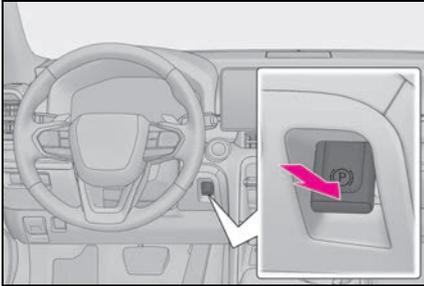


When the automatic mode is turned on, the parking brake operates as follows.

- When the shift lever is moved out of P, the parking brake will be released, and the parking brake indicator light will turn off.
- When the shift lever is moved into P, the parking brake will be set, and the parking brake indicator light will turn on.

Operate the shift lever with the vehicle stopped and the brake pedal depressed.

The auto function may not operate if the shift lever is moved extremely quickly or the brake pedal is not firmly depressed. In this situation, apply the parking brake manually.


## Turns automatic mode off

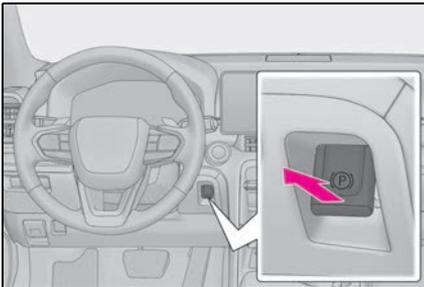

While the vehicle is stopped pull and hold the parking brake switch until a message is shown on the multi-information display.

## Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, M, N or P with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or M to allow smooth start off.

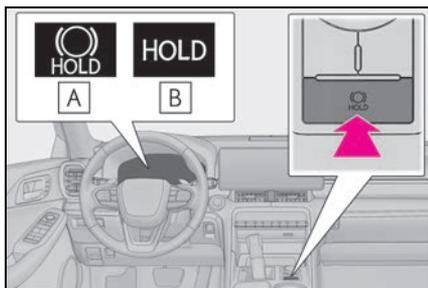

Turns the brake hold system on

The brake hold standby indicator (green)


**A** comes on. While the system is holding the brake, the brake hold operated indicator (yellow) **B** comes on.

# Multi-information Display

## Displayed contents summary

### ■ Display area

A variety of driving-related information can be displayed. Depending on the situation, warning or advice pop-up displays will also be displayed.

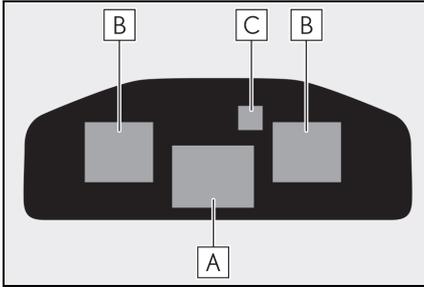

- A** Content display area (center)
- B** Content display area (side)
- C** Driving support system status display area \*

\*: Depending on the settings and the system operation state, the position displayed may change.


### ■ Items displayed in the content display area

- Content display area (center)
  - Blank
  - Gear Position
  - Driving support system information display
  - Map display
  - Message
- Content display area (side)
  - Blank
  - Fuel consumption
  - Eco Driving Indicator
  - Driving support system information display
  - Navigation system-linked display
  - Audio system-linked display
  - Drive information
  - G-force
  - Gear Position

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


## Displayed content

### Components/Operations

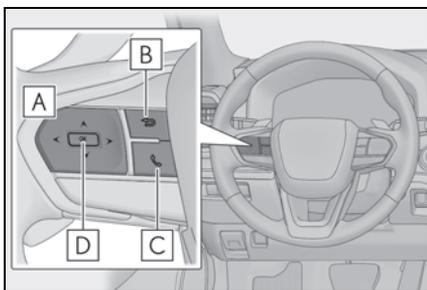

- A** < / > : Change the screen and move the cursor
  - ^ / v : Change displayed content, scroll up/down the screen
- B** Return to the previous screen
- C** Start/receive call
  - Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "MULTIMEDIA OWNER'S MANUAL".
- D** Press: Enter/Set  
Press and hold: Reset/Display customizable items, display the cursor

## Eco Driving Indicator

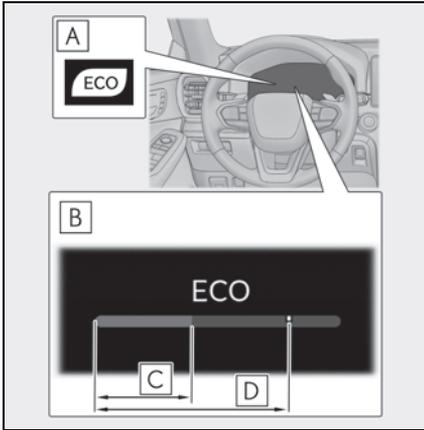

- A** Eco Driving Indicator Light
- During Eco-friendly acceleration (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds the Zone of Eco driving, or when the vehicle is stopped, the light turns off.
- B** Eco Driving Indicator Zone Display
- Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.
- C** Eco driving ratio based on acceleration
- If the acceleration exceeds the Zone of Eco driving, the right side of the Eco Driving Indicator Zone Display will blink.
- At this time, the Eco Driving Indicator Light will turn off.
- D** Zone of Eco driving


## Current fuel consumption/history screen

Fuel consumption information can be displayed on the center display.

### ■ Displaying fuel consumption/history screen on the center display

- 1 Select  on the main menu.
- 2 Select "Trip information".
- 3 Select "Current" or "History".


### ■ Current fuel consumption screen

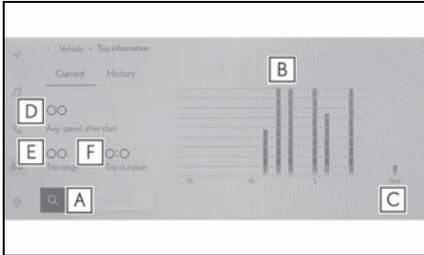

- A** Resetting the history data
- B** Fuel consumption in the past 15 minutes
- C** Current fuel consumption
- D** Average vehicle speed since the engine was started.
- E** Trip range
- F** Elapsed time since the engine was started.

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.


### ■ History fuel consumption screen

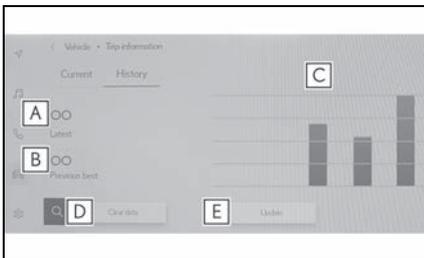

- A** Latest fuel consumption
- B** Best recorded fuel consumption
- C** Previous fuel consumption record
- D** Resetting the history data
- E** Updating the latest fuel consumption data

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

## Headlight switch

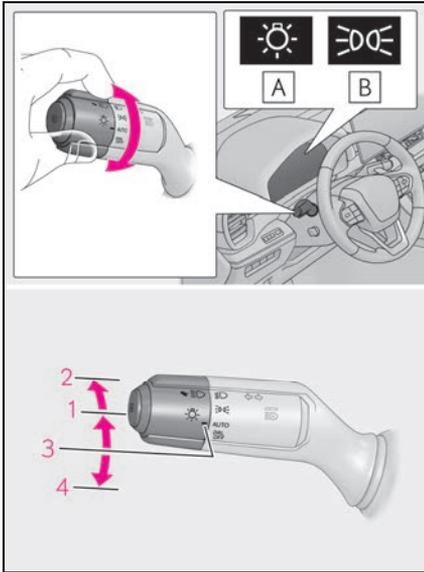


**A** U.S.A.

**B** Canada

- 1** ☰ The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- 2** ☰ The headlights and all lights listed above (except daytime running lights) turn on.
- 3** AUTO The headlights, parking lights, daytime running lights and all the lights listed above turn on and off automatically. (When the engine switch is in IGNITION ON mode.)
- 4** <sup>DRL</sup><sub>OFF</sub> (U.S.A.) Off

## Turning on the high beam headlights

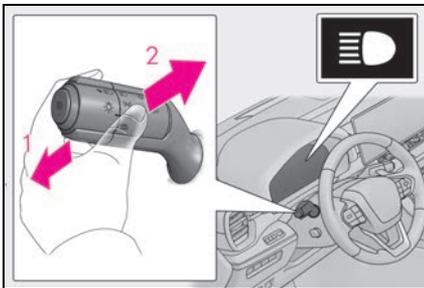


- 1** With the headlights on, push the lever away from you to turn on the high beams.  
Pull the lever toward you to the center position to turn the high beams off.
- 2** Pull the lever toward you and release it to flash the high beams once.  
You can flash the high beams with the headlights on or off.


## AHB (Automatic High Beam)

The Automatic High Beam uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically changes the head lights between the high beams and low beams.

### Activating the Automatic High Beam

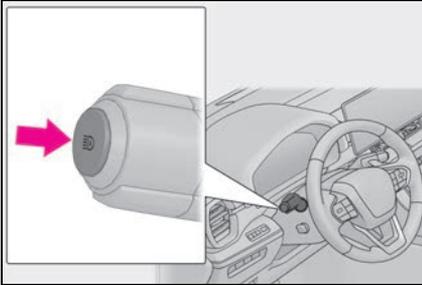

- 1 Press the Automatic High Beam switch.

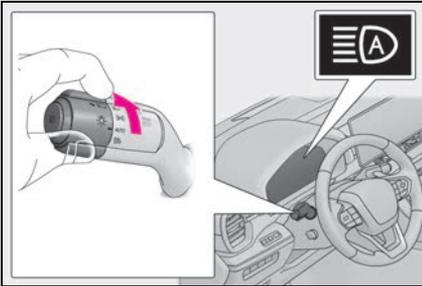


- 2 Turn the headlight switch to the  or AUTO position.

When the headlight switch lever is in the original position, the Automatic High Beam system will be enabled and the Automatic High Beam indicator will illuminate.

## Turning the high beams on/off manually

### ■ Changing to the high beams

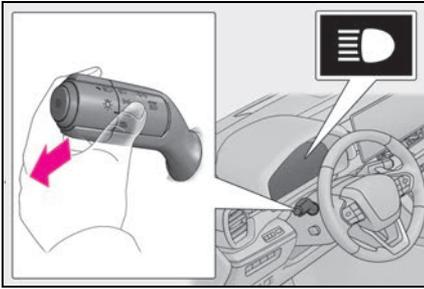


Push the lever away from you.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to enable the Automatic High Beam system again.

### ■ Changing to the low beams

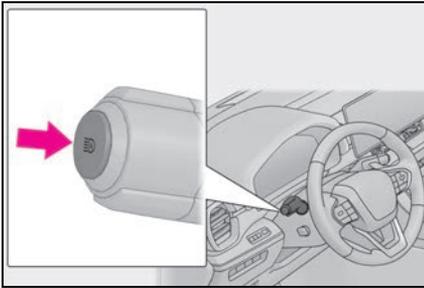


Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off.

Press the switch to enable the Automatic High Beam system again.

### ■ Temporarily changing to the low beams

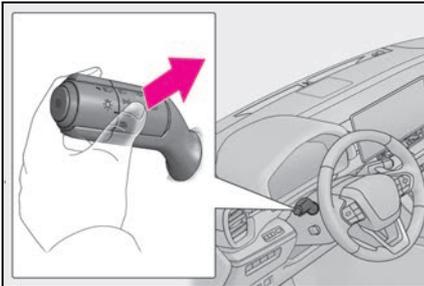




Pull the lever rearward and then return it to its original position.

It is recommended to switch to the low beams when use of the high beams is inappropriate or when the high beams may cause problems or distress to other drivers or pedestrians nearby.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. After this, the Automatic High Beam system will operate.

## Windshield Wipers and Washer


When AUTO is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

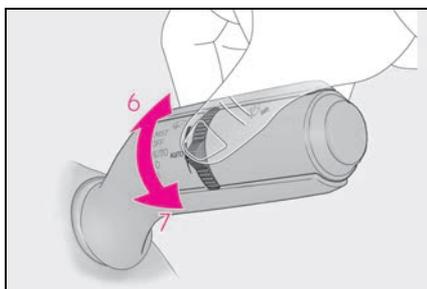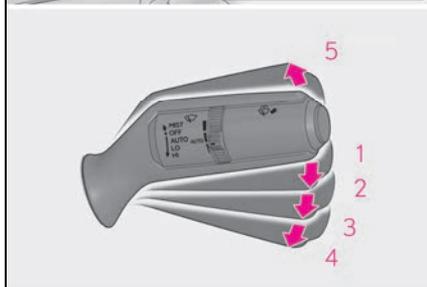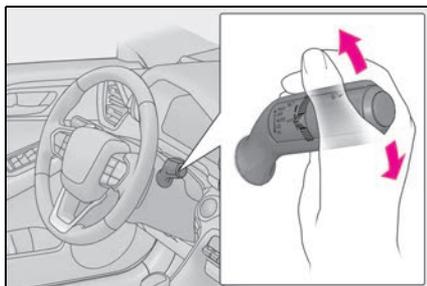

- 1** OFF (U.S.A.) or ○ (Canada) Off
- 2** AUTO Rain-sensing operation
- 3** LO (U.S.A.) or ▼ (Canada)  
Low speed operation
- 4** HI (U.S.A.) or ▼ (Canada)  
High speed operation
- 5** MIST (U.S.A.) or △ (Canada)  
Temporary operation

When is AUTO selected, the sensor sensitivity can be adjusted by turning the switch ring.

- 6** Increases the sensitivity
- 7** Decreases the sensitivity

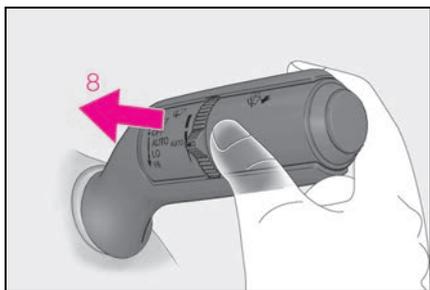

## 8 Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

The wipers will automatically operate a couple of times after the washer squirts.


Vehicles with headlight cleaners:

When the engine switch is in IGNITION ON mode and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

# Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

## ► Vehicles without Adaptive Variable Suspension System

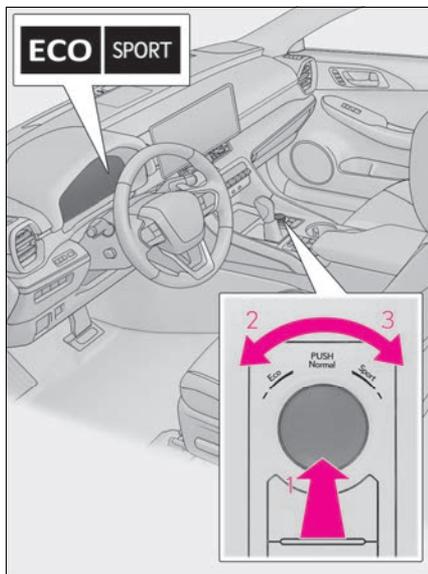

### 1 Normal mode

Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

Press the switch to change the driving mode to normal mode when Eco drive mode or Sport mode is selected.

### 2 Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

### 3 Sport mode

Controls the transmission and engine to provide quick, powerful acceleration. This mode also changes the steering feel, making it suitable for when agile driving response is desired, such as when driving on roads with many curves.

When the Sport mode is selected, Sport mode indicator will come on.

## ► Vehicles with Adaptive Variable Suspension System



### 1 Normal mode/Custom mode

Normal mode and Custom mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between Normal mode and Custom mode. When Custom mode is selected, the Custom mode indicator will be illuminated.

When Eco drive mode or Sport mode is selected, pressing the switch changes the driving mode to Normal mode.

- Normal mode  
Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.

- Custom mode

Allows you to drive with the powertrain, suspension, steering and air conditioning system functions set to your preferred settings.

### 2 Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When not in Eco drive mode, if the driving mode select switch is turned to the left, the Eco drive mode indicator will come on.

### 3 Sport mode

- SPORT S mode

Controls the transmission and engine to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.

When not in SPORT S mode, if the driving mode select switch is turned to the right, the Sport S mode indicator will come on.

- SPORT S+ mode

Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the transmission and engine. Suitable for sportier driving.

When in SPORT S mode, if the driving mode select switch is turned to the right, the Sport S+ mode indicator will come on.

# Basic Operation of Multimedia System

## Map scrolling operation

The map can be moved and a touched point can be set as the center of the map screen.

### ■ Flick/drag operation



The map screen can be moved by touching, dragging or flicking it.


Touch [Recenter] to return the center of the map to the current position.

### ■ Touch and hold operation

If a desired point on the map screen is touched and held, the full route map screen to the selected point will be displayed.



1 Touch and hold the desired point.

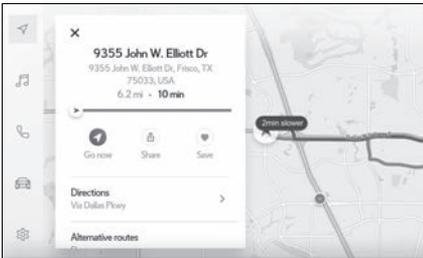

2 Full route map screen will be displayed for the selected point.

# Navigation

The navigation system indicates your present position and assists in locating a desired destination.

## Destination search screen

### ■ Searching for a destination using the keyboard

A destination can be searched for by entering keywords.

**1** Touch [  ] or [  ] on the map screen.



**2** Touch [Search navigation].



**3** Enter characters using the keyboard.

**4** Touch [Go].

**5** Touch the desired item from the list.


## ■ Searching for a destination by category

A destination can be searched for from a list of categories.

1 Touch [🎤] or [🔍] on the map screen.



2 Touch [Destinations].

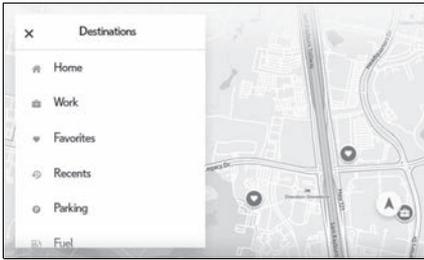

3 Touch the desired search method.

[Home]: Touch to set the registered home as the destination. A point must be registered as home before using this function.\*

[Work]: Touch to set the registered workplace as the destination. A point must be registered as a workplace before using this function.\*

[Favorites]: Touch to set a registered favorite as the destination. A point must be registered as a favorite before using this function.

[Recents]: Touch to set a destination from the destination history as the destination.

[Send to car]: Send to car enables customer to send a destination or POI to the vehicle from Lexus app.

[Parking]: Touch to search for a nearby parking lot to set as a destination.

[Fuel/Charging]: Touch to search for a fuel station/charging facility to set as a destination.

[Food]: Touch to search for a restaurant to set as a destination.

[Hospitals]: Touch to search for a hospital to set as a destination.

When setting a business as a destination, if your estimated time of arrival is outside of business hours or near closing time, a notification asking to confirm the destination will be displayed.

4 Touch the desired destination from the list.


\*: Home and Work must be added via Lexus app.

5 Touch the desired destination from the list.

► **Editing the favorites list**

The favorites list can be edited.

- 1 Touch [📍] or [🔍] on the map screen.
- 2 Touch [Destinations].
- 3 Touch [Favorites].

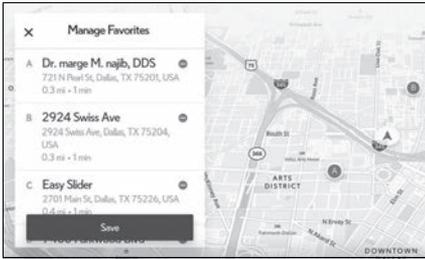

4 Touch [✎].

Touch [⊖] to delete a favorite.


The favorites list editing screen will be displayed.

5 Touch [Save].

► **Editing the destination history**

The destination history can be edited.

- 1 Touch [📍] or [🔍] on the map screen.
- 2 Touch [Destinations].
- 3 Touch [Recents].

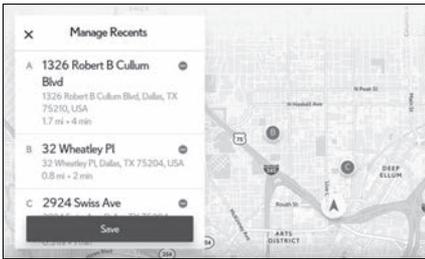

4 Touch [✎].


The destination history editing screen will be displayed.

Touch [⊖] to delete a destination history item.

5 Touch [Save].

## ■ Searching for a destination using voice control

**1** Touch [  ] or [  ] on the map screen.

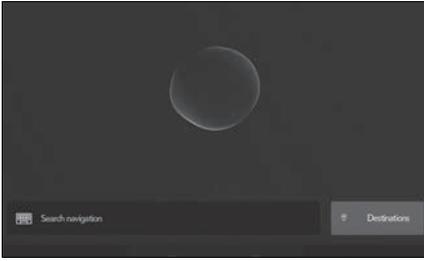

**2** Say the keyword you wish to use for the search.

**3** Touch or use voice command for desired result from list.

# Connecting a Smartphone or Communication Device

## Registering a Bluetooth® device from the multimedia system

A cellular phone or portable device must be registered in order to use hands-free calling or Bluetooth® audio. Once registration is complete, Bluetooth® will automatically be connected each time the multimedia system is started.

When Apple CarPlay/Android Auto is connected via USB, the device will be registered automatically.

If no Bluetooth® device is connected, the registration screen can also be displayed by pressing and holding the [  ] switch on the steering wheel.

- 1 Touch [  ] from the main menu.
- 2 Touch [Bluetooth & Devices] on the submenu.  
If no device is registered, proceed to Procedure 4.
- 3 Touch [Add another device].

While a device is connected to the multimedia system, the confirmation screen for disconnecting the device may be displayed. Disconnect the device to perform registration.

- 4 Touch [Search for devices].



- 5 Touch the device to register from the main area.
  - The Bluetooth® address may be displayed instead of the device name.
  - Certain models of Bluetooth® devices may not be displayed in the device list, unless a certain screen is displayed on the Bluetooth® device. Refer to the Bluetooth® device's instruction manual for details.

- 6 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth<sup>®</sup> device, and then touch [OK].
  - Some Bluetooth<sup>®</sup> devices may need to be operated to complete registration.
  - When an HFP supported Bluetooth<sup>®</sup> device is registered, that device is automatically set as the primary device if the driver does not have a primary device set.
  - The Apple CarPlay or Android Auto settings may be displayed. The Apple CarPlay or Android Auto screen will be displayed if the use of either is enabled.
  - A message indicating that connection is complete is displayed, and the name of the registered Bluetooth<sup>®</sup> device is displayed in the submenu.
  - If an operation failed screen is displayed, follow the operation instructions on the screen.

### ■ Registering from a Bluetooth<sup>®</sup> device

If the Bluetooth<sup>®</sup> device cannot be found by searching with the multimedia system, register by searching for the multimedia system from the Bluetooth<sup>®</sup> device.

- 1 Touch [  ] from the main menu.
- 2 Touch [Bluetooth & Devices] on the submenu.  
If no device is registered, proceed to Procedure 4.
- 3 Touch [Add another device].

While a device is connected to the multimedia system, the confirmation screen for disconnecting the device may be displayed. Disconnect the device to perform registration.




- 4 Register the multimedia system from the Bluetooth<sup>®</sup> device to be used.
  - Perform the operation according to the operating procedure of the Bluetooth<sup>®</sup> device.
  - Be sure to display this Bluetooth<sup>®</sup> connection screen before performing registration on the Bluetooth<sup>®</sup> device.

- 5 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth® device, and then touch [OK].
- Some Bluetooth® devices may need to be operated to complete registration.
  - When an HFP supported Bluetooth® device is registered, that device is automatically set as the primary device if the driver does not have a primary device set.
  - The Apple CarPlay or Android Auto settings may be displayed. The Apple CarPlay or Android Auto screen will be displayed if the use of either is enabled.
  - A message indicating that connection is complete is displayed, and the name of the registered Bluetooth® device is displayed in the submenu.
  - If an operation failed screen is displayed, follow the operation instructions on the screen.

### ■ Operating with the steering switches

Some hands-free call functions can be operated from the steering switches, such as receiving or making calls. The steering switch functions change depending on the status of the multimedia system.

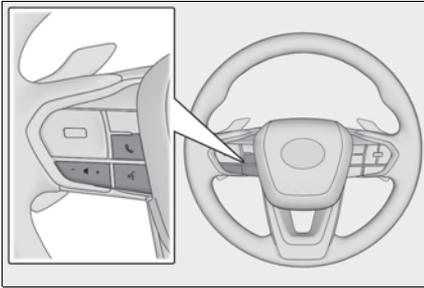

- Operate the switches as necessary.  
[+] switch  
Increases the ringtone volume or receiver volume.  
Press and hold to adjust continuously.
- [-] switch  
Decreases the ringtone volume or receiver volume.  
Press and hold to adjust continuously.

#### [🗨️] switch

Calls can be made using voice command.

To end Intelligent Assistant, press and hold the talk switch.


#### [📞] switch

- While a call cannot be made, displays call history screen or phone menu.
- Phone calls can be made when [📞] is displayed on the phone screen.
- While making a call or during a call, ends the call.
- While receiving a call or during call waiting, answers the call.

## Making calls from call history

Calls can be made to phone numbers that have been recorded in the call history as outgoing or incoming calls.

- 1 Touch [📞] from the main menu.
- 2 Touch [Recents] on the submenu.

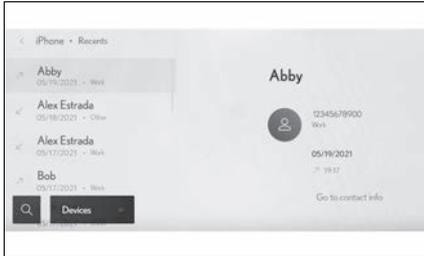

- 3 Select the contact.


For phone numbers that are not registered in the contact, the phone number will be displayed as it is.

- 4 Touch the desired phone number.

## Making calls from the favorites list

Make a call from your favorites list.

- 1 Touch [📞] from the main menu.
- 2 Touch [Favorites] on the submenu.

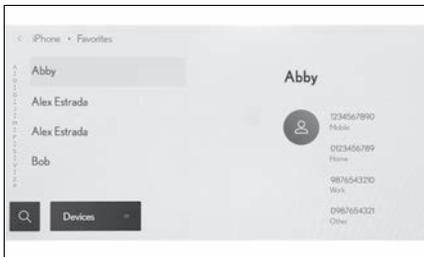


- 3 Select the person you want to call from your favorites list.

- 4 Touch the desired phone number.

## Making calls from contacts

Make a call from the contacts registered on the multimedia system.

- 1 Touch [  ] from the main menu.
- 2 Touch [Contacts] on the submenu.
- 3 Select a contact.

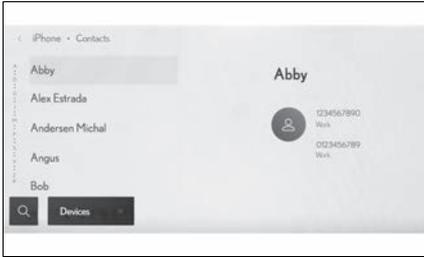

- 4 Touch the desired phone number.

## Answering calls

When there is an incoming call, the incoming call sounds and the incoming call screen or incoming call notification is displayed.



- Answer the call by doing one of the following.
  - Touch [  ].
  - Press the [  ] switch on the steering wheel.

## Making calls from the message function

Hands-free calls can be made using the message function.

- Touch the blue number to make a call.  
Consecutive numbers may be recognized as phone numbers. In addition, some phone numbers, such as phone numbers from other countries, may not be recognized.


# Basic Operation of Audio System

## Changing the audio source

Source can be changed to radio, USB, etc.

**1** Touch [  ] from the main menu.

**2** Touch [Sources].

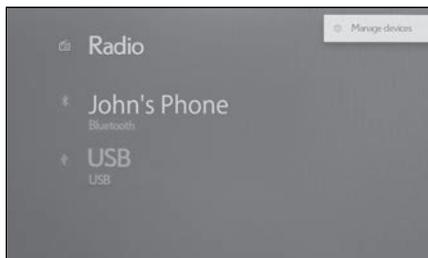

**3** Touch the source you wish to select.

## Listening to the radio

Switch to your preferred frequency or service and listen to the radio.

**1** Touch [  ] from the main menu.

**2** Touch [Sources].

**3** Touch [Radio].

**4** Select the station selection method or service as necessary.

[Favorites]: Select a broadcasting station from those registered as favorites.

[Tune]: Select the broadcasting station by entering a frequency with the numeric keypad.

[FM Radio]: Switches to FM mode. The FM station list, the 3 most recently listened stations, and the receivable FM broadcasting stations are displayed.

[AM Radio]: Switches to AM mode. The AM station list, the 3 most recently listened stations, and the receivable AM broadcasting stations are displayed.

[SiriusXM]<sup>\*1</sup>: Switches to SiriusXM Radio mode.


Displays [For You] and contents/Super Categories/[All channels]/[Listening History].

**5** Select the broadcasting station from the station list or genre.

<sup>\*1</sup>: This function is not available in some regions.

6 Operate the radio that is being received as necessary.

● Operating AM/FM from the screen

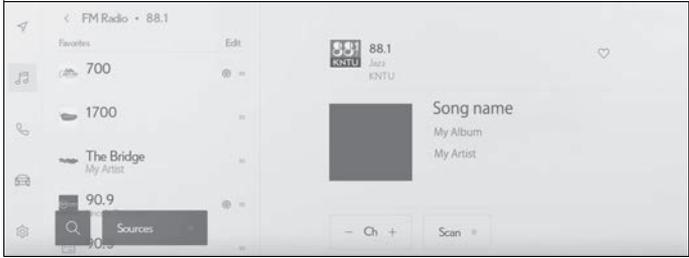

[Ch]: Touch [ - ] or [ + ] to search for the receivable broadcasting stations. Touch and hold to jump to the next frequency with available radio signal. When released, the broadcasting station closest to that position with the best radio reception is selected automatically.


[Scan]: SEEK UP and output the audio of the detected station for 10 sec. This is repeated.

[ HD 1 2 ]: Displayed when Multicast CH is supported in FM mode. Touch to display the SPS channel list. The mode can be changed to the displayed SPS channel list.

[ ♥ ]: Registers the currently received broadcasting station in favorites. When registered, touch to cancel.

Preset buttons of submenu: Receive the registered broadcasting stations.

● Operating SiriusXM Radio from the screen\*1

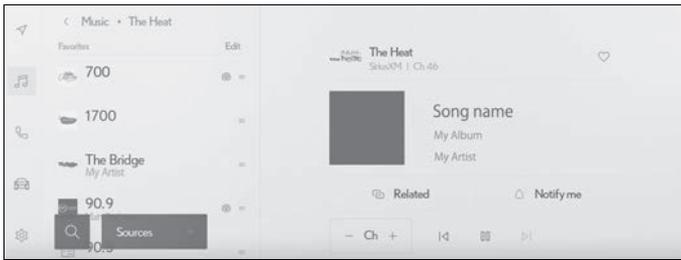

[Ch]: Touch [ - ] or [ + ] to search for the receivable channels. Touch and hold to jump to the next frequency with available radio signal. When released, the current channel is received.

[ ⏮ ]/[ ⏭ ]: Fast rewind or fast forward the radio cache. Touch and hold to jump to the start or end of the buffer.

[ ⏸ ]: Pause the radio cache.

[ ▶ ]: Play the radio cache.

[Related]: Displays content related to the received channel.


[Notify me]: Select an artist or song, or both an artist and song, to receive a notification when the corresponding broadcast starts. (When receiving a regular channel) Select a sports team to receive a notification when the corresponding broadcast starts. (When receiving a sport channel)

[ ♥ ]: Registers the currently received channel in favorites. When registered, touch to cancel.

Preset buttons of sub menu: Receive the registered channels.

\*1: This function is not available in some regions.

● Operating with the steering switches

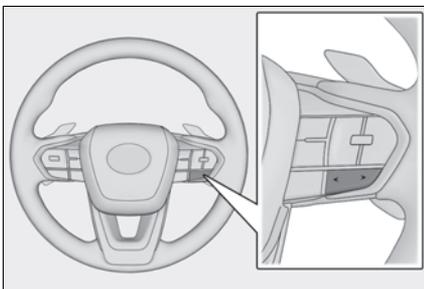

[<]/[>]switches

- AM/FM Radio

Switch the frequencies or broadcasting stations registered in the preset buttons order.

Press and hold to switch frequencies. When released, the broadcasting station closest to that position with the best radio reception is selected automatically.

- SiriusXM Radio

Switch the channels registered in the preset buttons order.


Press and hold to switch channels. When released, the channel closest to that position with the best radio reception is selected automatically.

## Playing iPod/iPhone

Play back music files on an iPod/iPhone connected to the USB Type-C port. When an iPod/iPhone is connected, a button with the device's name is displayed on the source selection screen. This may not be displayed for some devices.

Connect an iPod or iPhone.

- 1 Touch [  ] from the main menu.
  - 2 Touch [Sources].
  - 3 Touch the device name or [USB].
  - 4 Operate an iPod/iPhone that is playing as necessary.
- Operating from the screen

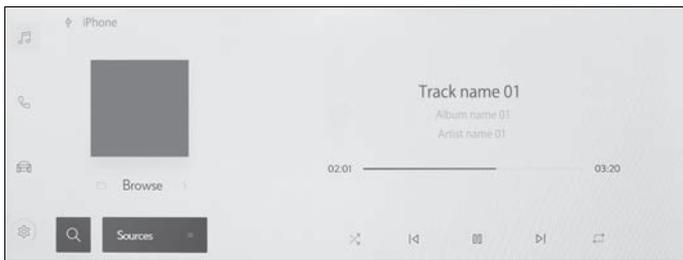

[  ]: Performs shuffle playback. Each touch switches the shuffle setting.\*1

[  ]: Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

Touch and hold to fast rewind. Release to start playback from that position.

[  ]: Pauses playback.

[  ]: Plays.


[  ]: Switches the tracks. Touch and hold to fast forward. Release to start playback from that position.

[  ]: Performs repeat playback. Each touch switches the repeat setting.\*1

[Browse]: Displays the playback mode in the submenu. Tracks can be selected from a list sorted by artist, album, song, playlist, genre, Podcast, composer, audiobook, or radio. [Shuffle play] is displayed when playing a track selected from the list. Touch this to return to the playback screen and perform shuffle playback.

\*1: The order in which shuffle or repeat settings switch depends on the connected device.

● Operating with the steering switches

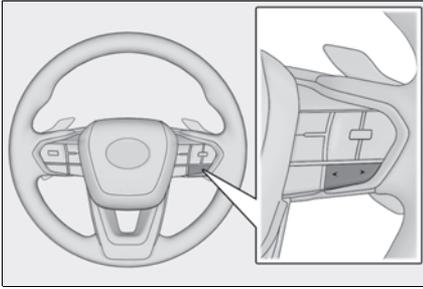

[<]/[>]switches

Switch the tracks.


Press and hold to fast rewind or fast forward. Release to start playback from that position.

## Automatic air conditioning system

Air outlets and fan speed are automatically adjusted according to the temperature setting.

The air conditioning system can be operated using the air conditioning control panel and air conditioning control screen on the center display.

## Air conditioning controls

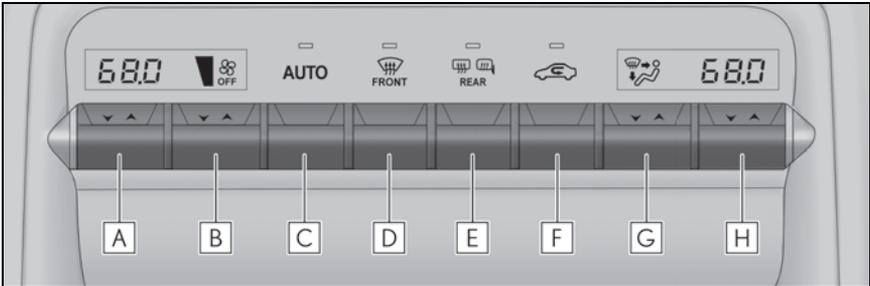


- A** Left-hand side temperature control switch
- B** Fan speed control switch
- C** Automatic mode switch
- D** Windshield defogger switch
- E** Rear window defogger and outside rear view mirror defoggers switch
- F** Outside/recirculated air mode switch
- G** Airflow mode control switch
- H** Right-hand side temperature control switch

## Starting Voice Control


Voice control can be started by any of the following operations:

### ■ Press the talk switch

Press [  ] switch (talk switch) on the steering wheel.

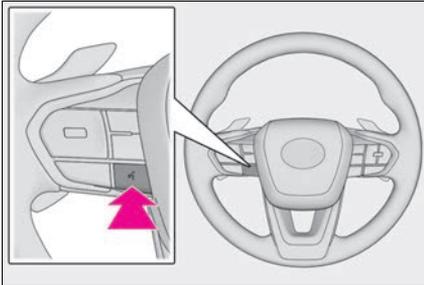

### ■ Say the wake word

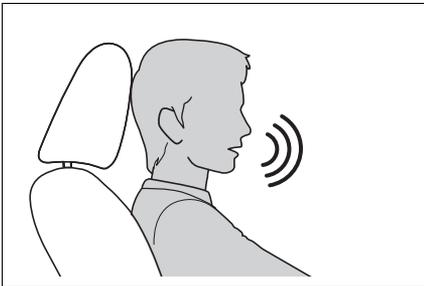

Say "Hey Lexus"

- The wake word can be turned on or off.
- The wake word can be used and then immediately issue a voice command.

Example: "Hey Lexus, take me to an Italian restaurant."

### ■ Touch the voice search button



Touch [  ] or [  ] on the screen.

## Function list

The following tables list frequently used commands for each function category.

- The functions available may vary according to the system installed.
- Items with "Subscription" will require Intelligent Assistant functionality.

### ■ Common

Action	Example voice command	Subscription
Shows list of general commands	"Help"	No
Stops the current conversation and re-starts at the beginning	"Start over"	No
Cancels the Intelligent Assistant system	"Cancel"	No

### ■ Navigation

Intelligent Assistant system enables navigation voice search. This allows you with variety of features such as searching a point of interest (POI), navigate to an address as well as discovering new POIs.

Function	Example voice command	Subscription
Destination search	"Take me to <location category/business name>" "Take me to an Italian restaurant" "Take me to <address>" "Take me to 6565 Headquarters drive Plano TX" "Take me home" "Take me to work"	Yes
Map control	"Zoom in" "Zoom out"	Yes
Route information	"Cancel trip"	Yes
Telematics	"Call Destination Assist"	No

## ■ Multimedia control

Allows you to engage in a dialog with the Intelligent Assistant to complete various multimedia tasks via voice input.

Function	Example voice command	Subscription
Radio	"Tune to 99.5 FM" "Tune to Rock on FM" "Tune to channel 2 on SiriusXM"	No
Media	"Mute audio" "Next" "Previous"	No
Media Streaming	"Play <artist/album/song/genre/playlist>" "Play Frank Sinatra"	Yes

## ■ Hands-free phone operation

Allows you to engage in a dialog with the Intelligent Assistant to complete various tasks via voice input, such as making a phone call to a contact, or calling destination assist.

Function	Example voice command	Subscription
Phone call	"Call John Smith" "Dial 0123456789" "Call back" "Redial"	No
Message	"Send message to John Smith" "Read message"	No

## ■ Screen display switching

Allows you to easily change to various function screen by voice.

Function	Example voice command	Subscription
Navigation	"Show map"	Yes
Phone	"Show recent calls"	No
Multimedia	"Show the FM station list"	No
Settings	"Show display settings"	No

## ■ Vehicle device control

Allows you to easily change a vehicle setting or activate a function by voice.

Function	Example voice command	Subscription
Climate	"Turn on the air conditioner" "Set the temperature to 70 degrees" "Turn the fan speed up"	No

## ■ Notifications


Offers notifications based on user preferences, vehicle geolocation and learned behavior. Each service can be set to On/Off from the Lexus app.

Function	Detail	Subscription
POI suggestion (Navigation)	<ul style="list-style-type: none"><li>• A POI shared through a smartphone app</li><li>• Parking suggestions near destination</li></ul>	Yes
Low fuel (Navigation)	Automatically notifies user of low fuel level. If applicable, provides POI list nearby (ahead) or along route and allows user to select and navigate by touch.	Yes

## Connecting a device via the USB Type-C port

Connect a device such as smartphone or portable player.

- Connect the USB Type-C cable to the port.

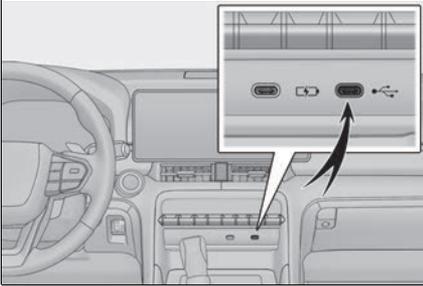

When connecting a USB flash drive, connect it directly to the USB Type-C port.


## Safety Connect (If equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

By using the Safety Connect service, you are agreeing to be bound by the Telematics Subscription Service Agreement and its Terms and Conditions, as in effect and amended from time to time, a current copy of which is available at Lexus.com. All use of the Safety Connect service is subject to such then-applicable Terms and Conditions.

### System components

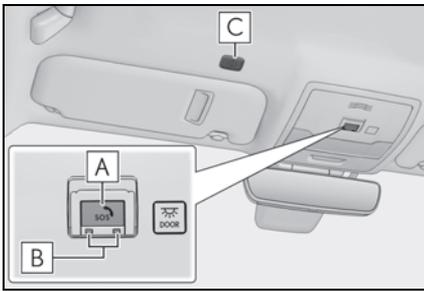

- A** "SOS" button
- B** LED light indicators
- C** Microphone

### Services

Subscribers have the following Safety Connect services available:

- Automatic Collision Notification\*  
Helps drivers receive necessary response from emergency service providers.  
\*: U.S. Patent No. 7,508,298 B2
- Stolen Vehicle Location  
Helps drivers in the event of vehicle theft.
- Emergency Assistance Button ("SOS")  
Connects drivers to response-center support.
- Enhanced Roadside Assistance  
Provides drivers various on-road assistance.

## Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call the following or push the "SOS" button in your vehicle for further subscription details.

- The United States

1-800-25-LEXUS (1-800-255-3987)

- Canada

1-800-26-LEXUS (1-800-265-3987)

- Puerto Rico

1-877-539-8777


## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

For details about the entry function or wireless remote control, refer to P.12, 14.


### Unlocking and locking the doors from the inside

#### ■ Door lock switches (to lock/unlock)

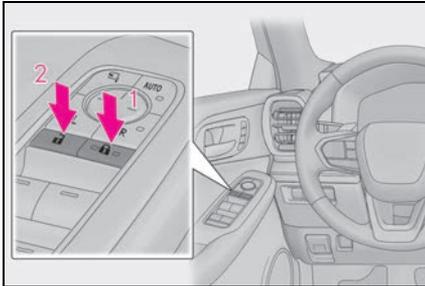

- 1 Locks all the doors
- 2 Unlocks all the doors


#### ■ Inside lock buttons (to lock/unlock)

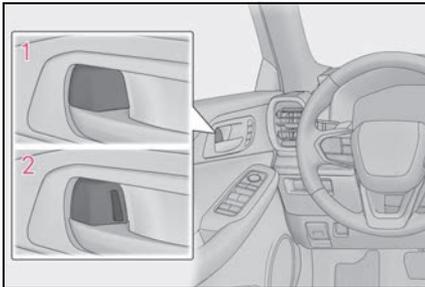

- 1 Locks the door
- 2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

### Rear door child-protector lock

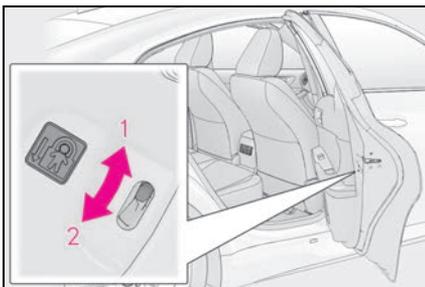


The door cannot be opened from inside the vehicle when the lock is set.

- 1 Unlock
- 2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

# Power Windows


## Opening and closing the power windows

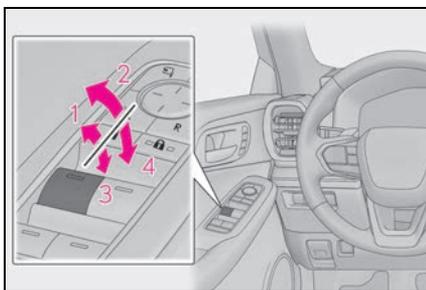

- 1 Closing
- 2 One-touch closing\*
- 3 Opening
- 4 One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

## Preventing accidental operation (window lock switch)

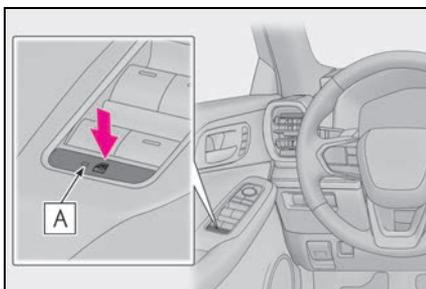

Press the switch to lock the passenger window switches.

The indicator **A** will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

## Moon Roof (if equipped)

### Operating the moon roof

#### ■ Opening and closing



**1** Opens the moon roof\*


The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

**2** Closes the moon roof\*

\*: Lightly press either way of the moon roof switch to stop the moon roof partway.

#### ■ Tilting up and down

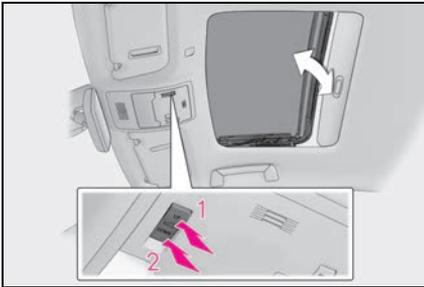

**1** Tilts the moon roof up\*

**2** Tilts the moon roof down\*


\*: Lightly press either way of the moon roof switch to stop the moon roof partway.

# Fuel Tank Cap

## Before refueling the vehicle


- Close all the doors and windows, and turn the engine switch off.
- Confirm the type of fuel.

## Opening the fuel tank cap

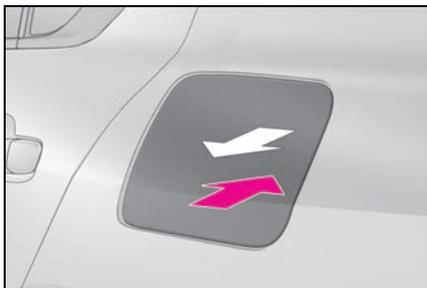

- 1** With the doors unlocked, press the center of the rear edge of the fuel filler door.

Push until you hear a click and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.

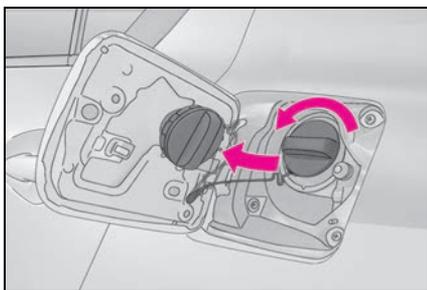


- 2** Turn the fuel tank cap slowly to remove it and put it into the holder on the fuel filler door.

# Trunk

## Opening the trunk

### ■ Trunk opener switch

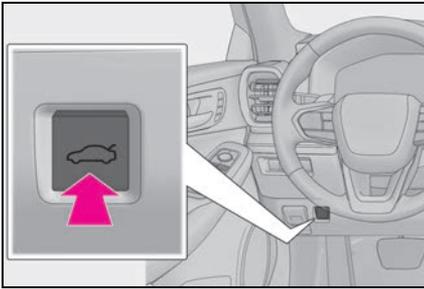

Press the trunk opener switch.

### ■ Smart access system with push-button start


→P.14

### ■ Wireless remote control


→P.12

## Luggage security system

To protect luggage stored in the trunk against theft, the luggage security system can be set to on.

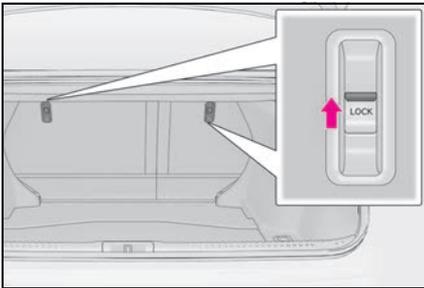

**1** Move the luggage security system levers to the lock position.

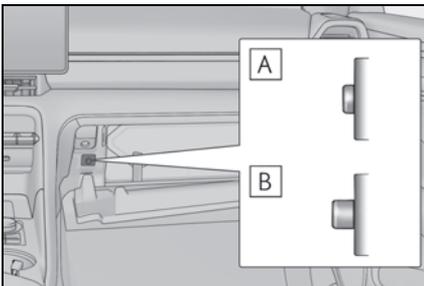

**2** To disable the trunk opener, turn the main switch in the glove box off.

**A** On

**B** Off


When the main switch is off, the trunk lid cannot be opened even with the wireless remote control or entry function.

## Garage Door Opener (if equipped)

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

### System components

The HomeLink<sup>®</sup> wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

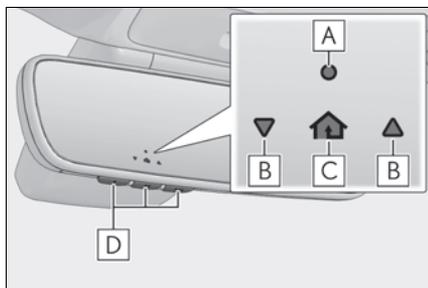

**A** HomeLink<sup>®</sup> indicator light

**B** Garage door operation indicators

**C** HomeLink<sup>®</sup> icon

Illuminates while HomeLink<sup>®</sup> is operating.

**D** Buttons

### ■ Before programming HomeLink<sup>®</sup>

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the "Learn" or "Smart" button on the garage door opener motor.

### ■ HomeLink<sup>®</sup> programming procedure

The programming procedures can also be found at the following URL.

Website: [www.homelink.com/lexus](http://www.homelink.com/lexus)




For support, contact customer support at the following.

Help Line: 1-800-355-3515

## ■ Programming HomeLink®


Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

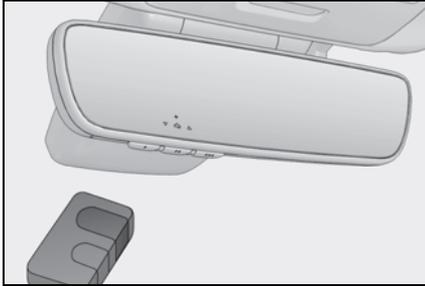

- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

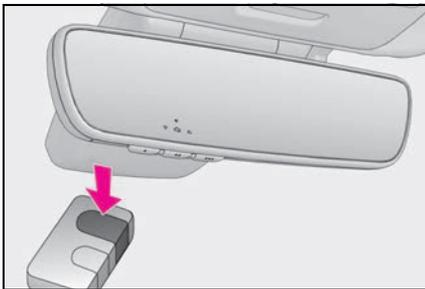

- 3** Program a device.

### ▶ Programming a device other than an entry gate (for U.S.A. owners)

Press and hold the handheld transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

### ▶ Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).


- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
  - Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink® button is pressed and released.
  - Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink® button for 2 seconds then release it.

- If the garage door or other device does not operate, proceed to “Programming a rolling code system”.

- 5 Repeat the steps above to program another device for any of the remaining HomeLink® buttons.


### ■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

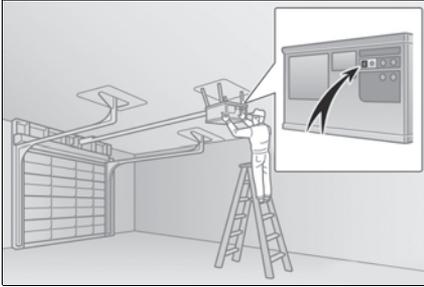


- 1 Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

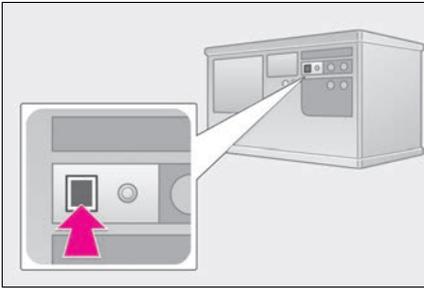

- 2 Press and release the “Learn” or “Smart” button.

Perform **3** within 30 seconds after performing **2**.

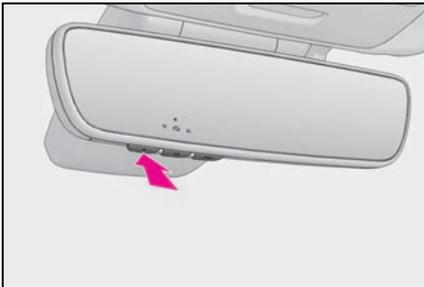

- 3 Press and hold the desired HomeLink® button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.

If the garage door opener motor operates when the HomeLink® button is pressed, the garage door opener motor recognizes the HomeLink® signal.

## ■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.homelink.com](http://www.homelink.com).)

- 1 Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink<sup>®</sup>, both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform **2** and **3** within the first 10 presses of the HomeLink<sup>®</sup> button after programming has been completed.

- 2 Press a programmed HomeLink<sup>®</sup> button to operate a garage door.
- 3 Within 1 minute of pressing the HomeLink<sup>®</sup> button, after the garage door operation has stopped, press the "Learn" or "Smart" button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

## ■ Reprogramming a single HomeLink<sup>®</sup> button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1 With one hand, press and hold the desired HomeLink<sup>®</sup> button.
- 2 When the HomeLink<sup>®</sup> indicator starts flashing (orange), continue to hold the HomeLink<sup>®</sup> button and perform "Programming HomeLink<sup>®</sup>" **1** (it takes 20 seconds for the HomeLink<sup>®</sup> indicator to start flashing).

## Operating HomeLink<sup>®</sup>

Press the appropriate HomeLink<sup>®</sup> button. The HomeLink<sup>®</sup> indicator light should turn on.

## What to do if...

### List of Warning/Indicator Lights

Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.

**BRAKE**

(U.S.A.)

Brake system  
warning light



(Canada)

(red)

Immediately stop the vehicle in a safe place and contact your Lexus dealer.



Charging system warning light



(U.S.A.)

Malfunction indicator lamp



Low engine oil pressure  
warning light



(Canada)

Have the vehicle inspected by your Lexus dealer immediately.



(yellow)

Brake system warning light



(blinking  
and then  
continuously  
on)

Tire pressure warning light



SRS warning light



(flashes)

Intuitive parking assist OFF  
indicator (if equipped)

**ABS**

(U.S.A.)

ABS warning light



(illuminates)

Slip indicator



(Canada)



(flashes)

(U.S.A.)

Parking brake indicator



(red)

Electric power steering  
system warning light



(flashes)

(Canada)



(yellow)



(flashes)

Brake hold operated indicator

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

### Follow the correction procedures.



Inappropriate pedal operation warning light



LDA indicator



Low fuel level warning light



Dynamic radar cruise control indicator



Driver's and front passenger's seat belt reminder light



Cruise control indicator



Rear passengers' seat belt reminder light



PDA indicator



Tire pressure warning light\*1

(Illuminates without blinking)



Driving assist information indicator



Intuitive parking assist OFF indicator (if equipped)



Parking brake indicator



PCS warning light



LTA indicator

### Stop and check.



High coolant temperature warning light

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

### See the "OWNER'S MANUAL"



Turn signal indicator



Headlight indicator (U.S.A.)



Tail light indicator (Canada)



Headlight high beam indicator



(green)

AHB indicator



PCS warning light



\*<sub>2</sub>

Cruise control indicator



\*<sub>2</sub>

Dynamic radar cruise control indicator



\*<sub>2</sub>

LDA indicator



(yellow  
[flashing])

LDA OFF indicator



(white)

LTA indicator



Outside rear view mirror indicators



Intuitive parking assist OFF indicator (if equipped)



Intuitive parking assist detection indicator (if equipped)



Driving assist information indicator



(flashes)

Slip indicator



VSC OFF indicator



(U.S.A.)

Parking brake indicator



(Canada)



Brake hold standby indicator



Brake hold operated indicator



Eco Driving Indicator Light



Low outside temperature indicator

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

See the "OWNER'S MANUAL"

	"PASSENGER AIR BAG" indicator		Stop light indicator
	PDA indicator		REC indicator
<p>● Drive mode indicators</p>			
	Snow mode indicator		Sport mode indicator (if equipped)
	Eco drive mode indicator		Sport S mode indicator (if equipped)
	Custom mode indicator (if equipped)		Sport S+ mode indicator (if equipped)

For further information, refer to the "OWNER'S MANUAL".

- \*1: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.
- \*2: Depending on the operating condition, the color and illuminating/flashing state of the light change.


## What to do if...

### If the electronic key does not operate properly

#### Locking and unlocking the doors, unlocking the trunk

##### ■ Doors


Use the mechanical key in order to perform the following operations:

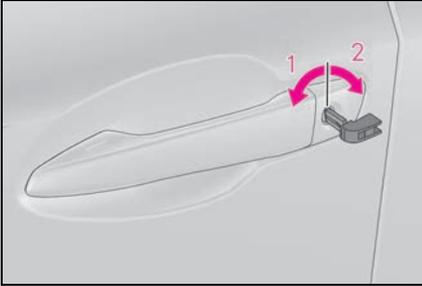

- 1** Locks all the doors
- 2** Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.


##### ■ Trunk

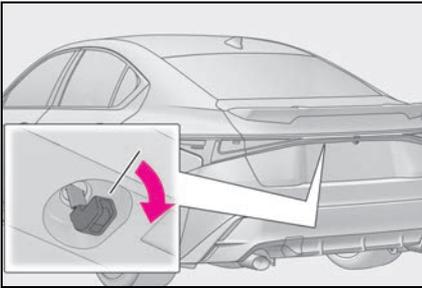

Turn the mechanical key clockwise to open.

## What to do if...

### Starting the engine

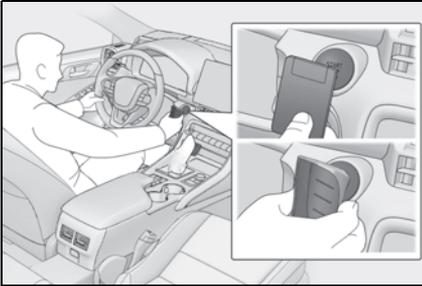

- 1 Ensure that the shift lever is in P and depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the engine switch.

When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode.

When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.

- 3 Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4 Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL".

If you need further assistance, contact your Lexus dealer.

## What to do if...

### If the engine doesn't start


Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.15)

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.

# Memo

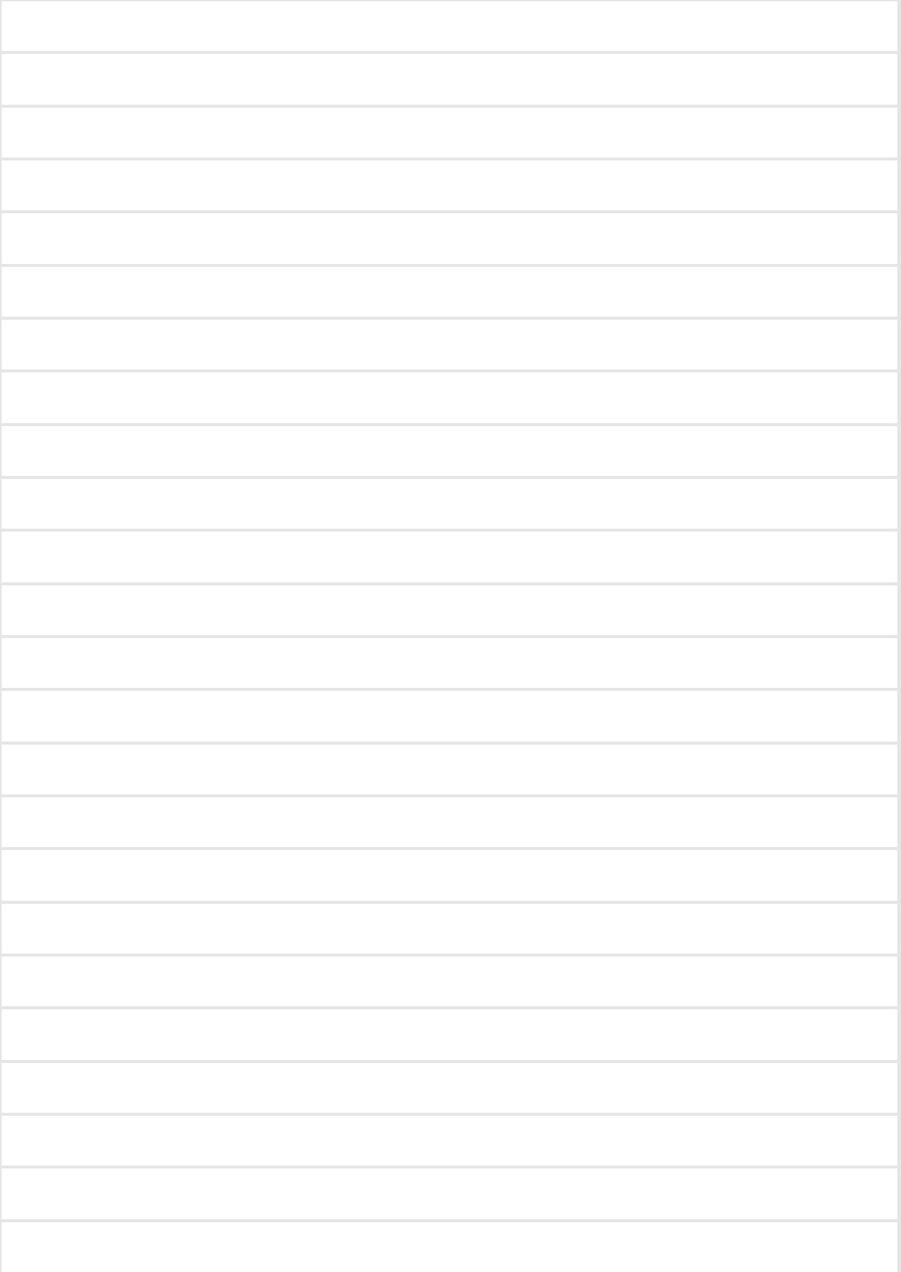A large white rectangular area with horizontal ruling lines, intended for writing a memo. The lines are evenly spaced and extend across the width of the page.

# Memo

A large white rectangular area with horizontal ruling lines, intended for writing a memo. The lines are evenly spaced and extend across the width of the page.

# Memo

A large white rectangular area with horizontal lines, serving as a memo template. The lines are evenly spaced and extend across the width of the page, providing a guide for writing.



### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)**

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)**

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS or 1-800-265-3987 (Toll-Free)**

Please access our **websites** for further information.

- The U.S. mainland: **[www.lexus.com](http://www.lexus.com)**

- Hawaii: **[www.servcolexus.com](http://www.servcolexus.com)**

- Canada: **[www.lexus.ca](http://www.lexus.ca)**

©2026 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.



Owner's Manual Quick Guide:

Publication No. OM53G93U

Part No. 01999-53G93

Printed in Japan 01-2601 C

IS350 AWD / IS350

Owner's Manual Quick Guide (北米U)