

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Entering and Exiting

- 1 Keys ▶P.7
- 1 Wireless Remote Control ▶P.7
- 1 Anti-theft System ▶P.8



Topic 2

Before Driving

- 1 Front Seats ▶P.11
- 1 Rear Seats ▶P.12
- 1 Driving Position Memory System ▶P.16
- 1 Head Restraints ▶P.17
- 1 Seatbelts ▶P.17
- 1 Outside Rear View Mirrors ▶P.18
- 1 Inside Rear View Mirror ▶P.18
- 1 Steering Wheel ▶P.19

Topic 3

When Driving

- 1 Starting ▶P.21
- 1 Automatic Transmission ▶P.22
- 1 Parking Brake ▶P.22
- 1 Turn Signal Lever ▶P.23
- 1 Emergency Flasher Switch ▶P.23
- 1 Trip Information Display ▶P.23
- 1 Driving mode Select Switch ▶P.24
- 1 Four-wheel Drive System ▶P.24
- 1 Cruise Control ▶P.25
- 1 AVS (Adaptive Variable Suspension) ▶P.26



- 1 AHC (Active Height Control Suspension) ▶P.26
- 1 Lexus Night View System ▶P.26
- 1 Roll Sensing of Curtain Shield Airbag Off Switch ▶P.27
- 1 Tire Pressure Warning Reset Switch ▶P.27



- 1 Rear Window and Outside Rear View Mirror Defoggers ▶P.31
- 1 Instrument Panel Light Control ▶P.31

Topic 5

Driving Comfort

- 1 Air Conditioning System ▶P.33
- 1 Audio System ▶P.35
- 1 Ashtrays ▶P.38
- 1 Cigarette Lighter ▶P.38
- 1 Seat Heaters ▶P.39
- 1 Console Box ▶P.39
- 1 Glove Box ▶P.40
- 1 Cup Holders ▶P.40



- 1 Interior Lights ▶P.41
- 1 Compass ▶P.42
- 1 Lexus Link System ▶42



Topic 6

Opening and Closing

- 1 Door Locks ▶P.45
- 1 Power Windows ▶P.46
- 1 Power Quarter Windows ▶P.46
- 1 Moon Roof ▶P.47
- 1 Fuel Tank Cap ▶P.47
- 1 Hood ▶P.48

What to do if ...



Responding to warning/indicator lights and other problems that may arise.

Customizing Your Lexus




A list of features that can be customized.

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel

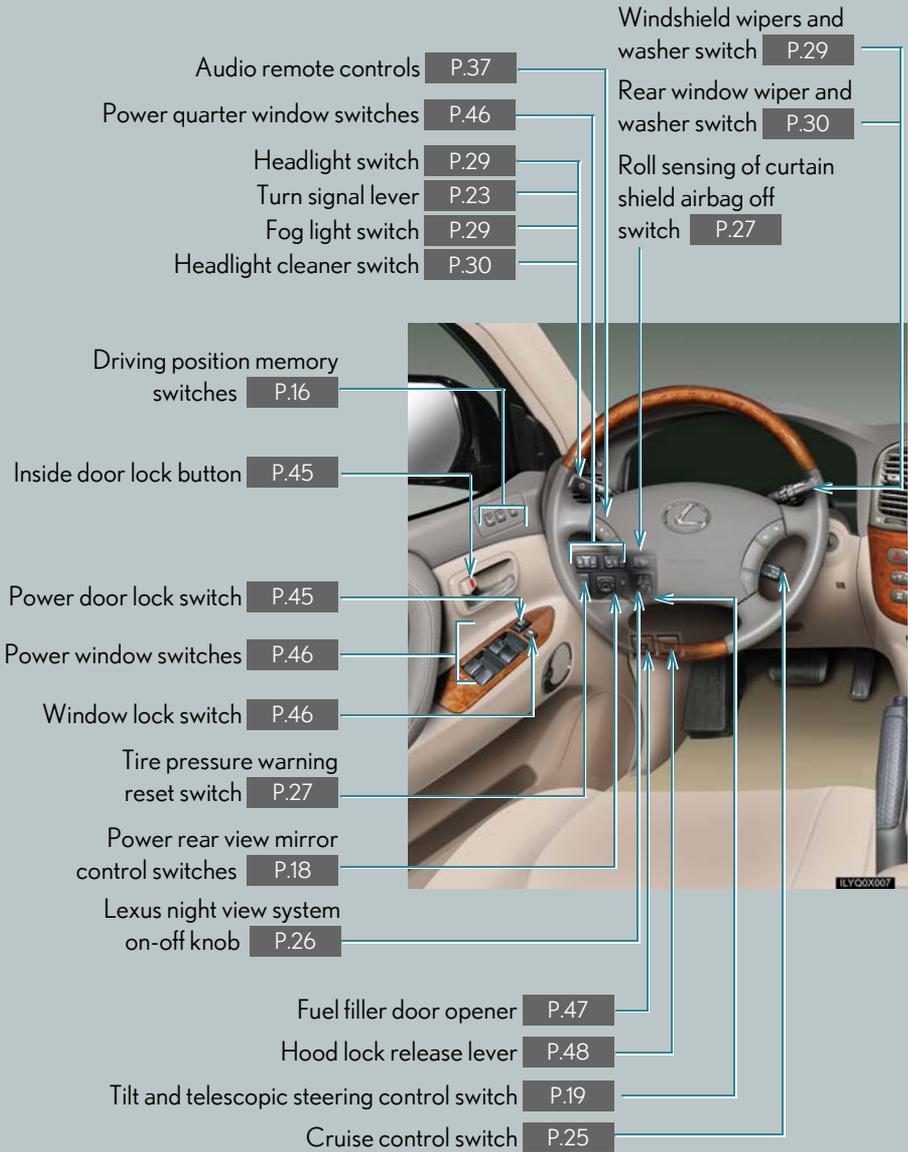


Center differential lock/unlock switch P.24

Antenna switch P.37

Emergency flashers P.23

Trip information display P.23

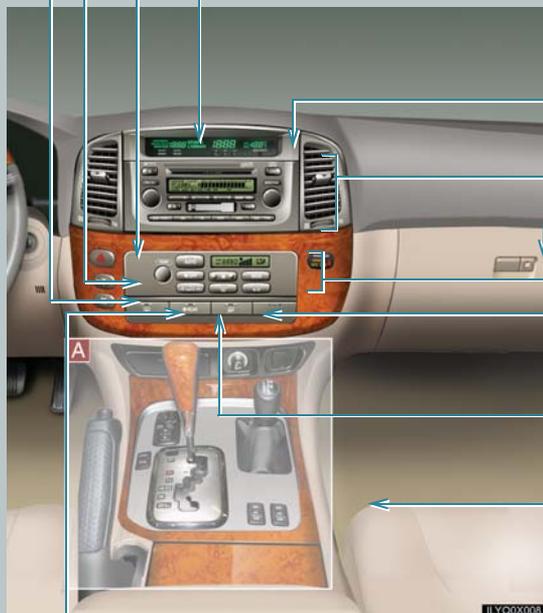

Security indicator P.8

Audio system P.35

Glove box P.40

Air conditioning system P.33

Outside rear view mirror defogger switch P.31

Rear air conditioning switch P.34


See P.5

Rear window defogger switch P.31

* : If equipped

Overview

Instrument Panel

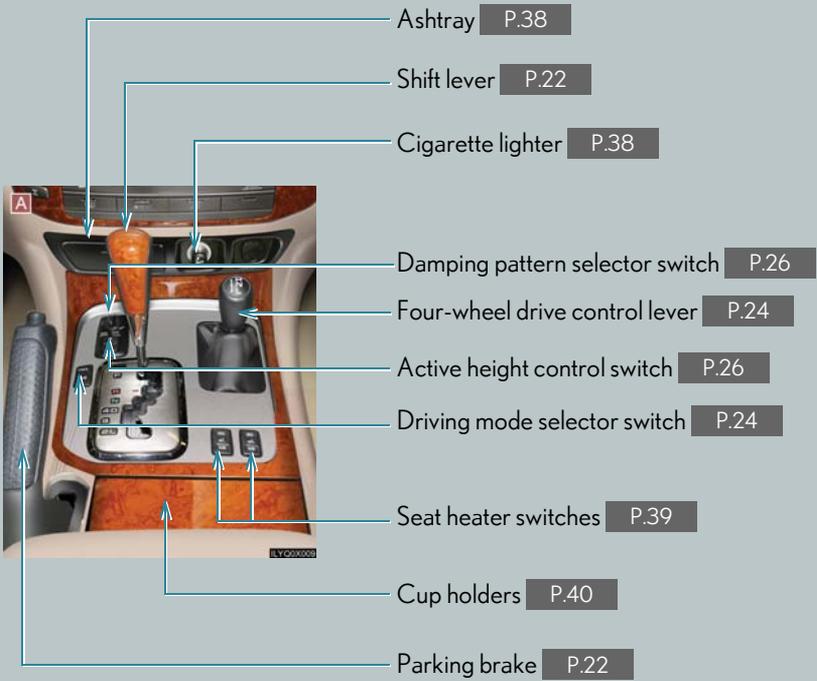

* : If equipped




Topic 1

Entering and Exiting


- Keys 7
- Wireless Remote Control..... 7
- Anti-theft System..... 8

Keys

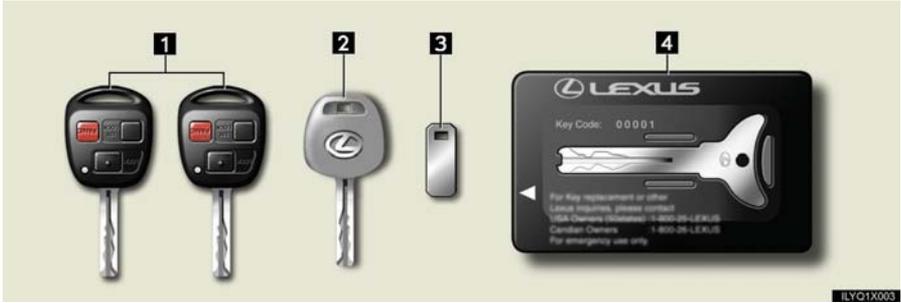

- 1 Master keys**
These keys work in every lock.
- 2 Valet key**
This key cannot lock/unlock the glove box.
- 3 Key number plate**
Keep the plate in a safe place, such as your wallet. Do not keep the plate in the vehicle.
- 4 Flat key**
This key works in every lock.
Lexus recommends that you always carry the flat key with you for emergency use.

Wireless Remote Control

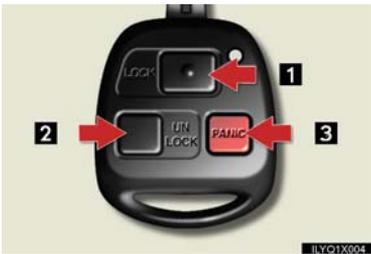

- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
Press and hold: opens the windows
- 3 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter break-ins. To stop the alarm, press any button on the wireless remote control.)

Anti-theft System

The anti-theft system includes the following features to help protect your vehicle from theft.

n Engine immobilizer system



The engine immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key.

The security indicator light flashes to indicate that the system is set.

n Alarm

When forcible entry is detected, the alarm attracts attention to the vehicle by sounding the horn and flashing the exterior lights.

When all the doors are locked, the security indicator light comes on and begins to flash after approximately 30 seconds to indicate that the system is armed.

To stop the alarm, start the engine or unlock the doors using the ignition key or wireless remote control. (The alarm will stop after several seconds.)

n Steering lock



The steering wheel locks when the ignition key is turned to the LOCK position.






Topic 2

Before Driving

Front Seats.....	11
Rear Seats.....	12
Driving Position Memory System.....	16
Head Restraints	17
Seatbelts.....	17
Outside Rear View Mirrors	18
Inside Rear View Mirror.....	18
Steering Wheel	19


Front Seats

n Adjusting seat position

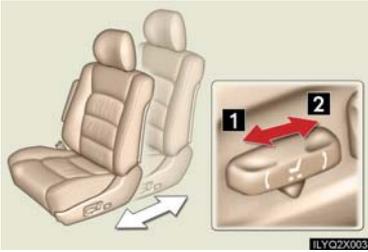

- 1 Moves the seat forward
- 2 Moves the seat backward

n Adjusting seatback angle

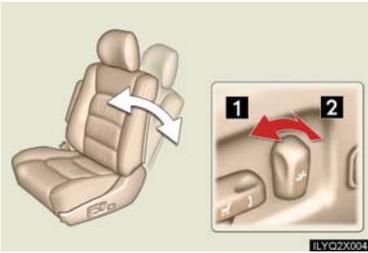


- 1 Tilts the seatback forward
- 2 Reclines the seatback

n Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

n Adjusting the lumbar support

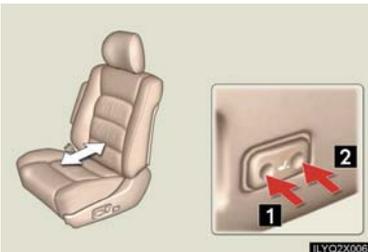

- 1 Firmer
- 2 Softer


Rear Seats

n Adjusting second seatback angle



Pull the lever and tilt the seatback forward or backward.


n Tumbling second seats

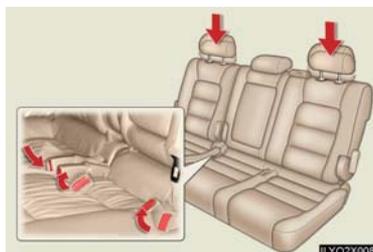

Before tumbling second seats, stow the seat belt buckles and lower the head restraints to the lowest position.



1 Pull the seatback angle levers and fold the seats down.

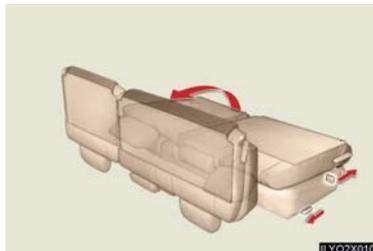


2 Pull the lever under the seat cushion or pull the strap on the rear end of the seat cushion and swing the whole seat forward.



n Tumbling second seats




- 3 Hook the holding strap to the assist grip and secure the seat by pulling its free end.

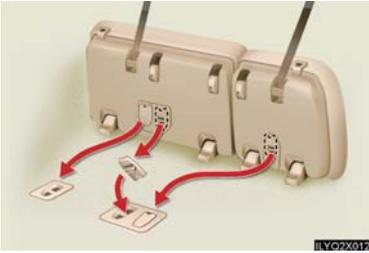

- 4 Remove the seat hook covers from the back of the seat cushion, and install them on the seat hooks.

When returning seats, reverse the steps above.

n Tumbling third seats

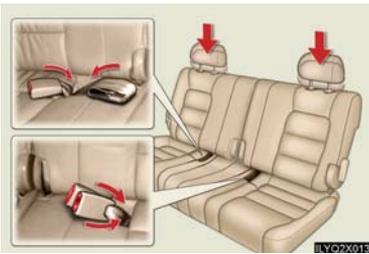


Before tumbling third seats, stow the seat belts and buckles and lower the head restraints to the lowest position.



- 1 Pull the seatback angle levers and fold the third seats.

n Tumbling third seats

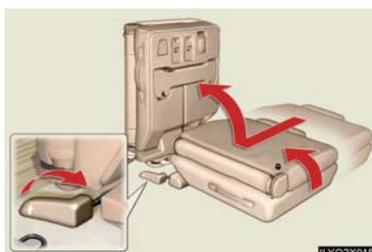

LYO2X015



LYO2X016



LYO2X017

2 While turning the lever, lift and slide the whole seat backward.

3 Hook the holding strap to the assist grip and secure the seat by pulling its free end.

4 Remove the seat hook covers from the back of the seat cushion, and install them on the seat hooks.

When returning seats, reverse the steps above.




n Removing third seats

Before removing third seats, perform **1** and **2** in "Tumbling third seats." (→ P.13)



- 1** Remove the lever cover and pull the lock release lever. Lift up the rear side of the seat and pull the whole seat backward.

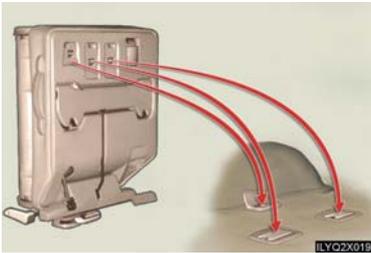

- 2** Remove the seat hook covers from the back of the seat cushion and install them on the seat hooks.

When returning third seats, reverse the steps above.

Driving Position Memory System

The driver's seat can be returned to a previously set position by simply pressing a button. The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat.

Positions can be conveniently stored for the vehicle's primary drivers.

Setting memory positions



While holding down the SET button, press and hold memory button (1 or 2) until you hear a beep.

The current position of the driver's seat, the outside rear view mirror and the steering wheel are stored.


Recalling memory positions



Press memory button (1 or 2).


Head Restraints

n Vertical adjustment

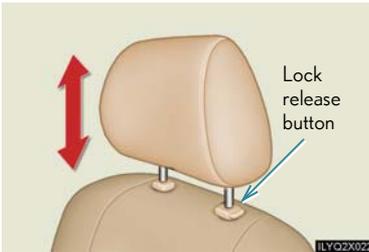

To raise: push the head restraint upward.
To lower: push the head restraint down while pressing the lock release button.


n Angle adjustment (front seats only)

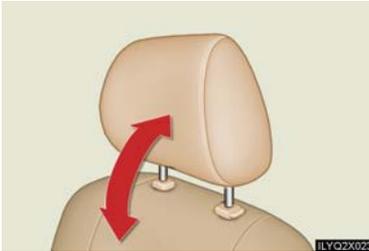

Move forward and backward.

Seatbelts

n Adjusting shoulder belt height (front, second and third outboard seat)

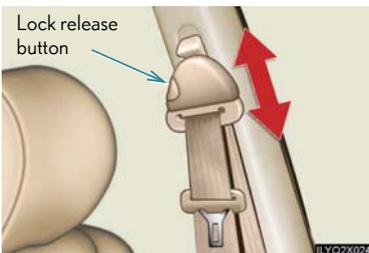

To raise: move the height adjuster up.
To lower: depress the lock release button and move the height adjuster down.


n Adjusting belt length (third center seat)



Remove excess length by pulling the free end of the belt.

Outside Rear View Mirrors

n Adjusting the mirrors

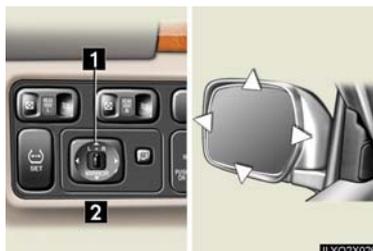

- 1 To select the mirror you wish to adjust (L or R), use the select switch.
- 2 To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing.
To disable this function, set the select switch in the neutral position (neither L nor R selected).

n Folding the mirrors



To fold the mirrors back, press the button. Press the button again to return them to the extended position.


Inside Rear View Mirror

The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn AUTO mode ON/OFF, press the AUTO button.
The indicator comes on when AUTO mode is turned ON.

Steering Wheel

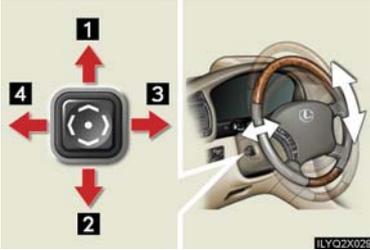

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

The steering wheel retracts automatically when the ignition key is removed to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the key is inserted into the ignition switch.



Topic 3

When Driving

Starting	21
Automatic Transmission.....	22
Parking Brake.....	22
Turn Signal Lever.....	23
Emergency Flasher Switch.....	23
Trip Information Display.....	23
Driving Mode Select Switch	24
Four-wheel Drive System	24
Cruise Control	25
AVS (Adaptive Variable Suspension).....	26
AHC (Active Height Control Suspension) ...	26
Lexus Night View System.....	26
Roll Sensing of Curtain Shield	
Airbag Off Switch	27
Tire Pressure Warning Reset Switch	27



Starting

n Starting the engine




Make sure the parking brake is engaged and the shift lever is in P.

- 1 Depress the brake pedal.
- 2 Turning the ignition key to the “START” position.

n Stopping the engine

- 1 Engage the parking brake and shift the shift lever to P.
- 2 Turn the ignition key to the “LOCK” position.

n Ignition switch

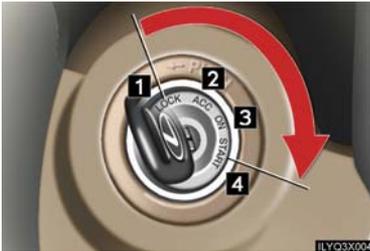

- 1 LOCK
- 2 ACC
- 3 ON
- 4 START

Some electrical components such as the audio system can be used.

Automatic Transmission

n Shift positions



- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- 4 Position for engine braking
- 3, 2 Position for more engine braking
- L Position for maximum engine braking

← The vehicle can only be shifted out of P when the ignition key is in the “ON” position and the brake pedal is depressed.

Downshifting increases power for uphill driving, or engine braking for downhill driving or stopping.


Parking Brake



1 To set the parking brake: pull the parking brake lever firmly upward.

2 To release the parking brake: press and hold the lock release button and lift the lever slightly before lowering it as far as it will go.

Turn Signal Lever

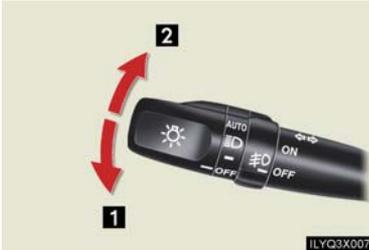

- 1 Left turn signal
- 2 Right turn signal

To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

Trip Information Display (If equipped)

The following information concerning your vehicle is displayed.

n Display information



Trip information

- Average vehicle speed
- Driving distance
- Driving range
- Average fuel consumption after refueling
- Current fuel consumption

The display changes each time the "MODE" button is pressed.

Driving Mode Select Switch

Use these switches to select the driving mode that best suits the driving and road conditions.



1 Normal mode

2 Power mode

For more powerful acceleration and uphill driving.


3 "2nd STRT"(second start) mode

For starting or accelerating on snow-covered roads or other slippery surfaces.

Four-wheel Drive System

Use the lever and switch to select following transfer and center differential modes.

► Four-wheel drive control lever

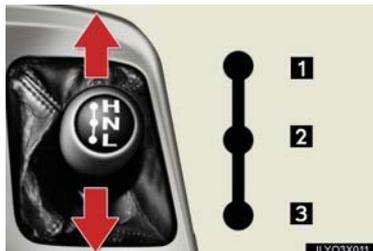

1 "H": Normal driving

2 "N": Neutral

3 "L": Driving requiring maximum power and traction

► Center differential lock/unlock switch



Use this switch when your vehicle's wheels get stuck in a ditch or when you are driving on a slippery or bumpy surface.



Cruise Control

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.

n Setting the speed



- 1 Press the ON-OFF button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

n Adjusting the speed setting



- To increase speed:** push the lever up.
To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

n Canceling



To temporarily cancel the cruise control, pull the lever.

To turn the system off, press the ON-OFF button.

AVS (Adaptive Variable Suspension)


AVS controls the suspension according to the road and driving conditions.



- 1 For driving on a bumpy road
- 2 For ordinary driving
- 3 4 For high speed driving

AHC (Active Height Control Suspension)

AHC adjusts the vehicle height in accordance with driving conditions.

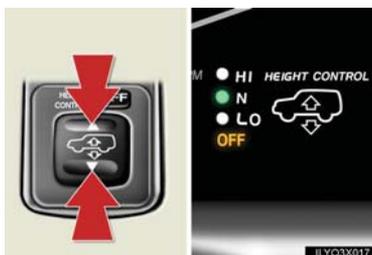


To select a height mode, press s or t the height select switch.

- HI (high mode): for driving bumpy roads
- N (normal mode): for ordinary driving
- LO (low mode): for easy access to the vehicle

Lexus Night View System (If equipped)

This system assists the driver by displaying a monochrome image of the view in front of the vehicle while driving at night.

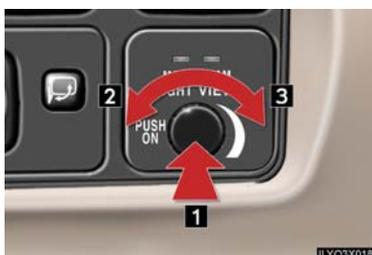

- 1 ON/OFF
- 2 Darker
- 3 Brighter

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Roll Sensing of Curtain Shield Airbag Off Switch

This switch can turn off the curtain shield airbag and front seat belt pretensioners in a vehicle rollover.



ON/OFF

Press and hold until indicator light turns on/off.

Tire Pressure Warning Reset Switch

This switch can initialize the tire pressure warning system.



Press the switch when you change the tire inflation pressure.

For details, see the "Owner's Manual".




Topic 4

Rain and Night Driving

Headlights.....	29
Fog Lights.....	29
Windshield Wipers and Washer	29
Rear Window Wiper and Washer	30
Headlight Cleaner	30
Rear Window and Outside Rear View Mirror Defoggers.....	31
Instrument Panel Light Control	31

Headlights

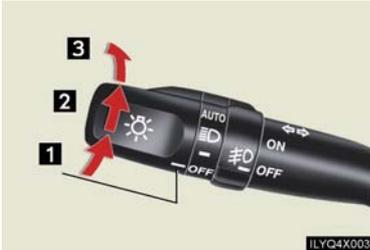

ILYQ4X003




ILYQ4X004

- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.

To engage the high beams, push the lever forward. To flash the high beams, pull the lever and hold.


Fog Lights

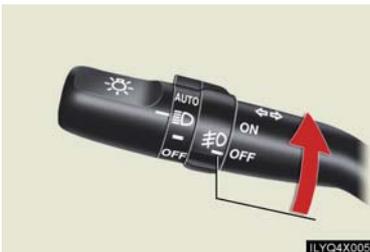

ILYQ4X005

The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washer

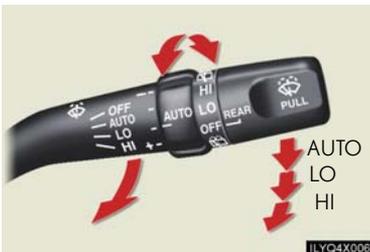

ILYQ4X006

AUTO: automatic operation*

LO: low speed


HI: high speed

*: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever.


The wipers will operate automatically.

Rear Window Wiper and Washer

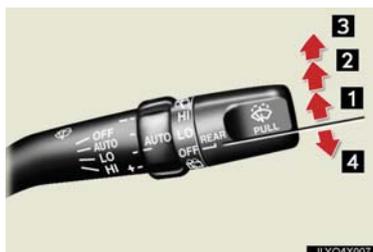

- 1 Intermittent operation
- 2 Normal operation
- 3 Washer operation
- 4 Washer/wiper operation

Headlight Cleaner (if equipped)

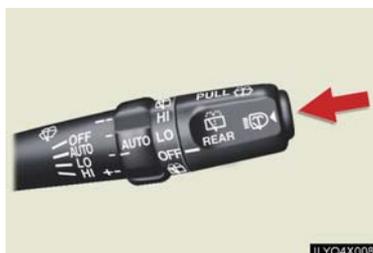

The headlight cleaner can be used only when the ignition key is in the "ON" position and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers

► Rear window defogger switch



To defog the rear window, press the button.

Press again to cancel.

► Outside rear view mirror defogger switch



To defog the outside rear view mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



- 1 Darker
- 2 Brighter



Topic 5


Driving Comfort

Air Conditioning System.....	33
Audio System.....	35
Ashtrays.....	38
Cigarette Lighter.....	38
Seat Heaters.....	39
Console Box.....	39
Glove Box.....	40
Cup Holders.....	40
Interior Lights.....	41
Compass.....	42
Lexus Link System.....	42

Air Conditioning System

n Front air conditioning controls

- ▶ Vehicles without navigation system

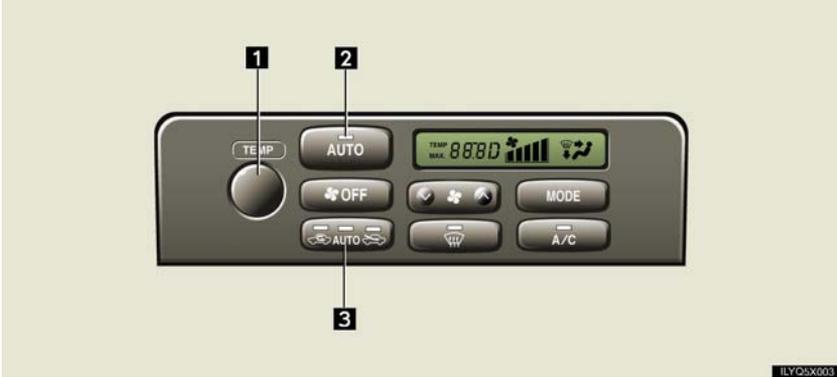

- ▶ Vehicles with navigation system



- 1 Automatic mode
- 2 Outside air or recirculated mode
- 3 Temperature control


n Using the automatic mode

► Vehicles without navigation system




- 1 Press **1**.
- 2 Press **2** to switch to "AUTO".
- 3 Adjust the temperature using **3**.

► Vehicles with navigation system

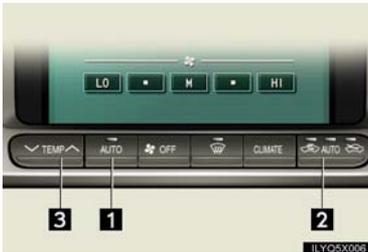

n Rear air conditioning controls

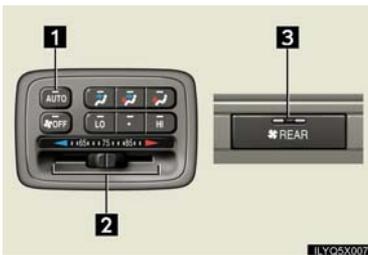

- Rear (Ceiling)
 - 1 Automatic mode
 - 2 Temperature control
- Front (Instrument panel)
 - 3 Rear air conditioning ON/OFF switch

To use the automatic mode, press **1** or **2** and then adjust the temperature using **3**.


Audio System

n Basic operation

► Vehicles without navigation system



► Vehicles with navigation system

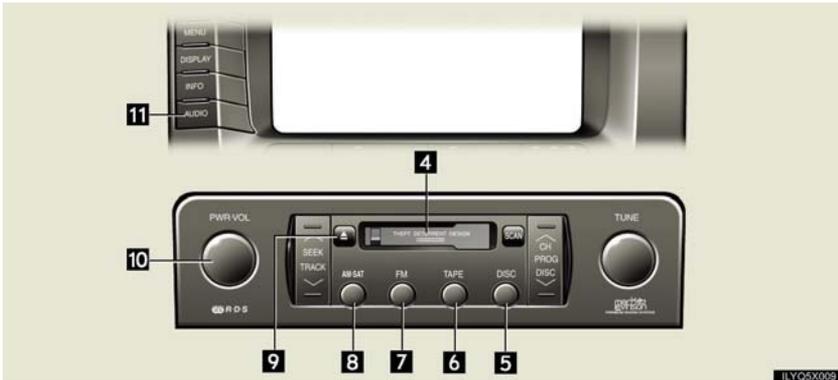

- | | |
|----------------------------|---|
| 1 Disc eject button | 7 FM radio mode button |
| 2 Disc slot | 8 AM•SAT radio mode button |
| 3 DISC load button | 9 Tape eject button |
| 4 Tape slot | 10 Power ON/OFF button, Volume adjustment knob |
| 5 DISC mode button | 11 Audio control screen display button |
| 6 TAPE mode button | |

For details, refer to the Owner's Manual.

n Listening to the radio



1 Press **AM-SAT** or **FM** to choose an AM or FM band.

2 Tune to your desired station.

For tuning adjustment and further information, refer to the Owner's Manual.

n Playing the cassette player




You have 2 methods to play your cassette player.

1 Insert a cassette tape into the tape slot.

1 Press **TAPE** with the tape inserted.

For further information, refer to the Owner's Manual.

n Playing the CD player

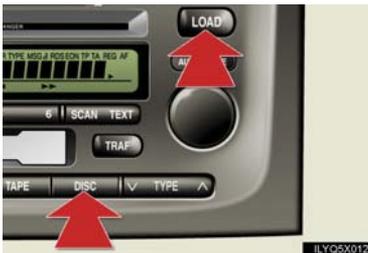

You have 2 methods to play your CD player.

1 Press **LOAD** and insert a CD into the CD slot.

1 Press **DISC** with the CD inserted.

For further information, refer to the Owner's Manual.

n Playing the DVD player (with navigation system)



Press **DISC** with the disc inserted.

For further information, refer to the Navigation System Owner's Manual.

n Remote control (steering switches)

The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Radio: radio station select
Cassette: track select
CD/DVD: disc/track chapter select
- 3 Power on/ mode select

n Rear seat audio system



- 1 Volume
- 2 Tune/Track select
- 3 Channel/Program/Disc select
- 4 Power on/ mode select
- 5 Off

For further information, refer to the Owner's Manual.

n Antenna switch



- 1 Down
- 2 Up

Ashtrays

► Front



To remove the ashtray, press down on the lock spring plate.

► Rear



To remove the ashtray, pull it up.



To remove the ashtray, press down on the snuffer bridge.

Cigarette Lighter



Push the cigarette lighter in.

The cigarette lighter will pop up when ready for use.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Seat Heaters

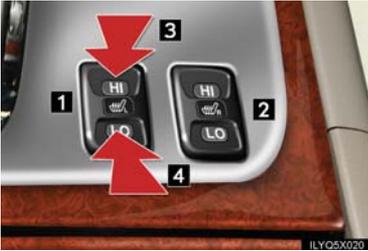

- 1 Driver's seat
- 2 Front passenger's seat

Press the switch **3** (high heating temperature) or **4** (low heating temperature).

Console Box


► Front



To open, lift the armrest with the lock released.

- 1 Upper box
- 2 Lower box

► Overhead console box

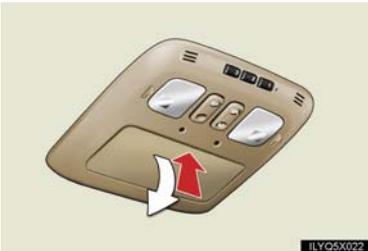


To open, press the lid



There is a power outlet located in the console box.

Glove Box

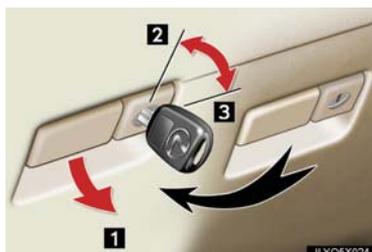


- 1 Open: pull the lever.
- 2 Lock
- 3 Unlock

The glove box can be locked and unlocked using the master key.


Cup Holders

► Front

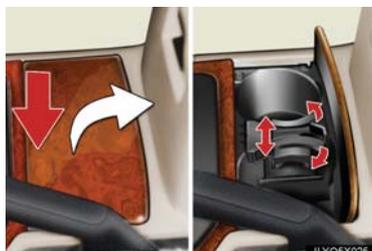


To open, press down on the lid.

The separator position can be adjusted.

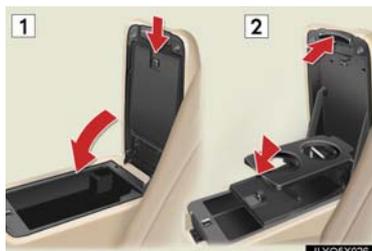

- 1 Pull down the knob in the console.
- 2 Push down the cup holder.

► Rear

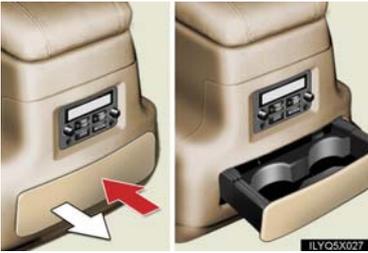


To open, press in the lid on the rear end of the rear console.



To open, pull out the lid on the left-side trim panel near the third seat.


Interior Lights

► Front

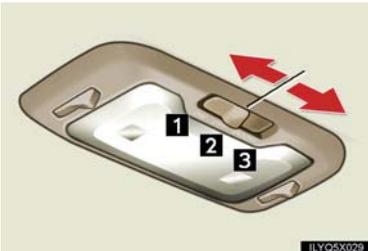


- 1 ON
- 2 OFF
- 3 The light comes on if a door is opened.

► Rear

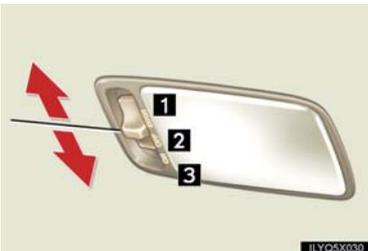

- 1 The light comes on if a door is opened.
- 2 OFF
- 3 ON

Compass (If Equipped)

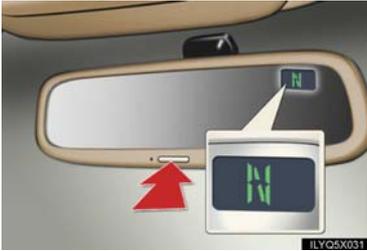

To display or cancel the compass, press and hold the AUTO button for 3 or more seconds.

Lexus Link System (If equipped)

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

n Display information



- 1** Voice keypad button
Sends number tones to an automated phone system for example to access voicemail, during a phone call
- 2** Volume control
Adjusts your Lexus Link System audio volume
- 3** Phone button
 - Makes or answers a phone call using the hands-free personal calling service
 - Ends a call
- 4** SERVICES button
 - Contacts the Lexus Link Call Center for information, directions or other services
 - Records a conversation for later playback
- 5** Emergency button
Makes a priority call to the Lexus Link Call Center



n Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

1 Airbag deployment notification

If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.

1 Emergency assistance

When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.

1 Stolen vehicle location assistance

If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.

1 Remote horn/light and remote door lock/unlock

The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and select the option for Lexus Link.

1 Advisor record

You can record a conversation with the Lexus Link Advisor.

1 Personal calling

A hands-free personal calling feature can be added to the Lexus Link System as an option.

1 Other services

Press the SERVICES button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

The system is only operational in GPS (Global Positioning System) and cellular coverage areas.



Topic 6


Opening and Closing

Door Locks	45
Power Windows	46
Power quarter windows	46
Moon Roof	47
Fuel Tank Cap	47
Hood	48

Door Locks


n Locking the vehicle from inside

► Inside lock button (Side doors)

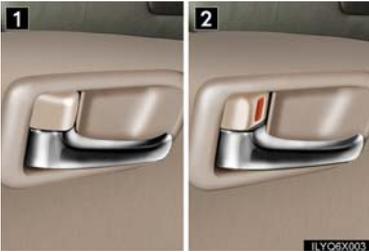


- 1 Locks
- 2 Unlocks

► Inside lock button (Back door)

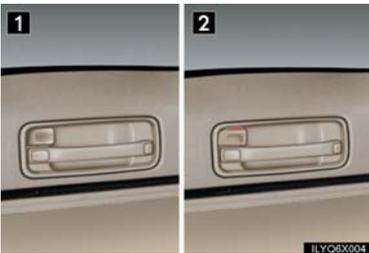

- 1 Locks
- 2 Unlocks

► Door lock switch

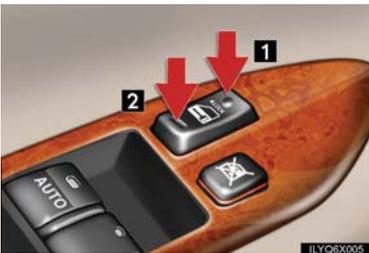

Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

- ▶ Using the wireless remote control (→P.7)

n Door child-protector lock



1 Rear door

2 Back door

Setting the switch to the LOCK position prevents the doors from being opened from the inside.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Power quarter windows



1 For the left quarter window

2 For the right quarter window

To open, press the right side of the switch.

To close, press the left side of the switch.

Moon Roof

Opening and closing



1 Open

Stops just before it is opened fully. Press the switch again to fully open.

2 Close

To stop partway, press the switch lightly.

Tilt up and down



1 Tilt up

2 Tilt down

To stop partway, press the switch lightly.

Fuel Tank Cap



1 Pull the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

Hood



1 Pull the hood release lever.



2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

List of Warning/Indicator Lights



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BREAK

(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)

VSC TRAC

Vehicle stability control system and active traction control system warning light

VSC OFF

VGRS

Variable gear ratio steering system warning light

NIGHT VIEW

Lexus night view system warning light*

A/T OIL TEMP

Automatic transmission fluid temperature warning light

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



Low fuel level warning light



Driver's seat belt reminder light



Tire pressure warning light

(On the instrument cluster)



Unengaged "Park" warning light



Front passenger's seat belt reminder light



Low washer fluid warning light

(On the center panel)



Engine oil replacement remainder light *

See the Owner's Manual



Turn signal indicator



Roll sensing of curtain shield airbags off indicator



Headlight high beam indicator



"PWR" mode indicator



Headlight indicator (U.S.A.)



Automatic transmission second start indicator



Tail light indicator (Canada)



Vehicle stability control system OFF indicator



Cruise control indicator



Center differential lock indicator



Slip indicator



Active traction control system indicator (U.S.A.)



Automatic transmission indicators



Active traction control system indicator (Canada)



Active height control indicator

*: If equipped

For further information, refer to the Owner's Manual.

Spare Tire and Tool Compartment

n Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire

n Taking out the spare tire



- 1 Remove the spare tire carrier lid.
- 2 Insert the jack handle extension into the lowering screw and lower the spare tire.

If the ignition key does not turn easily



Turn the ignition key while lightly moving the steering wheel from left to right.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Wireless remote control	Wireless remote control	ON	OFF
	Unlocking operation	Driver's door unlocked in one step, all doors locked in two steps	All doors unlocked in one step.
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds
	Operation indicator (Emergency flashers)	ON	OFF
	Operation indicator (Buzzer)	ON	OFF
	Panic function	ON	OFF
	Buzzer sounds when pushing LOCK with any door not closed.	ON	OFF

Item	Function	Default setting	Customized setting
Door lock	Unlocking using a key	Driver's door unlocked in one step, all doors locked in two steps	All doors unlocked in one step.
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shift the shift lever to P unlocks all doors.	ON	OFF
	Shift the shift lever to position other than P locks all doors.	ON	OFF
Power windows	Linked door lock operation	ON	OFF
	Linked door key operation	Open and close	Open only Close only
	Wireless remote control linked operation	ON (open only)	OFF
Moon roof	Linked door lock operation	ON	OFF
	Linked door key operation	Open and close	Open only Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	ON (open only)	OFF
	Linked operation of components when wireless remote control used	Slide only	Tilt only
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Day time running light	ON	OFF*	

*: Vehicles sold outside Canada

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Customizing Your Lexus

Item	Function	Default setting	Customized setting
Windshield wipers and washer	Switching operation when the vehicle is stationary	ON	OFF
	Drip prevention function	ON	OFF
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the power switch turned OFF	ON	OFF



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

n U.S. OWNERS

l In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

l In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

n CANADIAN OWNERS

l In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

l The U.S. mainland: www.lexus.com

l Hawaii: www.servcolexus.com

l Canada: www.lexus.ca

©2006 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.