

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Overview

Topic 1

Entering and Exiting

- Keys ▶ P.9
- Smart Access System with Push-button Start ▶ P.10
- Theft Deterrent System ▶ P.11



- Outside Rear View Mirrors ▶ P.22
- Inside Rear View Mirror ▶ P.23
- Steering Wheel ▶ P.23

Topic 2

Before Driving

- Front Seats ▶ P.13
- Rear Seats ▶ P.14
- Driving Position Memory System ▶ P.20
- Head Restraints ▶ P.21
- Seat Belts ▶ P.21

Topic 3

When Driving

- Starting ▶ P.25
- Automatic Transmission ▶ P.26
- Parking Brake ▶ P.26
- Multi-information Display ▶ P.27
- Turn Signal Lever ▶ P.28
- Emergency Flasher Switch ▶ P.28
- Mode Select Switch ▶ P.28
- Four-wheel Drive System ▶ P.29
- Intuitive Parking Assist ▶ P.29
- Wide View Front & Side Monitor ▶ P.30
- Crawl Control ▶ P.30
- Cruise Control ▶ P.31
- Dynamic Radar Cruise Control ▶ P.32



- AVS (Adaptive Variable Suspension) ▶ P.33
- 4-Wheel AHC (Active Height Control Suspension) ▶ P.33
- Active TRAC/VSC Off Mode ▶ P.34
- Roll Sensing of Curtain Shield Airbags Off Switch ▶ P.34
- Tire Pressure Warning Reset Switch ▶ P.34



- Rear Window and Outside Rear View Mirror Defoggers ▶P.39
- Instrument Panel Light Control ▶P.39

Topic 4

Rain and Night Driving

- Headlights ▶P.37
- Fog Lights ▶P.38
- Windshield Wipers and Washers ▶P.38
- Rear Window Wiper and Washer ▶P.38
- Headlight Cleaner ▶P.39

Topic 5

Driving Comfort

- Touch Screen ▶P.41
- Front Air Conditioning System ▶P.42
- Rear Air Conditioning System ▶P.43
- Audio System ▶P.44
- Rear Seat Entertainment System ▶P.46
- Hands-free System ▶P.47
- Ashtrays ▶P.48
- Cigarette Lighter ▶P.48
- Climate Control Seats/Seat Heaters ▶P.49



- Console Box ▶P.50
- Auxiliary Boxes ▶P.50
- Cool Box ▶P.51
- Glove Box ▶P.51
- Cup Holders ▶P.52
- Interior Lights ▶P.53
- Power Outlet ▶P.53
- Garage Door Opener ▶P.54
- Lexus Link System ▶P.56



Topic 6

Opening and Closing


- Door Locks ▶P.59
- Power Windows ▶P.60
- Moon Roof ▶P.60
- Fuel Tank Cap ▶P.61
- Hood ▶P.61
- Back Door ▶P.62

What to do if ... ● Responding to warning/indicator lights and other problems that may arise.

Customizing Your Lexus ● A list of features that can be customized.

- Entering and Exiting
- Before Driving
- When Driving
- Rain and Night Driving
- Driving Comfort
- Opening and Closing
- What to do if ...
- Customizing Your Lexus

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

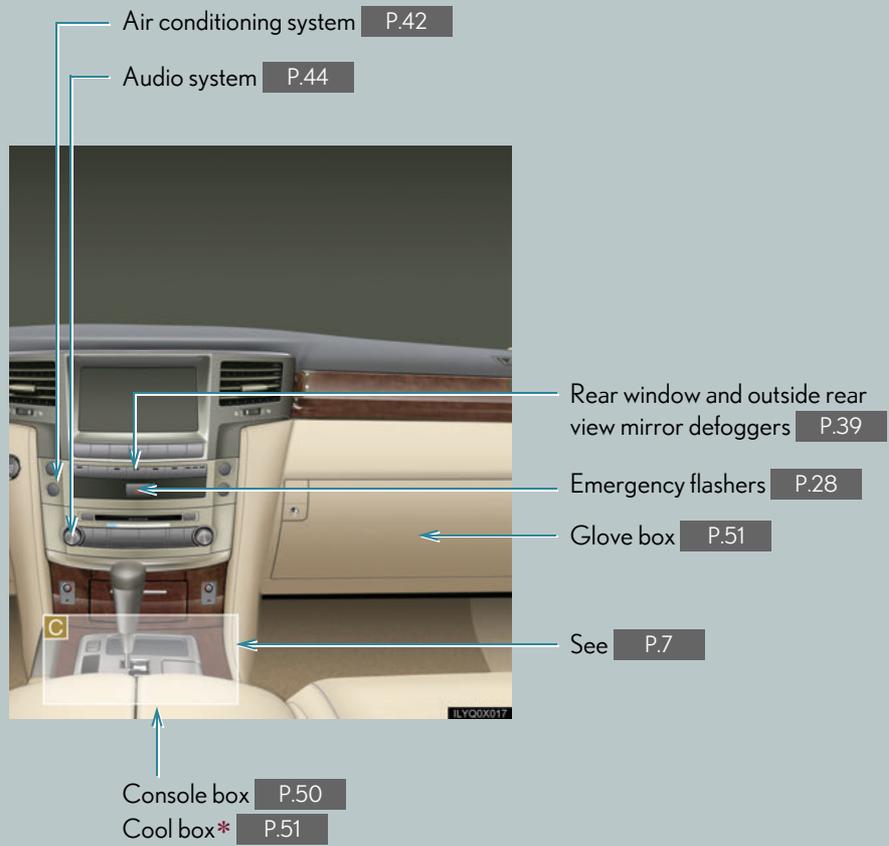


* : If equipped


Overview

Instrument Panel

A

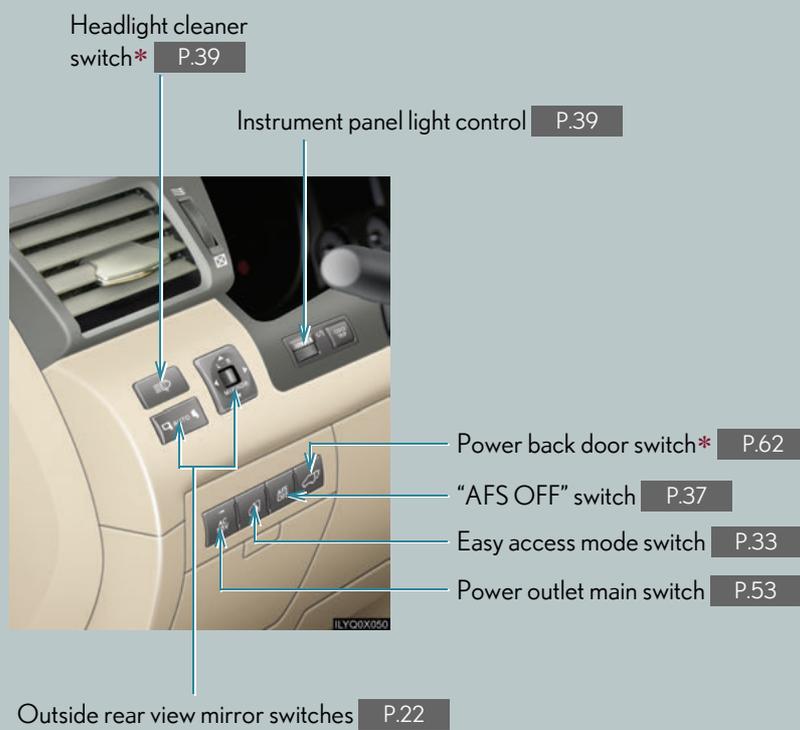

B

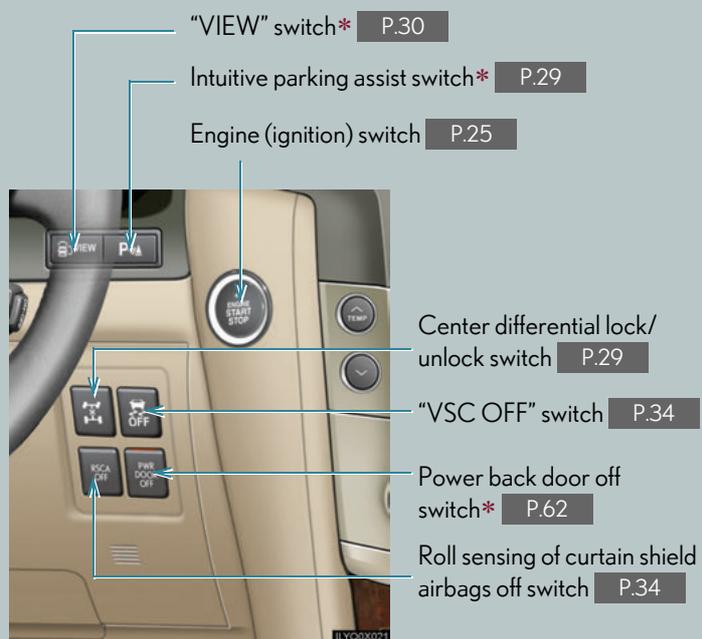


* : If equipped

Overview

Instrument Panel

C

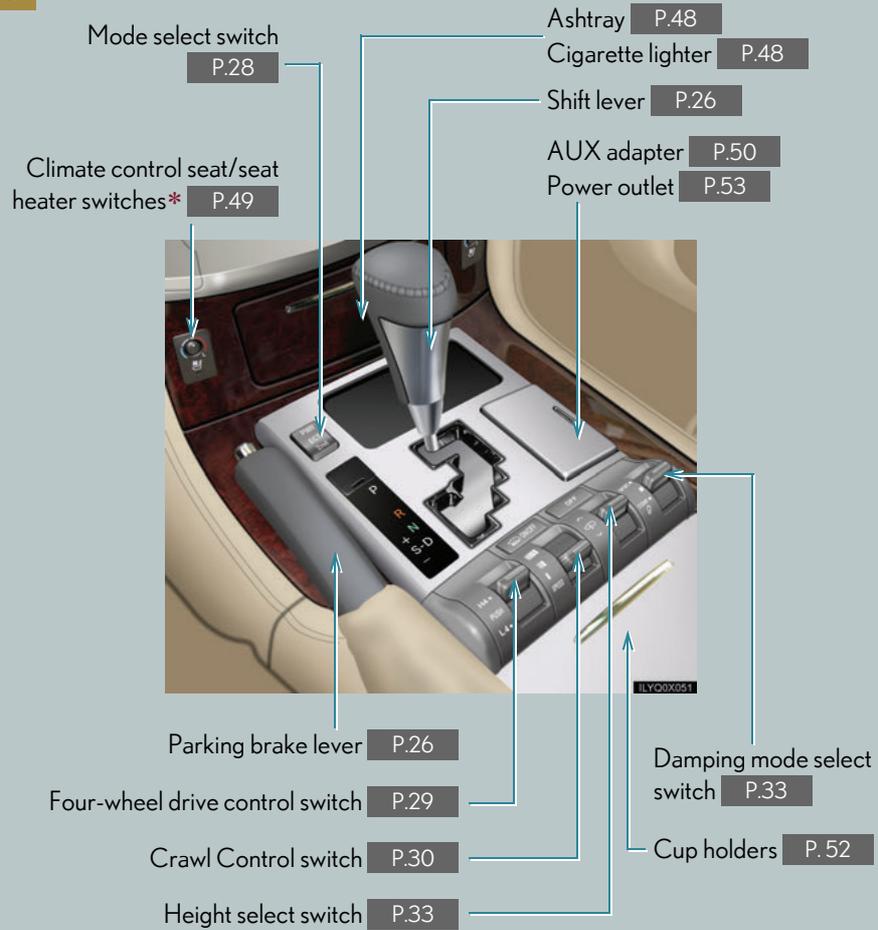

* : If equipped



Topic 1


Entering and Exiting

| | |
|--------------------------------------|----|
| Keys | 9 |
| Smart Access System with Push-button | |
| Start | 10 |
| Theft Deterrent System | 11 |



Keys

■ Electronic key

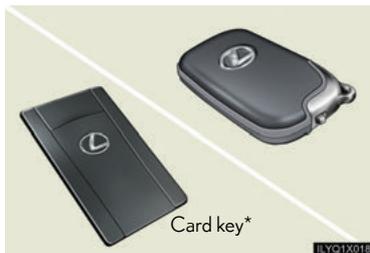

Smart access system with push-button start
(→10, 25)

*: If equipped

■ Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull or if equipped with a card key, press the button and pull.

■ Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door
Press twice: unlocks all doors
Press and hold: opens the windows and moon roof
- 3 Press and hold:** opens and closes the back door *
- 4 Press and hold:** sounds the alarm
(Use the alarm to attract attention to the vehicle in order to help deter breaks-ins. To stop the alarm, press any button on the wireless remote control.)

*: If equipped



Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 25.

Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

Exiting the vehicle



To lock the vehicle, press the button on the door handle.

To close the windows and moon roof, press and hold the button.

Locking and unlocking the back door



1 Lock

2 Unlock

For details on what to do when the electronic key does not operate properly, see page 65.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

■ Immobilizer system



The immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key. The security indicator light flashes to indicate that the system is set.

■ Alarm

The system sounds the alarm and flashes light when an attempt to steal the vehicle is detected.

To set the alarm: close the side doors, back door and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

To deactivate or stop the alarm: start the engine, or unlock the doors using the entry function or the wireless remote control.

■ Steering lock



The steering lock is engaged when the driver's door is opened with the "ENGINE START STOP" switch OFF.



Topic 2


Before Driving

| | |
|-------------------------------------|----|
| Front Seats..... | 13 |
| Rear Seats..... | 14 |
| Driving Position Memory System..... | 20 |
| Head Restraints | 21 |
| Seat Belts..... | 21 |
| Outside Rear View Mirrors | 22 |
| Inside Rear View Mirror..... | 23 |
| Steering Wheel..... | 23 |



Front Seats

■ Adjusting the seat position

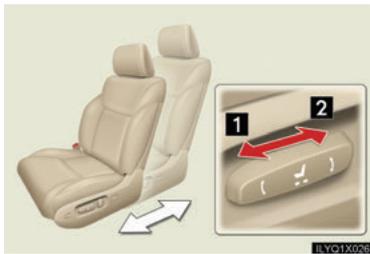

- 1 Moves the seat forward
- 2 Moves the seat backward

■ Adjusting the seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer

■ Adjusting the seat cushion length (driver's seat only)



- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

Rear Seats

■ Adjusting the second seat position



- 1 Move the seat forward
- 2 Move the seat backward

■ Adjusting the second seat back angle



Pull the lever and tilt the seatback forward or backward.

■ Tumbling the second seats



Before tumbling the second seats, stow the seat belt buckles and lower the head restraints to the lowest position.

The outer seat belts should be secured with the seat belt hangers.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving


Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 2
Before Driving

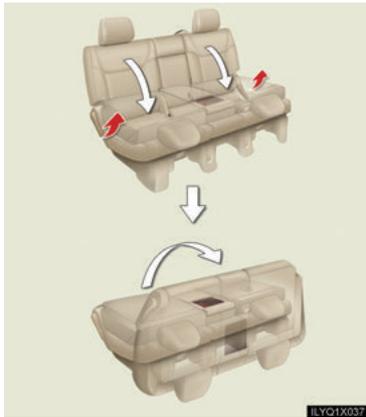


- 1 Fold down the seatback while pulling the seat-back angle adjustment lever, and swing the whole seat up and forward.



- 2 Hook the holding strap to the assist grip and secure the seat by pulling its free end.

When returning the second seat to its original position, stow the holding strap.

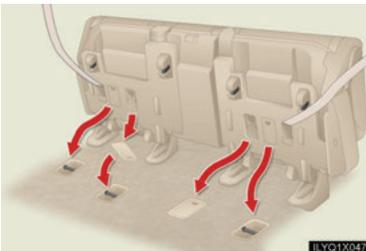

- 3 Remove the seat anchor covers from the back of the seat cushion, and install them on the seat anchors.

When returning the second seat to its original position, remove the seat hook covers from the floor and install them in the back of the seat cushion.




Folding the third seats

Before folding the third seats, make sure the following items are in their stowed positions.

- **Seat belt buckles:** stowed in the seat cushion
- **Outer seat belts:** secured with the seat belt hangers
- **Center seat belt:** stowed in the cover set in the roof
- **Center head restraint:** stowed in the seat back

For the way of stowing, see the Owner's Manual.


► Vehicles with manual switches

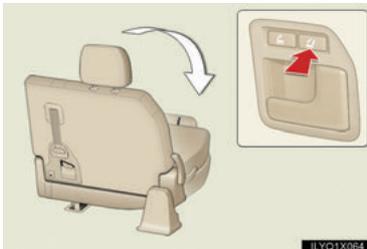

Press the third seat table mode switch.

The switch for the left side third seat is found on the opposite side.

► Vehicles with automatic switches

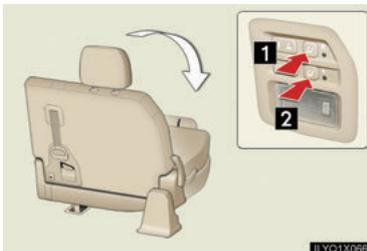

Press the third seat table mode switch.

- 1 "R": Right side third seat
- 2 "L": Left side third seat

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus




■ Tumbling the third seats

Before tumbling the third seats, make sure the following items are in their stowed positions.

- **Seat belt buckles:** stowed in the seat cushion
- **Outer seat belts:** secured with the seat belt hangers
- **Center seat belt:** stowed in the cover set in the roof
- **Center head restraint:** stowed in the seat back

For the way of stowing, see the Owner's Manual.

► Vehicles with manual switches

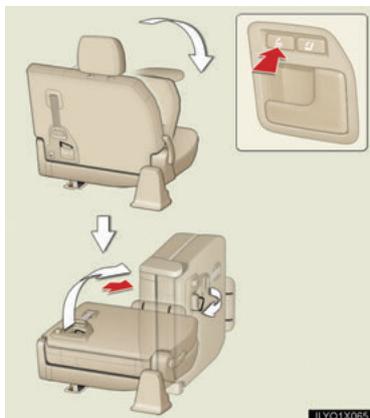


1 Press and hold the third seat tumbling switch.

The switch for the left side third seat is found on the opposite side.

After the seat is tumbled, push the back of the seat cushion to lock it.

► Vehicles with automatic switches

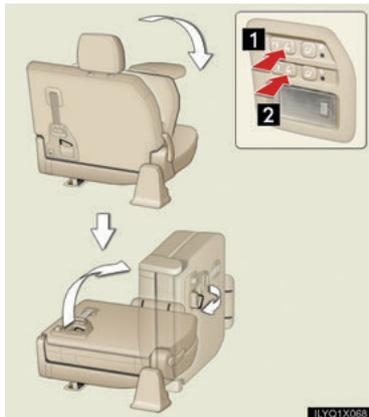

1 Press and hold the third seat tumbling switch.

1 Right side third seat

2 Left side third seat



2 Remove the seat hook covers from the back of the seat cushion, and install them on the seat hooks.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



■ Returning the third seats

Before returning the third seats, remove the seat hook covers from the floor and install them into the back of the seat cushion.

▶ Vehicles with manual switches



- 1 Pull the third seat lock release lever and lower the seat, then lock the seat leg lock to the floor.


The lever for the left side third seat is found on the opposite side.

▶ Vehicles with automatic switches



- 1 Press and hold the third seat return switch.

- 1 Right side third seat
- 2 Left side third seat

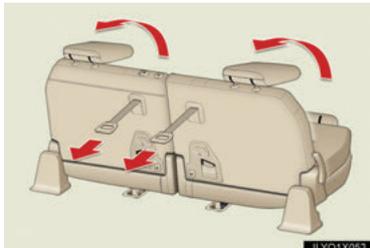

- 2 Pull the handles located on the rear of the seatbacks and raise the head restraints.



Driving Position Memory System

Your preferred driving position (the position of the driver's seat and steering wheel, and angle of the outside rear view mirrors) can be memorized and recalled with the touch of a button.

Setting memory positions



While holding the "SET" button, press and hold one of the memory buttons ("1", "2", or "3") until you hear a beep.

The current driving position is recorded.

Recalling memory positions



Press one of the memory buttons ("1", "2", or "3").

Linking driving position memory with door unlock operation



While holding the desired memory button, press and hold  button on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

The card key* can also be linked. For details, see the "Owner's Manual".

*: If equipped

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus




Head Restraints

■ Front seats, second outboard seats

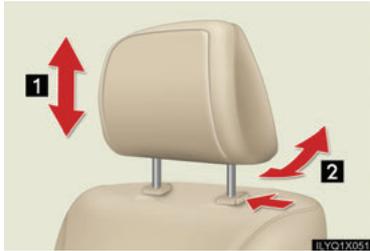

- 1 Vertical adjustment
To lower the head restraint, push it down while pressing the lock release button.
- 2 Angle adjustment (front seat only)

■ Third outboard seats

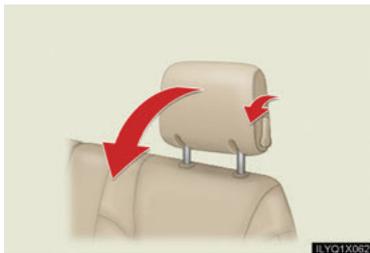

Pull the head restraint angle lever to fold the head restraint.

Seat Belts


■ Adjusting shoulder belt height (front seats, second outboard seats only)



To raise: pull the anchor upward.
To lower: depress the button and push the anchor down.

Outside Rear View Mirrors

■ Adjusting the mirrors

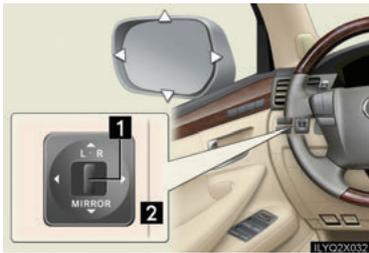

- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjust the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the select switch in the neutral position (between "L" and "R").

■ Folding the mirrors



- 1 Folds the mirrors
- 2 Extends the mirrors

Putting the switch in the neutral position allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.

| | |
|------------------------|--|
| Entering and Exiting | |
| Before Driving | |
| When Driving | |
| Rain and Night Driving | |
| Driving Comfort | |
| Opening and Closing | |
| What to do if ... | |
| Customizing Your Lexus | |




Inside Rear View Mirror

The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn automatic mode on/off, press the "AUTO" button.
The indicator comes on when automatic mode is turned on.

Steering Wheel

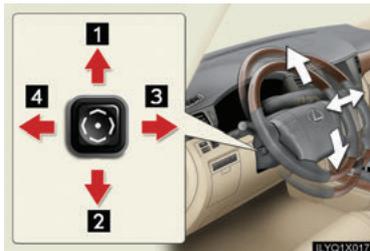

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

The steering wheel retracts automatically when the "ENGINE START STOP" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "ENGINE START STOP" switch is switched to ACCESSORY or IGNITION ON mode.



Topic 3

When Driving

| | |
|--|----|
| Starting | 25 |
| Automatic Transmission..... | 26 |
| Parking Brake..... | 26 |
| Multi-information Display..... | 27 |
| Turn Signal Lever | 28 |
| Emergency Flasher Switch..... | 28 |
| Mode Select Switch..... | 28 |
| Four-wheel Drive System | 29 |
| Intuitive Parking Assist | 29 |
| Wide View Front & Side Monitor | 30 |
| Crawl Control | 30 |
| Cruise Control | 31 |
| Dynamic Radar Cruise Control..... | 32 |
| AVS (Adaptive Variable Suspension) | 33 |
| 4-Wheel AHC (Active Height Control Suspension) | 33 |
| Active TRAC/VSC Off Mode | 34 |
| Roll Sensing of Curtain Shield Airbags Off Switch | 34 |
| Tire Pressure Warning Reset Switch | 34 |



Starting

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.
(The mechanical key cannot be used to start the engine.)

Starting the engine



Make sure the parking brake is engaged and the shift lever is in “P”.


- 1 Depress the brake pedal.
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

Stopping the engine

- 1 Engage the parking brake and shift the shift lever to “P”.
- 2 Press the “ENGINE START STOP” switch.

Changing “ENGINE START STOP” switch modes


To change “ENGINE START STOP” switch modes without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The modes can be changed in the following order:

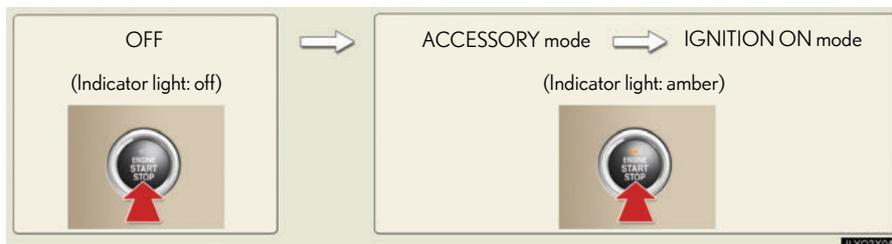



Automatic Transmission

Shift positions

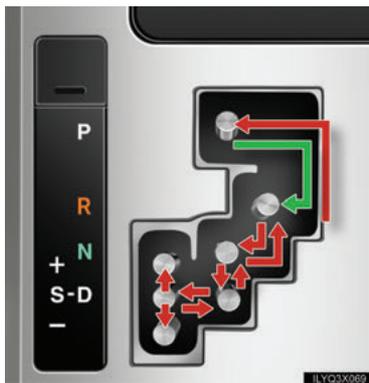

- P Park*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

*: The engine can only be started in "P".

← The vehicle can only be shifted out of "P" when the "ENGINE START STOP" switch is in IGNITION ON mode and the brake pedal is depressed.

"S" mode


"S" mode allows the driver to select the shift range manually based on driving conditions.



- 1 Shift the shift lever to "S".
- 2 To upshift: shift the shift lever toward "+".
To downshift: shift the shift lever toward "-".

The selected shift range is displayed on the instrument cluster.

Parking Brake

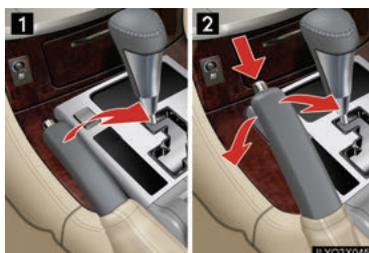

- 1 To set the parking brake: pull the parking brake lever firmly upward.
- 2 To release the parking brake: press and hold the lock release button and lift the lever slightly before lowering it as far as it will go.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

■ Display information



- Trip information
 - Average vehicle speed
 - Driving distance
 - Driving range
 - Average fuel consumption
 - Current fuel consumption
 - Outside temperature
- Intuitive parking assist display (if equipped)
- Dynamic radar cruise control settings (if equipped)
- 4-Wheel AHC display
- Crawl Control display
- Shift position and shift range
- Warning messages

■ Changing the display



Trip information items can be switched by pressing the "DISP" switch.

- When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.



Turn Signal Lever



- 1 Left turn signal
- 2 Right turn signal

To signal a lane change, move the lever partway and hold.

Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

Mode Select Switch

Use the mode select switch to select the driving mode that best suits the driving and road conditions.



- 1 **Power mode**
For more powerful acceleration and uphill driving.
- 2 **Normal mode**
- 3 **"2nd STRT" (second start) mode**
For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or second start mode.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Four-wheel Drive System

Use these switches to select following transfer and center differential modes.

► Four-wheel drive control switch



To select “L4” mode, push down and shift the switch backward. To select “H4” mode, shift the switch forward.

- 1 “H4”: Normal driving
- 2 “L4”: Driving requiring maximum power and traction

► Center differential lock/unlock switch



Use this switch when your vehicle’s wheels get stuck in a ditch or when you are driving on a slippery or bumpy surface.

Intuitive Parking Assist (If Equipped)

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.



ON/OFF

The indicator light comes on to inform the driver that the system is operational.

For details, see the “Owner’s Manual”.



Wide View Front & Side Monitor (If Equipped)

This system can display the wide view front monitor and the side monitor separately or at the same time. This system helps the driver check for front and side of the vehicle.




ON/OFF

The display can be changed by pressing the "VIEW" switch.

For details, see the "Owner's Manual".

Crawl Control

Crawl Control allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.

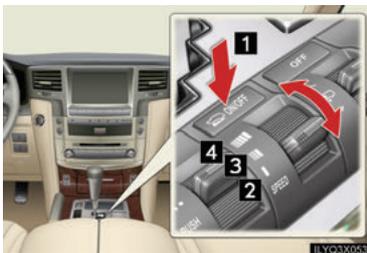

To select a speed mode, shift the Crawl Control switch forward or backward.

- 1 ON/OFF**
- 2 Lo (low mode):** For traveling on the rocks and pebbles
- 3 Med (medium mode):** For traveling on snow mounds or descending a slope of rubble
- 4 Hi (high mode):** For ascending a slope of rubble, or traveling on snow, dirt, mud, sand, gravel, grass etc.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus




Cruise Control (If equipped)

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.


Use for highway driving or when traveling at a constant speed for long periods of time.

■ Setting the speed

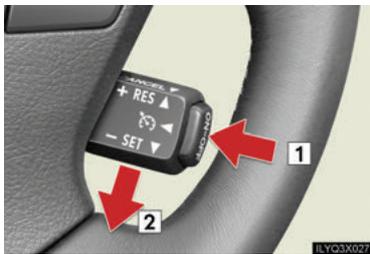

- 1 Press the "ON-OFF" button.
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.
This sets the speed in the cruise control memory.

■ Canceling

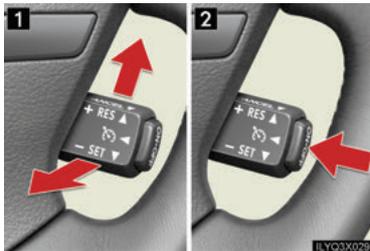

- 1 To temporarily cancel the cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

■ Adjusting the speed setting



- To increase speed:** push the lever up.
To decrease speed: push the lever down.


Release the lever when the desired speed is reached.



Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.

Cruise control display

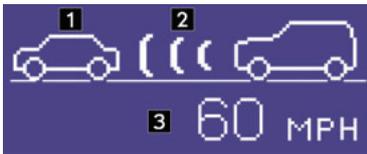

Cruise control settings are shown on the multi-information display.


- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Preset speed

Vehicle-to-vehicle distance control mode




- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Following distance can be adjusted using the vehicle-to-vehicle distance control switch.

Constant speed cruise control mode

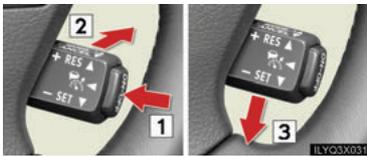

- 1 Press the "ON-OFF" button.
- 2 Push the lever away from you and hold for at least one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

Canceling

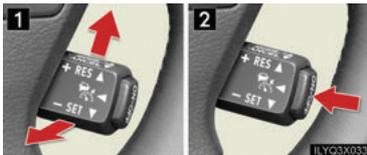

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, pull the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

Adjusting the speed setting



- To increase speed: push the lever up.
- To decrease speed: push the lever down.

Release the lever when the desired speed is reached.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



AVS (Adaptive Variable Suspension)

AVS controls the suspension and steering wheel operation according to the road and driving conditions.



To select a driving mode, shift the damping mode select switch forward or backward.

- 1 For high speed driving
- 2 For ordinary driving
- 3 For driving on bumpy roads

4-Wheel AHC (Active Height Control Suspension)

4-Wheel AHC adjusts the vehicle height in accordance with driving conditions.



To select a height mode, shift the height select switch forward or backward.

- HI (high mode): For driving bumpy roads
- N (normal mode): For ordinary driving
- LO (low mode): For easy access to the vehicle

Press the "OFF" switch to cancel.

Easy access mode



Press this switch for easy access and easy loading of the vehicle. The vehicle height is lowered automatically when the "ENGINE START STOP" switch is turned to OFF mode.

The easy access mode is available when N mode is selected.



Active TRAC/VSC Off Mode

This switch turns off the active traction control system or vehicle stability control system. Use this switch if the wheels get stuck in snow, mud etc.



To turn off Active TRAC: Push the VSC OFF switch briefly. The slip indicator light will come on.

To turn off VSC: Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The slip indicator light will come on and "VSC OFF" will be shown on the multi-information display.

Push the button again to turn the system back on.

Roll Sensing of Curtain Shield Airbags Off Switch

This switch can turn off the curtain shield airbags and front seat belt pretensioners in a vehicle rollover.



ON/OFF

Press and hold until indicator light turns on/off.

Tire Pressure Warning Reset Switch

This switch can initialize the tire pressure warning system



Press and hold the switch when you change the tire inflation pressure.

For details, see the "Owner's Manual".

- Entering and Exiting
- Before Driving
- When Driving
- Rain and Night Driving
- Driving Comfort
- Opening and Closing
- What to do if ...
- Customizing Your Lexus

Topic 3
When Driving






Topic 4

Rain and Night Driving

| | |
|--------------------------------------|----|
| Headlights..... | 37 |
| Fog Lights..... | 38 |
| Windshield Wipers and Washers | 38 |
| Rear Window Wiper and Washer | 38 |
| Headlight Cleaner | 39 |
| Rear Window and Outside Rear View | |
| Mirror Defoggers..... | 39 |
| Instrument Panel Light Control | 39 |



Headlights

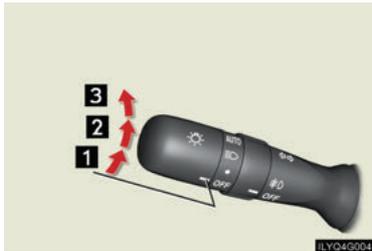

- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and all lights listed above turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward.
To flash the high beams, pull the lever and hold.

■ AFS (Adaptive Front lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.




The system can be turned on and off using the "AFS OFF" switch.

Fog Lights



The fog lights can be used only when the headlights (low beam) are on.


Windshield Wipers and Washers

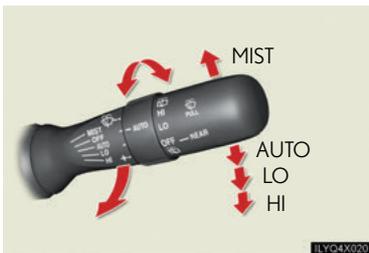

MIST: operates once
AUTO: automatic operation*
LO: low speed
HI: high speed
 *: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever.
 The wipers will operate automatically.

Rear Window Wiper and Washer

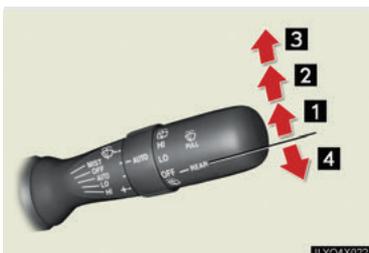

- 1 Intermittent operation
- 2 Normal operation
- 3 Washer operation
- 4 Washer/wiper operation

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and outside mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



- 1 Brighter
- 2 Darker



Topic 5


Driving Comfort

| | |
|--|----|
| Touch Screen | 41 |
| Front Air Conditioning System | 42 |
| Rear Air Conditioning System | 43 |
| Audio System | 44 |
| Rear Seat Entertainment System | 46 |
| Hands-free System (For Cellular Phone) | 47 |
| Ashtrays | 48 |
| Cigarette Lighter | 48 |
| Climate Control Seats/Seat heaters | 49 |
| Console Box | 50 |
| Auxiliary Boxes | 50 |
| Cool Box | 51 |
| Glove Box | 51 |
| Cup Holders | 52 |
| Interior Lights | 53 |
| Power Outlet | 53 |
| Garage Door Opener | 54 |
| Lexus Link System | 56 |



Touch Screen

By touching the screen with your finger, you can control the audio system, air conditioning and adjust the screen display, etc. For details, see the Owner's Manual.

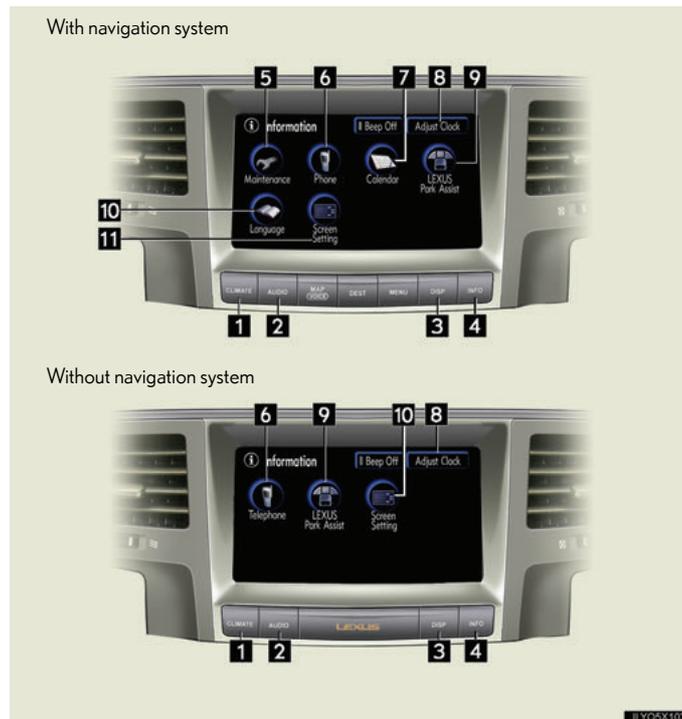

| When you press this button... | This display appears. |
|-------------------------------|---|
| 1 "CLIMATE" | Air conditioning operation screen |
| 2 "AUDIO" | Audio control screen |
| 3 "DISP" | Display screen |
| 4 "INFO" | Information screen |
| 5 "Maintenance" | Maintenance screen* |
| 6 "Phone", "Telephone" | Telephone screen |
| 7 "Calendar" | Calendar screen* |
| 8 "Adjust Clock" | Adjust clock screen |
| 9 "LEXUS Park Assist" | Intuitive parking assist setting screen |
| 10 "Language" | Select language screen |
| 11 "Screen Setting" | Screen setting screen |

*: See Navigation System Owner's Manual.

Front Air Conditioning System

Press to display the air conditioning operation screen. For details, refer to the Owner's Manual.



- 1 Air conditioning operation screen display button
- 2 Driver's side temperature control
- 3 Automatic mode
- 4 Rear air conditioning operation screen display switch
- 5 Individual mode switch
- 6 Passenger's side temperature control

■ Using the automatic mode



1 Press

2 Adjust the temperature using

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



■ Adjusting the temperature in individual mode


In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

1 Touch **4ZONE** on the operation screen if its indicator is off.

2 Adjust the driver side temperature using , and the passenger side temperature

using . To adjust the temperature for the rear seats, see below.

Rear Air Conditioning System

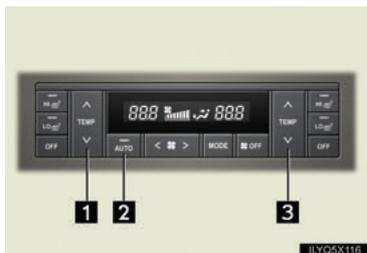


- 1 Left side temperature control
- 2 Automatic mode
- 3 Right side temperature control

To use the automatic mode, press **AUTO** and

adjust the temperature using .

■ Front controller (touch screen)

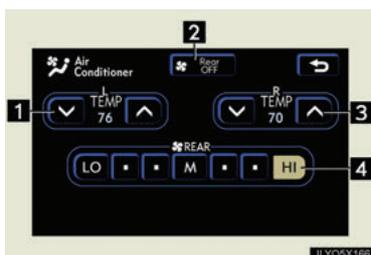


To display the rear air conditioning operation screen, touch the  on the operation screen.

- 1 Left side temperature control switch and display
- 2 Off
- 3 Right side temperature control switch and display
- 4 Fan speed display

Audio System

■ Basic operation

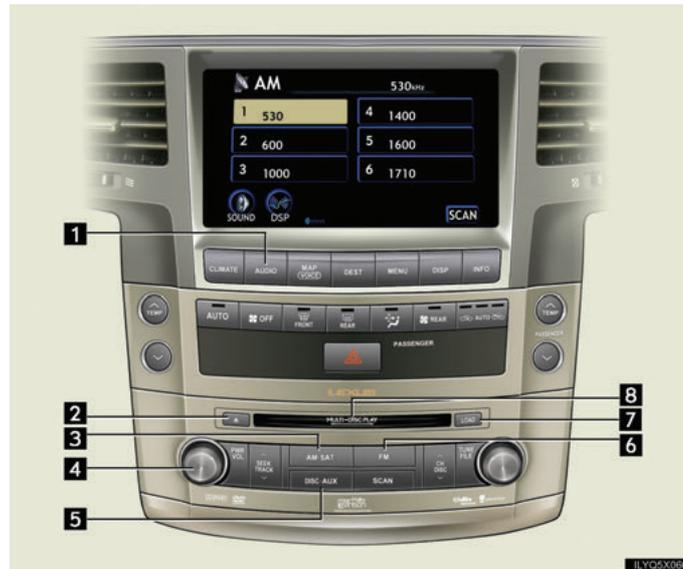

- 1** Audio control screen display button*
- 2** Disc eject button
- 3** AM•SAT radio mode button
- 4** Power ON/OFF button, Volume adjustment knob
- 5** DISC•AUX mode button
- 6** FM radio mode button
- 7** Disc load button
- 8** Disc slot

*: Various adjustments can be made in each mode.
For details, refer to the Owner's Manual.

Entering and Exiting

Before Driving

When Driving

Rain and
Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing
Your Lexus



■ Listening to the radio



1 Press **AM SAT** or **FM** to choose an AM or FM band.

2 Tune to your desired station.
For tuning adjustment and further information, refer to the Owner's Manual.

■ Playing the CD/DVD player



You have 2 methods to play your CD/DVD player.

- Press **LOAD** and insert a disc into the disc slot.

- Press **DISC-AUX** with the disc inserted.

For further information, refer to the Owner's Manual.

■ Using the AUX adapter



1 Push the lid to open.

2 Open the cover and connect the portable audio device.

3 Press **DISC-AUX**.

■ Remote control (steering switches)



"MODE": Turns the audio system on/off, or changes the audio mode.

"+" or "-": Adjusts the volume.

"^" or "v":

Radio mode— Radio tuner

CD mode— Disc/track/file(MP3/WMA) selection

DVD mode—Track/chapter/disc selection

Rear Seat Entertainment System (If Equipped)

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.

The button positions may slightly vary depending on the type of the system.

Display



To open: Press **CLOSE/OPEN**, **DVD**, **MAP***, **VIDEO** or **▶||**.

To close: Press **CLOSE/OPEN** or **OFF**.

The display angles change each time **TILT** is pressed.

*: Vehicles with navigation system only


Remote control



To use the buttons under the cover, slide the cover down.

- 1 Mode select
- 2 Cursor position
- 3 Enter
- 4 Radio tuner, Track/chapter select
- 5 Play/pause
- 6 Rewind
- 7 Folder select
- 8 Title/disc menu number select
- 9 Fast forward
- 10 Stop

Headphone jacks

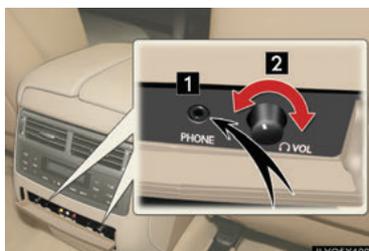

To listen to the rear audio, use headphones.

- 1 Headphone jacks
- 2 Volume: Turn the knob clockwise to increase. Turn the knob counterclockwise to decrease.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Hands-free System (For Cellular Phone)

To use the hands-free system, you must register your Bluetooth® phone in the system. For details, see the Owner's Manual.

The button positions, shapes and screen may slightly vary depending on the type of the system.

■ Making a call



1 Press  .



2 Touch  .



3 Inputting the phone number.
For another way of calling, see the Owner's Manual.



4 Touch  or press  on the steering switch.

■ Hanging up the phone



Touch  or press  on the steering switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Ashtrays

► Front



To remove the ashtray, pull it out.

► Rear



To remove the ashtray, pull it out.

Cigarette Lighter




Push the cigarette lighter in.

The cigarette lighter will pop up when ready for use.




Climate Control Seats/Seat heaters (If Equipped)

► Front seat heaters

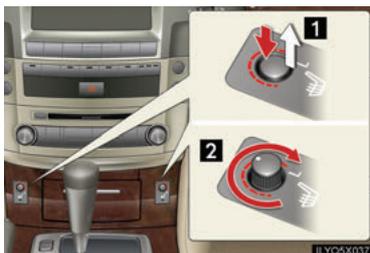

Press the knob to pop out **1**, and turn the knob toward **2** to adjust the seat temperature.

► Climate control seats

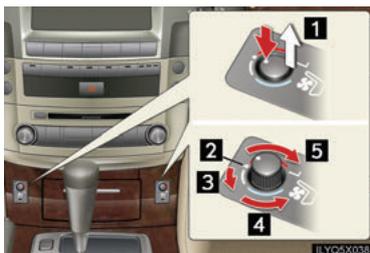

Press the knob to pop out **1**, and turn the knob to adjust the seat temperature.

- 2** Off
- 3** Ventilation
- 4** Cool air
- 5** Warm air

► Rear seat heaters



Press the desired temperature switch.

- 1** HI (High temperature)
- 2** LO (Low temperature)
- 3** OFF

Console Box



To open, lift the armrest with the knob pulled up.

Auxiliary Boxes

► Overhead



To open, press in the button.

► Instrument panel



To open, press in the button.

► Rear armrest



To open, press in the button.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus




Cool Box (If Equipped)



- 1 Lift the armrest with the knob pulled up.
- 2 Press the switch to turn it on.

Press the switch again to turn it off.

Glove Box

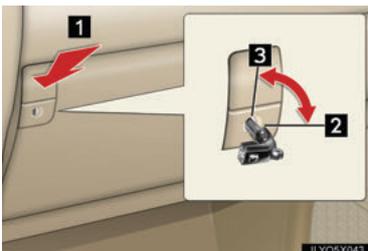


- 1 Open: press the button.
- 2 Lock
- 3 Unlock

The glove box can be locked and unlocked using the mechanical key.

Cup Holders

► Front

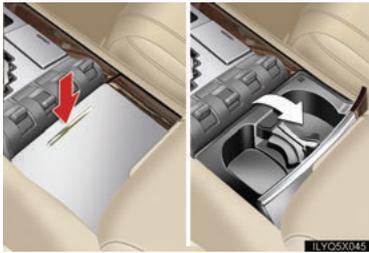

To open, press the lid.

► Rear



To open, press the button on the rear center armrest.

| |
|------------------------|
| Entering and Exiting |
| Before Driving |
| When Driving |
| Rain and Night Driving |
| Driving Comfort |
| Opening and Closing |
| What to do if ... |
| Customizing Your Lexus |



Interior Lights



- 1 OFF
- 2 The light comes on if a door is opened.
- 3 ON

Power Outlet


► 12V DC



Designed for use with car accessories.

The "ENGINE START STOP" switch must be in ACCESSARY or IGNITION ON mode for this power outlet to be used.

► 115V AC

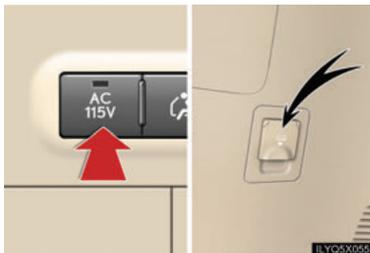

Designed for use with electrical appliances.

To use the power outlet, push the "AC 115V" switch on the instrument panel.

The "ENGINE START STOP" switch must be in IGNITION ON mode for this power outlet to be used.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

■ Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.



Lexus Link System (If Equipped)

The Lexus Link System is a communication service that uses GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

Buttons



- 1** Voice keypad button
Sends number tones to an automated phone system for example to access voicemail, during a phone call
- 2** Volume control
Adjusts your Lexus Link System audio volume
- 3** Phone button
 - Makes or answers a phone call using the hands-free personal calling service
 - Ends a call
- 4** "SERVICES" button
 - Contacts the Lexus Link Call Center for information, directions or other services
 - Records a conversation for later playback
- 5** Emergency button
Makes a priority call to the Lexus Link Call Center

Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



- Stolen vehicle location assistance
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- Remote horn/lights and remote door lock/unlock
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- Advisor record
You can record a conversation with the Lexus Link Advisor.
- Personal calling from OEM telematic services
The Lexus Link System provides access to personal calling, a hands-free phone service provided by OEM telematic services.
- Other services
Press the "SERVICES" button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

The system is only operational in GPS (Global Positioning System) and cellular coverage areas.



Topic 6

Opening and Closing

| | |
|---------------------|----|
| Door Locks | 59 |
| Power Windows | 60 |
| Moon Roof | 60 |
| Fuel Tank Cap | 61 |
| Hood | 61 |
| Back Door | 62 |



Door Locks

■ Locking the vehicle from inside

▶ Inside lock button



- 1 Locks
- 2 Unlocks

▶ Door lock switch



Operates all door locks.

- 1 Locks
- 2 Unlocks

■ Locking the vehicle from outside

▶ Using the entry function or wireless remote control (→P.9, 10)

■ Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Power Windows



- 1 Window lock switch**
The window lock switch disables the operation of all windows other than the driver's door window.
- 2 Power window switches**
To open: press the switch.
To close: pull the switch up.
Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

Moon Roof

Opening and closing



- 1 Open**
Stops just before it is opened fully. Press the switch again to fully open.
- 2 Close**
To stop partway, press the switch lightly.

Tilt up and down



- 1 Tilt up**
- 2 Tilt down**
To stop partway, press the switch lightly.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Fuel Tank Cap



1 Press the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

Hood



1 Pull the hood lock release lever.



2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Back Door

■ Power back door (if equipped)



To close the back door, press the switch.



To open or close the back door from inside the cabin, press and hold the switch.



To disable the power back door, press the "PWR DOOR OFF" switch.

■ Back door easy closer (if equipped)

If the back door is left slightly open, it will close automatically.

■ Entry function and wireless remote control

→P.9,10

| |
|------------------------|
| Entering and Exiting |
| Before Driving |
| When Driving |
| Rain and Night Driving |
| Driving Comfort |
| Opening and Closing |
| What to do if ... |
| Customizing Your Lexus |

What to do if ...

List of Warning/Indicator Lights



Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

- | | | |
|---|----------|----------------------------|
|  | (U.S.A.) | Brake system warning light |
|  | (Canada) | |

Stop the vehicle immediately.

- | | |
|---|-------------------------------|
|  | Charging system warning light |
|---|-------------------------------|

Have the vehicle inspected immediately.

- | | | | | |
|---|----------|----------------------------|---|--------------------------------------|
|  | (U.S.A.) | Malfunction indicator lamp |  | SRS warning light |
|  | (Canada) | |  | Pre-collision system warning light * |
|  | (U.S.A.) | ABS warning light | | |
|  | (Canada) | | | |

For further information, refer to the Owner's Manual.

Have the malfunction repaired immediately.



Open door warning light



Tire pressure warning light



Low fuel level warning light



Unengaged "Park" warning light



Driver's seat belt reminder light



Master warning light



PASSENGER
Front passenger's seat belt reminder light

(On the center panel)

See the Owner's Manual



Turn signal indicator



Slip indicator



Headlight high beam indicator



Crawl Control indicator



Headlight indicator (U.S.A.)



RSCA OFF
Roll sensing of curtain shield airbags off indicator



Tail light indicator (Canada)



2nd STRT
Automatic transmission second start indicator



Fog light indicator



4LO
Low speed four-wheel drive indicator



ECT PWR
"PWR" mode indicator



Center differential lock indicator



CRUISE
Cruise control indicator



Security indicator



AFS OFF
"AFS OFF" indicator



Easy access mode indicator



P
Intuitive parking assist indicator *



AIR BAG OFF ON
"AIR BAG ON" and "AIR BAG OFF" indicators

For further information, refer to the Owner's Manual.

*: If equipped

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

What to do if ...

Spare Tire and Tool Compartment

Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire


Taking out the spare tire



- 1 Lift up the cover.
- 2 Insert the jack handle extension into the lowering screw and lower the spare tire.

If the electronic key does not operate properly

Unlocking and locking the doors

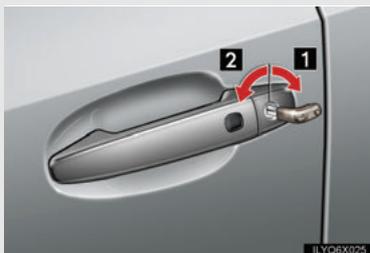

To unlock or lock the vehicle, use the mechanical key. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 5 seconds after the buzzer sounds, keeping the brake pedal depressed.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

If the engine does not start

Make sure that the correct operating procedures have been followed.



Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.25)



Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. (→P.11)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

What to do if ...

Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

| Alarm | Situation | Correction procedure |
|---|---|--|
| Exterior alarm sounds once for 2 seconds | An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment | Retrieve the electronic key from the passenger compartment and lock the doors again. |
| Exterior alarm sounds once for 60 seconds | An attempt was made to exit the vehicle and lock the doors without first turning the "ENGINE START STOP" switch OFF | Turn the "ENGINE START STOP" switch OFF and lock the doors again. |
| Exterior alarm sounds once for 10 seconds | An attempt was made to lock the vehicle while a door is open | Close all of the doors and lock the doors again. |
| Interior alarm pings continuously*1 | The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "ENGINE START STOP" switch was in ACCESSORY mode) | Turn the "ENGINE START STOP" switch OFF and close the driver's door. |
| | The "ENGINE START STOP" switch was turned OFF while the driver's door was open | Close the driver's door. |

| Alarm | Situation | Correction procedure |
|---|---|---|
| Interior alarm sounds continuously* ¹ | When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P" | Shift the shift lever to "P" and turn the "ENGINE START STOP" switch OFF |
| Interior and exterior alarms sound continuously* ¹ | When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever not in "P" | Shift the shift lever to "P", turn the "ENGINE START STOP" switch OFF and close the driver's door again |
| Interior alarm pings once* ¹ | The electronic key has a low battery | Replace the electronic key battery |
| | An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally | Start the engine with the electronic key present* ² |
| Interior alarm pings once and exterior alarm sounds 3 times* ¹ | The driver's door was closed after the key was carried outside the vehicle, and the "ENGINE START STOP" switch was not turned OFF | Turn the "ENGINE START STOP" switch OFF and close the driver's door again |
| | An occupant carried the electronic key outside the vehicle and closed the door while the "ENGINE START STOP" switch was not OFF | Bring the electronic key back into the vehicle |

*¹: A message will be shown on the multi-information display in the instrument cluster.

*²: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving signal from the key.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

| Item | Function | Default setting | Customized setting |
|--|---|---|------------------------------|
| Smart access system with push-button start | Smart access system with push-button start | ON | OFF |
| | Operation signal (Emergency flashers) | ON | OFF |
| | Operation signal (Buzzer) | ON | OFF |
| Wireless remote control | Wireless remote control | ON | OFF |
| | Unlocking operation | Driver's door unlocked in 1-step, all doors unlocked in 2-steps | All doors unlocked in 1-step |
| | Time elapsed before automatic door lock function is activated if door is not opened after being unlocked | 60 seconds | OFF |
| | | | 30 seconds |
| | | | 120 seconds |
| | Operation signal (Emergency flashers) | ON | OFF |
| | Buzzer sounds when pushing  with any door not closed | ON | OFF |
| | Power back door operation*1 | Push and hold | One short push |
| Push twice | | | |
| OFF | | | |

| Item | Function | Default setting | Customized setting |
|-------------------|--|---|------------------------------|
| Door lock | Unlocking using a key | Driver's door unlocked in 1-step, all doors unlocked in 2-steps | All doors unlocked in 1-step |
| | Speed-detecting automatic door lock function | OFF | ON |
| | Opening driver's door unlocks all doors | OFF | ON |
| | Shift the shift lever to "P" unlocks all doors. | ON | OFF |
| | Shift the shift lever to position other than "P" locks all doors | ON | OFF |
| Power back door*1 | Switch operation | Push and hold | One short push |
| | Operation signal | OFF | ON |
| | Wireless remote control linked operation (one-motion) | ON*2 | OFF |
| Power windows | Mechanical key linked operation (open) | ON | OFF |
| | Mechanical key linked operation (close) | ON | OFF |
| | Wireless remote control linked operation (open) | ON | OFF |
| | Linked entry function | ON | OFF |

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...



Customizing Your Lexus

| Item | Function | Default setting | Customized setting |
|--------------------------------|--|-----------------|--------------------|
| Moon roof | Mechanical key linked operation (open) | ON | OFF |
| | Mechanical key linked operation (close) | ON | OFF |
| | Linked operation of components when door key is used | Slide only | Tilt only |
| | Wireless remote control linked operation (open) | ON | OFF |
| | Linked operation of components when wireless remote control used | Slide only | Tilt only |
| | Linked entry function | ON | OFF |
| Automatic light control system | Light sensor sensitivity | Level 3 | Levels 1 to 5 |
| | Time elapsed before headlights automatically turn off after doors are closed | 30 seconds | 0 seconds |
| | | | 60 seconds |
| | | | 90 seconds |
| Day time running light | ON | OFF*3 | |

| Item | Function | Default setting | Customized setting |
|------------------------------|---|-----------------|--------------------|
| Rear window wiper and washer | Switching operation when the vehicle is stationary | ON | OFF |
| | Drip prevention function | ON | OFF |
| | Rear window wiper operation linked with washer | ON | OFF |
| | Linked operation when the shift lever in "R" position | ON | OFF |
| | Times of the linked operation when the shift lever in "R" position | Once | Continuously |
| Illumination | Time elapsed before lights turn off | 15 seconds | 7.5 seconds |
| | | | 30 seconds |
| | Operation when the doors are unlocked | ON | OFF |
| | Operation after the "ENGINE START STOP" switch turned OFF | ON | OFF |
| | Operation when you approach the vehicle with the electronic key on your person (When the interior light switch [ON/DOOR/OFF] is DOOR) | ON | OFF |

*1: If equipped

*2: In this case, the power back door operation will be made only by push and hold.

*3: Vehicles sold outside Canada

Multi-information display

| | |
|---------------------|--|
| Available languages | English (U.S.A.), English (UK), French, German, Spanish, Italian, Japanese, Simplified Chinese and Traditional Chinese |
|---------------------|--|

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2007 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.