

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

## Overview

### Topic 1

#### Entering and Exiting

- Keys ▶ P.7
- Theft Deterrent System ▶ P.8



- Outside Rear View Mirrors ▶ P.17
- Inside Rear View Mirror ▶ P.17
- Steering Wheel ▶ P.18

### Topic 2

#### Before Driving

- Front Seats ▶ P.11
- Second Seats ▶ P.12
- Third Seats ▶ P.13
- Driving Position Memory System ▶ P.15
- Head Restraints ▶ P.16
- Seat Belts ▶ P.16

### Topic 3

#### When Driving

- Starting ▶ P.21
- Automatic Transmission ▶ P.22
- Parking Brake ▶ P.23
- Turn Signal Lever ▶ P.23
- Emergency Flasher Switch ▶ P.23
- Cruise Control ▶ P.24
- Trip Information Display ▶ P.25
- Roll Sensing Of Curtain Shield Airbags Off Switch ▶ P.25
- Center Differential Lock Switch ▶ P.26
- Cigarette Lighter ▶ P.26
- Power Outlets ▶ P.27
- Four-Wheel Drive Control Lever ▶ P.27
- Damping Mode Select Switch ▶ P.28
- Rear Height Control Switch ▶ P.28
- "DAC" Switch ▶ P.29





- Rear Window and Outside Rear View Mirror Defoggers ▶P.33
- Instrument Panel Light Control ▶P.33

#### Topic 4

### Rain and Night Driving

- Headlights ▶P.31
- Fog Lights ▶P.31
- Windshield Wipers and Washers ▶P.32
- Rear Window Wiper and Washer ▶P.32

#### Topic 5

### Driving Comfort

- Air Conditioning System ▶P.35
- Audio System ▶P.37
- Rear Seat Entertainment System ▶P.39
- Ashtrays ▶P.40
- Seat Heaters ▶P.40
- Console Box ▶P.41
- Glove Box ▶P.41



- Cup Holders ▶P.42
- Personal Lights ▶P.43
- Compass ▶P.43
- Garage Door Opener ▶P.43
- Lexus Link System ▶P.46



#### Topic 6

### Opening and Closing

- Door Locks ▶P.49
- Back Door ▶P.50
- Power Windows ▶P.50
- Moon Roof ▶P.50
- Fuel Tank Cap ▶P.51
- Hood ▶P.52

**What to do if ...** ● Responding to warning/indicator lights and other problems that may arise.


**Customizing Your Lexus** ● A list of features that can be customized.

- Entering and Exiting
- Before Driving
- When Driving
- Rain and Night Driving
- Driving Comfort
- Opening and Closing
- What to do if ...
- Customizing Your Lexus

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

## Overview

## Instrument Panel

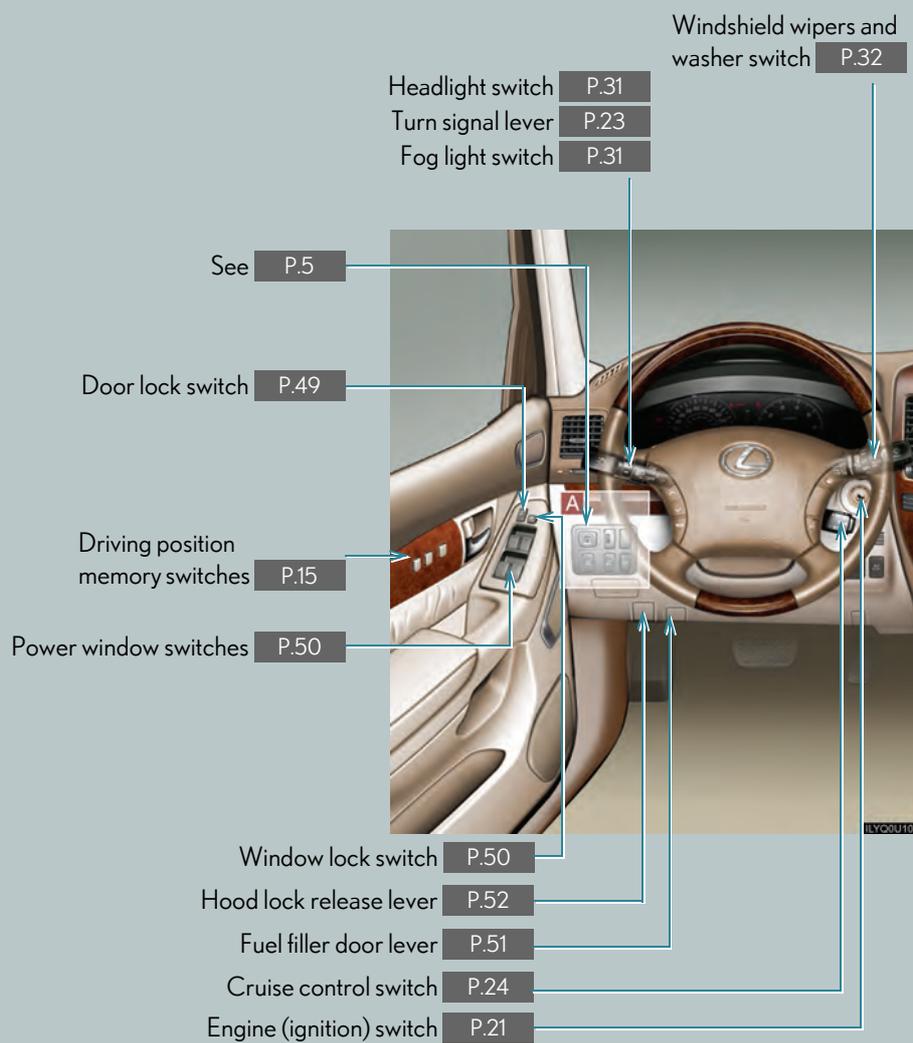

Emergency flashers P.23

Trip information display P.25



Glove box P.41



See P.5

Parking brake lever P.22

Automatic transmission second start switch P.22

## Overview

## Instrument Panel

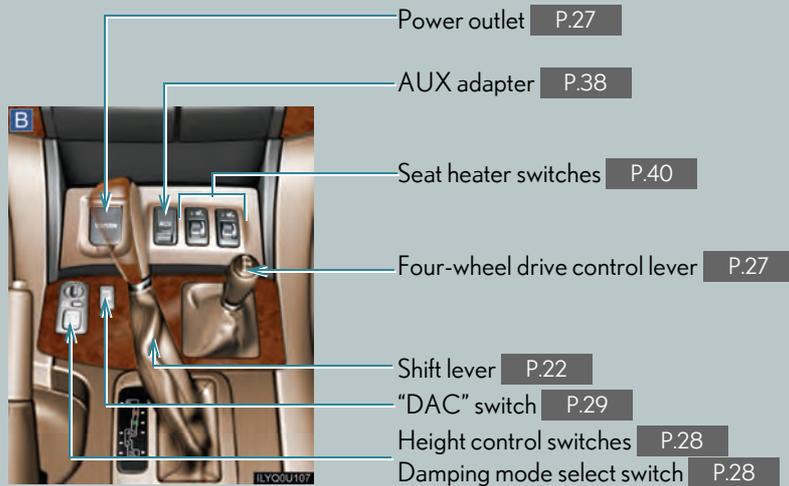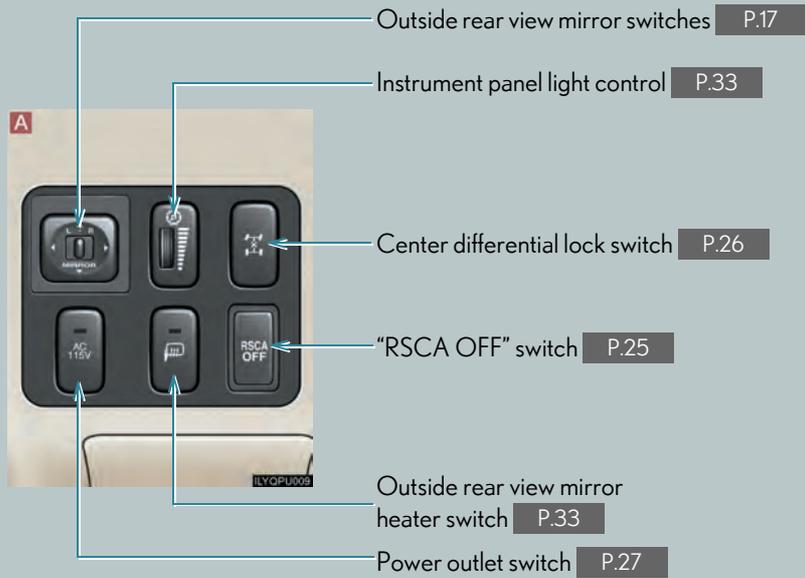



Topic 1

# Entering and Exiting

Keys .....	7
Theft Deterrent System .....	8




## Keys

### ■ Keys



- 1** Master keys  
Work in every lock.
- 2** Valet key  
Cannot lock/unlock the glove box.
- 3** Key number plate
- 4** Flat key  
Use in emergencies. Works in every lock.

### ■ Wireless remote control

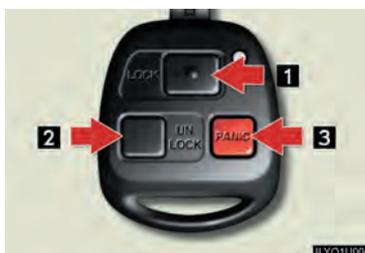


- 1** "LOCK" button: Locks all doors
- 2** "UNLOCK" button:  
Press once – Unlocks driver's door  
Press twice – Unlocks all doors
- 3** "PANIC" button: Sounds the alarm  
(press and hold)  
(Use this function if you notice anyone suspicious near the vehicle)

Press and hold the "UNLOCK" button to open all the windows.

## Threat Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### ■ Engine immobilizer system

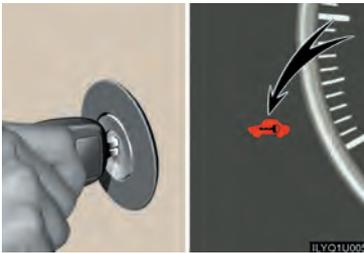

The engine immobilizer system prevents the engine from being started if an unregistered key is used.

### ■ Alarm



When forcible entry is detected, the alarm attracts attention to the vehicle by sounding the horn and flashing the exterior lights. When all the doors are locked, the security indicator light comes on and begins to flash after approximately 30 seconds to indicate that the theft deterrent system is armed.

To stop the alarm, start the engine or unlock the doors using the ignition key or wireless remote control. (The alarm will stop after several seconds.)

### ■ Steering lock



The steering lock is engaged when the engine switch is turned to the "LOCK" position.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 1  
**Entering and Exiting**





## Topic 2

# Before Driving

Front Seats.....	11
Second Seats .....	12
Third Seats .....	13
Driving Position Memory System.....	15
Head Restraints .....	16
Seat Belts.....	16
Outside Rear View Mirrors .....	17
Inside Rear View Mirror.....	17
Steering Wheel.....	18




## Front Seats

### ■ Adjusting seat position



- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting seatback angle

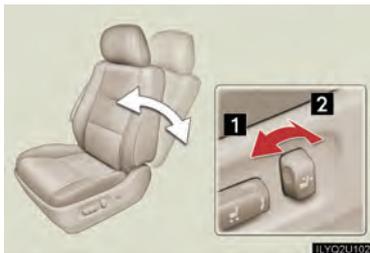

- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion (For driver's seat only)



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer

## Second Seats

### ■ Adjusting the seatback angle




Pull the lock release lever.

### ■ Tumbling the seats



1 Stow the seat belt buckles and lower the head restraints.

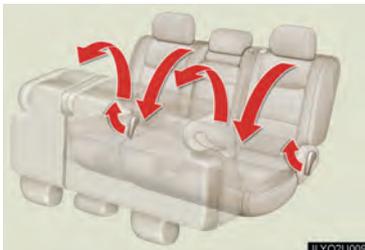

2 Fold down the seatbacks while pulling the lock release levers and swing the seat up and forward until it locks in place.



3 To return the seat to the original position, push the red knobs.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Third Seats\*

### ■ Adjusting the seatback angle



Pull down the lock release lever.

### ■ Folding up the seats



- 1 Stow the seat belt buckles.  
Center seat belt buckle: Stow the tabs in the cover set in the roof.



- 2 Lower the head restraint.  
Center head restraint: Remove and stow in the seatback.



- 3 Fold down the seatbacks, then unlock the seat legs by pulling the release handles.

\*: If equipped




- 4 Lift the seat sideward and retract the seat legs, then attach the holding straps to the assist grips to secure the seat.

When returning the seats, reverse the steps listed.

### ■ Removing the seats

- 1 Follow the procedure for "Folding up the seats" up to 3.

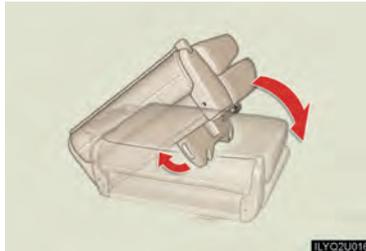

- 2 Retract the seat legs, then place the seats on the floor.

- 3 Remove the seat lock covers and push the red seat lock release knobs outward to remove the seats.

When returning the seats, reverse the steps listed.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Driving Position Memory System\*

The seats can be returned to a previously set position by simply pressing a button. The position of the steering wheel and the outside rear view mirrors is adjusted along with the driver's seat. Positions can be conveniently stored for the vehicle's primary drivers. Set/Recall is possible when the engine switch is "ON" and the shift lever is in the "P" position.

### Setting memory positions



While pushing the "SET" button, press the desired memory button ("1" or "2") until you hear a beep.

The current position of the seat, the outside rear view mirror and the steering wheel are stored.

### Recalling memory positions



Press the desired memory button ("1" or "2").

\*: If equipped

## Head Restraints

### ■ Vertical adjustment



- 1** To raise: push upward.
- 2** To lower: push down while pressing the lock release button.


### ■ Horizontal adjustment (front seat only)



Move forward and backward.

## Seat Belts

### ■ Adjusting shoulder belt height (front and second outboard seats only)

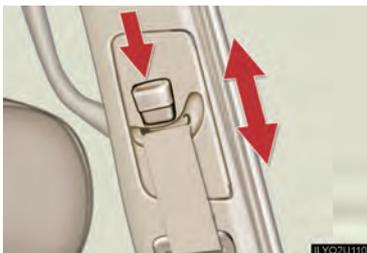

- To raise: pull the anchor upward.
- To lower: depress the button and push the anchor down.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Outside Rear View Mirrors

### ■ Adjusting the mirrors



- 1 To select the mirror you wish to adjust (L or R), use the select switch.
- 2 To adjust mirror angle, use the control switch.

The mirrors will automatically angle downwards when the vehicle is reversing.  
To disable this function, set the select switch to the neutral position (neither L nor R selected).

### ■ Folding the mirrors



To fold the mirrors back, push backward.


## Inside Rear View Mirror

The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn auto mode ON/OFF, press and hold the button for 3 or more seconds.  
The indicator comes on when auto mode is turned ON.

## Steering Wheel

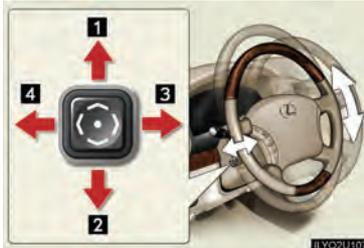

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

The steering wheel retracts automatically when the ignition key is removed to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the key is inserted into the engine switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 2  
**Before Driving**





### Topic 3

## When Driving

Starting .....	21
Automatic Transmission.....	22
Parking Brake.....	23
Turn Signal Lever.....	23
Emergency Flasher Switch .....	23
Cruise Control .....	24
Trip Information Display .....	25
Roll Sensing Of Curtain Shield Airbags Off Switch .....	25
Center Differential Lock Switch.....	26
Cigarette Lighter.....	26
Power Outlets .....	27
Four-Wheel Drive Control Lever .....	27
Damping Mode Select Switch.....	28
Rear Height Control Switch .....	28
“DAC” Switch.....	29



## Starting

### Starting the engine



Make sure the parking brake is engaged and the shift lever is in "P".

- 1 Depress the brake pedal.
- 2 Turn the engine switch to the "START" position.

### Stopping the engine

- 1 Engage the parking brake and shift the shift lever to "P".
- 2 Turn the engine switch to the "LOCK" position.

### Engine (ignition) switch




- 1 "LOCK"
- 2 "ACC"  
Some electrical components such as the audio system can be used.
- 3 "ON"
- 4 "START"

Once you turn the engine switch to the "START" position and release it, the cranking hold function continues to crank the engine until it starts.

## Automatic Transmission

### ■ Shift positions

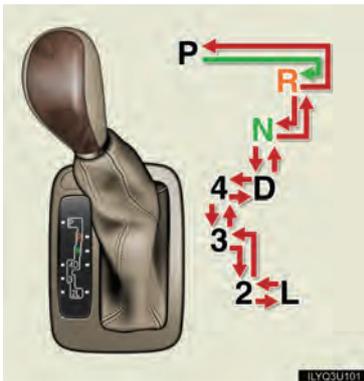

- P Park
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- 4 Position for engine braking
- 3, 2 Position for more powerful engine braking
- L Position for maximum engine braking

← The vehicle can only be shifted out of “P” when the engine switch is in the “ON” position and the brake pedal is depressed.

Downshifting increases engine power for uphill driving, or engine braking for downhill driving and stopping.

### ■ Second start mode



Press the switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort


Opening and Closing

What to do if ...

Customizing Your Lexus




## Parking Brake

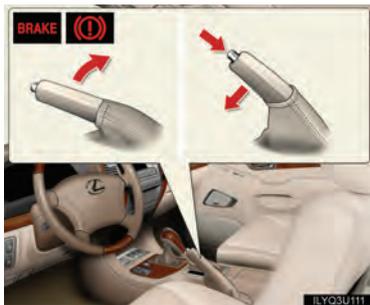

**To set:** pull the parking brake lever firmly upward.

**To release:** press and hold the lock release button and lift the lever slightly before lowering it as far as it will go.

## Turn Signal Lever

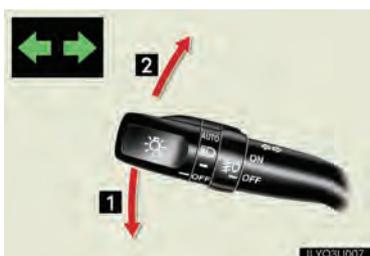

- 1 Left turn signal
- 2 Right turn signal

To signal a lane change, move the lever partway and hold.

## Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash. The emergency flasher switch will work even if the engine is off.

## Cruise Control

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.  
Use for highway driving or when traveling at a constant speed for long periods of time.



### ■ Setting the speed



- 1 Press the ON-OFF button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the cruise control at that speed.

### ■ Adjusting the set speed



- To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

### ■ Canceling



- 1 To temporarily cancel the cruise control, pull the lever.
- 2 To turn the system off, press the ON-OFF button.

Depressing the brake pedal cancels the preset speed. To return to the preset speed, push the lever up.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Trip Information Display

The following information concerning your vehicle is displayed.

### ■ Display information



- Outside temperature (shown)
- Average fuel consumption
- Current fuel consumption
- Driving range
- Average vehicle speed
- Barometer
- Altimeter
- Elapsed time

### ■ Changing the trip information display



The display changes sequentially each time the "MODE" button is pressed.

## Roll Sensing Of Curtain Shield Airbags Off Switch

This switch should only be used in situations where airbag inflation is not desired (such as extreme off-road driving).



Push the "RSCA OFF" switch for a few seconds with the engine switch in the "ON" position.

The "RSCA OFF" indicator light will come on, and the curtain shield airbags and seat belt pretensioners will not activate in the event of a vehicle rollover.

Push the switch again to turn roll sensing back on.


## Center Differential Lock Switch

Use the center differential lock function if the vehicle's wheels become stuck, or when driving on a slippery or bumpy surface.



To lock the center differential, push the switch. The center differential lock and "VSC OFF" indicator lights come on. To unlock the center differential, push the switch again.

## Cigarette Lighter

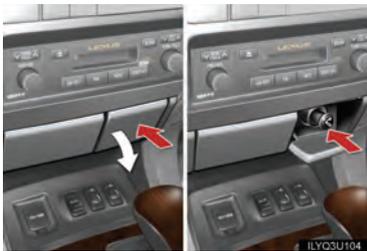

To use, push in the cigarette lighter. When it has heated sufficiently, it will automatically pop out ready for use.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Power Outlets

### ■ 12V DC



Designed for use with car accessories. The engine switch must be in the "ACC" or "ON" position for this power outlet to be used.

### ■ 115V AC



Designed for use with electrical appliances. The engine switch must be in the "ON" position to use this power outlet.

To use the power outlet, push the "AC 115V" switch on the instrument panel.

Do not use the power outlet longer than necessary when the engine is not running.

## Four-Wheel Drive Control Lever



### 1 "L" (low speed position)

Use this position for maximum power and traction.

### 2 "N" (neutral position)

No power is delivered to the wheels. The vehicle must be stopped.

### 3 "H" (high speed position)

Use this position for normal driving on all types of roads.

To shift between "H" and "L", stop the vehicle, put the shift lever in "N" and move the four-wheel drive control lever.

## Damping Mode Select Switch

Adjusts the damping effect on the shock absorbers.



- 1 For driving on bumpy roads
- 2 For ordinary driving (city traffic etc.)
- 3 For moderate high speed driving
- 4 For high speed driving and sporty driving such as on winding mountain roads.

## Rear Height Control Switch

Switches between high, normal and low rear height air suspension control modes.



- 1 Steps up one mode.
  - 2 Steps down one mode.
- "H" (high) mode: For driving on bumpy roads or through water.  
 "N" (normal) mode: For ordinary driving.  
 "L" (low) mode: Allows easy access to the vehicle.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## "DAC" Switch

The Downhill Assist Control system helps to control vehicle speed when driving down steep slopes.



- Shift the four-wheel drive control lever to the "L" position.
- Push the "DAC" switch to turn the system on.
- If traveling at 15 mph (25 km/h) or less, release the accelerator or brake pedal to activate the system.

To make full use of the engine brake, putting the transmission in "L" or "2" is recommended.

Push the "DAC" switch again to turn the system off.



**Topic 4**

## **Rain and Night Driving**

Headlights.....	31
Fog Lights.....	31
Windshield Wipers and Washers .....	32
Rear Window Wiper and Washer.....	32
Rear Window and Outside Rear View	
Mirror Defoggers.....	33
Instrument Panel Light Control .....	33



## Headlights




- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

## Fog Lights

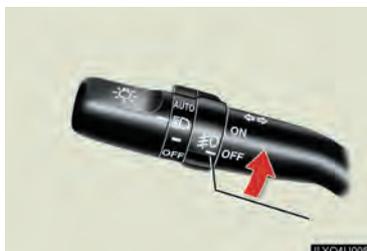

The fog lights can be used only when the headlights (low beam) are on.

## Windshield Wipers and Washers



**AUTO:** automatic operation\*

**LO:** low speed

**HI:** high speed

\*: Sensitivity can be adjusted by turning the band.

To spray washer fluid, pull the lever.

The wipers will operate automatically.



**INT:** intermittent operation\*

**LO:** low speed

**HI:** high speed

\*: Wiper speed can be adjusted by turning the band.

## Rear Window Wiper and Washer



**1** Low speed (intermittent) operation

**2** High speed operation

**3** Washer operation

**4** Washer/wiper dual operation

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus



## Rear Window and Outside Rear View Mirror Defoggers

### Rear window defogger switch

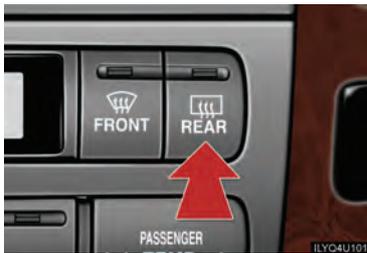

To defog the rear window, push the switch.

Push the switch again to turn the rear window defogger off.

### Outside rear view mirror defogger switch



To defog the outside rear view mirrors, push the switch.


Push the switch again to turn the outside rear view mirror defoggers off.

## Instrument Panel Light Control



- 1 Brighter
- 2 Darker

With the dial fully turned to brighter, the instrument panel lights will not be reduced when the headlight switch is on.

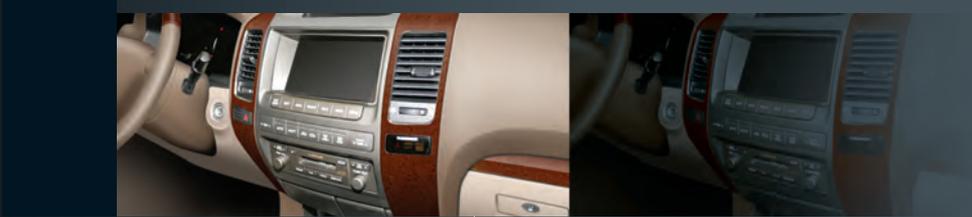

## Topic 5


# Driving Comfort

Air Conditioning System.....	35
Audio System.....	37
Rear Seat Entertainment System.....	39
Ashtrays.....	40
Seat Heaters.....	40
Console Box.....	41
Glove Box.....	41
Cup Holders.....	42
Personal Lights.....	43
Compass.....	43
Garage Door Opener.....	43
Lexus Link System.....	46



## Air Conditioning System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

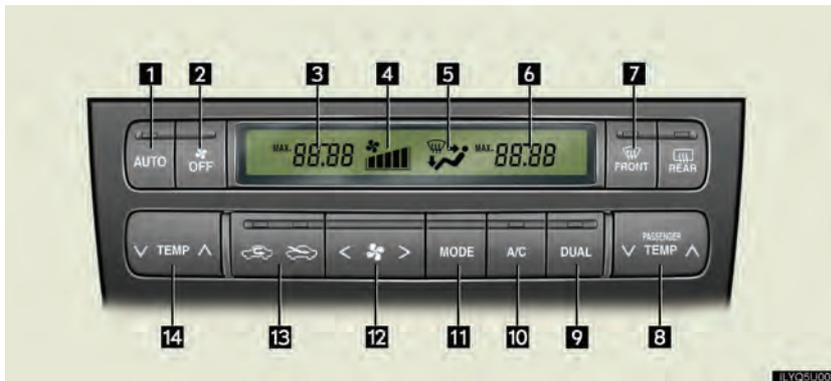

- |                                             |                                             |
|---------------------------------------------|---------------------------------------------|
| <b>1</b> Automatic mode                     | <b>8</b> Passenger side temperature setting |
| <b>2</b> Off                                | <b>9</b> Switch to "DUAL" mode              |
| <b>3</b> Driver side temperature display    | <b>10</b> Air conditioning on/off           |
| <b>4</b> Fan speed display                  | <b>11</b> Air flow control                  |
| <b>5</b> Air flow display                   | <b>12</b> Fan speed control                 |
| <b>6</b> Passenger side temperature display | <b>13</b> Air intake controls               |
| <b>7</b> Windshield defogger                | <b>14</b> Driver side temperature setting   |

### ■ Using the automatic mode



- 1 Press .
- 2 Adjust the temperature using .

### ■ Adjusting the temperature in "DUAL" mode



In "DUAL" mode, driver and passenger side temperature settings can be adjusted separately.

- 1 Press .
- 2 Adjust the passenger side temperature using .

### ■ Rear cooler system



- 1 Fan speed control  
"AUTO" mode: can only be set if the front air conditioning fan speed is set to "AUTO".
- 2 Rear cooler on/off
- 3 Temperature setting

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus



## Audio System (without navigation system)

Owners of models equipped with a navigation system should refer to the "Navigation System Owner's Manual".

### Basic operation



- 1 Power ON/OFF button, Volume adjustment knob
- 2 Disc eject button
- 3 Disc slot
- 4 Loading disc
- 5 DISC·AUX mode button
- 6 FM radio mode button
- 7 AM·SAT radio mode button

### ■ Listening to the radio



- 1 Press **AM·SAT** or **FM** to choose an AM or FM band.
- 2 Tune to your desired station.  
For tuning adjustment and further information, refer to the Owner's Manual.

### ■ Using the CD player



There are two methods available for playing a CD.

- Press **LOAD** and insert a disc into the disc slot.
- Press **DISC·AUX** with the disc inserted.

Your CD player can store up to 6 discs.  
For further information, refer to the Owner's Manual.

### ■ Using the AUX adapter



- 1 Connect the portable audio device.
- 2 Press **DISC·AUX**.

### ■ Remote control (steering switches)



**"MODE"**: Turns the audio system on/off, or changes the audio mode.

**"+" or "-"**: Adjusts the volume.

**"^" or "v"**:

Radio mode – seek tuning or selecting a pre-set station

CD mode – select a desired track or CD.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...


Customizing Your Lexus



## Rear Seat Entertainment System\*

The rear seat entertainment system is designed to allow rear passengers to enjoy audio and DVD video separate from the front audio system.


### Display

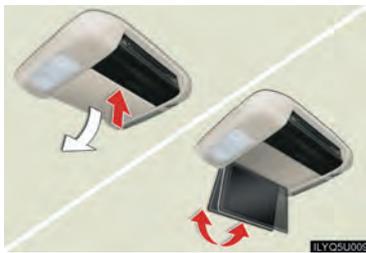

Press the display.


The angle can be adjusted between 90° and 125°.

### DVD player

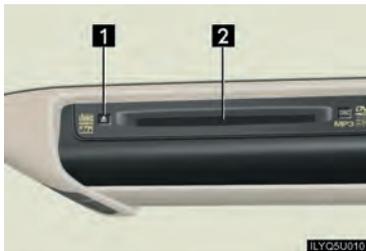

- 1 Eject
- 2 Disc slot

### Remote control

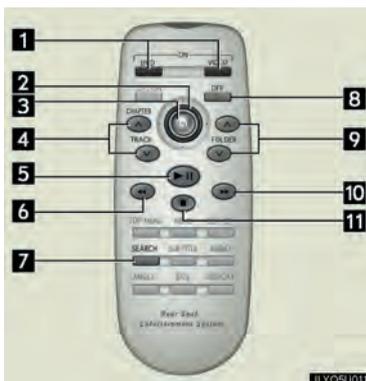

- 1 Mode select (power on)
- 2 Cursor position
- 3 Enter
- 4 Track/chapter select
- 5 Play/pause
- 6 Rewind
- 7 Title/disc menu number search
- 8 Power off
- 9 Folder select
- 10 Fast forward
- 11 Stop

\*: If equipped

## Ashtrays

### ► Front



Push the lid to open.  
Hold the plate down and pull the ashtray upwards to remove.

### ► Rear



Raise the lid to open.  
Pull the ashtray upwards to remove.

## Seat Heaters



Turn the dial toward **1**.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus



## Console Box

### ► Console box

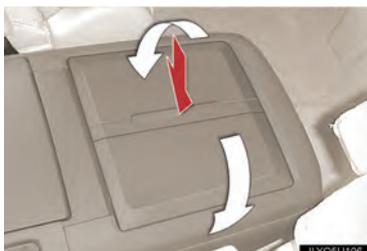


To open, push the center of the lid.

### ► Overhead console



To open, press the button.

## Glove Box

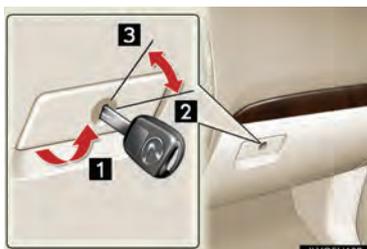

- 1 Open
- 2 Lock
- 3 Unlock

The glove box can be locked and unlocked using the master key.

## Cup Holders

► In front of the console box



To open, press the lid.

► In the console box



To use, open the console box and pull down the cup holder.

► Second seat armrest



To open, press in and release the rear cup holder on the armrest.

► Beside the third seat



Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus




## Personal Lights



- 1 ON
- 2 OFF
- 3 The light comes on if a door is opened.

## Compass

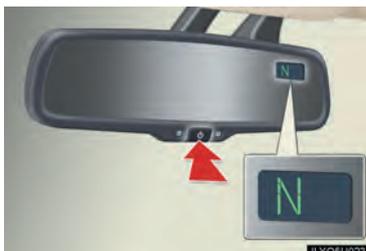

To display the compass, press the button.

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

## ■ Programming HomeLink®



- 1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.

- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and release the vehicle's programmed HomeLink® button twice. The garage door may open.

If the door does not open, press and release the same button once again.

## ■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all devices, follow the same procedure as for garage door programming.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 5  
Driving Comfort



■ Operating HomeLink®



Press the appropriate HomeLink® button. The indicator light should come on.



## Lexus Link System\*

The Lexus Link System is a communication service that uses the GPS (Global Positioning System) data and cellular service to provide you with safety, security and convenience. Button operation and voice commands are used to operate the system. To operate the system, follow the voice guidance instructions.

### Buttons



- 1** Voice keypad button  
Sends number tones to an automated phone system for example to access voicemail, during a phone call
- 2** Volume control  
Adjusts your Lexus Link System audio volume
- 3** Phone button
  - Makes or answers a phone call using the hands-free personal calling service
  - Ends a call
- 4** "SERVICES" button
  - Contacts the Lexus Link Call Center for information, directions or other services
  - Records a conversation for later playback
- 5** Emergency button  
Makes a priority call to the Lexus Link Call Center

### Services

The Lexus Link System offers the following services. For details about the services and subscription, refer to the Owner's Manual or call the Lexus Link Call Center at 1-800-25-LEXUS (1-800-255-3987) (toll-free).

- Airbag deployment notification  
If an airbag deploys, an emergency call is automatically placed to the Lexus Link Call Center with your vehicle's location. You do not need to press any buttons.
- Emergency assistance  
When you press the Emergency button, a priority call is placed to the Lexus Link Call Center with your vehicle's location. At the Call Center, the Lexus Link Advisor can determine your vehicle's location, communicate with you, and, if appropriate, contact the nearest emergency service provider.

\*: If equipped

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

Topic 5  
**Driving Comfort**



- **Stolen vehicle location assistance**  
If your vehicle is stolen, call the Lexus Link Call Center and then select the option for Lexus Link.
- **Remote horn/lights and remote door lock/unlock**  
The remote operations are performed by contacting the Lexus Link Call Center from the outside of the vehicle. When necessary, call the Lexus Link Call Center and then select the option for Lexus Link.
- **Advisor record**  
You can record a conversation with the Lexus Link Advisor.
- **Personal calling**  
A hands-free personal calling feature can be added to the Lexus Link System as an option.
- **Other services**  
Press the "SERVICES" button in the vehicle or call the Lexus Link Call Center and then select the option for Lexus Link. The services provided will depend on the service plan level.

The system is only operational in GPS (Global Positioning System) and cellular coverage areas.



Topic 6

## Opening and Closing

Door Locks .....	49
Back Door .....	50
Power Windows .....	50
Moon Roof.....	50
Fuel Tank Cap.....	51
Hood .....	52



## Door Locks

### ■ Locking the vehicle from inside

#### ▶ Inside lock button



- 1 Lock
- 2 Unlock

#### ▶ Door lock switch



Locks/unlocks all doors.

- 1 Lock
- 2 Unlock

### ■ Locking the vehicle from outside

#### ▶ Using the wireless remote control (→P.7)

### ■ Rear door child-protector lock




Setting the switch to the lock position prevents the rear doors from being opened from the inside.

## Back Door



Pull the handle to open the back door.

## Power Windows

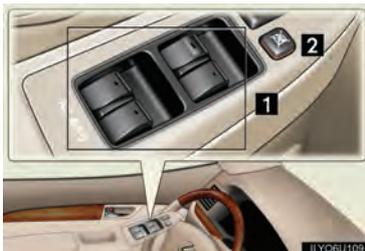

### 1 Power window switches

To open: press the switch.

To close: pull the switch up.


To fully raise or lower a window automatically, pull the switch all the way up or push it all the way down.

### 2 Window lock switch

The window lock switch disables all windows other than the driver's door window.

## Moon Roof

### Opening and closing

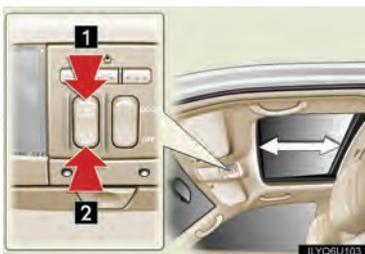

### 1 Open

Push the switch for approximately 1 second.

### 2 Close

Push the switch for approximately 1 second.

To stop operation partway, push either side of the switch.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing


What to do if ...

Customizing Your Lexus

Topic 6  
Opening and Closing



■ Tilt up and down

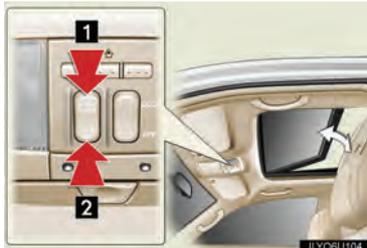

- 1 Tilt down  
Push the switch for approximately 1 second.
- 2 Tilt up  
Push the switch for approximately 1 second.

To stop operation partway, push either side of the switch.

Fuel Tank Cap



- 1 Pull the lever to open the fuel filler door.



- 2 To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it.

## Hood



1 Pull the hood lock release lever.



2 Insert your fingers under the hood, push up the auxiliary catch lever and lift the hood.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## What to do if ...

### List of Warning/Indicator Lights



**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**

**BRAKE**

(U.S.A.)

Brake system warning light



(Canada)

**Stop the vehicle immediately.**



Charging system warning light



Low engine oil pressure warning light

**Have the vehicle inspected immediately.**



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



VSC/TRAC warning light



Automatic transmission fluid temperature warning light



Unengaged "Park" warning light



Kinetic dynamic suspension system warning light (if equipped)

For further information, refer to the Owner's Manual.

**Have the malfunction repaired immediately.**



Open door warning light



Tire pressure warning light



Low fuel level warning light



Low washer fluid warning light



Driver's seat belt reminder light



Engine oil replacement reminder light (U.S.A.)



Front passenger's seat belt reminder light

(On the center panel)

**See the Owner's Manual**



Turn signal indicator



"RSCA OFF" indicator



Headlight high beam indicator



Cruise control indicator



Headlight indicator (U.S.A.)



Downhill assist control system indicator



Tail light indicator (Canada)



"VSC OFF" indicator



Security indicator



Center differential lock indicator



Automatic transmission second start indicator



Slip indicator



Shift position indicators



"AIR BAG ON" indicator



Height control indicator



"AIR BAG OFF" indicator

For further information, refer to the Owner's Manual.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## What to do if ...

### Spare Tire and Tools

#### Jack, tools and spare tire



- 1 Jack
- 2 Spare tire
- 3 Tools

#### Taking out the spare tire



1 Remove the spare tire carrier lid.

2 Assemble the jack handle extension and insert it into the lowering socket.



3 Lower the spare tire completely to the ground.



4 Pull out the spare tire and remove the holding bracket.

### If the engine switch does not turn easily



Turn the engine switch while moving the steering wheel slightly left and right.

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...

Customizing Your Lexus

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Wireless remote control	Wireless remote control	ON	OFF
	Unlocking operation	Driver's door locked in one step, all doors locked in two steps	All doors locked in one step.
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked	30 seconds	60 seconds
	Operation indicator (Emergency flashers)	ON	OFF
	Operation indicator (Buzzer)	ON	OFF
	Panic function	ON	OFF
Door lock	Unlocking using a key	Driver's door locked in one step, all doors locked in two steps	All doors locked in one step.
	Speed-detecting automatic door lock function	OFF	ON
	Opening driver's door unlocks all doors	OFF	ON
	Shift the shift lever to P unlocks all doors.	ON	OFF
	Shift the shift lever to position other than P locks all doors.	ON	OFF

Item	Function	Default setting	Customized setting
Power windows	Linked door lock operation	ON	OFF
	Linked door key operation	Open and close	Open only Close only
	Wireless remote control linked operation	ON	OFF
Moon roof	Linked door lock operation	ON	OFF
	Linked door key operation	Open and close	Open only Close only
	Linked operation of components when door key is used	Slide only	Tilt only
	Wireless remote control linked operation	ON	OFF
	Linked operation of components when wireless remote control used	Slide only	Tilt only
Automatic light control system	Light sensor sensitivity	Level 3	Levels 1 to 5
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	0 seconds
			60 seconds
			90 seconds
Day time running light	ON	OFF*	
Illumination	Time elapsed before lights turn off	15 seconds	7.5 seconds 30 seconds
	Operation when the doors are unlocked	ON	OFF
	Operation after the engine switch is turned to the "ACC" position	ON	OFF

\*: Vehicles sold outside Canada

Entering and Exiting

Before Driving

When Driving

Rain and Night Driving

Driving Comfort

Opening and Closing

What to do if ...





A large rectangular area with a thick grey border. Inside the border, there are 25 horizontal lines, creating a space for writing or drawing. The lines are evenly spaced and extend across the width of the inner rectangle.





#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:  
Lexus Roadside Assistance  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)
- In Hawaii:  
Servco Automotive Roadside Assistance/Customer Services  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:  
Lexus Roadside Assistance/Customer Service  
**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2008 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.