

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.


Active TRAC/VSC Off Mode .....	33
Air Conditioning System (Front Air Conditioning System)	
Basic operation .....	41
Using the automatic mode .....	41
Adjusting the temperature in individual mode .....	42
Air Conditioning System (Rear Air Conditioning System)	
Basic operation .....	42
Front controller (touch screen) .....	42
Ashtrays .....	60
Audio System	
Basic operation .....	43
Listening to the radio .....	44
Playing the CD/DVD player .....	44
Using the AUX port .....	45
Remote control (steering switches) .....	45
Automatic Transmission .....	23
Auxiliary Boxes .....	62
AVS (Adaptive Variable Suspension) .....	32
Back Door .....	75
Cigarette Lighter .....	60
Climate Control Seats/Seat heaters .....	61
Console Box .....	62
Cool box .....	63
Crawl Control .....	28
Cruise Control .....	29
Cup Holders .....	64
Door Locks .....	72
Driving Position Memory System .....	18
Dynamic Radar Cruise Control .....	30
Emergency Flasher Switch .....	26
Engine (Ignition) Switch .....	22
Fog Lights .....	35
Four-wheel Drive System .....	27
Front Seats .....	11
Fuel Tank Cap .....	74
Garage Door Opener .....	66
Glove Box .....	64


Hands-free System (For Cellular Phone) .....	54
Headlight Cleaner .....	37
Headlights .....	34
Head Restraints.....	19
Heated Steering Wheel .....	62
Hood.....	74
Inside Rear View Mirror .....	21
Instrument Panel Light Control.....	38
Interior Lights.....	65
Intuitive Parking Assist .....	27
Keys.....	8
Lexus Enform with Safety Connect .....	70
Mode Select Switch .....	26
Moon Roof.....	73
Multi-Information Display.....	24
Navigation System.....	48
Outside Rear View Mirrors .....	20
Overview .....	3
Parking Brake.....	24
Power Outlet.....	65
Power Windows .....	73
Rear Window and Outside Rear View Mirror Defoggers .....	38
Rear Seat Entertainment System.....	46
Rear Seats .....	12
Roll Sensing of Curtain Shield Airbags Off Switch .....	33
Safety Connect .....	68
Seat Belts.....	19
Smart Access System with Push-button Start.....	9
Steering Wheel.....	21
Theft Deterrent System .....	10
Tire Pressure Warning Reset Switch.....	33
Touch Screen.....	39
Turn Signal Lever .....	25
Wide View Front & Side Monitor .....	28
Windshield Wipers and Washers .....	36
4-Wheel AHC (Active Height Control Suspension) .....	32

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

## Overview

## Instrument Panel

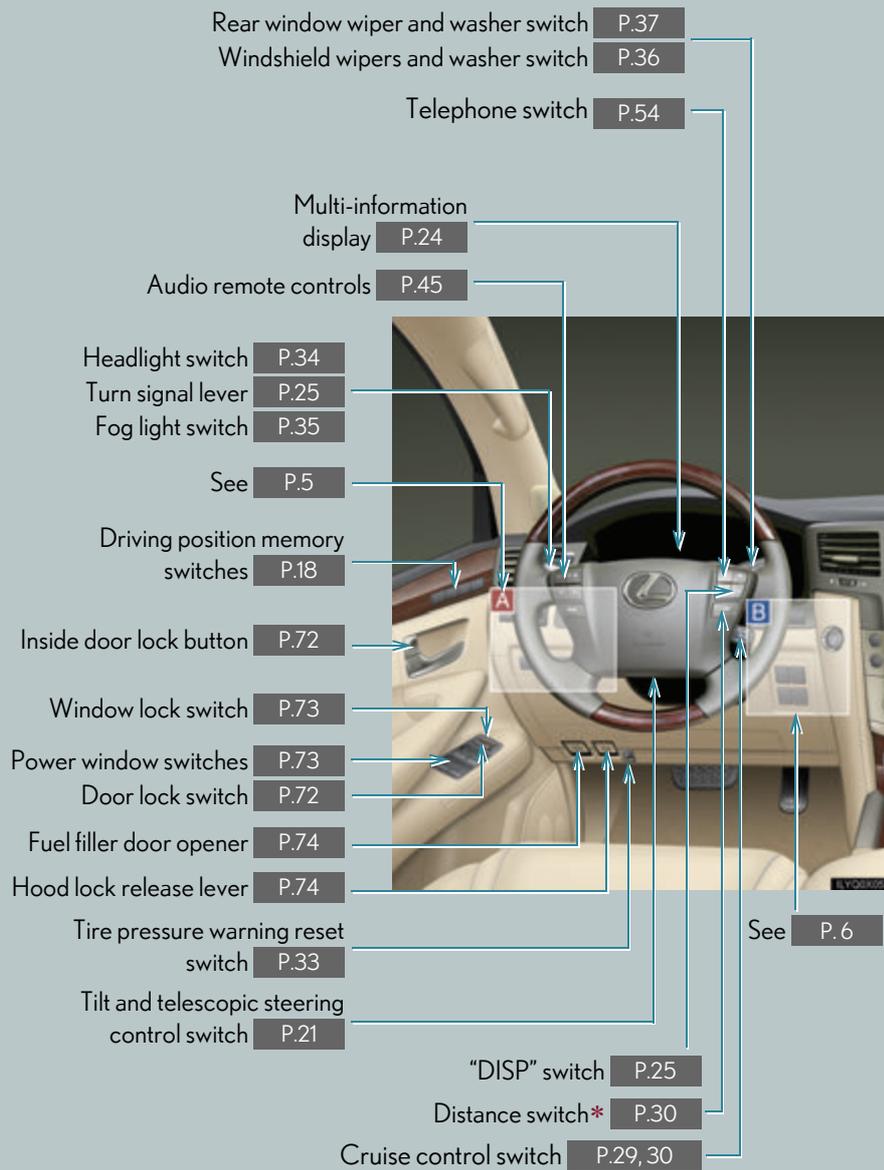

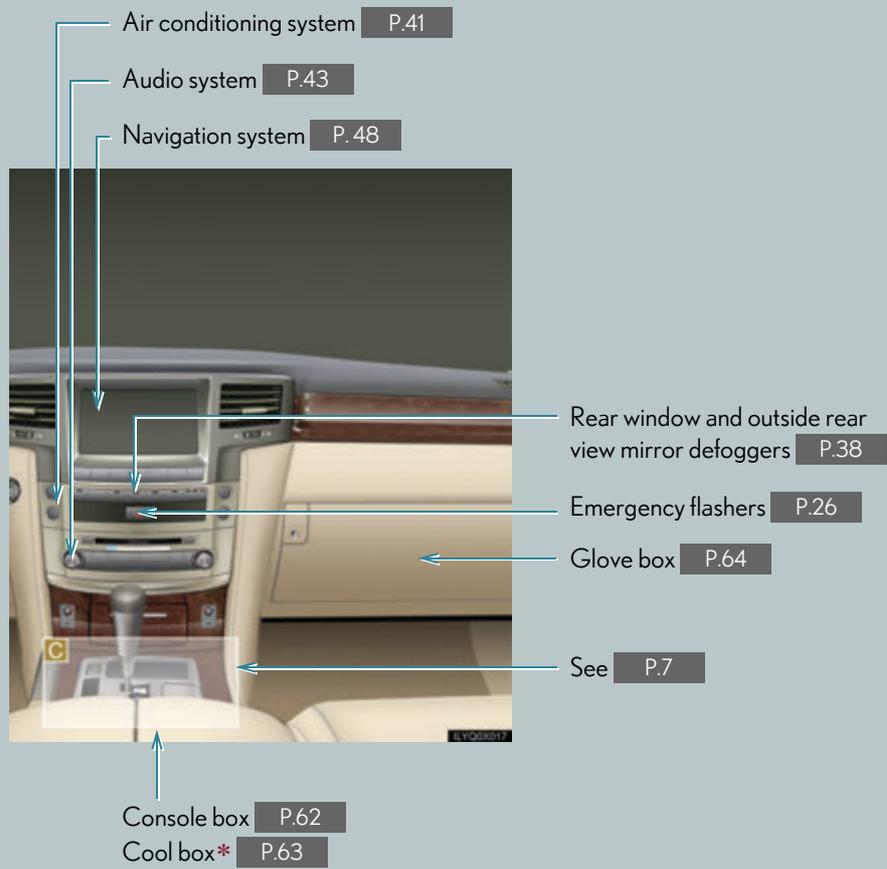


\* : If equipped


## Overview

## Instrument Panel

A

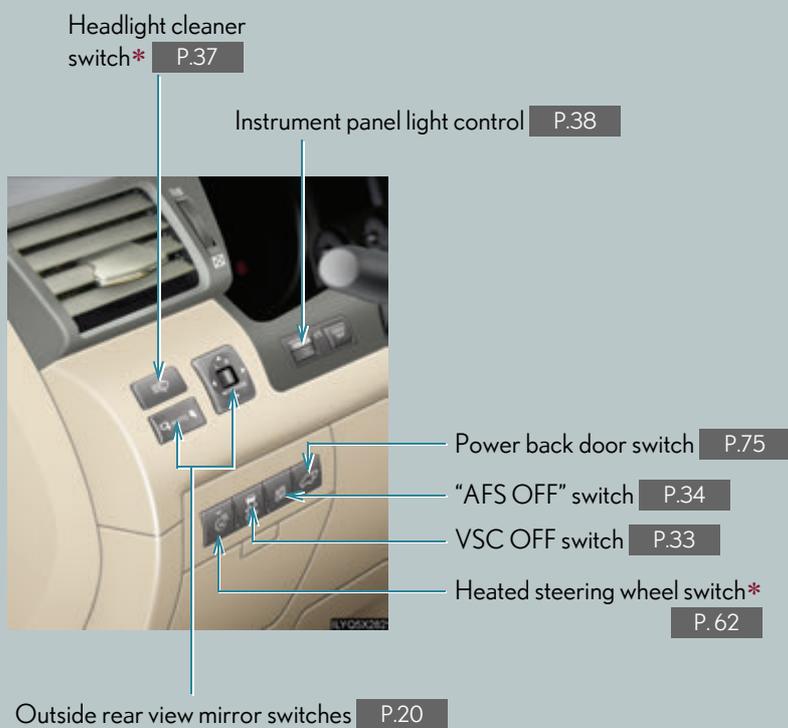

B

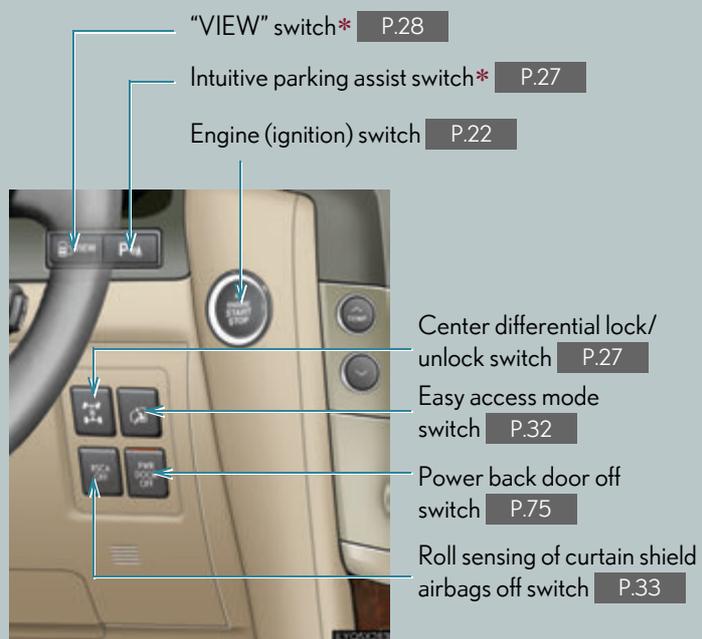


\* : If equipped

## Overview


## Instrument Panel

C

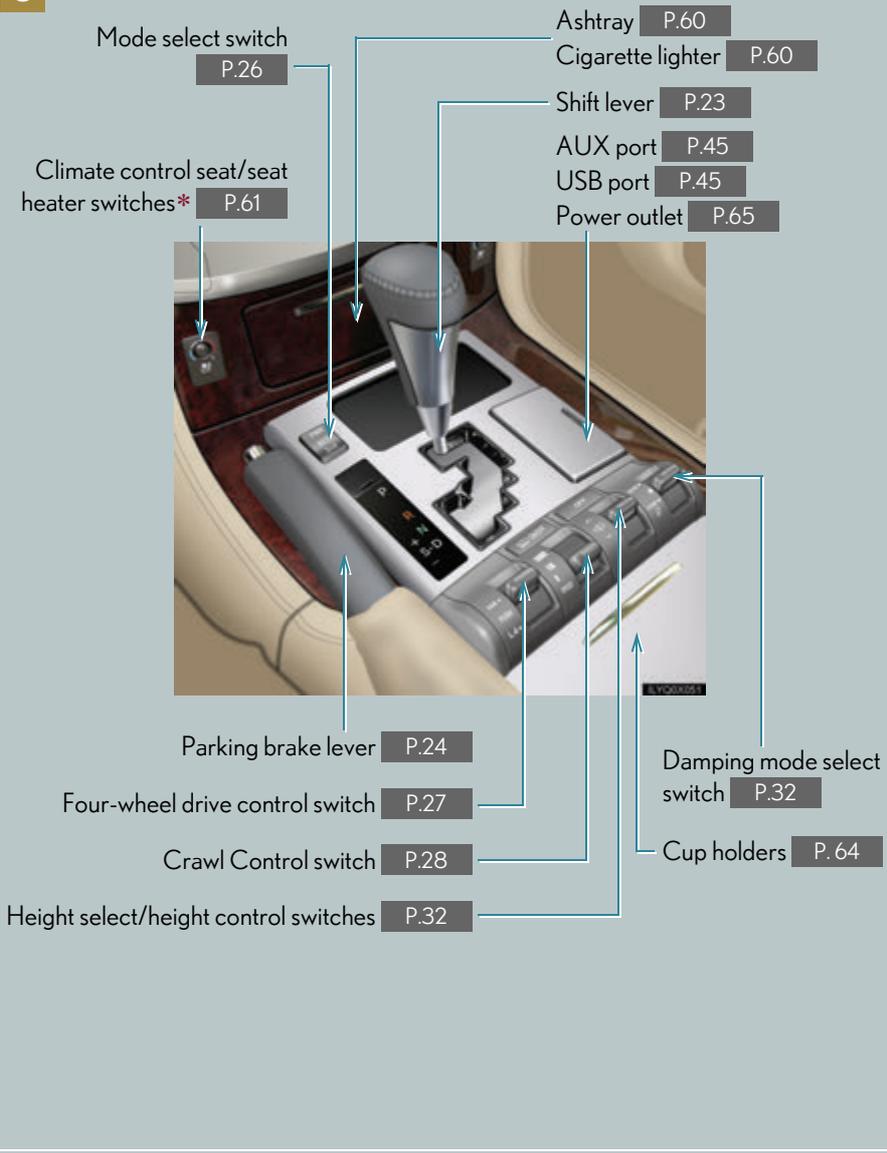

## Keys

### ■ Electronic key

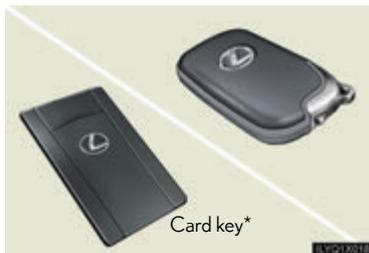

Smart access system with push-button start  
(→P. 9, 22)

\*: If equipped

### ■ Mechanical key



- Locks and unlocks the doors
- Locks and unlocks the glove box

The mechanical key is stored inside the electronic key. To extract the key, release the latch and pull or if equipped with a card key, press the button and pull.

### ■ Wireless remote control



- 1 Press:** locks all doors
- 2 Press once:** unlocks the driver's door  
**Press twice:** unlocks all doors
- 3 Press and hold:** opens and closes the back door
- 4 Press and hold:** sounds the alarm  
(Use the alarm to attract attention to the vehicle in order to help deter breaks-ins. To stop the alarm, press any button on the wireless remote control.)

## Smart Access System with Push-button Start

The smart access system with push-button start allows you to enter and exit the vehicle or start the engine by simply carrying the electronic key in your pocket or bag. For details on starting the engine, see page 22.

### Entering the vehicle



To unlock the vehicle, simply grasp the door handle.

### Exiting the vehicle



To lock the vehicle, press the button on the door handle.

To close the windows and moon roof, press and hold the button.

### Locking and unlocking the back door



- 1 Lock
- 2 Unlock

For details on what to do when the electronic key does not operate properly, see page 81.

## Theft Deterrent System

The theft deterrent system includes the following features to help protect your vehicle from theft.

### ■ Immobilizer system



The immobilizer system prevents the engine from being started in the event that an attempt is made to start the vehicle using an unregistered key. The security indicator light flashes to indicate that the system is set.

### ■ Alarm

The system sounds the alarm and flashes light when an attempt to steal the vehicle is detected.

**To set the alarm:** close the side doors, back door and hood, and lock all doors. The indicator light comes on to indicate that the alarm is in its preparation state. When the indicator light begins to flash, the system is armed.

**To deactivate or stop the alarm:** start the engine, or unlock the doors using the entry function or the wireless remote control.

### ■ Steering lock




The steering lock is engaged when the driver's door is opened with the "ENGINE START STOP" switch OFF.

When the steering lock cannot be released, the green indicator light on the "ENGINE START STOP" switch will flash and a message will be shown on the multi-information display. To release it, press the "ENGINE START STOP" switch while gently turning the wheel left or right.

## Front Seats

### ■ Adjusting the seat position

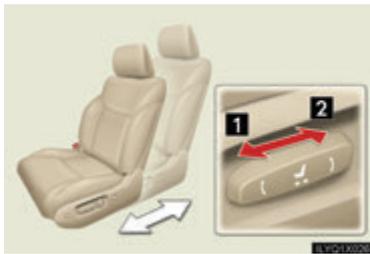

- 1 Moves the seat forward
- 2 Moves the seat backward

### ■ Adjusting the seatback angle



- 1 Tilts the seatback forward
- 2 Reclines the seatback

### ■ Adjusting the seat cushion



- 1 Raises and lowers the front of the cushion
- 2 Raises and lowers the entire seat

### ■ Adjusting the lumbar support



- 1 Firmer
- 2 Softer

### ■ Adjusting the seat cushion length (driver's seat only)

---



- 1 Lengthens the seat cushion
- 2 Shortens the seat cushion

## Rear Seats

### ■ Adjusting the second seat position

---



- 1 Move the seat forward
- 2 Move the seat backward

### ■ Adjusting the second seat back angle

---



Pull the lever and tilt the seatback forward or backward.

## ■ Tumbling the second seats



Before tumbling the second seats, stow the seat belt buckles and lower the head restrains to the lowest position.

The outer seat belts should be secured with the seat belt hangers.



- 1 Fold down the seatback while pulling the seatback angle adjustment lever, and swing the whole seat up and forward.



- 2 Hook the holding strap to the assist grip and secure the seat by pulling its free end.

When returning the second seat to its original position, stow the holding strap.



- 3 Remove the seat anchor covers from the back of the seat cushion, and install them on the seat anchors.

When returning the second seat to its original position, remove the seat hook covers from the floor and install them in the back of the seat cushion.


## ■ Folding the third seats

Before folding the third seats, make sure the following items are in their stowed positions.

- **Seat belt buckles:** stowed in the seat cushion
- **Outer seat belts:** secured with the seat belt hangers
- **Center seat belt:** stowed in the cover set in the roof
- **Center head restraint:** stowed in the seat back

For the way of stowing, see the Owner's Manual.


### ▶ Vehicles with manual switches

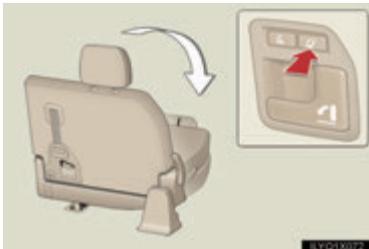

Press the third seat table mode switch.

The switch for the left side third seat is found on the opposite side.

### ▶ Vehicles with automatic switches

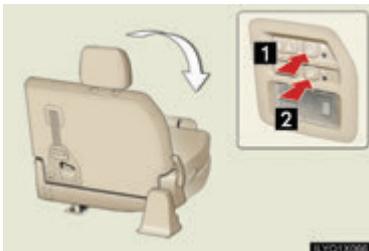

Press the third seat table mode switch.

1 "R": Right side third seat

2 "L": Left side third seat


## ■ Tumbling the third seats

Before tumbling the third seats, make sure the following items are in their stowed positions.

- **Seat belt buckles:** stowed in the seat cushion
- **Outer seat belts:** secured with the seat belt hangers
- **Center seat belt:** stowed in the cover set in the roof
- **Center head restraint:** stowed in the seat back

For the way of stowing, see the Owner's Manual.

### ▶ Vehicles with manual switches

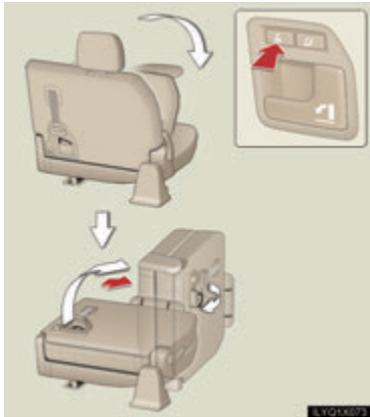


1 Press the third seat tumbling switch.

The switch for the left side third seat is found on the opposite side.

After the seat is tumbled, push the back of the seat cushion to lock it.

► Vehicles with automatic switches

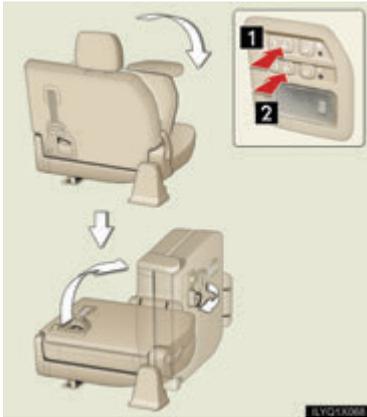

1 Press and hold the third seat tumbling switch.

1 Right side third seat

2 Left side third seat



2 Remove the seat hook covers from the back of the seat cushion, and install them on the seat hooks.

## ■ Returning the third seats

Before returning the third seats, remove the seat hook covers from the floor and install them into the back of the seat cushion.

### ▶ Vehicles with manual switches



- 1 Pull the third seat lock release lever and lower the seat, then lock the seat leg lock to the floor.


The lever for the left side third seat is found on the opposite side.

### ▶ Vehicles with automatic switches



- 1 Press and hold the third seat return switch.

- 1 Right side third seat
- 2 Left side third seat

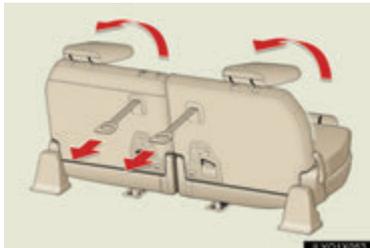

- 2 Pull the handles located on the rear of the seatbacks and raise the head restraints.

## Driving Position Memory System

Your preferred driving position (the position of the driver's seat and steering wheel, and angle of the outside rear view mirrors) can be memorized and recalled with the touch of a button.

### ■ Setting memory positions



Press the "SET" button, then within 3 seconds press one of the memory buttons ("1", "2", or "3") until you hear a beep.

The current driving position is recorded.

### ■ Recalling memory positions



Press one of the memory buttons ("1", "2", or "3").

### ■ Linking driving position memory with door unlock operation



While holding the desired memory button, press and hold  button on the wireless remote control until you hear a beep.

To prevent triggering of the alarm, open one of the doors within 60 seconds after the beep is heard.

Linking driving position memory to the door unlock operation allows the memory position to be recalled automatically when the driver's door is opened. (The linked function does not operate if the driver's door is unlocked using the mechanical key or manually from inside the vehicle.)

## Head Restraints

### ■ Front seats, second outboard seats



- 1 Vertical adjustment**  
To lower the head restraint, push it down while pressing the lock release button.
- 2 Angle adjustment (front seat only)**

### ■ Third outboard seats



Pull the head restraint angle lever to fold the head restraint.

## Seat Belts


### ■ Adjusting shoulder belt height (front seats, second outboard seats only)



**To raise:** pull the anchor upward.  
**To lower:** depress the button and push the anchor down.

## Outside Rear View Mirrors

### ■ Adjusting the mirrors

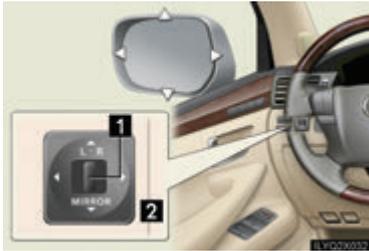

- 1 Selects a mirror to adjust ("L": left or "R": right)
- 2 Adjust the mirror up, down, in, or out using the switch

The mirrors will automatically angle downwards when the vehicle is reversing.

To disable this function, set the select switch in the neutral position (between "L" and "R").

### ■ Folding the mirrors



- 1 Folds the mirrors
- 2 Extends the mirrors

Putting the switch in the neutral position allows the folding or extending of the mirrors to be linked to operations, such as locking/unlocking of the doors.


## Inside Rear View Mirror

The mirror uses a sensor to detect light from vehicles behind and automatically reduces glare.



To turn automatic mode on/off, press the "AUTO" button.  
The indicator comes on when automatic mode is turned on.

## Steering Wheel

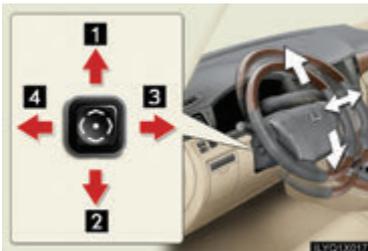

- 1 Up
- 2 Down
- 3 Toward the driver
- 4 Away from the driver

The steering wheel retracts automatically when the "ENGINE START STOP" switch is turned OFF to allow for easy exit and entry. The steering wheel returns automatically to its previously set position when the "ENGINE START STOP" switch is switched to ACCESSORY or IGNITION ON mode.

## Starting

With the electronic key on your person, the engine can be started by simply pressing the “ENGINE START STOP” switch, while depressing the brake pedal.  
(The mechanical key cannot be used to start the engine.)

### Starting the engine



Make sure the parking brake is engaged and the shift lever is in “P”.

- 1 Depress the brake pedal.  
The “ENGINE START STOP” switch indicator light turns green.
- 2 Press the “ENGINE START STOP” switch.

### Stopping the engine

- 1 Engage the parking brake and shift the shift lever to “P”.
- 2 Press the “ENGINE START STOP” switch.


### Changing “ENGINE START STOP” switch modes

To change “ENGINE START STOP” switch modes without turning on the engine, press the “ENGINE START STOP” switch without depressing the brake pedal. The modes can be changed in the following order:



## Automatic Transmission

### Shift positions

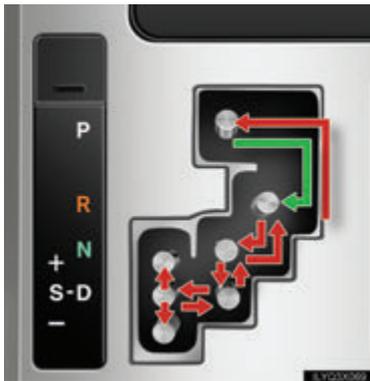

- P Park\*
- R Reverse
- N Neutral (drive not engaged)
- D Drive
- S "S" mode

\*: The engine can only be started in "P".

← The vehicle can only be shifted out of "P" when the "ENGINE START STOP" switch is in IGNITION ON mode and the brake pedal is depressed.

### "S" mode


"S" mode allows the driver to select the shift range manually based on driving conditions.



- 1 Shift the shift lever to "S".
- 2 To upshift: shift the shift lever toward "+".  
To downshift: shift the shift lever toward "-".

The selected shift range is displayed on the instrument cluster.

## Parking Brake

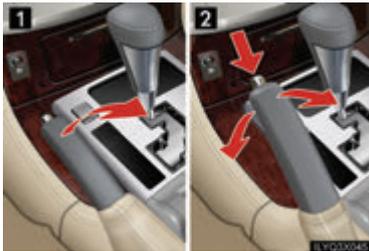

**1 To set the parking brake:** pull the parking brake lever firmly upward.

**2 To release the parking brake:** press and hold the lock release button and lift the lever slightly before lowering it as far as it will go.

## Multi-information Display

The multi-information display shows information about your vehicle, including the items shown below.

### Display information



- Trip information
  - Average vehicle speed
  - Driving distance
  - Driving range
  - Average fuel consumption
  - Current fuel consumption
  - Outside temperature
- Intuitive parking assist display (if equipped)
- Dynamic radar cruise control settings (if equipped)
- 4-Wheel AHC display
- Crawl Control display
- Shift position and shift range
- Warning messages


## ■ Changing the display



Trip information items can be switched by pressing the “DISP” switch.

- When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

## Turn Signal Lever

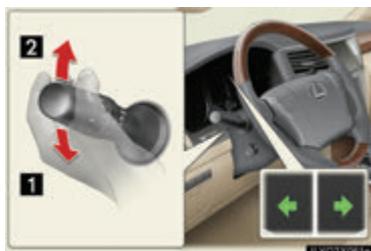

- 1 Left turn signal
- 2 Right turn signal

To signal a lane change, move the lever partway and hold.

## Emergency Flasher Switch



Engaging the emergency flasher switch causes all the turn signal lights to flash.

## Mode Select Switch

Use the mode select switch to select the driving mode that best suits the driving and road conditions.



### 1 Power mode

For more powerful acceleration and uphill driving.

### 2 Normal mode

### 3 "2nd STRT" (second start) mode

For starting or accelerating on snow-covered roads or other slippery surfaces.

An indicator comes on when in power or second start mode.

## Four-wheel Drive System

Use these switches to select following transfer and center differential modes.

### ► Four-wheel drive control switch



To select "L4" mode, push down and shift the switch backward. To select "H4" mode, shift the switch forward.

- 1 "H4": Normal driving
- 2 "L4": Driving requiring maximum power and traction


### ► Center differential lock/unlock switch



Use this switch when your vehicle's wheels get stuck in a ditch or when you are driving on a slippery or bumpy surface.

## Intuitive Parking Assist\*

The system uses a screen display and buzzer to inform the driver of obstacles near the vehicle when parking or driving at low speed.

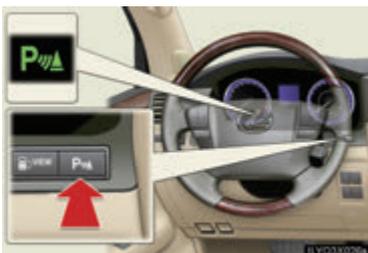

ON/OFF

The indicator light comes on to inform the driver that the system is operational.

For details, see the "Owner's Manual".

\*: If equipped

## Wide View Front & Side Monitor\*

This system can display the wide view front monitor and the side monitor separately or at the same time. This system helps the driver check for front and side of the vehicle.



ON/OFF

The display can be changed by pressing the "VIEW" switch.

For details, see the "Owner's Manual".

## Crawl Control

Crawl Control allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.



To select a speed mode, shift the Crawl Control switch forward or backward.

**1** ON/OFF

**2** Lo (low mode): For traveling on the rocks and pebbles

**3** Med (medium mode): For traveling on snow mounds or descending a slope of rubble

**4** Hi (high mode): For ascending a slope of rubble, or traveling on snow, dirt, mud, sand, gravel, grass etc.

\*: If equipped

## Cruise Control\*

Cruise control allows the driver to maintain a constant speed without having to operate the accelerator pedal.

Use for highway driving or when traveling at a constant speed for long periods of time.



- 1 Indicator
- 2 Cruise control switch

### ■ Setting the vehicle speed



- 1 Press the "ON-OFF" button.  
The system will turn on.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down.  
This sets the speed in the cruise control memory.

### ■ Adjusting the set speed




**To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.

Release the lever when the desired speed is reached.

\*: If equipped


## ■ Canceling and resuming the constant speed control

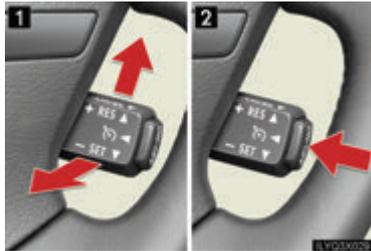

- 1 To temporarily cancel the constant speed control, pull the lever toward you. To resume the constant speed control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

## ■ Dynamic Radar Cruise Control\*

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control mode.

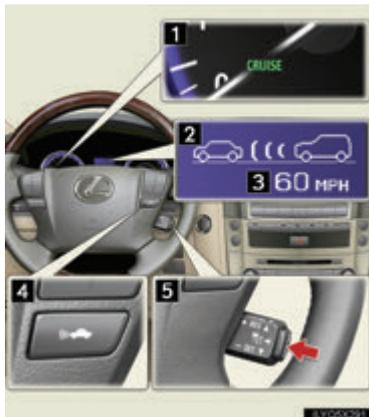

- 1 Indicator
- 2 Display
- 3 Set speed
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

## ■ Cruise control display



Cruise control settings are shown on the multi-information display.

- 1 Vehicle ahead indicator
- 2 Vehicle-to-vehicle distance
- 3 Set speed

\*: If equipped

### ■ Vehicle-to-vehicle distance control mode



- 1 Press the "ON-OFF" button.
- 2 Accelerate or decelerate to the desired speed, and then push the lever down. Following distance can be adjusted using the vehicle-to-vehicle distance control switch.


### ■ Adjusting the set speed



- To increase speed:** push the lever up.  
**To decrease speed:** push the lever down.


Release the lever when the desired speed is reached.

### ■ Canceling and resuming the speed control

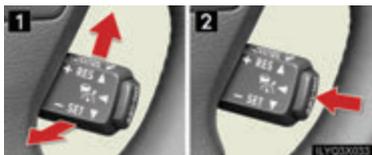

- 1 To temporarily cancel the dynamic radar cruise control, pull the lever toward you. To resume the cruise control, push the lever up.
- 2 To turn the system off, press the "ON-OFF" button.

### ■ Constant speed control mode

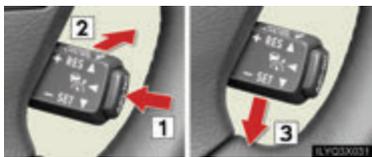

- 1 Press the "ON-OFF" button.
- 2 Push the lever forward and hold for approximately one second.
- 3 Accelerate or decelerate to the desired speed, and then push the lever down.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## AVS (Adaptive Variable Suspension)

AVS controls the suspension and steering wheel operation according to the road and driving conditions.



To select a driving mode, shift the damping mode select switch forward or backward.

- 1 For high speed driving
- 2 For ordinary driving
- 3 For driving on bumpy roads

## 4-Wheel AHC (Active Height Control Suspension)

4-Wheel AHC adjusts the vehicle height in accordance with driving conditions.



To select a height mode, shift the height select switch forward or backward.

- HI (high mode): For driving bumpy roads
- N (normal mode): For ordinary driving
- LO (low mode): For easy access to the vehicle

Press the "OFF" switch to cancel.

### Easy access mode



Press this switch for easy access and easy loading of the vehicle. The vehicle height is lowered automatically when the "ENGINE START STOP" switch is turned to OFF.

The easy access mode is available when N mode is selected.

## Active TRAC/VSC Off Mode

This switch turns off the active traction control system or vehicle stability control system. Use this switch if the wheels get stuck in snow, mud etc.



**To turn off Active TRAC:** Push the VSC OFF switch briefly. The “TRAC OFF” indicator light will come on.

**To turn off VSC:** Push and hold the VSC OFF switch for 3 seconds when the vehicle is not moving. The “TRAC OFF” indicator light and VSC OFF indicator light will come on.

Push the button again to turn the system back on.

## Roll Sensing of Curtain Shield Airbags Off Switch

This switch can turn off the curtain shield airbags and front seat belt pretensioners in a vehicle rollover.



ON/OFF

Press and hold until indicator light turns on/off.

## Tire Pressure Warning Reset Switch

This switch can initialize the tire pressure warning system




Press and hold the switch when you change the tire inflation pressure.

For details, see the “Owner’s Manual”.

## Headlights



- 1 The side marker, parking, tail, license plate and instrument panel lights turn on.
- 2 The headlights and all lights listed above turn on.
- 3 The headlights and all lights listed above turn on/off automatically in accordance with ambient light levels.

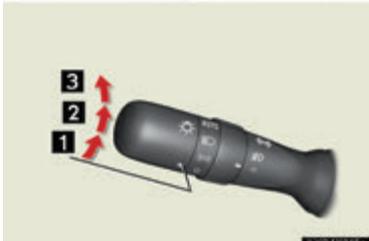

To engage the high beams, push the lever forward.  
To flash the high beams, pull the lever and hold.

### ■ AFS (Adaptive Front-lighting System)

AFS improves visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire angle that are controlled by steering input.



The system can be turned on and off using the "AFS OFF" switch.

## Fog Lights




The fog lights can be used only when the headlights (low beam) are on.

## Windshield Wipers and Washers



- 1 Automatic operation
- 2 Low speed
- 3 High speed
- 4 Operates once

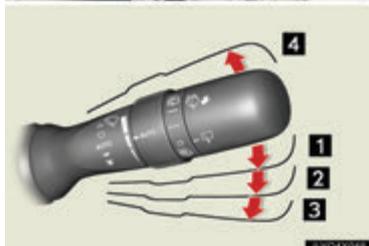


Automatic operation: Sensitivity can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

## Rear Window Wiper and Washer

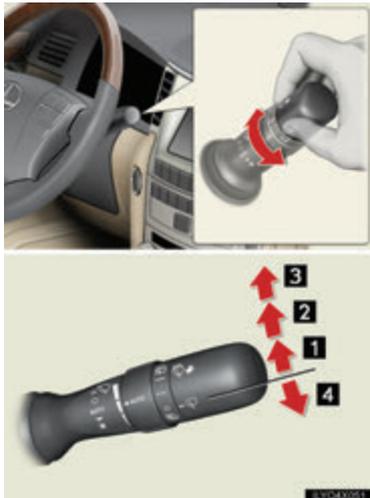

- 1 Intermittent operation
- 2 Normal operation
- 3 Washer/wiper dual operation
- 4 Washer/wiper dual operation

## Headlight Cleaner\*



The headlight cleaner can be used only when the "ENGINE START STOP" switch is in IGNITION ON mode and the headlights are on.

\*: If equipped

## Rear Window and Outside Rear View Mirror Defoggers



To defog the rear window and outside mirrors, press the button.

Press again to cancel.

The system turns off automatically after 15 minutes.

## Instrument Panel Light Control




- 1 Brighter
- 2 Darker


## Touch Screen

By touching the screen with your finger, you can control the audio system, air conditioning and adjust the screen display, etc. For details, see the Owner's Manual.

"Setup" screen

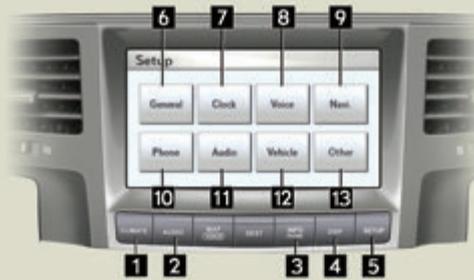

"Information" screen

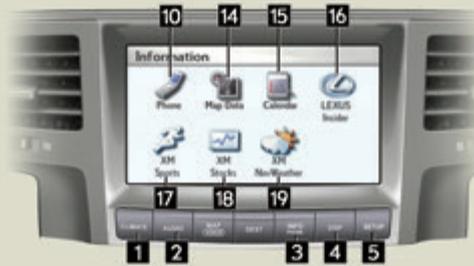


When you press this button...	This display appears.
1 "CLIMATE"	Air conditioning operation screen
2 "AUDIO"	Audio control screen
3 "INFO PHONE"	Information screen
4 "DISP"	Display screen
5 "SETUP"	Setup screen
6 "General"	General setting screen
7 "Clock"	Clock setting screen*
8 "Voice"	Voice setting screen*
9 "Navi."	Navigation System screen*
10 "Phone"	Phone setting screen
11 "Audio"	Audio setting screen
12 "Vehicle"	Vehicle setting screen*
13 "Other"	Other screen*
14 "Map Data"	Map Date Screen*
15 "Calendar"	Calendar screen*
16 "LEXUS Insider"	LEXUS Insider screen*
17 "XM Sports"	XM Sports screen*
18 "XM Stocks"	XM Stocks screen*
19 "XM NavWeather"	XM NavWeather screen*

\*: See Navigation System Owner's Manual.

## Front Air Conditioning System

Press  to display the air conditioning operation screen. For details, refer to the Owner's Manual.

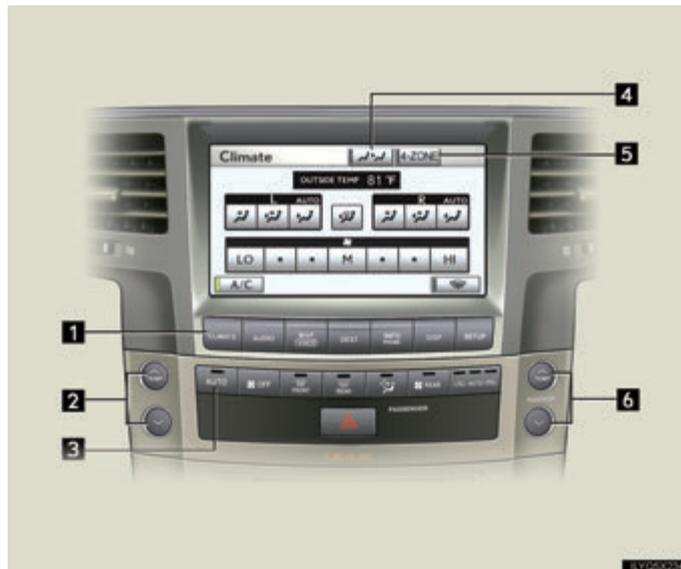

- 1 Air conditioning operation screen display button
- 2 Driver's side temperature control
- 3 Automatic mode
- 4 Rear air conditioning operation screen display switch
- 5 4-zone operation switch
- 6 Passenger's side temperature control

### ■ Using the automatic mode



1 Press .

2 Adjust the temperature using .

## ■ Adjusting the temperature in individual mode

In individual mode, the temperature for the driver's, front passenger's and rear seats can be adjusted separately.

1 Touch "4-ZONE" on the operation screen if its indicator is off.

2 Adjust the driver side temperature using , and the passenger side temperature

using . To adjust the temperature for the rear seats, see below.

## Rear Air Conditioning System




- 1 Left side temperature control
- 2 Automatic mode
- 3 Right side temperature control

To use the automatic mode, press  and

adjust the temperature using .

## ■ Front controller (touch screen)

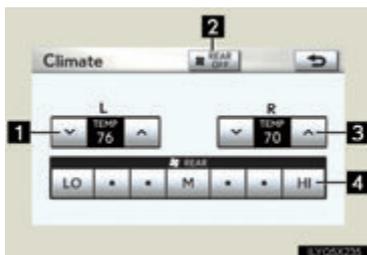


To display the rear air conditioning operation screen, touch the  on the operation screen.

- 1 Left side temperature control switch and display
- 2 Off
- 3 Right side temperature control switch and display
- 4 Fan speed display

## Audio System

### Basic operation

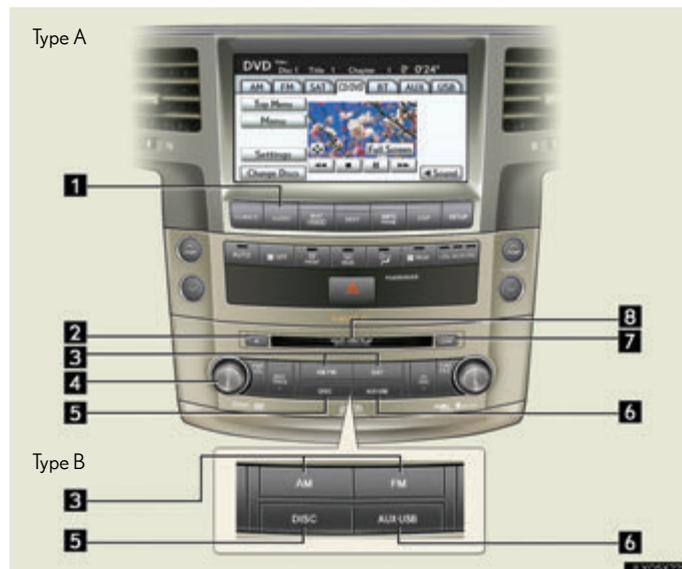

- 1 Audio control screen display button\*
- 2 Disc eject button
- 3 Radio mode button
- 4 Power ON/OFF button, Volume adjustment knob
- 5 DISC mode button
- 6 AUX\*USB mode button
- 7 Disc load button
- 8 Disc slot

\*: Various adjustments can be made in each mode.  
For details, refer to the Owner's Manual.

## ■ Listening to the radio

### ▶ Type A



1 **Type A:** Press **AM-FM** or **SAT** to choose an AM or FM band.

**Type B:** Press **AM** or **FM** to choose an AM or FM band.

2 Tune to your desired station.

For tuning adjustment and further information, refer to the Owner's Manual.

### ▶ Type B



## ■ Playing the CD/DVD player



You have 2 methods to play your CD/DVD player.

● Press **LOAD** and insert a disc into the disc slot.

● Press **DISC** with the disc inserted.

For further information, refer to the Owner's Manual.

## ■ Using the AUX port



- 1 Push the lid to open.
- 2 Open the cover and connect the portable audio device.
- 3 Press **AUX USB**.

## ■ Remote control (steering switches)



**"MODE"**: Turns the audio system on/off, or changes the audio mode.

**"+" or "-"**: Adjusts the volume.

**"^" or "v"**:

Radio mode— Radio tuner

CD mode— Disc/track/file(MP3/WMA)  
selection


DVD mode—Track/chapter/disc selection

## Rear Seat Entertainment System \*

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio system.

The button positions may slightly vary depending on the type of the system.

### Display

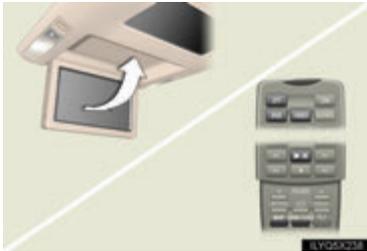

**To open:** Press "ON", "OPEN/CLOSE", "DVD", "VIDEO", "MAP", "SOURCE" or



**To close:** Press "OPEN/CLOSE" or "OFF".

The display angles change each time "TILT" is pressed.

### Remote control




To use the buttons under the cover, slide the cover down.

- 1** Mode select
- 2** Cursor position
- 3** Enter
- 4** Title/disc menu number select
- 5** Play/pause
- 6** Rewind
- 7** Radio tuner, Track/chapter select
- 8** Folder select
- 9** Volume
- 10** Fast forward
- 11** Stop

\*: If equipped

## ■ Headphone jacks

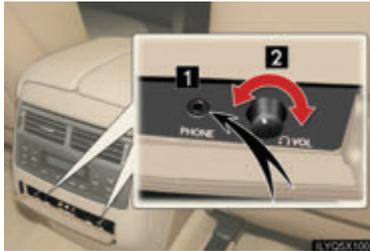


To listen to the rear audio, use headphones.


- 1 Headphone jacks
- 2 Volume: Turn the knob clockwise to increase.  
Turn the knob counterclockwise to decrease.

## Navigation System


### Register home

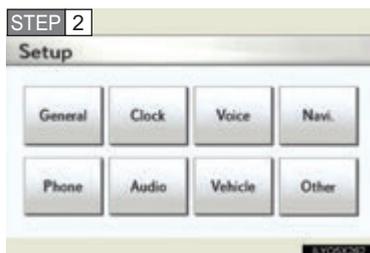

- 1 Press .
- 2 Touch "Navi."

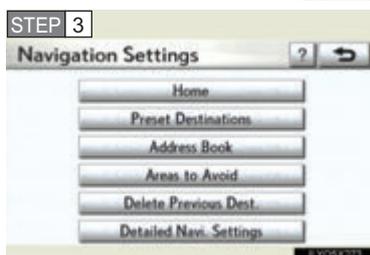

- 3 Touch "Home".
- 4 Touch "Set Home".
- 5 Touch "Address".

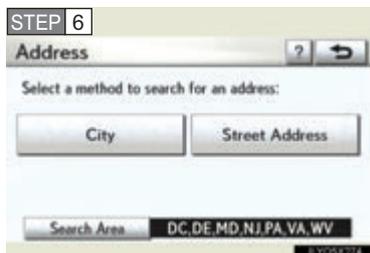


- 6 Touch "City".
- 7 Input a city name and touch "OK".
- 8 Touch the button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.
- 9 Input the street name and touch "OK".
- 10 When the desired street name is found, touch the corresponding button.
- 11 Input a house number and touch "OK".
- 12 Touch "Enter".
- 13 Touch "OK".

## Destination input——Search by address


### ► Select by city name



- 1 Press **DEST**.
- 2 Touch "Address".

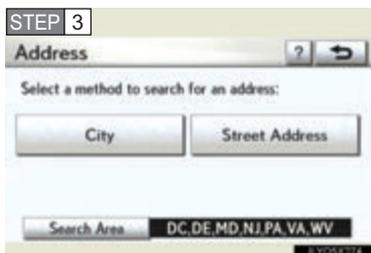

- 3 Touch "City".

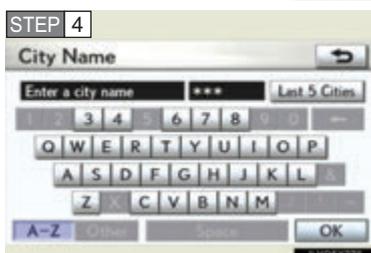


- 4 Input a city name and touch "OK".
- 5 Touch the button of the desired city name from the displayed list.
- 6 Input the street name and touch "OK".
- 7 When the desired street name is found, touch the corresponding button.
- 8 Input a house number and touch "OK".
- 9 Touch "Go to".
- 10 Touch "OK".


► Select by street address



- 1 Press **DEST**.
- 2 Touch "Address".

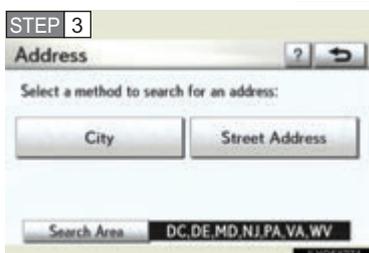

- 3 Touch "Street Address".

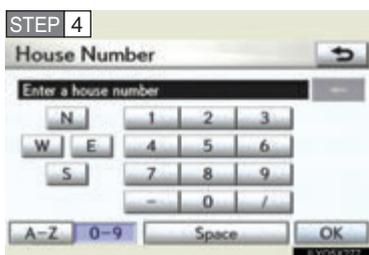


- 4 Input a house number and touch "OK".
- 5 Input the street name and touch "OK".
- 6 When the desired street name is found, touch the corresponding button.
- 7 Input a city name and touch "OK".
- 8 Touch the button of the desired city name from the displayed list.
- 9 Touch "Go to".
- 10 Touch "OK".


## ■ Destination input——Search points of interest by name



- 1 Press **DEST**.
- 2 Touch "Point of Interest".

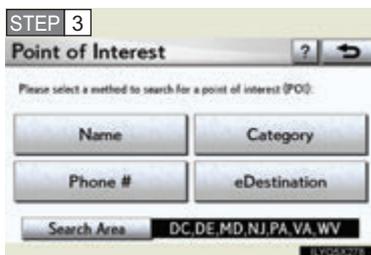

- 3 Touch "Name".

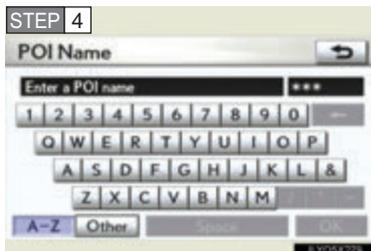


- 4 Input the name of the point of interest and touch "OK".
- 5 Touch the button of the desired destination.
- 6 Touch "Go to".
- 7 Touch "OK".


## ■ Destination input—— Search points of interest by category



- 1 Press **DEST**.
- 2 Touch "Point of Interest".

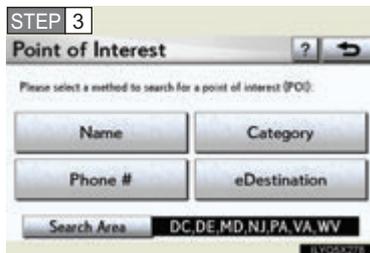

- 3 Touch "Category".

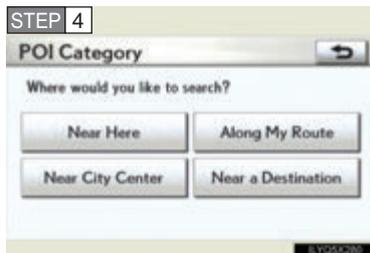


- 4 Touch "Near a Destination".
- 5 Touch the button of the desired destination and set the search point.
- 6 Touch the desired point of interest category.
- 7 Touch the button of the desired item.
- 8 Touch "Go to".
- 9 Touch "OK".


## ■ Destination input—— Search points of interest by telephone number



- 1 Press **DEST**.
- 2 Touch "Point of Interest".

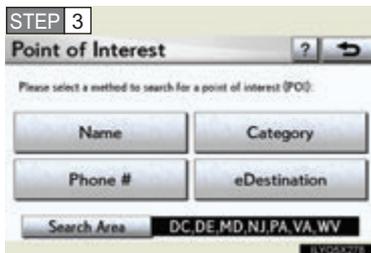

- 3 Touch "Phone #".

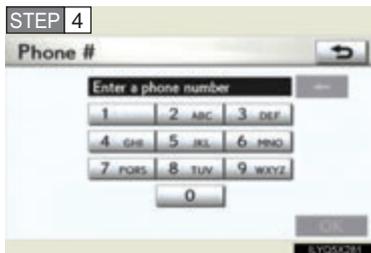


- 4 Input a telephone number and touch "OK".
- 5 Touch "Go to".
- 6 Touch "OK".

## Hands-free System (For Cellular Phone)

### Bluetooth® phone pairing


Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

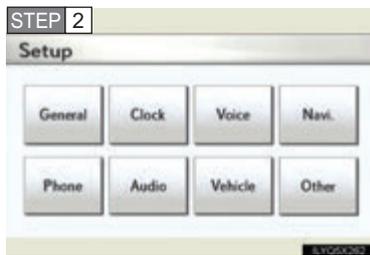


To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press **SETUP**.


2 Touch "Phone".

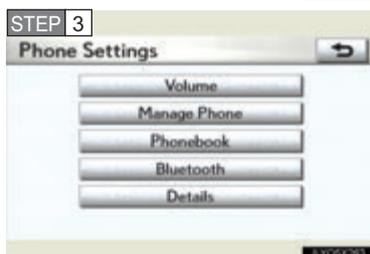

3 Touch "Manage Phone".

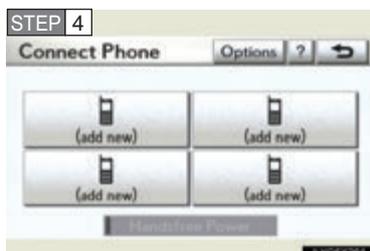

4 Touch "(add new)" to register your cellular phone to the system.

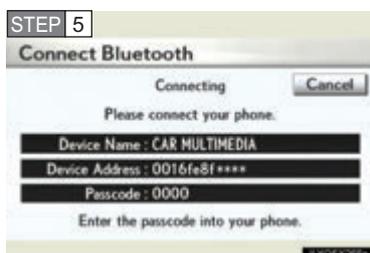


5 Input the passcode displayed on the screen into your phone.


Refer to the cellular phone user's manual for cellular phone operation.

If a completion message is displayed, registration is complete.


## ■ Phonebook transfer

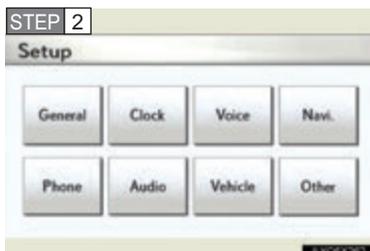

- 1 Press .
- 2 Touch "Phone".

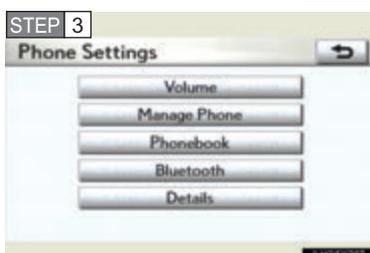

- 3 Touch "Phonebook".

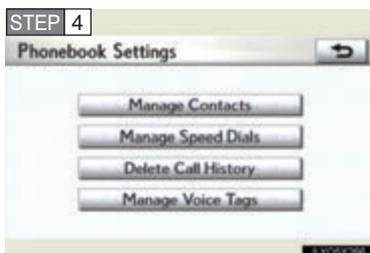


- 4 Touch "Manage Contacts".
- 5 Touch "Transfer Contacts".




- 6 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.


## ■ Registering a voice tag

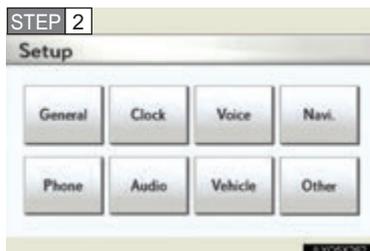

- 1 Press .
- 2 Touch "Phone".

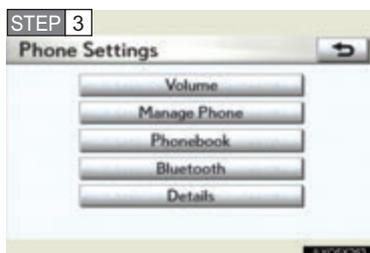

- 3 Touch "Phonebook".

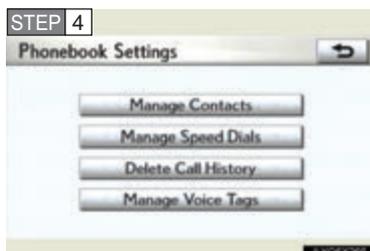


- 4 Touch "Manage Voice Tags".
- 5 Touch "New Voice Tag".
- 6 Touch the data you want to register.




- 7 Touch "● REC", and record a voice tag.
- 8 Touch "OK".


## ■ Registering a speed dial

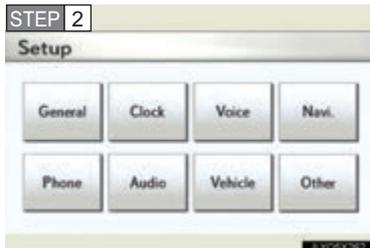

- 1 Press .
- 2 Touch "Phone".

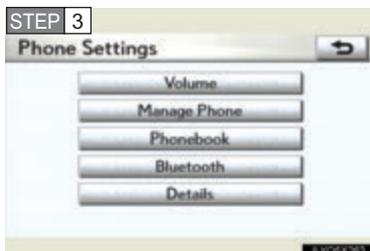

- 3 Touch "Phonebook".

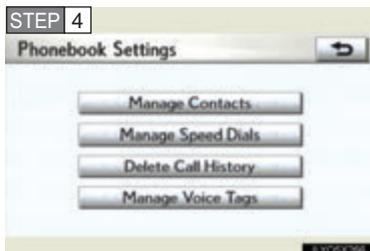

- 4 Touch "Manage Speed Dials".
- 5 Touch "New Speed Dial".



- 6 Touch the data you want to register.
- 7 Touch the desired phone number.
- 8 Touch the switch you want to register the number in.

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the Navigation System Owner's Manual. Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



1 Press  or .



- 2 Follow the voice guidance and say "Phone".
- 3 Follow the voice guidance and say "Dial by name".
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say "Dial".




: Pressing this switch turns the voice command system on. Say a command after the beep.


## ■ Calling by speed dial



1 Press .

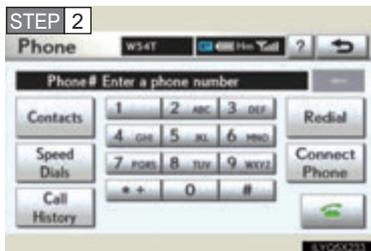


2 Touch "Speed Dials".

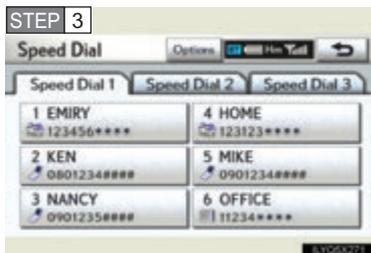

3 Touch the desired number to call.

## ■ Receiving a call

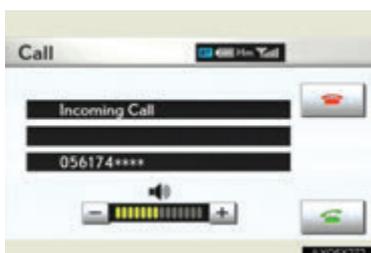

1 When a call is received, this screen is displayed with a sound.

2 Touch  or press  on the steering wheel.

To refuse a call, touch  or press  on the steering wheel.

## Ashtrays

### ► Front



To remove the ashtray, pull it out.

### ► Rear



To remove the ashtray, pull it out.

## Cigarette Lighter




Push the cigarette lighter in.

The cigarette lighter will pop up when ready for use.

## Climate Control Seats/Seat heaters\*

### ► Front seat heaters

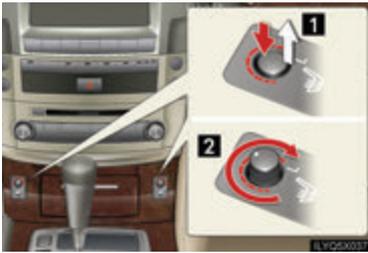

Press the knob to pop out **1**, and turn the knob toward **2** to adjust the seat temperature.

### ► Climate control seats



Press the knob to pop out **1**, and turn the knob to adjust the seat temperature.

- 2** Off
- 3** Ventilation
- 4** Cool air
- 5** Warm air

### ► Rear seat heaters



Press the desired temperature switch.

- 1** HI (High temperature)
- 2** LO (Low temperature)
- 3** OFF

\*: If equipped

## Heated Steering Wheel\*



To heat the leather portion of the steering wheel, press the switch.

Press again to cancel.

## Console Box



To open, lift the armrest with the knob pulled up.

## Auxiliary Boxes

### ► Overhead



To open, press in the button.

\*: If equipped

► Instrument panel



To open, press in the button.

► Rear armrest



To open, press in the button.

**Cool Box\***




- 1 Lift the armrest with the knob pulled up.
- 2 Press the switch to turn it on.

Press the switch again to turn it off.

\*: If equipped

## Glove Box

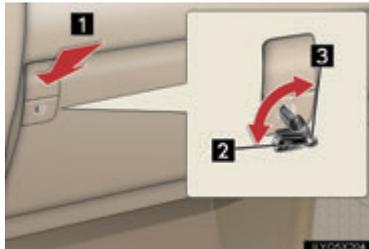

**1** Open: press the button.


**2** Unlock

**3** Lock

The glove box can be locked and unlocked using the mechanical key.


## Cup Holders

### ► Front

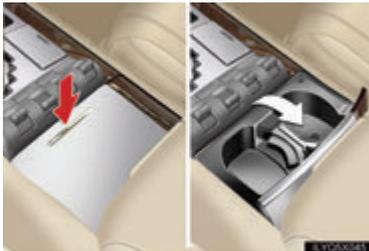

To open, press the lid.

### ► Rear

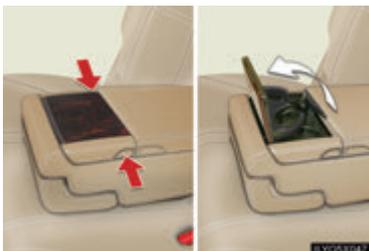

To open, press the button on the rear center armrest.

## Interior Lights



- 1 OFF
- 2 The light comes on if a door is opened.
- 3 ON

## Power Outlet

### ► 12V DC



Designed for use with car accessories.

The "ENGINE START STOP" switch must be in ACCESSORY or IGNITION ON mode for this power outlet to be used.

### ► 115V AC



Designed for use with electrical appliances.

The "ENGINE START STOP" switch must be in IGNITION ON mode for this power outlet to be used.

## Garage Door Opener


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink® Universal Transceiver) is manufactured under license from HomeLink®.



The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices.

### ■ Programming HomeLink®

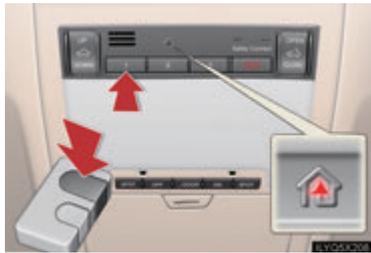

1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.

2 Press and hold down the desired HomeLink® button.

3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

4 Press the training button on the motor-head unit in your garage.

5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink®

---



Press the appropriate HomeLink® button.  
The indicator light should come on.

## Safety Connect\*

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week. Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### Buttons



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

#### ● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

\*: If equipped

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Roadside Assistance**

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

### ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## Lexus Enform with Safety Connect\*

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM<sup>®</sup> satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### ■ Services

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P. 68)**

- Automatic collision notification\*<sup>1</sup>
- Stolen vehicle location
- Emergency assistance button (SOS)
- Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com](http://www.lexus.com) and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

\*: If equipped

- **XM<sup>®</sup> Sports and Stocks\*<sup>2</sup>**

XM<sup>®</sup> Sports and Stocks is a service included with XM<sup>®</sup> satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeather<sup>TM</sup>\*<sup>3</sup>**

The subscription-based XM NavWeather<sup>TM</sup> service allows the navigation system to display weather information on the map.

- **XM<sup>®</sup> NavTraffic\*<sup>3</sup>**

The subscription-based XM<sup>®</sup> NavTraffic service allows the navigation system to display traffic information on the map.

- ▶ **The following navigation-based Lexus Enform features are available without a subscription:**

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

\*<sup>1</sup>: U.S. Patent No. 7,508,298 B2

\*<sup>2</sup>: Available at no extra charge with an active XM<sup>®</sup> satellite radio subscription.

\*<sup>3</sup>: Available via separate XM<sup>®</sup> subscription(s).

## ■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM<sup>®</sup> NavTraffic and XM NavWeather<sup>TM</sup> require separate XM<sup>®</sup> subscription(s). XM<sup>®</sup> Sports and Stocks is available with an XM<sup>®</sup> Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM<sup>®</sup> subscription(s) to continue receiving these services.

## Door Locks

### ■ Locking the vehicle from inside

#### ▶ Inside lock button



- 1 Locks
- 2 Unlocks

#### ▶ Door lock switch



Operates all door locks.

- 1 Locks
- 2 Unlocks

### ■ Locking the vehicle from outside

#### ▶ Using the entry function or wireless remote control (→P.8, 9)

### ■ Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

## Power Windows



### 1 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

### 2 Power window switches

**To open:** press the switch.

**To close:** pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

## Moon Roof

### ■ Opening and closing



### 1 Open

Stops just before it is opened fully. Press the switch again to fully open.

### 2 Close

To stop partway, press the switch lightly.

### ■ Tilt up and down



### 1 Tilt up

### 2 Tilt down

To stop partway, press the switch lightly.

## Fuel Tank Cap



1 Pull the fuel filler door opener.



2 Slowly remove the cap by turning it counter-clockwise.

## Hood



1 Pull the hood lock release lever.



2 Insert your fingers under the hood, pull the hood catch and lift the hood.

## Back Door

### ■ Power back door



To close the back door, press the switch.



To open or close the back door from inside the cabin, press and hold the switch.



To disable the power back door, press the "PWR DOOR OFF" switch.

### ■ Back door easy closer

---

If the back door is left slightly open, it will close automatically.

### ■ Entry function and wireless remote control

---

→P.8,9

**What to do if ...**

**List of Warning/Indicator Lights**



**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**



(U.S.A.)

Brake system warning light



(Canada)

**Stop the vehicle immediately.**



Charging system warning light

For further information, refer to the Owner's Manual.

**Have the vehicle inspected immediately.**

	(U.S.A.)	Malfunction indicator lamp		SRS warning light
	(Canada)			Pre-collision system warning light <sup>*1</sup> (Comes on or flashes)
	(U.S.A.)	ABS warning light		Tire pressure warning light
	(Canada)			(Blinking and then continuously on)

**Have the malfunction repaired immediately.**

	Open door warning light		Tire pressure warning light <sup>*2</sup> (Illuminates without blinking)
	Low fuel level warning light		Unengaged "Park" warning light
	Driver's seat belt reminder light		Master warning light
	Front passenger's seat belt reminder light (On the center panel)		

For further information, refer to the Owner's Manual.

## What to do if ...

### See the Owner's Manual

	Turn signal indicator		Slip indicator
	Headlight high beam indicator		Crawl Control indicator
	Headlight indicator (U.S.A.)		Roll sensing of curtain shield airbags off indicator
	Tail light indicator (Canada)		Automatic transmission second start indicator
	Fog light indicator		Low speed four-wheel drive indicator
	"PWR" mode indicator		Center differential lock indicator
	Cruise control indicator		Security indicator
	"AFS OFF" indicator		Easy access mode indicator
	Intuitive parking assist indicator <sup>*1</sup>		"AIR BAG ON" and "AIR BAG OFF" indicators <small>(On the center panel)</small>
	VSC OFF indicator		"TRAC OFF" indicator

For further information, refer to the Owner's Manual.

<sup>\*1</sup>: If equipped

<sup>\*2</sup>: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## Spare Tire and Tool Compartment

### Jack, tools, and spare tire



- 1 Tools
- 2 Jack
- 3 Spare tire

### Taking out the spare tire




- 1 Lift up the cover.
- 2 Insert the jack handle extension into the lowering screw and lower the spare tire.

## What to do if ...

### If the electronic key does not operate properly

#### ■ Unlocking and locking the doors

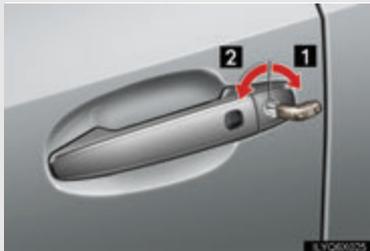

To unlock or lock the vehicle, use the mechanical key. The mechanical key is stored inside the electronic key.

- 1 Unlocks
- 2 Locks

#### ■ Starting the engine



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
- 3 Press the "ENGINE START STOP" switch within 5 seconds after the buzzer sounds, keeping the brake pedal depressed.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## If the engine does not start

Make sure that the correct operating procedures have been followed.



### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.22)



### Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. (→P.10)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.

## What to do if ...

### Electronic Key Alarm

The electronic key alarm uses an alarm and warning messages to indicate that the electronic key has been used improperly. Take appropriate measure in response to any warning messages that are displayed. In some cases, an alarm may sound without an accompanying warning message. If so, follow the correction procedure in the table below.

Alarm	Situation	Correction procedure
Exterior alarm sounds once for 2 seconds	An attempt was made to lock the doors using the entry function while the electronic key was still inside the passenger compartment	Retrieve the electronic key from the passenger compartment and lock the doors again.
Exterior alarm sounds once for 60 seconds	An attempt was made to exit the vehicle and lock the doors without first turning the "ENGINE START STOP" switch OFF	Turn the "ENGINE START STOP" switch OFF and lock the doors again.
Exterior alarm sounds once for 10 seconds	An attempt was made to lock the vehicle while a door is open	Close all of the doors and lock the doors again.
Interior alarm pings continuously*1	The "ENGINE START STOP" switch was turned to ACCESSORY mode while the driver's door was open (or the driver's door was opened while the "ENGINE START STOP" switch was in ACCESSORY mode)	Turn the "ENGINE START STOP" switch OFF and close the driver's door.
	The "ENGINE START STOP" switch was turned OFF while the driver's door was open	Close the driver's door.

Alarm	Situation	Correction procedure
Interior alarm sounds continuously* <sup>1</sup>	When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, an attempt was made to open the door and exit the vehicle, and the shift lever was not in "P"	Shift the shift lever to "P" and turn the "ENGINE START STOP" switch OFF
Interior and exterior alarms sound continuously* <sup>1</sup>	When the "ENGINE START STOP" switch is in IGNITION ON or ACCESSORY mode, the driver's door was closed after the key was carried outside the vehicle, and the shift lever not in "P"	Shift the shift lever to "P", turn the "ENGINE START STOP" switch OFF and close the driver's door again
Interior alarm pings once* <sup>1</sup>	The electronic key has a low battery	Replace the electronic key battery
	An attempt was made to start the engine without the electronic key being present, or the electronic key was not functioning normally	Start the engine with the electronic key present* <sup>2</sup>
Interior alarm pings once and exterior alarm sounds 3 times* <sup>1</sup>	The driver's door was closed after the key was carried outside the vehicle, and the "ENGINE START STOP" switch was not turned OFF	Turn the "ENGINE START STOP" switch OFF and close the driver's door again
	An occupant carried the electronic key outside the vehicle and closed the door while the "ENGINE START STOP" switch was not OFF	Bring the electronic key back into the vehicle

\*<sup>1</sup>: A message will be shown on the multi-information display in the instrument cluster.

\*<sup>2</sup>: If the engine does not start when the electronic key is inside the vehicle, the electronic key battery may be depleted or there may be difficulties receiving signal from the key.

## Customizing Your Lexus

Your vehicle includes a variety of electronic features that can be personalized to your preferences. Programming these preferences requires specialized equipment and may be performed by an authorized Lexus dealership.

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

Item	Function	Default setting	Customized setting
Smart access system with push-button start	Smart access system with push-button start* <sup>1</sup>	ON	OFF
	Smart door unlocking* <sup>1</sup>	Driver's door	All the doors
	Operation signal (Buzzer)	ON	OFF
Wireless remote control	Wireless remote control	ON	OFF
	Open door warning function (when locking the vehicle)	ON	OFF
	Unlocking operation* <sup>1</sup>	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Power back door operation* <sup>1</sup>	Push and hold	One short push
			Push twice
		OFF	
Smart access system with push-button start and wireless remote control	Operation signal (Emergency flashers)* <sup>1</sup>	ON	OFF
	Time elapsed before automatic door lock function is activated if door is not opened after being unlocked* <sup>1</sup>	60 seconds	OFF
			30 seconds
		120 seconds	

Item	Function	Default setting	Customized setting
Door lock* <sup>1</sup>	Unlocking using a mechanical key	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step
	Speed-detecting automatic door lock function	OFF	ON
	Shifting the shift lever to position other than "P" locks all doors	ON	OFF
	Shifting the shift lever to "P" unlocks all doors	ON	OFF
	Opening the driver's door unlocks all doors	OFF	ON
Power back door	Switch operation	Push and hold	One short push
	Operation signal	OFF	ON
	Wireless remote control linked operation (one motion)	ON* <sup>2</sup>	OFF* <sup>3</sup>
Power windows	Mechanical key linked operation	OFF	ON
	Wireless remote control linked operation (open)	OFF	ON
	Linked entry function (close)	OFF	ON

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Moon roof	Mechanical key linked operation* <sup>4</sup>	OFF	ON
	Linked operation of components when mechanical key is use	Slide only	Tilt only
	Wireless remote control linked operation (open)* <sup>5</sup>	OFF	ON
	Linked operation of components when wireless remote control used	Slide only	Tilt only
	Linked entry function* <sup>6</sup>	OFF	ON
Automatic light control system* <sup>1</sup>	Light sensor sensitivity	Standard	-2 to 2
	Daytime running light system	ON	OFF* <sup>7</sup>
	Time elapsed before headlights automatically turn off after doors are closed	30 seconds	OFF
			60 seconds
90 seconds			
Rear window wiper and washer	Switching operation when the vehicle is stationary	ON	OFF
	Drip prevention function	ON	OFF
	Rear window wiper operation linked with washer	ON	OFF
	Linked operation when the shift lever in "R" position	ON	OFF
	Times of the linked operation when the shift lever in "R" position	Once	Continuously

Item	Function	Default setting	Customized setting
Illumination	Time period before the interior lights turn off* <sup>1</sup>	15 seconds	OFF
			7.5 seconds
			30 seconds
	Time period before the exterior lights turn off* <sup>1</sup>	15 seconds	OFF
			7.5 seconds
			30 seconds
	Operation after the "ENGINE START STOP" switch is turned off	ON	OFF
	Operation when the doors are unlocked	ON	OFF
	Operation when you approach the vehicle with the electronic key on your person (When the interior light switch is door position)	ON	OFF
	Foot lights	ON	OFF
Outer foot lights	OFF	ON	
Sensitivity of the ambient light sensor used for dimming the meter lights etc.* <sup>1</sup>	Standard	-2 to 2	
Sensitivity of the ambient light sensor used for brightening the meter lights etc.* <sup>1</sup>	Standard	-2 to 2	

## Customizing Your Lexus

Item	Function	Default setting	Customized setting
Automatic air conditioning system* <sup>1</sup>	Exhaust gas sensor sensitivity	Standard	-3 to 3
	Switching between outside air and recirculated air mode linked to "AUTO" switch operation	Auto	Manual
	A/C Auto switch operation	Auto	Manual

\*<sup>1</sup>: Settings that can be changed using the touch screen

\*<sup>2</sup>: In this case, the power back door operation will be made only by push and hold.

\*<sup>3</sup>: The back door can be opened using the wireless remote control after unlocking the back door.

\*<sup>4</sup>: The settings can be changed when the mechanical key linked operation of the power window is set to ON.

\*<sup>5</sup>: The settings can be changed when the wireless remote control linked operation of the power window is set to ON.

\*<sup>6</sup>: The settings can be changed when the entry function linked operation of the power window is set to ON.

\*<sup>7</sup>: Vehicles sold outside Canada

### Multi-information display

Available languages	English (U.S.A.), English (UK), French, German, Spanish, Italian, Japanese, Simplified Chinese and Traditional Chinese
---------------------	--



#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)

- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)

- Canada: [www.lexus.ca](http://www.lexus.ca)

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.