

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Audio System (With Navigation System)	
Basic operation.....	52
Radio.....	53
DVD player/CD player.....	54
Operating an iPod.....	55
Remote control (steering wheel switches).....	56
Audio System (Without Navigation System)	
Basic operation.....	70
Radio.....	70
CD player.....	71
Operating an iPod.....	72
Remote control (steering wheel switches).....	72
Automatic High Beam.....	36
Crawl Control.....	32
Cruise Control.....	19
Door Locks.....	85
Dynamic Radar Cruise Control.....	21
Eco Driving Indicator Light.....	18
Engine (Ignition) Switch.....	14
Four-wheel Drive System.....	31
Front Air Conditioning System (With Navigation System)	
Using the automatic mode.....	62
Adjusting the temperature.....	62
Using the automatic mode.....	63
Adjusting the temperature.....	63
Front Air Conditioning System (Without Navigation System)	
Using the automatic mode.....	73
Adjusting the temperature.....	73
Using the automatic mode.....	75
Adjusting the temperature.....	75
Fuel Tank Cap.....	88
Hands-free System For Cellular Phone (With Navigation System)	
Bluetooth® phone pairing.....	46
Phonebook transfer.....	47
Registering a voice tag.....	48
Registering a speed dial.....	49
Calling by name.....	50
Calling by speed dial.....	51
Receiving a call.....	52

Hands-free System For Cellular Phone (Without Navigation System)	
Bluetooth® phone pairing	64
Calling by number	65
Calling by name	65
Calling by speed dial	66
Phonebook transfer	67
Changing the registered name	68
Registering a speed dial	69
Headlights	33
Intuitive Parking Assist	26
Keys	10
LDA (Lane Departure Alert)	25
Lexus Enform with Safety Connect	83
List of Warning/Indicator Lights	89
Moon Roof	87
Multi-information Display (Accessory Meters)	17
Multi-information Display (Optitron Meters)	16
Multi-terrain Monitor	29
Multi-terrain Select	27
Navigation System	
Register home	40
Destination input — Search by address	41
Destination input — Search points of interest by name	43
Destination input — Search points of interest by category	44
Destination input — Search points of interest by telephone number	45
Portable Audio Device Port	80
Power Windows	86
Rear Air Conditioning System (With Navigation System)	
Front controller (touch screen)	63
Rear Air Conditioning System (Without Navigation System)	
Using the automatic mode	75
Rear Seat Entertainment System	56
Rear Window Wiper and Washer	39
Safety Connect	81
Smart Access System with Push-button Start	11
Theft Deterrent System	12
Turn Signal Lever	18
Voice Command System	
Basic operation	76
Command list	77
Wide View Front & Side Monitor	26
Windshield Wipers and Washers	37


Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of color and equipment.

Overview

Instrument Panel


Headlight switch [P. 33](#) Engine (ignition) switch [P. 14](#)
Turn signal lever [P. 18](#)
Fog light switch*¹
Automatic High Beam* [P. 36](#)

Rear window wiper
and washer switch [P. 39](#)
Windshield wipers
and washer switch [P. 37](#)

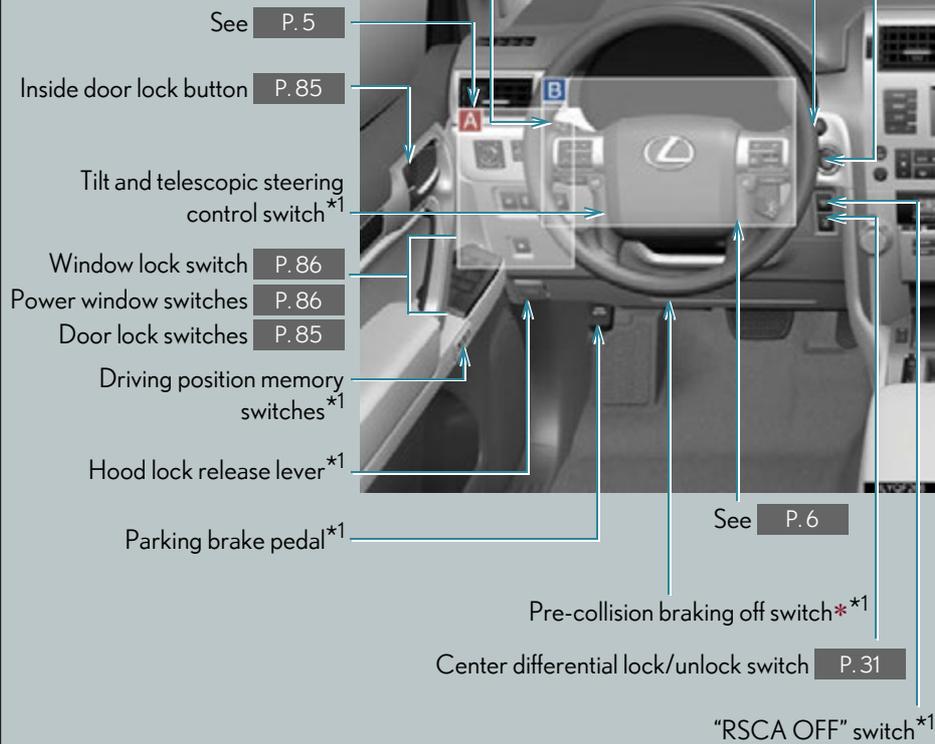

Audio system P. 52,70

Emergency flasher switch*¹

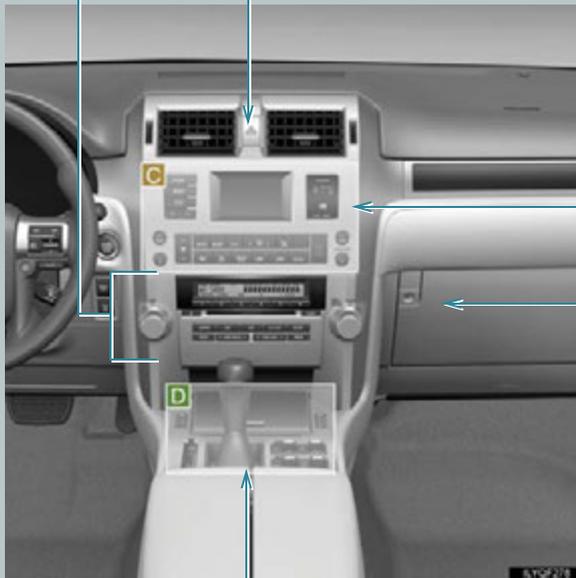

See P. 7

Glove box*¹

See P. 8

*: If equipped
*¹: Refer to "Owner's Manual".

Overview

Instrument Panel

A

Instrument cluster light control switch*¹

Outside rear view mirror switches*¹

ODO/TRIP button*¹



Headlight cleaner switch*¹

Heated steering wheel switch*¹

Fuel filler door opener P. 88

VSC OFF switch*¹

B



C Vehicles without a navigation system

Accessory meter* P. 17

Security indicator P. 12



Rear window defogger switch*1

Windshield wiper de-icer*1

Air conditioning system P. 73

Vehicles with a navigation system

Navigation system P. 40


Security indicator P. 12



Rear window defogger switch*2


Air conditioning system P. 61

D

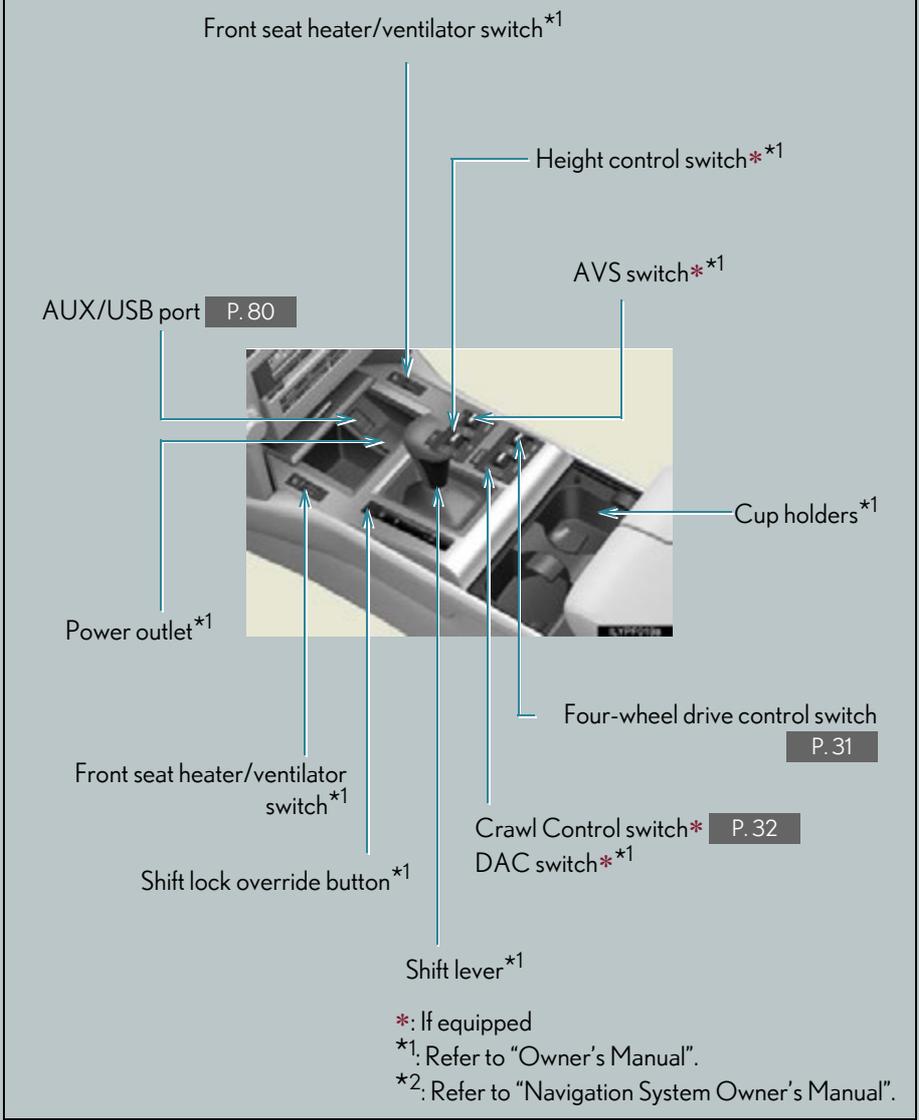

Overview

Roof

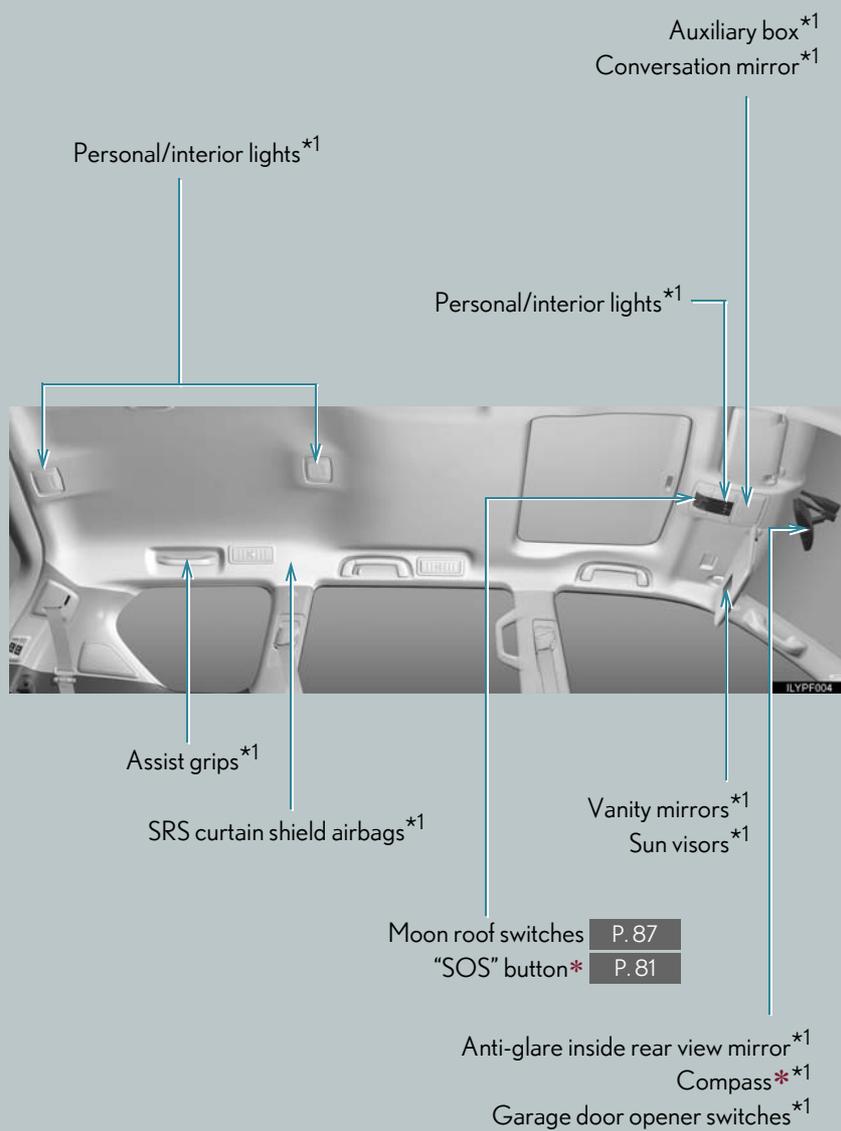

*: If equipped

*1: Refer to "Owner's Manual".

Keys

■ Electronic key



Smart access system with push-button start
(→P.11, 14)

■ Mechanical key



Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

To take out the mechanical key, slide the release lever and take the key out.

■ Wireless remote control



- 1** Locks all the doors
- 2** Unlocks all the doors
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
- 3** Opens the windows and moon roof (press and hold)*
- 4** Opens the glass hatch (press and hold)
The glass hatch can be opened only when the back door is closed.
- 5** Sounds the alarm (press and hold)

*: This setting must be customized at your Lexus dealer.

Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket.
For details on starting the engine, see page 14.

■ Entering the vehicle



Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

■ Exiting the vehicle



Touch the lock sensor (the indentation on the upper or lower part of the door handle) to lock the doors.

■ Unlocking and locking the back door



1 Locks the all doors

2 Unlocks the all doors

The doors cannot be unlocked for 3 seconds after the doors are locked.

■ Opening the glass hatch



Press the button to open the glass hatch.
The glass hatch will pop up.


The glass hatch can be opened only
when the back door is closed.

For details on what to do when the electronic key does not operate properly, see page 92.

Theft Deterrent System

■ Immobilizer system


Without navigation system

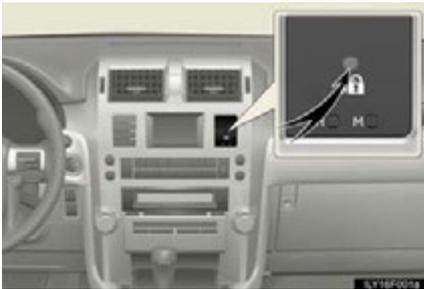

The indicator light flashes after the
“ENGINE START STOP” switch has been
turned OFF to indicate that the system is
operating.

The indicator light stops flashing after the
“ENGINE START STOP” switch has been
turned to ACCESSORY or IGNITION
ON mode to indicate that the system has
been canceled.

With navigation system

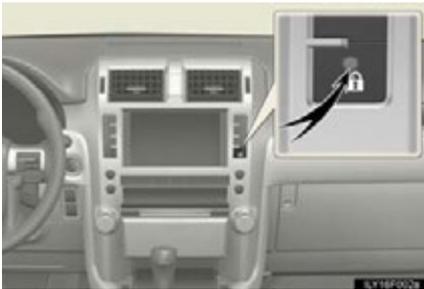

■ Alarm

The system sounds the alarm and flashes the lights when forced entry is detected.

To set the alarm: Close the doors, glass hatch and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

To deactivate or stop the alarm: Start the engine (The alarm will be deactivated or stopped after a few seconds), or unlock the doors.

■ Steering lock



After turning the “ENGINE START STOP” switch off and opening and closing the doors, the steering wheel will be locked due to the steering lock function. Operating the “ENGINE START STOP” switch again automatically cancels the steering lock.

When the steering lock cannot be released, the green indicator light on the “ENGINE START STOP” switch will flash and a message will be shown on the multi-information display. Press the “ENGINE START STOP” switch again while turning the steering wheel left and right.

Engine (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes "ENGINE START STOP" switch modes.

Starting the engine



1] Check that the parking brake is set.

2] Check that the shift lever is set in P.

3] Firmly depress the brake pedal.

The "ENGINE START STOP" switch indicator will turn green. If the indicator does not turn green, the engine cannot be started.

4] Press the "ENGINE START STOP" switch.

The engine will crank until it starts or for up to 25 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started. The engine can be started from any "ENGINE START STOP" switch mode.

Stopping the engine

1] Stop the vehicle.

2] Shift the shift lever to P.


3] Set the parking brake.

4] Press the "ENGINE START STOP" switch.

5] Release the brake pedal and check that the indicator on the "ENGINE START STOP" switch is off.

■ Changing “ENGINE START STOP” switch modes

Modes can be changed by pressing the “ENGINE START STOP” switch with brake pedal released. (The mode changes each time the switch is pressed.)

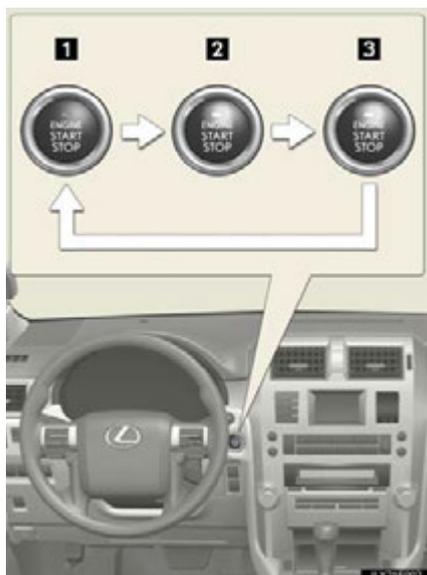

- 1** Off*
The emergency flashers can be used.
- 2** ACCESSORY mode
Some electrical components such as the audio system can be used.
The “ENGINE START STOP” switch indicator turns amber.
- 3** IGNITION ON mode
All electrical components can be used.
The “ENGINE START STOP” switch indicator turns amber.

*: If the shift lever is in a position other than P when turning off the engine, the “ENGINE START STOP” switch will be turned to ACCESSORY mode, not to OFF.

Multi-information Display (Optitron Meters)

The multi-information display presents the driver with a variety of driving-related data.



- Trip information contents
Displays driving range, fuel consumption and other cruising-related information.
 - Electronic features control contents
 - Multi-terrain Select display (if equipped)
 - Intuitive parking assist display* (if equipped)
 - Crawl Control display* (if equipped)
 - Dynamic radar cruise control display* (if equipped)
 - LDA (Lane Departure Alert) display* (if equipped)
 - Warning messages
Automatically displayed when a malfunction occurs in one of the vehicles systems.
(→Refer to the "Owner's Manual".)
 - Customization
Settings (e.g.available language) can be changed.
(Customizable features →Refer to the "Owner's Manual".)
- *: Automatically displayed when the system is used


Switching the display



- 1** Menu switch
Changes modes to electronic features control mode, customization mode or back to normal display mode.
- 2** "ENTER" switch
Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

Multi-information Display (Accessory Meters) (If Equipped)

The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

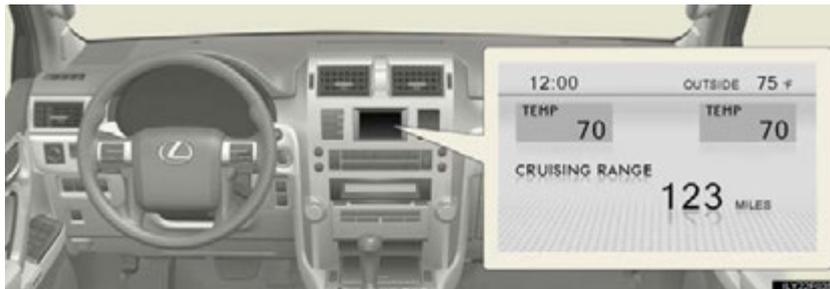

- Clock
Indicates the time.
- Outside temperature
Indicates the outside temperature.
The temperature range that can be displayed is from -40 °F (-40 °C) to 122 °F (50 °C).
- Air conditioning system display
- Rear view monitor
Automatically displayed when the shift lever is moved into R.
(→Refer to the "Owner's Manual" or "Navigation System Owner's Manual".)
- Multi-terrain Monitor (if equipped)
- Wide view front & side monitor (if equipped)
- Trip information
Displays driving range, fuel consumption and other cruising-related information.
- Intuitive parking assist display (if equipped)

Switching the display



Items displayed can be switched by pressing the "MODE" switch.

- 1 "MODE" switch
- 2 "RESET" switch
- 3 "DISP" switch
- 4 Display adjustment switch


Eco Driving Indicator Light



Eco-friendly driving

If Eco Driving Indicator Light comes on, it indicates that you are driving at an Eco-friendly driving. In case of over-use of the accelerator that cause the vehicle to exceed Zone of Eco driving, Eco Driving Indicator Light will turn off. (When driving in D shift position.)


Turn Signal Lever

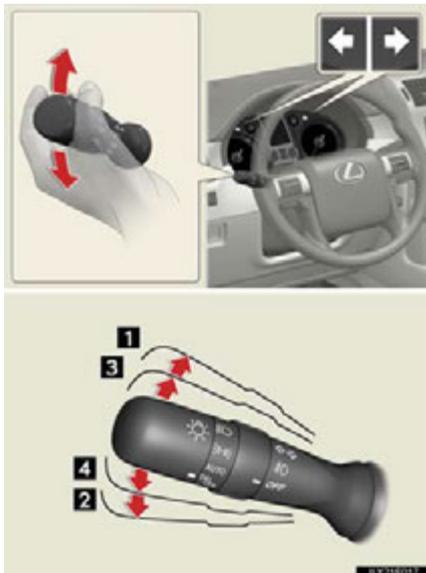

- 1 Right turn
- 2 Left turn
- 3 Lane change to the right (push and hold the lever partway)
The right hand signals will flash until you release the lever.
- 4 Lane change to the left (push and hold the lever partway)
The left hand signals will flash until you release the lever.

Cruise Control (If Equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

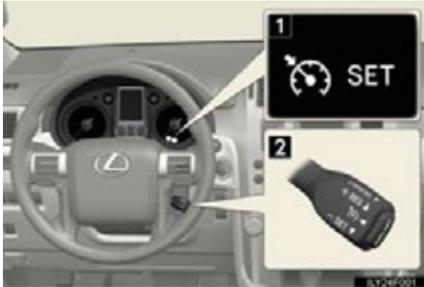

- 1 Indicators
- 2 Cruise control switch

Setting the vehicle speed



- 1 Press the "ON-OFF" button to activate the cruise control.
Cruise control indicator will come on.
Press the button again to deactivate the cruise control.



- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
"SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.



1 Increases the speed

2 Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.


Large adjustment: Hold the lever in the desired direction.

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

■ Canceling and resuming the constant speed control

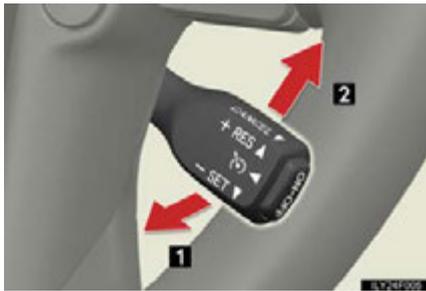

1 Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brakes are applied.

2 Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.



- 1 Display
- 2 Set speed
- 3 Indicators
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)



- 1 Press the "ON-OFF" button to activate the cruise control.
Radar cruise control indicator will come on.
Press the button again to deactivate the cruise control.



- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
"SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.



1 Increases the speed

2 Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

When the set speed is shown in "MPH"

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: By approximately 5 mph (8 km/h) for each 0.75 seconds the lever is held

When the set speed is shown in "km/h"

Fine adjustment: By approximately 0.6 mph (1 km/h) each time the lever is operated


Large adjustment: By approximately 3.1 mph (5 km/h) for each 0.75 seconds the lever is held

In the constant speed control mode, the set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

■ Changing the vehicle-to-vehicle distance

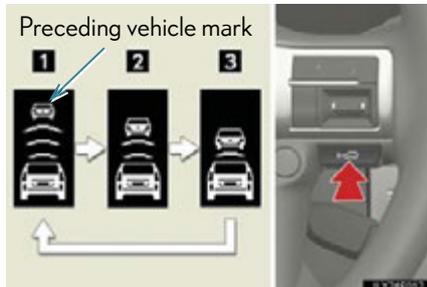

Pressing the button changes the vehicle-to-vehicle distance as follows:

- 1 Long
- 2 Medium
- 3 Short

The vehicle-to-vehicle distance is set automatically to long mode when the “ENGINE START STOP” switch is turned to IGNITION ON mode.


If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.

■ Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 50 mph (80 km/h). Vehicle-to-vehicle distance increases/decreases in accordance with vehicle speed.

Distance options	Vehicle-to-vehicle distance
Long	Approximately 160 ft. (50 m)
Medium	Approximately 130 ft. (40 m)
Short	Approximately 100 ft. (30 m)

■ Canceling and resuming the speed control

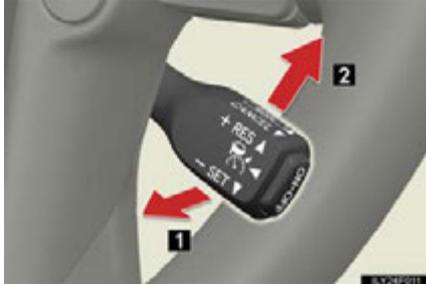

- 1** Pulling the lever toward you cancels the speed control.
The speed setting is also canceled when the brakes are applied.
- 2** Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

LDA (Lane Departure Alert) (If Equipped)

While driving on a freeway or motor highway that has lane markings, this system recognizes the lanes using a camera as a sensor to alert the driver when the vehicle deviates from its lane.

If the system judges that the vehicle may deviate from its lane, it alerts the driver using rapid beeping and indications on the multi-information display.

Turning the LDA system on

The system will be activated depending on the recognizability of lane markings and on the vehicle speed.




Press the "LDA" switch to activate the system.

The "LDA" indicator will come on.

Press the switch again to turn the LDA system off.

Indication on the multi-information display


While the LDA system is on, a lane line display is shown on the multi-information display to inform the driver that the LDA system is on.

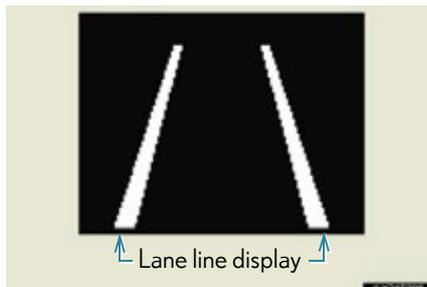

- When thin lines are shown:
Lane markings are not recognized by the system, or the LDA system is temporarily canceled.
- When solid lane lines are shown:
The LDA system is active.

Intuitive Parking Assist (If Equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display and a buzzer. Always check the surrounding area when using this system.

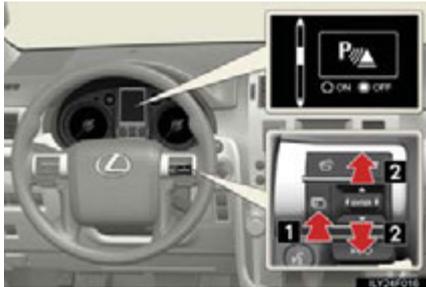

- 1] Press the menu switch.
The multi-information display will change modes to electronic features control mode.
- 2] Press the "ENTER" switch upwards or downwards until the Intuitive parking assist mark appears in the multi-information display.



- 3] Press the "ENTER" switch to change to "ON".
The Intuitive parking assist indicator will be displayed.
Each pressing of the switch turns the Intuitive parking assist on and off.
When on, the buzzer sounds to inform the driver that the system is operational.
Press the menu switch to change to the normal display.

Wide View Front & Side Monitor (If Equipped)

This system can display the wide view front monitor and the side monitor.

The wide view front monitor uses a super-wide angle lens to display on screen the areas to the left and right of the vehicle and the blind spots to the front of the vehicle. This system helps the driver check for approaching cars, bicycles and pedestrians when at intersections with poor visibility.

The side monitor uses a camera installed in the passenger's side outside rear view mirror to display on screen the area to the right of the vehicle, helping the driver check this area.




On/off

The camera image is displayed when the wide view front & side monitor switch is pressed.

Multi-terrain Select (If Equipped)

Multi-terrain Select is a system that helps drivability in off-road situations.

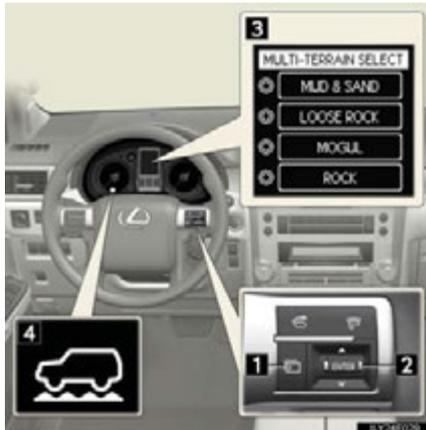

- 1 Menu switch
- 2 "ENTER" switch
- 3 Multi-information display
Displays status information including operating status and road type selection.
- 4 Multi-terrain Select indicator

Selectable modes

Mode	Road Conditions
MUD & SAND	Suitable for muddy roads, sandy roads, snow-covered roads, dirt trails and other slippery or dirty conditions
LOOSE ROCK	Suitable for slippery conditions consisting of mixtures of earth and loose rock
MOGUL	Suitable for a wide range of off-road conditions, particularly very bumpy conditions
ROCK	Suitable for rocky terrain


■ Switching modes



- 1] Push the menu switch.
The multi-information display will change to electronic features control mode.



- 2] Press the "ENTER" switch upwards or downwards until "MULTI-TERRAIN SELECT" appears and then press the "ENTER" switch.
The mode selection screen is displayed.

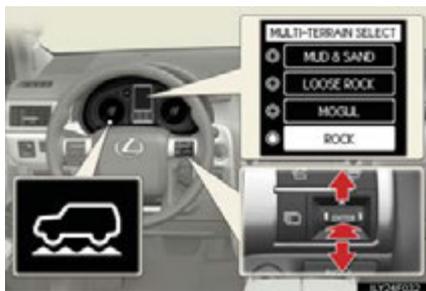


- 3] Press the "ENTER" switch upwards or downwards to select a desired mode and then press the "ENTER" switch.
The system switches to the selected mode, and the multi-terrain select indicator will turn on.



- 4] Once the mode has been set, the mode name will be displayed and operation will commence.

Multi-terrain Monitor (If Equipped)

The Multi-terrain Monitor displays the vehicle surroundings when driving at low speeds, thus assisting off-road driving and helping the driver to check the vehicle surroundings.

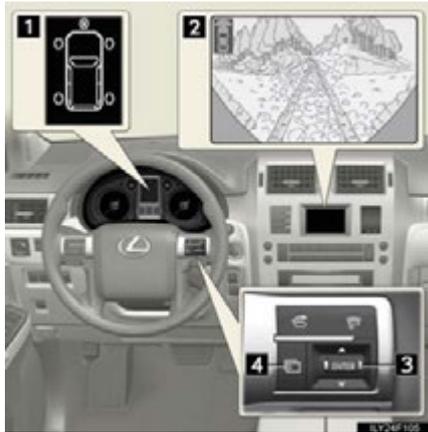


- 1 Multi-information display
- 2 Accessory meter (vehicles without navigation system) or touch screen (vehicles with navigation system)
- 3 "ENTER" switch
- 4 Menu switch

■ Switching the image



- 1 Select any mode using the Multi-terrain Select system.
- 2 Move the "ENTER" switch upwards or downwards to select "CAM. POSITION", and press the "ENTER" switch.

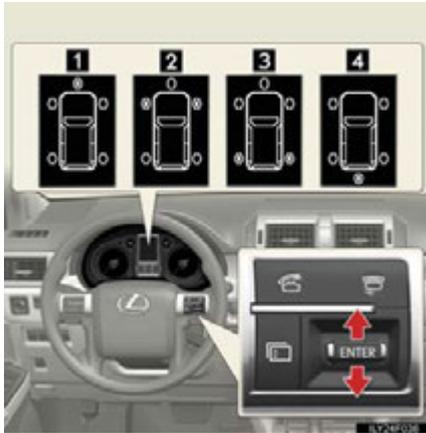

- 3 The camera view can be switched by moving the "ENTER" switch upwards or downwards. Each time the switch is operated, the mark on the multi-information display will move and the image displayed on the monitor will switch.

- 1 Front monitor*1
- 2 Side-front simultaneous display monitor*2
- 3 Side-rear simultaneous display monitor*2
- 4 Rear monitor*3

*1: Cannot be selected if the shift lever is in R.

*2: The displayed icon differs in accordance with shift position.

*3: Cannot be selected if the shift lever is not in R.

Four-wheel Drive System

Use the four-wheel drive control switch and center differential lock/unlock switch to select the following transfer and center differential modes.

Four-wheel drive control switch



1 H4 (high speed position)


Normal driving on all types of roads.

2 L4 (low speed position)

Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.

The low speed four-wheel drive and VSC OFF indicators will come on.

Center differential lock/unlock switch

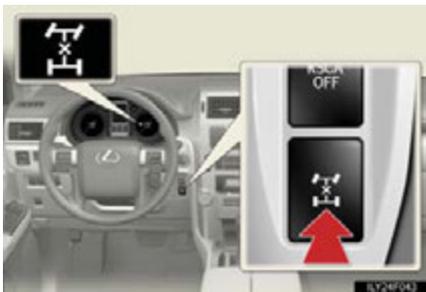

Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

The center differential lock indicator will come on.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

To unlock the center differential, push the switch again.

Crawl Control (If Equipped)

Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Minimizes loss of traction or vehicle slip when driving on slippery road surfaces, helping for stable driving.



1 On/off

The Crawl Control indicator is lit and the slip indicator flashes when operating.


Also, the operating status and speed select status of the Crawl Control are shown on the multi-information display.

2 Higher

3 Lower


Headlights

Type A

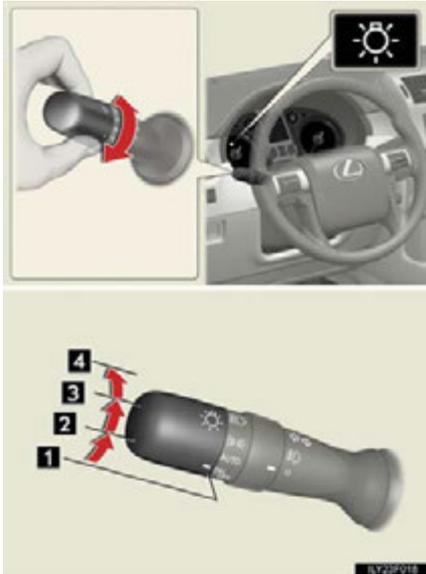

- 1  The daytime running lights turn off.
- 2  The headlights, parking lights and so on turn on and off automatically (when the "ENGINE START STOP" switch is in IGNITION ON mode).
- 3  The side marker, parking, tail, license plate and instrument panel lights turn on.
- 4  The headlights and all the lights listed above turn on.

Type B

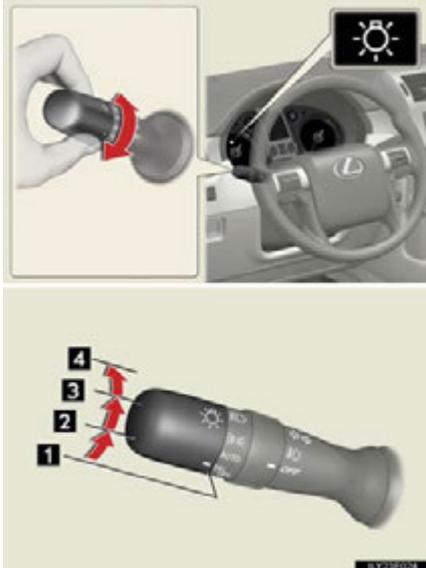


- 1  The daytime running lights turn off.
- 2  The headlights, parking lights and so on turn on and off automatically (when the "ENGINE START STOP" switch is in IGNITION ON mode).
- 3  The side marker, parking, tail, license plate and instrument panel lights turn on.
- 4  The headlights and all the lights listed above turn on.

■ AFS (Adaptive Front-lighting System) (if equipped)

AFS (Adaptive Front-lighting System) secures excellent visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire's angle as controlled by steering input. AFS operates at speeds of 6 mph (10 km/h) or higher.

■ Deactivating AFS

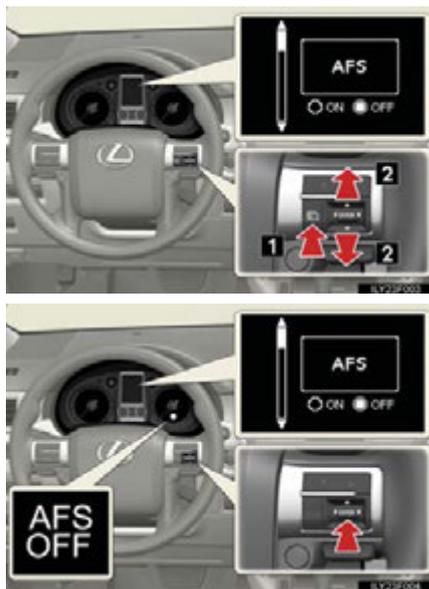


- 1 Press the menu switch.
The multi-information display will change modes to electronic features control mode.
- 2 Press the "ENTER" switch upwards or downwards until "AFS" appears.
- 3 Press the "ENTER" switch to change to "OFF".
The "AFS OFF" indicator will be displayed.
Each pressing of the switch turns "AFS" on and off.
Press the menu switch to change to the normal display.



Automatic High Beam (If Equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

■ Activating the Automatic High Beam system

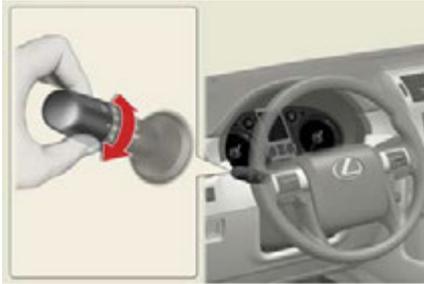

- 1 Turn the headlight switch to "AUTO" position.

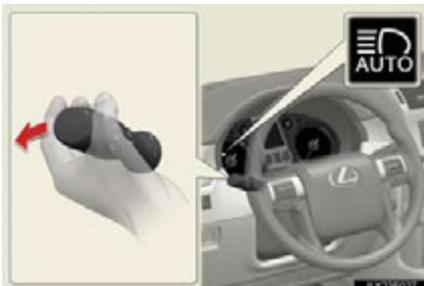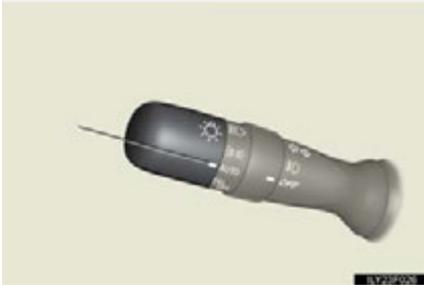

- 2 Push the lever away from you.
The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):



- Vehicle speed is above approximately 20 mph (32 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

Windshield Wipers and Washers


Type A



- 1 ○ Off
- 2 AUTO Rain-sensing wiper operation
- 3 ▼ Low speed wiper operation
- 4 ▽ High speed wiper operation
- 5 △ Temporary operation


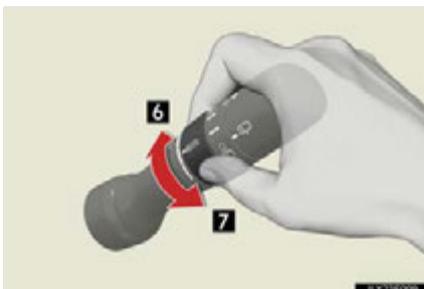
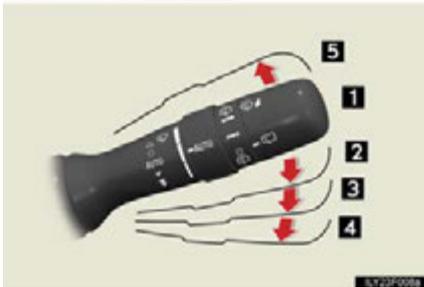


- 6 Increases the sensitivity
- 7 Decreases the sensitivity

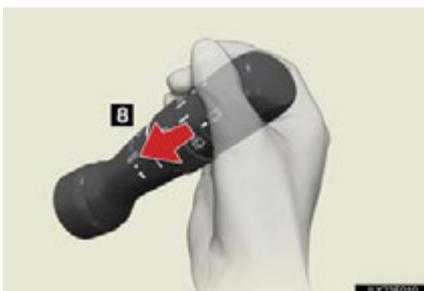

- 8 Washer/wiper dual operation
The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)
Vehicles with the headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

Type B

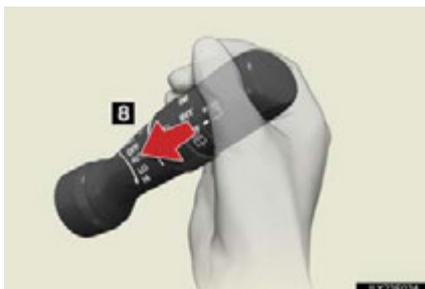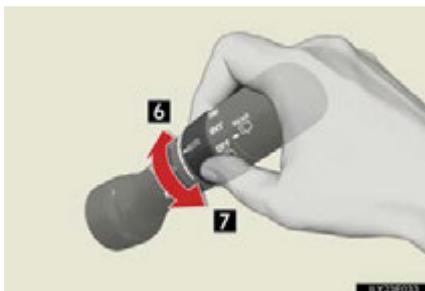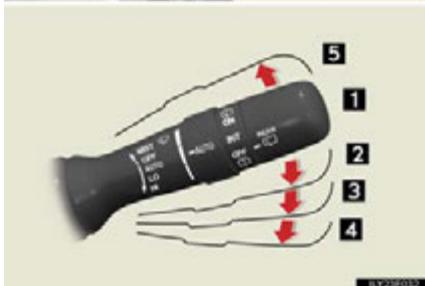


- 1 OFF** Off
- 2 AUTO** Rain-sensing wiper operation
- 3 LO** Low speed wiper operation
- 4 HI** High speed wiper operation
- 5 MIST** Temporary operation

- 6** Increases the sensitivity
- 7** Decreases the sensitivity

- 8** Washer/wiper dual operation
The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)
Vehicles with the headlight cleaners: If the headlights are on, the headlight cleaners will operate once.


Rear Window Wiper and Washer

Type A

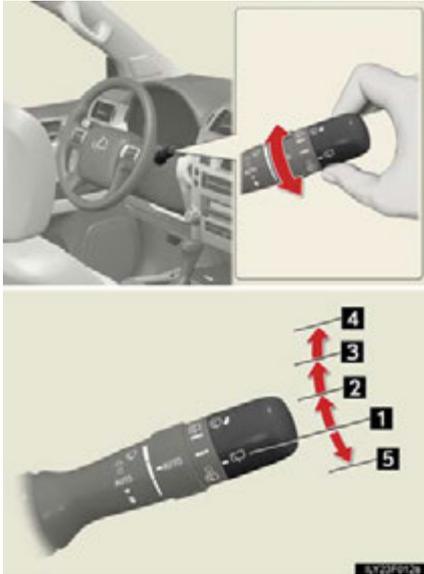

- 1 ○ Off
- 2 - - - Intermittent window wiper operation
- 3 — Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation




Type B

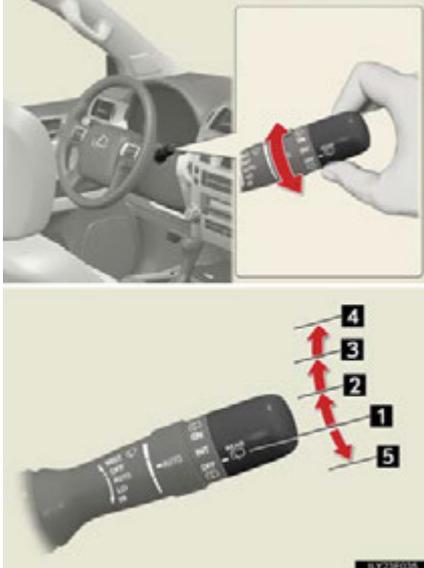

- 1 OFF Off
- 2 INT Intermittent window wiper operation
- 3 ON Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Navigation System (If Equipped)



Register home

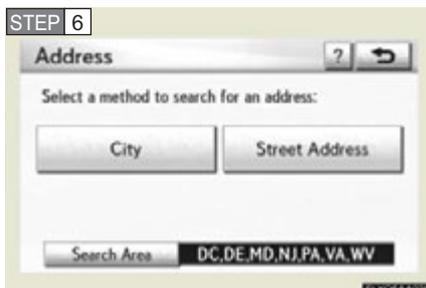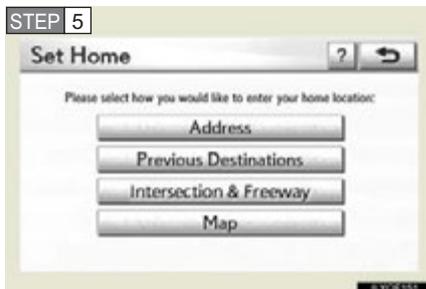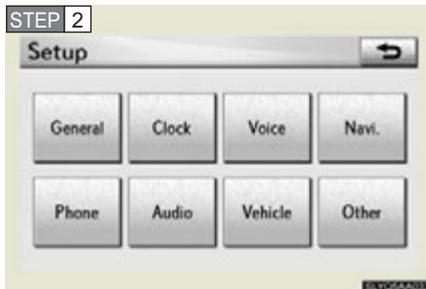

- 1 Push the "SETUP" button.
- 2 Touch "Navi."
- 3 Touch "Home".
- 4 Touch "Set Home".
- 5 Touch "Address".
- 6 Touch "City".
- 7 Input a city name and touch "OK".
- 8 Touch the button of the desired city name from the displayed list.
- 9 Input the street name and touch "OK".
- 10 When the desired street name is found, touch the corresponding button.
- 11 Input a house number and touch "OK".
- 12 Touch "Enter".
- 13 Touch "OK".

■ Destination input — Search by address



Select by city name

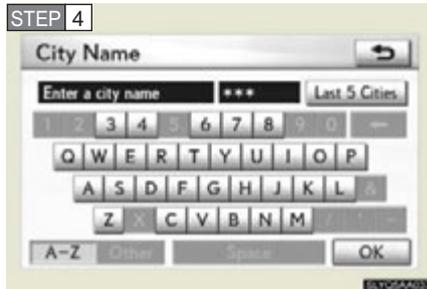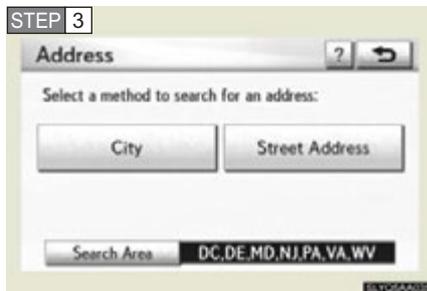

- 1 Push the "DEST" button
- 2 Touch "Address".
- 3 Touch "City".
- 4 Input a city name and touch "OK".
- 5 Touch the button of the desired city name from the displayed list.
- 6 Input the street name and touch "OK".
- 7 When the desired street name is found, touch the corresponding button.
- 8 Input a house number and touch "OK".
- 9 Touch "Go to".
- 10 Touch "OK".

■ Destination input — Search by address

Select by street address


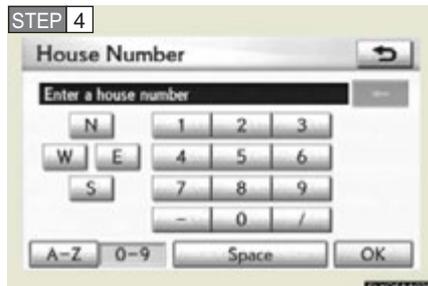
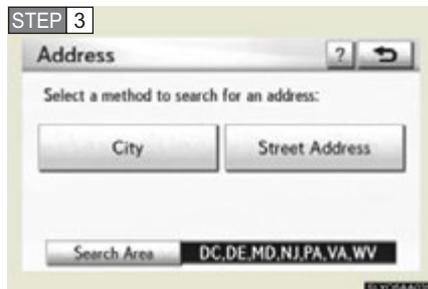


- 1 Push the "DEST" button.
- 2 Touch "Address".
- 3 Touch "Street Address".
- 4 Input a house number and touch "OK".
- 5 Input the street name and touch "OK".
- 6 When the desired street name is found, touch the corresponding button.
- 7 Input a city name and touch "OK".
- 8 Touch the button of the desired city name from the displayed list.
- 9 Touch "Go to".
- 10 Touch "OK".



Destination input — Search points of interest by name



- 1 Push the "DEST" button.
- 2 Touch "Point of Interest".
- 3 Touch "Name".
- 4 Input the name of the point of interest and touch "OK".
- 5 Touch the button of the desired destination.
- 6 Touch "Go to".
- 7 Touch "OK".

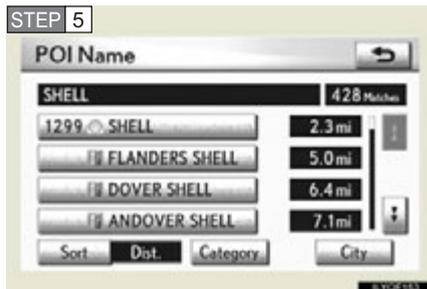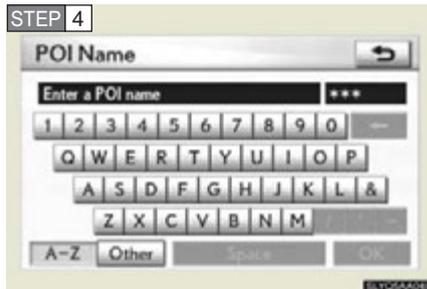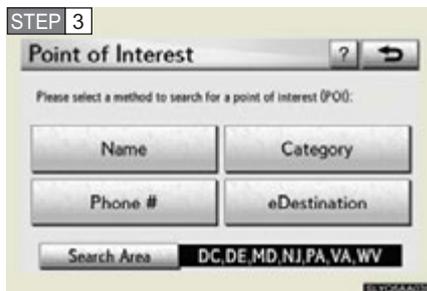

Destination input — Search points of interest by category


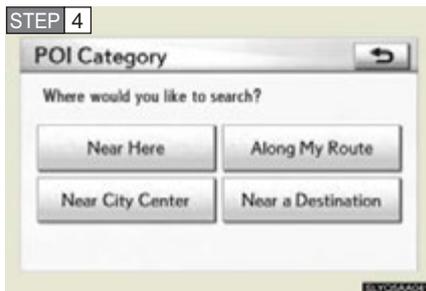
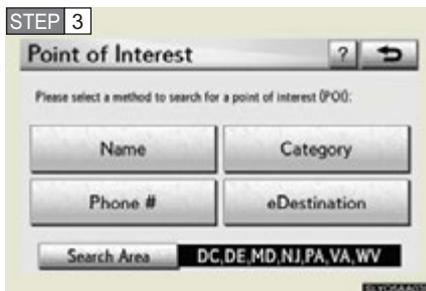


- 1 Push the "DEST" button.
- 2 Touch "Point of Interest".
- 3 Touch "Category".
- 4 Touch "Near a Destination".
- 5 Touch the button of the desired destination and set the search point.
- 6 Touch the desired point of interest category.
- 7 Touch the desired point of interest category from the list.
- 8 Touch "Go to".
- 9 Touch "OK".

■ Destination input — Search points of interest by telephone number





- 1] Push the "DEST" button.
- 2] Touch "Point of Interest".
- 3] Touch "Phone #".
- 4] Input a telephone number and select "OK".
- 5] Touch "Go to".
- 6] Touch "OK".

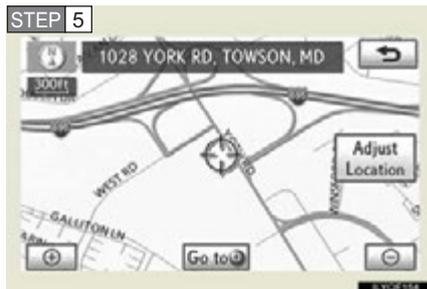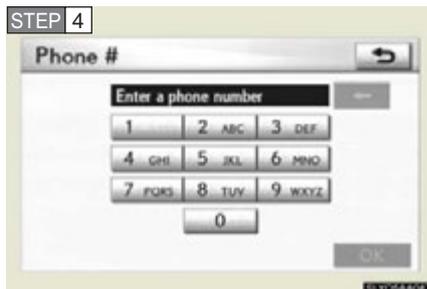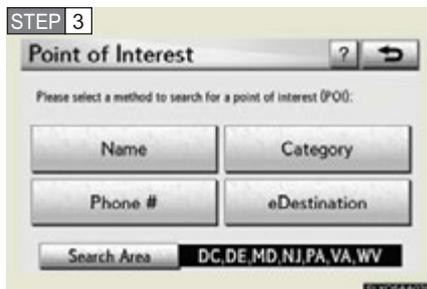

Hands-free System For Cellular Phone (With Navigation System)

Bluetooth® phone pairing




Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

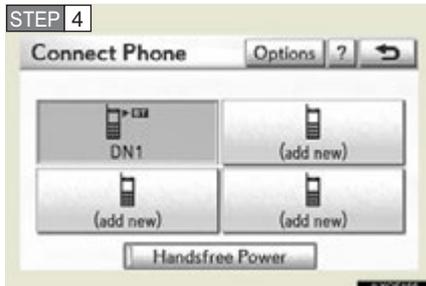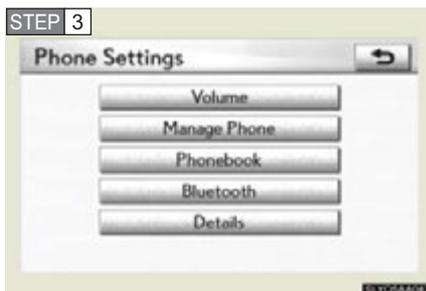

To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Push the "SETUP" button.
- 2 Touch "Phone".
- 3 Touch "Manage Phone".
- 4 Touch "(add new)" to display the screen for connecting Bluetooth®.
- 5 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 When the connection is completed, "Bluetooth connection successful." will appear.





■ Phonebook transfer

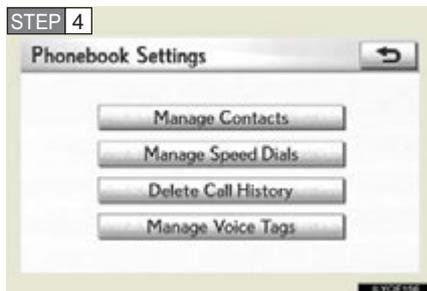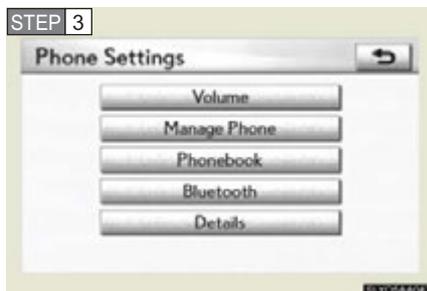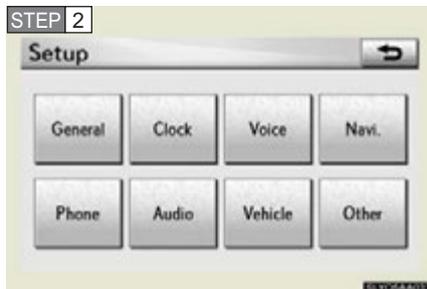

- 1] Push the "SETUP" button.
- 2] Touch "Phone".
- 3] Touch "Phonebook".
- 4] Touch "Manage Contacts".
- 5] Touch "Transfer Contacts".
- 6] Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.





Phonebook transfer may not be possible depending on phone model.

■ Registering a voice tag

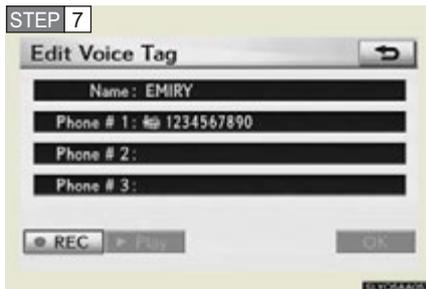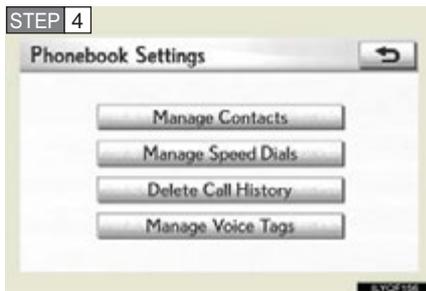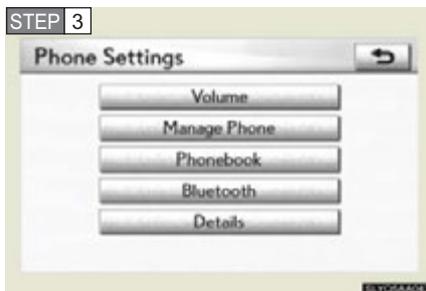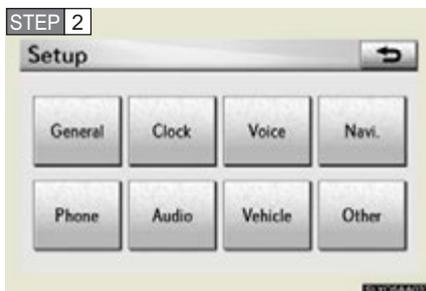

- 1] Push the "SETUP" button.
- 2] Touch "Phone".
- 3] Touch "Phonebook".
- 4] Touch "Manage Voice Tags".
- 5] Touch "New Voice Tag".
- 6] Touch the data you want to register.
- 7] Touch "REC", and record a voice tag.
- 8] Touch "OK".

■ Registering a speed dial

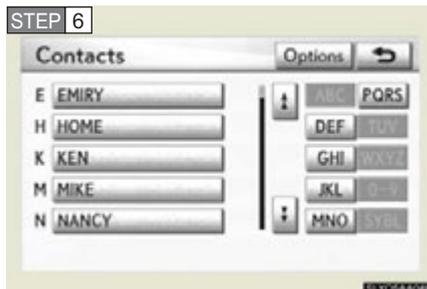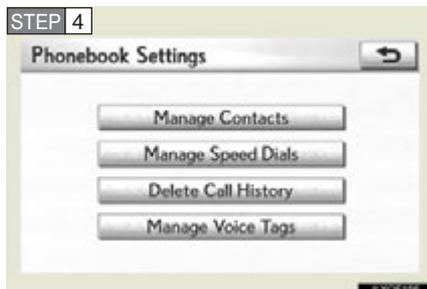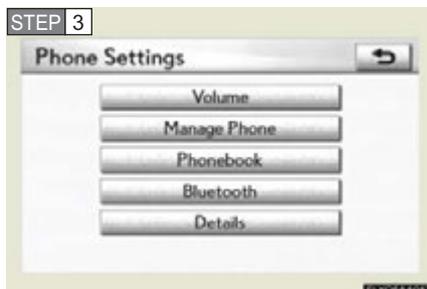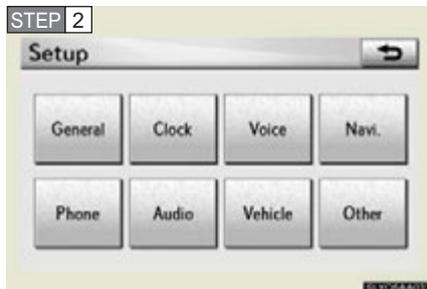

- 1] Push the "SETUP" button.
- 2] Touch "Phone".
- 3] Touch "Phonebook".
- 4] Touch "Manage Speed Dials".
- 5] Touch "New Speed Dial".
- 6] Touch the data you want to register.
- 7] Touch the desired phone number.
- 8] Touch the button you want to register in.
- 9] The registration completion message is displayed on the screen.

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the “Navigation System Owner’s Manual”. Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



- 1] Press .
- 2] Follow the voice guidance and say “Phone”.
- 3] Follow the voice guidance and say “Dial by name”.
- 4] Follow the voice guidance and say a contact name.
- 5] Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6] Follow the voice guidance and say “Dial”.



: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial



1 Press .




2 Touch "Speed Dials".



3 Touch the desired number to call.

■ Receiving a call

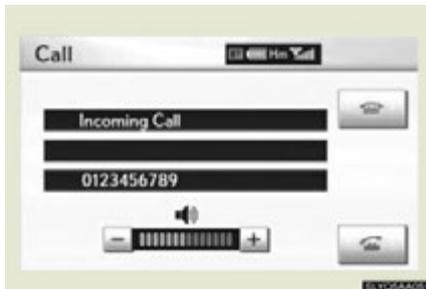

1] When a call is received, this screen is displayed with a sound.



2] Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

Audio System (With Navigation System)

■ Basic operation



1] Display the audio control screen

2] Sound quality modes

3] Audio sources

AM·FM: AM radio/FM radio

SAT: Satellite radio

DISC: DVD changer
(if equipped)

CD: CD changer
(if equipped)

AUX·USB: Auxiliary audio device/
USB memory/iPod/
Bluetooth® audio

4] Power/Volume

■ Radio



- 1 Display the audio control screen
- 2 Station presets
- 3 Scanning radio stations
- 4 Radio tune
- 5 Station select
- 6 Seek

■ Entering station presets

- 1 Select the desired station by using the tune, seek or scan function.
- 2 Touch one of the touch-screen buttons (1-6) you want and hold it until a beep is heard.

■ DVD player/CD player

■ Playing an audio CD



- 1 Display the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Disc load
- 7 Track select/rewind/fast-forward
- 8 Eject

■ Playing a CD with MP3/WMA files



- 1 Display the audio control screen
- 2 Disc select
- 3 Repeat play
- 4 Random playback
- 5 Search playback
- 6 Folder select
- 7 File select
- 8 Disc load
- 9 Eject

■ Playing a DVD (DVD player only)



- 1 Display the audio control screen
- 2 Disc select
- 3 DVD operation
- 4 Image display (full screen)
- 5 Disc load
- 6 Chapter select
- 7 Eject

■ Loading a disc

- 1 Press the "LOAD" button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

■ Loading multiple discs

- 1 Press and hold the "LOAD" button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.


■ Operating an iPod



- 1 Display the audio control screen
- 2 Menu
- 3 Pause/Playback
- 4 Repeat play
- 5 Random playback
- 6 Track list
- 7 Track select
- 8 Track select/rewind/fast-forward

■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

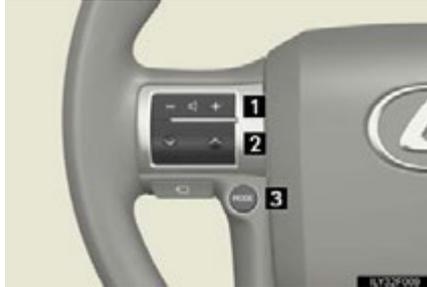

- 1** Volume
- 2** Radio mode: radio tuner
DVD mode: track/chapter/disc select
CD mode: disc/track/file (MP3/WMA) select
iPod mode (if equipped): track select
- 3** Power on/change mode: press
Power off: press and hold


■ Rear Seat Entertainment System (If Equipped)

The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video.



- 1** Front audio system
- 2** Displays
- 3** Rear seat entertainment system controller
- 4** A/V input adapter
- 5** Headphone volume control dials and headphone jacks

■ Headphone jacks

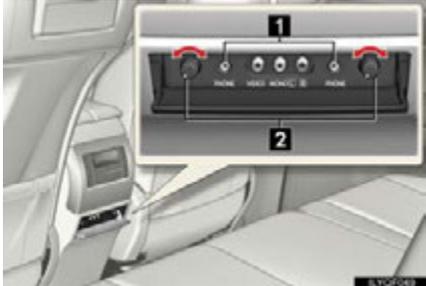

To listen to the rear audio, use headphones.


- 1 Headphone jacks
- 2 Volume: Turn the knob clockwise to increase.
Turn the knob counterclockwise to decrease.

■ Changing the source



- 1 Turning on the audio source selection screen
 - 2 Inputting the selected icon
 - 3 Selecting an icon
- Push "SOURCE" to display the audio source selection screen.

■ Radio

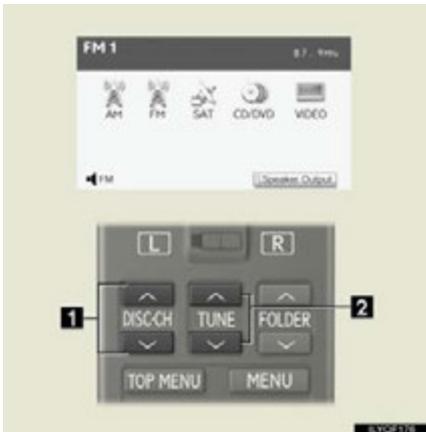

- 1 Selecting a preset station
 - 2 Turning the station
- Select radio mode on the source screen to display the control screen.

■ DVD changer



1 Turning on DVD changer mode

2 Selecting a disc


Push “^” or “v” of “DISC•CH” until the desired disc number appears on the screen.

■ CD player



Push “^” or “v” of “TUNE” until the desired track number appears on the screen.

■ WMA/MP3 discs

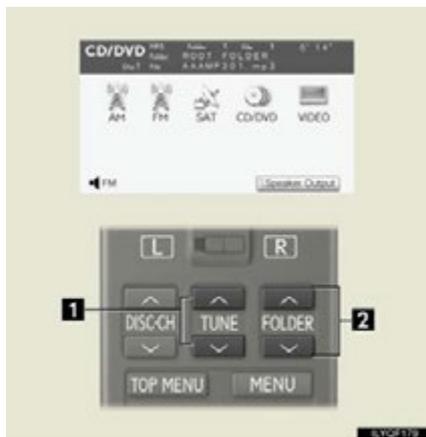

- 1 Selecting a file
- 2 Selecting a folder


■ Selecting a file

Push “^” or “v” of “TUNE” until the desired file number appears on the screen.

■ Selecting a folder

Push “^” or “v” of “FOLDER” until the desired folder number appears on the screen.

■ DVD video/audio

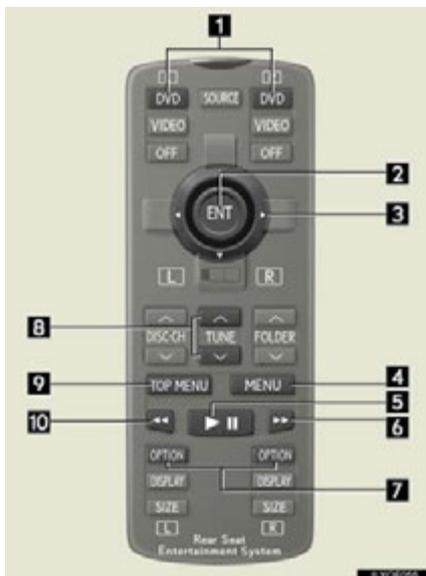

- 1 Turning on the DVD mode
- 2 Inputting the selected icon
- 3 Selecting an icon
- 4 Turning on the menu screen
- 5 Playing/pausing a disc
- 6 Fast forwarding a disc
- 7 Turning on the control icon screen
- 8 Push to select a chapter/track
Push and hold to fast forwarding or
rewinding a chapter/track
- 9 Turning on the title selection screen
- 10 Rewinding a disc

■ Video mode




Press "VIDEO" to select the video mode.

Before switching to the video mode, connect the audio-video equipment to the A/V input adapter.

Front Air Conditioning System (With Navigation System)

Vehicles without a rear automatic air conditioning system

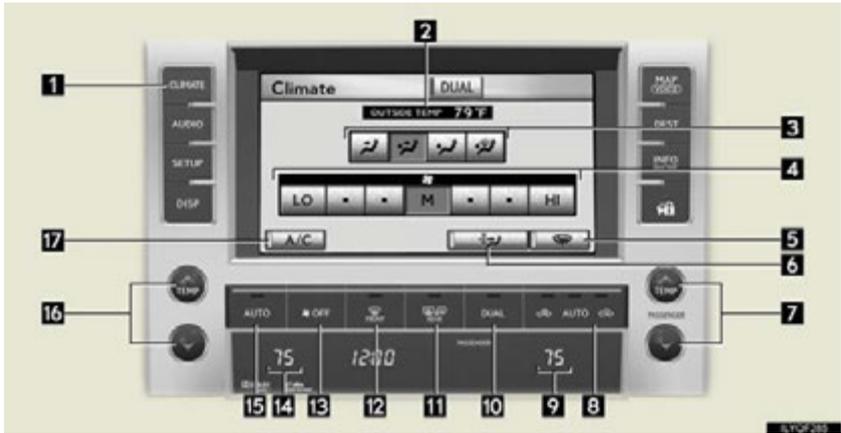

- | | |
|--|---|
| 1 "CLIMATE" button | 10 "DUAL" |
| 2 Outside temperature display | 11 Rear window defogger button |
| 3 Air flow control buttons | 12 Windshield air flow button |
| 4 Fan speed control buttons | 13 "OFF" button |
| 5 Windshield wiper de-icer button | 14 Driver side temperature display |
| 6 Micro dust and pollen filter button | 15 "AUTO" buttons |
| 7 "PASSENGER TEMP" button | 16 "TEMP" buttons |
| 8 Air intake control button | 17 "A/C" |
| 9 Passenger side temperature display | |

■ Using the automatic mode

Press **15** to turn on the airflow and **16** to adjust the temperature.

■ Adjusting the temperature


■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press **10** to turn the "DUAL" indicator off and then press **16**.

■ To individually adjust the driver's side and passenger's side temperature settings

Press **10** or **7** to turn the "DUAL" indicator on and then press **16** or **7**.

Vehicles with a rear automatic air conditioning system

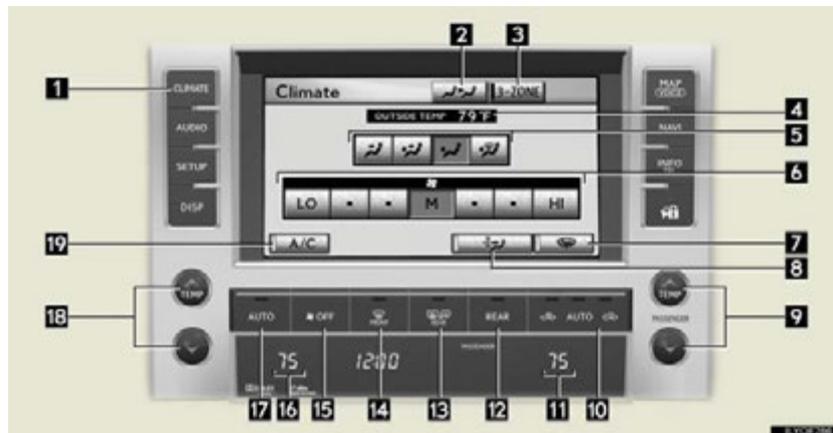

- | | |
|--|--|
| 1 "CLIMATE" button | 10 Air intake control button |
| 2 Rear air conditioning control touch-screen button | 11 Passenger side temperature display |
| 3 "3-ZONE" | 12 "REAR" button |
| 4 Outside temperature display | 13 Rear window defogger button |
| 5 Air flow control buttons | 14 Windshield air flow button |
| 6 Fan speed control buttons | 15 "OFF" button |
| 7 Windshield wiper de-icer button | 16 Drive side temperature display |
| 8 Micro dust and pollen filter button | 17 "AUTO" button |
| 9 "PASSENGER TEMP" buttons | 18 "TEMP" button |
| | 19 "A/C" |

■ Using the automatic mode

Press **17** to turn on the air flow and **18** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side, passenger's side and rear seats temperature settings

Touch **3** on the operation screen if its indicator is on and then press **18**.


■ To individually adjust the driver's side, passenger's side and rear seats temperature settings

Touch **3** on the operation screen if its indicator is off and then press **18** and **9**. To adjust the temperature for the rear seats, see below.

Rear Air Conditioning System (With Navigation System)

Refer to Rear Air Conditioning System (Without Navigation System) about rear controller operation. (→P. 75)

■ Front controller (touch screen)

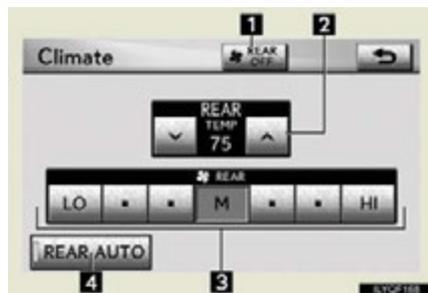

To display the rear air conditioning operation screen, touch the  on the operation screen.

- 1** "REAR OFF" button
- 2** Temperature control
- 3** Fan speed control
- 4** "REAR AUTO" button

Hands-free System For Cellular Phone (Without Navigation System)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1] Press  or .
- 2] Press  and say "Pair phone".
- 3] Press  and say a name*.

*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

- 4] Press  and say "Confirm" to display the passkey.
- 5] Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6] Once the voice guidance for registration completion is finished, press .



: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".



- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".




: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial



1 Press  .

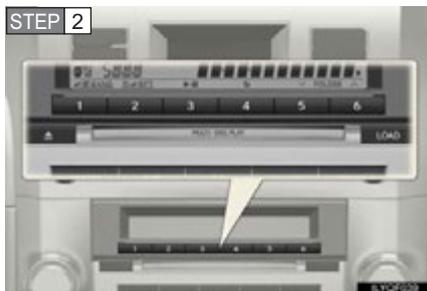

2 Press the desired preset button.

3 Press  .

■ Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Changing the registered name




- 1] Press .
- 2] Press  and say "Phone book".
- 3] Press  and say "Change name".
- 4] Press  and say the desired name.
- 5] Press  and say "Confirm".
- 6] Press  and say the new name.
- 7] Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Registering a speed dial

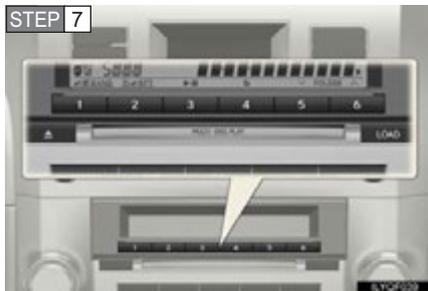


- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.


Audio System (Without Navigation System)

Basic operation

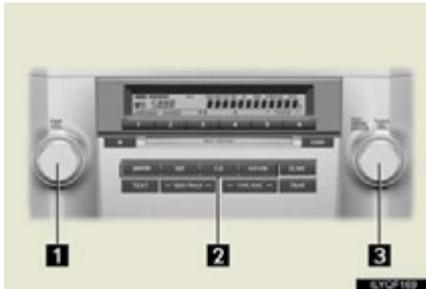

- 1 Power/Volume
- 2 Audio sources
 - AM•FM: AM radio/FM radio
 - SAT: Satellite radio
 - CD: CD player
 - AUX•USB: Auxiliary audio device/USB memory /iPod/Bluetooth® audio
- 3 Sound quality modes

Radio

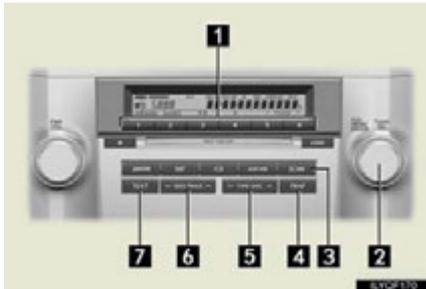


- 1 Station presets
- 2 Radio tune
- 3 Scanning radio stations
- 4 Traffic information
- 5 RDS genre select
- 6 Seek
- 7 Text messages

Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.


■ CD player

■ Playing an audio CD

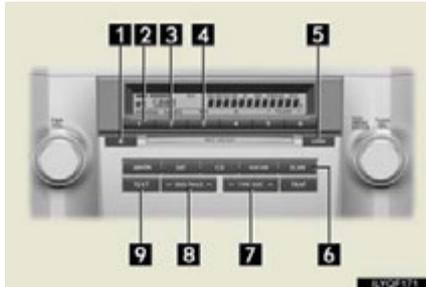

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Disc load
- 6 Search playback
- 7 Disc select
- 8 Track select/rewind/fast-forward
- 9 Text information

■ Playing a CD with MP3/WMA files

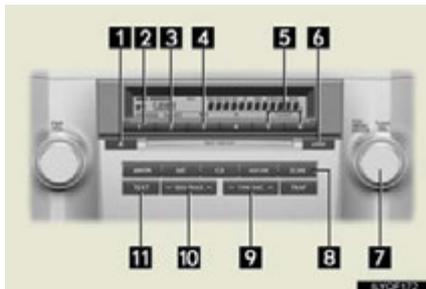

- 1 Eject
- 2 Random playback
- 3 Repeat play
- 4 Pause/Playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Search playback
- 9 Disc select
- 10 File select/rewind/fast-forwarding
- 11 Text information


■ Loading a CD

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.
The display changes from "WAIT" to "LOAD".
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.

■ Operating an iPod

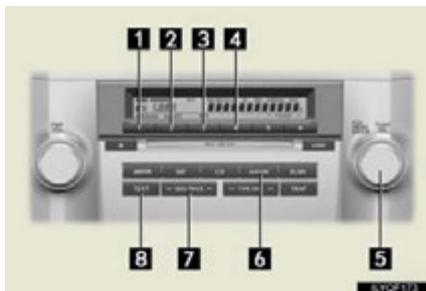

- 1 Shuffle playback
- 2 Repeat play
- 3 Pause/Playback
- 4 Go back
- 5 Menu/Track select
- 6 Playback
- 7 Track select/rewind/fast-forward
- 8 Text information

■ Remote control (steering wheel switches)


The audio system can be operated using the remote control located on the steering wheel.



- 1 Volume
- 2 Radio mode: radio tuner
CD mode: disc/track/file (MP3/WMA) select
iPod mode: track select
- 3 Power on/change mode: press
Power off: press and hold

Front Air Conditioning System (Without Navigation System)

Vehicles without a rear automatic air conditioning system

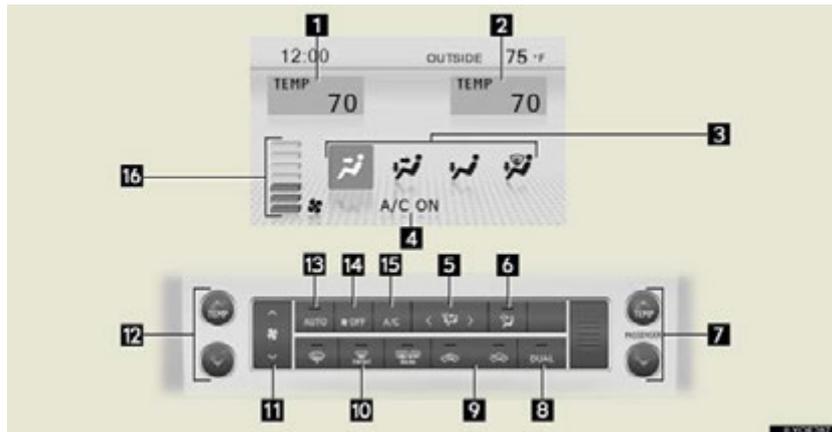

- | | |
|---|--|
| 1 Driver's side temperature display | 8 Dual mode button |
| 2 Passenger's side temperature display | 9 Outside/recirculated air mode button |
| 3 Air outlet display | 10 Windshield defogger button |
| 4 Cooling and dehumidification function on/off display | 11 Fan speed control button |
| 5 Air outlet selector button | 12 Driver's side temperature control button |
| 6 Micro dust and pollen filter mode button | 13 Automatic mode button |
| 7 Passenger's side temperature control button | 14 Off button |
| | 15 Cooling and dehumidification function on/off display |
| | 16 Fan speed display |


■ Using the automatic mode

Press **13** to turn on the air flow and **12** to adjust the temperature.

■ Adjusting the temperature

- **To simultaneously adjust the driver's side and passenger's side temperature settings**
Press **8** to turn the "DUAL" indicator off and then press **12**.
- **To individually adjust the driver's side and passenger's side temperature settings**
Press **8** or **7** to turn the "DUAL" indicator on and then press **12** or **7**.

Vehicles with a rear automatic air conditioning system

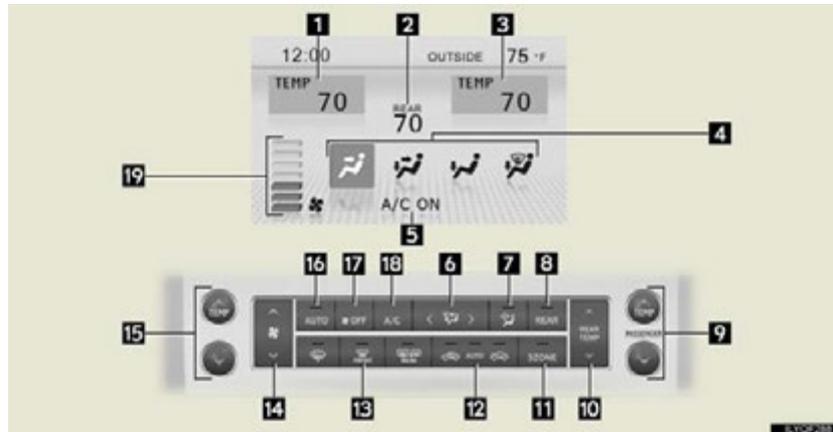

- | | |
|---|---|
| 1 Driver's side temperature display | 10 Rear passenger's side temperature control button |
| 2 Rear passenger's side temperature display | 11 3 zone mode button |
| 3 Front passenger's side temperature display | 12 Outside/recirculated air mode button |
| 4 Air outlet display | 13 Windshield defogger button |
| 5 Cooling and dehumidification function on/off display | 14 Fan speed control button |
| 6 Air outlet selector button | 15 Driver's side temperature control button |
| 7 Micro dust and pollen filter mode button | 16 Automatic mode button |
| 8 Rear automatic air conditioning on/off button | 17 Off button |
| 9 Front passenger's side temperature control button | 18 Cooling and dehumidification function on/off button |
| | 19 Fan speed display |

■ Using the automatic mode

Press **16** to turn on the air flow and **15** to adjust the temperature.

■ Adjusting the temperature


■ To simultaneously adjust the driver's side, passenger's side and rear seats temperature settings

Press **11** to turn the "3ZONE" indicator off and then press **15**.

■ To individually adjust the driver's side, passenger's side and rear seats temperature settings

Press **11**, **9** or **10** to turn the "3ZONE" indicator on and then press **15**, **9** or **10**.

Rear Air Conditioning System (Without Navigation System)

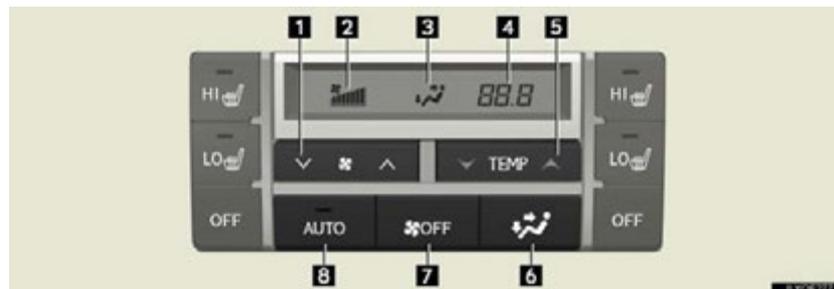

- | | |
|-----------------------------------|-------------------------------------|
| 1 Fan speed control button | 5 Temperature control button |
| 2 Fan speed display | 6 Air outlet selector button |
| 3 Air outlet display | 7 Off button |
| 4 Temperature display | 8 Automatic mode button |

■ Using the automatic mode

Press **8** to turn on the air flow and **5** to adjust the temperature.

Voice Command System

NOTE: When inputting voice commands you must wait until after the beep to speak.

Basic operation



- 1 Press  on the steering wheel.
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the
command and then press  again.
- 3 Say a command after the beep.

Continue on to pages 77-79 for a detailed list of Voice Commands for the following categories:

PHONE	page 78
GENERAL NAVIGATION COMMANDS.....	page 77
AUDIO	page 79
CLIMATE CONTROL/AIR CONDITIONING.....	page 79

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

■ Command list

With navigation system

GENERAL NAVIGATION COMMANDS	
To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
	"North Up"
	"Heading Up"
To Change the Map Orientation, SAY:	"Map Direction"
	"Right Map North Up"
	"Right Map Heading Up"
To Change the Guidance Mode, SAY:	"Right Map Direction"
	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
To Save a Point on the Map, SAY:	"Freeway Mode"
	"Mark This Point"
	"Clear All Icons"
To Remove Icons from Map, SAY:	"Previous Start Point"
To Set the Destination, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

GENERAL NAVIGATION COMMANDS	
To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Delete Next Destination"
	"Delete Final Destination"
	"Delete All Destinations"
To Operate Guidance Options, SAY:	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
	"Louder"
To Operate the Traffic Information, SAY:	"Softer"
	"Traffic Information"
To Show the Icon, SAY:	"Show GAS", "Show PARKING" ETC.


PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial By Number"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial By Name"	
		"Select Phone"	

AUDIO	
To Turn Audio On or Off, SAY:	"Audio ON"
	"Audio OFF"
To Change the Audio Mode, SAY:	FM, FM (1, 2, 3), AM, Radio, Satellite Radio, Satellite Radio (1, 2, 3), Auxiliary, CD, CD Changer, DVD, DVD Changer, Bluetooth® Audio, iPod, USB Audio
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"
	"Type Up" or "Type Down"


CLIMATE CONTROL/AIR CONDITIONING	
To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

Portable Audio Device Port

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.

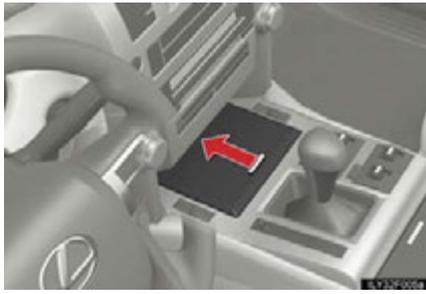

1 Slide the auxiliary box lid.

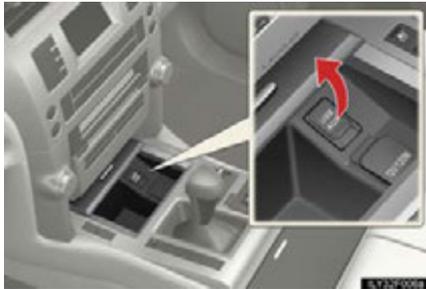


2 Open the cover and connect a USB memory or portable audio device.
Turn on the power of the USB memory if it is not turned on.

Safety Connect (If Equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

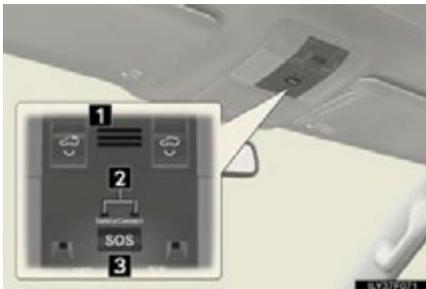

- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Roadside Assistance**

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

- **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

With an active Lexus Enform subscription, the following features are available:

● **Safety Connect features (→P. 81)**

- Automatic collision notification*¹
- Stolen vehicle location
- Emergency assistance button (SOS)
- Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

- **XM[®] Sports and Stocks*²**

XM[®] Sports and Stocks is a service included with XM[®] satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM NavWeatherTM*³**

The subscription-based XM NavWeatherTM service allows the navigation system to display weather information on the map.

- **XM[®] NavTraffic*³**

The subscription-based XM[®] NavTraffic service allows the navigation system to display traffic information on the map.

The following navigation-based Lexus Enform features are available without a subscription:

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

- **Voice Command**

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

*¹: U.S. Patent No. 7,508,298 B2

*²: Available at no extra charge with an active XM[®] satellite radio subscription.

*³: Available via separate XM[®] subscription(s).

■ **Subscription**


After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM[®] NavTraffic and XM NavWeatherTM require separate XM[®] subscription(s). XM[®] Sports and Stocks is available with an XM[®] Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM[®] subscription(s) to continue receiving these services.

Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control, key or door lock switch.


For details the entry function or wireless remote control (→P:10, 11)

Door lock switches

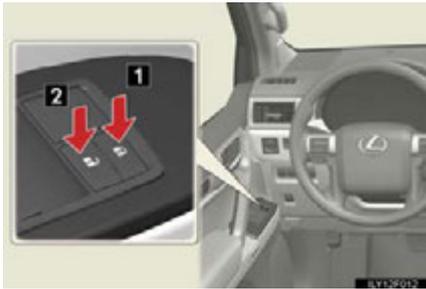

- 1 Locks all the doors
- 2 Unlocks all the doors

Inside lock button

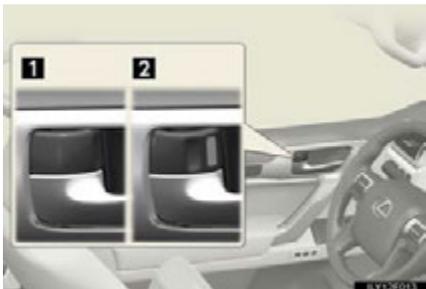

- 1 Locks the door
 - 2 Unlocks the door
- The front doors can be opened by pulling the inside handles even if the lock buttons are in the lock position.

■ Rear door child-protector lock



The door cannot be opened from inside the vehicle when the lock is set.


1 Unlock

2 Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

■ Power Windows

■ Power window switches

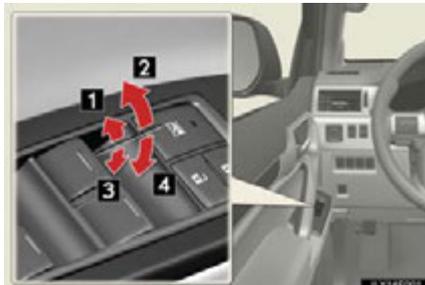

1 Closing

2 One-touch closing*

3 Opening

4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.

■ Window lock switch



Press the switch down to lock the passenger window switches.


The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the power window switches on the driver's side even if the lock switch is on.

Moon Roof


Opening and closing

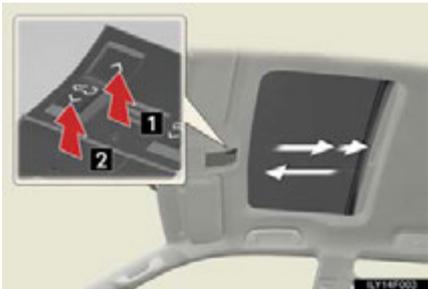

1 Opens the moon roof*
The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open the moon roof.

2 Closes the moon roof*
*: Lightly press either of the moon roof switches to stop the moon roof partway.

Tilting up and down

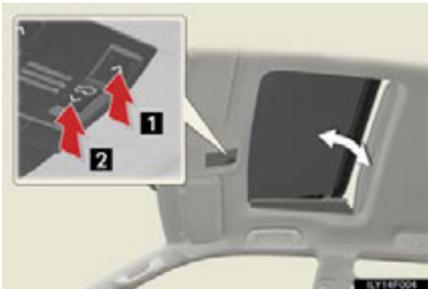

1 Tilts the moon roof up*
2 Tilts the moon roof down*
*: Lightly press either of the moon roof switches to stop the moon roof partway.

Fuel Tank Cap

■ Before refueling the vehicle

Turn the "ENGINE START STOP" switch off and ensure that all the doors and windows are closed.

■ Opening the fuel tank cap



1 Press the opener to open the fuel filler door.



2 Turn the fuel tank cap slowly to open.



3 Hang the fuel tank cap on the back of the fuel filler door.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE (U.S.A.) Brake system warning light
 (Canada) 

Stop the vehicle immediately.

 Charging system warning light

Have the vehicle inspected immediately.

 **CHECK** (U.S.A.)
 Malfunction indicator lamp
 (Canada)

 (Blinking and then continuously on) Tire pressure warning light

AFS OFF (Flashing) "AFS OFF" indicator*¹

 SRS warning light

 **AUTO** (Flashing) Automatic High Beam indicator*¹

ABS (U.S.A.)
 ABS warning light

LDA (Flashing) "LDA" indicator light*¹

 (Canada)

 (Flashing) Cruise control indicator*¹

 Slip indicator light
 (Comes on)

 (Flashing) Dynamic radar cruise control indicator*¹

PCS (Flashing) "PCS" warning light*¹

 (Flashing) Multi-terrain Select indicator*¹

KDSS Kinetic dynamic suspension system warning light

For further information, refer to the Owner's Manual.

What to do if ...

Have the vehicle inspected immediately.



Low speed four-wheel drive indicator*³



Center differential lock indicator*³

Have the malfunction repaired immediately.



Open door warning light



Front passenger's seat belt reminder light



Low fuel level warning light



Master warning light



(On the instrument panel)

Driver's seat belt reminder light



(Illuminates without blinking)

Tire pressure warning light*²

See the Owner's Manual



Turn signal indicator



VSC OFF indicator



Headlight high beam indicator



Multi-terrain Select indicator*¹



Headlight indicator (U.S.A.)



Crawl Control indicator*¹



Tail light indicator (Canada)



Downhill assist control system indicator*¹



Automatic High Beam indicator*¹



"2nd STRT" indicator



Fog light indicator



Low speed four-wheel drive indicator



Eco Driving Indicator Light



Center differential lock indicator

For further information, refer to the Owner's Manual.

What to do if ...

See the Owner's Manual



Cruise control indicator*¹
(Comes on)

SET

"SET" indicator*¹



Dynamic radar cruise control
indicator*¹
(Comes on)

LDA

"LDA" indicator*¹
(Comes on)



Slip indicator
(Flashing)

**AIR BAG
OFF ON**
(On the cen-
ter panel)

"AIR BAG ON" and "AIR
BAG OFF" indicators

P

Intuitive parking assist
indicator*¹

**AFS
OFF**

"AFS OFF" indicator*¹

**RSCA
OFF**

"RSCA OFF" indicator

PCS

"PCS" warning light*¹
(Comes on or
flashes faster)

For further information, refer to the Owner's Manual.

*¹: If equipped


*²: Turns on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature including the spare tire. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

*³: Indicates a malfunction if the light continues flashing.

What to do if ...

If the electronic key does not operate properly

■ Unlocking and locking the doors

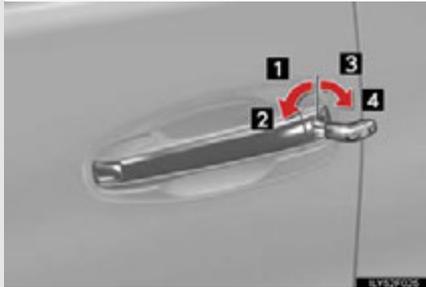

Use the mechanical key (→P.10) in order to perform the following operations (driver's door only):

- 1** Locks all the doors
- 2** Closes the windows and moon roof (turn and hold)*
- 3** Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- 4** Opens the windows and moon roof (turn and hold)*

*: This setting must be customized at your Lexus dealer.

■ Starting the engine



- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the "ENGINE START STOP" switch.
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3** Press the "ENGINE START STOP" switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the "ENGINE START STOP" switch still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if ...

If the engine does not start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.14)

Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the "ENGINE START STOP" switch. (→P.13)

If the engine still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2012 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.