

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

- 12.3-inch Display**
- Full screen display ..... 41
- Split-screen display ..... 41
- Display the side display ..... 41
- Characteristics of the split-screen display ..... 42
- 4-Wheel AHC (Active Height Control Suspension) ..... 31**
- Active TRAC Off Mode ..... 38**
- AHB (Automatic High Beam) ..... 16**
- Audio System\***
- Audio control screen ..... 51
- Side Display ..... 51
- Remote control (steering wheel audio switches) ..... 52
- Basic operation ..... 53
- Radio ..... 53
- DVD player/CD player ..... 54
- Operating an iPod ..... 55
- BSM (Blind Spot Monitor) ..... 37**
- Crawl Control (with Turn Assist function) ..... 33**
- Cruise Control ..... 27**
- Driving Mode Select Switch ..... 29**

\*: This feature may be operated by Voice command (See P.62)

<b>Dynamic Radar Cruise Control with full-speed range</b> .....	23
<b>Floor mat installation</b> .....	11
<b>Four-wheel Drive System</b> .....	32
<b>Front Automatic Air Conditioning System*</b>	
Control panel .....	58
Main display .....	59
Changing the air flow mode.....	59
Side display.....	60
Option control screen .....	60
Using the automatic mode.....	61
Adjusting the temperature for driver and passenger seats separately ("4-ZONE" mode) .....	61
<b>Garage Door Opener</b> .....	67
<b>Hands-free System (For Cellular Phone)*</b>	
Bluetooth® phone pairing .....	47
Contact transfer .....	48
Registering favorites list .....	49
Calling by name.....	49
Calling by favorites list.....	50
Calling the message sender .....	50
Receiving a call .....	50
Steering switches.....	51

\*: This feature may be operated by Voice command (See P.62)


<b>Intuitive Parking Assist</b> .....	30
<b>LDA (Lane Departure Alert)</b> .....	22
<b>Lexus Climate Concierge</b> .....	57
<b>Lexus Enform</b> .....	72
<b>LEXUS Enform Safety Connect</b> .....	70
<b>Multi-information Display</b> .....	14
<b>Multi-terrain Monitor</b> .....	36
<b>Multi-terrain Select</b> .....	35
<b>Navigation System*</b>	
Register home .....	43
Destination search .....	44
<b>Portable Audio Device Ports</b> .....	67
<b>Rear Air Conditioning System</b>	
Front controller.....	61
<b>Rear Window Wiper and Washer</b> .....	20
<b>Remote Touch</b>	
Basic operation.....	39
Menu.....	40
Display.....	40
Screen scroll operation.....	40
<b>Roll Sensing of Curtain Shield Airbags Off Switch</b> .....	12
<b>Second Start Mode Switch</b> .....	12


\*: This feature may be operated by Voice command (See P.62)

<b>Tire Pressure Warning Reset Switch</b> .....	38
<b>Turn Signal Lever</b> .....	13
<b>Voice Command System</b>	
Basic operation .....	62
Command list .....	63
<b>Windshield Wipers and Washer</b> .....	18
<b>XM Satellite Radio</b> .....	74

## Overview


## Instrument Panel

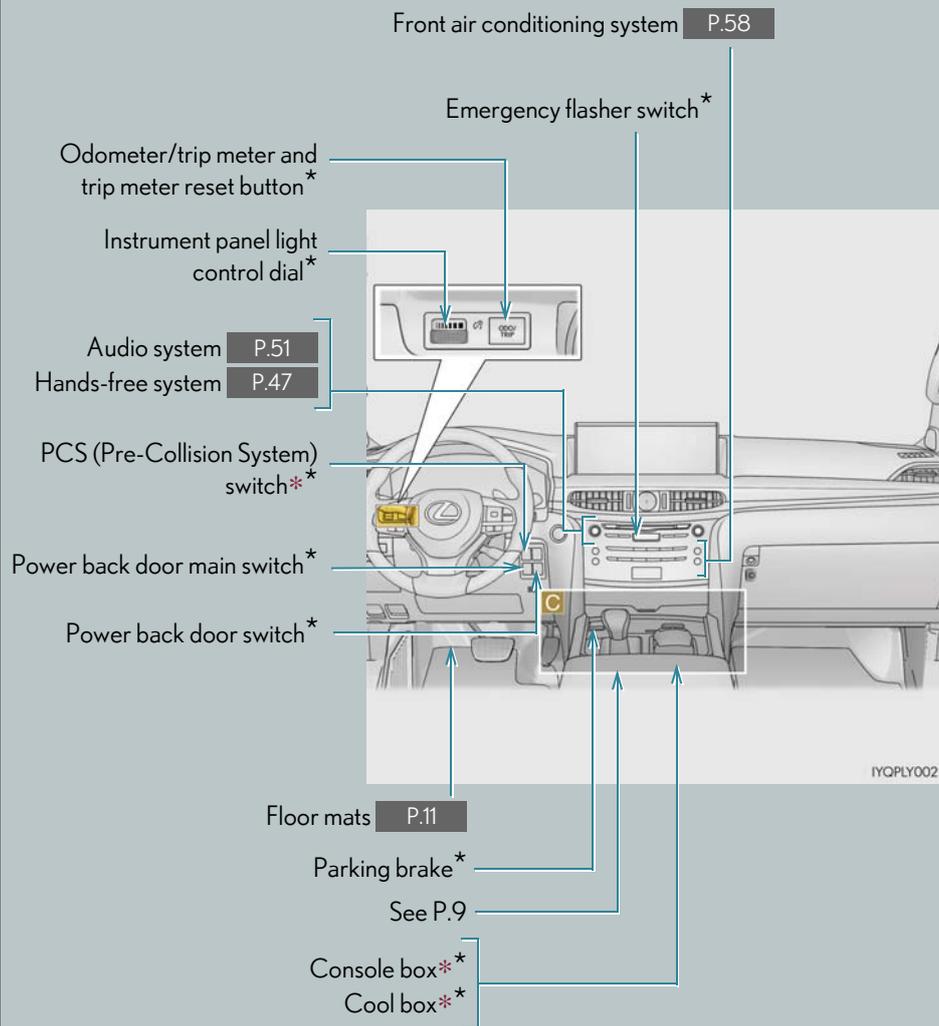

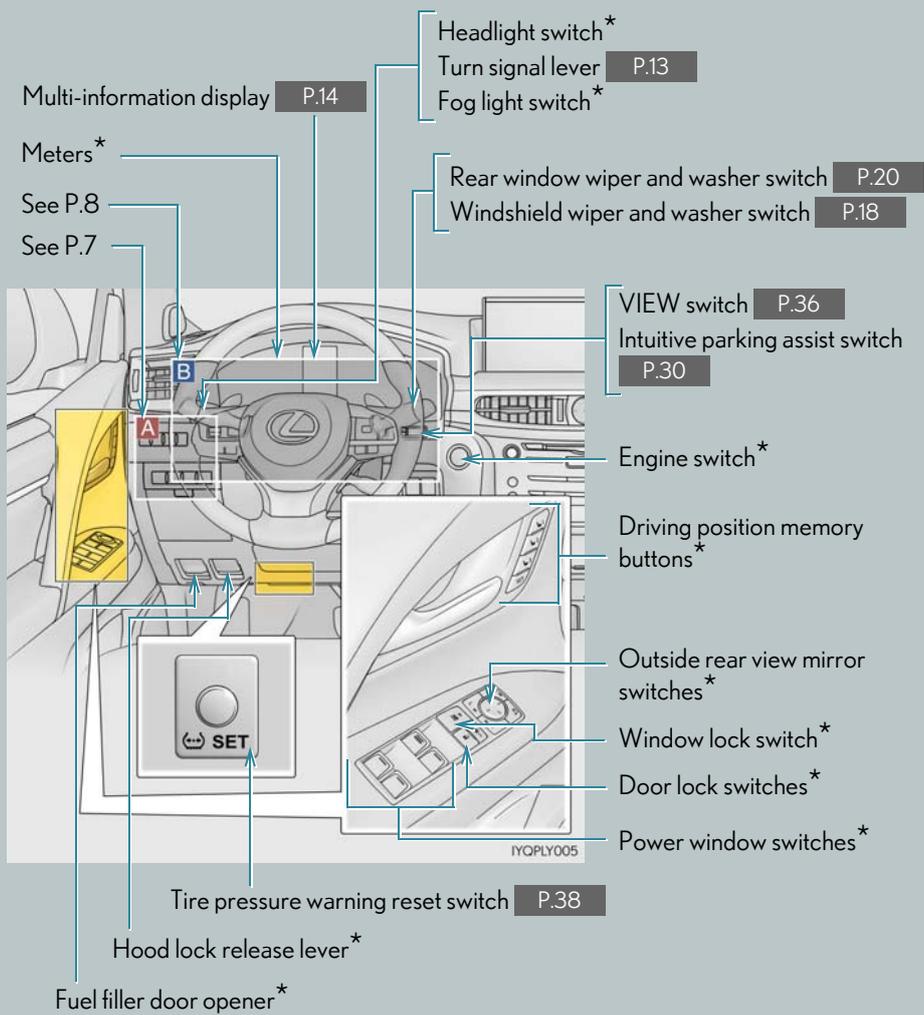

\* : If equipped  
 \*: Refer to "OWNER'S MANUAL".

A

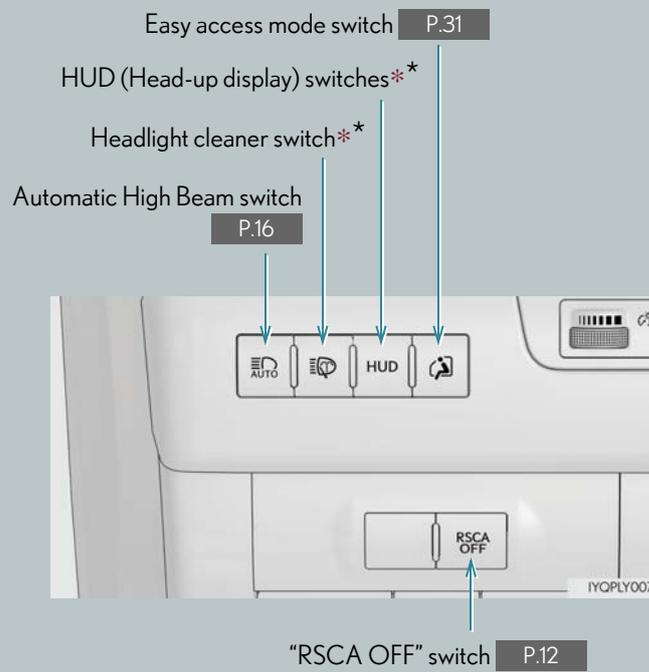


B

Audio remote control switches P.52

Meter control switches P.15

Paddle shift switches\*\*

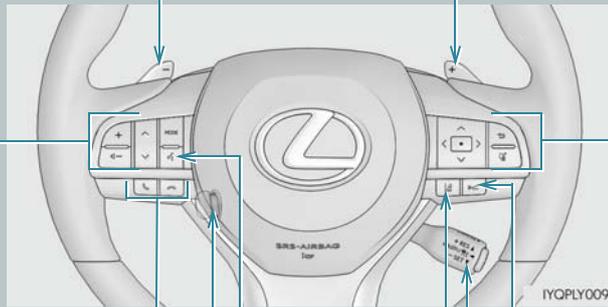

Telephone switches P.51

Talk switch P.51

Tilt and telescopic steering control switch\*

LDA (Lane Departure Alert) switch\*\* P.22

Cruise control switch P.23, 27

Vehicle-to-vehicle distance button\*\* P.23


\* : If equipped

\*\* : Refer to "OWNER'S MANUAL".

## Overview


## Instrument Panel

C

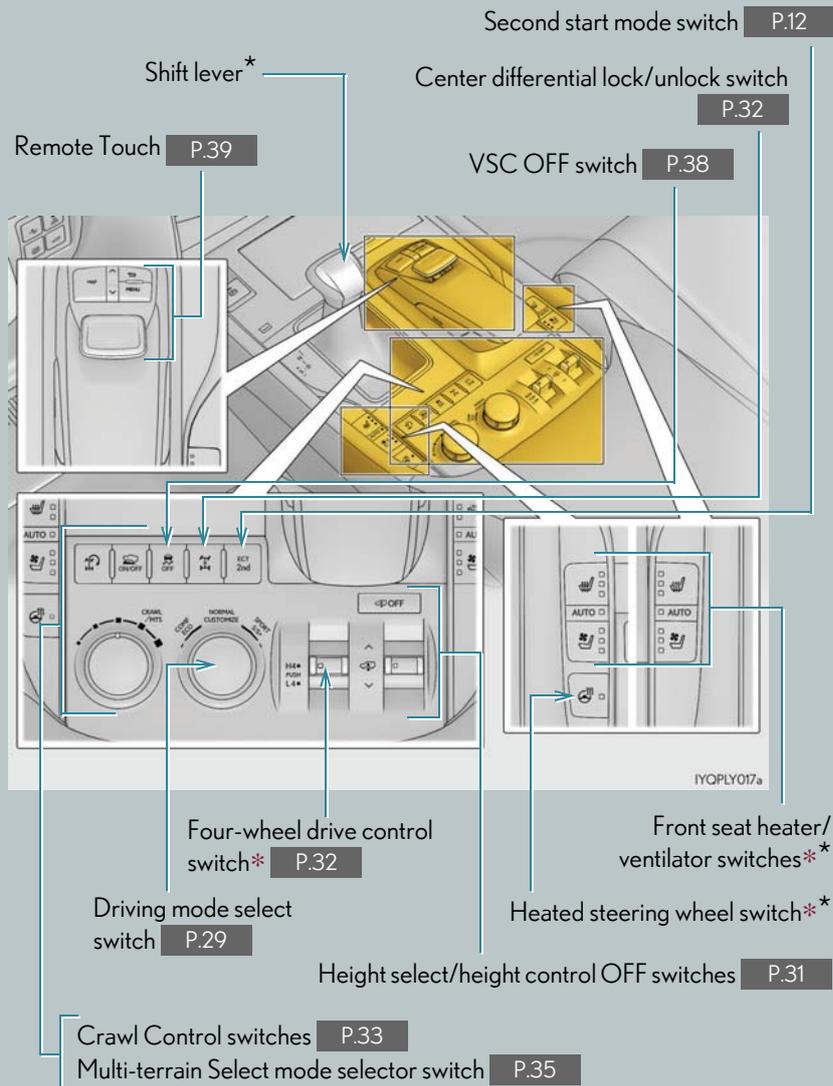

## Overview

## Roof

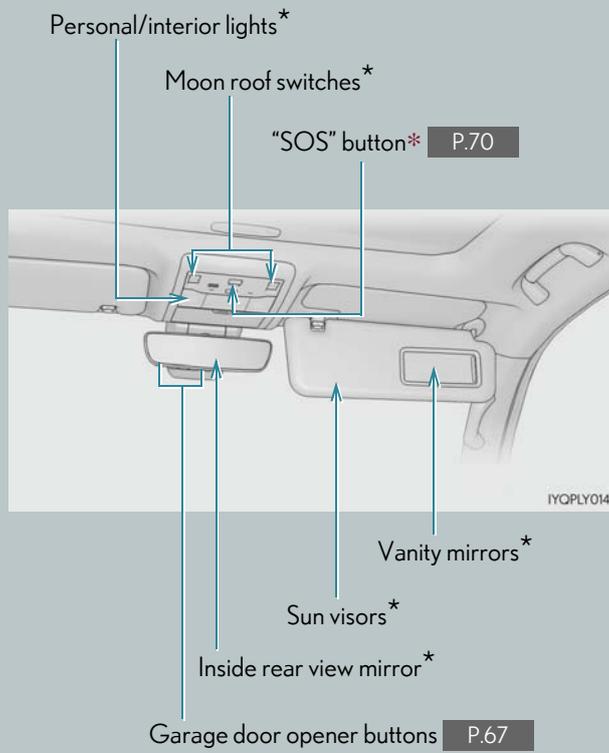


\* : If equipped


\* : Refer to "OWNER'S MANUAL".

## Floor mat installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

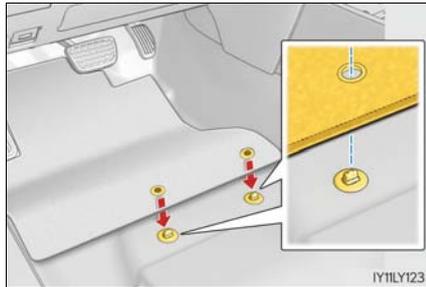

**1** Insert the retaining hooks (clips) into the floor mat eyelets.

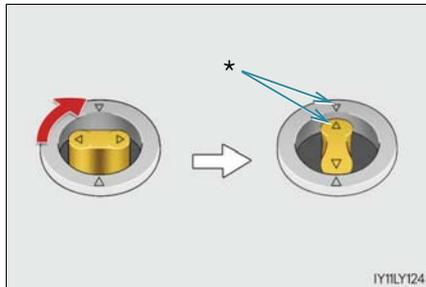

**2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Roll Sensing of Curtain Shield Airbags Off Switch

This switch can turn off the curtain shield airbags and front seat belt pretensioners in a vehicle rollover.




ON/OFF (hold for a few seconds)

The "RSCA OFF" indicator turns on (only when the engine switch is in IGNITION ON mode.)

The roll sensing function for the curtain shield airbags and seat belt pretensioners will turn back on automatically each time the engine switch is turned to IGNITION ON mode.


## Second Start Mode Switch

Use second start mode for accelerating and driving on slippery road surfaces such as snow.

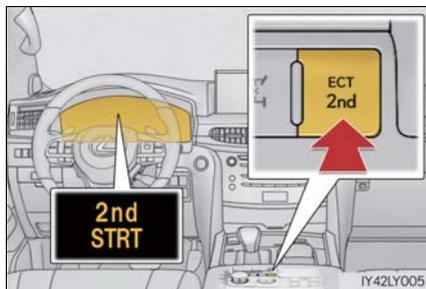

Press the button to use second start mode.  
Press the button again to cancel second start mode.

## Turn Signal Lever

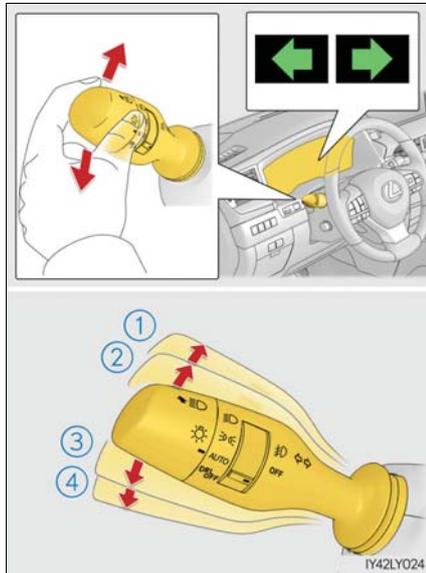

- ① Right turn
- ② Lane change to the right (move the lever partway and then release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and then release it)  
The left hand signals will flash 3 times.
- ④ Left turn

### ■ Customization

The number of times the turn signals flash during a lane change can be changed.

## Multi-information Display


The following information will be displayed when a menu icon is selected.

### ■ Display information

-  Drive information  
Select to display various drive data.
-  Vehicle information display (if equipped)  
Select to display the vehicle information.
-  Navigation system-linked display  
Select to display the following navigation system-linked information.
  - Route guidance
  - Compass display (north-up display/heading-up display)
-  Audio system-linked display  
Select to enable selection of an audio source or track on the display using the meter control switches.
-  Driving assist system information (if equipped)  
Select to display the operational status of the following systems:
  - Dynamic radar cruise control with full-speed range (→P.23)  
When the vehicle is in constant speed control mode (→P.26), the menu icon will change to .
  - LDA (Lane Departure Alert) (→P.22)
-  Warning message display  
Select to display warning messages and measures to be taken if a malfunction is detected.
-  Settings display  
Select to change the meter display settings and the operation settings of some vehicle functions.

## ■ Operating the meter control switches

The multi-information display is operated using the meter control switches.

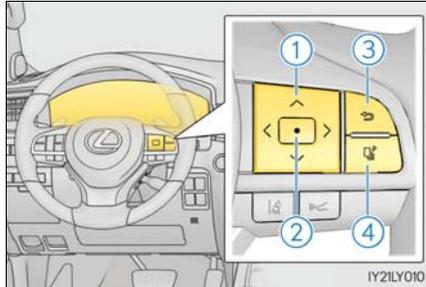

- ①   : Switch menu  
  : Change displayed content, scroll up/down the screen and move the cursor up/down
- ② Press: Enter/Set  
Press and hold: Reset
- ③ Return to the previous screen
- ④ Press: Displays the screen registered



When no screen has been registered, the drive information screen will be displayed.

Press and hold: Registers the currently displayed screen to 


When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


## AHB (Automatic High Beam)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.

### ■ Activating the Automatic High Beam system

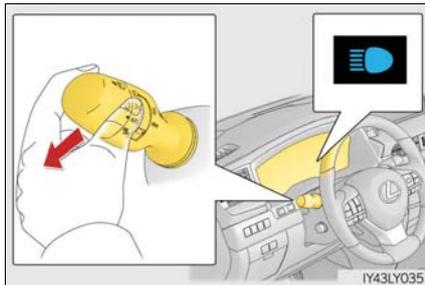


- 1** Push the lever away from you with the headlight switch in the **AUTO** or  position.

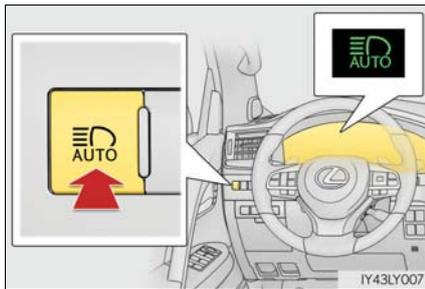

- 2** Press the Automatic High Beam switch.  
The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

## ■ Turning the high beam on/off manually

### ● Switching to low beam

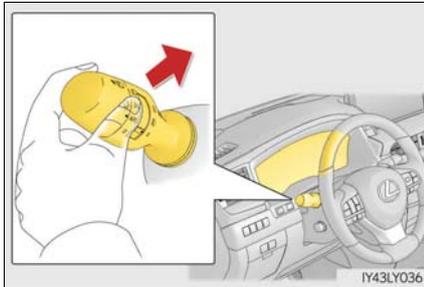


Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

### ● Switching to high beam

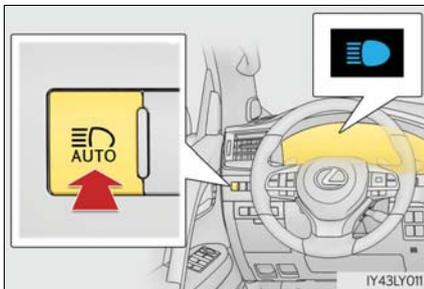




Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

## Windshield Wipers and Washer

### ► Type A

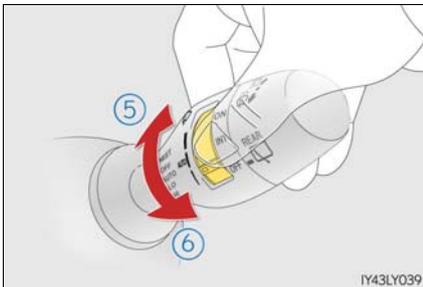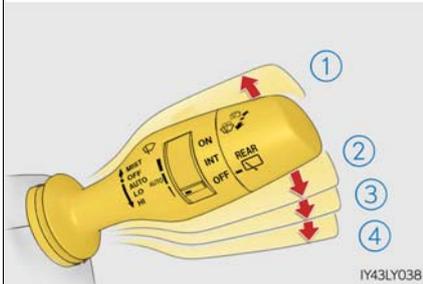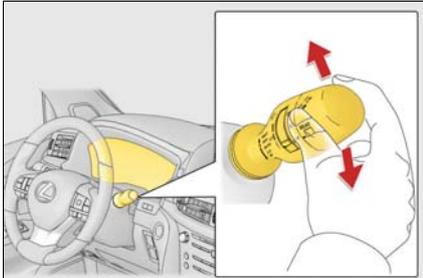

- ① Temporary operation
- ② Rain-sensing operation ("AUTO")
- ③ Low speed operation
- ④ High speed operation




When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

- ⑦ Washer/wiper dual operation  
The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)

► Type B

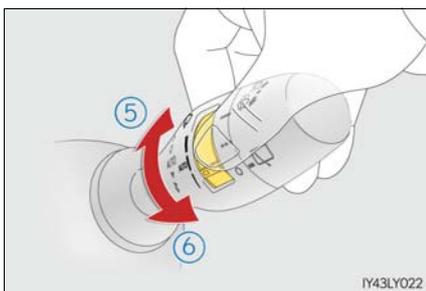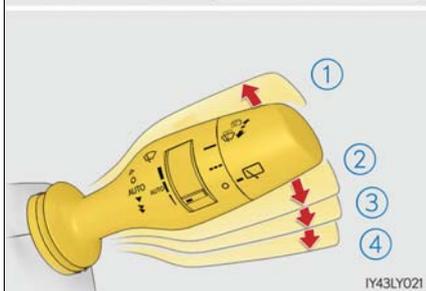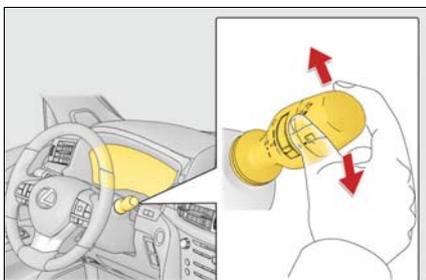

- ① Temporary operation
- ② Rain-sensing operation ("AUTO")
- ③ Low speed operation
- ④ High speed operation  
When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.


The sensor sensitivity can be adjusted when "AUTO" is selected.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity


- ⑦ Washer/wiper dual operation  
The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)

## Rear Window Wiper and Washer


### ► Type A

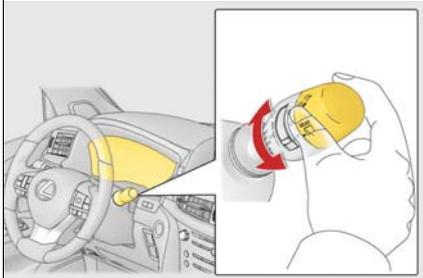



- ① Intermittent window wiper operation
- ② Normal window wiper operation

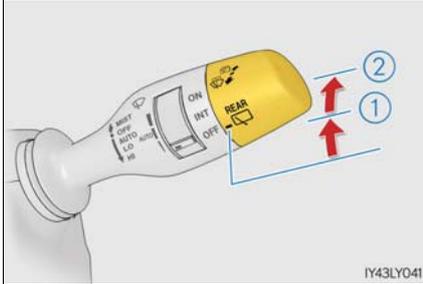

- ③ Washer/wiper dual operation

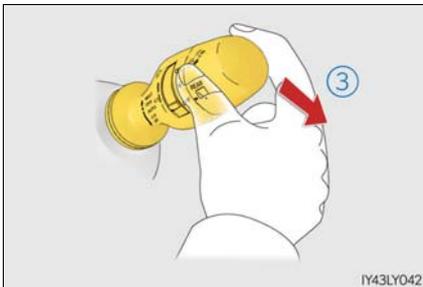

► Type B

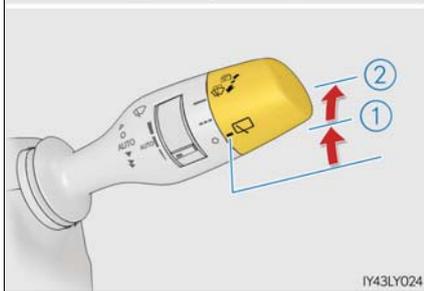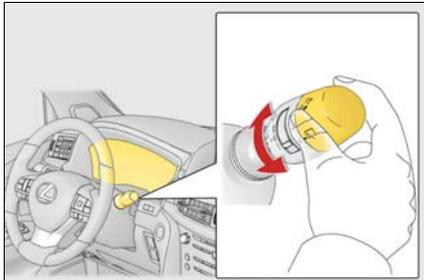

① Intermittent window wiper operation

② Normal window wiper operation


③ Washer/wiper dual operation

## LDA (Lane Departure Alert) (if equipped)

When driving on roads with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the front windshield.

### ■ Turning LDA system on

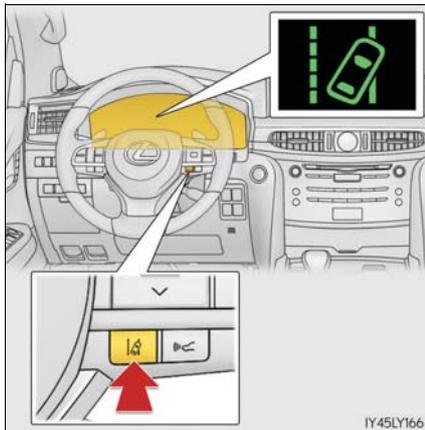

Press the LDA switch to turn the LDA system on.


The LDA indicator illuminates.

Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.


## Dynamic Radar Cruise Control with full-speed range (If equipped)

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed. Use the dynamic radar cruise control on freeways and highways.

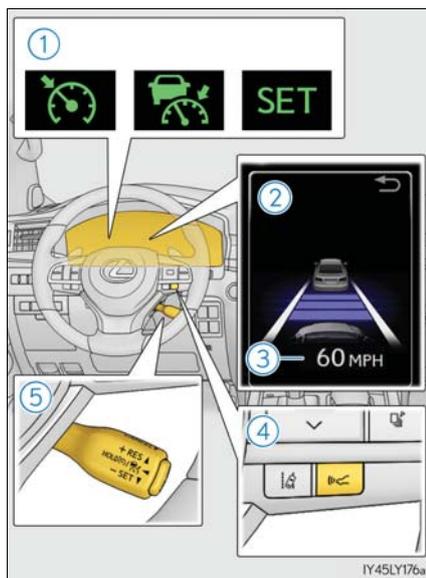

- ① Indicators
- ② Display
- ③ Set speed
- ④ Vehicle-to-vehicle distance button
- ⑤ Cruise control switch

## ■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)

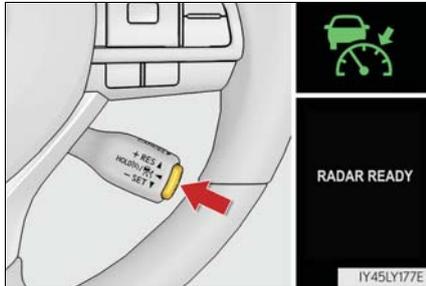


- 1 Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode.

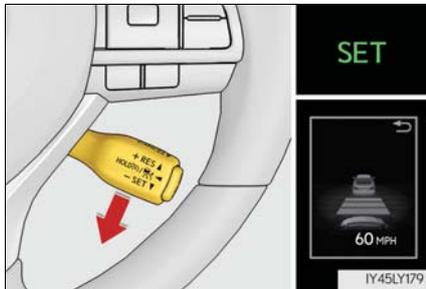


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.

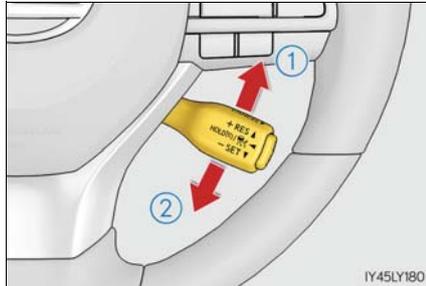


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

## ■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

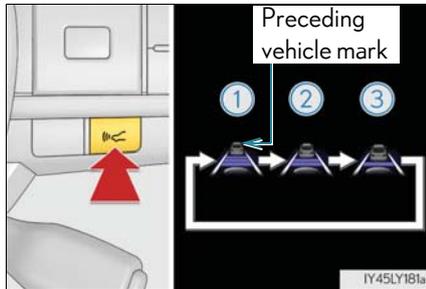

Pressing the button changes the vehicle-to-vehicle distance as follows:

① Long

② Medium

③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark is also displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.


## ■ Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)



After the vehicle ahead of you starts off, push the lever up.


Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

## ■ Canceling and resuming the speed control

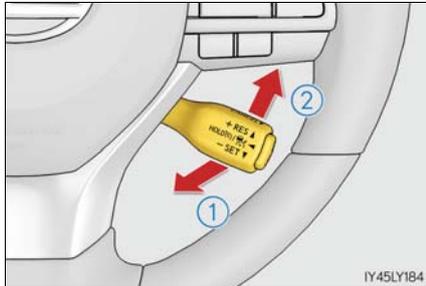


- ① Pulling the lever toward you cancels the speed control.  
The speed control is also canceled when the brake pedal is depressed.
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.  
However, when a vehicle ahead is not detected, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.

## ■ Selecting constant speed control mode

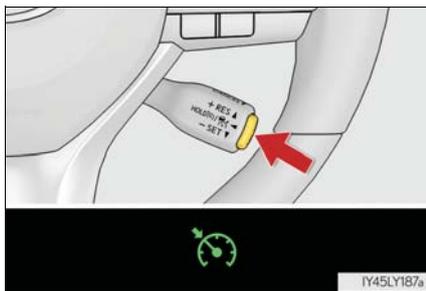


- ① With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.  
Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.  
Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

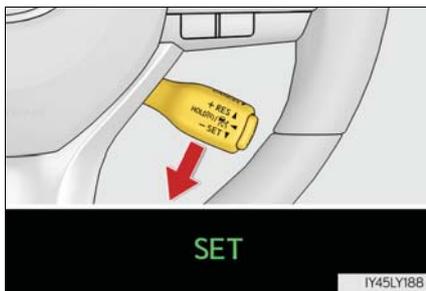

- ② Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed.  
Cruise control "SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.


## Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

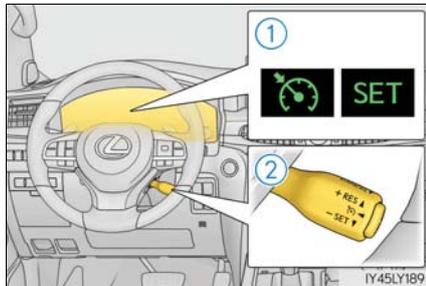


- ① Indicators
- ② Cruise control switch

### Setting the vehicle speed

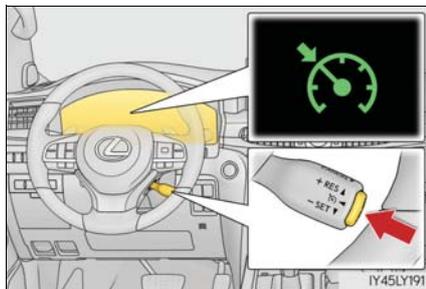


- 1** Press the "ON/OFF" button to activate the cruise control.  
Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.

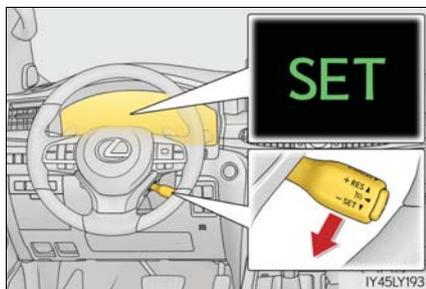


- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.  
"SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

### ■ Adjusting the set speed

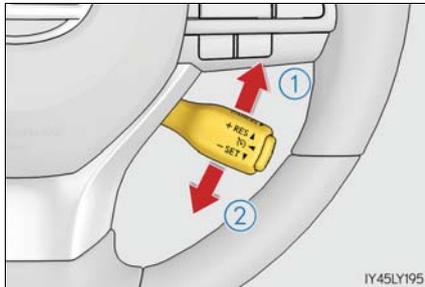

- ① Increases the speed
- ② Decreases the speed  
Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.


### ■ Canceling and resuming the constant speed control

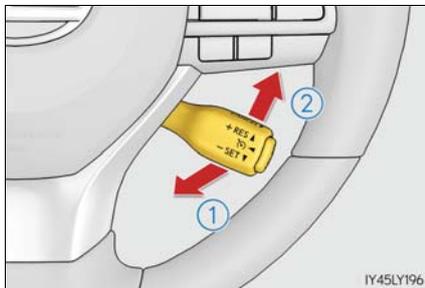

- ① Pulling the lever toward you cancels the constant speed control.  
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

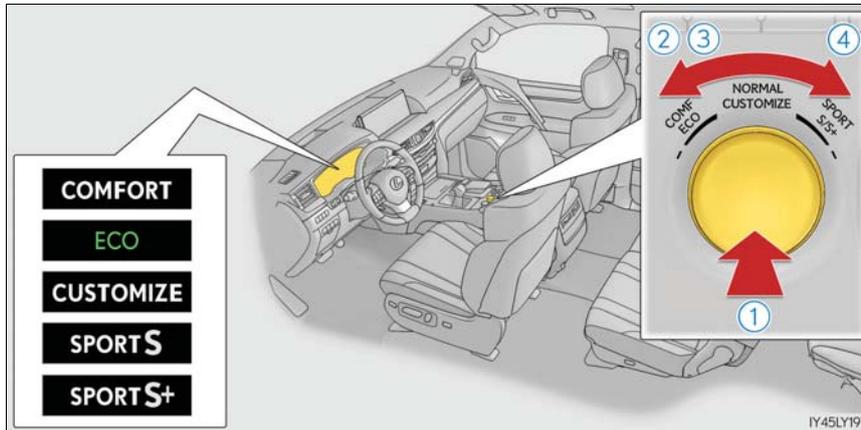

### ① Normal mode/Customized mode

Normal mode and customized mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and customized mode. When customized mode is selected, the "CUSTOMIZE" indicator will be illuminated.

Press the switch to change the driving mode to normal mode when not in normal mode.

- Normal mode  
Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.
- Customized mode  
Allows you to drive with the following functions set to your preferred settings. Customized mode settings can only be changed on the drive mode customization display of the Remote touch screen.

Function	Setting
Powertrain	Normal
	Power
	Eco
Chassis	Normal
	Sport
Air conditioning system	Normal
	Eco

② Comfort mode

By controlling the suspension, riding comfort is further enhanced. Suitable for city driving.

When not in comfort mode and the driving mode select switch is turned to the left, the "COMFORT" indicator comes on in the multi-information display.

③ Eco drive mode

Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).

When in comfort mode, if the driving mode select switch is turned to the left, the "ECO" indicator will come on in the multi-information display.

④ Sport mode

• SPORT S mode

Controls the transmission and engine to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.

When not in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S" indicator will come on in the multi-information display.

• SPORT S+ mode


Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the transmission and engine. Suitable for sportier driving.

When in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S+" indicator will come on in the multi-information display.

## Intuitive Parking Assist

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, the remote touch screen, and a buzzer.

Always check the surrounding area when using this system.

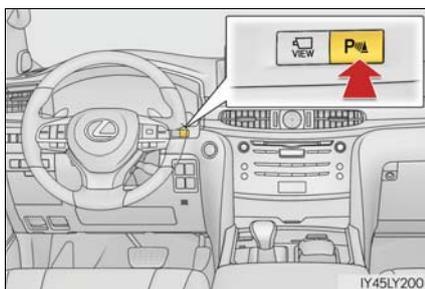

### On/off

To turn the system on, press the switch. The indicator light comes on and the buzzer sounds to inform the driver that the system is operational.

## 4-Wheel AHC (Active Height Control Suspension)

The 4-Wheel AHC adjusts the vehicle height in accordance with driving conditions. There are 3 selectable modes, "HI" (high), "N" (normal), and "LO" (low).



- ① Easy access mode switch
- ② Height control OFF switch
- ③ Height select switch

### Easy access mode



You can select this mode for easy access and easy loading of the vehicle.

If the engine switch is turned to off within 30 seconds after the vehicle stops while this mode is on, the vehicle height is lowered automatically.

Easy access mode is available if the following conditions have been met:

- The vehicle height mode is in normal mode.
- The vehicle is stopped on a flat surface.
- The shift lever is in P.
- The side door and the back door are not opened from the vehicle stopped to the engine switch is turned to off.


The following method will cancel the vehicle lowering operation and raise the vehicle again:

- Press the height control OFF switch.
- Push the height select switch to "∧".

## Four-wheel Drive System


Use the four-wheel drive control switch and center differential lock/unlock switch to select the following transfer and center differential modes.

### ► Four-wheel drive control switch

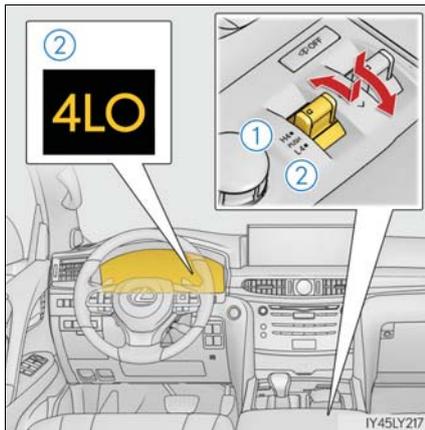

- ① H4 (high speed position)  
Normal driving on all types of roads.
- ② L4 (low speed position)  
Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.  
The low speed four-wheel drive indicator will come on.

### ► Center differential lock/unlock switch

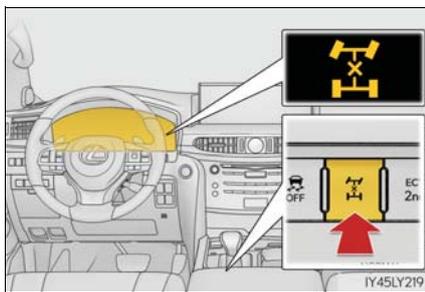

Lock the center differential when your vehicle's wheels get stuck in a ditch or when you are driving on a slippery or bumpy surface.


The center differential lock indicator will come on.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

To unlock the center differential, push the switch again.

## Crawl Control (with Turn Assist function)

Crawl Control allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.

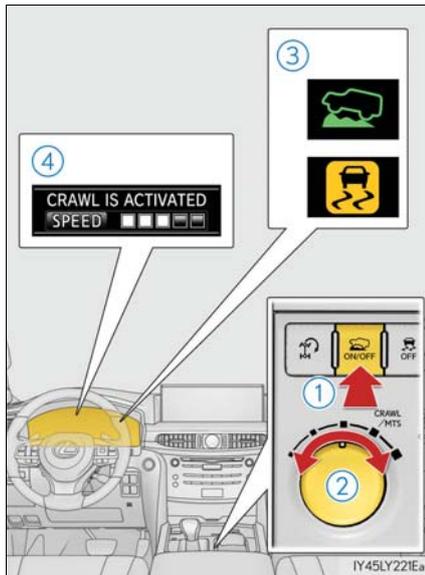

- ① ON/OFF switch
- ② Speed selection switch
- ③ Indicators  
The Crawl Control indicator is lit and the slip indicator flashes when operating.
- ④ Multi-information display  
The operating status and speed select status of the Crawl Control are shown on the multi-information display.

### Speed modes



The following table shows some typical terrains and the recommended speed modes.

Mode	Road conditions
① Lo	Rock, mogul (downhill) and gravel (downhill)
② Lo-Med	Mogul (uphill)
③ Med	Snow, mud, gravel (uphill), sand, dirt, mogul (uphill) and grass
④ Med-Hi	
⑤ Hi	

## ■ Turn Assist function

This function assists cornering performance in accordance with steering operation when driving through a tight corner. It maintains vehicle speed while driving and reduces the number of turns needed to navigate a corner that requires turning the wheel in the opposite direction.



Press the Turn Assist switch while Crawl Control is operating.


Turn Assist indicator will come on.

To turn the system off, press the switch again.

## Multi-terrain Select

Multi-terrain Select is a system that helps drivability in off-road situations.


### Multi-terrain Select switch/indicators

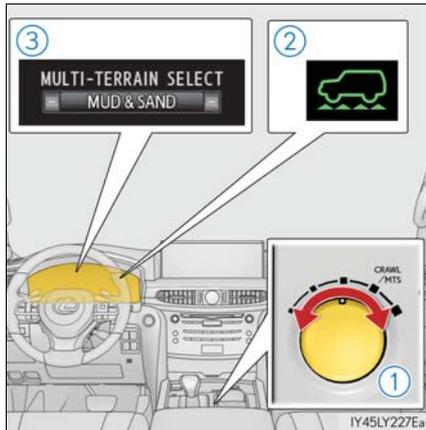

- ① Multi-terrain Select mode selector switch
- ② Multi-terrain Select indicator
- ③ Multi-information display  
Displays status information including operating status and road type selection.

### Selectable modes

When the Crawl Control is turned off, a mode which matches the road conditions can be selected from among the following 5 modes.

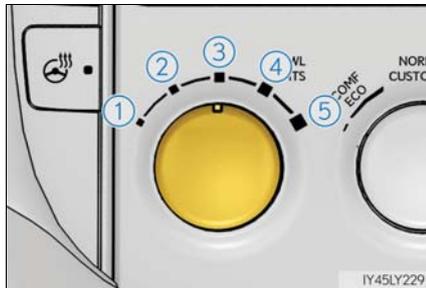


- ① MUD & SAND
- ② LOOSE ROCK
- ③ MOGUL
- ④ ROCK & DIRT
- ⑤ ROCK

Mode	Road conditions
① MUD & SAND	Suitable for muddy roads, sandy roads, snow-covered roads, dirt trails and other slippery or dirty conditions
② LOOSE ROCK	Suitable for slippery conditions consisting of mixtures of earth and loose rock
③ MOGUL	Suitable for a wide range of off-road conditions, particularly very bumpy conditions
④ ROCK & DIRT	Suitable for very bumpy road conditions, such as mogul or rocky roads.
⑤ ROCK	Suitable for rocky terrain

When the Crawl Control is turned on, the most suitable mode is automatically selected according to the Crawl Control mode selected.

## Multi-terrain Monitor

The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.

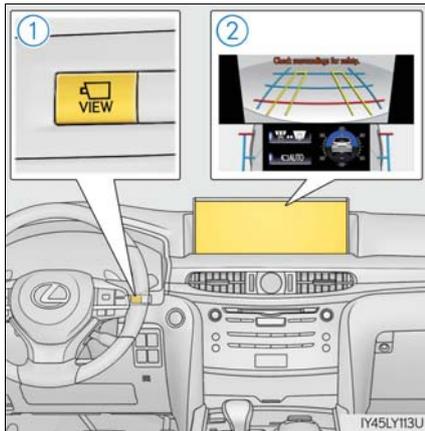

- ① VIEW switch
- ② Display


The surroundings area displayed can be switched by pressing the VIEW switch.

## BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
- RCTA (Rear Cross Traffic Alert) function  
Assists the driver when backing up


These functions use same sensors.

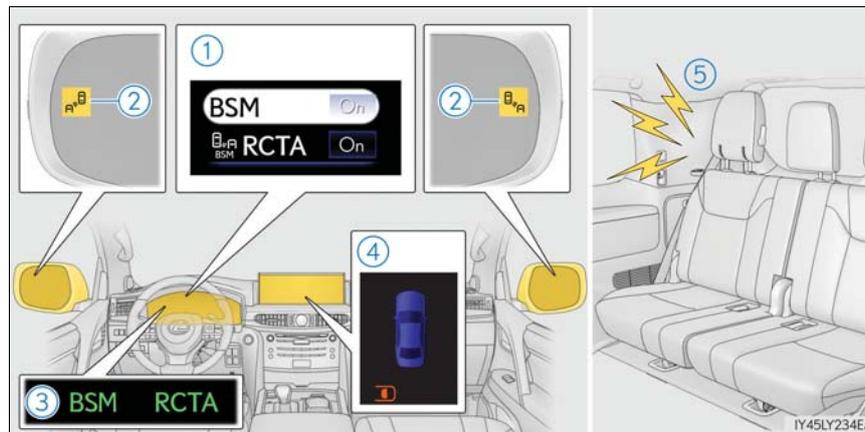

- ① Multi-information display  
Turning the BSM function/RCTA function on/off.  
The RCTA function is available when the BSM function is on.
- ② Outside rear view mirror indicators  
BSM function:  
When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.  
RCTA function:  
When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.
- ③ "BSM" indicator/"RCTA" indicator  
When the BSM function/RCTA function is turned on, the indicator illuminates
- ④ Monitor screen display (RCTA function only)  
If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon for the detected side will be displayed on the monitor screen. This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.
- ⑤ RCTA buzzer (RCTA function only)  
If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM function is operated to turn the system on.

## Active TRAC Off Mode

If the vehicle gets stuck in fresh snow or mud, Active TRAC system reduce power from the engine to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.

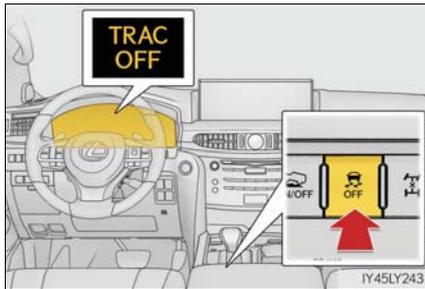


Quickly push and release the button to turn off Active TRAC.

The TRAC OFF indicator will come on.

## Tire Pressure Warning Reset Switch

Your Lexus is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

### The tire inflation pressure display function

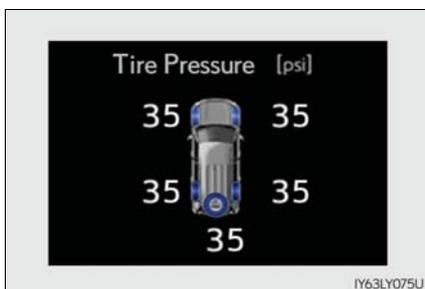

The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display (→P.14)

### Initializing the tire pressure warning system




Push and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

For details, see the "OWNER'S MANUAL".

## Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.

### Basic operation

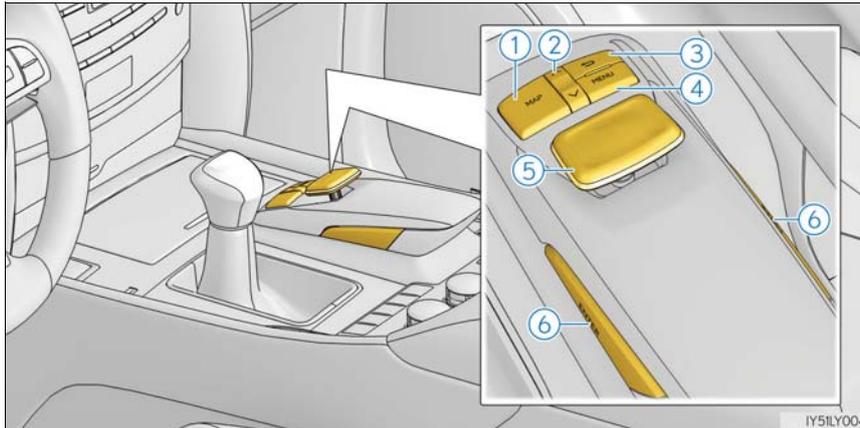

- ① “MAP” button  
Press to display the current position, cancel the screen scroll, start guidance, and repeat a voice guidance.
- ② “^•v” button  
Press to scroll the list screen and to change the scale of the map.
- ③ Back button  
Press to display the previous screen.
- ④ “MENU” button  
Press to display the “Menu” screen.
- ⑤ Remote Touch knob  
Move in the desired direction to select a function, letter and screen button.  
Press to enter the selected function, letter or screen button.
- ⑥ “ENTER” button  
Press to enter the selected function, letter or screen button.


## ■ Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Destination" (→P.44)
- ② "Radio" (→P.53)
- ③ "Media" (→P.54)
- ④ "Phone" (→P.47)
- ⑤ "LEXUS App Suite"
- ⑥ "Info"
- ⑦ "Climate" (→P.58)
- ⑧ "Setup"
- ⑨ "Display" (→P.40)


## ■ Display

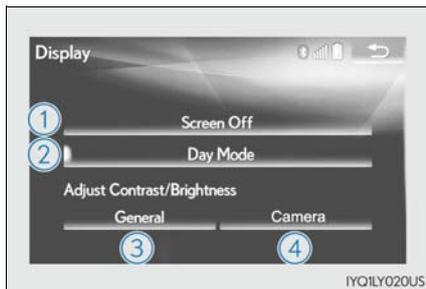

Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- ① Turns the screen off
- ② Turns day mode on/off
- ③ Adjust the screen display
- ④ Adjust the camera display

## ■ Screen scroll operation

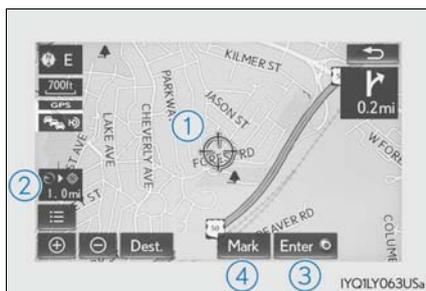

To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

- ① Cursor mark
- ② Distance from the current position to the cursor mark
- ③ Register as a memory point
- ④ Set as a destination

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## 12.3-inch Display

### Full screen display

The following functions can be displayed full screen:

- Initial screen
- "Menu" screen (→P.40)
- Map screen

### Split-screen display



Different information can be displayed on the left and right of the screen. For example, audio screen can be displayed and operated while the map screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

- ① Main display
- ② Side display

### Display the side display

#### Basic screens

The following functions can be displayed and operated on the side display.



Select the desired button.

- ① Navigation system (→P.43)
- ② Audio (→P.51)
- ③ Phone (→P.47)
- ④ Vehicle information\*1
- ⑤ Air conditioning (→P.60)

▶ **Interrupt screens**

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist (→P.30)
- Phone (→P.47)
- Destination Assist \*2
- Driving mode (→P.29)

\*1: Refer to "OWNER'S MANUAL".

\*2: Refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

■ **Characteristics of the split-screen display**

---

When the split-screen is displayed, it is necessary to select the screen you wish to operate (main display or side display).

▶ **When selecting the main display**



Move the Remote Touch knob to the left.

▶ **When selecting the side display**

Move the Remote Touch knob to the right.

## Navigation System

### Register home

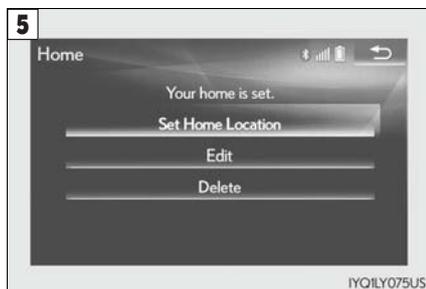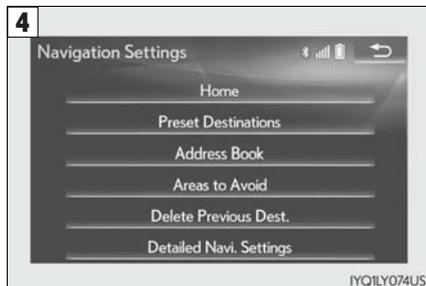

**1** Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.

**2** Select "Setup".

**3** Select "Navigation".

**4** Select "Home".

**5** Select "Set Home Location".

**6** Select "Address".

**7** Select "City".

**8** Enter a city name and select "OK".

**9** Select the desired city name.

**10** Enter a street name and select "OK".

**11** Select the desired street name.

**12** Enter a house number and select "OK".

**13** Select "Enter".

**14** Select "OK".

## ■ Destination search

### ■ Search by address



#### ► Search by city



#### ► Search by street address



**1** Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.

**2** Select "Destination".

**3** Select "Address".

**4** Select "City".

**5** Enter a city name and select "OK".

**6** Select the desired city name.

**7** Enter a street name and select "OK".

**8** Select the desired street name.

**9** Enter a house number and select "OK".

**10** Select "Go".

**11** Select "OK".

**4** Select "Street Address".

**5** Enter a house number and select "OK".

**6** Enter a street name and select "OK".

**7** Select the desired street name.

**8** Enter a city name and select "OK".

**9** Select the desired city name.

**10** Select "Go".

**11** Select "OK".

### ■ Search by point of interest




- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".

### ▶ Search by name



- 4 Select "Name".
- 5 Enter a POI name and select "OK".

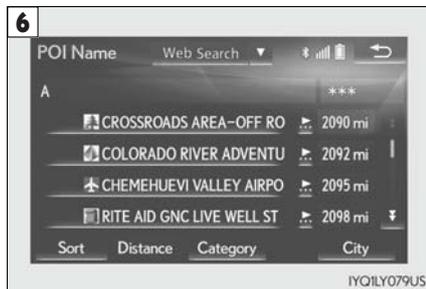


- 6 Select the desired POI.
- 7 Select "Go".
- 8 Select "OK".

► Search by category



4 Select "Category".

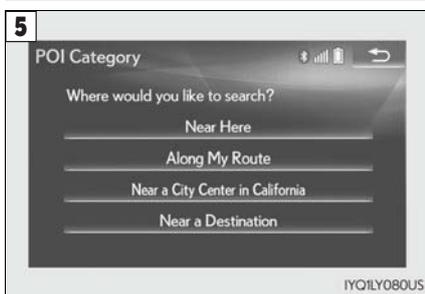

5 Select the desired search point.

6 Select the desired POI category.

7 Select the desired POI.

8 Select "Go".

9 Select "OK".

► Search by phone number



4 Select "Phone #".

5 Enter a phone number and select "OK".

6 Select "Go".

7 Select "OK".

## Hands-free System (For Cellular Phone)

### Bluetooth® phone pairing

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.



- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.
- 3 Select "Phone".
- 4 Select "Yes" to register a phone.
- 5 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.
- 6 Register the Bluetooth® device using your Bluetooth® device.
- 7 Check that a confirmation screen is displayed, indicating pairing was successful (a Bluetooth® link has been established but registration is not yet complete).
- 8 Check that "Connected" is displayed and registration is complete.

## ■ Contact transfer



- 1** Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.
- 2** Select "Setup".
- 3** Select "Phone".
- 4** Select "Contacts/Call History".
- 5** Select "Transfer Contacts from Phone".
- 6** Transfer the contact data to the system using a Bluetooth<sup>®</sup> phone.
- 7** Check that a confirmation screen is displayed when the operation is complete.

Contact transfer may not be possible depending on phone model.


## ■ Registering favorites list



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Contacts/Call History".
- 5 Select "Add Favorite".
- 6 Select the desired contact to add to the favorites list.
- 7 Check that a confirmation screen is displayed when the operation is complete.

## ■ Calling by name

You can call by giving a name registered in the contact list. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

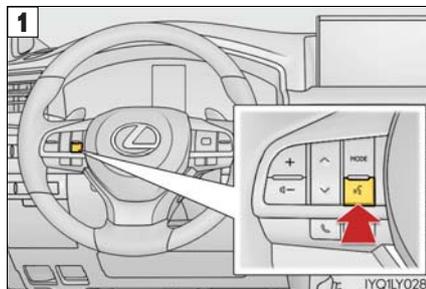

- 1 Press the talk switch.
- 2 Say "Call <contacts> <phone types>".  
In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact.  
For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"

Talk switch: Pressing this switch turns the voice command system on. Say a command after the beep.

### ■ Calling by favorites list

---

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select the "Favorites" tab and select the desired contact.
- 4 Select the desired number.
- 5 Check that the "Call" screen is displayed.

### ■ Calling the message sender

---

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select .
- 4 Select the desired message.
- 5 Select "Call".
- 6 Check that the "Call" screen is displayed.

### ■ Receiving a call


---

When a call is received, this screen is displayed with a sound.  
Call screen can also be displayed on the side display.

Press the  switch on the steering wheel to talk on the phone.

To refuse to receive the call, press the  switch on the steering wheel.

## Steering switches

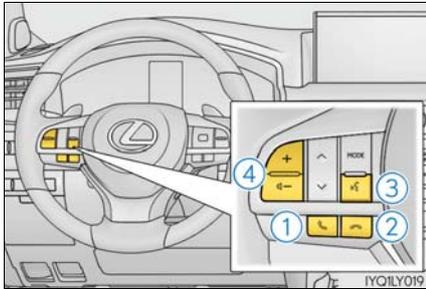

- ① Sending/Receiving/Phone top screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

## Audio System

### Audio control screen

Follow the procedure below to display the audio control screen.

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 39 for the Remote Touch operation.  
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media".

### Side Display

#### ▶ Radio operation

On the side display, preset stations can be registered and selected.



- 1 Select "▽".
- 2 Select the desired source.
  - ① Select to tune in to the desired preset station/channel.

### ► Media operation


Operations such as selecting a chapter, file or track are carried out on the screen.



- 1 Select "▽".
- 2 Select the desired source.
  - 1 Select a chapter/track/file  
Select and hold to rewind
  - 2 Stop the video screen
  - 3 Play/pause
  - 4 Select a chapter/track/file  
During playback: Select and hold to fast forward  
During a pause: Select and hold to slow forward

### ■ Remote control (steering wheel audio switches)

Some audio features can be controlled using the switches on the steering wheel.

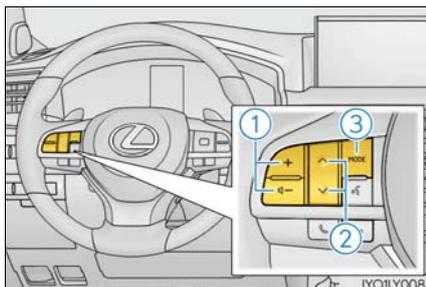


- 1 Increases/decreases volume
- 2 Radio mode: Select a preset station  
SAT mode: Select a preset channel  
Audio CD mode: Select a track  
MP3/WMA/AAC disc mode: Select a file  
DVD mode: Select a chapter  
USB mode: Select a file/track  
iPod mode: Select a track/file  
BT audio mode: Select a track
- 3 Press: Change audio modes  
Press and hold: Mute/unmute or pause/resume the current operation

## Basic operation



- ① Display the audio source selection screen
- ② Display the sound setting screen
- ③ Adjust volume  
Turn the audio system on/off
- ④ Select a radio/media mode
- ⑤ Play/Pause  
Turn mute on/off

## Radio

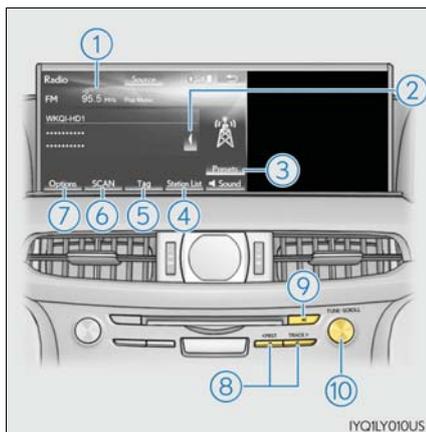

- ① Display HD) multicast channels available
- ② Display the cache radio operation buttons
- ③ Display the radio preset buttons
- ④ Display a list of receivable stations
- ⑤ Store artist and song title information
- ⑥ Scan for receivable stations
- ⑦ Change the screen buttons to the optional screen buttons
- ⑧ Press: Select a preset station  
Press and hold: Seek for a station
- ⑨ Turn mute on/off. (Cache radio only)
- ⑩ Step up/down frequencies  
Move up/down the list

## Entering station/channel presets

- 1 Select the desired station/channel by using the tune, the seek or the scan function.
- 2 Select "Presets".
- 3 Select one of the screen buttons and hold it until a beep is heard, indicating that the station/ channel has been set.

## ■ DVD player/CD player

### ■ Playing an audio CD




- ① Display a track list
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track  
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track  
Rewind
- ⑦ Eject a disc
- ⑧ Select a track  
Fast forward/rewind
- ⑨ Select a track  
Move up/down the list

### ■ Playing a CD with MP3/WMA/AAC files



- ① Select a folder
- ② Display a folder list
- ③ Set random playback
- ④ Set repeat playback
- ⑤ Select a file  
Fast forward
- ⑥ Play/Pause
- ⑦ Select a file  
Rewind
- ⑧ Eject a disc
- ⑨ Select a file  
Fast forward/rewind
- ⑩ Select a file  
Move up/down the list

## ■ Playing a DVD

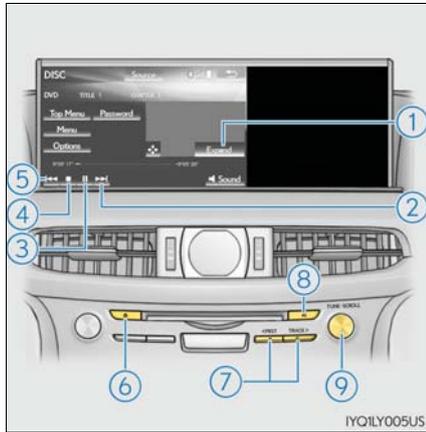

- ① Display expanded screen video
- ② Select a chapter  
Fast forward/slow forward
- ③ Play/Pause
- ④ Stop the video screen
- ⑤ Select a chapter  
Rewind
- ⑥ Eject a disc
- ⑦ Select a chapter  
Fast forward/rewind
- ⑧ Play/Pause
- ⑨ Select a chapter

## ■ Operating an iPod

### ■ iPod audio



- ① Display the play mode selection screen
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track  
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track  
Rewind
- ⑦ Select a track  
Fast forward/rewind
- ⑧ Select a track  
Move up/down the list

## ■ iPod video



- ① Display expanded screen video
- ② Select a track  
Fast forward
- ③ Play/Pause
- ④ Select a track  
Rewind
- ⑤ Select a track  
Fast forward/rewind
- ⑥ Select a track  
Move up/down the list

## Lexus Climate Concierge

The seat heaters, seat ventilators and heated steering wheel are each automatically controlled according to the set temperature of the air conditioning system, the outside and cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.



### "CLIMATE CONCIERGE" switch

When the switch is pressed, the indicator above the switch illuminates and all of the following systems operate in automatic mode.

If any of the system is operated manually, the indicator turns off. However, all other functions continue to operate in automatic mode.

### ■ Automatic air conditioning system (→P.58, 61)

The temperature can be adjusted individually for the driver seat, passenger seat, and rear seats.

When a passenger is detected in the second seat, the rear air conditioning operates in automatic mode.

### ■ Seat heaters and ventilators (if equipped)

Heating or ventilation is automatically selected according to the set temperature of the air conditioning system, the outside temperature, etc.


The seat heaters and ventilators of the front passenger seat and second outboard seats operate in automatic mode if passengers are detected.

### ■ Heated steering wheel (if equipped)

Heated steering wheel operates automatically according to the outside temperature and cabin temperature.

## Front Automatic Air Conditioning System

### Control panel

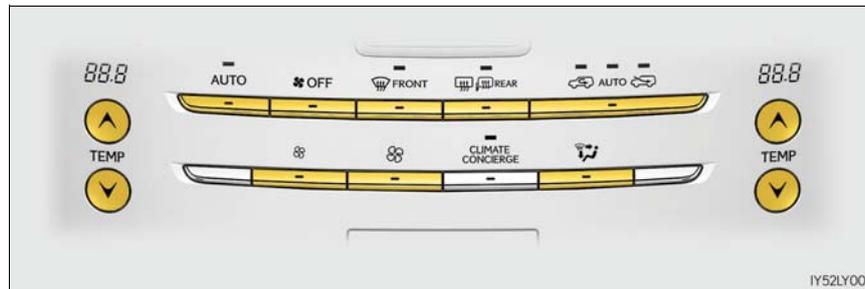

#### Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.


#### Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.

Press  to turn the fan off.

#### Change the airflow mode

To change the air outlets, press .

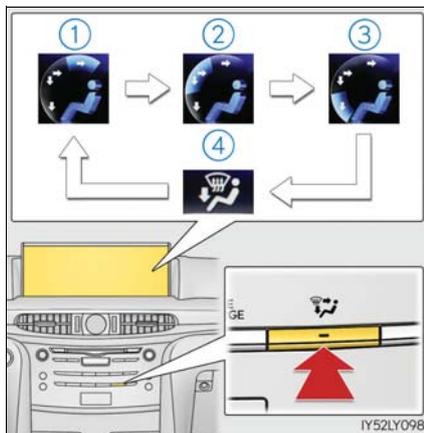

The air outlets used are switched each time the button is pressed.

- ① Air flows to the upper body.
- ② Air flows to the upper body and feet.
- ③ Air flows to the feet.
- ④ Air flows to the feet and the windshield defogger operates

## ■ Main display



- ① Left-hand front seat side temperature control
- ② Left-hand front seat side air outlet selector
- ③ Air flows to the feet and the windshield defogger operates
- ④ Fan speed control
- ⑤ Right-hand front seat side air outlet selector
- ⑥ Option control screen
- ⑦ Right-hand front seat side temperature control
- ⑧ Rear air conditioning operation screen
- ⑨ Eco mode
- ⑩ Adjust the temperature for driver, passenger and rear seats separately ("4-ZONE" mode) (→P.61)
- ⑪ Cooling and dehumidification function on/off
- ⑫ Automatic mode

## ■ Changing the air flow mode

To adjust settings, select the screen button.



— Air flows to the upper body.



— Air flows to the upper body and feet.




— Air flows to the feet.



— Air flows to the feet and the windshield defogger operates.

## ■ Side display

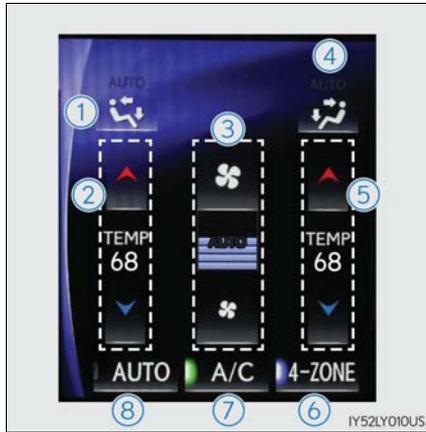

- ① Select the left-hand front seat side air flow mode
- ② Adjust the left-hand side temperature setting
- ③ Adjust the fan speed setting
- ④ Select the right-hand front seat side air flow mode
- ⑤ Adjust the right-hand side temperature setting
- ⑥ Adjust the temperature for driver and passenger seats separately ("4-ZONE" mode) (→P.61)
- ⑦ Select to set cooling and dehumidification function on/off
- ⑧ Select to set auto mode on


## ■ Option control screen

Select  on the main display to display the option control screen. The functions can be switched on and off.




- ① Prevent ice from building up on the windshield and wiper blades
- ② Micro dust and pollen filter

## ■ Using the automatic mode

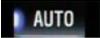Press  or select  on the control screen to turn on the airflow and adjust the temperature setting.


## ■ Adjusting the temperature for driver and passenger seats separately (“4-ZONE” mode)

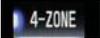The air conditioning system switches between individual and simultaneous modes each time  on the control screen is selected.

Individual mode (the indicator is on.): The temperature for the driver’s, front passenger’s and rear seats can be adjusted separately. Operating the passenger’s side or rear temperature control will enter individual mode.

In the simultaneous mode, only  (increase) or  (decrease) on the driver’s side can be used to adjust the temperature for all seats.

## Rear Air Conditioning System

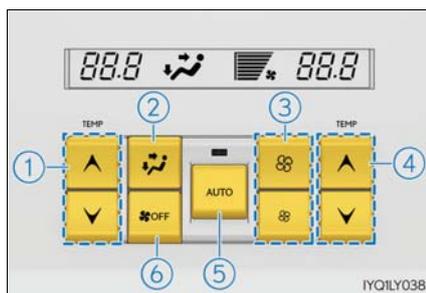

- ① Adjust the left-hand side temperature setting
- ② Change the air flow mode
- ③ Adjust the fan speed setting
- ④ Adjust the right-hand side temperature setting
- ⑤ Set automatic mode on
- ⑥ Turn the fan off

## ■ Front controller




- ① Left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Right-hand side temperature setting
- ④ Turn the fan off
- ⑤ Set automatic mode on

## Voice Command System

### Basic operation

**NOTE:** When entering voice commands you must wait until after the beep to speak.

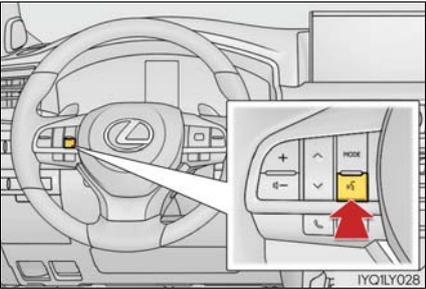

- 1** Press the talk switch on the steering wheel.
- 2** - If you know the command:  
Press the talk switch again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press the talk switch again.
- 3** Say a command after the beep.

Continue on to pages 63-66 for a detailed list of Voice Commands for the following categories:

Basic.....	page 63
Apps.....	page 63
Navi .....	page 63
Phone .....	page 64
Radio .....	page 64
Audio.....	page 65
Info .....	page 65
Climate.....	page 66

- Important voice commands information and tips
  - Voice commands can be used while driving.
  - You must wait until after the beep to say a command.
  - If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

## ■ Command list

### Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

### Apps

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

### Navi

Command	Action
"Find <POI category>"	Displays a list of <POI category <sup>*1</sup> > near the current position <sup>*2</sup>
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

\*1: For example; "Gas stations", "Restaurants", etc.

\*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

## Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

## Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode

## Audio

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* Audio"	Selects Bluetooth® audio mode
"External"	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

\*: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

## Info

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"	Displays the Lexus insider list

## Climate

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees *

\*: Only within the possible temperature range of the air conditioning system

## Portable Audio Device Ports

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.




Press the lid, open the cover and connect the portable audio device.

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.




### Programming HomeLink® (for U.S.A. owners)

The HomeLink® compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

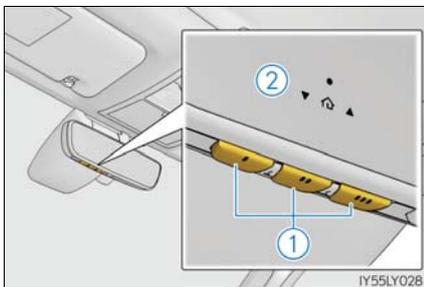

- ① Buttons
- ② Indicator

## ■ Programming HomeLink®

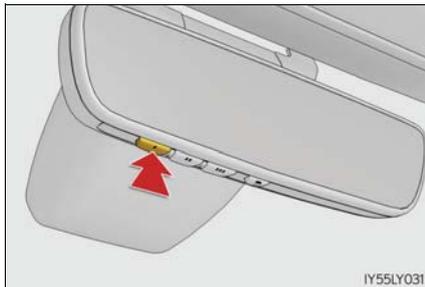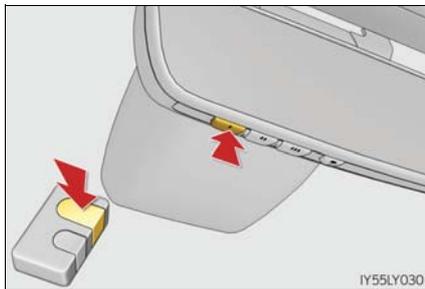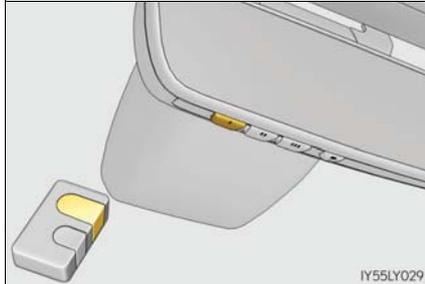

**1** Point the remote control transmitter for the device 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons. Keep the HomeLink® indicator light in view while programming.

**2** Press and hold one of the HomeLink® buttons and the transmitter button. When the HomeLink® indicator light changes from a slow to a rapid flash, you can release both buttons.

**3** Test the HomeLink® operation by pressing the newly programmed button.

**4** Repeat the steps above to program another device for each of the remaining HomeLink® buttons.

### ■ Programming a rolling code system

If your device is rolling code equipped, follow the steps under the heading “Programming HomeLink®” before proceeding with the steps listed below.

- 1** Locate the learn button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener motor. Refer to the operation manual supplied with the garage door opener motor for the location of the learn button.
- 2** Press the learn button.  
Following this step, you have 30 seconds in which to initiate step 3 below.
- 3** Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again. The garage door may open.
- 4** Repeat the steps above to program another rolling code system for any of the remaining HomeLink® buttons.

### ■ Programming an entry gate (for U.S.A. owners)/Programming all devices in the Canadian market

- 1** Place your transmitter 1 to 3 in. (25 to 75 mm) away from the surface of the HomeLink®.  
Keep the HomeLink® indicator light in view while programming.
- 2** Press and hold the selected HomeLink® button.
- 3** Repeatedly press and release (cycle) the device's remote control button for two seconds each until step 4 is completed.
- 4** When the indicator light on the HomeLink® compatible transceiver starts to flash rapidly, release the buttons.
- 5** Test the operation of the HomeLink® by pressing the newly programmed button. Check to see if the gate/device operates correctly.
- 6** Repeat the steps above to program another device for each of the remaining HomeLink® buttons.

### ■ Programming other devices

To program other devices such as home security systems, home door locks or lighting, contact your Lexus dealer for assistance.

### ■ Reprogramming a button

The individual HomeLink® buttons cannot be erased but can be reprogrammed. To reprogram a button, follow the “Reprogramming a HomeLink® button” instructions.

### ■ Operating HomeLink®

---


Press the appropriate HomeLink® button. The HomeLink® indicator light should come on.

## LEXUS Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components

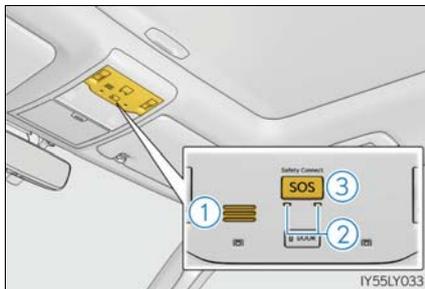

- ① Microphone
- ② LED light indicators
- ③ "SOS" button

### Services

Subscribers have the following Safety Connect services available:

#### ● Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

#### ● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## **Lexus Enform (for U.S.A., if equipped)**

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### **Function achieved by using a cellular phone**

---

#### **Services**

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

#### **● LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

#### **Subscription**

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system**

---

#### **Services**

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

#### **● Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

● **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ **Function achieved by using DCM**

---

■ **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P.70)

■ **LEXUS Enform Remote**

---

■ **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to

<http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

■ **Subscription**

→P.71

## **XM Satellite Radio**

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

### **■ Subscription**

For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included.

Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-447-0011

► **Canadian Customers:**

Visit [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677

**What to do if ...**

**List of Warning/Indicator Lights**



**Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.**

-  (U.S.) Brake system warning light
-  (Canada)

**Immediately stop the vehicle in a safe place and contact your Lexus dealer.**

-  Charging system warning light

**For further information, refer to the OWNER'S MANUAL.**

**What to do if ...**

**Have the vehicle inspected by your Lexus dealer immediately.**

 (U.S.A.)	Malfunction indicator lamp	 Slip indicator light
 (Canada)		 Automatic headlight leveling system warning light (Flashes)
 SRS warning light		 Low speed four-wheel drive indicator light (Flashes)
 (U.S.A.)	ABS warning light	 Center differential lock indicator light (Flashes)
 (Canada)		 Brake system warning light
 (Flashes with a buzzer sounding)	PCS warning light*1	 Tire pressure warning light (Blinking and then continuously on)

**Follow the correction procedures.**

 Open door warning light	 (U.S.A.) (Flashes)	Parking brake indicator
 Low fuel level warning light	 (Canada) (Flashes)	
 Driver's seat belt reminder light	 Power steering system warning light	
 (On the center panel)	 Brake Override System warning light*3	
 Master warning light	 (Flashes without a buzzer sounding)	PCS warning light*1
 (Illuminates without blinking)		Tire pressure warning light*2

**For further information, refer to the OWNER'S MANUAL.**

**What to do if ...**

**See the OWNER'S MANUAL**

	Turn signal indicator		Multi-terrain Select indicator
	Headlight indicator (U.S.A.)		Crawl Control indicator
	Tail light indicator (Canada)		"RSCA OFF" indicator
	Headlight high beam indicator		Automatic transmission second start indicator
	Automatic High Beam indicator		Low speed four-wheel drive indicator
	Fog light indicator		Center differential lock indicator
	Eco Driving Indicator Light		Easy access mode indicator
	Cruise control indicator		Intuitive parking assist indicator
	Cruise control "SET" indicator		PCS warning light* <sup>1</sup>
	Dynamic radar cruise control indicator* <sup>1</sup>		BSM (Blind Spot Monitor) indicator* <sup>1</sup>
	LDA indicator* <sup>1</sup>		BSM (Blind Spot Monitor) outside rear view mirror indicators* <sup>1</sup>
	Slip indicator (Flashes)		RCTA (Rear Cross Traffic Alert) indicator* <sup>1</sup>
	VSC OFF indicator		"AIR BAG ON/OFF" indicators (On the center panel)

**For further information, refer to the OWNER'S MANUAL.**

## What to do if ...

### See the OWNER'S MANUAL



Turn Assist indicator



TRAC OFF indicator



(U.S.A.)

(Flashes)

Parking brake  
indicator



Low outside temperature  
indicator



(Canada)

(Flashes)



Smart access system with  
push-button start indicator<sup>\*3</sup>

For further information, refer to the OWNER'S MANUAL.

<sup>\*1</sup>: If equipped


<sup>\*2</sup>: The tire pressure warning light may turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

<sup>\*3</sup>: This light is displayed on the multi-information display.

## What to do if ...

### If the electronic key does not operate properly

#### Unlocking and locking the doors

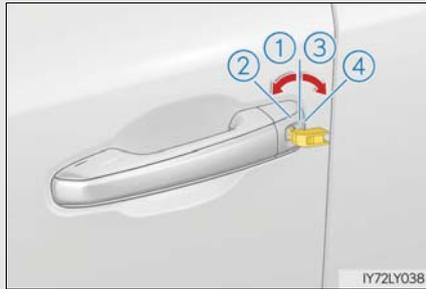


Use the mechanical key in order to perform the following operations (driver's door only):

- ① Locks all the doors
- ② Closes the windows and moon roof\* (turn and hold)
- ③ Unlocks the doors  
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- ④ Opens the windows and moon roof\* (turn and hold)

\*: These settings must be customized at your Lexus dealer.

## What to do if ...

### ■ Starting the engine

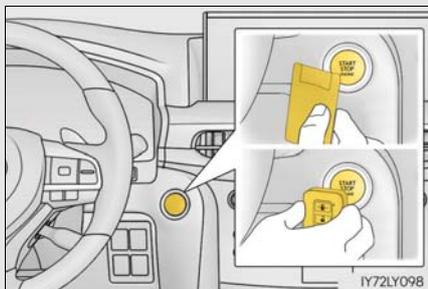

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch. When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the OWNER'S MANUAL. If you need further assistance, contact your Lexus dealer.

### ■ If the engine does not start

Make sure that the correct operating procedures have been followed.

**Brake pedal**

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

If the engine still does not start, see the OWNER'S MANUAL for more information or contact your Lexus dealer.





#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:  
Lexus Roadside Assistance  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)
- In Hawaii:  
Servco Automotive Roadside Assistance/Customer Services  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:  
Lexus Roadside Assistance/Customer Service  
**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2016 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.