

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

|                                                                                                                                                           |           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| <b>Audio System (with multimedia system)*</b>                                                                                                             |           |
| Audio control screen .....                                                                                                                                | 69        |
| Remote control (steering wheel switches) .....                                                                                                            | 69        |
| Basic operation.....                                                                                                                                      | 70        |
| Radio .....                                                                                                                                               | 71        |
| CD player .....                                                                                                                                           | 72        |
| Operating an iPod.....                                                                                                                                    | 73        |
| <b>Audio System (with navigation system)*</b>                                                                                                             |           |
| Audio control screen .....                                                                                                                                | 59        |
| Remote control (steering wheel switches) .....                                                                                                            | 59        |
| Basic operation.....                                                                                                                                      | 60        |
| Radio .....                                                                                                                                               | 61        |
| DVD player .....                                                                                                                                          | 61        |
| Operating an iPod.....                                                                                                                                    | 63        |
| <b>Automatic High Beam .....</b>                                                                                                                          | <b>39</b> |
| <b>BSM (Blind Spot Monitor).....</b>                                                                                                                      | <b>35</b> |
| <b>Crawl Control .....</b>                                                                                                                                | <b>34</b> |
| <b>Cruise Control .....</b>                                                                                                                               | <b>21</b> |
| <b>Door Locks .....</b>                                                                                                                                   | <b>93</b> |
| <b>Dynamic Radar Cruise Control.....</b>                                                                                                                  | <b>23</b> |
| <b>Eco Driving Indicator Light .....</b>                                                                                                                  | <b>19</b> |
| <b>Engine (Ignition) Switch.....</b>                                                                                                                      | <b>16</b> |
| <b>Floor mat installation.....</b>                                                                                                                        | <b>11</b> |
| <b>Four-wheel Drive System .....</b>                                                                                                                      | <b>33</b> |
| <b>Front Air Conditioning System</b>                                                                                                                      |           |
| Control panel .....                                                                                                                                       | 78        |
| Control screen.....                                                                                                                                       | 78        |
| Using the automatic mode.....                                                                                                                             | 79        |
| Adjusting the temperature for driver and passenger seats separately<br>("DUAL" mode)/driver, passenger and rear seats separately<br>("3-ZONE" mode) ..... | 79        |
| <b>Fuel Tank Cap.....</b>                                                                                                                                 | <b>96</b> |

\*: These features may be operated by Voice Command (See P. 82)

#### **Hands-free System For Cellular Phone (with multimedia system)\***

|                                                               |    |
|---------------------------------------------------------------|----|
| How to register a Bluetooth® phone .....                      | 65 |
| Registering favorites .....                                   | 66 |
| Dialing .....                                                 | 66 |
| Dialing from the contacts .....                               | 66 |
| When the contacts is empty .....                              | 67 |
| Dialing from favorites .....                                  | 68 |
| To answer the phone .....                                     | 68 |
| To refuse a call .....                                        | 68 |
| Operating a telephone using the steering wheel switches ..... | 68 |

#### **Hands-free System For Cellular Phone (with navigation system)\***

|                                                      |    |
|------------------------------------------------------|----|
| Bluetooth® phone pairing .....                       | 54 |
| Contacts transfer .....                              | 55 |
| Registering the contacts in the favorites list ..... | 56 |
| Calling by name .....                                | 57 |
| Calling by favorites list .....                      | 57 |
| Calling using e-mail/SMS/MMS message .....           | 58 |
| Receiving a call .....                               | 58 |
| Steering switches .....                              | 58 |

|                         |           |
|-------------------------|-----------|
| <b>Headlights .....</b> | <b>37</b> |
|-------------------------|-----------|

|                                       |           |
|---------------------------------------|-----------|
| <b>Intuitive Parking Assist .....</b> | <b>28</b> |
|---------------------------------------|-----------|

\*: These features may be operated by Voice Command (See P. 82)

 
|                                                                     |           |
|---------------------------------------------------------------------|-----------|
| <b>Keys.....</b>                                                    | <b>12</b> |
| <b>LDA (Lane Departure Alert) .....</b>                             | <b>27</b> |
| <b>Lexus Enform .....</b>                                           | <b>90</b> |
| <b>LEXUS Enform Safety Connect.....</b>                             | <b>88</b> |
| <b>List of Warning/Indicator Lights.....</b>                        | <b>97</b> |
| <b>Moon Roof .....</b>                                              | <b>95</b> |
| <b>Multi-information Display .....</b>                              | <b>18</b> |
| <b>Multi-terrain Monitor .....</b>                                  | <b>32</b> |
| <b>Multi-terrain Select.....</b>                                    | <b>30</b> |
| <b>Navigation System</b>                                            |           |
| Register home.....                                                  | 47        |
| Destination input — Search by address .....                         | 49        |
| Destination input — Search points of interest by name .....         | 51        |
| Destination input — Search points of interest by category .....     | 52        |
| Destination input — Search points of interest by phone number ..... | 53        |
| Voice Command System .....                                          | 82        |
| <b>Portable Audio Device Ports .....</b>                            | <b>87</b> |
| <b>Power Windows .....</b>                                          | <b>94</b> |
| <b>Rear Air Conditioning System</b>                                 |           |
| Control panel .....                                                 | 80        |
| Using the automatic mode.....                                       | 80        |
| Control screen (front controller) .....                             | 81        |
| <b>Rear Seat Entertainment System.....</b>                          | <b>74</b> |
| <b>Rear Window Wiper and Washer .....</b>                           | <b>43</b> |

 
|                                                         |           |
|---------------------------------------------------------|-----------|
| <b>Smart Access System with Push-button Start .....</b> | <b>13</b> |
| <b>Theft Deterrent System.....</b>                      | <b>15</b> |
| <b>Touch Screen (with multimedia system)*</b>           |           |
| Basic operation .....                                   | 64        |
| Screen for display settings .....                       | 64        |
| <b>Touch Screen (with navigation system)*</b>           |           |
| Basic operation .....                                   | 44        |
| Home .....                                              | 45        |
| Screen scroll operation .....                           | 45        |
| Setting a route .....                                   | 46        |
| <b>Turn Signal Lever.....</b>                           | <b>20</b> |
| <b>Voice Command System</b>                             |           |
| Basic operation .....                                   | 82        |
| Command list .....                                      | 83        |
| <b>Wide View Front &amp; Side Monitor.....</b>          | <b>29</b> |
| <b>Windshield Wipers and Washers .....</b>              | <b>40</b> |
| <b>XM Satellite Radio .....</b>                         | <b>92</b> |

\*: These features may be operated by Voice Command (See P. 82)

## Overview

## Instrument Panel

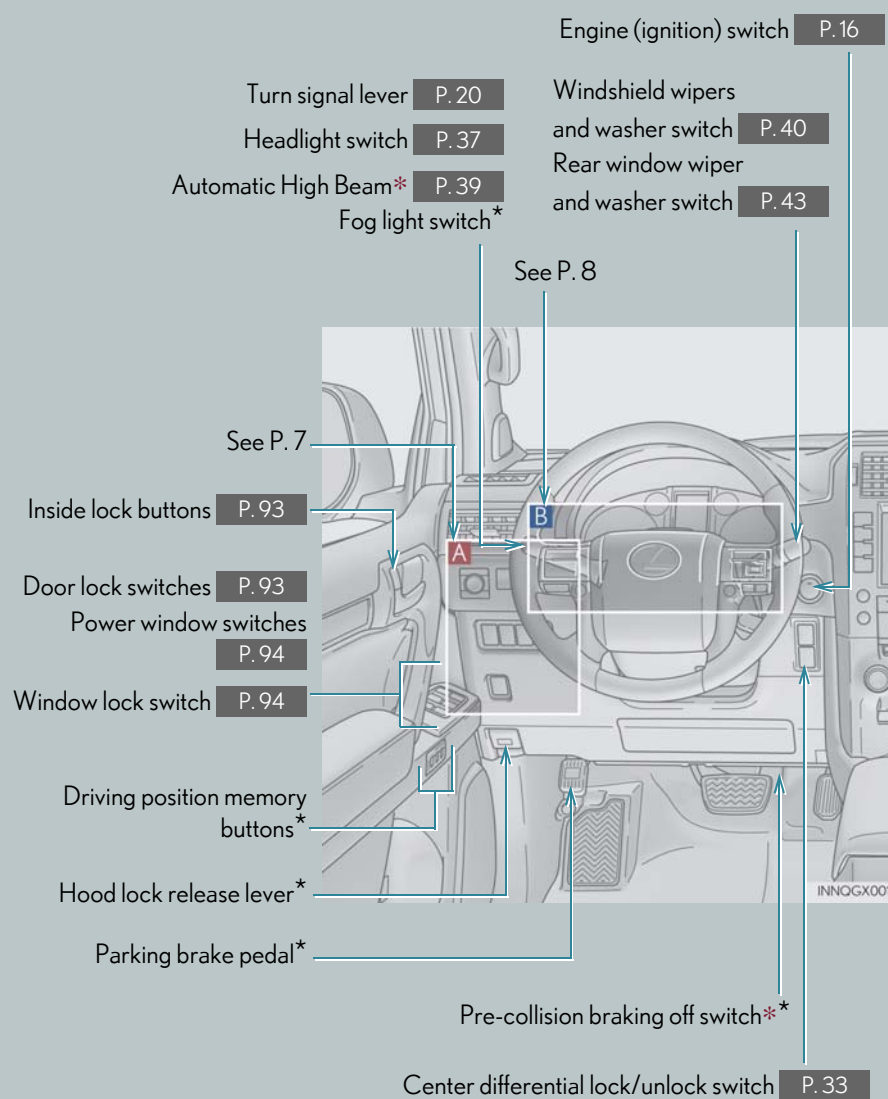

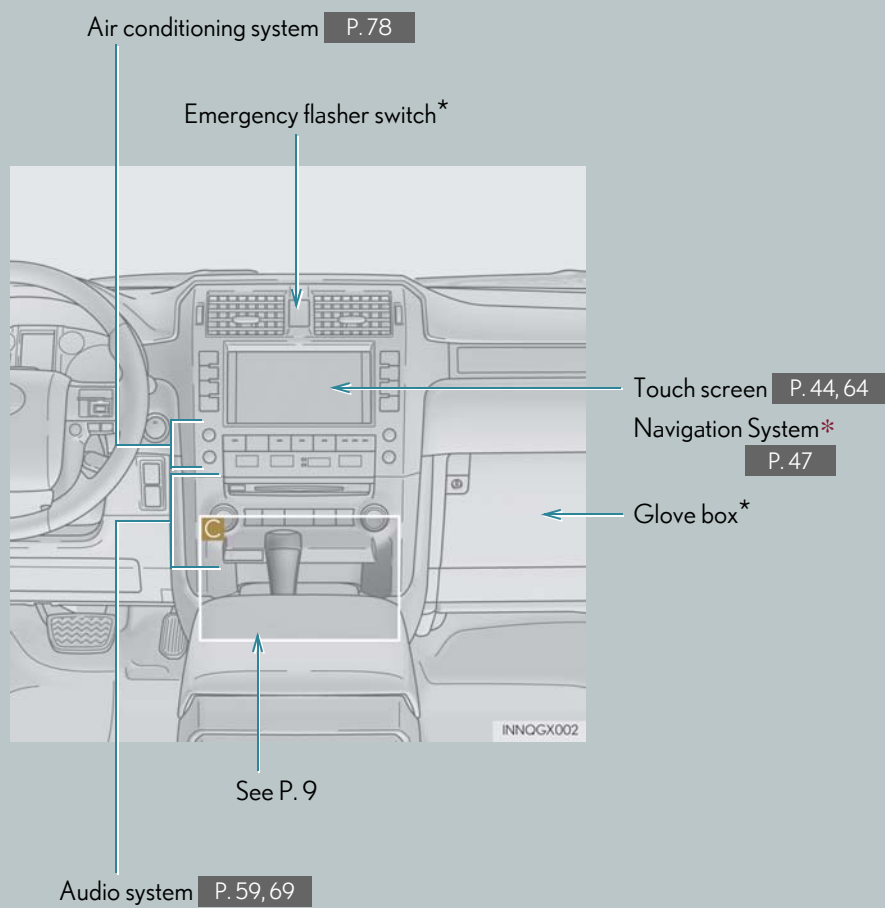


\*: If equipped

\*: Refer to "OWNER'S MANUAL".

## Overview
 
## Instrument Panel

A

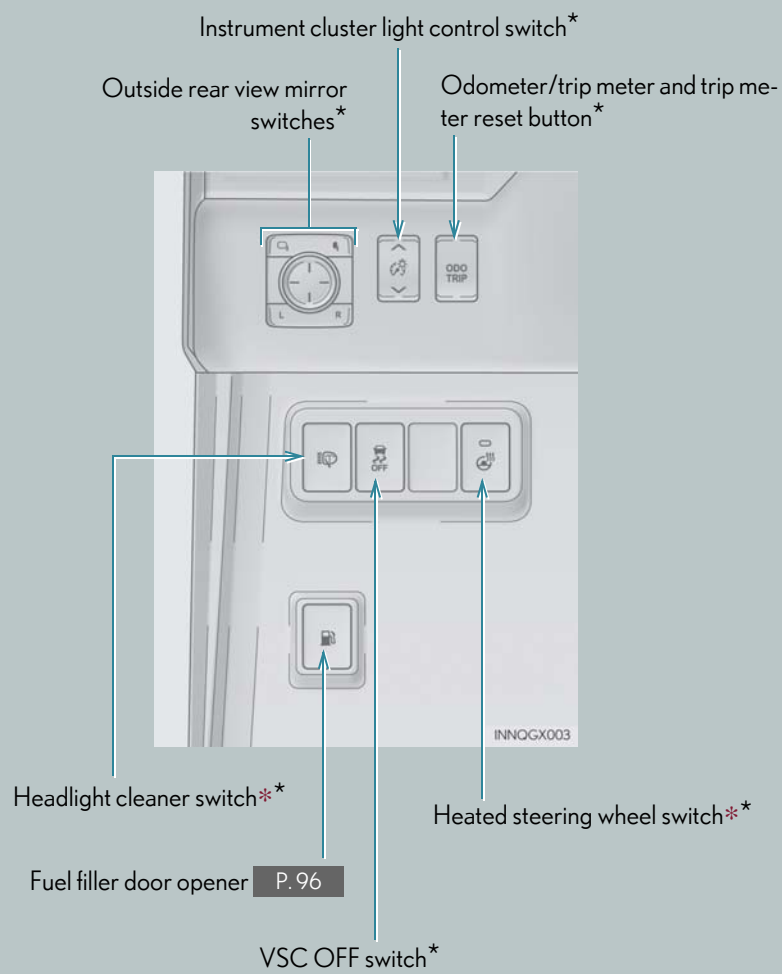

**B**

Wide view front & side monitor switch\* P. 29

Multi-terrain Monitor switch\* P. 32

Telephone switches

 
P. 58, 68

Audio remote control switches P. 59, 69

"ENTER" switch

P. 18

Menu switch P. 18

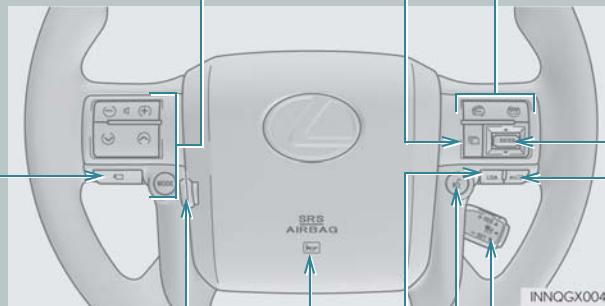

Horn\*

"LDA" switch\* P. 27

Talk switch P. 82

Tilt and telescopic steering control switch\*

Cruise control switch P. 21, 23

Vehicle-to-vehicle distance button\* P. 23


\*: If equipped

\*: Refer to "OWNER'S MANUAL".

## Overview

 
## Instrument Panel

C

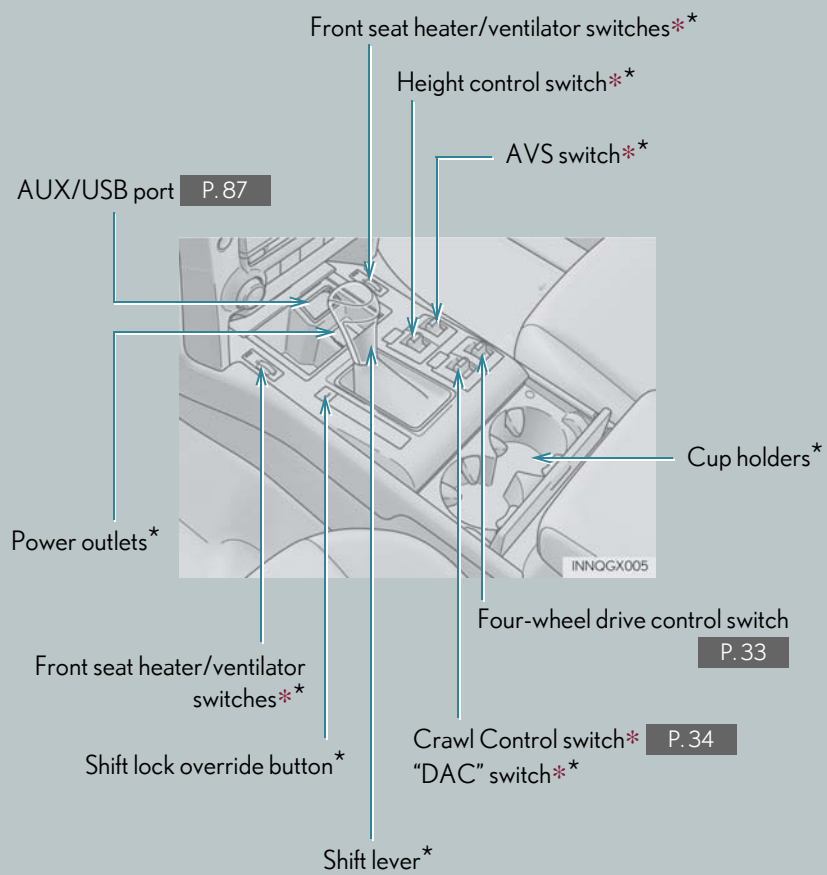

## Overview
 
## Roof

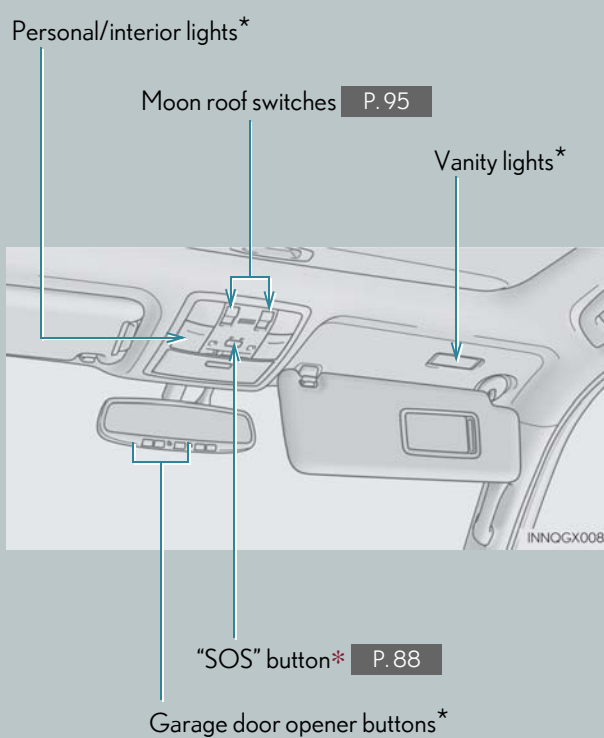


\*: If equipped


\*: Refer to "OWNER'S MANUAL".

## Floor mat installation

 Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

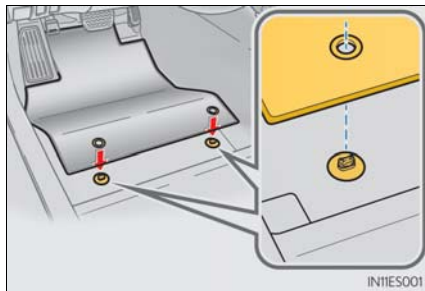

 - 1** Insert the retaining hooks (clips) into the floor mat eyelets.




- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Keys

 
### ■ Electronic key

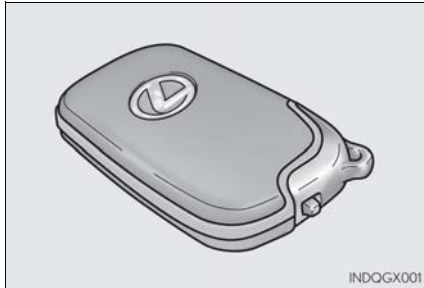

Smart access system with push-button start  
(→P. 13, 16)

Wireless remote control (→P. 12)

### ■ Mechanical key

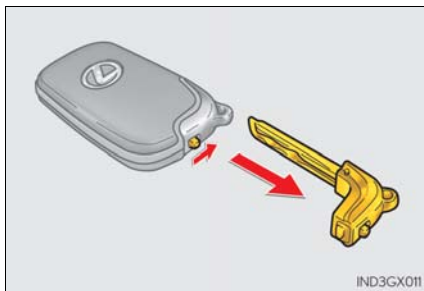 


To take out the mechanical key, slide the release lever and take the key out.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key.

If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

### ■ Wireless remote control

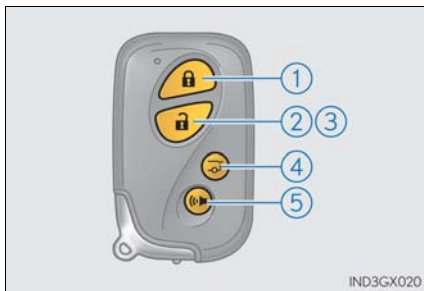 


- ① Locks the doors  
Check that the door is securely locked.
- ② Unlocks the doors
- ③ Opens the windows and moon roof\*
- ④ Opens the glass hatch (press and hold)
- ⑤ Sounds the alarm (if equipped)

\*: This setting must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

 The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key. For details on starting the engine, see page 16.

### ■ Entering and exiting the vehicle

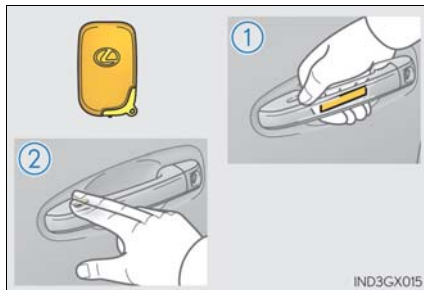

- ① Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.\*


Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

\*: The door unlock settings can be changed.

- ② Touch the lock sensor (the indentation on the upper part or lower part of the front door handle) to lock the doors. Check that the door is securely locked.


### ■ Unlocking and locking the back door

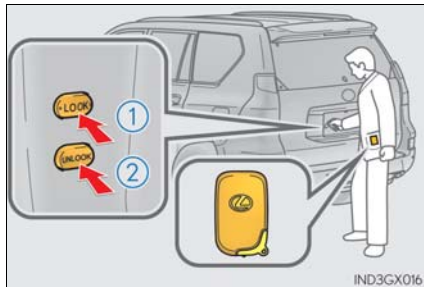 

- ① Locks all the doors  
Check that the door is securely locked.
- ② Unlocks all the doors

The doors cannot be unlocked for 3 seconds after the doors are locked.

## ■ Opening the glass hatch

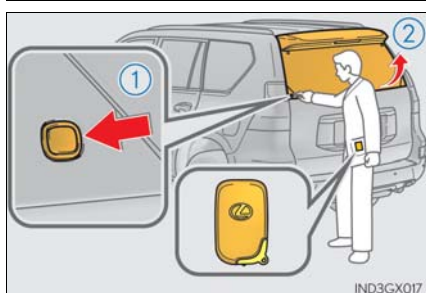 


- ① While carrying the electronic key, press the button to pop up the glass hatch.
- ② Raise  
The glass hatch can be opened even when the back door is locked.

For details on what to do when the electronic key does not operate properly, see page 100.

## Theft Deterrent System
 
### ■ Engine immobilizer system

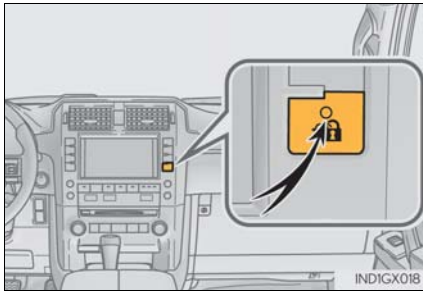

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

### ■ Alarm

The alarm uses light and sound to give an alert when an intrusion is detected.

#### **To set the alarm:**

 
Close the doors, glass hatch and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

#### **To deactivate or stop the alarm:**

- Unlock the doors.
- Start the engine. (The alarm will be deactivated or stopped after a few seconds.)

### ■ Steering lock

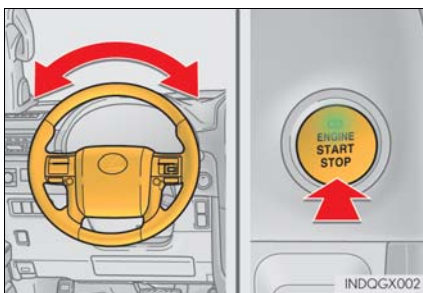


The green indicator light on the engine switch will flash and a message will be shown on the multi-information display. Press the engine switch again while turning the steering wheel left and right.

## Engine (Ignition) Switch

 Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

### Starting the engine

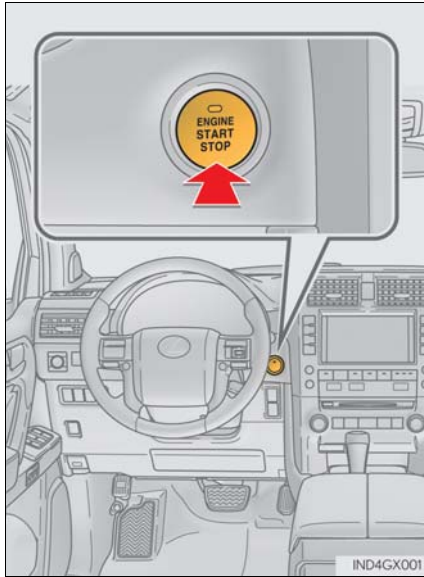


- 1** Check that the parking brake is set.
- 2** Check that the shift lever is set in P.
- 3** Firmly depress the brake pedal.  
The engine switch indicator will turn green. If the indicator does not turn green, the engine cannot be started.
- 4** Press the engine switch shortly and firmly.  
When operating the engine switch, one short, firm press is enough.  
It is not necessary to press and hold the switch.  
The engine will crank until it starts or for up to 30 seconds, whichever is less.  
Continue depressing the brake pedal until the engine is completely started.  
The engine can be started from any engine switch mode.

### Stopping the engine

 - 1** Stop the vehicle.
- 2** Set the parking brake, and shift the shift lever to P.
- 3** Press the engine switch.
- 4** Release the brake pedal and check that the indicator on the engine switch is off.

## ■ Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

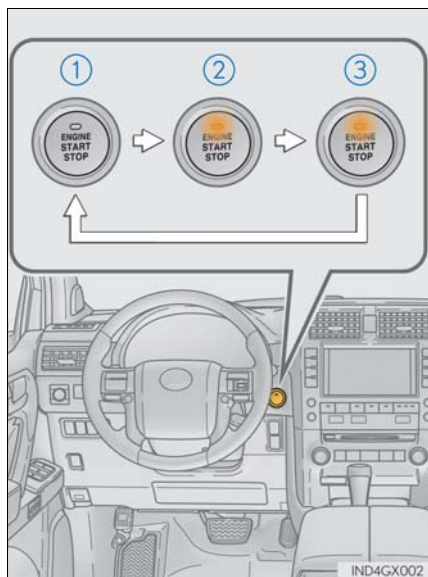


- ① Off\*  
The emergency flashers can be used.
- ② ACCESSORY mode  
Some electrical components such as the audio system can be used.  
The engine switch indicator turns amber.
- ③ IGNITION ON mode  
All electrical components can be used.  
The engine switch indicator turns amber.

\*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to OFF.


## Multi-information Display

 The multi-information display presents the driver with a variety of driving-related data.




- Trip information contents  
Displays driving range, fuel consumption and other cruising related information
- Electronic features control contents
- Other contents

### Switching the display

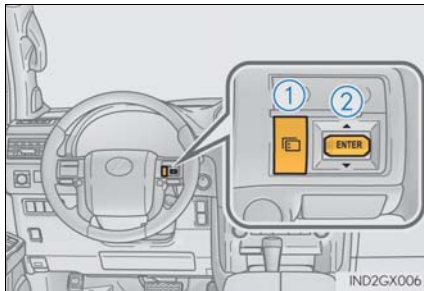 


- ① Menu switch  
Changes modes to electronic features control mode, customization mode or back to normal display mode.
- ② "ENTER" switch  
Changes trip information items. This switch is also used to turn on/off electronic features controls and to change customization settings.

## Eco Driving Indicator Light

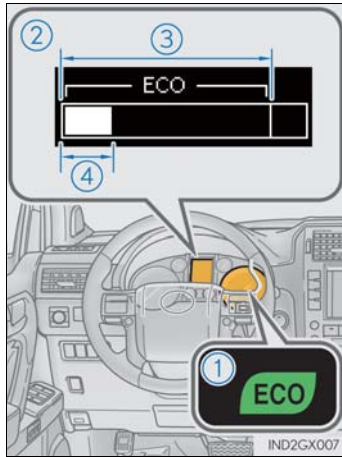 

- ① Eco Driving Indicator Light  
During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on.
- ② Eco Driving Indicator Zone Display  
Suggests Zone of Eco driving with current Eco driving ratio based on acceleration.
- ③ Zone of Eco driving
- ④ Eco driving ratio based on acceleration  
If the vehicle exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display will blink and Eco Driving Indicator Light will turn off. Eco Driving Indicator Light will not operate in the following conditions:
  - The shift lever is in anything other than D.
  - The vehicle is set to second start mode.
  - The vehicle speed is approximately 81 mph (130 km/h) or higher.


## Turn Signal Lever

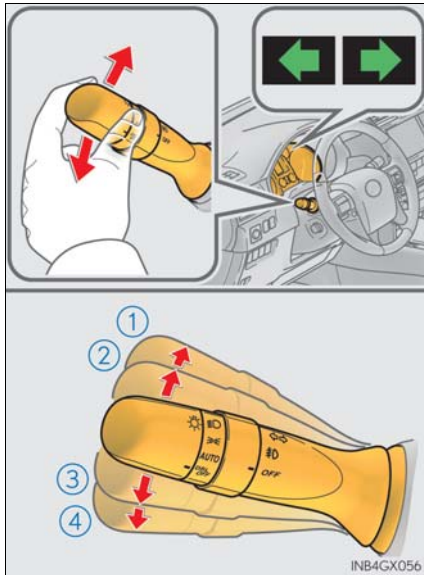 

- ① Right turn
- ② Lane change to the right (push and hold the lever partway)  
The right hand signals will flash until you release the lever.
- ③ Lane change to the left (push and hold the lever partway)  
The left hand signals will flash until you release the lever.
- ④ Left turn


## Cruise Control (if equipped)

 Use the cruise control to maintain a set speed without depressing the accelerator pedal.




- ① Indicators
- ② Cruise control switch

### Setting the vehicle speed

 

 
- 1** Press the "ON-OFF" button to activate the cruise control.  
Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.

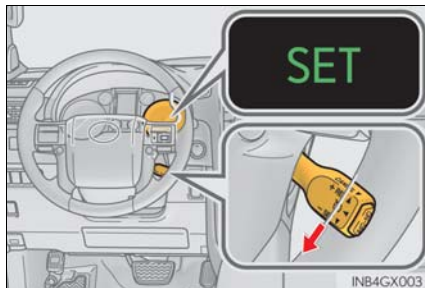

- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.  
"SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

 To change the set speed, operate the lever until the desired set speed is obtained.

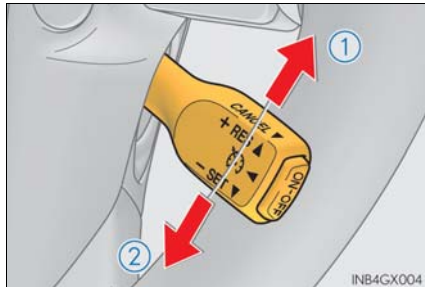


- ① Increases the speed
- ② Decreases the speed  
Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated.

Large adjustment: The set speed can be increased or decreased continually until the lever is released.


## ■ Canceling and resuming the constant speed control

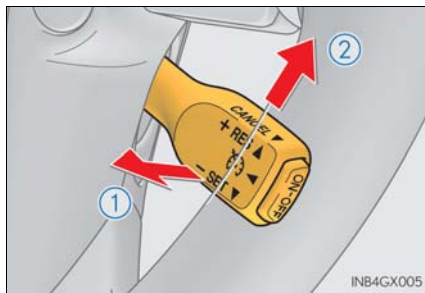 

- ① Pulling the lever toward you cancels the constant speed control.  
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## Dynamic Radar Cruise Control (if equipped)

 Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

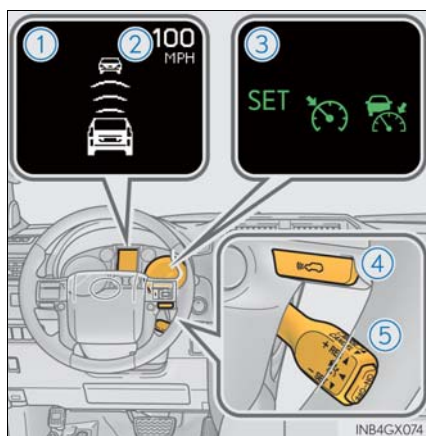


- ① Display
- ② Set speed
- ③ Indicators
- ④ Vehicle-to-vehicle distance button
- ⑤ Cruise control switch

### Setting the vehicle speed (vehicle-to-vehicle distance control mode)



 
- 1** Press the "ON-OFF" button to activate the cruise control.  
Dynamic radar cruise control indicator will come on.  
Press the button again to deactivate the cruise control.

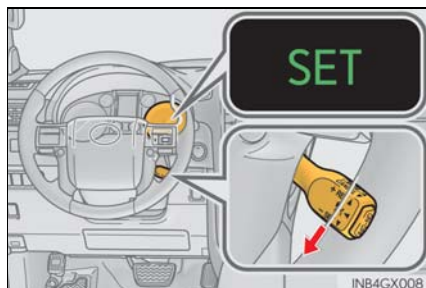

- 2** Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.  
"SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

 To change the set speed, operate the lever until the desired set speed is displayed.

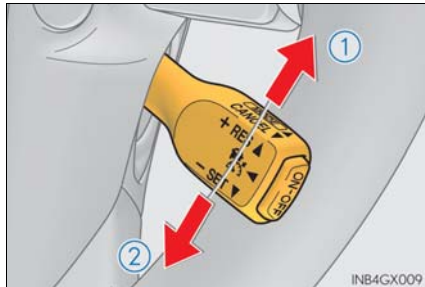

- ① Increases the speed
- ② Decreases the speed  
Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

### **When the set speed is shown in "MPH"**

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: By approximately 5 mph (8 km/h) for each 0.75 seconds the lever is held

### **When the set speed is shown in "km/h"**

Fine adjustment: By approximately 0.6 mph (1 km/h) each time the lever is operated

 
Large adjustment: By approximately 3.1 mph (5 km/h) for each 0.75 seconds the lever is held

In the constant speed control mode, the set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

■ Changing the vehicle-to-vehicle distance

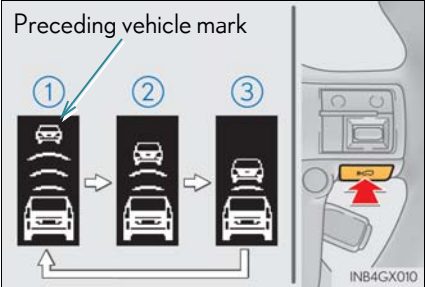

Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
- ② Medium
- ③ Short


The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.  
If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.

■ Vehicle-to-vehicle distance settings

Select a distance from the table below. Note that the distances shown correspond to a vehicle speed of 50 mph (80 km/h). Vehicle- to-vehicle distance increases/decreases in accordance with vehicle speed.

| Distance options | Vehicle-to-vehicle distance  |
|------------------|------------------------------|
| Long             | Approximately 160 ft. (50 m) |
| Medium           | Approximately 130 ft. (40 m) |
| Short            | Approximately 100 ft. (30 m) |

## ■ Canceling and resuming the speed control

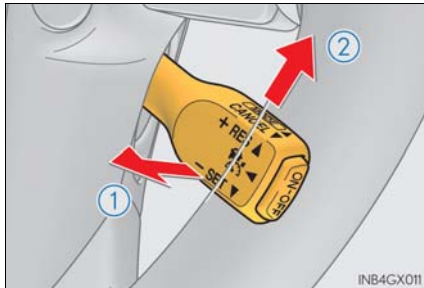 


- ① Pulling the lever toward you cancels the cruise control.  
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## LDA (Lane Departure Alert) (if equipped)

 While driving on a road that has lane markers, this system recognizes the white lane markers using a camera as a sensor to alert the driver when the vehicle deviates from its lane. If the system judges that the vehicle may deviate from its lane, it alerts the driver using beeping and indications on the multi-information display.

### ■ Turning the LDA system on

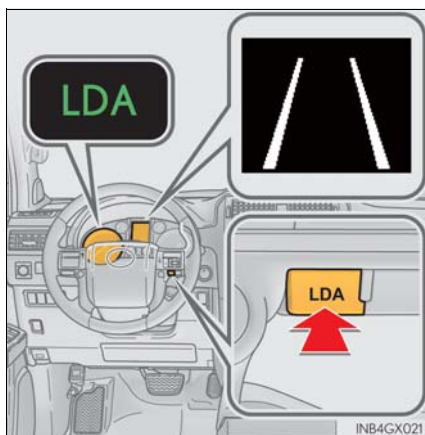


Press the "LDA" switch to activate the system.

"LDA" indicator and the lane lines will come on.

Press the switch again to turn the LDA system off.

### ■ Indication on the multi-information display

 When the LDA system is on, the lane lines are shown.



When thin lines are shown:

Lane markers are not recognized by the system, or the LDA system is temporarily canceled.




When solid lane lines are shown:

The LDA system is active.

If the vehicle deviates from the lane, the lane line will flash.

## Intuitive Parking Assist (if equipped)

 The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, the multimedia screen (if equipped), the navigation system screen (if equipped), and a buzzer. Always check the surrounding area when using this system.

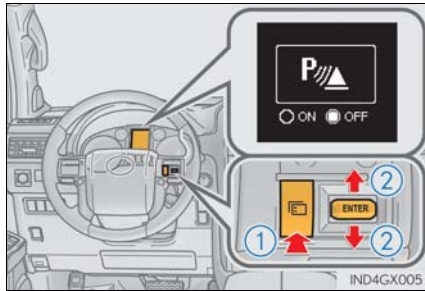


- 1** Display the intuitive parking assist on/off screen.

- 1** Press the menu switch.

The multi-information display will change modes to electronic features control mode.

 - 2** Press the "ENTER" switch upwards or downwards until the intuitive parking assist mark appears in the multi-information display.

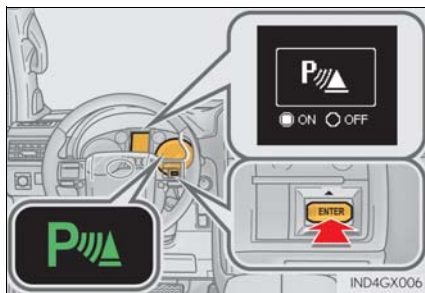

- 2** Press the "ENTER" switch to change to "ON".

The intuitive parking assist indicator will be displayed.

Each pressing of the switch turns the intuitive parking assist on and off.

When on, the buzzer sounds to inform the driver that the system is operational.


Press the menu switch to change to the normal display.

## Wide View Front & Side Monitor (if equipped)

 The wide view front & side monitor provides support when checking the areas to the left and right side of the vehicle and the area in front of the vehicle during take-off at T-intersections or other intersections with poor visibility. This system also helps the driver avoid obstacles and when moving the vehicle to the side of the road.

The wide view front monitor camera displays the areas to the front left and right sides and the area directly in front of the vehicle on the multimedia screen (if equipped) or navigation system screen (if equipped). The side monitor camera displays the area to the front left of the vehicle on the screen.

This system can display the wide view front monitor and the side monitor separately or at the same time.

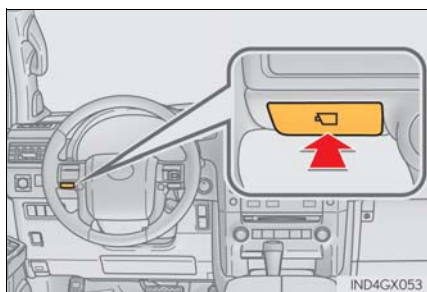


Pressing the wide view front & side monitor switch turns the monitor on/off

The simultaneous display screen is displayed when the wide view front & side monitor switch is pressed.

## Multi-terrain Select (if equipped)

 Multi-terrain Select is a system that helps drivability in off-road situations.

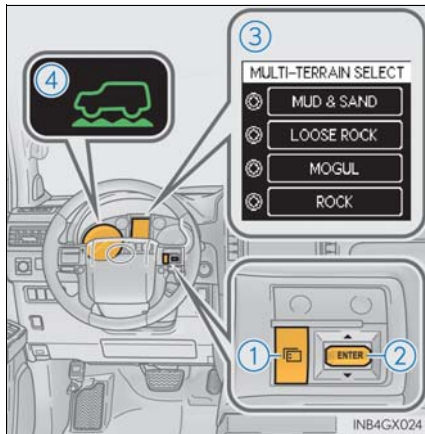


- ① Menu switch
- ② "ENTER" switch
- ③ Multi-information display  
Displays status information including operating status and road type selection.
- ④ Multi-terrain Select indicator


### Selectable modes
 
| Mode       | Road Conditions                                                                                               |
|------------|---------------------------------------------------------------------------------------------------------------|
| MUD & SAND | Suitable for muddy roads, sandy roads, snow-covered roads, dirt trails and other slippery or dirty conditions |
| LOOSE ROCK | Suitable for slippery conditions consisting of mixtures of earth and loose rock                               |
| MOGUL      | Suitable for a wide range of off-road conditions, particularly very bumpy conditions                          |
| ROCK       | Suitable for rocky terrain                                                                                    |


## Switching modes

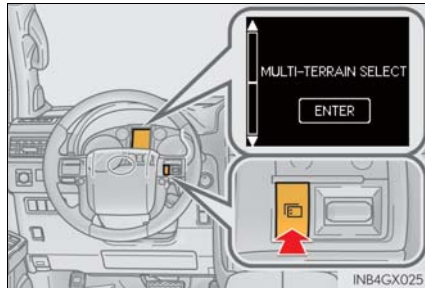

 
- 1 Push the menu switch.  
The multi-information display will change to electronic features control mode.

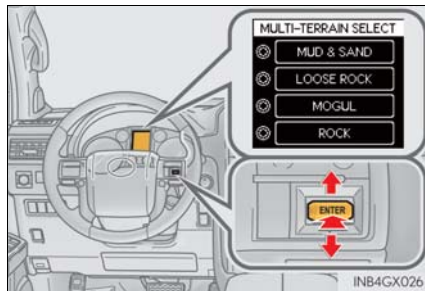

 - 2 Press the "ENTER" switch upwards or downwards until "MULTI-TERRAIN SELECT" appears and then press the "ENTER" switch.  
The mode selection screen is displayed.

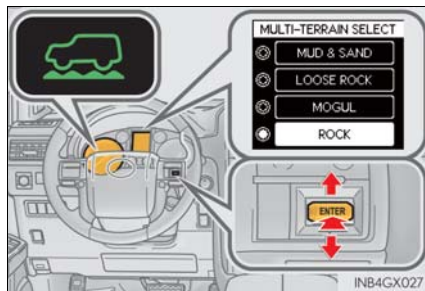

 - 3 Press the "ENTER" switch upwards or downwards to select a desired mode and then press the "ENTER" switch.  
The system switches to the selected mode, and the multi-terrain select indicator will turn on.

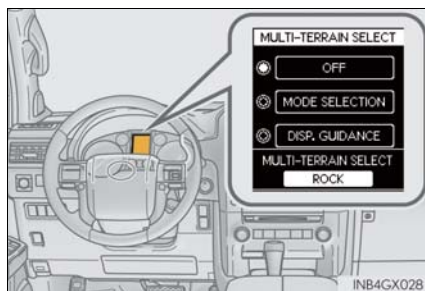

- 4 Once the mode has been set, the mode name will be displayed and operation will commence.

## Multi-terrain Monitor (if equipped)

The Multi-terrain Monitor displays the vehicle surroundings when driving at low speeds, thus assisting off-road driving and helping the driver to check the vehicle surroundings.



Press the Multi-terrain Monitor switch to display the screen.

 
- ① Multi-terrain Monitor switch
- ② Multimedia screen or navigation system screen

The surroundings area displayed can be switched by pressing the Multi-terrain Monitor switch.

## Four-wheel Drive System


Use the four-wheel drive control switch and center differential lock/unlock switch to select the following transfer and center differential modes.

### ■ Four-wheel drive control switch

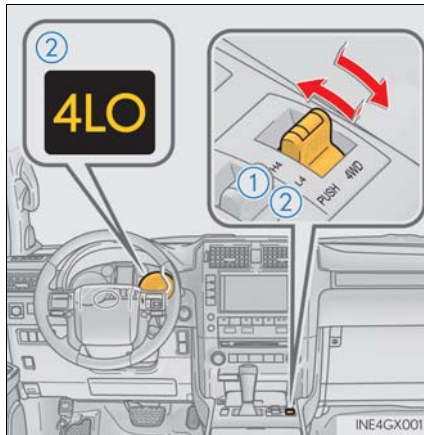

- ① H4 (high speed position)  
Normal driving on all types of roads.
- ② L4 (low speed position)  
Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.  
The low speed four-wheel drive indicator will come on.

### ■ Center differential lock/unlock switch

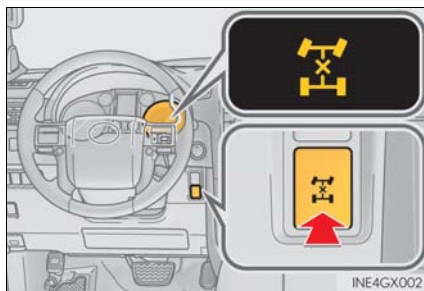 

Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.


The center differential lock indicator will come on.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

To unlock the center differential, push the switch again.

## Crawl Control (if equipped)

 Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Minimizes loss of traction or vehicle slip when driving on slippery road surfaces, helping for stable driving.

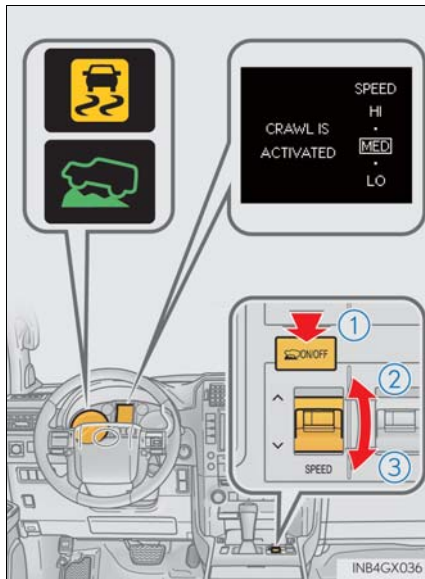


- ① On/off  
The Crawl Control indicator is lit and the slip indicator flashes when operating.  
Also, the operating status and speed select status of the Crawl Control are shown on the multi-information display.
- ② Higher
- ③ Lower

## BSM (Blind Spot Monitor) (if equipped)

 The Blind Spot Monitor is a system that has 2 functions;


- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function  
Assists the driver when backing up

These functions use same sensors.

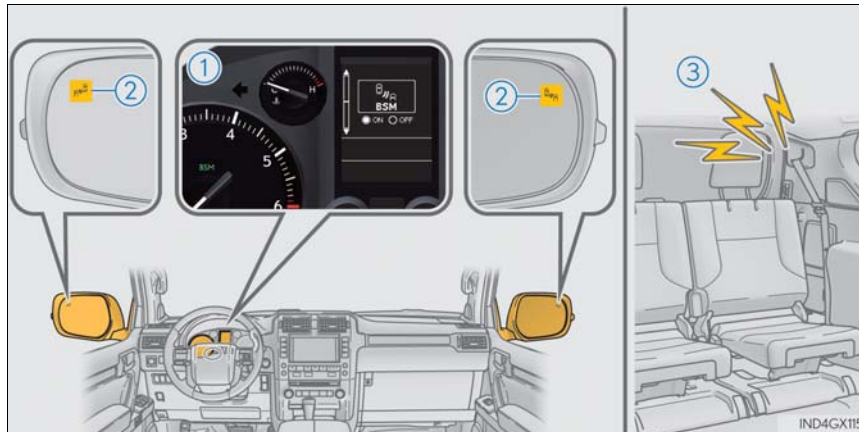

- ① The Blind Spot Monitor on/off screen and indicator  
The Blind Spot Monitor system can be turned on/off on the multi-information display. When the system is set to on, the indicator illuminates in the meter. The Blind Spot Monitor function and the Rear Cross Traffic Alert function are turned on/off simultaneously.
- ② Outside rear view mirror indicator  
The Blind Spot Monitor function:  
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.  
The Rear Cross Traffic Alert function:  
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ The Rear Cross Traffic Alert buzzer (The Rear Cross Traffic Alert function only)  
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.


## ■ Turning the Blind Spot Monitor system on

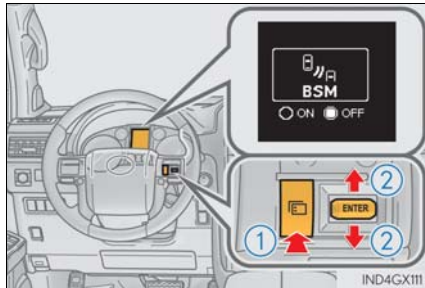 

**1** Display the Blind Spot Monitor on/off screen.

① Press the menu switch.  
The multi-information display will change modes to electronic features control mode.

 ② Press the "ENTER" switch upwards or downwards until "BSM" appears in the multi-information display.



**2** Press the "ENTER" switch to change to "ON".

"BSM" indicator will be displayed.


Each pressing of the switch turns the Blind Spot Monitor on and off.

When on, the buzzer sounds to inform the driver that the system is operational.

Press the menu switch to change to the normal display.


## Headlights
 
### ► Type A

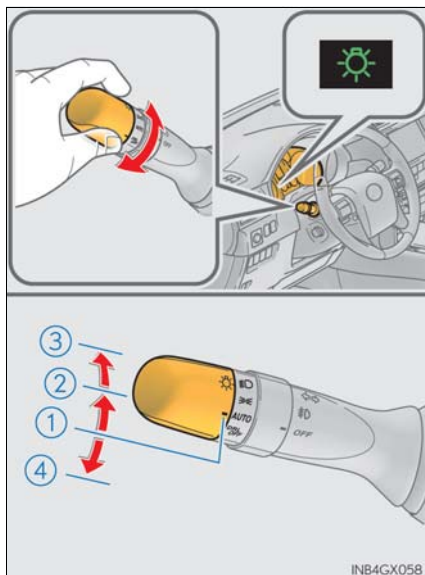


- ① AUTO The headlights, parking lights, daytime running lights and so on turn on and off automatically (when the engine switch is in IGNITION ON mode).
- ②  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- ③  The headlights and all the lights listed above (except daytime running lights) turn on.
- ④  The daytime running lights turn off.

 ► Type B

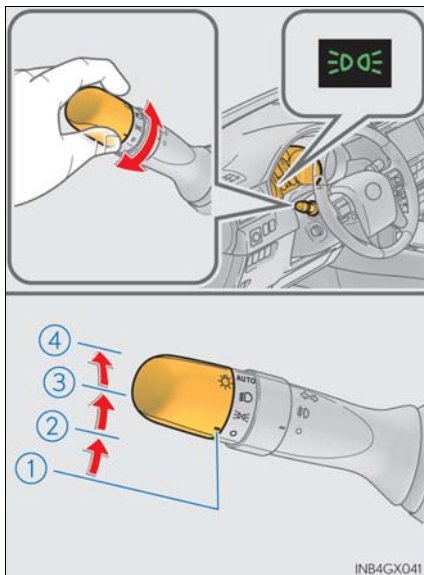

- ① ○ The daytime running lights turn on.
- ② ☰ The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- ③ ☸ The headlights and all lights listed above (except daytime running lights) turn on.
- ④ **AUTO** The headlights, parking lights, daytime running lights and so on turn on and off automatically (when the engine switch is in IGNITION ON mode).

 ■ Turning on the high beam headlights

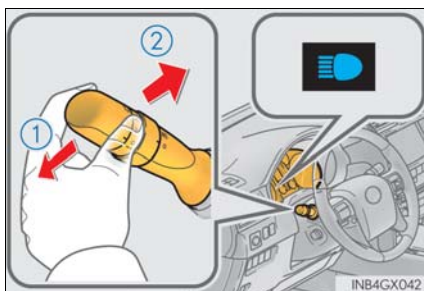


- ① With the headlights on, push the lever away from you to turn on the high beams.  
When the light switch is in "AUTO" position, the Automatic High Beam system will be activated.  
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.  
You can flash the high beams with the headlights on or off.

## Automatic High Beam (if equipped)

 The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

### ■ Activating the Automatic High Beam system

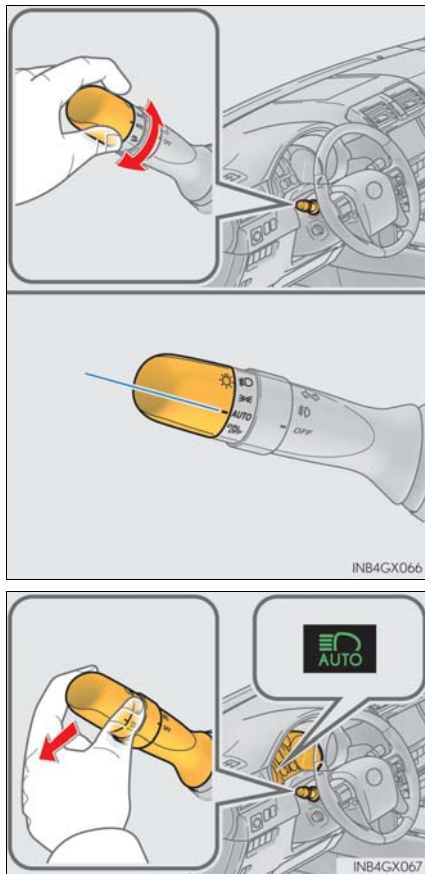

- 1 Turn the headlight switch to “AUTO” position.


- 2 Push the lever away from you.  
The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):

- Vehicle speed is above approximately 20 mph (32 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.


## Windshield Wipers and Washers
 
### ■ Intermittent windshield wipers with interval adjuster

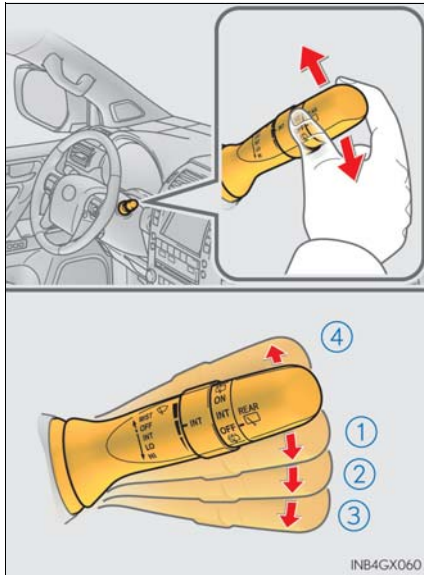

- ① Intermittent operation
- ② Low speed operation
- ③ High speed operation
- ④ Temporary operation

 Wiper intervals can be adjusted when intermittent operation is selected.

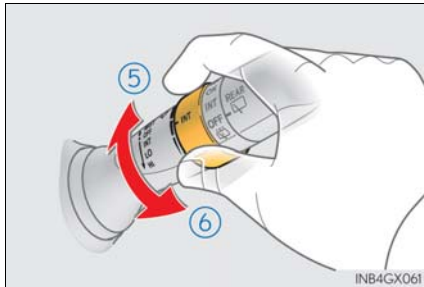


- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency



- ⑦ Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.  
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

## ■ Rain-sensing windshield wipers
 
### ► Type A

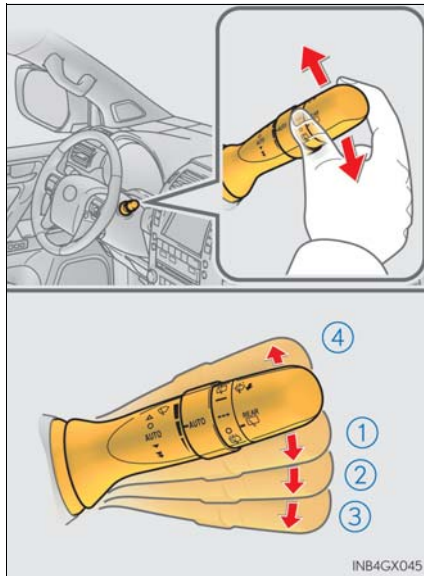

① Rain-sensing operation ("AUTO")

 
② Low speed operation

③ High speed operation

④ Temporary operation


When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.



⑤ Increases the sensitivity

 ⑥ Decreases the sensitivity

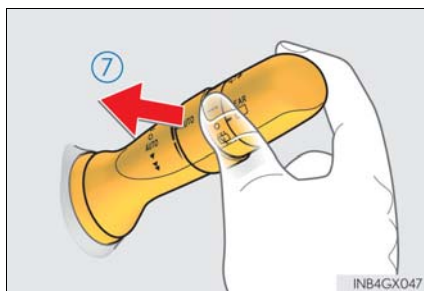


⑦ Washer/wiper dual operation

The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)


Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

 ► Type B

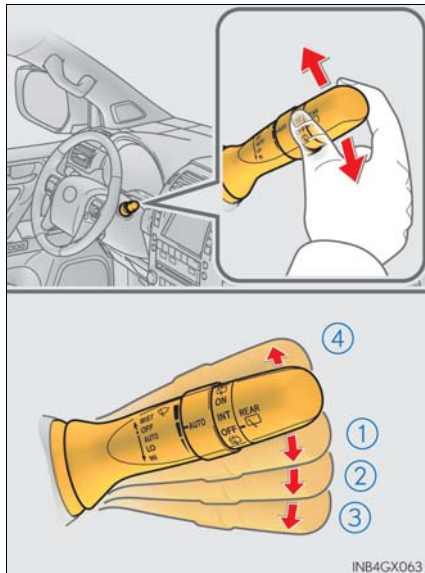

- ① Rain-sensing operation ("AUTO")
- ② Low speed operation
- ③ High speed operation
- ④ Temporary operation  
When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

 The sensor sensitivity can be adjusted when "AUTO" is selected.

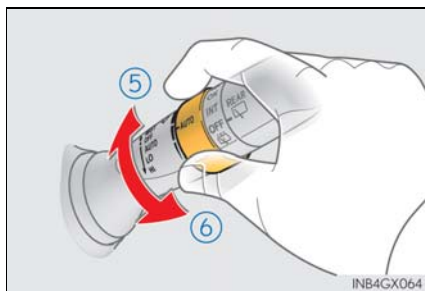


- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity



- ⑦ Washer/wiper dual operation  
The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)  
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.


## Rear Window Wiper and Washer
 
### ► Type A

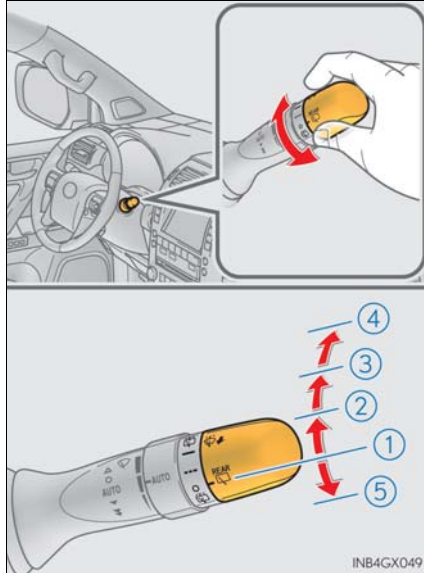

- ① ○ Off
- ② - - - Intermittent operation
- ③ — Normal operation
- ④ Washer/wiper dual operation
- ⑤ Washer/wiper dual operation

### ► Type B

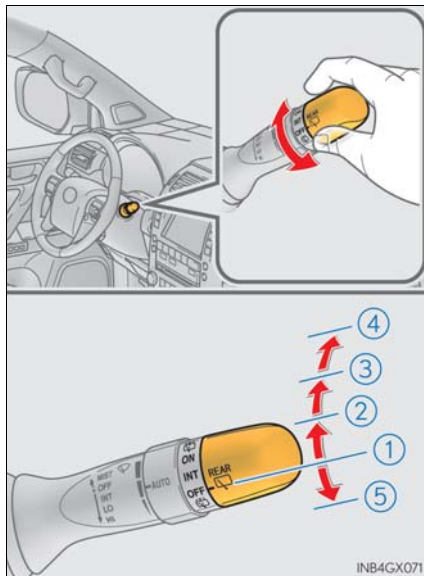 


- ① **OFF** Off
- ② **INT** Intermittent operation
- ③ **ON** Normal operation
- ④ Washer/wiper dual operation
- ⑤ Washer/wiper dual operation

## Touch Screen (with navigation system)

 This system is operated mainly by selecting the buttons on the screen. (Referred to as screen buttons in this manual.)

For details, see the "NAVIGATION SYSTEM OWNER'S MANUAL".

### Basic operation

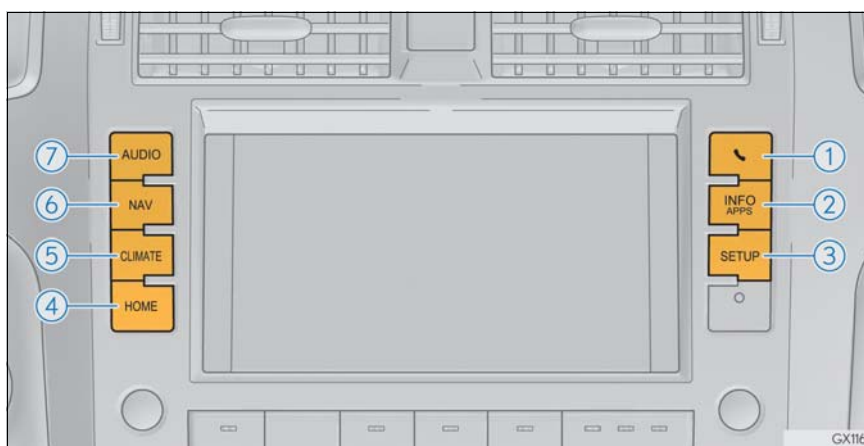

- ① Press to display the hands-free operation screen.
- ② Press to display the "Information" screen.
- ③ Press to display the "Setup" screen.
- ④ Press to display the home screen.
- ⑤ Press to display the air conditioning control screen.
- ⑥ Press to display the map screen.
- ⑦ Press to display the audio/visual screen.

## ■ Home

### ► Three-way split screen



Press the "HOME" button to display the home screen.

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth® connection
- ② Select to change the display items/area and the home screen layout.

### ► Two-way split screen



## ■ Screen scroll operation

 


Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.

- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

## ■ Setting a route

While route guidance is operating, you can change the route using the following method.

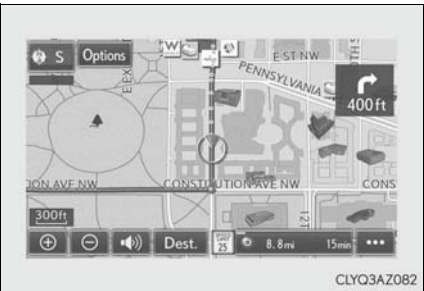

**1** Select "Options".



**2** Select "Edit Route".



- 3** Select the item to be set.
- ① Set route preferences
  - ② Set detours
  - ③ Change route type
  - ④ Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

## Navigation System (if equipped)

### Register home

 


**1** Press the "SETUP" button.

**2** Select "Navigation".




**3** Select "Home".

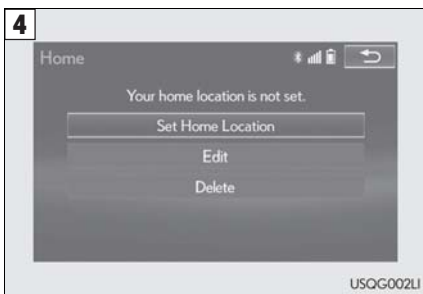

**4** Select "Set Home Location".

 **5** Select "Address".

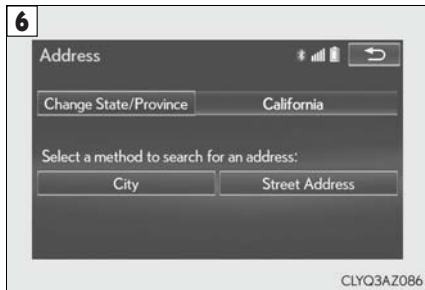


- 6** Select "City".
- 7** Enter a city name and select "OK".
- 8** Select the screen button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.
- 9** Enter a street name and select "OK".
- 10** When the desired street name is found, select the corresponding screen button.
- 11** Enter a house number and select "OK".
- 12** Select "OK".

## ■ Destination input — Search by address
 
### ► Select by city name



- 1 Press the "NAV" button.
- 2 Select "Dest.".
- 3 Select "Address".


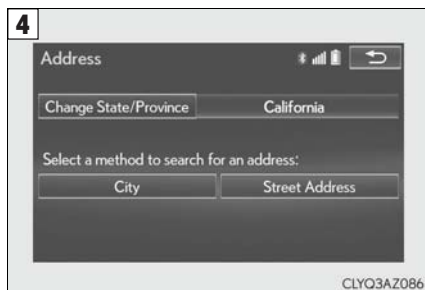


- 4 Select "City".



- 5 Enter a city name and select "OK".
- 6 Select the screen button of the desired city name from the displayed list.
- 7 Enter a street name and select "OK".
- 8 When the desired street name is found, select the corresponding screen button.
- 9 Enter a house number and select "OK".
- 10 Select "Go".
- 11 Select "OK".

  ► Select by street address

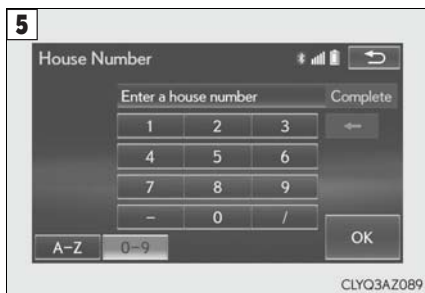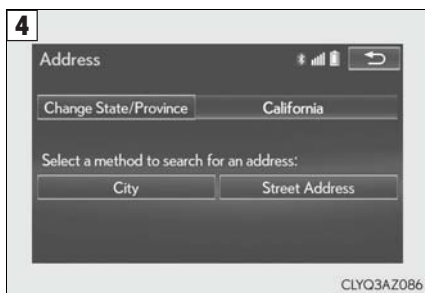

**1** Press the “NAV” button.

**2** Select “Dest.”.

**3** Select “Address”.

**4** Select “Street Address”.

**5** Enter a house number and select “OK”.

**6** Enter a street name and select “OK”.

**7** When the desired street name is found, select the corresponding screen button.

 
**8** Enter a city name and select “OK”.

**9** Select the screen button of the desired city name from the displayed list.

**10** Select “Go”.

**11** Select “OK”.

■ Destination input——Search points of interest by name

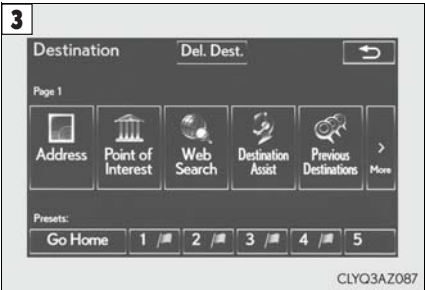

- 1** Press the “NAV” button.
- 2** Select “Dest.”.
- 3** Select “Point of Interest”.





- 4** Select “Name”.
- 5** Enter a POI name and select “OK”.



- 6** Select the screen button of the desired POI.
- 7** Select “Go”.
- 8** Select “OK”.

**Destination input — Search points of interest by category**

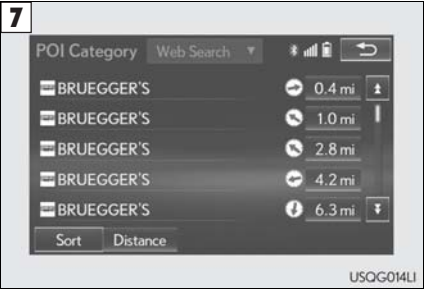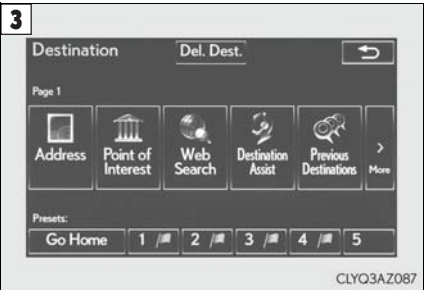  

- 1** Press the "NAV" button.
- 2** Select "Dest.".
- 3** Select "Point of Interest".
- 4** Select "Category".
- 5** Select "Near a Destination".
- 6** Select the desired POI category from the displayed list.
- 7** Select the screen button of the desired POI.
- 8** Select "Go".
- 9** Select "OK".

## ■ Destination input—— Search points of interest by phone number



- 1** Press the "NAV" button.
- 2** Select "Dest.".
- 3** Select "Point of Interest".

 


- 4** Select "Phone #".
- 5** Enter a phone number and select "OK".
- 6** Select "Go".
- 7** Select "OK".

## Hands-free System For Cellular Phone (with navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "[www.lexus.com/MobileLink](http://www.lexus.com/MobileLink)" (for U.S.A.) for more phone information.

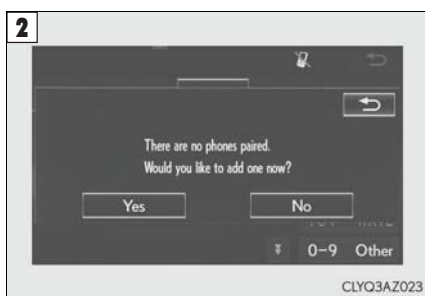

To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1** Press  on the steering wheel.
- 2** Select "Yes".



- 3** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.  
Refer to the cellular phone user's manual for cellular phone operation.

- 4** Register the Bluetooth® device using your Bluetooth® device.



- 5** Check that the following screen is displayed when registration is complete.




- 6 Select "OK" when the connection status changes from "Connecting..." to "Connected".


## ■ Contacts transfer



 - 1 Press the "SETUP" button.  
2 Select "Phone".

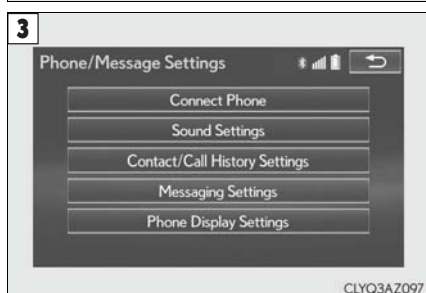

 - 3 Select "Contact/Call History Settings".

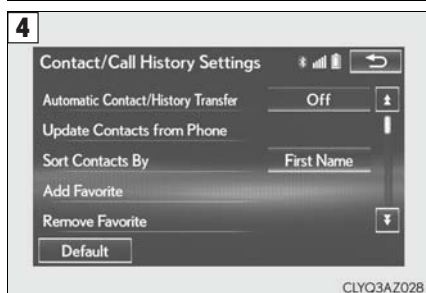

- 4 Select "Update Contacts from Phone".  
5 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

## ■ Registering the contacts in the favorites list

 


**1** Press the "SETUP" button.

**2** Select "Phone".



**3** Select "Contact/Call History Settings".

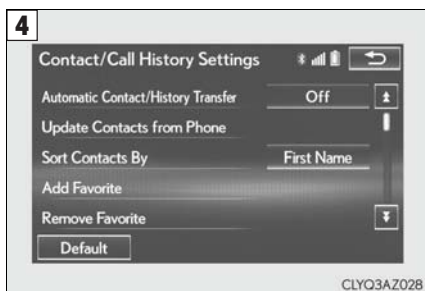

**4** Select "Add Favorite".




**5** Select the desired contact to add to the favorites list.

**6** Check that a confirmation screen is displayed when the operation is complete.

## ■ Calling by name

 You can call by giving a name registered in the contacts. For details, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.

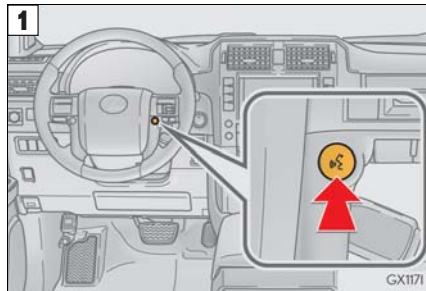

- 1 Press .
- 2 Say “Call <contacts> <phone types>”.




: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by favorites list



 - 1 Press  on the steering wheel.
- 2 Select the “Favorites” tab and select the desired contact.

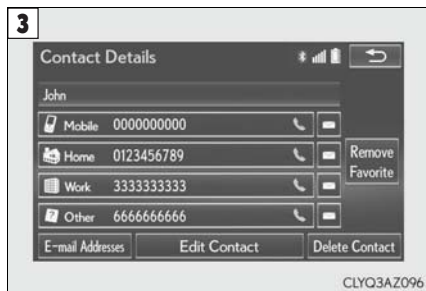

- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.


## ■ Calling using e-mail/SMS/MMS message



 - 1 Press  on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the "Call" screen is displayed.

The tab display may vary depending on the type of cellular phone.


## ■ Receiving a call

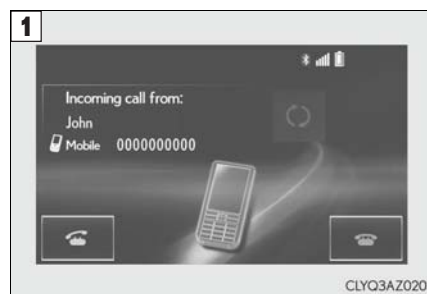

- 1 When a call is received, this screen is displayed with a sound.
- 2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

## ■ Steering switches

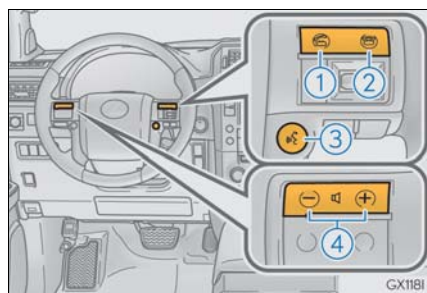 


- ① Sending/Receiving/"Phone" screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

## Audio System (with navigation system)
 
### Audio control screen


Follow the procedure below to display the audio control screen.

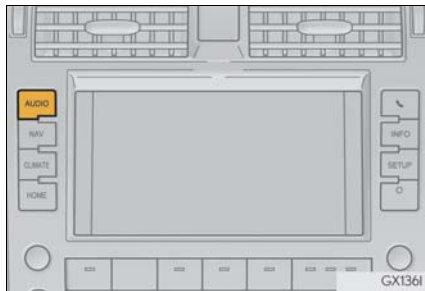

- 1 Press the "AUDIO" button.


### Remote control (steering wheel switches)

 Some audio features can be controlled using the switches on the steering wheel.

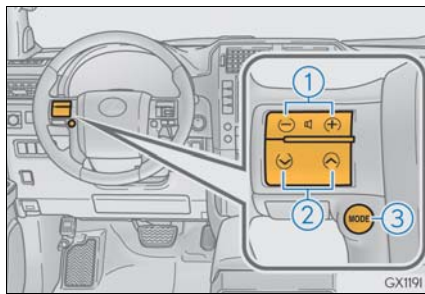

- ① Increases/decreases volume
- ② Radio mode: Selects a radio station/channel  
Audio CD mode: Selects a track  
MP3/WMA/AAC disc mode: Selects a file  
DVD mode: Selects a chapter  
iPod mode: Selects a track/file
- ③ Press: Change audio modes  
Press and hold: Mute/unmute or pause/resume the current operation

## ■ Basic operation

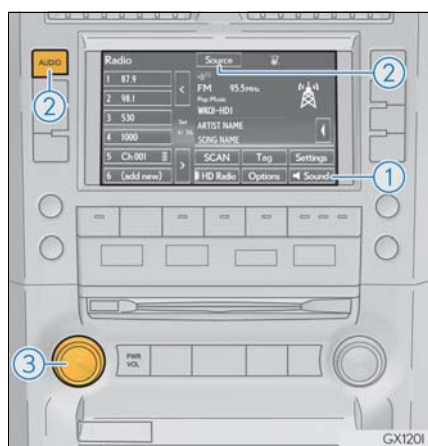 


- ① Sound settings
- ② Audio sources
  - AM:** AM radio
  - FM:** FM radio
  - SAT:** Satellite radio<sup>\*1</sup>
  - APPS (if equipped):**
    - Internet radio broadcast
  - DISC:** DVD player
  - iPod:** iPod
  - USB:** USB memory
  - Bluetooth<sup>\*2</sup>:** Bluetooth<sup>®</sup> audio
  - AUX:** Auxiliary audio device
- ③ Power/Volume

<sup>\*1</sup>: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 92)

<sup>\*2</sup>: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## Radio

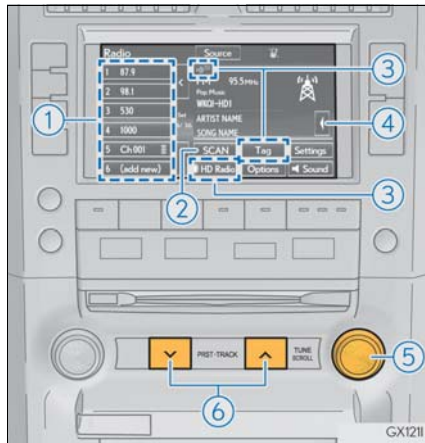 

- ① Tuning to preset stations/channels
- ② Scanning for receivable stations
- ③ Using HD Radio™ Technology (for U.S.A., if equipped)
- ④ Cache radio operation buttons
- ⑤ Adjusting the frequency
- ⑥ Press: Selects a preset station  
Press and hold: Seeks for a station


### Entering station presets

 - 1 Tune in the desired station.
- 2 Select "add new".
- 3 Select "Yes" on the confirmation screen.
- 4 Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


## DVD player

### Playing an audio CD

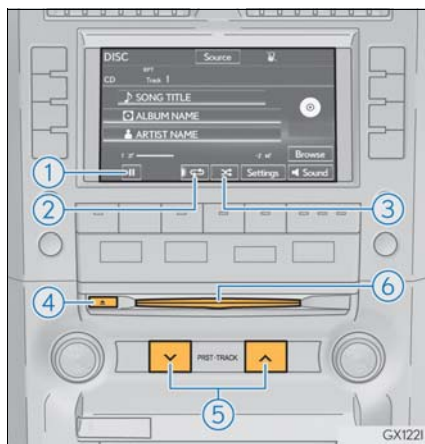


- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Disc eject
- ⑤ Selecting a track
- ⑥ Disc slot

### ■ Playing a CD with MP3/WMA/AAC files

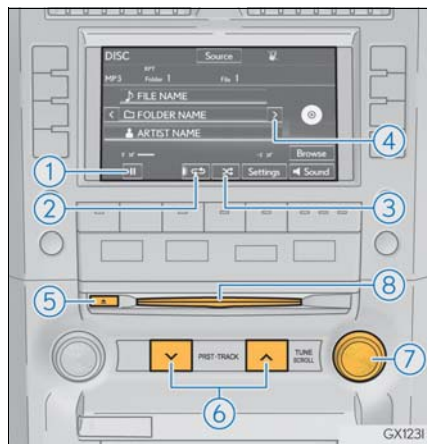 

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a folder
- ⑤ CD eject
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Selecting a file
- ⑧ Disc slot


### ■ Playing a DVD

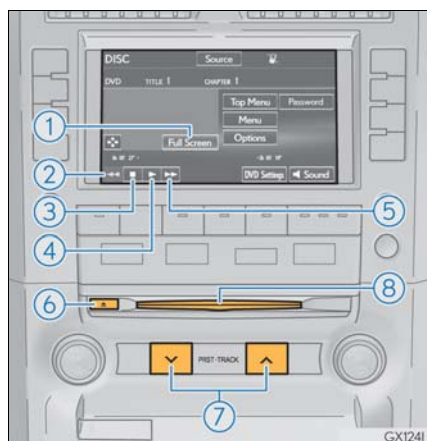 

- ① Image display (full screen)
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ DVD eject
- ⑦ Selecting a chapter
- ⑧ Disc slot


## ■ Operating an iPod
 
### ■ Playing an iPod audio

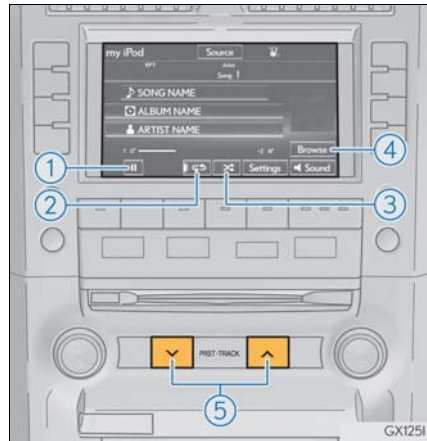

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a play mode
- ⑤ Selecting a track/fast forward/rewind

### ■ Playing an iPod video

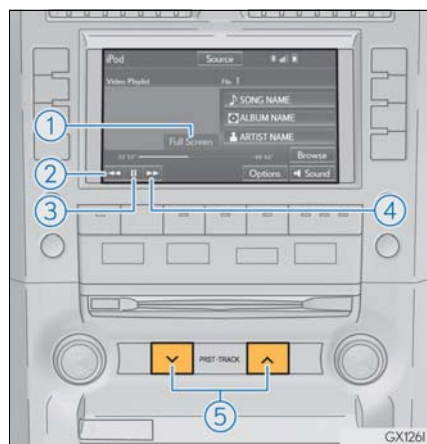 


- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

## Touch Screen (with multimedia system)

 This system is operated mainly by selecting the buttons on the screen. (Referred to as screen buttons in this manual.)

For details, see the "MULTIMEDIA OWNER'S MANUAL".


### Basic operation

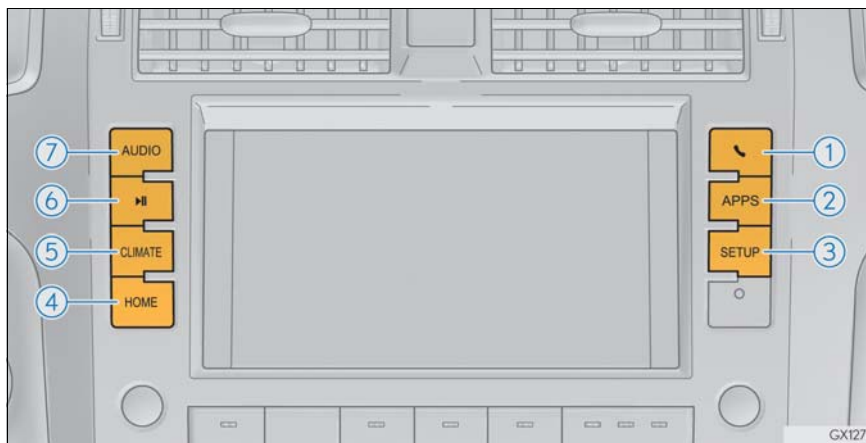

- ① Press to display the hands-free operation screen.
- ② Press to display the "Apps" screen.
- ③ Press to display the "Setup" screen.
- ④ Press to display the home screen.
- ⑤ Press to display the air conditioning control screen.
- ⑥ Press to play/pause.
- ⑦ Press to display the audio/visual screen.

### Screen for display settings

 Go to "Display": "SETUP" → "Display"

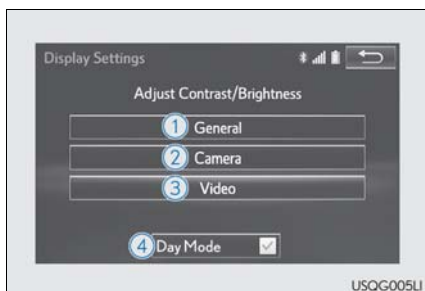


- ① Adjust screen quality.
- ② Adjust screen quality of the rear camera.
- ③ Adjust screen quality of the video.
- ④ Change to day mode.

## Hands-free System For Cellular Phone (with multimedia system)
 
### ■ How to register a Bluetooth® phone


Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "[www.lexus.com/MobileLink](http://www.lexus.com/MobileLink)" (for U.S.A.) for more phone information.

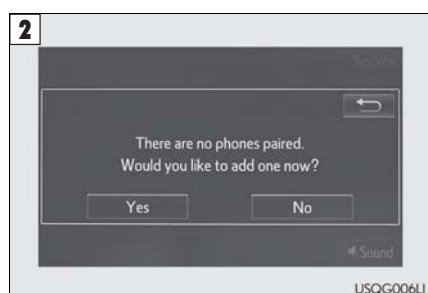

To use a Bluetooth® phone, it is necessary to first register it in the system.

**1** Press  on the steering wheel.

 
**2** Select "Yes".

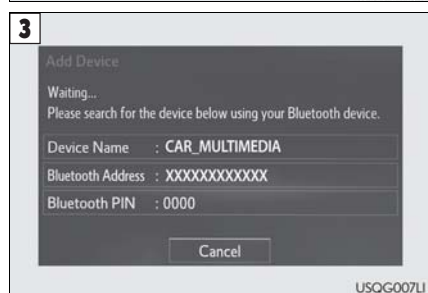

**3** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

Refer to the cellular phone user's manual for cellular phone operation.

 **4** Register the Bluetooth® device using your Bluetooth® device.

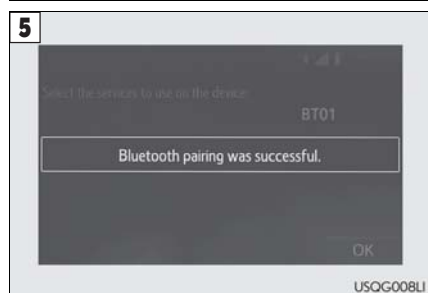

**5** Check that the following screen is displayed when registration is complete.



- 6 Select "OK" when the connection status changes from "Connecting..." to "Connected".

### ■ Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "SETUP" → "Phone" → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

### ■ Dialing

- 1 Go to "Dial Pad": Press the  switch on the steering wheel. → "Dial Pad".
- 2 Input a phone number.
- 3 Press the  switch on the steering wheel or select .

### ■ Dialing from the contacts

- 1 Go to "Contacts": Press the  switch on the steering wheel. → "Contacts".
- 2 Choose the desired contact to call from the list.
- 3 Choose the number to make a call.

## ■ When the contacts is empty

You can transfer the phone numbers in a Bluetooth® phone to the system. Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.

 
- 1 Press the  switch on the steering wheel.  
If the contacts is empty, a message will be displayed.

► **For a PBAP compatible Bluetooth® phone and “Automatic Contact/History Transfer” is off**



- 2 To transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Contact/History Transfer”. Select “Once” to transfer all the contacts from a connected cellular phone only once.

► **For a PBAP incompatible and OPP compatible Bluetooth® phone**

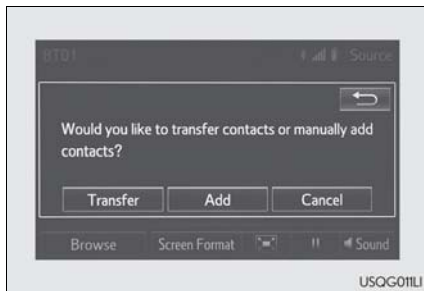


- 2 Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone. Select “Add” if you want to add a new contact manually.

## ■ Dialing from favorites

 You can make a call using numbers registered in the favorites.

- 1 Go to "Favorites": Press the  switch on the steering wheel. → "Favorites".
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the  switch on the steering wheel or press the  button.

## ■ To answer the phone

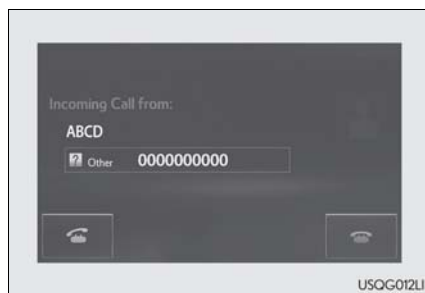


- 1 When a call is received, the following screen is displayed together with a sound.
- 2 Press the  switch on the steering wheel or select .

## ■ To refuse a call

 Press the  switch on the steering wheel or select .

## ■ Operating a telephone using the steering wheel switches

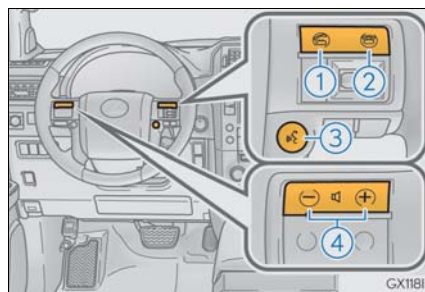


- ① Off hook switch
- ② On hook switch
- ③ Talk switch  
Press this switch to operate the voice command system.
- ④ Volume switch
  - Press the "+" side to increase the volume.
  - Press the "-" side to decrease the volume.

## Audio System (with multimedia system)
 
### ■ Audio control screen


Follow the procedure below to display the audio control screen.

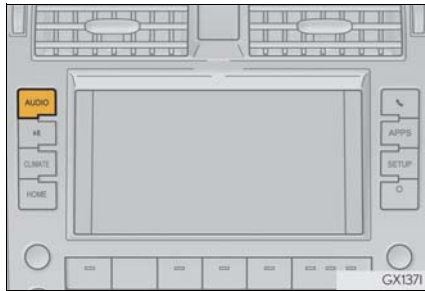

- 1 Press the "AUDIO" button.

### ■ Remote control (steering wheel switches)

 Some audio features can be controlled using the switches on the steering wheel.

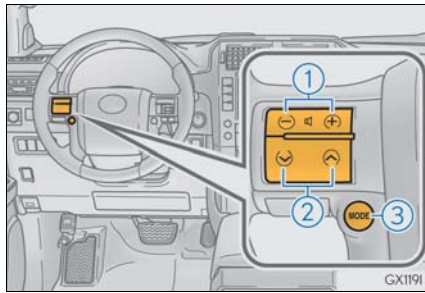

- ① Increases/decreases volume
- ② Radio mode: Selects a radio station/channel  
Audio CD mode: Selects a track  
MP3/WMA/AAC disc mode: Selects a file  
iPod mode: Selects a track/file
- ③ Press: Change audio modes  
Press and hold: Mute/unmute or pause/resume the current operation

## ■ Basic operation



- ① Sound settings
- ② Audio sources
  - AM:** AM radio
  - FM:** FM radio
  - XM:** Satellite radio\*
  - CD:** CD player
  - iPod:** iPod
  - USB:** USB memory
  -  **Audio:** Bluetooth® audio
  - AUX:** Auxiliary audio device
- ③ Power/Volume

\*: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 92)

## Radio



- ① Tuning to preset stations/channels
- ② Using HD Radio™ Technology (for U.S.A., if equipped)
- ③ Scanning for receivable stations
- ④ Press: Selects a preset station  
Press and hold: Seeks for a station
- ⑤ Adjusting the frequency

### Entering station presets

- 1 Tune in the desired station.
- 2 Select "(add new)".
- 3 Select "Yes" on the confirmation screen.
- 4 Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

## ■ CD player

### ■ Playing an audio CD



- ① Random playback
- ② Repeat playback
- ③ Playback/pause
- ④ CD eject
- ⑤ Selecting a track
- ⑥ Disc slot

 
### ■ Playing a CD with MP3/WMA/AAC files



- ① Displaying a folder list
- ② Random playback
- ③ Repeat playback
- ④ Playback/pause
- ⑤ CD eject
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Selecting a file
- ⑧ Disc slot

## ■ Operating an iPod

### ■ Playing an iPod audio

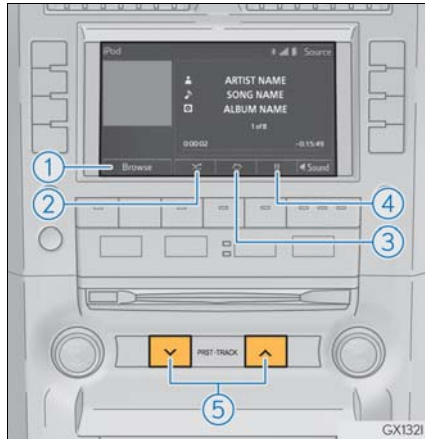

- ① Selecting a play mode
- ② Random playback
- ③ Repeat playback
- ④ Playback/pause
- ⑤ Selecting a track/fast forward/rewind


### ■ Playing an iPod video



- ① Image display (full screen)
- ② Playback/pause
- ③ Selecting a file

## Rear Seat Entertainment System (if equipped)

 
The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio/visual system.

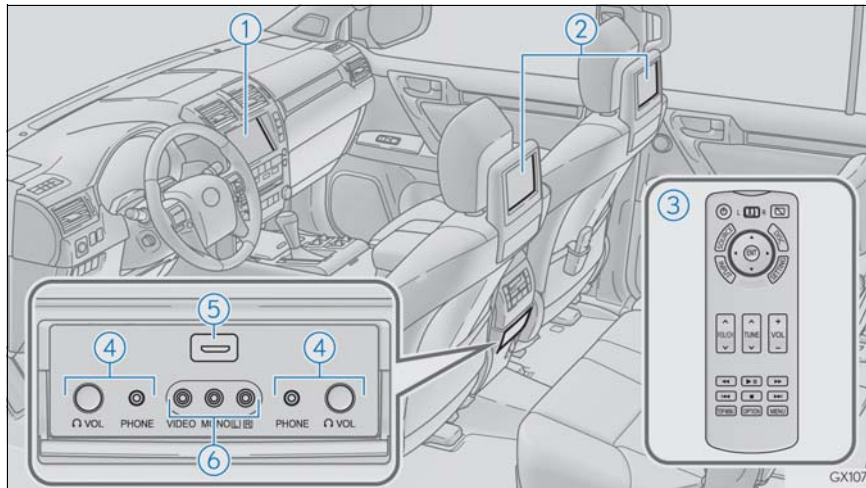

- ① Front audio/visual system
- ② Displays
- ③ Rear seat entertainment system controller
- ④ Headphone volume control dials and headphone jacks
- ⑤ HDMI port
- ⑥ A/V input port


For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

## ■ Basic operation

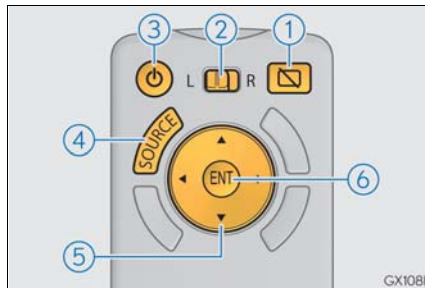 

- ① Turns display off
- ② Selects the display to be operated  
L: left side display  
R: right side display
- ③ Power on or off
- ④ Turning on the audio source selection screen
- ⑤ Selecting an icon
- ⑥ Inputting the selected icon


## ■ AM/FM/SAT

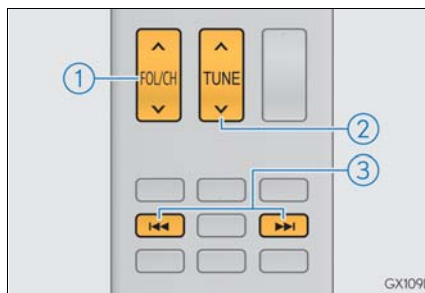 

Select radio mode on the source screen to display the control screen.

- ① Selecting a preset station/channel
- ② Press: Tuning the station/channel  
Press and hold: Seeking a station/channel
- ③ Press: Tuning the station/channel  
Press and hold: Seeking a station/channel

## ■ DISC/USB/iPod/BT-A

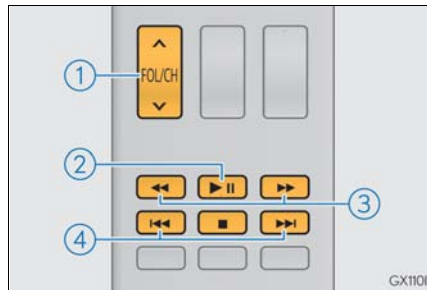 


Select desired mode on the source screen to display the control screen.

- ① Selecting a folder/an album
- ② Play/pause
- ③ Fast forward or rewind
- ④ Press: Selecting a track/file  
Press and hold: Fast forward or rewind


## ■ DVD video

 Press "DISC" or select disc mode to display DVD video.

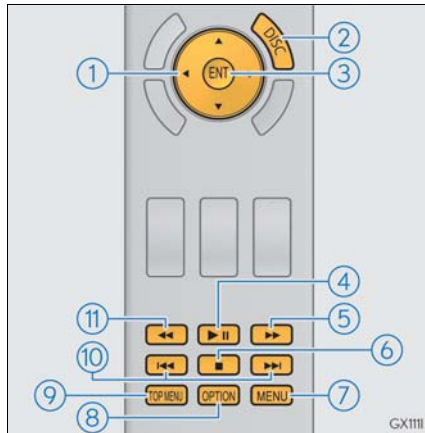

- ① Selecting an icon
- ② Turning on the DVD mode
- ③ Inputting the selected icon
- ④ Playing/pausing a disc
- ⑤ Fast forwarding a disc during playback and forward slowly during pause.
- ⑥ Stopping a screen
- ⑦ Turning on the menu
- ⑧ Turning on the option screen
- ⑨ Turning on the title selection screen
- ⑩ Press to select a chapter  
Press and hold to fast forward or rewind a chapter
- ⑪ Rewinding a disc

## ■ Headphone jacks

 

To listen to the rear audio, use headphones.

- ① To use the headphones, connect them to the jack.
- ② To adjust the volume.

## Front Air Conditioning System

### Control panel



### Control screen

► Without a navigation system



► With a navigation system



### ■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

### ■ Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.

### ■ Changing the air flow mode

Select an air outlet switch.

### ■ Option control screen

Touch  on the climate screen to display the option control screen. The functions can be switched on and off.



① Select to set cooling and dehumidification function on/off

② Adjust the temperature for driver and passenger seats separately ("DUAL" mode)/driver, passenger and rear seats separately ("3-ZONE" mode)

③ Prevent ice from building up on the windshield and wiper blades (if equipped)

④ Remove pollen from the air

### ■ Using the automatic mode

Press the "AUTO" button to turn on the air flow and adjust the temperature setting.

### ■ Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)/driver, passenger and rear seats separately ("3-ZONE" mode)

To turn on the "DUAL"/"3-ZONE" mode, perform any of the following procedures:

- Press the "DUAL"/"3-ZONE" button.
- Select "DUAL"/"3-ZONE" on the option control screen.
- Adjust the passenger's side temperature setting.

## Rear Air Conditioning System (if equipped)

### ■ Control panel



#### ■ Adjusting the temperature setting

Press “^” on the “TEMP” button to increase the temperature and “v” to decrease the temperature.

#### ■ Adjusting the fan speed setting

Press “^” on  to increase the fan speed and “v” to decrease the fan speed.

#### ■ Changing the air flow mode

Press .

The air flow mode switch each time the button is pressed.

#### ■ Using the automatic mode

Press the “AUTO” button to turn on the air flow and adjust the temperature setting.

 
## ■ Control screen (front controller)

Touch  to display the rear air conditioning control screen.

► Without a navigation system




► With a navigation system

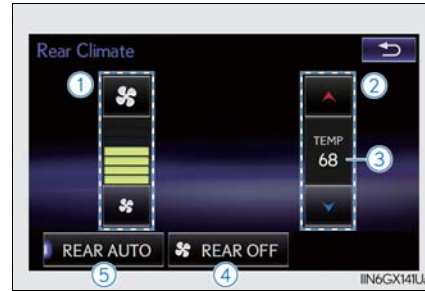

- ① Adjust the fan speed setting
- ② Adjust the rear seats temperature setting
- ③ Display the rear seats temperature setting
- ④ Turn the fan off
- ⑤ Select to set automatic mode

## Voice Command System
 
### Basic operation

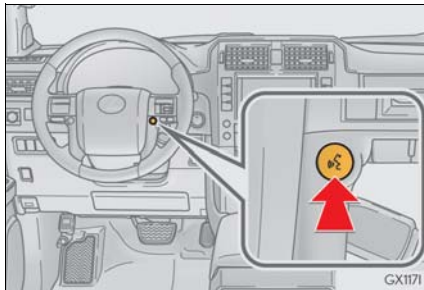

- 1** Press the talk switch.  
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.  
On the list screen, you can select the desired command.

Continue on to pages 83-86 for a detailed list of Voice Commands for the following categories:

|             |         |
|-------------|---------|
| Basic ..... | page 83 |
| Apps .....  | page 83 |
| Navi.....   | page 83 |
| Phone ..... | page 84 |
| Radio.....  | page 84 |
| Audio ..... | page 85 |
| Info.....   | page 85 |
| Other ..... | page 86 |

#### Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- A large icon  (with navigation system) or  (with multimedia system) will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

## ■ Command list

### ► Basic (vehicles with multimedia system)

| Command         | Action                                                                    |
|-----------------|---------------------------------------------------------------------------|
| "Help"          | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back"       | Returns to the previous screen                                            |
| "Next Page"     | Displays the next page                                                    |
| "Previous Page" | Displays the previous page                                                |
| "Go to <tab>"   | Displays the command list of the selected tab                             |

### ► Basic (vehicles with navigation system)

| Command       | Action                                                                    |
|---------------|---------------------------------------------------------------------------|
| "Help"        | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back"     | Returns to the previous screen                                            |
| "Go to <tab>" | Displays the command list of the selected tab                             |
| "More Hints"  | Displays more commonly used commands                                      |
| "Cancel"      | Cancels the voice command system                                          |

### ► Apps (vehicles with navigation system)

| Command         | Action                                    |
|-----------------|-------------------------------------------|
| "Launch <apps>" | Activates the LEXUS App Suite application |

### ► Navi (vehicles with navigation system)

| Command                | Action                                                                                   |
|------------------------|------------------------------------------------------------------------------------------|
| "Find <POI category>"  | Displays a list of <POI category <sup>*1</sup> > near the current position <sup>*2</sup> |
| "Enter an Address"     | Enables setting a destination by saying the address                                      |
| "Go Home"              | Displays the route to home                                                               |
| "Pause Guidance"       | Stops the route guidance                                                                 |
| "Resume Guidance"      | Resumes the route guidance                                                               |
| "Show <POI> icons"     | Displays the specified POI icons                                                         |
| "Delete Destination"   | Deletes the destination                                                                  |
| "Previous Destination" | Displays previous destinations                                                           |

\*1: For example; "Gas stations", "Restaurants", etc.

\*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

| Command                        | Action                                                                 |
|--------------------------------|------------------------------------------------------------------------|
| "Redial"                       | Places a call to the phone number of the latest outgoing call          |
| "Call Back"                    | Places a call to the phone number of latest incoming call              |
| "Show Recent Calls"            | Displays the call history screen                                       |
| "Dial <phone number>"          | Places a call to the said phone number                                 |
| "Call <contacts> <phonetypes>" | Place a call to the said phone type of the contact from the phone book |

► Radio (vehicles with navigation system)

| Command                              | Action                                                                   |
|--------------------------------------|--------------------------------------------------------------------------|
| "Tune to <frequency> AM"             | Changes the radio to the specified AM frequency                          |
| "Tune to <frequency> FM"             | Changes the radio to the specified FM frequency                          |
| "Play <genre> station"               | Changes the radio to an FM station of the specified genre                |
| "Tune to FM <frequency> HD <number>" | Changes the radio to the specified HD radio station                      |
| "Tune to preset <number>"            | Changes the radio to the specified preset radio station                  |
| "Tune to <name>"                     | Changes the radio to the satellite radio channel with the specified name |
| "Tune to channel <number>"           | Changes the radio to the specified satellite radio channel number        |
| "Play <genre> satellite station"     | Changes the radio to a satellite radio channel of the specified genre    |

► Audio

| Command                     | Action                                  |
|-----------------------------|-----------------------------------------|
| "Play Playlist <playlists>" | Plays tracks from the selected playlist |
| "Play Artist <artist>"      | Plays tracks from the selected artist   |
| "Play Song <songs>"         | Plays the selected track                |
| "Play Album <albums>"       | Plays tracks from the selected album    |

► Info (vehicles with multimedia system)

| Command         | Action                       |
|-----------------|------------------------------|
| "Show Forecast" | Displays weather information |
| "Show Traffic"  | Displays traffic information |

► Info (vehicles with navigation system)

| Command              | Action                                           |
|----------------------|--------------------------------------------------|
| "Destination Assist" | Connects the system to the Lexus response center |
| "Show Forecast"      | Displays weather information                     |
| "Show Traffic"       | Displays traffic information                     |
| "Lexus Insider"      | Displays the Lexus insider list                  |

► Other (vehicles with navigation system)

| Command                         | Action                                                                                   |
|---------------------------------|------------------------------------------------------------------------------------------|
| "Turn Climate Control ON"       | Turns air conditioning system on                                                         |
| "Turn Climate Control OFF"      | Turns air conditioning system off                                                        |
| "Warmer"                        | Increases the temperature of the air conditioning system                                 |
| "Cooler"                        | Decreases the temperature of the air conditioning system                                 |
| "<XX> degrees"                  | Changes the set temperature of the air conditioning system to <xx> degrees* <sup>1</sup> |
| "Turn Music On"                 | Turns the audio system on                                                                |
| "Turn Music Off"                | Turns the audio system off                                                               |
| "AM Radio"                      | Selects AM radio mode                                                                    |
| "FM Radio"                      | Selects FM radio mode                                                                    |
| "Sirius XM"                     | Selects satellite radio mode                                                             |
| "Disc"                          | Selects the selected disc mode                                                           |
| "USB"                           | Selects USB audio mode                                                                   |
| "iPod"                          | Selects iPod audio mode                                                                  |
| "Bluetooth* <sup>2</sup> Audio" | Selects Bluetooth® audio mode                                                            |
| "A.V."                          | Selects VTR mode                                                                         |
| "Auxiliary"                     | Selects AUX audio mode                                                                   |

 
\*<sup>1</sup>: Only within the possible temperature range of the air conditioning system

\*<sup>2</sup>: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

## Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

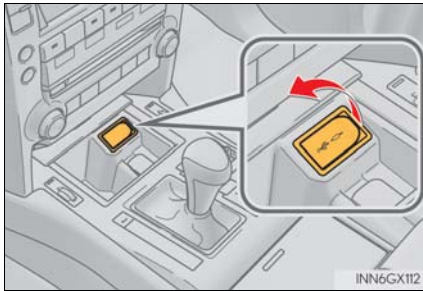


Open the auxiliary box lid, open the cover and connect the portable audio device.

## LEXUS Enform Safety Connect (if equipped)

 Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### ■ System components

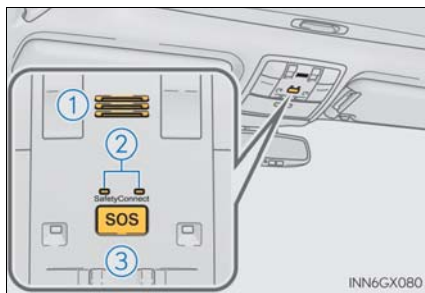

- ① Microphone
- ② LED light indicators
- ③ "SOS" button

### ■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification\***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Roadside Assistance**

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the “SOS” button in your vehicle for further subscription details.

## **Lexus Enform (if equipped)**

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL", "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

### **Function achieved by using a cellular phone (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

##### **LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

#### **Subscription**

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

- **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

- **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

## ■ Function achieved by using DCM

---

- **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 88)

## ■ LEXUS Enform Remote

---

- **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to

<http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

- **Subscription**

→P.91

## XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

### Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.xmradio.ca](http://www.xmradio.ca) (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

 
- ▶ U.S.A. Customers:  
Visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-515-3987
- ▶ Canadian Customers:  
Visit [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-438-9677

## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control, key or door lock switch.


For details the entry function or wireless remote control (→P.12, 13)

### ■ Door lock switches

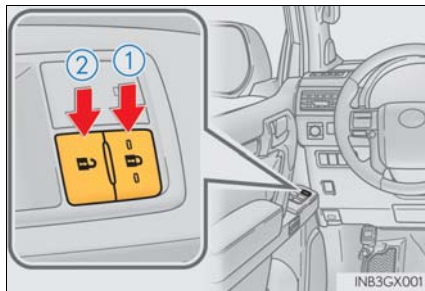


- ① Locks all the doors
- ② Unlocks all the doors

### ■ Inside lock buttons

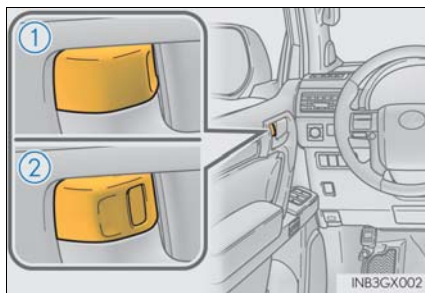 

- ① Locks the door
  - ② Unlocks the door
- The front doors can be opened by pulling the inside handles even if the lock buttons are in the lock position.

## ■ Rear door child-protector lock

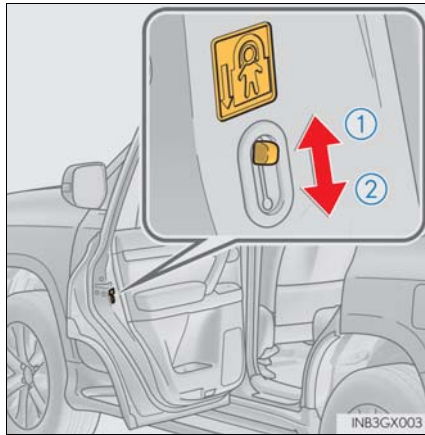 

The door cannot be opened from inside the vehicle when the lock is set.


① Unlock

② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

## Power Windows
 
### ■ Power window switches

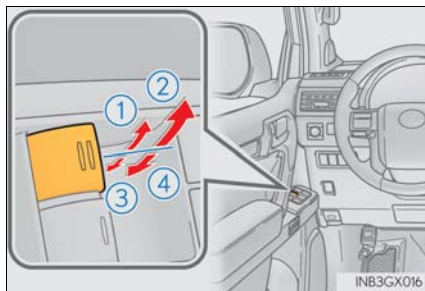

① Closing


② One-touch closing\*

③ Opening

④ One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

### ■ Window lock switch

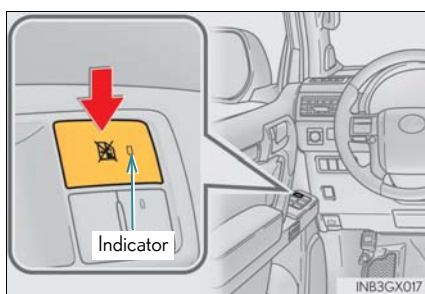 

Press the switch down to lock the passenger window switches.


The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the power window switches on the driver's side even if the lock switch is on.

## Moon Roof
 
### ■ Opening and closing

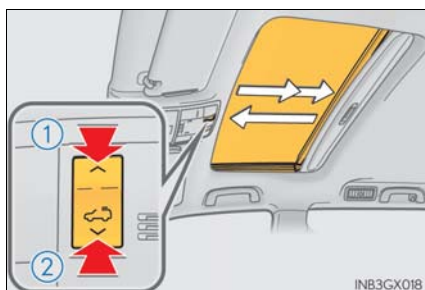

- ① Opens the moon roof\*  
The moon roof stops slightly before the fully open position to reduce wind noise.  
Press the switch again to fully open the moon roof.

- ② Closes the moon roof\*  
\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

### ■ Tilting up and down



 
- ① Tilts the moon roof up\*
  - ② Tilts the moon roof down\*
- \*: Lightly press either end of the moon roof switch to stop the moon roof partway.

## Fuel Tank Cap


### ■ Before refueling the vehicle

- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

### ■ Opening the fuel tank cap

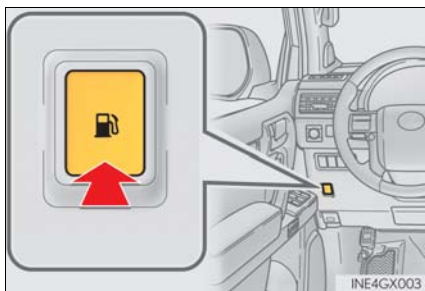

 - 1** Press the opener to open the fuel filler door.

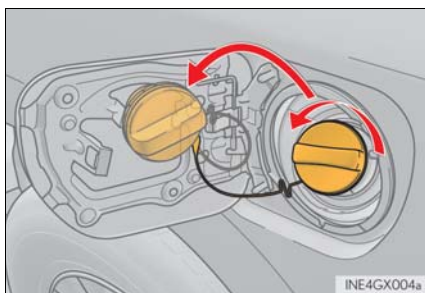

- 2** Turn the fuel tank cap slowly to open, and hang the fuel tank cap on the back of the fuel filler door.

What to do if ...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)



(Canada)

Brake system warning light

Stop the vehicle immediately.



Charging system warning light

Have the vehicle inspected immediately.



(U.S.A.)



(Canada)

Malfunction indicator lamp



SRS warning light



(U.S.A.)



(Canada)

ABS warning light



Pre-collision system warning light<sup>\*1,2</sup>



Slip indicator light



LED headlight warning light



Automatic headlight leveling system warning light<sup>\*2</sup>



Kinetic dynamic suspension system warning light



Low speed four-wheel drive indicator light<sup>\*2</sup>



Center differential lock indicator light<sup>\*2</sup>



(Blinking and then continuously on)

Tire pressure warning light

For further information, refer to the "OWNER'S MANUAL".

97

GX460\_QG\_OM60Q15U\_(U)

## What to do if ...

### Follow the correction procedures.

|                                                                                   |                              |                                                                                   |                                           |
|-----------------------------------------------------------------------------------|------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------|
|  | Open door warning light      |  | Master warning light                      |
|  | Low fuel level warning light |  | Tire pressure warning light* <sup>3</sup> |
|  | Seat belt reminder light     | (Illuminates without blinking)                                                    |                                           |

### See the "OWNER'S MANUAL".

|                                                                                     |                                             |                                                                                     |                                                        |
|-------------------------------------------------------------------------------------|---------------------------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------|
|    | Turn signal indicator                       |    | "SET" indicator                                        |
|    | Headlight indicator (U.S.A.)                |    | Dynamic radar cruise control indicator* <sup>1</sup>   |
|   | Tail light indicator (Canada)               |   | "LDA" (Lane Departure Alert) indicator* <sup>1</sup>   |
|  | Headlight high beam indicator               |  | Slip indicator                                         |
|  | Automatic High Beam indicator* <sup>1</sup> |  | VSC OFF indicator                                      |
|  | Fog light indicator* <sup>1</sup>           |  | Multi-terrain Select indicator* <sup>1</sup>           |
|  | Eco Driving Indicator Light                 |  | Crawl Control indicator* <sup>1</sup>                  |
|  | Cruise control indicator                    |  | Downhill assist control system indicator* <sup>1</sup> |

For further information, refer to the "OWNER'S MANUAL".

## What to do if ...

See the "OWNER'S MANUAL".



"2nd STRT" indicator



Low speed four-wheel drive indicator light



Center differential lock indicator



Intuitive parking assist indicator<sup>\*1</sup>



"PCS" warning light<sup>\*1</sup>  
(Flashes rapidly)



"BSM" (Blind Spot Monitor) indicator<sup>\*1</sup>



BSM (Blind Spot Monitor) outside rear view mirror indicators<sup>\*1</sup>



(U.S.A.)



"AIR BAG ON/OFF" indicator



(Canada)



"AIR BAG ON/OFF" indicator

For further information, refer to the "OWNER'S MANUAL".

<sup>\*1</sup>: If equipped.

 
<sup>\*2</sup>: Indicates a malfunction if the light continues flashing.

<sup>\*3</sup>: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## What to do if ...

### If the electronic key does not operate properly

#### ■ Unlocking and locking the doors

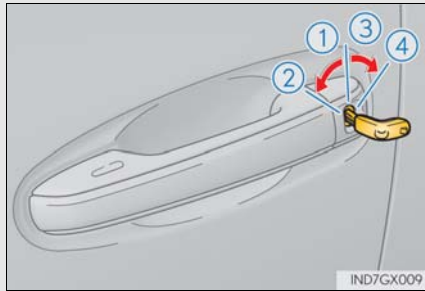


Use the mechanical key (→P.12) in order to perform the following operations (driver's door only):

- ① Locks all the doors
- ② Closes the windows and moon roof\* (turn and hold)
- ③ Unlocks the doors  
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- ④ Opens the windows and moon roof\* (turn and hold)

\*: These settings must be customized at your Lexus dealer.

#### ■ Starting the engine

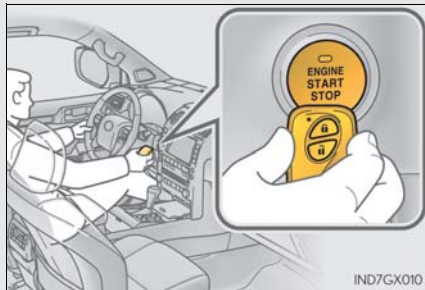 

- 1 Ensure that the shift lever is in P and depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the engine switch.  
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3 Press the engine switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the engine switch still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.

## What to do if ...



### If the engine does not start

Make sure that the correct operating procedures have been followed.

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.16)

#### Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the engine switch. (→P.15)

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.



#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:  
Lexus Roadside Assistance  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)
- In Hawaii:  
Servco Automotive Roadside Assistance/Customer Services  
**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:  
Lexus Roadside Assistance/Customer Service  
**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2017 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.