

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Audio System (with multimedia system)*	
Audio control screen	65
Remote control (steering wheel switches)	65
Basic operation.....	66
Radio	67
CD player	68
Operating an iPod.....	69
Audio System (with navigation system)*	
Audio control screen	55
Remote control (steering wheel switches)	55
Basic operation.....	56
Radio	57
DVD player	57
Operating an iPod.....	59
Automatic High Beam	35
BSM (Blind Spot Monitor).....	32
Crawl Control	31
Door Locks	92
Dynamic Radar Cruise Control.....	22
Eco Driving Indicator Light	20
Engine (Ignition) Switch.....	16
Floor mat installation.....	11
Four-wheel Drive System	30
Front Air Conditioning System	
Control panel	74
Control screen.....	74
Using the automatic mode.....	75
Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)/driver, passenger and rear seats separately ("3-ZONE" mode)	75
Fuel Tank Cap.....	95

*: These features may be operated by Voice Command (See P. 78)

Garage Door Opener	84
Hands-free System For Cellular Phone (with multimedia system)*	
How to register a Bluetooth® phone.....	61
Registering favorites.....	62
Dialing.....	62
Dialing from the contacts	62
When the contacts is empty.....	63
Dialing from favorites.....	64
To answer the phone	64
To refuse a call	64
Operating a telephone using the steering wheel switches.....	64
Hands-free System For Cellular Phone (with navigation system)*	
Bluetooth® phone pairing	50
Contacts transfer	51
Registering the contacts in the favorites list	52
Calling by name	53
Calling by favorites list.....	53
Calling using e-mail/SMS/MMS message	54
Receiving a call	54
Steering switches.....	54
Headlights	34
Intuitive Parking Assist.....	27

*: These features may be operated by Voice Command (See P. 78)


Keys.....	12
LDA (Lane Departure Alert)	26
Lexus Enform	89
LEXUS Enform Safety Connect.....	87
List of Warning/Indicator Lights.....	97
Moon Roof	94
Multi-information Display	18
Multi-terrain Monitor	29
Multi-terrain Select.....	27
Navigation System	
Register home.....	43
Destination input – Search by address.....	45
Destination input – Search points of interest by name	47
Destination input – Search points of interest by category	48
Destination input – Search points of interest by phone number	49
Voice Command System.....	78
Portable Audio Device Ports	83
Power Windows	93
Rear Air Conditioning System	
Control panel	76
Using the automatic mode.....	76
Control screen (front controller).....	77
Rear Seat Entertainment System.....	70
Rear Window Wiper and Washer	39


Smart Access System with Push-button Start	13
Theft Deterrent System	15
Touch Screen (with multimedia system)*	
Basic operation.....	60
Screen for display settings	60
Touch Screen (with navigation system)*	
Basic operation.....	40
Home	41
Screen scroll operation.....	41
Setting a route.....	42
Turn Signal Lever	21
Voice Command System	
Basic operation.....	78
Command list	79
Windshield Wipers and Washers	37
XM Satellite Radio	91

*: These features may be operated by Voice Command (See P. 78)

Overview

Instrument Panel

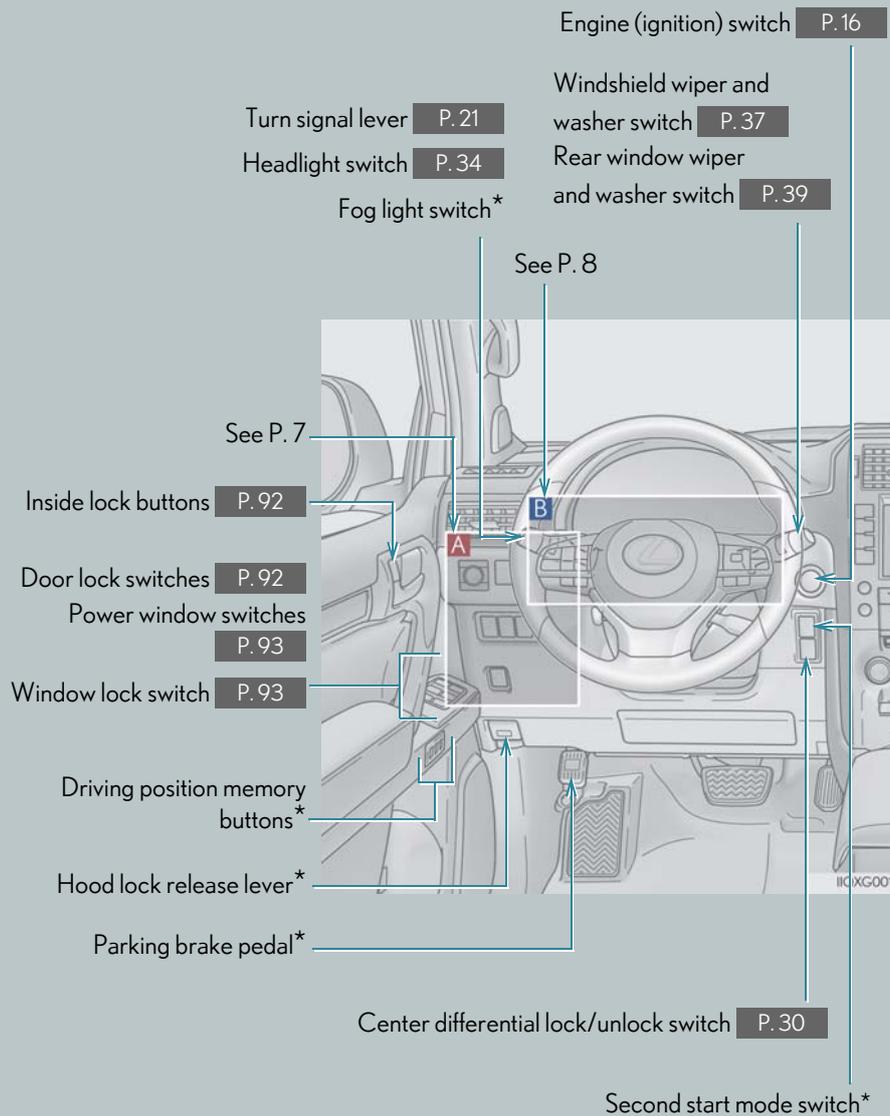


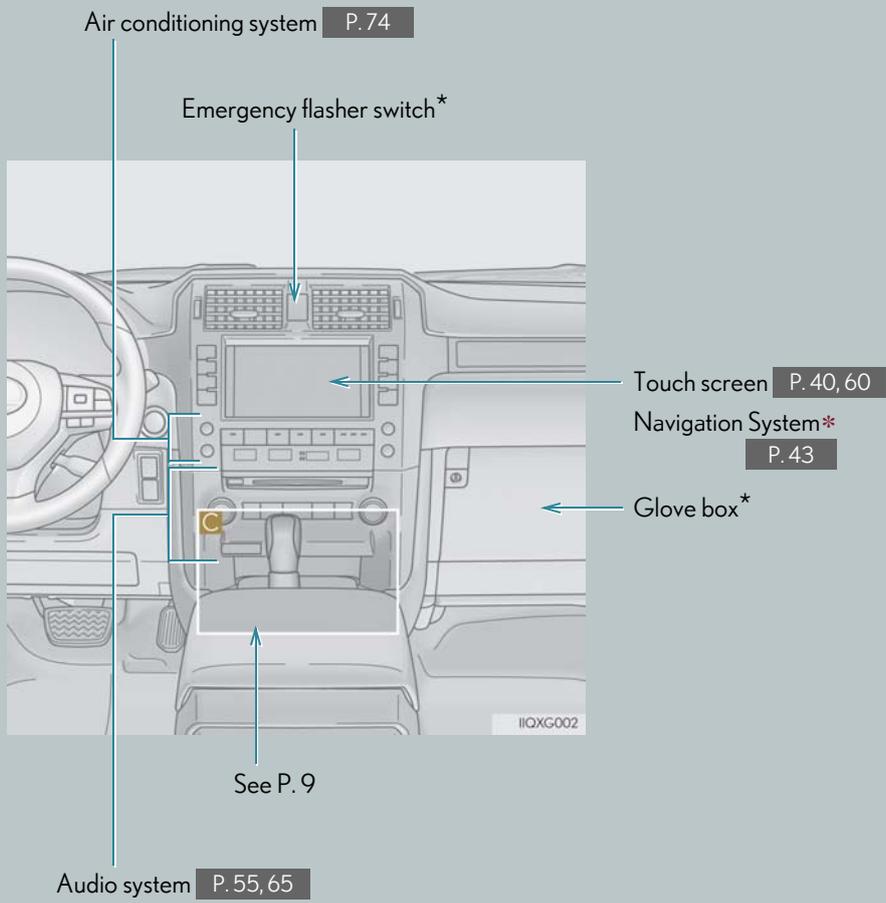


*: If equipped
 *: Refer to "OWNER'S MANUAL".

Overview

Instrument Panel

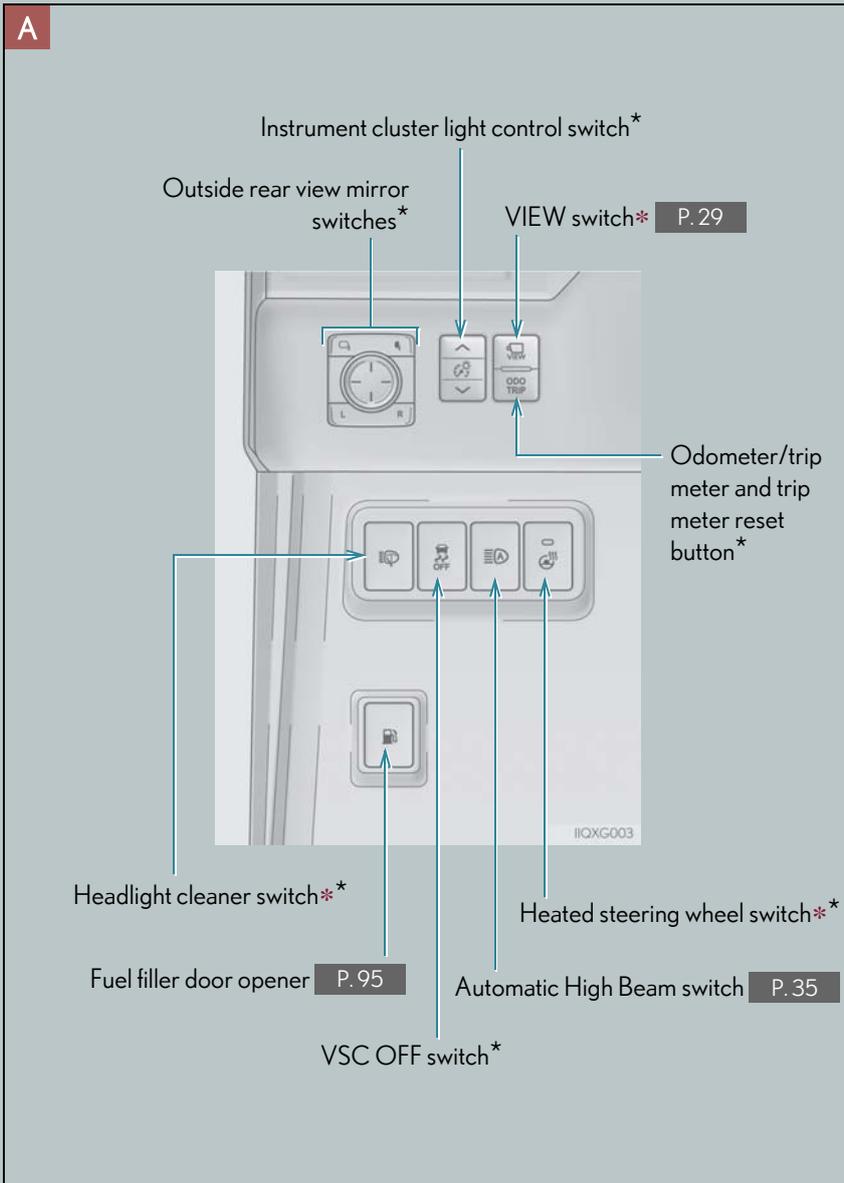

B

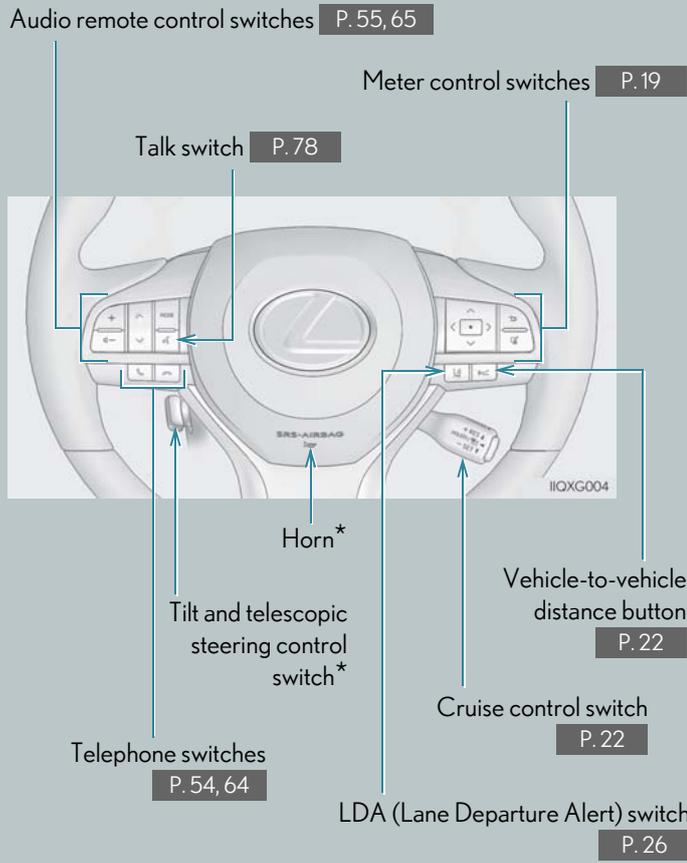


*: If equipped
*: Refer to "OWNER'S MANUAL".

Overview


Instrument Panel

C

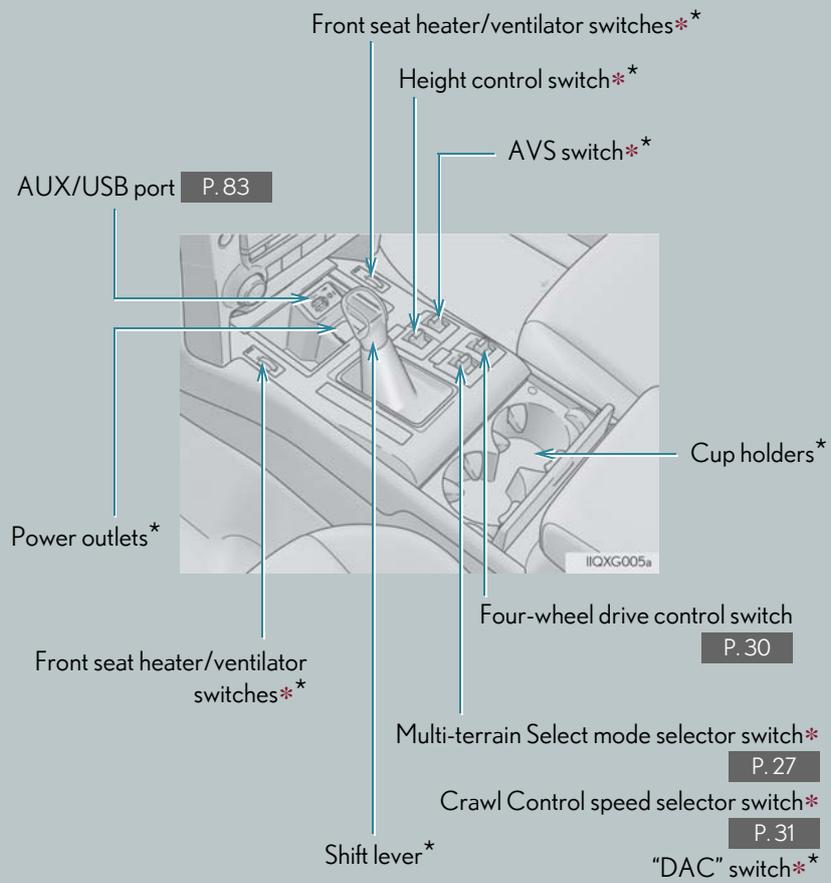

Overview

Roof

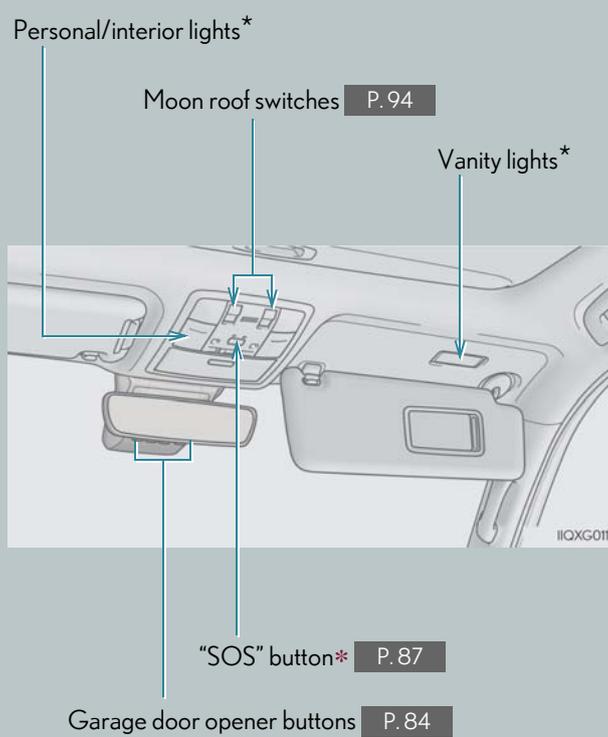


*: If equipped


*: Refer to "OWNER'S MANUAL".

Floor mat installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

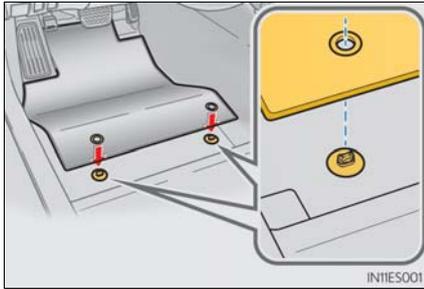

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

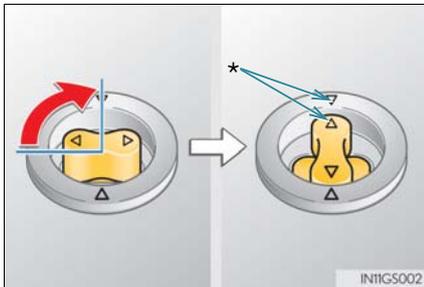


- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the \triangle marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

Keys


■ Electronic key

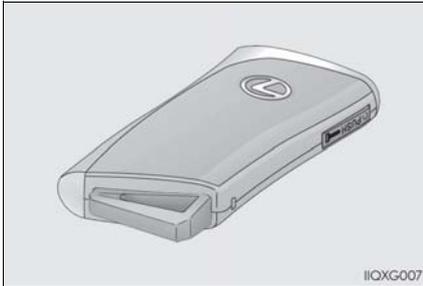

Smart access system with push-button start (→P. 13, 16)

Wireless remote control (→P. 12)

■ Mechanical key

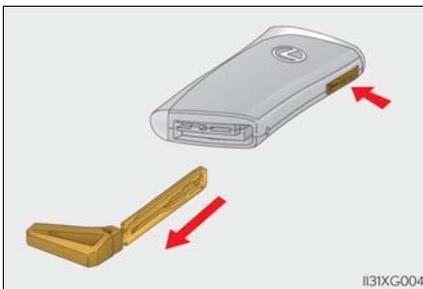


To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

■ Wireless remote control

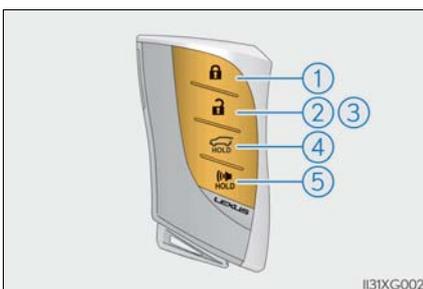


- ① Locks the doors
Check that the door is securely locked.
- ② Unlocks the doors
- ③ Opens the windows and moon roof*
- ④ Opens the glass hatch (press and hold)
- ⑤ Sounds the alarm

*: These settings must be customized at your Lexus dealer.

Smart Access System with Push-button Start


The following operations can be performed simply by carrying the electronic key on your person, for example in your pocket. The driver should always carry the electronic key. For details on starting the engine, see page 16.

■ Entering and exiting the vehicle

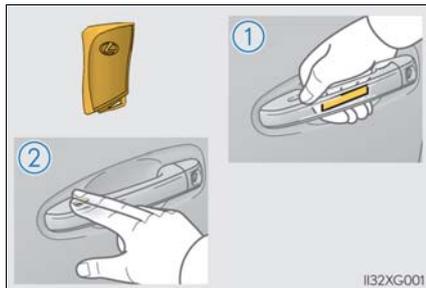

- ① Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.*
Make sure to touch the sensor on the back of the handle.
The doors cannot be unlocked for 3 seconds after the doors are locked.
*: The door unlock settings can be changed.
- ② Touch the lock sensor (the indentation on the upper part or lower part of the front door handle) to lock the doors.
Check that the door is securely locked.

■ Unlocking and locking the back door

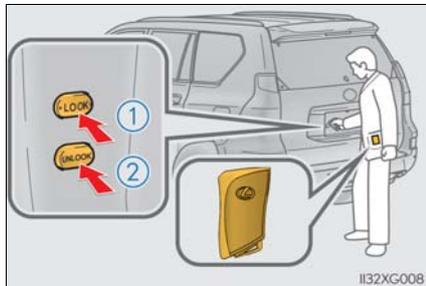

- ① Locks all the doors
Check that the door is securely locked.
- ② Unlocks all the doors
The doors cannot be unlocked for 3 seconds after the doors are locked.

■ Opening the glass hatch




- ① While carrying the electronic key, press the button to pop up the glass hatch.
- ② Raise
The glass hatch can be opened even when the back door is locked.

For details on what to do when the electronic key does not operate properly, see page 101.

Theft Deterrent System

■ Engine immobilizer system

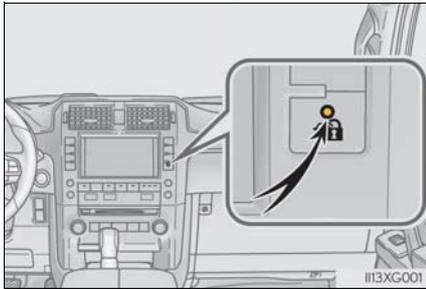

The indicator light flashes after the engine switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the engine switch has been turned to ACCESSORY or IGNITION ON mode to indicate that the system has been canceled.

■ Alarm

The alarm uses light and sound to give an alert when an intrusion is detected.

To set the alarm:


Close the doors, glass hatch and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

To deactivate or stop the alarm:

- Unlock the doors.
- Turn the engine switch to ACCESSORY or IGNITION ON mode, or start the engine. (The alarm will be deactivated or stopped after a few seconds.)

■ Steering lock

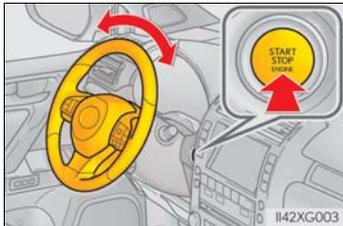


“PUSH THE ENGINE SWITCH WHILE TURNING THE STEERING WHEEL IN EITHER DIRECTION”/“Push the engine switch while turning the steering wheel in either direction” will be displayed on the multi-information display.

Check that the shift lever is set in P. Press the engine switch shortly and firmly while turning the steering wheel left and right.

Engine (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

Starting the engine

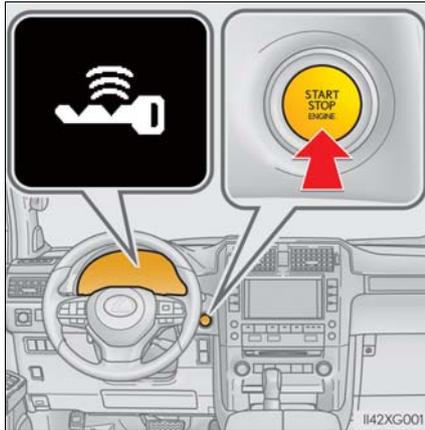

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is set in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the engine cannot be started.

- 4 Press the engine switch shortly and firmly.

When operating the engine switch, one short, firm press is enough.

It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.


The engine can be started from any engine switch mode.

Stopping the engine

- 1 Stop the vehicle.
- 2 Set the parking brake, and shift the shift lever to P.
- 3 Press the engine switch.
- 4 Release the brake pedal and check that "ACCESSORY" or "IGNITION ON" is not shown on the meter.

■ Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

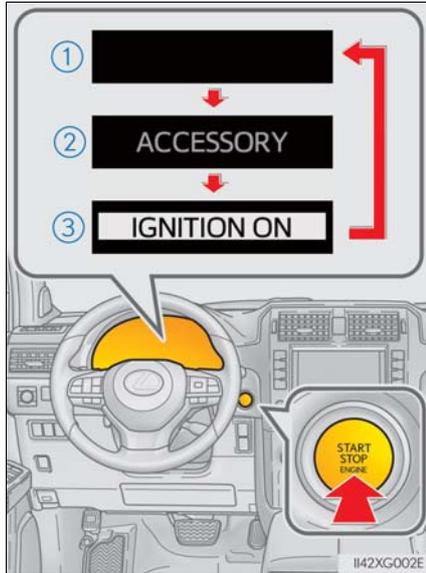

- ① Off*
The emergency flashers can be used.
- ② ACCESSORY mode
Some electrical components such as the audio system can be used.
“ACCESSORY” will be displayed on the multi-information display.
- ③ IGNITION ON mode
All electrical components can be used.
“IGNITION ON” will be displayed on the multi-information display.

*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

Multi-information Display

The following information will be displayed when a menu icon is selected.

Display information



Drive information

Select to display various drive data.



Vehicle information display

Select to display the vehicle information.



Driving assist system information

Select to display the operational status of the following systems:

- Dynamic radar cruise control (→P. 22)
- LDA (Lane Departure Alert) (→P. 26)



Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.




Settings display

Select to change the meter display settings and the operation settings of some vehicle functions.

■ Operating the meter control switches

The multi-information display is operated using the meter control switches.

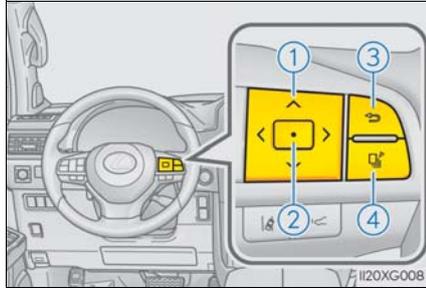

- ①   : Switch menu
  : Change displayed content, scroll up/down the screen and move the cursor up/down
- ② Press: Enter/Set
Press and hold: Reset
- ③ Return to the previous screen
- ④ Press: Displays the screen registered




When no screen has been registered, the drive information screen will be displayed.

Press and hold: Registers the currently displayed screen to 

When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.


If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.

Eco Driving Indicator Light

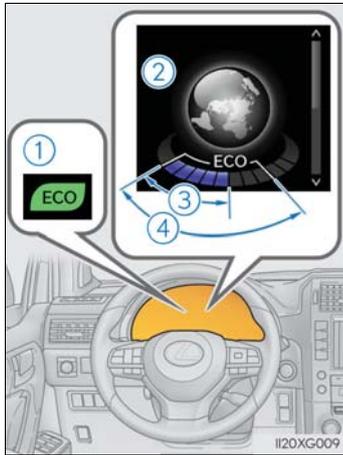

- ① **Eco Driving Indicator Light**
During Eco-friendly acceleration operation (Eco driving), the Eco Driving Indicator Light will turn on. When the acceleration exceeds Zone of Eco driving, or when the vehicle is stopped, the light turns off.
- ② **Eco Driving Indicator Zone Display**
Suggests the Zone of Eco driving with current Eco driving ratio based on acceleration.
- ③ **Eco driving ratio based on acceleration**
If the acceleration exceeds Zone of Eco driving, the right side of Eco Driving Indicator Zone Display will illuminate.
- ④ **Zone of Eco driving**
Eco Driving Indicator will not operate under the following conditions:
 - The shift lever is in any position other than D.
 - Vehicles with adaptive variable suspension system: The driving mode is set to sport mode.
 - The vehicle speed is approximately 81 mph (130 km/h) or higher.


Turn Signal Lever

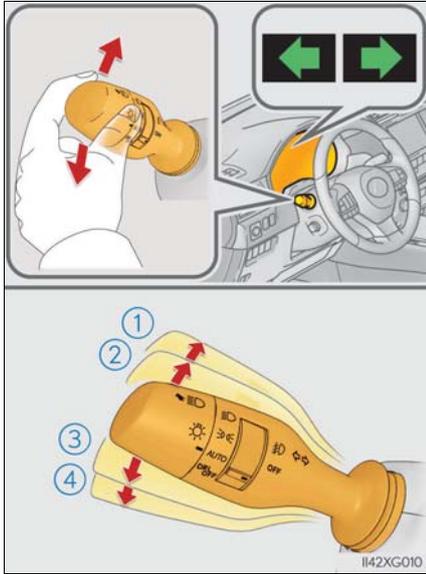

- ① Right turn
- ② Lane change to the right (move the lever partway and then release it)
- ③ Lane change to the left (move the lever partway and then release it)
- ④ Left turn


Dynamic Radar Cruise Control

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

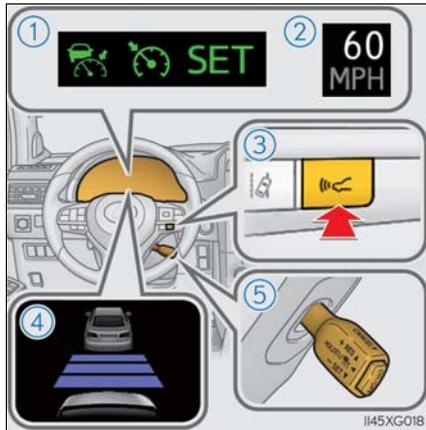

- ① Indicators
- ② Set speed
- ③ Vehicle-to-vehicle distance switch
- ④ Display
- ⑤ Cruise control switch

■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)

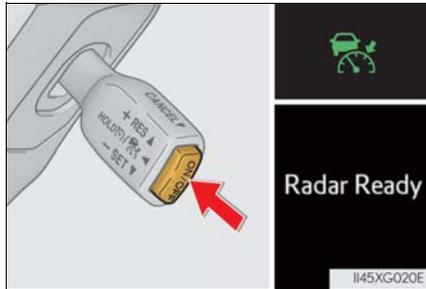


- 1 Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode.

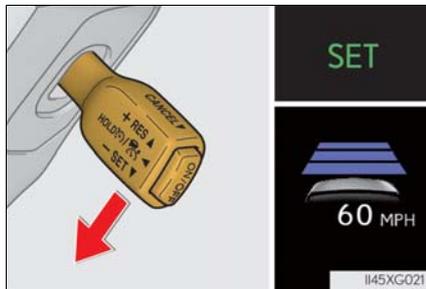


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.

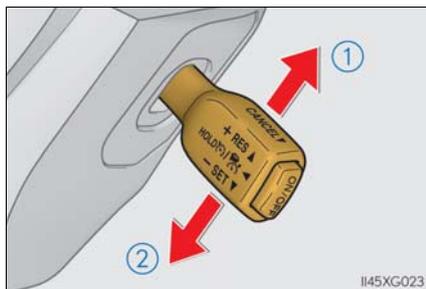


- 1 Increases the speed

- 2 Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

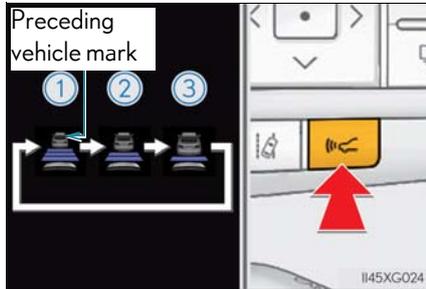

Pressing the switch changes the vehicle-to-vehicle distance as follows:


- ① Long
- ② Medium
- ③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ Canceling and resuming the speed control

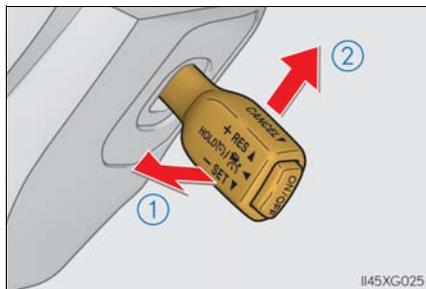


- ① Pulling the lever toward you cancels the speed control.

The speed control is also canceled when the brake pedal is depressed.

- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.


■ Selecting constant speed control mode

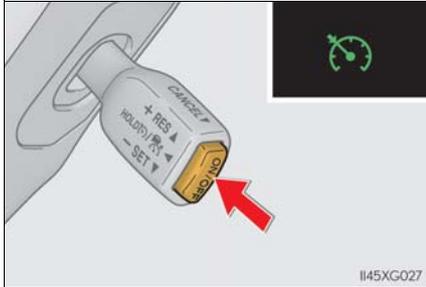

- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.

Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

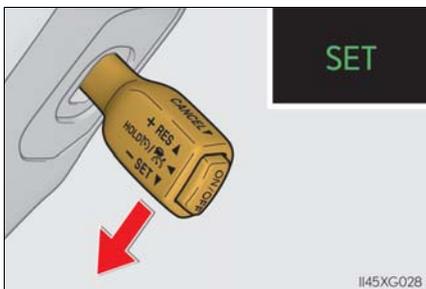

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 25 mph [40 km/h]) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.


The vehicle speed at the moment the lever is released becomes the set speed.

LDA (Lane Departure Alert)

When driving on roads with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the front windshield.

■ Turning LDA system on

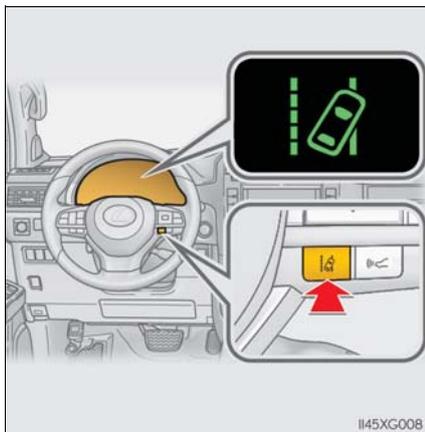

Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates.

Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

Intuitive Parking Assist (if equipped)


The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, the multimedia screen (if equipped), the navigation system screen (if equipped), and a buzzer. Always check the surrounding area when using this system.

Turning the intuitive parking assist on/off

- 1 Press **<** or **>** of the meter control switches and select  on the multi-information display.
- 2 Press **^** or **v** of the meter control switches and select , and then press . Each pressing of the switch turns the intuitive parking assist on and off. When ON is selected, Intuitive parking assist indicator will come on.

Multi-terrain Select (if equipped)


Multi-terrain Select is a system that helps drivability in off-road situations.

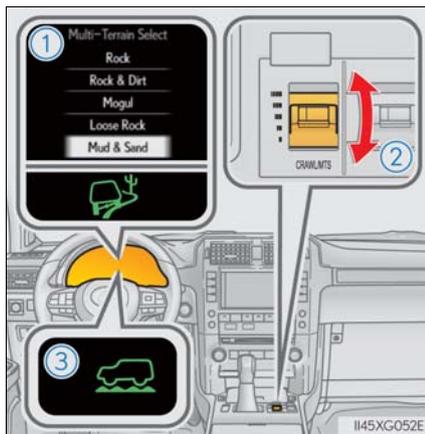

- 1 Multi-information display
The selected Multi-terrain Select mode will be displayed on the multi-information display.
- 2 Multi-terrain Select mode selector switch
- 3 Multi-terrain Select indicator

■ Selectable modes

▶ When the Crawl Control is turned off

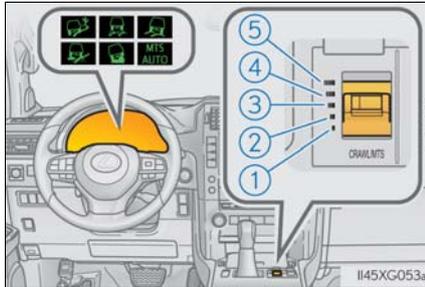

A mode which matches the road conditions can be selected from among the following 5 modes.

①  : MUD & SAND mode

Suitable for muddy roads, sandy roads, snow-covered roads, dirt trails and other slippery or dirty conditions. The MUD&SAND mode indicator illuminates on the multi-information display.

②  : LOOSE & ROCK mode

Suitable for slippery conditions consisting of mixtures of earth and loose rock. The LOOSE & ROCK mode indicator illuminates on the multi-information display.

③  : MOGUL mode

Suitable for very bumpy road conditions, such as mogul roads. MOGUL mode indicator illuminates on the multi-information display.

④  : ROCK & DIRT mode

Suitable for very bumpy road conditions, such as mogul or rocky roads. ROCK &DIRT mode indicator illuminates on the multi-information display.

⑤  : ROCK mode

Suitable for rocky roads. ROCK mode indicator illuminates on the multi-information display.


▶ When the Crawl Control is turned on

 : MTS AUTO mode

The most suitable mode is automatically selected according to the selected Crawl Control mode. MTS AUTO indicator illuminates on the multi-information display.

Multi-terrain Monitor (if equipped)

The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.

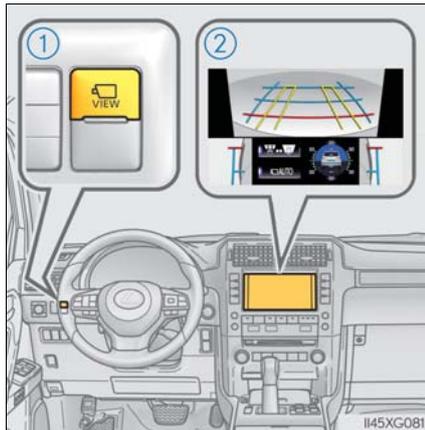


- ① VIEW switch
- ② Display

The surroundings area displayed can be switched by pressing the VIEW switch.

Four-wheel Drive System


Use the four-wheel drive control switch and center differential lock/unlock switch to select the following transfer and center differential modes.

Four-wheel drive control switch

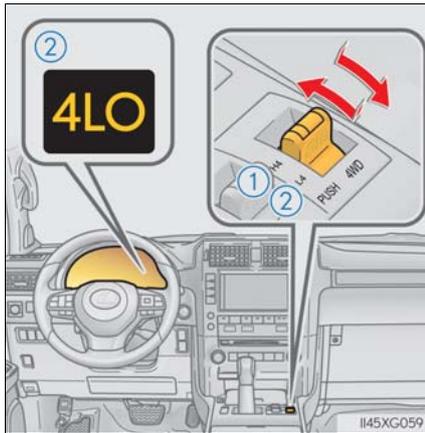

- ① H4 (high speed position)
Normal driving on all types of roads.
- ② L4 (low speed position)
Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.
The low speed four-wheel drive indicator will come on.

Center differential lock/unlock switch

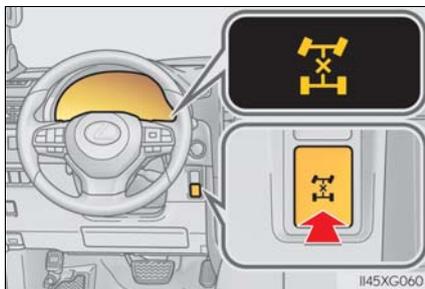

Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

The center differential lock indicator will come on.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.


To unlock the center differential, push the switch again.

BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function
Assists the driver when backing up

These functions use same sensors.

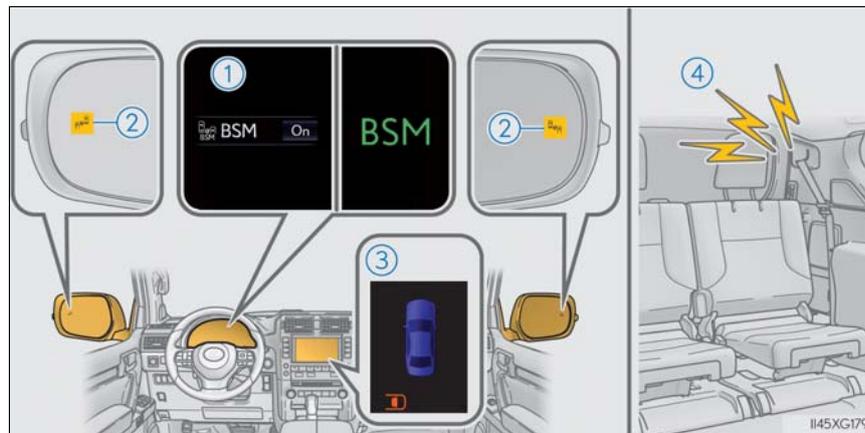


- ① The Blind Spot Monitor on/off screen and indicator
The Blind Spot Monitor system can be turned on/off on the multi-information display. When the system is set to on, the indicator illuminates in the meter and the buzzer sounds. The Blind Spot Monitor function and the Rear Cross Traffic Alert function are turned on/off simultaneously.
- ② Outside rear view mirror indicator
The Blind Spot Monitor function:
When a vehicle is detected in the blind spot, the outside rear view mirror indicator comes on while the turn signal lever is not operated. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator flashes.
The Rear Cross Traffic Alert function:
When a vehicle approaching from the right or left rear of the vehicle is detected, the outside rear view mirror indicators flash.
- ③ Monitor screen display (The Rear Cross Traffic Alert function only)
If a vehicle approaching from the right or left at the rear of the vehicle is detected, the Rear Cross Traffic Alert icon for the detected side will be displayed on the monitor screen.
This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.
- ④ The Rear Cross Traffic Alert buzzer (The Rear Cross Traffic Alert function only)
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the rear seat.

■ Turning the Blind Spot Monitor system on/off


- 1 Press  or  of the meter control switches and select  on the multi-information display.
- 2 Press  or  of the meter control switches and select , and then press . Each pressing of the switch turns the Blind Spot Monitor on and off.

Headlights

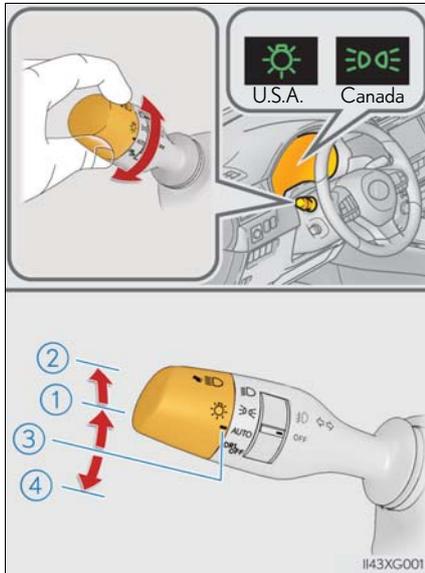

- ①  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- ②  The headlights and all the lights listed above (except daytime running lights) turn on.
- ③ AUTO The headlights, daytime running lights and all the lights listed above turn on and off automatically.
- ④  Off.
(U.S.A. only)

■ Turning on the high beam headlights

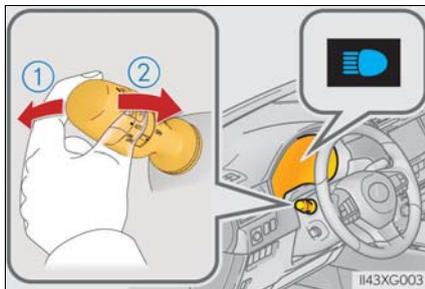


- ① With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


Automatic High Beam

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.

Activating the Automatic High Beam system

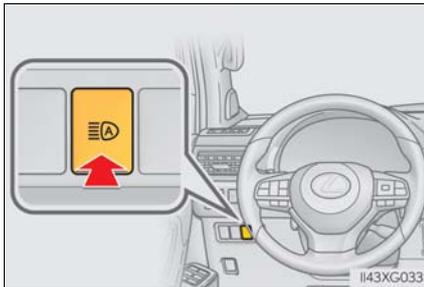


- 1 Press the Automatic High Beam switch.

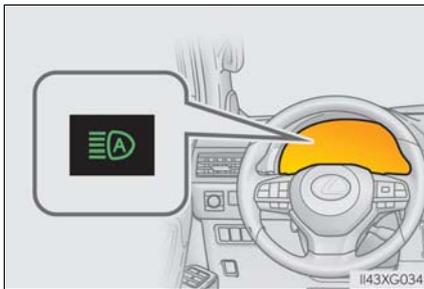

- 2 Turn the headlight switch to the  or AUTO position.
The Automatic High Beam indicator will come on when the system is operating.

■ Turning the high beam on/off manually

● Switching to the high beam

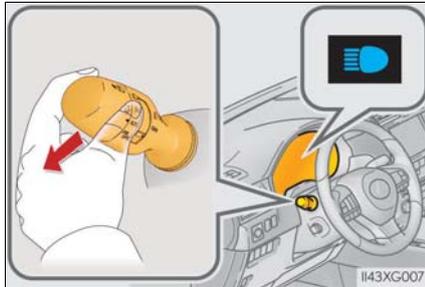


Push the lever away from you.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to activate the Automatic High Beam system again.

● Switching to the low beam

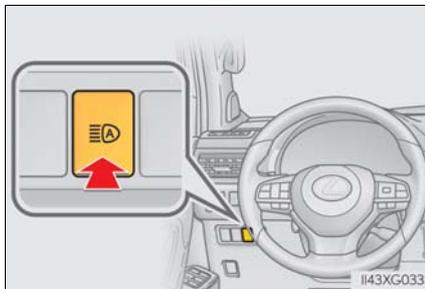

Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off.

Press the switch to activate the Automatic High Beam system again.




■ Temporarily switching to the low beams

Pull the lever toward you and then return it to its original position.

The high beams are on while the lever is pulled toward you, however, after the lever is returned to its original position, the low beams remain on for a certain amount of time. Afterwards, the Automatic High Beam will be activated again.

Windshield Wipers and Washers

Intermittent windshield wipers with interval adjuster

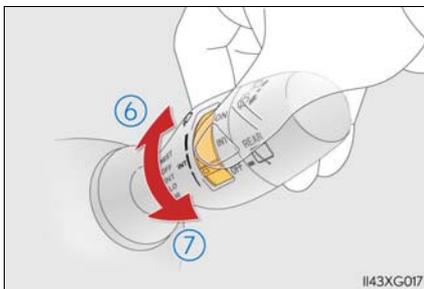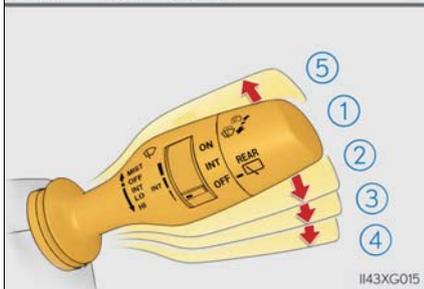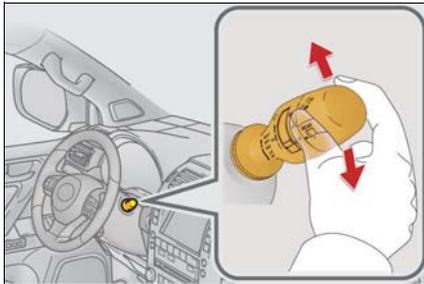



- ① **OFF** Off
- ② **INT** Intermittent operation
- ③ **LO** Low speed operation
- ④ **HI** High speed operation
- ⑤ **MIST** Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.

- ⑥ Increases the intermittent windshield wiper frequency
- ⑦ Decreases the intermittent windshield wiper frequency

- ⑧  **Washer/wiper dual operation**
 Pulling the lever operates the wipers and washer. The wipers will automatically operate a couple of times after the washer squirts.
 Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

■ Rain-sensing windshield wipers

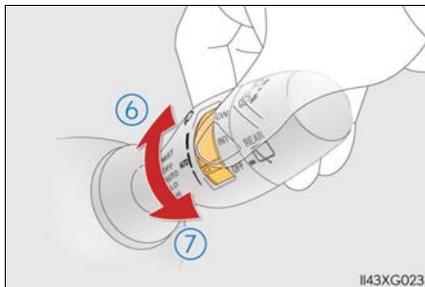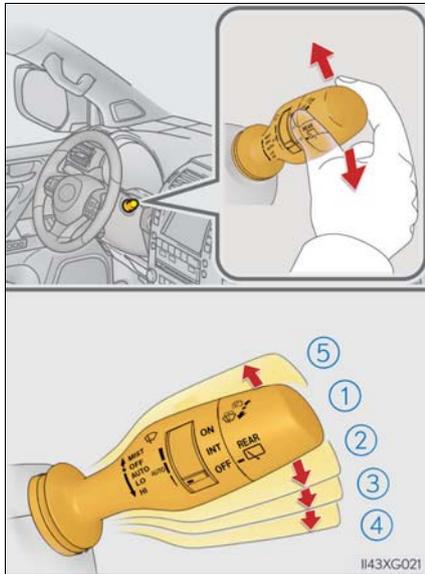

- ① **OFF** *1 or ○ *2 Off
- ② **AUTO** Rain-sensing operation
- ③ **LO** *1 or ▼ *2
Low speed operation
- ④ **HI** *1 or ▼ *2
High speed operation
- ⑤ **MIST** *1 or ▲ *2
High speed operation

High speed operation

*1: For the U.S.A.

*2: For Canada



When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity

- ⑧  **Washer/wiper dual operation**
Pulling the lever operates the wipers and washer.
The wipers operate automatically. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

Rear Window Wiper and Washer

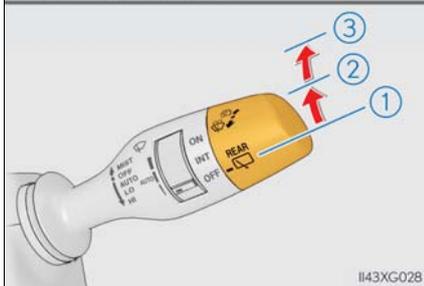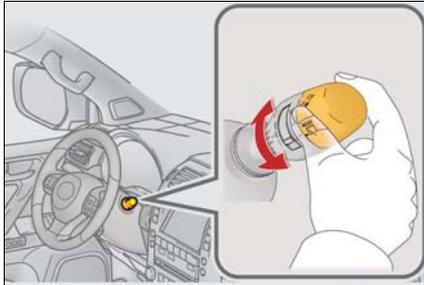

① **OFF** *1 or ○ *2

Off

② **INT** *1 or --- *2

Intermittent operation

③ **ON** *1 or — *2

Normal operation

*1: For the U.S.A.

*2: For Canada

④  Washer/wiper dual operation

Pushing the lever operates the wiper and washer.


The wipers will automatically operate a couple of times after the washer squirts.

Touch Screen (with navigation system)

This system is operated mainly by selecting the buttons on the screen. (Referred to as screen buttons in this manual.)

For details, see the "NAVIGATION SYSTEM OWNER'S MANUAL".

Basic operation

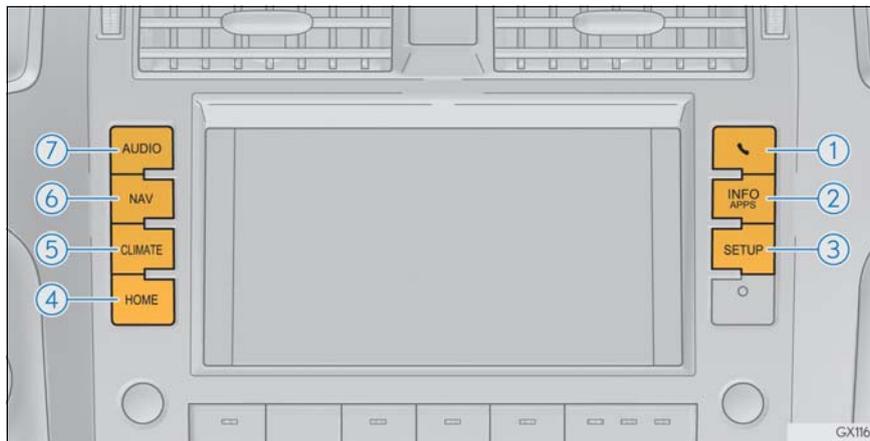

- ① Press to display the hands-free operation screen.
- ② Press to display the "Information" screen.
- ③ Press to display the "Setup" screen.
- ④ Press to display the home screen.
- ⑤ Press to display the air conditioning control screen.
- ⑥ Press to display the map screen.
- ⑦ Press to display the audio/visual screen.

■ Home

▶ Three-way split screen



Press the "HOME" button to display the home screen.

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth® connection
- ② Select to change the display items/area and the home screen layout.

▶ Two-way split screen



■ Screen scroll operation




Use the scroll feature to move the desired point to the center of the screen for looking at a point on the map that is different from the current position.


- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

■ Setting a route


While route guidance is operating, you can change the route using the following method.

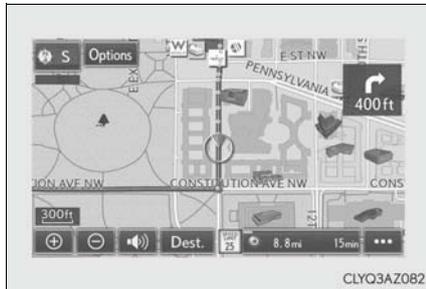

1 Select "Options".

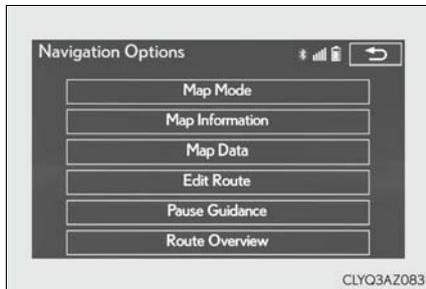

2 Select "Edit Route".

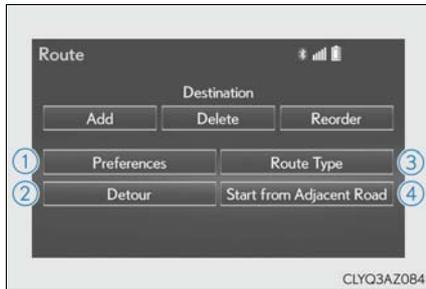

3 Select the item to be set.

- ① Set route preferences
- ② Set detours
- ③ Change route type
- ④ Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".


Navigation System (if equipped)

Register home




1 Press the "SETUP" button.

2 Select "Navigation".

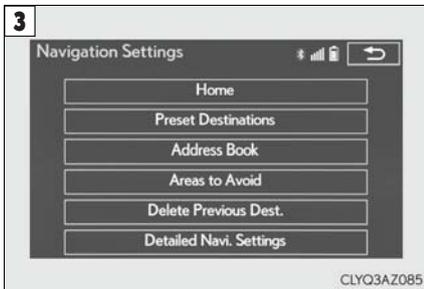


3 Select "Home".

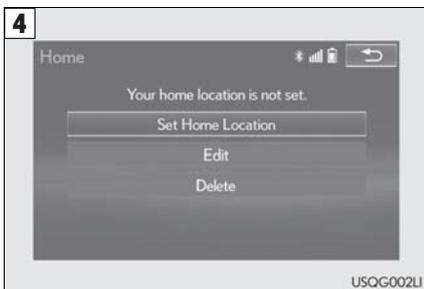

4 Select "Set Home Location".


5 Select "Address".

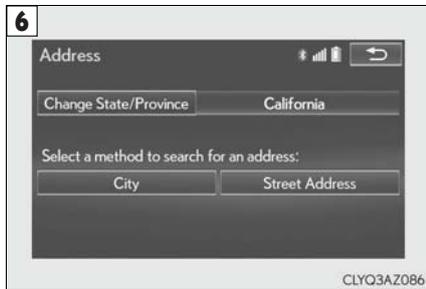

- 6 Select "City".
- 7 Enter a city name and select "OK".
- 8 Select the screen button of the desired city name from the displayed list.
For security reasons, use a point close to your home instead of your actual home address.
- 9 Enter a street name and select "OK".
- 10 When the desired street name is found, select the corresponding screen button.
- 11 Enter a house number and select "OK".
- 12 Select "OK".

■ Destination input — Search by address

► Select by city name

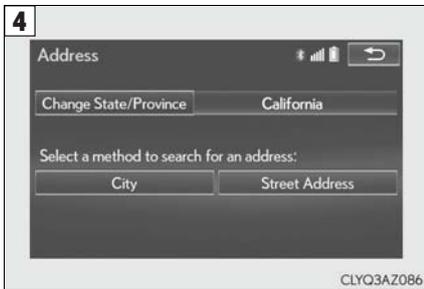

1 Press the "NAV" button.

2 Select "Dest.".

3 Select "Address".

4 Select "City".

5 Enter a city name and select "OK".

6 Select the screen button of the desired city name from the displayed list.

7 Enter a street name and select "OK".

8 When the desired street name is found, select the corresponding screen button.

9 Enter a house number and select "OK".

10 Select "Go".


11 Select "OK".

► Select by street address




3

- 1 Press the "NAV" button.
- 2 Select "Dest.".
- 3 Select "Address".

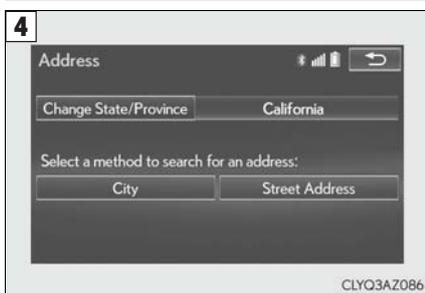

4


- 4 Select "Street Address".

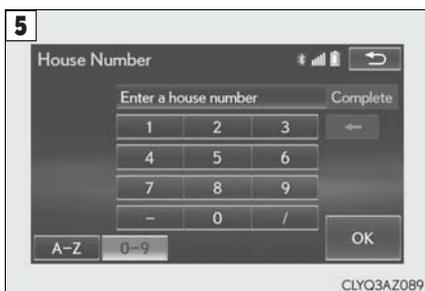

5

- 5 Enter a house number and select "OK".
- 6 Enter a street name and select "OK".
- 7 When the desired street name is found, select the corresponding screen button.
- 8 Enter a city name and select "OK".
- 9 Select the screen button of the desired city name from the displayed list.
- 10 Select "Go".
- 11 Select "OK".

■ Destination input — Search points of interest by name

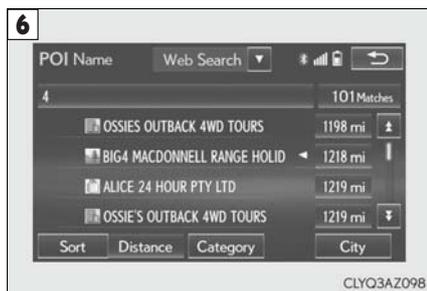

1 Press the "NAV" button.

2 Select "Dest.".

3 Select "Point of Interest".

4 Select "Name".

5 Enter a POI name and select "OK".

6 Select the screen button of the desired POI.


7 Select "Go".

8 Select "OK".

Destination input — Search points of interest by category




- 1 Press the "NAV" button.
- 2 Select "Dest."
- 3 Select "Point of Interest".

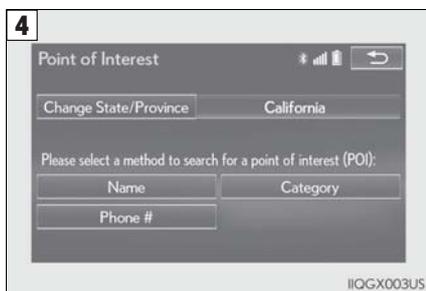

- 4 Select "Category".



- 5 Select "Near a Destination".
- 6 Select the desired POI category from the displayed list.

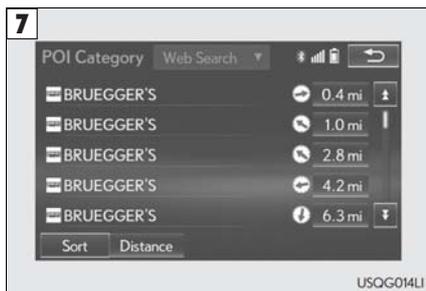

- 7 Select the screen button of the desired POI.
- 8 Select "Go".
- 9 Select "OK".

■ Destination input — Search points of interest by phone number



1 Press the "NAV" button.

2 Select "Dest.".

3 Select "Point of Interest".

4 Select "Phone #".

5 Enter a phone number and select "OK".


6 Select "Go".

7 Select "OK".

Hands-free System For Cellular Phone (with navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.

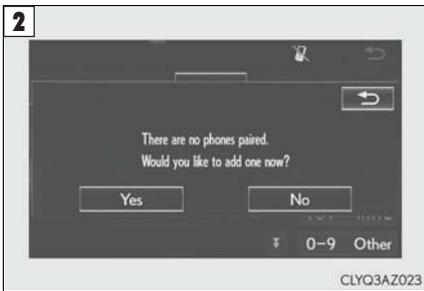

To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press  on the steering wheel.

2 Select "Yes".



3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

Refer to the cellular phone user's manual for cellular phone operation.

4 Register the Bluetooth® device using your Bluetooth® device.



5 Check that the following screen is displayed when registration is complete.



- 6 Select "OK" when the connection status changes from "Connecting..." to "Connected".


■ Contacts transfer



- 1 Press the "SETUP" button.
- 2 Select "Phone".



- 3 Select "Contact/Call History Settings".

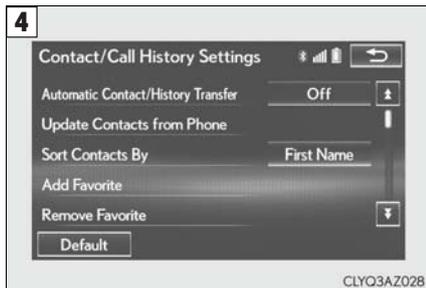

- 4 Select "Update Contacts from Phone".
- 5 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

■ Registering the contacts in the favorites list




1 Press the "SETUP" button.

2 Select "Phone".



3 Select "Contact/Call History Settings".

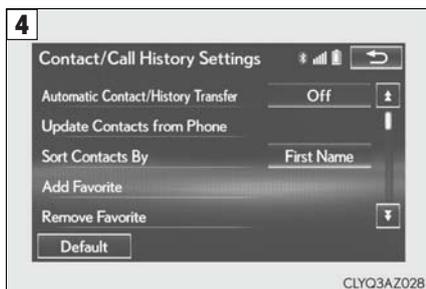

4 Select "Add Favorite".




5 Select the desired contact to add to the favorites list.

6 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name

You can call by giving a name registered in the contacts. For details, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.

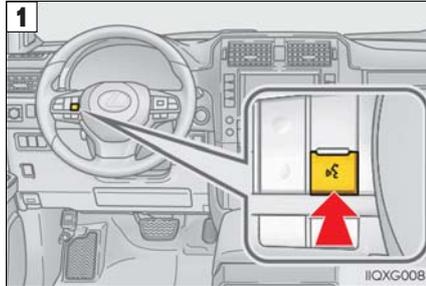


- 1 Press .
- 2 Say “Call <contacts> <phone types>”.

: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by favorites list



- 1 Press  on the steering wheel.
- 2 Select the “Favorites” tab and select the desired contact.

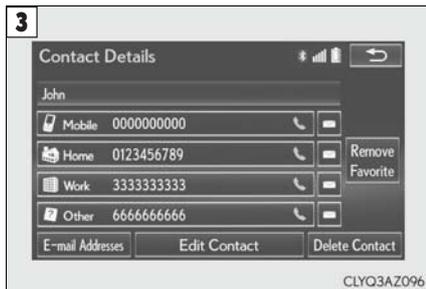

- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.


■ Calling using e-mail/SMS/MMS message



- 1 Press on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the "Call" screen is displayed.

The tab display may vary depending on the type of cellular phone.


■ Receiving a call

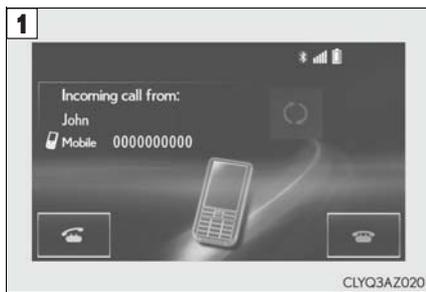

- 1 When a call is received, this screen is displayed with a sound.
- 2 Press on the steering wheel to talk on the phone.

To refuse the call, press on the steering wheel.

■ Steering switches

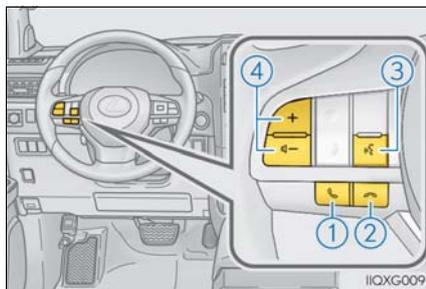


- ① Sending/Receiving/"Phone" screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

Audio System (with navigation system)

Audio control screen


Follow the procedure below to display the audio control screen.

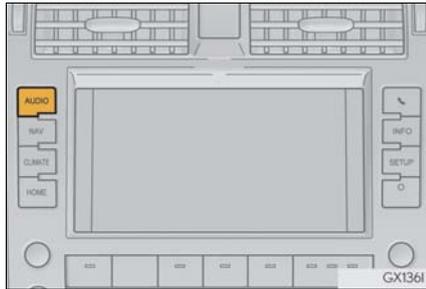

- 1 Press the "AUDIO" button.

Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

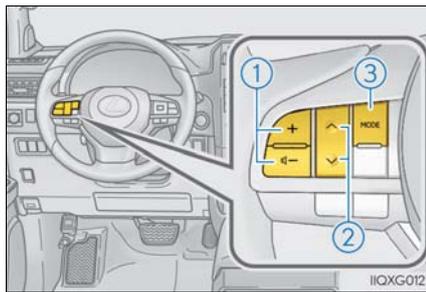

- ① Increases/decreases volume
- ② Radio mode: Selects a radio station/channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
iPod mode: Selects a track/file
- ③ Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

■ Basic operation




- ① Sound settings
- ② Audio sources
 - AM: AM radio
 - FM: FM radio
 - SAT: Satellite radio*¹
 - APPS (if equipped):
 - Internet radio broadcast
 - DISC: DVD player
 - iPod: iPod
 - USB: USB memory
 - Bluetooth*²: Bluetooth® audio
 - AUX: Auxiliary audio device
- ③ Power/Volume

*¹: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 91)

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Radio

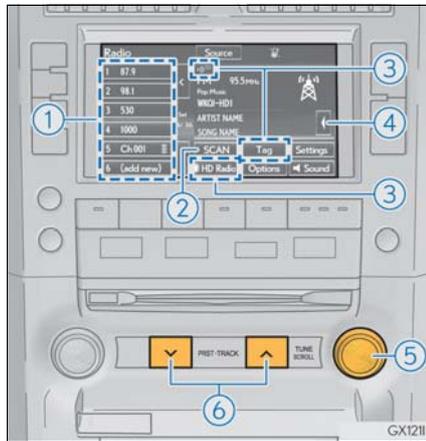

- ① Tuning to preset stations/channels
- ② Scanning for receivable stations
- ③ Using HD Radio™ Technology (for U.S.A., if equipped)
- ④ Cache radio operation buttons
- ⑤ Adjusting the frequency
- ⑥ Press: Selects a preset station
Press and hold: Seeks for a station


Entering station presets

- ① Tune in the desired station.
- ② Select “add new”.
- ③ Select “Yes” on the confirmation screen.
- ④ Select “OK” after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


DVD player

Playing an audio CD

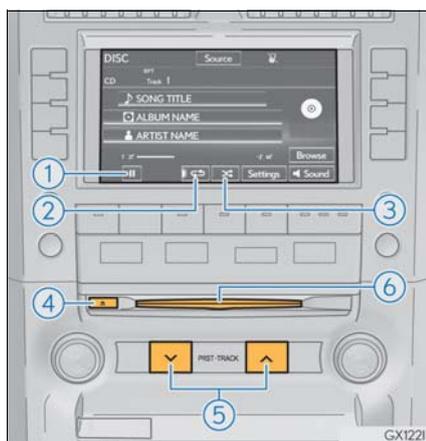


- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Disc eject
- ⑤ Selecting a track
- ⑥ Disc slot

■ Playing a CD with MP3/WMA/AAC files

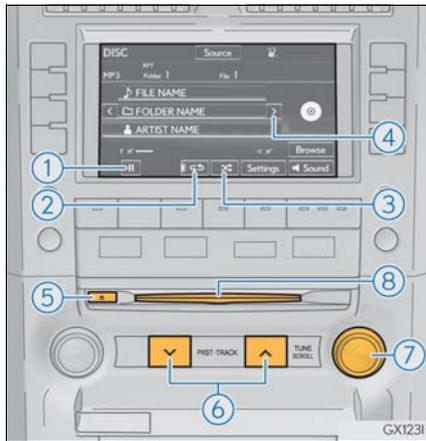

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a folder
- ⑤ CD eject
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Selecting a file
- ⑧ Disc slot


■ Playing a DVD

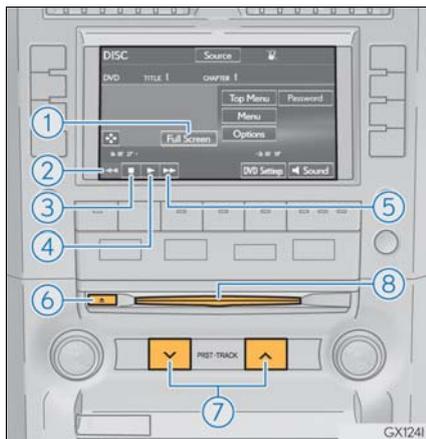

- ① Image display (full screen)
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ DVD eject
- ⑦ Selecting a chapter
- ⑧ Disc slot


■ Operating an iPod

■ Playing an iPod audio

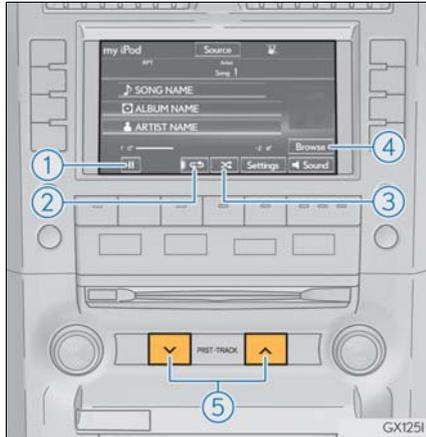

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a play mode
- ⑤ Selecting a track/fast forward/rewind

■ Playing an iPod video

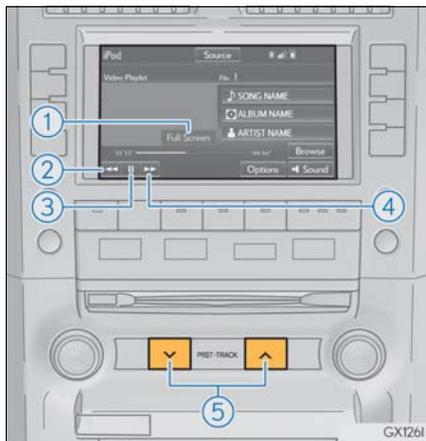


- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

Touch Screen (with multimedia system)

This system is operated mainly by selecting the buttons on the screen. (Referred to as screen buttons in this manual.)

For details, see the "MULTIMEDIA OWNER'S MANUAL".

Basic operation

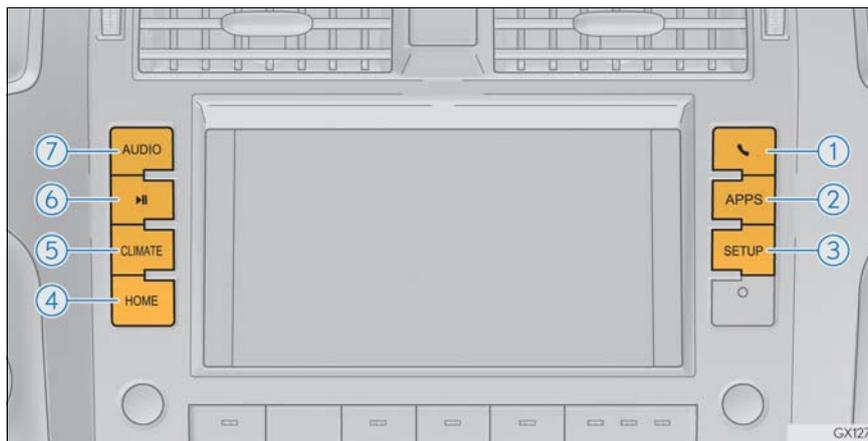

- ① Press to display the hands-free operation screen.
- ② Press to display the "Apps" screen.
- ③ Press to display the "Setup" screen.
- ④ Press to display the home screen.
- ⑤ Press to display the air conditioning control screen.
- ⑥ Press to play/pause.
- ⑦ Press to display the audio/visual screen.

Screen for display settings

Go to "Display": "SETUP" → "Display"



- ① Adjust screen quality.
- ② Adjust screen quality of the rear camera.
- ③ Adjust screen quality of the video.
- ④ Change to day mode.

Hands-free System For Cellular Phone (with multimedia system)

How to register a Bluetooth® phone

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

1 Press  on the steering wheel.

2 Select "Yes".




3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.

Refer to the cellular phone user's manual for cellular phone operation.

4 Register the Bluetooth® device using your Bluetooth® device.

5 Check that the following screen is displayed when registration is complete.

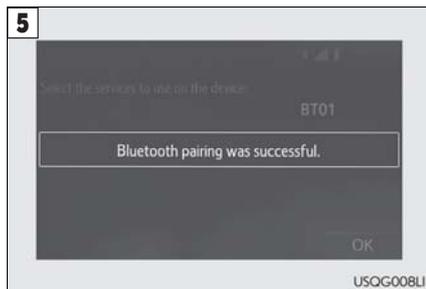



- 6 Select "OK" when the connection status changes from "Connecting..." to "Connected".

■ Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "SETUP" → "Phone" → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

■ Dialing

- 1 Go to "Dial Pad": Press the  switch on the steering wheel. → "Dial Pad".
- 2 Input a phone number.
- 3 Press the  switch on the steering wheel or select .

■ Dialing from the contacts

- 1 Go to "Contacts": Press the  switch on the steering wheel. → "Contacts".
- 2 Choose the desired contact to call from the list.
- 3 Choose the number to make a call.

■ When the contacts is empty

You can transfer the phone numbers in a Bluetooth® phone to the system. Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.

- 1 Press the  switch on the steering wheel.


If the contacts is empty, a message will be displayed.

- ▶ For a PBAP compatible Bluetooth® phone and “Automatic Contact/History Transfer” is off



- 2 To transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Contact/History Transfer”. Select “Once” to transfer all the contacts from a connected cellular phone only once.

- ▶ For a PBAP incompatible and OPP compatible Bluetooth® phone

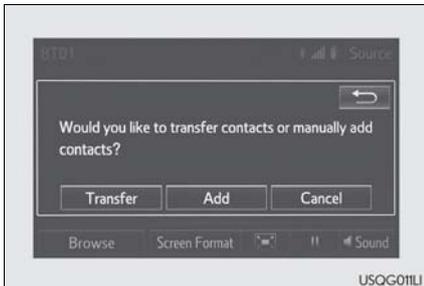


- 2 Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone. Select “Add” if you want to add a new contact manually.

■ Dialing from favorites

You can make a call using numbers registered in the favorites.

- 1 Go to "Favorites": Press the  switch on the steering wheel. → "Favorites".
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the  switch on the steering wheel or press the  button.

■ To answer the phone

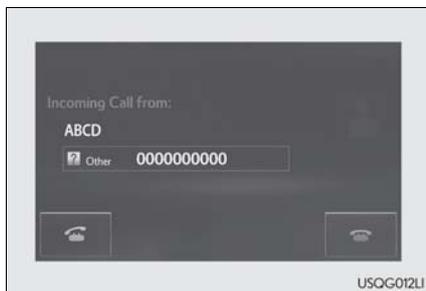


- 1 When a call is received, the following screen is displayed together with a sound.
- 2 Press the  switch on the steering wheel or select .

■ To refuse a call

Press the  switch on the steering wheel or select .

■ Operating a telephone using the steering wheel switches

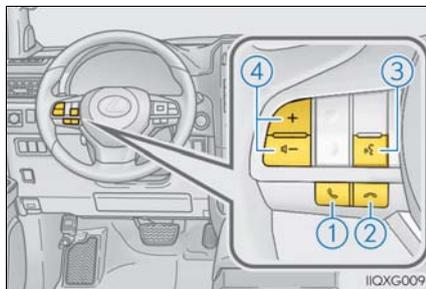


- ① Off hook switch
- ② On hook switch
- ③ Talk switch
Press this switch to operate the voice command system.
- ④ Volume switch
 - Press the "+" side to increase the volume.
 - Press the "-" side to decrease the volume.

Audio System (with multimedia system)

Audio control screen


Follow the procedure below to display the audio control screen.

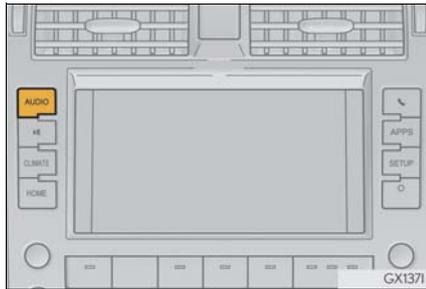

- 1 Press the "AUDIO" button.

Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

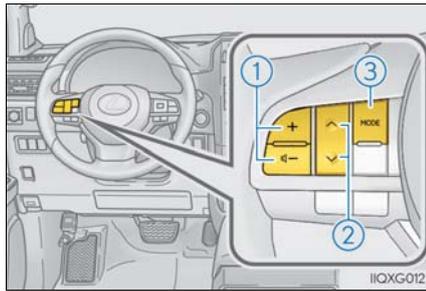

- ① Increases/decreases volume
- ② Radio mode: Selects a radio station/channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
iPod mode: Selects a track/file
- ③ Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

Basic operation



- ① Sound settings
- ② Audio sources
 - AM: AM radio
 - FM: FM radio
 - XM: Satellite radio*
 - CD: CD player
 - iPod: iPod
 - USB: USB memory
 -  Audio: Bluetooth® audio
 - AUX: Auxiliary audio device
- ③ Power/Volume

*: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 91)

■ Radio



- ① Tuning to preset stations/channels
- ② Using HD Radio™ Technology (for U.S.A., if equipped)
- ③ Scanning for receivable stations
- ④ Press: Selects a preset station
Press and hold: Seeks for a station
- ⑤ Adjusting the frequency

■ Entering station presets

- 1 Tune in the desired station.
- 2 Select "(add new)".
- 3 Select "Yes" on the confirmation screen.
- 4 Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

■ CD player

■ Playing an audio CD



- ① Random playback
- ② Repeat playback
- ③ Playback/pause
- ④ CD eject
- ⑤ Selecting a track
- ⑥ Disc slot


■ Playing a CD with MP3/WMA/AAC files



- ① Displaying a folder list
- ② Random playback
- ③ Repeat playback
- ④ Playback/pause
- ⑤ CD eject
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Selecting a file
- ⑧ Disc slot


■ Operating an iPod

■ Playing an iPod audio

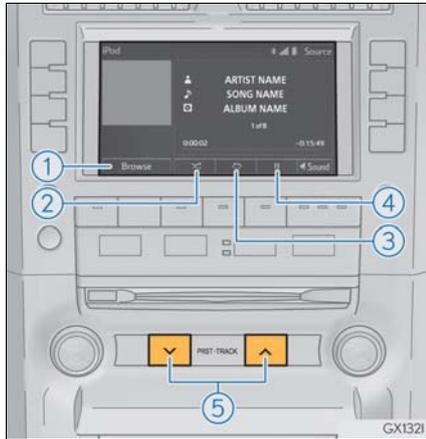

- ① Selecting a play mode
- ② Random playback
- ③ Repeat playback
- ④ Playback/pause
- ⑤ Selecting a track/fast forward/rewind


■ Playing an iPod video

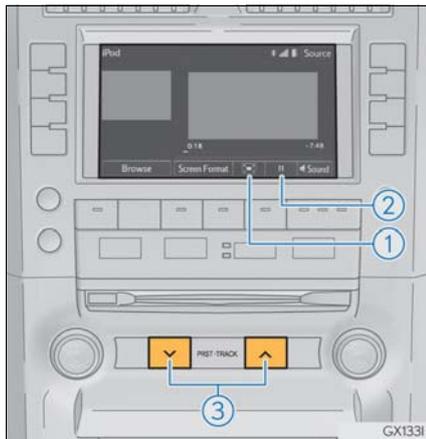

- ① Image display (full screen)
- ② Playback/pause
- ③ Selecting a file

Rear Seat Entertainment System (if equipped)


The rear seat entertainment system is designed for the rear passengers to enjoy audio and DVD video separately from the front audio/visual system.

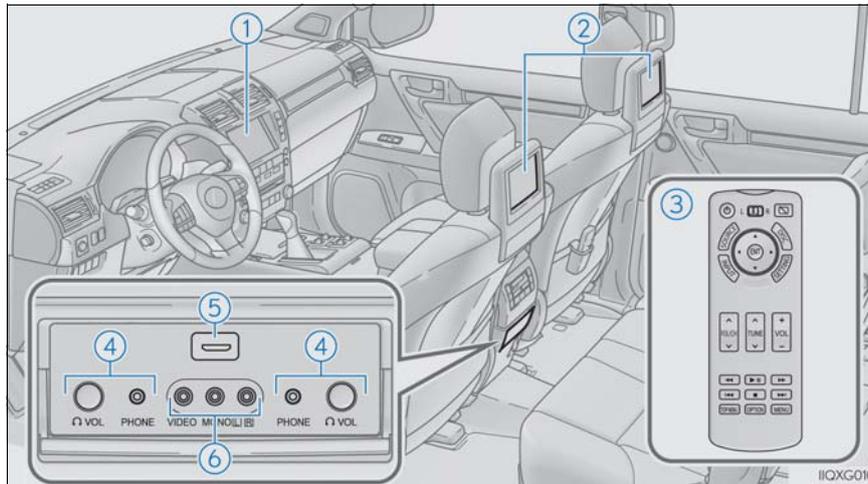

- ① Front audio/visual system
- ② Displays
- ③ Rear seat entertainment system controller
- ④ Headphone volume control dials and headphone jacks
- ⑤ HDMI port
- ⑥ A/V input port


For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

■ Basic operation

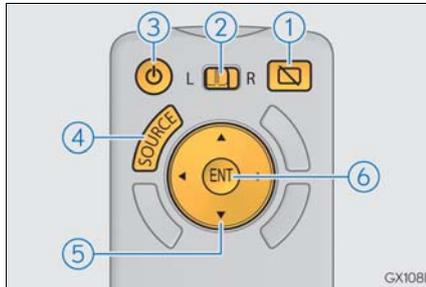

- ① Turns display off
- ② Selects the display to be operated
L: left side display
R: right side display
- ③ Power on or off
- ④ Turning on the audio source selection screen
- ⑤ Selecting an icon
- ⑥ Inputting the selected icon


■ AM/FM/SAT

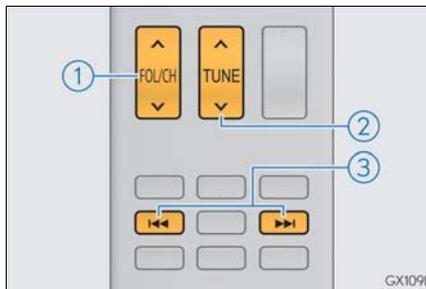

Select radio mode on the source screen to display the control screen.

- ① Selecting a preset station/channel
- ② Press: Tuning the station/channel
Press and hold: Seeking a station/channel
- ③ Press: Tuning the station/channel
Press and hold: Seeking a station/channel

■ DISC/USB/iPod/BT-A

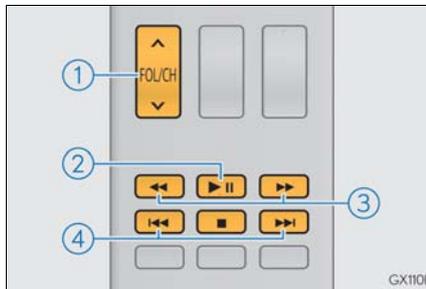


Select desired mode on the source screen to display the control screen.

- ① Selecting a folder/an album
- ② Play/pause
- ③ Fast forward or rewind
- ④ Press: Selecting a track/file
Press and hold: Fast forward or rewind


■ DVD video

Press "DISC" or select disc mode to display DVD video.

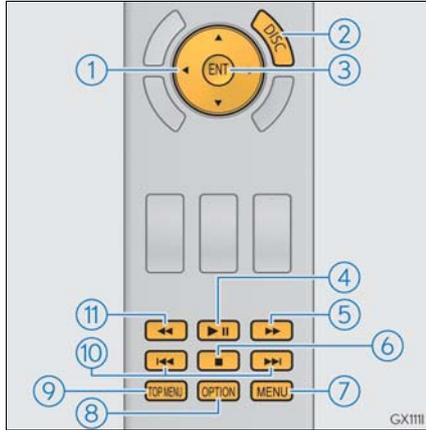

- ① Selecting an icon
- ② Turning on the DVD mode
- ③ Inputting the selected icon
- ④ Playing/pausing a disc
- ⑤ Fast forwarding a disc during playback and forward slowly during pause.
- ⑥ Stopping a screen
- ⑦ Turning on the menu
- ⑧ Turning on the option screen
- ⑨ Turning on the title selection screen
- ⑩ Press to select a chapter
Press and hold to fast forward or rewind a chapter
- ⑪ Rewinding a disc

■ Headphone jacks

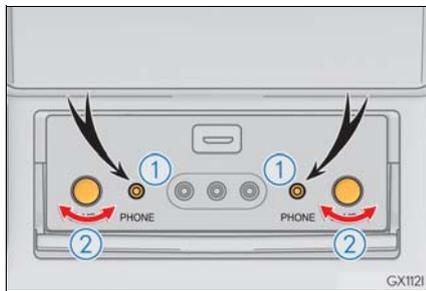


To listen to the rear audio, use headphones.

- ① To use the headphones, connect them to the jack.
- ② To adjust the volume.

Front Air Conditioning System

Control panel

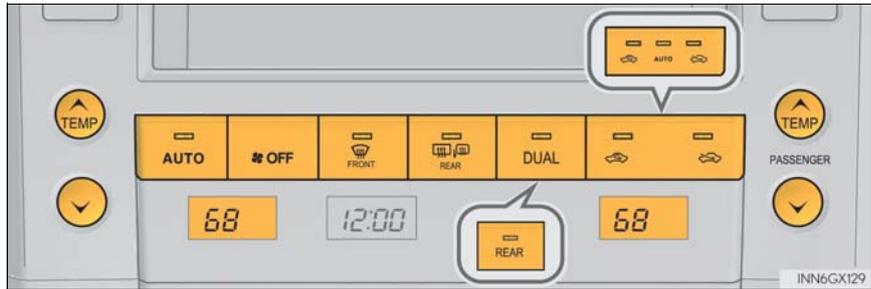

Control screen

► Vehicles without navigation system



► Vehicles with navigation system



■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

If the "A/C" indicator is turned off, the system will blow ambient temperature air or heated air.

■ Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.

Press the "OFF" button to turn the fan off.

■ Changing the air flow mode

Select an air outlet switch.



: Air flows to the upper body



: Air flows to the upper body and feet



: Air flows to the feet

■ Option control screen

Touch  on the climate screen to display the option control screen. The functions can be switched on and off.



① Select to set cooling and dehumidification function on/off

② Adjust the temperature for driver and passenger seats separately ("DUAL" mode)/driver, passenger and rear seats separately ("3-ZONE" mode)

③ Prevent ice from building up on the windshield and wiper blades (if equipped)

④ Remove pollen from the air

■ Using the automatic mode

Press the "AUTO" button to turn on the air flow and adjust the temperature setting.

■ Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)/driver, passenger and rear seats separately ("3-ZONE" mode)

To turn on the "DUAL"/"3-ZONE" mode, perform any of the following procedures:

- Press the "DUAL"/"3-ZONE" button.
- Select "DUAL"/"3-ZONE" on the option control screen.
- Adjust the passenger's side temperature setting.

Rear Air Conditioning System (if equipped)

Control panel



Adjusting the temperature setting

Press “^” on the “TEMP” button to increase the temperature and “v” to decrease the temperature.

Touch  on the climate screen to display the option control screen. (→P.75)

If the “A/C” indicator is turned off, the system will blow ambient temperature air or heated air.

Adjusting the fan speed setting

Press “^” on  to increase the fan speed and “v” to decrease the fan speed.

Changing the air flow mode

Press .

The air flow mode change as follows each time  is pressed.

 : Air flows to the upper body.

 : Air flows to the upper body and feet.

 : Air flows to the feet.


Using the automatic mode

Press the “AUTO” button to turn on the air flow and adjust the temperature setting.

■ Control screen (front controller)

Press  or touch  to display the rear air conditioning control screen.

▶ Vehicles without navigation system

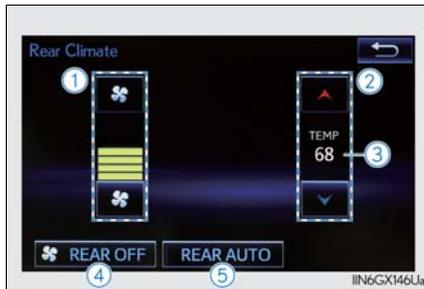


▶ Vehicles with navigation system



- ① Adjust the fan speed setting
- ② Adjust the rear seats temperature setting
- ③ Display the rear seats temperature setting
- ④ Turn the fan off
- ⑤ Select to set automatic mode

Voice Command System

Basic operation

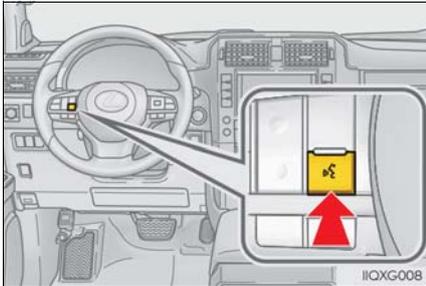

- 1** Press the talk switch.
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.
On the list screen, you can select the desired command.

Continue on to pages 79-82 for a detailed list of Voice Commands for the following categories:

Basic	page 79
Apps	page 79
Navi	page 79
Phone	page 80
Radio	page 80
Audio	page 81
Info	page 81
Other	page 82

Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- A large icon  (with navigation system) or  (with multimedia system) will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

▶ Basic (vehicles with multimedia system)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Next Page"	Displays the next page
"Previous Page"	Displays the previous page
"Go to <tab>"	Displays the command list of the selected tab

▶ Basic (vehicles with navigation system)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

▶ Apps (vehicles with navigation system)

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

▶ Navi (vehicles with navigation system)

Command	Action
"Find <POI category>"	Displays a list of <POI category* ¹ > near the current position* ²
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► Radio (vehicles with navigation system)

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

► **Audio**

Command	Action
"Play Playlist <playlists>"	Plays tracks from the selected playlist
"Play Artist <artist>"	Plays tracks from the selected artist
"Play Song <songs>"	Plays the selected track
"Play Album <albums>"	Plays tracks from the selected album

► **Info (vehicles with multimedia system)**

Command	Action
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

► **Info (vehicles with navigation system)**

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

► Other (vehicles with navigation system)

Command	Action
"Turn Climate Control ON"	Turns air conditioning system on
"Turn Climate Control OFF"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<XX> degrees"	Changes the set temperature of the air conditioning system to <xx> degrees* ¹
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* ² Audio"	Selects Bluetooth® audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

*¹: Only within the possible temperature range of the air conditioning system

*²: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.




Open the auxiliary box lid, connect the portable audio device.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

Programming HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

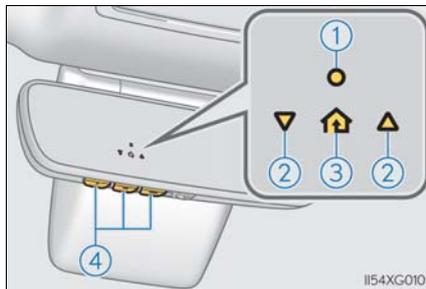

- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ HomeLink® icon
Illuminates while HomeLink® is operating.
- ④ Buttons

When support is necessary

Visit on the web at www.homelink.com/lexus or call 1-800-355-3515.


Before programming HomeLink®

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.

Programming the HomeLink®


Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).

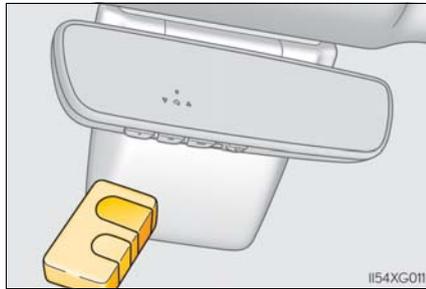

- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink[®] buttons.

Keep the HomeLink[®] indicator light in view while programming.

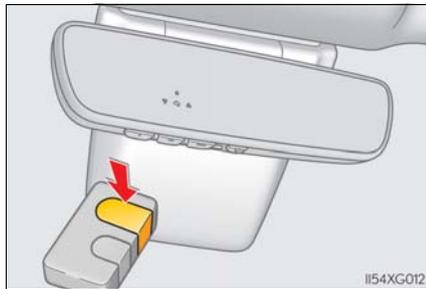

- 3** Program a device.

► **Programming a device other than an entry gate (for U.S.A. owners)**

Press and hold the remote control transmitter button until the HomeLink[®] indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

► **Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market**

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink[®] indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).



- 4** Test the HomeLink[®] operation by pressing the newly programmed button and observing the indicator light:

- Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink[®] button is pressed and released.
- Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink[®] button for 2 seconds then release it.
- If the garage door or other device does not operate, proceed to "Programming a rolling code system".

- 5** Repeat the steps above to program another device for any of the remaining HomeLink[®] buttons.

■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

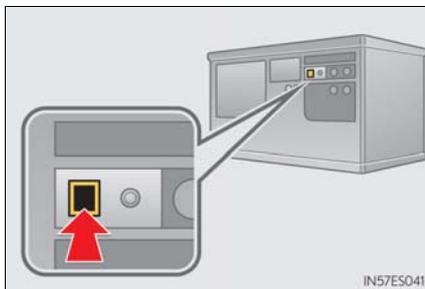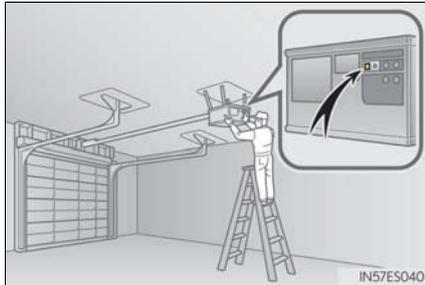

- 1** Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

- 2** Press and release the “Learn” or “Smart” button.

Perform **3** within 30 seconds after performing **2**.

- 3** Press and hold the desired HomeLink[®] button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.


If the garage door opener motor operates when the HomeLink[®] button is pressed, the garage door opener motor recognizes the HomeLink[®] signal.

LEXUS Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

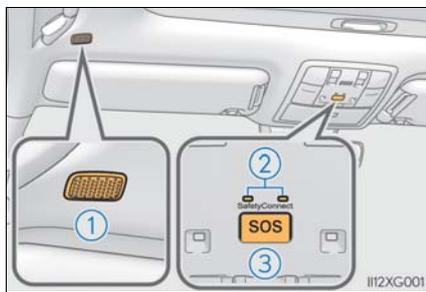

- ① Microphone
- ② LED light indicators
- ③ "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico or 1-800-265-3987 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call the following or push the “SOS” button in your vehicle for further subscription details.

- **The United States**

1-800-25-LEXUS (1-800-255-3987)

- **Canada**

1-800-26-LEXUS (1-800-265-3987)

- **Puerto Rico**

1-877-539-8777

Lexus Enform (if equipped)

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL", "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

Function achieved by using a cellular phone (with navigation system)

Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● LEXUS App Suite

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system (with navigation system)

Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ **Function achieved by using DCM**

■ **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 87)

■ **LEXUS Enform Remote**

■ **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

■ **Subscription**

→P.90

XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL" or "MULTIMEDIA OWNER'S MANUAL".

■ Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:


- ▶ U.S.A. Customers:
Visit www.siriusxm.com or call 1-877-447-0011
- ▶ Canadian Customers:
Visit www.xmradio.ca or call 1-877-438-9677

Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control, key or door lock switch.


For details the entry function or wireless remote control (→P.12, 13)

■ Door lock switches

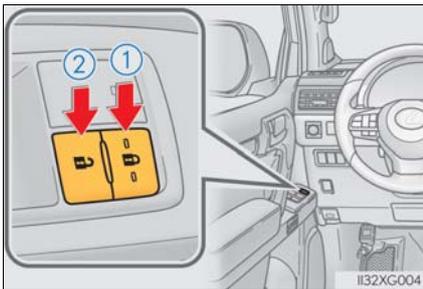


- ① Locks all the doors
- ② Unlocks all the doors

■ Inside lock buttons

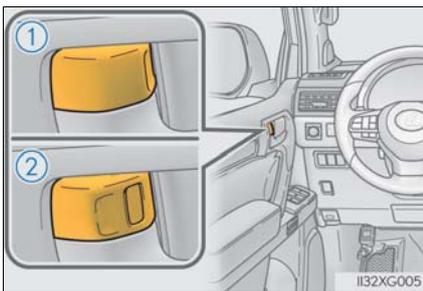

- ① Locks the door
 - ② Unlocks the door
- The front doors can be opened by pulling the inside handles even if the lock buttons are in the lock position.

■ Rear door child-protector lock

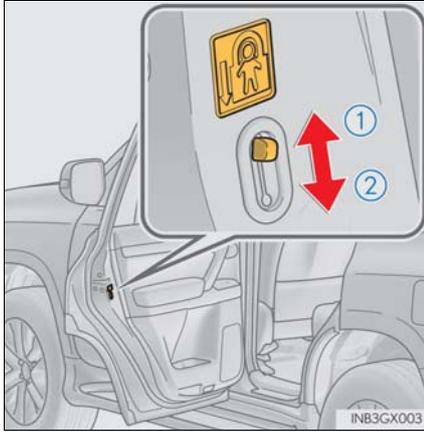


The door cannot be opened from inside the vehicle when the lock is set.

- ① Unlock
- ② Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Power Windows


■ Power window switches

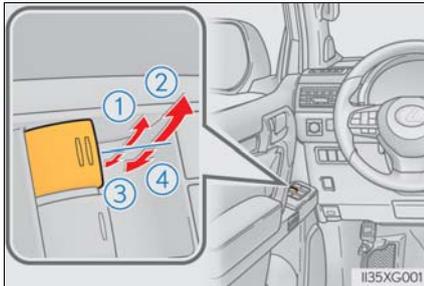

- ① Closing
- ② One-touch closing*
- ③ Opening
- ④ One-touch opening*

*: To stop the window partway, operate the switch in the opposite direction.

■ Window lock switch

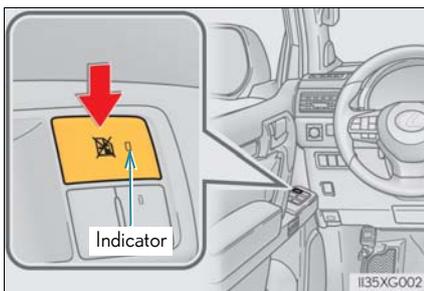

Press the switch down to lock the passenger window switches.


The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the power window switches on the driver's side even if the lock switch is on.

Moon Roof


■ Opening and closing

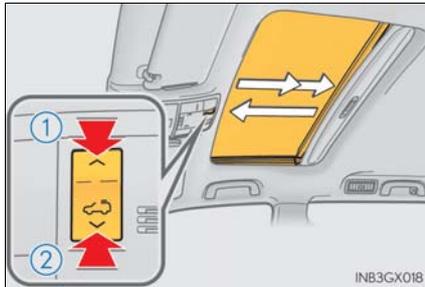

- ① Opens the moon roof*
The moon roof stops slightly before the fully open position to reduce wind noise.
Press the switch again to fully open the moon roof.

- ② Closes the moon roof*
*: Lightly press either end of the moon roof switch to stop the moon roof partway.

■ Tilting up and down

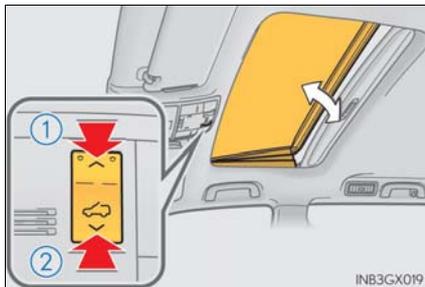


- ① Tilts the moon roof up*
 - ② Tilts the moon roof down*
- *: Lightly press either end of the moon roof switch to stop the moon roof partway.

Fuel Tank Cap


■ Before refueling the vehicle

- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

■ Opening the fuel tank cap

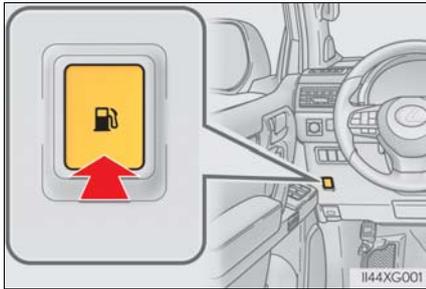

- 1** Press the opener to open the fuel filler door.

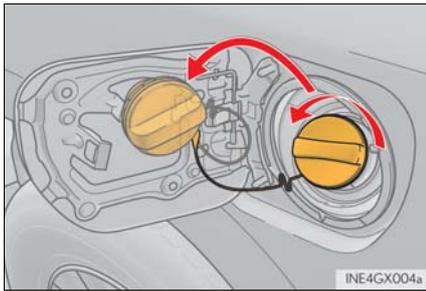

- 2** Turn the fuel tank cap slowly to open, and hang the fuel tank cap on the back of the fuel filler door.

What to do if ...

List of Warning/Indicator Lights

Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.

-  (U.S.A.) Brake system warning light
-  (Canada)

Immediately stop the vehicle in a safe place and contact your Lexus dealer.

-  Charging system warning light
-  Low engine oil pressure warning light*1

Have the vehicle inspected by your Lexus dealer immediately.

- | | | |
|--|----------------------------|--|
|  (U.S.A.) | Malfunction indicator lamp |  Kinetic dynamic suspension system warning light |
|  (Canada) | |  Low speed four-wheel drive indicator light |
|  | SRS warning light |  Center differential lock indicator light
(Flashes) |
|  (U.S.A.) | ABS warning light |  Tire pressure warning light
(Blinking and then continuously on) |
|  (Canada) | |  (U.S.A.) Parking brake indicator |
|  (Flashes or illuminates) | PCS warning light |  (Canada) |
|  | Slip indicator light | |

For further information, refer to the OWNER'S MANUAL.

What to do if ...

Follow the correction procedures.



Open door warning light



LDA indicator^{*1}



Low fuel level warning light



Brake Override System
warning light / Drive-Start
Control warning light^{*1}



Seat belt reminder light



(Illuminates
without
blinking)

Tire pressure warning light^{*3}

Stop and check.



High coolant temperature warning light^{*1}

For further information, refer to the OWNER'S MANUAL.

What to do if ...

See the OWNER'S MANUAL

	Turn signal indicator		VSC OFF indicator
	Headlight indicator (U.S.A.)		Multi-terrain Select indicator ^{*1,2}
	Tail light indicator (Canada)		Crawl Control indicator ^{*1,2}
	Headlight high beam indicator		Downhill assist control system indicator ^{*2}
	Automatic High Beam indicator		"2nd STRT" indicator
	Fog light indicator ^{*2}		Low speed four-wheel drive indicator light
	Eco Driving Indicator Light		Center differential lock indicator
	Cruise control indicator ^{*1}		Intuitive parking assist indicator ^{*2}
	Cruise control "SET" indicator ^{*1}		PCS warning light ^{*4}
	Dynamic radar cruise control indicator ^{*1}		Smart access system with push-button start indicator ^{*1}
	LDA indicator ^{*1}		BSM indicator ^{*2}
	LDA indicator ^{*1} (Flashes)		BSM (Blind Spot Monitor) outside rear view mirror indicators ^{*2}
	Slip indicator		Low outside temperature indicator ^{*1}

For further information, refer to the OWNER'S MANUAL.

What to do if ...

See the OWNER'S MANUAL

 AIR BAG OFF (U.S.A.)	 AIR BAG ON	"AIR BAG ON/ OFF" indicator		ROCK mode indicator ^{*1,2}
 OFF (Canada)	 ON	"AIR BAG ON/ OFF" indicator		LOOSE & ROCK mode indicator ^{*1,2}
 TRAC OFF		TRAC OFF indicator		ROCK & DIRT mode indicator ^{*1,2}
		MUD & SAND mode indicator ^{*1,2}		MTS AUTO indicator ^{*1,2}
		MOGUL mode indicator ^{*1,2}		

For further information, refer to the OWNER'S MANUAL.

*1: This light is displayed on the multi-information display.

*2: If equipped


*3: The tire pressure warning light may turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

*4: The light comes on when the system is turned off.

What to do if ...

If the electronic key does not operate properly

■ Unlocking and locking the doors

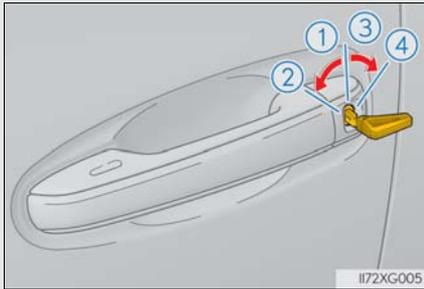


Use the mechanical key (→P.12) in order to perform the following operations (driver's door only):

- ① Locks all the doors
- ② Closes the windows and moon roof* (turn and hold)
- ③ Unlocks the doors
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- ④ Opens the windows and moon roof* (turn and hold)

*: These settings must be customized at your Lexus dealer.

What to do if ...

■ Starting the engine

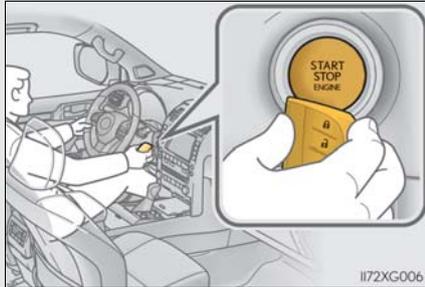

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch.
When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode.
When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch shortly and firmly.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.

What to do if ...

If the engine does not start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.16)

Steering lock

Make sure that the steering lock is released.

To release the steering lock, gently turn the wheel left or right while pressing the engine switch. (→P.15)

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:
Lexus Roadside Assistance
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)
- In Hawaii:
Servco Automotive Roadside Assistance/Customer Services
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:
Lexus Roadside Assistance/Customer Service
1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2020 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.