

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

- 12.3-inch Display**
- Full screen display40
- Split-screen display40
- Display the side display40
- Characteristics of the split-screen display 41
- 4-Wheel AHC (Active Height Control Suspension)30**
- Active TRAC Off Mode37**
- Audio System***
- Audio control screen 50
- Side Display..... 50
- Remote control (steering wheel audio switches)..... 51
- Basic operation..... 52
- Radio 52
- DVD player/CD player 53
- Operating an iPod..... 54
- Automatic High Beam 15**
- BSM (Blind Spot Monitor) 36**
- Crawl Control (with Turn Assist function) 32**
- Cruise Control 26**
- Driving Mode Select Switch 28**

*: This feature may be operated by Voice command (See P.61)

Dynamic Radar Cruise Control with full-speed range	22
Floor mat installation	11
Four-wheel Drive System	31
Front Automatic Air Conditioning System*	
Control panel	57
Main display	58
Changing the air flow mode.....	58
Side display.....	59
Option control screen	59
Using the automatic mode.....	60
Adjusting the temperature for driver and passenger seats separately ("4-ZONE" mode)	60
Garage Door Opener	66
Hands-free System (For Cellular Phone)*	
Bluetooth® phone pairing	46
Contact transfer	47
Registering favorites list	48
Calling by name.....	48
Calling by favorites list.....	49
Calling the message sender	49
Receiving a call	49
Steering switches	50

*: This feature may be operated by Voice command (See P.61)


Intuitive Parking Assist	29
LDA (Lane Departure Alert)	21
Lexus Climate Concierge	56
Lexus Enform	71
LEXUS Enform Safety Connect	69
Multi-information Display	13
Multi-terrain Monitor	35
Multi-terrain Select	34
Navigation System*	
Register home.....	42
Destination search	43
Portable Audio Device Ports	65
Rear Air Conditioning System	
Front controller.....	60
Rear Window Wiper and Washer	19
Remote Touch	
Basic operation.....	38
Menu.....	39
Display.....	39
Screen scroll operation.....	39
Second Start Mode Switch	12


*: This feature may be operated by Voice command (See P.61)

Tire Pressure Warning Reset Switch	37
Turn Signal Lever	12
Voice Command System	
Basic operation	61
Command list	62
Windshield Wipers and Washer	17
XM Satellite Radio	73

Overview

Instrument Panel

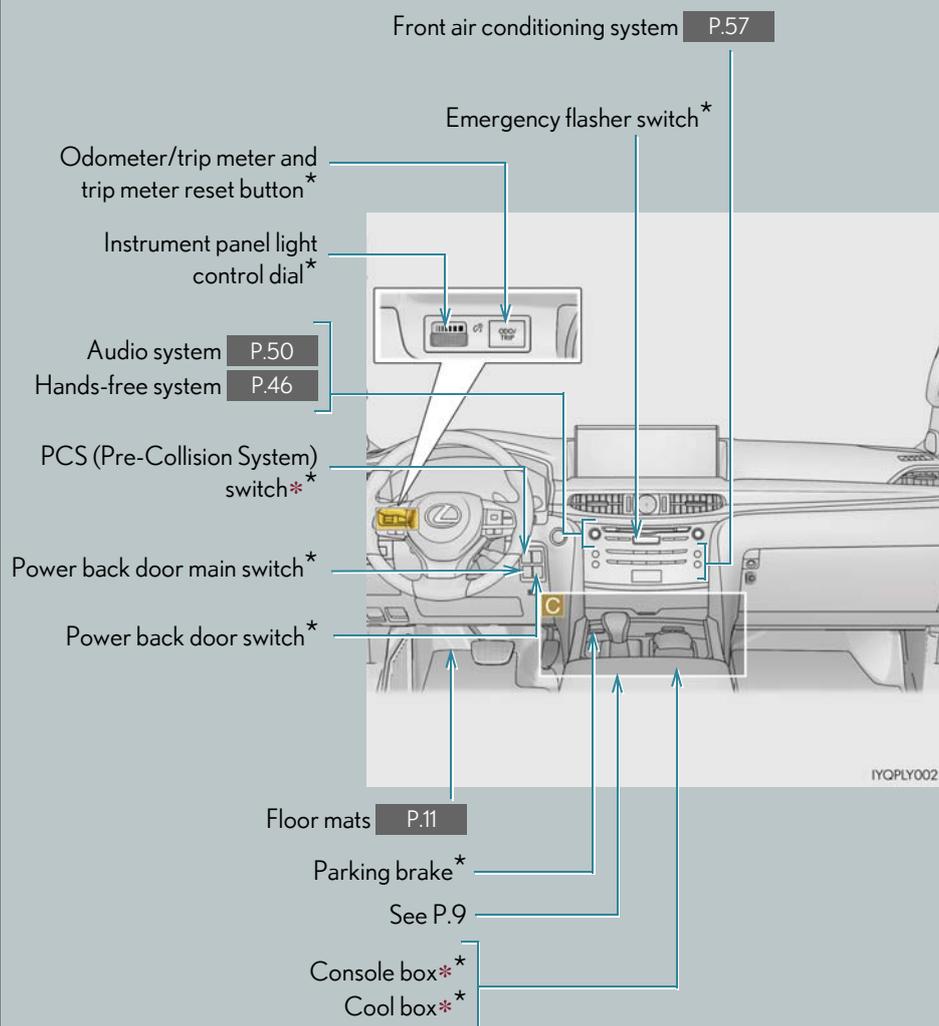


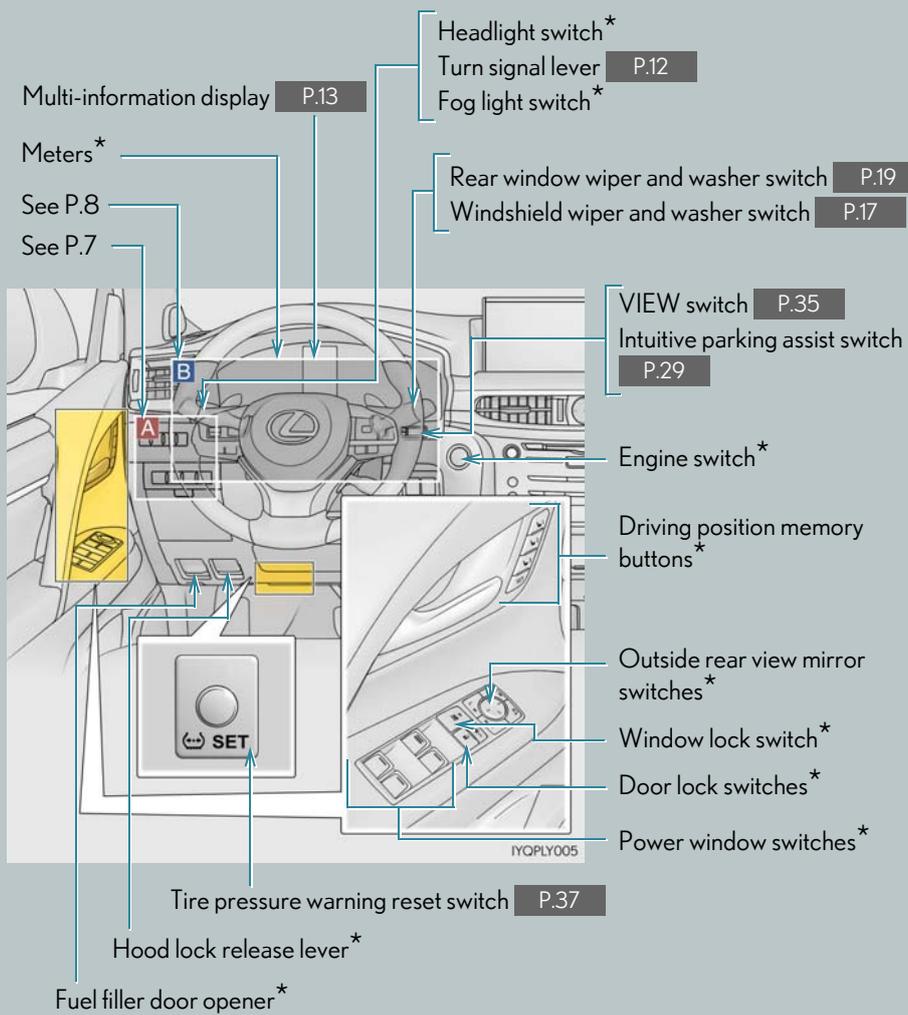

* : If equipped
* : Refer to "OWNER'S MANUAL".

A

Easy access mode switch P.30
HUD (Head-up display) switches*
Headlight cleaner switch*
Automatic High Beam switch P.15

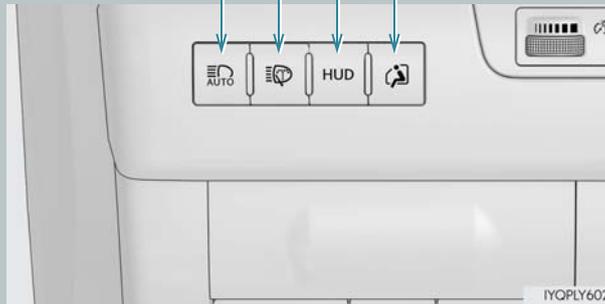


B

Audio remote control switches P.51

Meter control switches P.14

Paddle shift switches*

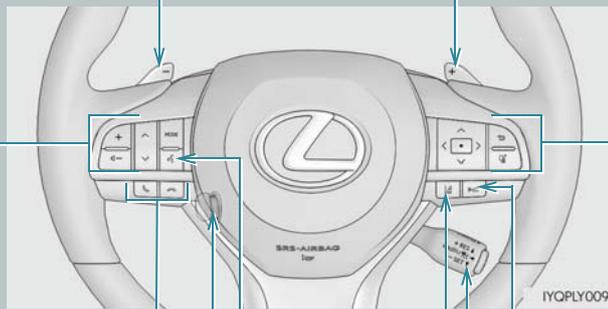

Telephone switches P.50

Talk switch P.50

Tilt and telescopic steering control switch*

LDA (Lane Departure Alert) switch* P.21

Cruise control switch P.22, 26

Vehicle-to-vehicle distance switch* P.22


* : If equipped

*: Refer to "OWNER'S MANUAL".

Overview


Instrument Panel

C

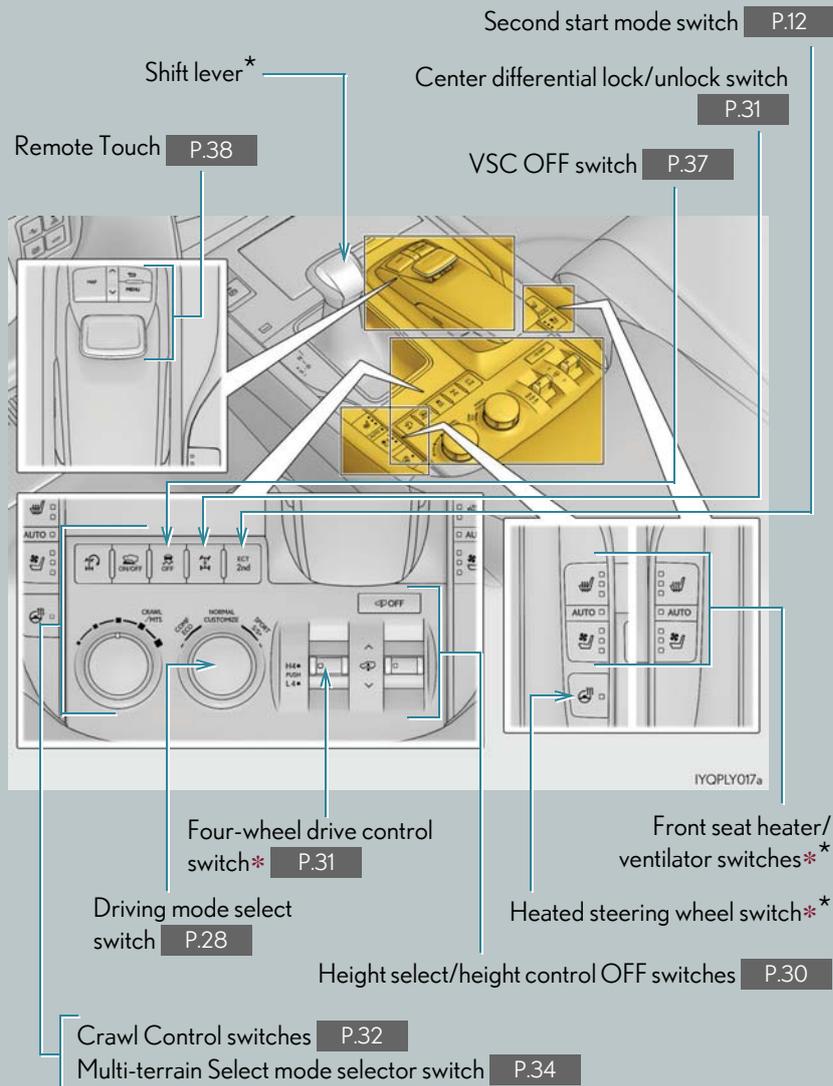

Overview

Roof

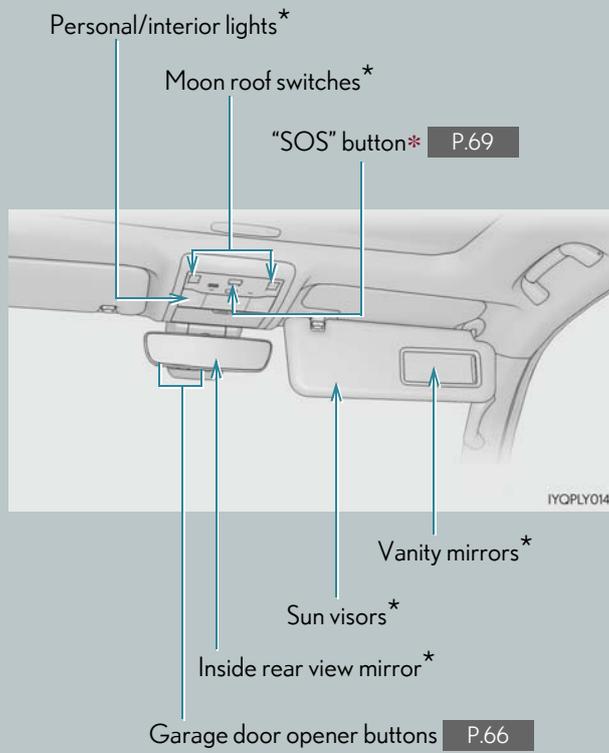


* : If equipped


* : Refer to "OWNER'S MANUAL".

Floor mat installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

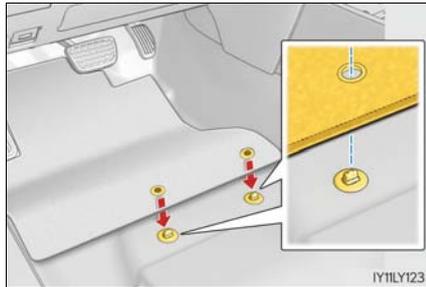

1 Insert the retaining hooks (clips) into the floor mat eyelets.

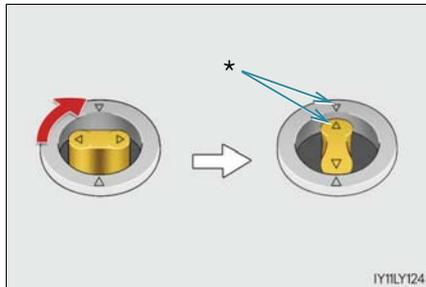


2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the \triangle marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.


Second Start Mode Switch

Use second start mode for accelerating and driving on slippery road surfaces such as snow.

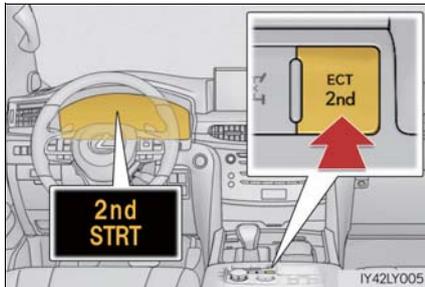

Press the button to use second start mode.
Press the button again to cancel second start mode.

Turn Signal Lever

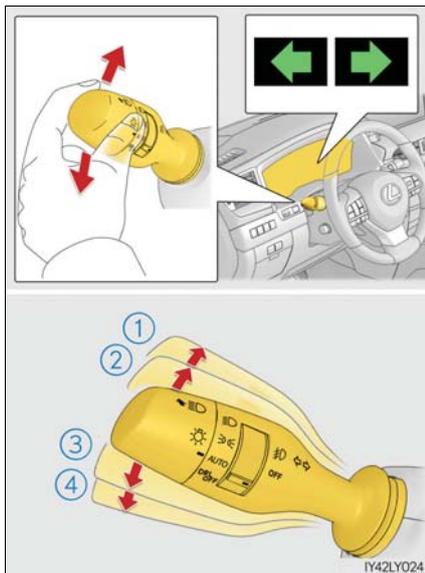

- ① Right turn
- ② Lane change to the right (move the lever partway and then release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and then release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ Customization

The number of times the turn signals flash during a lane change can be changed.

Multi-information Display

The following information will be displayed when a menu icon is selected.

■ Display information



Drive information

Select to display various drive data.



Vehicle information display (if equipped)

Select to display the vehicle information.



Navigation system-linked display

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



Audio system-linked display

Select to enable selection of an audio source or track on the display using the meter control switches.



Driving assist system information (if equipped)

Select to display the operational status of the following systems:

- Dynamic radar cruise control with full-speed range (→P.22)
When the vehicle is in constant speed control mode (→P.25), the menu icon

will change to



- LDA (Lane Departure Alert) (→P.21)



Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.




Settings display

Select to change the meter display settings and the operation settings of some vehicle functions.

■ Operating the meter control switches

The multi-information display is operated using the meter control switches.

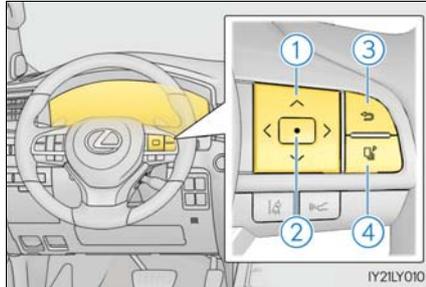

- ①   : Switch menu
  : Change displayed content, scroll up/down the screen and move the cursor up/down
- ② Press: Enter/Set
Press and hold: Reset
- ③ Return to the previous screen
- ④ Press: Displays the screen registered to 

When no screen has been registered, the drive information screen will be displayed.

Press and hold: Registers the currently displayed screen to 


When the confirmation screen is displayed, select yes to register the screen. If the selected screen cannot be registered, a registration failure message will be shown.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


Automatic High Beam

The Automatic High Beam uses an in-vehicle front camera to assess the brightness of streetlights, the lights of vehicles ahead etc., and automatically turns the high beam on or off as necessary.

■ Activating the Automatic High Beam system

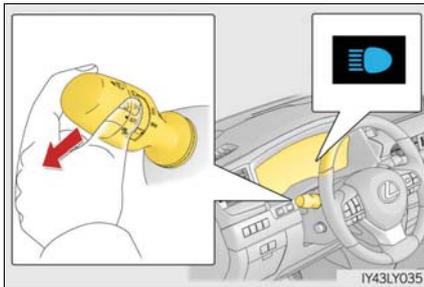

 
- 1** Push the lever away from you with the headlight switch in the AUTO or  position.



- 2** Press the Automatic High Beam switch.
The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

■ Turning the high beam on/off manually

● Switching to low beam

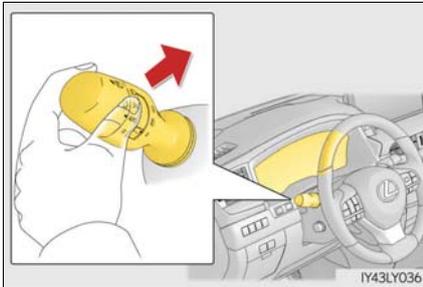


Pull the lever to the original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

● Switching to high beam

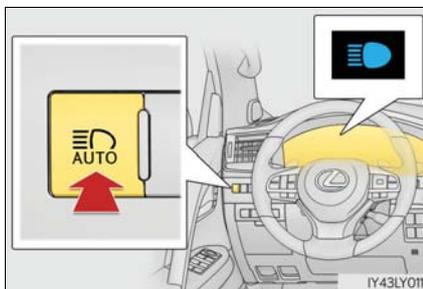

Press the Automatic High Beam switch.

 

 

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

Windshield Wipers and Washer

Operating the  lever operates the wipers or washer as follows.

► Type A

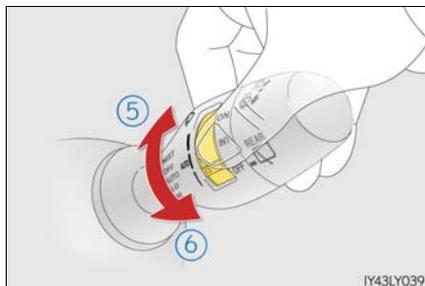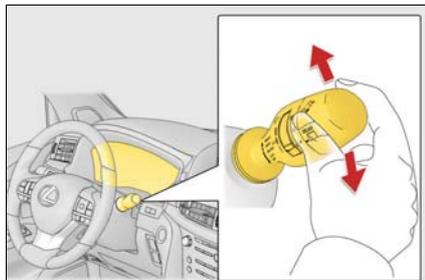

- ① **MIST** Temporary operation
- ② **AUTO** Rain-sensing operation
- ③ **LO** Low speed operation
- ④ **HI** High speed operation




When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.

- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

- ⑦  Washer/wiper dual operation
Pulling the lever operates the wipers and washer.
After operating several times, the wipers operate one more time after a short delay to prevent dripping.

► Type B

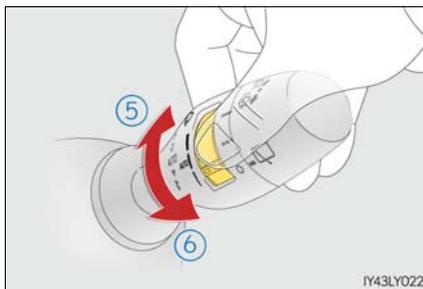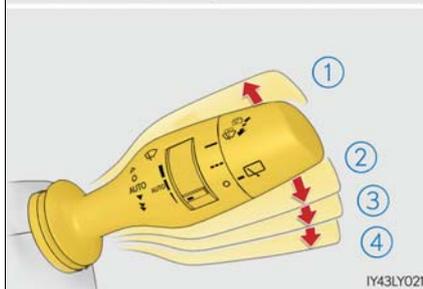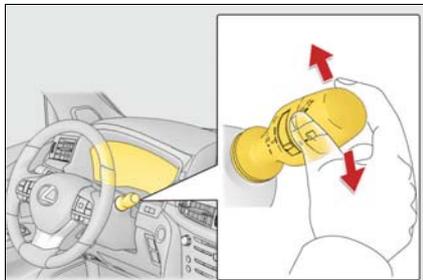

- ① Temporary operation
- ② **AUTO** Rain-sensing operation
- ③ Low speed operation
- ④ High speed operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.


- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

- ⑦ Washer/wiper dual operation
Pulling the lever operates the wipers and washer.
After operating several times, the wipers operate one more time after a short delay to prevent dripping.



Rear Window Wiper and Washer

► Type A

Operating the  switch operates the rear window wiper as follows:

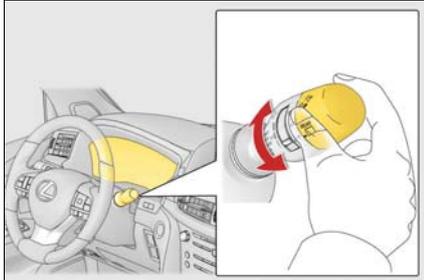


- ① **INT** Intermittent operation
- ② **ON** Normal operation

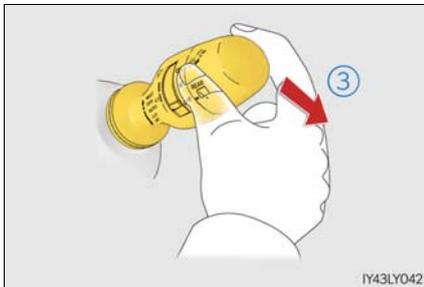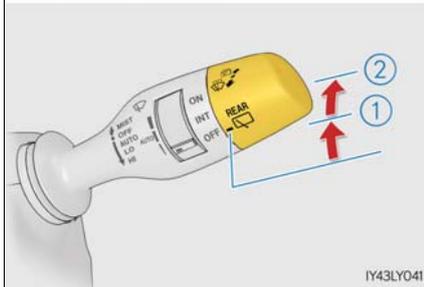


- ③  Washer/wiper dual operation
Pushing the lever operates the wiper and washer.

► Type B

Operating the  switch operates the rear window wiper as follows:

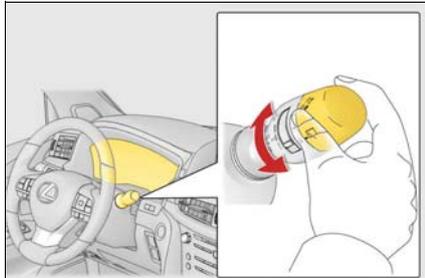

 - ① - - - Intermittent operation
- ② ——— Normal operation




- ③  Washer/wiper dual operation
Pushing the lever operates the wiper and washer.

LDA (Lane Departure Alert) (if equipped)

When driving on roads with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane.

The LDA system recognizes visible white (yellow) lines with the front camera on the upper portion of the front windshield.

Turning LDA system on

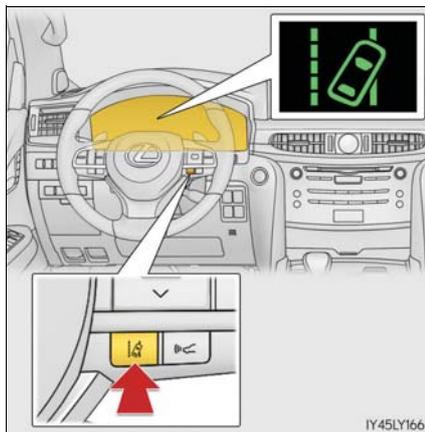

Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates.


Press the LDA switch again to turn the LDA system off.

When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

Dynamic Radar Cruise Control with full-speed range (If equipped)


In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

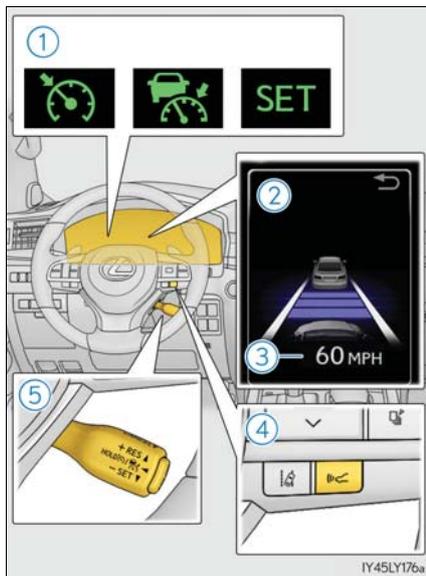

- ① Indicators
- ② Display
- ③ Set speed
- ④ Vehicle-to-vehicle distance switch
- ⑤ Cruise control switch

■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)

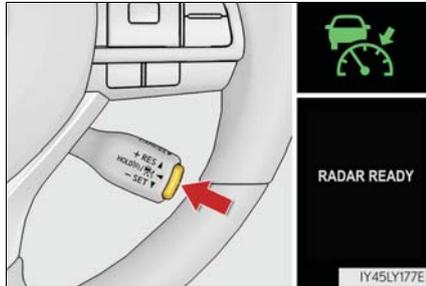


- 1 Press the "ON/OFF" button to activate the cruise control.

Dynamic radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

 If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode.



- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph [50 km/h]) and push the lever down to set the speed.


Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

If the lever is operated while the vehicle speed is below approximately 30 mph (50 km/h) and a preceding vehicle is present, the set speed will be adjusted to approximately 30 mph (50 km/h).


■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.

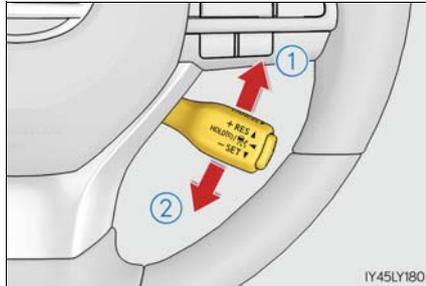

- ① Increases the speed
(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

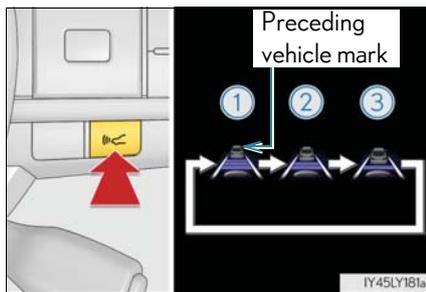

Pressing the switch changes the vehicle-to-vehicle distance as follows:


- ① Long
 - ② Medium
 - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.
- If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

■ Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)




After the vehicle ahead of you starts off, push the lever up.
Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

■ Canceling and resuming the speed control

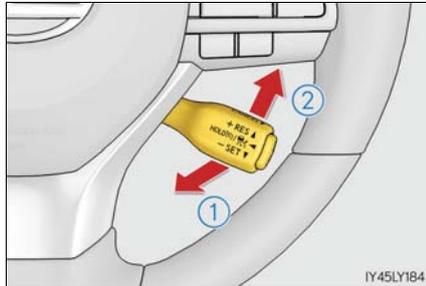


- ① Pulling the lever toward you cancels the speed control.
The speed control is also canceled when the brake pedal is depressed. (When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.
However, when a vehicle ahead is not detected, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.

 ■ Selecting constant speed control mode




- ① With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.
Immediately after the "ON/OFF" button is pressed, the dynamic radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.
Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

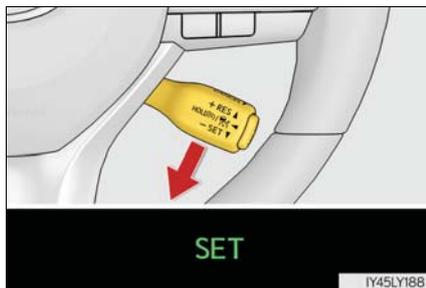

- ② Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 25 mph [40 km/h]) and push the lever down to set the speed.
Cruise control "SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.


Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

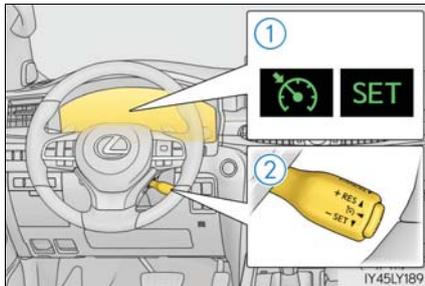


- 1 Indicators
- 2 Cruise control switch

Setting the vehicle speed

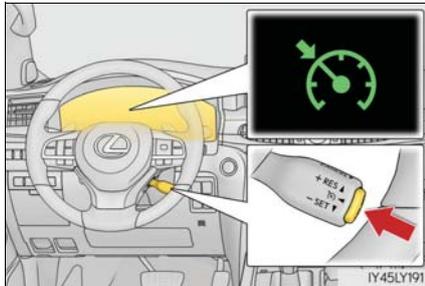


 - 1 Press the "ON/OFF" button to activate the cruise control.
Cruise control indicator will come on.
Press the button again to deactivate the cruise control.




- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
"SET" indicator will come on.
The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

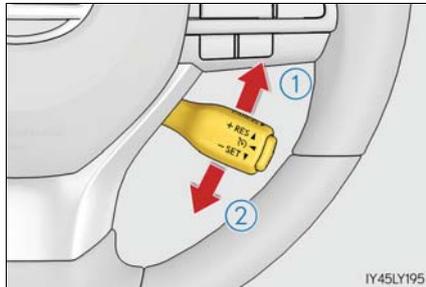

- ① Increases the speed
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.


■ Canceling and resuming the constant speed control

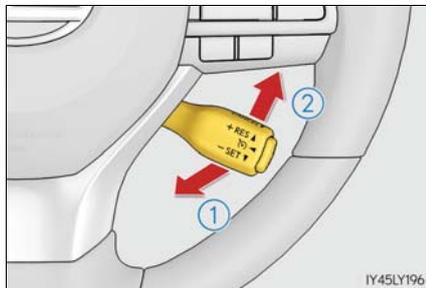

- ① Pulling the lever toward you cancels the constant speed control.
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

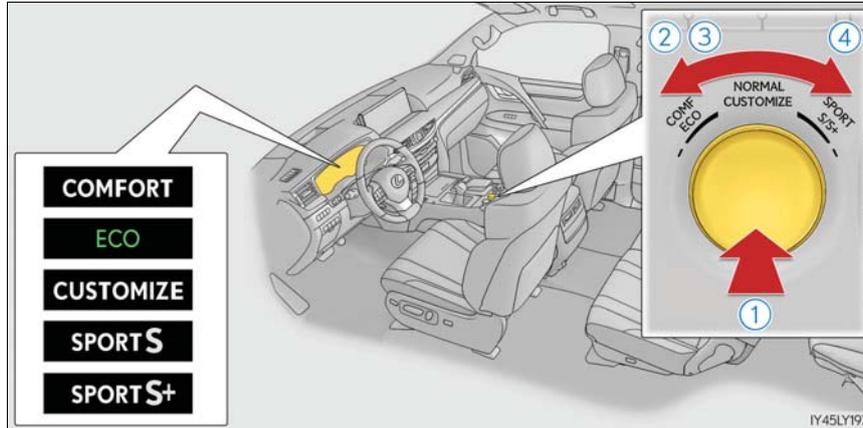

① Normal mode/Customized mode

Normal mode and customized mode are selected by pressing the driving mode select switch. Each time the switch is pressed, the driving mode changes between normal mode and customized mode. When customized mode is selected, the “CUSTOMIZE” indicator will be illuminated.

Press the switch to change the driving mode to normal mode when not in normal mode.


- Normal mode
Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.
- Customized mode
Allows you to drive with the following functions set to your preferred settings. Customized mode settings can only be changed on the drive mode customization display of the Remote touch screen.

Function	Setting
Powertrain	Normal
	Power
	Eco
Chassis	Normal
	Sport
Air conditioning system	Normal
	Eco

- ② **Comfort mode**
By controlling the suspension, riding comfort is further enhanced. Suitable for city driving.
When not in comfort mode and the driving mode select switch is turned to the left, the "COMFORT" indicator comes on in the multi-information display.
- ③ **Eco drive mode**
Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling).
When in comfort mode, if the driving mode select switch is turned to the left, the "ECO" indicator will come on in the multi-information display.
- ④ **Sport mode**
 - **SPORT S mode**
Controls the transmission and engine to provide quick, powerful acceleration. This mode is suitable for when agile driving response is desired, such as when driving on roads with many curves.
When not in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S" indicator will come on in the multi-information display.
 - **SPORT S+ mode**
Helps to ensure steering performance and driving stability by simultaneously controlling the steering and suspension in addition to the transmission and engine. Suitable for sportier driving.
When in SPORT S mode, if the driving mode select switch is turned to the right, the "SPORT S+" indicator will come on in the multi-information display.

Intuitive Parking Assist

 The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, the remote touch screen, and a buzzer.
Always check the surrounding area when using this system.



On/off

To turn the system on, press the switch. The indicator light comes on to inform the driver that the system is operational.

4-Wheel AHC (Active Height Control Suspension)

The 4-Wheel AHC adjusts the vehicle height in accordance with driving conditions. There are 3 selectable modes, "HI" (high), "N" (normal), and "LO" (low).



- ① Easy access mode switch
- ② Height control OFF switch
- ③ Height select switch

Easy access mode



You can select this mode for easy access and easy loading of the vehicle.

If the engine switch is turned off within approximately 30 seconds after the vehicle is stopped while easy access mode is on, the vehicle height is lowered automatically.

Easy access mode is available if the following conditions have been met:

- The vehicle height mode is in normal mode.
- The vehicle is stopped on a flat surface.
- The shift lever is in P.
- The side doors and back door are not opened after the vehicle is stopped.

The following method will cancel the vehicle lowering operation and raise the vehicle again:

- Press the height control OFF switch.
- Push the height select switch to "Λ".

Four-wheel Drive System


Use the four-wheel drive control switch and center differential lock/unlock switch to select the following transfer and center differential modes.

► Four-wheel drive control switch



- ① H4 (high speed position)
Normal driving on all types of roads.
- ② L4 (low speed position)
Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.
The low speed four-wheel drive indicator will come on.

► Center differential lock/unlock switch

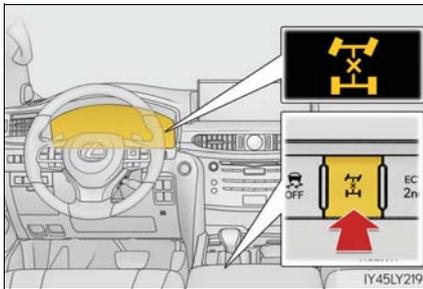

Lock the center differential when your vehicle's wheels get stuck in a ditch or when you are driving on a slippery or bumpy surface.


The center differential lock indicator will come on.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

To unlock the center differential, push the switch again.

Crawl Control (with Turn Assist function)

Crawl Control allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal.

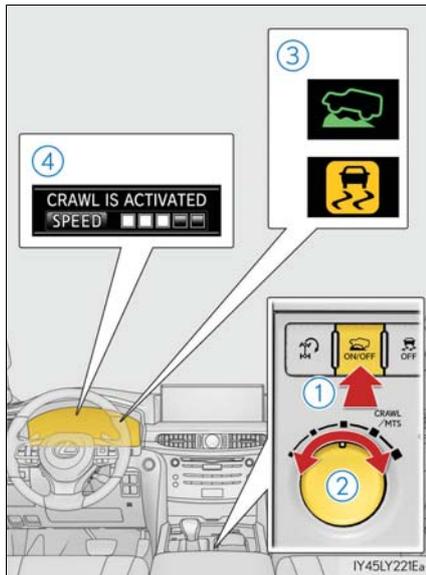

- ① ON/OFF switch
- ② Speed selection switch
- ③ Indicators
The Crawl Control indicator is lit and the slip indicator flashes when operating.
- ④ Multi-information display
The operating status and speed select status of the Crawl Control are shown on the multi-information display.

Speed modes



The following table shows some typical terrains and the recommended speed modes.

Mode		Road conditions
①	Lo	Rock, mogul (downhill) and gravel (downhill)
②	Lo-Med	Mogul (uphill)
③	Med	
④	Med-Hi	Snow, mud, gravel (uphill), sand, dirt, mogul (uphill) and grass
⑤	Hi	

■ Turn Assist function

This function assists cornering performance in accordance with steering operation when driving through a tight corner. It maintains vehicle speed while driving and reduces the number of turns needed to navigate a corner that requires turning the wheel in the opposite direction.



Press the Turn Assist switch while Crawl Control is operating.


Turn Assist indicator will come on.

To turn the system off, press the switch again.

Multi-terrain Select

Multi-terrain Select is a system that helps drivability in off-road situations.


Multi-terrain Select switch/indicators

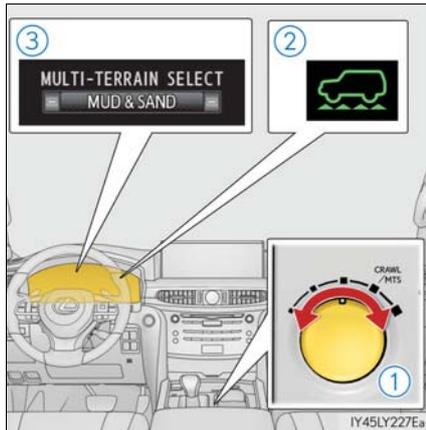

- ① Multi-terrain Select mode selector switch
- ② Multi-terrain Select indicator
- ③ Multi-information display
Displays status information including operating status and road type selection.

Selectable modes

When the Crawl Control is turned off, a mode which matches the road conditions can be selected from among the following 5 modes.

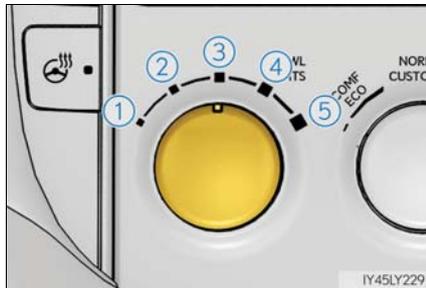


- ① MUD & SAND
- ② LOOSE ROCK
- ③ MOGUL
- ④ ROCK & DIRT
- ⑤ ROCK

Mode	Road conditions
① MUD & SAND	Suitable for muddy roads, sandy roads, snow-covered roads, dirt trails and other slippery or dirty conditions
② LOOSE ROCK	Suitable for slippery conditions consisting of mixtures of earth and loose rock
③ MOGUL	Suitable for a wide range of off-road conditions, particularly very bumpy conditions
④ ROCK & DIRT	Suitable for very bumpy road conditions, such as mogul or rocky roads.
⑤ ROCK	Suitable for rocky terrain

When the Crawl Control is turned on, the most suitable mode is automatically selected according to the Crawl Control mode selected.

Multi-terrain Monitor

The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.

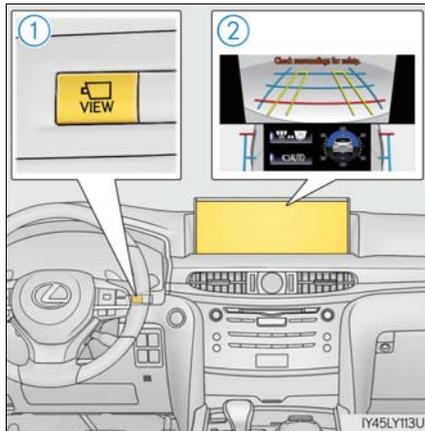

- ① VIEW switch
- ② Display


The surroundings area displayed can be switched by pressing the VIEW switch.

BSM (Blind Spot Monitor)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function
Assists the driver in making the decision when changing lanes
- RCTA (Rear Cross Traffic Alert) function
Assists the driver when backing up


These functions use same sensors.

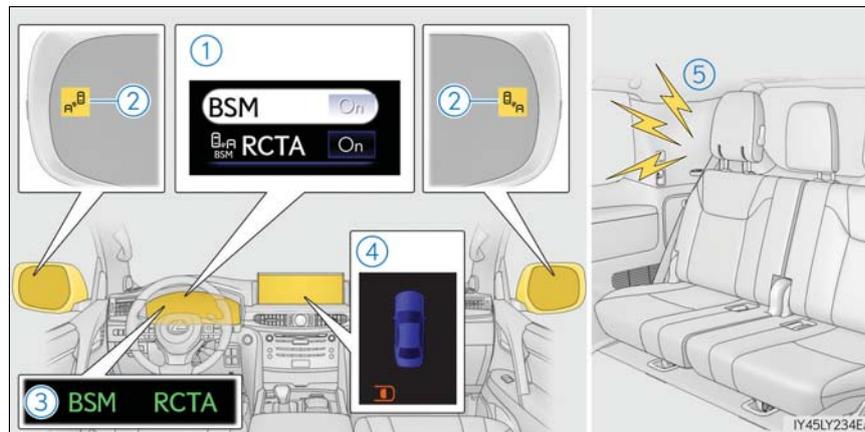

- ① Multi-information display
The BSM function/RCTA function can be turned on/off.
The RCTA function is available when the BSM function is on.
- ② Outside rear view mirror indicators
BSM function:
When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.
RCTA function:
When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.
- ③ "BSM" indicator/"RCTA" indicator
When the BSM function/RCTA function is turned on, the indicator illuminates
- ④ Monitor screen display (RCTA function only)
If a vehicle approaching from the right or left at the rear of the vehicle is detected, the RCTA icon for the detected side will be displayed on the monitor screen. This illustration shows an example of a vehicle approaching from the left at the rear of the vehicle.
- ⑤ RCTA buzzer (RCTA function only)
If a vehicle approaching from the right or left at the rear of the vehicle is detected, a buzzer will sound. The buzzer also sounds for approximately 1 second immediately after the BSM function is operated to turn the system on.

Active TRAC Off Mode

 If the vehicle gets stuck in fresh snow or mud, Active TRAC system reduce power from the engine to the wheels. You may need to turn the system off to enable you to rock the vehicle in order to free it.




Quickly push and release the button to turn off Active TRAC.

The TRAC OFF indicator will come on.

Tire Pressure Warning Reset Switch


Your Lexus is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

 The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display (→P.13)

Initializing the tire pressure warning system

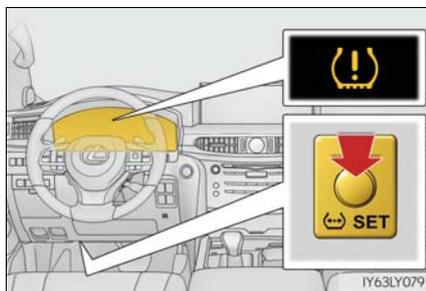


Push and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

For details, see the "OWNER'S MANUAL".

Remote Touch

The Remote Touch can be used to operate the Remote Touch screens.

Basic operation

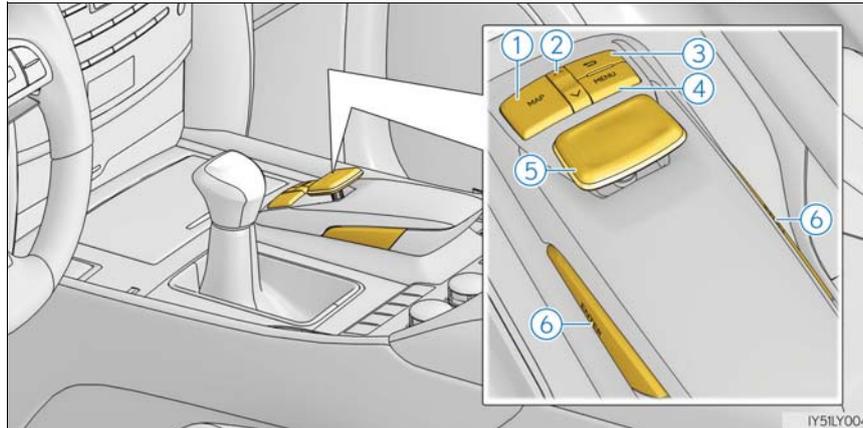

- ① "MAP" button
Press to display the current position, cancel the screen scroll, start guidance, and repeat a voice guidance.
- ② "λ•v" button
Press to scroll the list screen and to change the scale of the map.
- ③ Back button
Press to display the previous screen.
- ④ "MENU" button
Press to display the "Menu" screen.
- ⑤ Remote Touch knob
Move in the desired direction to select a function, letter and screen button.
Press to enter the selected function, letter or screen button.
- ⑥ "ENTER" button
Press to enter the selected function, letter or screen button.

 
■ Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Destination" (→P.43)
- ② "Radio" (→P.52)
- ③ "Media" (→P.53)
- ④ "Phone" (→P.46)
- ⑤ "LEXUS App Suite"
- ⑥ "Info"
- ⑦ "Climate" (→P.57)
- ⑧ "Setup"
- ⑨ "Display" (→P.39)


■ Display



Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- ① Turns the screen off
- ② Turns day mode on/off
- ③ Adjust the screen display
- ④ Adjust the camera display

 ■ Screen scroll operation



To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

- ① Cursor mark
- ② Distance from the current position to the cursor mark
- ③ Register as a memory point
- ④ Set as a destination

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

12.3-inch Display

Full screen display

The following functions can be displayed full screen:

- Initial screen
- "Menu" screen (→P.39)
- Map screen

Split-screen display



Different information can be displayed on the left and right of the screen. For example, audio screen can be displayed and operated while the map screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

- ① Main display
- ② Side display

Display the side display

Basic screens

The following functions can be displayed and operated on the side display.



Select the desired button.

- ① Navigation system (→P.42)
- ② Audio (→P.50)
- ③ Phone (→P.46)
- ④ Vehicle information *1
- ⑤ Air conditioning (→P.59)

▶ **Interrupt screens**

Each of the following screens is displayed automatically in accordance with conditions.

- Intuitive parking assist (→P.29)
- Phone (→P.46)
- Destination Assist^{*2}
- Driving mode (→P.28)

*1: Refer to "OWNER'S MANUAL".

*2: Refer to "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

■ **Characteristics of the split-screen display**

When the split-screen is displayed, it is necessary to select the screen you wish to operate (main display or side display).

▶ **When selecting the main display**

Move the Remote Touch knob to the left.

▶ **When selecting the side display**

Move the Remote Touch knob to the right.

Navigation System

Register home



1 Press the “MENU” button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Navigation”.

4 Select “Home”.

5 Select “Set Home Location”.

6 Select “Address”.

7 Select “City”.

8 Enter a city name and select “OK”.

9 Select the desired city name.

10 Enter a street name and select “OK”.

11 Select the desired street name.

12 Enter a house number and select “OK”.

13 Select “Enter”.

14 Select “OK”.

■ Destination search

■ Search by address



- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
- 2** Select “Destination”.
- 3** Select “Address”.

► Search by city



- 4** Select “City”.
- 5** Enter a city name and select “OK”.
- 6** Select the desired city name.
- 7** Enter a street name and select “OK”.
- 8** Select the desired street name.
- 9** Enter a house number and select “OK”.
- 10** Select “Go”.
- 11** Select “OK”.

► Search by street address



- 4** Select “Street Address”.
- 5** Enter a house number and select “OK”.
- 6** Enter a street name and select “OK”.
- 7** Select the desired street name.
- 8** Enter a city name and select “OK”.
- 9** Select the desired city name.
- 10** Select “Go”.
- 11** Select “OK”.

■ Search by point of interest

 


- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
- 2** Select “Destination”.
- 3** Select “Point of Interest”.

▶ Search by name



- 4** Select “Name”.
- 5** Enter a POI name and select “OK”.



- 6** Select the desired POI.
- 7** Select “Go”.
- 8** Select “OK”.

► Search by category



4 Select "Category".



5 Select the desired search point.

6 Select the desired POI category.

7 Select the desired POI.

8 Select "Go".

9 Select "OK".

► Search by phone number



4 Select "Phone #".

5 Enter a phone number and select "OK".

6 Select "Go".

7 Select "OK".

Hands-free System (For Cellular Phone)

Bluetooth® phone pairing

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> for more phone information.



- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the "MENU" button on the Remote Touch. Please refer to page 38 for the Remote Touch operation.
- 3 Select "Phone".
- 4 Select "Yes" to register a phone.
- 5 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device.
- 6 Register the Bluetooth® device using your Bluetooth® device.
- 7 Check that a confirmation screen is displayed, indicating pairing was successful (a Bluetooth® link has been established but registration is not yet complete).
- 8 Check that "Connected" is displayed and registration is complete.

■ Contact transfer



- 1** Press the “MENU” button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
- 2** Select “Setup”.
- 3** Select “Phone”.
- 4** Select “Contacts/Call History”.
- 5** Select “Transfer Contacts from Phone”.
- 6** Transfer the contact data to the system using a Bluetooth[®] phone.
- 7** Check that a confirmation screen is displayed when the operation is complete.

Contact transfer may not be possible depending on phone model.

■ Registering favorites list



- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Contacts/Call History".
- 5 Select "Add Favorite".
- 6 Select the desired contact to add to the favorites list.
- 7 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name

You can call by giving a name registered in the contact list. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".



- 1 Press the talk switch.
- 2 Say "Call <contacts> <phone types>".
In the same manner as it is displayed on the screen, "Call <contacts> <phone types>", after saying "Call a contact" say the name, or the name and type of phone, of a contact.
For example: "Call a contact", "John Smith" or "Call a contact", "Mary Davis", "Mobile"

Talk switch: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by favorites list

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select the "Favorites" tab and select the desired contact.
- 4 Select the desired number.
- 5 Check that the "Call" screen is displayed.

■ Calling the message sender

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select .
- 4 Select the desired message.
- 5 Select "Call".
- 6 Check that the "Call" screen is displayed.

■ Receiving a call

 
When a call is received, this screen is displayed with a sound.

Call screen can also be displayed on the side display.

Press the  switch on the steering wheel to talk on the phone.

To refuse to receive the call, press the  switch on the steering wheel.

Steering switches



- ① Sending/Receiving/Phone top screen display
- ② End call/Refuse call
- ③ Start the voice command system
- ④ Increases/decreases volume

Audio System

Audio control screen

Follow the procedure below to display the audio control screen.

- 1 Press the "MENU" button on the Remote Touch.
Please refer to page 38 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media".

Side Display

▶ Radio operation

On the side display, preset stations can be registered and selected.



- 1 Select "▽".
- 2 Select the desired source.
 - ① Select to tune in to the desired preset station/channel.

► Media operation


Operations such as selecting a chapter, file or track are carried out on the screen.



- 1** Select "▽".
- 2** Select the desired source.
 - ① Select a chapter/track/file
Select and hold to rewind
 - ② Stop the video screen
 - ③ Play/pause
 - ④ Select a chapter/track/file
During playback: Select and hold to fast forward
During a pause: Select and hold to slow forward

■ Remote control (steering wheel audio switches)

Some audio features can be controlled using the switches on the steering wheel.

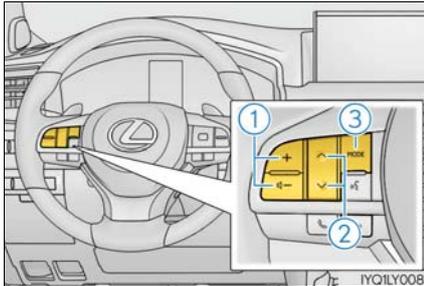


- ① Increases/decreases volume
- ② Radio mode: Select a preset station
SAT mode: Select a preset channel
Audio CD mode: Select a track
MP3/WMA/AAC disc mode: Select a file
DVD mode: Select a chapter
USB mode: Select a file/track
iPod mode: Select a track/file
BT audio mode: Select a track
- ③ Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

Basic operation



- ① Display the audio source selection screen
- ② Display the sound setting screen
- ③ Adjust volume
Turn the audio system on/off
- ④ Select a radio/media mode
- ⑤ Play/Pause
Turn mute on/off

Radio

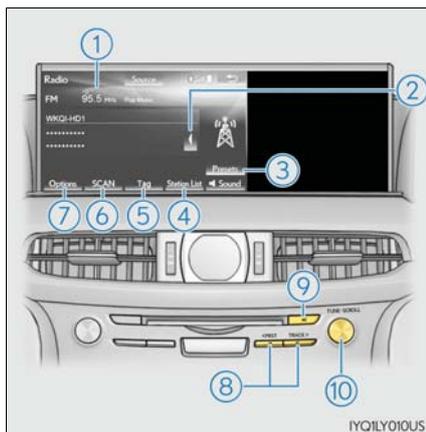

- ① Display HD) multicast channels available
- ② Display the cache radio operation buttons
- ③ Display the radio preset buttons
- ④ Display a list of receivable stations
- ⑤ Store artist and song title information
- ⑥ Scan for receivable stations
- ⑦ Change the screen buttons to the optional screen buttons
- ⑧ Press: Select a preset station
Press and hold: Seek for a station
- ⑨ Turn mute on/off. (Cache radio only)
- ⑩ Step up/down frequencies
Move up/down the list

Entering station/channel presets

- ① Select the desired station/channel by using the tune, the seek or the scan function.
- ② Select "Presets".
- ③ Select one of the screen buttons and hold it until a beep is heard, indicating that the station/ channel has been set.

■ DVD player/CD player

■ Playing an audio CD




- ① Display a track list
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track
Rewind
- ⑦ Eject a disc
- ⑧ Select a track
Fast forward/rewind
- ⑨ Select a track
Move up/down the list

■ Playing a CD with MP3/WMA/AAC files



- ① Select a folder
- ② Display a folder list
- ③ Set random playback
- ④ Set repeat playback
- ⑤ Select a file
Fast forward
- ⑥ Play/Pause
- ⑦ Select a file
Rewind
- ⑧ Eject a disc
- ⑨ Select a file
Fast forward/rewind
- ⑩ Select a file
Move up/down the list

■ Playing a DVD

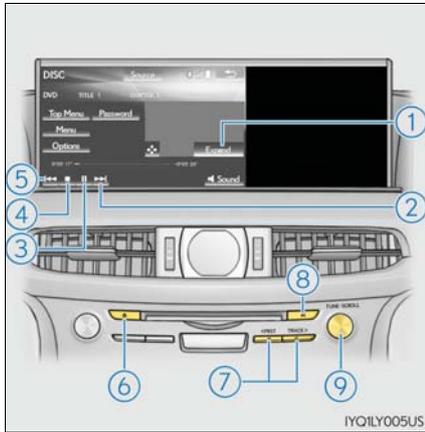

- ① Display expanded screen video
- ② Select a chapter
Fast forward/slow forward
- ③ Play/Pause
- ④ Stop the video screen
- ⑤ Select a chapter
Rewind
- ⑥ Eject a disc
- ⑦ Select a chapter
Fast forward/rewind
- ⑧ Play/Pause
- ⑨ Select a chapter

■ Operating an iPod

■ iPod audio



- ① Display the play mode selection screen
- ② Set random playback
- ③ Set repeat playback
- ④ Select a track
Fast forward
- ⑤ Play/Pause
- ⑥ Select a track
Rewind
- ⑦ Select a track
Fast forward/rewind
- ⑧ Select a track
Move up/down the list

■ iPod video



- ① Display expanded screen video
- ② Select a track
Fast forward
- ③ Play/Pause
- ④ Select a track
Rewind
- ⑤ Select a track
Fast forward/rewind
- ⑥ Select a track
Move up/down the list

Lexus Climate Concierge

The seat heaters, seat ventilators and heated steering wheel are each automatically controlled according to the set temperature of the air conditioning system, the outside and cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.



"CLIMATE CONCIERGE" switch

When the switch is pressed, the indicator above the switch illuminates and all of the following systems operate in automatic mode.

If any of the system is operated manually, the indicator turns off. However, all other functions continue to operate in automatic mode.

■ Automatic air conditioning system (→P.57, 60)

The temperature can be adjusted individually for the driver seat, passenger seat, and rear seats.

When a passenger is detected in the second seat, the rear air conditioning operates in automatic mode.

■ Seat heaters and ventilators (if equipped)

Heating or ventilation is automatically selected according to the set temperature of the air conditioning system, the outside temperature, etc.


The seat heaters and ventilators of the front passenger seat and second outboard seats operate in automatic mode if passengers are detected.

■ Heated steering wheel (if equipped)

Heated steering wheel operates automatically according to the outside temperature and cabin temperature.

Front Automatic Air Conditioning System

Control panel

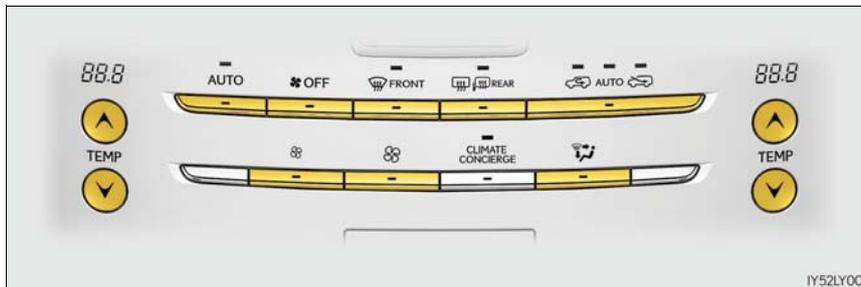

Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.


Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.

Press  to turn the fan off.

Change the airflow mode

To change the air outlets, press .

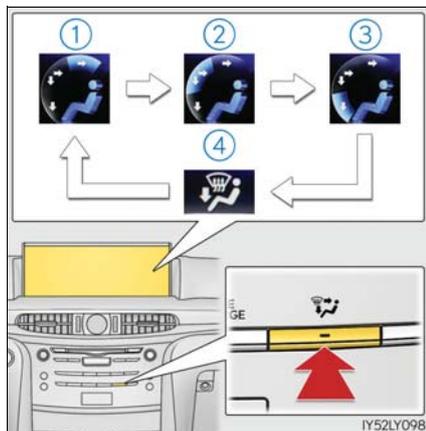

The air outlets used are switched each time the button is pressed.

- ① Air flows to the upper body.
- ② Air flows to the upper body and feet.
- ③ Air flows to the feet.
- ④ Air flows to the feet and the windshield defogger operates

■ Main display



- ① Left-hand front seat side temperature control
- ② Left-hand front seat side air outlet selector
- ③ Air flows to the feet and the windshield defogger operates
- ④ Fan speed control
- ⑤ Right-hand front seat side air outlet selector
- ⑥ Option control screen
- ⑦ Right-hand front seat side temperature control
- ⑧ Rear air conditioning operation screen
- ⑨ Eco mode
- ⑩ Adjust the temperature for driver, passenger and rear seats separately ("4-ZONE" mode) (→P.60)
- ⑪ Cooling and dehumidification function on/off
- ⑫ Automatic mode

■ Changing the air flow mode

To adjust settings, select the screen button.



— Air flows to the upper body.



— Air flows to the upper body and feet.




— Air flows to the feet.



— Air flows to the feet and the windshield defogger operates.

■ Side display

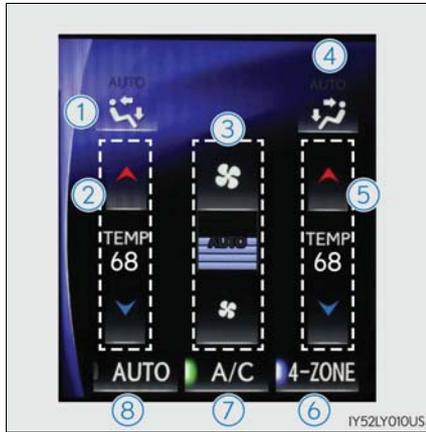

- ① Select the left-hand front seat side air flow mode
- ② Adjust the left-hand side temperature setting
- ③ Adjust the fan speed setting
- ④ Select the right-hand front seat side air flow mode
- ⑤ Adjust the right-hand side temperature setting
- ⑥ Adjust the temperature for driver and passenger seats separately ("4-ZONE" mode) (→P.60)
- ⑦ Select to set cooling and dehumidification function on/off
- ⑧ Select to set auto mode on

■ Option control screen

Select  on the main display to display the option control screen. The functions can be switched on and off.



- ① Prevent ice from building up on the windshield and wiper blades
- ② Micro dust and pollen filter

■ Using the automatic mode

Press  or select  on the control screen to turn on the airflow and adjust the temperature setting.


■ Adjusting the temperature for driver and passenger seats separately (“4-ZONE” mode)

The air conditioning system switches between individual and simultaneous modes each time  on the control screen is selected.

Individual mode (the indicator is on.): The temperature for the driver’s, front passenger’s and rear seats can be adjusted separately. Operating the passenger’s side or rear temperature control will enter individual mode.

In the simultaneous mode, only  (increase) or  (decrease) on the driver’s side can be used to adjust the temperature for all seats.

Rear Air Conditioning System

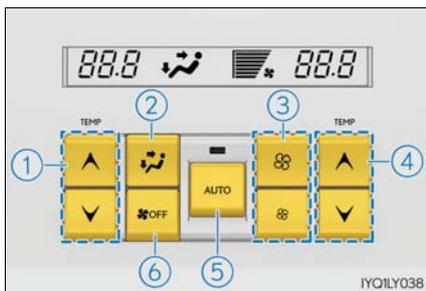

- ① Adjust the left-hand side temperature setting
- ② Change the air flow mode
- ③ Adjust the fan speed setting
- ④ Adjust the right-hand side temperature setting
- ⑤ Set automatic mode on
- ⑥ Turn the fan off

■ Front controller

 


- ① Left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Right-hand side temperature setting
- ④ Turn the fan off
- ⑤ Set automatic mode on

Voice Command System

Basic operation

NOTE: When entering voice commands you must wait until after the beep to speak.



- 1** Press the talk switch on the steering wheel.
- 2** - If you know the command:
Press the talk switch again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press the talk switch again.
- 3** Say a command after the beep.

Continue on to pages 62-65 for a detailed list of Voice Commands for the following categories:

Basic	page 62
Apps	page 62
Navi.....	page 62
Phone	page 63
Radio.....	page 63
Audio	page 64
Info	page 64
Climate.....	page 65

- Important voice commands information and tips
 - Voice commands can be used while driving.
 - You must wait until after the beep to say a command.
 - If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

■ Command list

Basic

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

Apps

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

Navi

Command	Action
"Find <POI category>"	Displays a list of <POI category ^{*1} > near the current position ^{*2}
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination
"Previous Destination"	Displays previous destinations

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

Phone

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

Radio

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode

Audio

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* Audio"	Selects Bluetooth® audio mode
"External"	Selects VTR mode
"Auxiliary"	Selects AUX audio mode

*: The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc.

Info

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

Climate

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<#> degrees"	Changes the set temperature of the air conditioning system to <#> degrees*

*: Only within the possible temperature range of the air conditioning system

Portable Audio Device Ports

This port can be used to connect a portable audio device and listen to it through the vehicle's speakers.



 
Press the lid, open the cover and connect the portable audio device.

Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

■ Programming HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.



- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ HomeLink® icon
Illuminates while HomeLink® is operating.
- ④ Buttons

■ When support is necessary

Visit on the web at www.homelink.com/lexus or call 1-800-355-3515.

 
■ Before programming HomeLink®

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.

■ Programming the HomeLink®


Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).



- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink[®] buttons.

 Keep the HomeLink[®] indicator light in view while programming.



- 3** Program a device.

► **Programming a device other than an entry gate (for U.S.A. owners)**

Press and hold the remote control transmitter button until the HomeLink[®] indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

► **Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market**

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink[®] indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).


 

- 4** Test the HomeLink[®] operation by pressing the newly programmed button and observing the indicator light:

- Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink[®] button is pressed and released.
- Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink[®] button for 2 seconds then release it.
- If the garage door or other device does not operate, proceed to "Programming a rolling code system".

- 5** Repeat the steps above to program another device for any of the remaining HomeLink[®] buttons.

■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

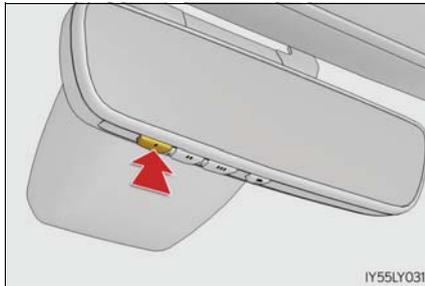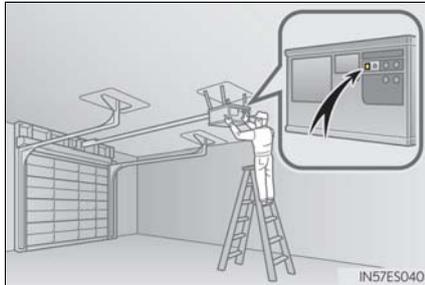

- 1** Locate the “Learn” or “Smart” button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner’s manual supplied with the garage door opener motor for details.

- 2** Press and release the “Learn” or “Smart” button.

Perform **3** within 30 seconds after performing **2**.

- 3** Press and hold the desired HomeLink[®] button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.


If the garage door opener motor operates when the HomeLink[®] button is pressed, the garage door opener motor recognizes the HomeLink[®] signal.

LEXUS Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

System components

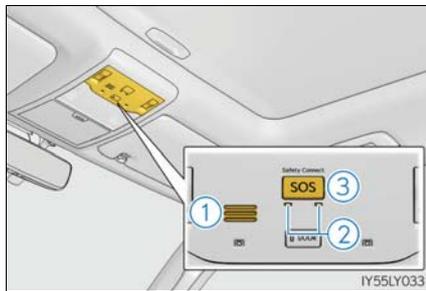

- ① Microphone
- ② LED light indicators
- ③ "SOS" button

Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico or 1-800-265-3987 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (“SOS”)**

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call the following or push the “SOS” button in your vehicle for further subscription details.

- **The United States**

1-800-25-LEXUS (1-800-255-3987)

- **Canada**

1-800-26-LEXUS (1-800-265-3987)

- **Puerto Rico**

1-877-539-8777

Lexus Enform (for U.S.A., if equipped)

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Function achieved by using a cellular phone

Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● LEXUS App Suite

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system

Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ Function achieved by using DCM

■ Services

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P.69)

■ LEXUS Enform Remote

■ Services

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

■ Subscription

→P.70

XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

■ Subscription

For XM Services requiring a subscription (such as XM Radio, and some Infotainment & data services), the following paragraph shall be included.

Required XM Radio and some Infotainment & data services monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.siriusxm.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit www.siriusxm.com or call 1-877-447-0011

► **Canadian Customers:**

Visit www.siriusxm.ca or call 1-877-438-9677

What to do if ...

List of Warning/Indicator Lights



**Immediately stop the vehicle in a safe place and contact your Lexus dealer.
Continuing to drive the vehicle may be dangerous.**

-  (U.S.) Brake system warning light
-  (Canada)

Immediately stop the vehicle in a safe place and contact your Lexus dealer.

-  Charging system warning light

For further information, refer to the OWNER'S MANUAL.

What to do if ...

Have the vehicle inspected by your Lexus dealer immediately.

 (U.S.A.)	Malfunction indicator lamp	 Slip indicator light
 (Canada)		 Automatic headlight leveling system warning light
 SRS warning light		 Low speed four-wheel drive indicator light
 (U.S.A.)	ABS warning light	 Center differential lock indicator light
 (Canada)		 Brake system warning light
 PCS warning light *1 (Flashes or illuminates)		 Tire pressure warning light (Blinking and then continuously on)

Follow the correction procedures.

 Open door warning light	 (U.S.A.)	Parking brake indicator
 Low fuel level warning light	 (Canada)	
 Driver's seat belt reminder light	 Power steering system warning light	
 Front passenger's seat belt reminder light (On the center panel)	 Brake Override System warning light *3	
 Master warning light		
 Tire pressure warning light *2 (Illuminates without blinking)		

For further information, refer to the OWNER'S MANUAL.

What to do if ...

See the OWNER'S MANUAL

	Turn signal indicator		Multi-terrain Select indicator
	Headlight indicator (U.S.A.)		Crawl Control indicator
	Tail light indicator (Canada)		Automatic transmission second start indicator
	Headlight high beam indicator		Low speed four-wheel drive indicator light
	Automatic High Beam indicator		Center differential lock indicator
	Fog light indicator		Easy access mode indicator
	Eco Driving Indicator Light		Intuitive parking assist indicator
	Cruise control indicator		PCS warning light*1, 4
	Cruise control "SET" indicator		BSM (Blind Spot Monitor) indicator
	Dynamic radar cruise control indicator*1		BSM (Blind Spot Monitor) outside rear view mirror indicators
	LDA indicator*1		RCTA (Rear Cross Traffic Alert) indicator
	Slip indicator (Flashes)		"AIR BAG ON/OFF" indicator (U.S.A.)
	VSC OFF indicator		"AIR BAG ON/OFF" indicator (Canada)

For further information, refer to the OWNER'S MANUAL.

What to do if ...

See the OWNER'S MANUAL



Turn Assist indicator



TRAC OFF indicator



(Flashes)
(U.S.A.)

Parking brake indicator



Low outside temperature
indicator



(Flashes)
(Canada)

Parking brake indicator



Smart access system with
push-button start indicator ^{*3}

For further information, refer to the OWNER'S MANUAL.

^{*1}: If equipped

^{*2}: The tire pressure warning light may turn on due to natural causes such as natural air leaks or tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes).

^{*3}: This light is displayed on the multi-information display.

^{*4}: The light turns on when the system is turned off.

What to do if ...

If the electronic key does not operate properly

Unlocking and locking the doors




Use the mechanical key in order to perform the following operations (driver's door only):

- ① Locks all the doors
- ② Closes the windows and moon roof* (turn and hold)
- ③ Unlocks the doors
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- ④ Opens the windows and moon roof* (turn and hold)

*: These settings must be customized at your Lexus dealer.

What to do if ...

■ Starting the engine

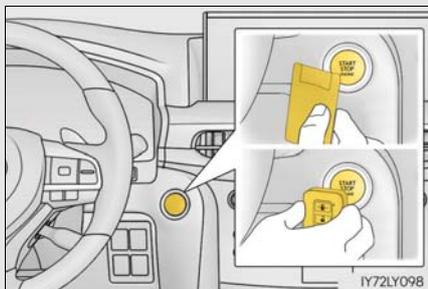

- 1** Ensure that the shift lever is in P and depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the engine switch. When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode. When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.
- 3** Firmly depress the brake pedal and check that  is shown on the multi-information display.
- 4** Press the engine switch.

In the event that the engine still cannot be started, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the OWNER'S MANUAL. If you need further assistance, contact your Lexus dealer.

■ If the engine does not start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine.

If the engine still does not start, see the OWNER'S MANUAL for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:
Lexus Roadside Assistance
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)
- In Hawaii:
Servco Automotive Roadside Assistance/Customer Services
1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:
Lexus Roadside Assistance/Customer Service
1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2020 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.