



2026

**LX700h**

OWNER'S MANUAL QUICK GUIDE

# Contents

The Quick Guide is not intended as a substitute for your *OWNER'S MANUAL*. We strongly encourage you to review the *OWNER'S MANUAL* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Pictorial Index</b> .....	<b>3</b>
<b>Hybrid System</b>	
Hybrid System.....	14
<b>For safe use</b>	
Floor Mat Installation.....	16
<b>Entering and Exiting</b>	
Keys.....	17
Smart Access System with Push-button Start.....	19
<b>When Driving</b>	
Power (Ignition) Switch.....	20
Transmission.....	23
Turn Signal Lever.....	26
Parking Brake.....	27
Brake Hold.....	29
Multi-information Display.....	30
Head-up Display.....	31
Displayed Content.....	34
Headlight Switch.....	36
AHS (Adaptive High-beam System).....	37
AHB (Automatic High Beam).....	39
Fog Light Switch.....	41
Windshield Wipers and Washer.....	42
Rear Window Wiper and Washer.....	43
Driving Mode Select Switch.....	44
AHC (Active Height Control Suspension).....	46
Four-wheel Drive System.....	48
Crawl Control (with Turn Assist function).....	49
Multi-terrain Select.....	51
Multi-terrain Monitor.....	53

## **Driving Comfort**

Basic Operation of Multimedia System .....	54
Navigation * .....	55
Connecting a Smartphone or Communication Device * .....	59
Basic Operation of Audio System * .....	64
Lexus Climate Concierge .....	69
Front Automatic Air Conditioning System * .....	70
Rear Automatic Air Conditioning System * .....	73

## **Interior features**

Starting Voice Control* .....	76
Connecting to the USB Type-C Port .....	80
Garage Door Opener .....	81

## **Safety Connect**

Safety Connect .....	87
Remote Connect .....	89
Service Connect .....	90

## **Opening and Closing**

Door Locks .....	91
Power Windows .....	92
Moon Roof .....	93
Fuel Tank Cap .....	94
Back Door .....	95

## **What to do if...**


List of Warning/Indicator Lights .....	99
If the electronic key does not operate properly .....	103
If the hybrid system will not start .....	104

\*: These features may be operated by Starting Voice Control (See P.76)

Depending on specifications, the vehicle shown in the illustration may differ from your vehicle in terms of equipment.

# Pictorial Index

## ? Instrument panel

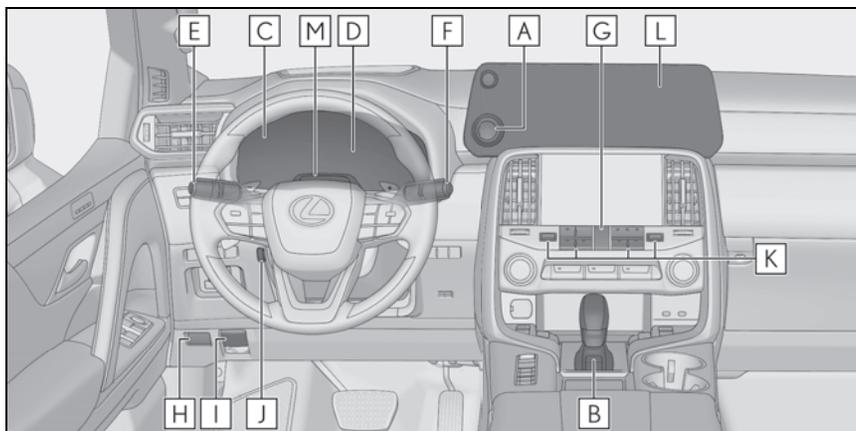


<b>A</b>	<b>Power switch</b> .....	<b>P.20</b>
	Starting the hybrid system/changing the modes .....	P.20
	Emergency stop of the hybrid system .....	P.22
	When the hybrid system will not start .....	P.103
	Warning messages* <sup>1</sup>	
<b>B</b>	<b>Shift lever</b> .....	<b>P.23</b>
	Changing the shift position.....	P.23
	Precautions against towing* <sup>1</sup>	
<b>C</b>	<b>Meters</b> * <sup>1</sup>	
	Reading the meters/adjusting the instrument cluster light* <sup>1</sup>	
	Warning lights/indicator lights .....	P.99
	When the warning lights come on* <sup>1</sup>	
<b>D</b>	<b>Multi-information display</b> .....	<b>P.30</b>
	Display.....	P.30
	When the warning messages are displayed* <sup>1</sup>	

<b>E</b>	Turn signal lever .....	P.26
	Headlight switch .....	P.36
	Headlights/parking lights/tail lights/daytime running lights .....	P.36
	Fog lights .....	P.41
	Adaptive High-beam System switch *2 .....	P.37
	Automatic High Beam switch .....	P.39
<b>F</b>	Windshield wipers and washer switch .....	P.42
	Rear window wiper and washer switch .....	P.43
	Usage .....	P.42, 43
	Adding washer fluid *1	
	Headlight cleaners *1	
	Warning messages *1	
<b>G</b>	Emergency flasher switch *1	
<b>H</b>	Fuel filler door opener .....	P.94
<b>I</b>	Hood lock release lever *1	
<b>J</b>	Tilt and telescopic steering control switch *1	
	Adjustment *1	
	Driving position memory *1	
<b>K</b>	Front air conditioning system .....	P.70
	Usage .....	P.70
	Rear window defogger .....	P.70
<b>L</b>	Audio system .....	P.64
<b>M</b>	Driver monitor camera *1,2	

\*1: Refer to "OWNER'S MANUAL".

\*2: If equipped


## ? Switches

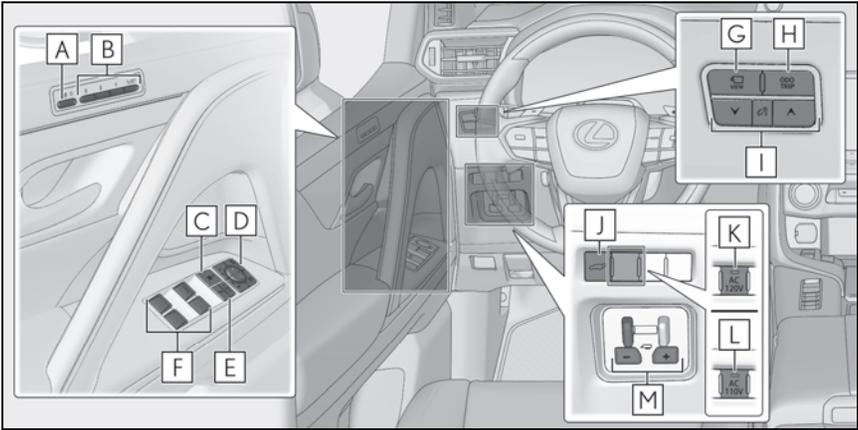

- A** Mode change button <sup>\*1,2</sup>
- B** Driving position memory buttons <sup>\*1</sup>
- C** Window lock switch ..... P.92
- D** Outside rear view mirror switches <sup>\*1</sup>
- E** Door lock switches ..... P.91
- F** Power window switches ..... P.92
- G** Camera switch <sup>\*1</sup>
- H** “ODO TRIP” switch <sup>\*1</sup>
- I** Instrument panel light control switches <sup>\*1</sup>
- J** Power back door switch ..... P.95
- K** “AC 120 V” switch <sup>\*1</sup>
- L** “AC 110 V” switch <sup>\*1</sup>
- M** Trailer brake control switch <sup>\*1</sup>

\*1: Refer to “OWNER’S MANUAL”.


\*2: If equipped

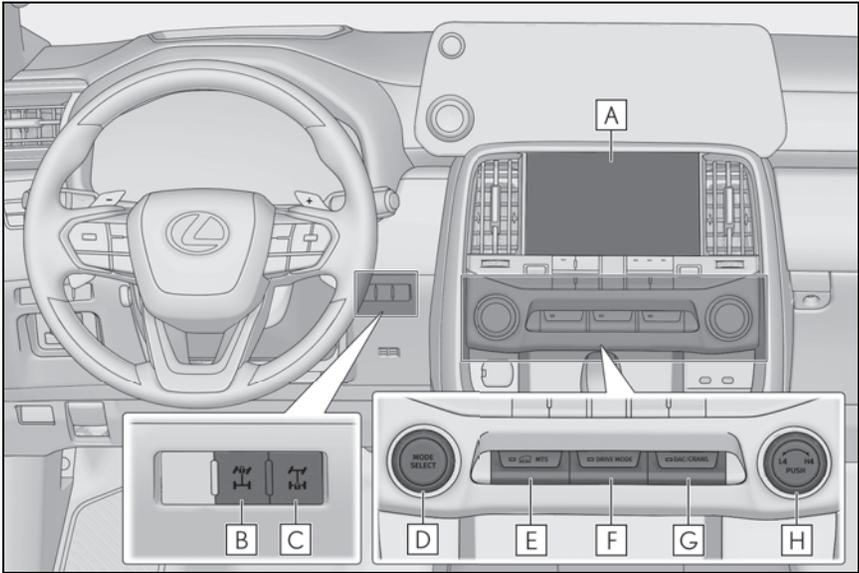

- A** Front Multi Operation Panel\*<sup>1</sup>
- B** Front differential lock switch\*<sup>1,2</sup>
- C** Rear differential lock switch\*<sup>1,2</sup>
- D** MODE SELECT switch\*<sup>1</sup>
- E** MTS switch ..... P.51
- F** DRIVE MODE switch..... P.44
- G** DAC/CRAWL switch\*<sup>1</sup>
- H** Four-wheel drive control switch ..... P.48


\*<sup>1</sup>: Refer to "OWNER'S MANUAL".

\*<sup>2</sup>: If equipped

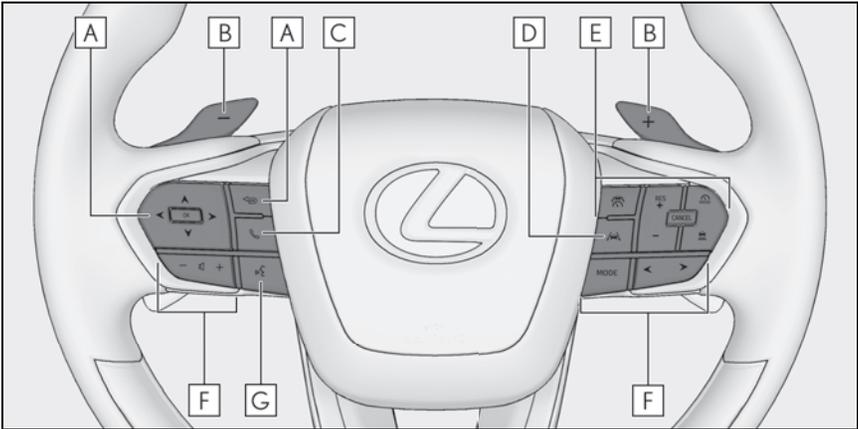

- A** Meter control switches ..... P.34
- B** Paddle shift switches ..... P.24, 25
- C** Telephone switch..... P.61
- D** LTA (Lane Tracing Assist) switch \*
- E** Cruise control switches \*
  - Dynamic radar cruise control\*
  - Cruise control\*
- F** Audio remote control switches..... P.64
- G** Talk switch ..... P.61

\*: Refer to "OWNER'S MANUAL".

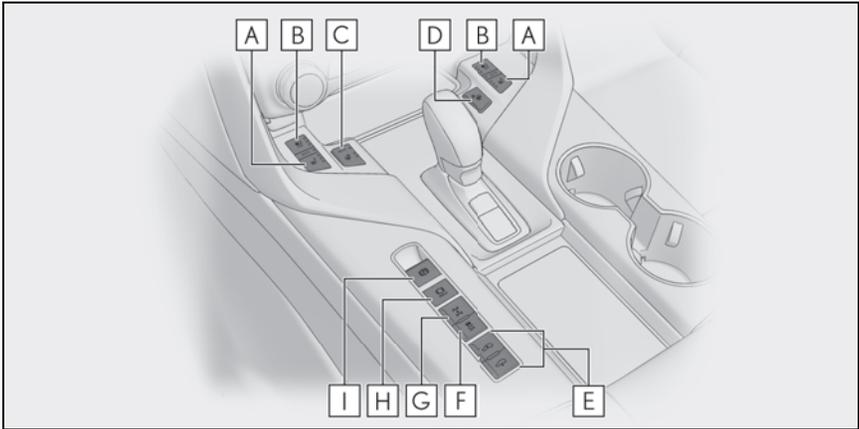


- A** Front seat heater switches <sup>\*1</sup>
- B** Front seat ventilator switches <sup>\*1,2</sup>
- C** Heated steering wheel switch <sup>\*1,2</sup>
- D** Advanced Park main switch <sup>\*1,2</sup>
- E** Height select switches <sup>\*1,2</sup>
- F** VSC OFF switch <sup>\*1</sup>
- G** Center differential lock switch..... P.48
- H** Brake hold switch ..... P.29
- I** Parking brake switch..... P.27
  - Applying/releasing..... P.27
  - Precautions against winter season <sup>\*1</sup>
  - Warning buzzer/message <sup>\*1</sup>

<sup>\*1</sup>: Refer to "OWNER'S MANUAL".

<sup>\*2</sup>: If equipped

## ? Interior

### ► 4-passenger models

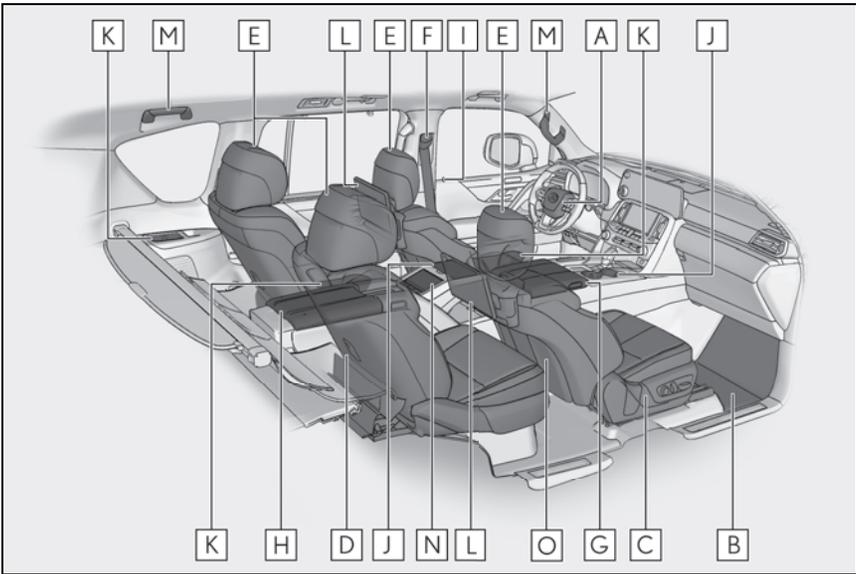

- A** SRS airbags\*<sup>1</sup>
- B** Floor mats ..... P.16
- C** Front seats\*<sup>1</sup>
- D** Rear seats\*<sup>1</sup>
- E** Head restraints\*<sup>1</sup>
- F** Seat belts\*<sup>1</sup>
- G** Cool box\*<sup>1</sup>
- H** Console box\*<sup>1</sup>
- I** Inside lock buttons ..... P.91
- J** Cup holders\*<sup>1</sup>

**K** Bottle holders\*<sup>1</sup>

**L** Rear seat entertainment system\*<sup>2</sup>

**M** Assist grips\*<sup>1</sup>


**N** Rear Multi Operation Panel\*<sup>1,2</sup>

**O** Ottoman\*<sup>1</sup>

\*<sup>1</sup>: Refer to "OWNER'S MANUAL".

\*<sup>2</sup>: Refer to "MULTIMEDIA OWNER'S MANUAL".

► 5-passenger models

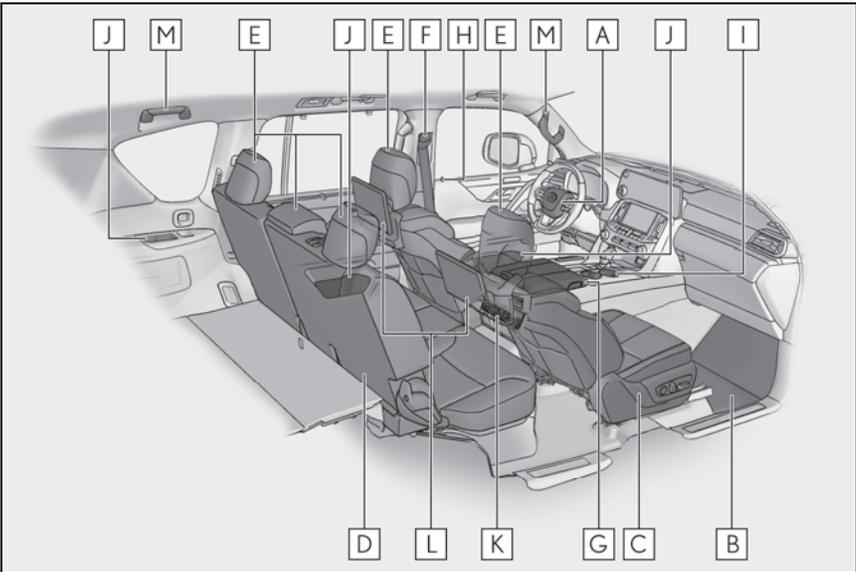


- A** SRS airbags \*<sup>1</sup>
- B** Floor mats ..... P.16
- C** Front seats \*<sup>1</sup>
- D** Rear seats \*<sup>1</sup>
- E** Head restraints \*<sup>1</sup>
- F** Seat belts \*<sup>1</sup>
- G** Cool box \*<sup>1</sup>
- H** Inside lock buttons ..... P.91
- I** Cup holders \*<sup>1</sup>
- J** Bottle holders \*<sup>1</sup>
- K** Rear air conditioning system ..... P.73
- L** Rear seat entertainment system \*<sup>2,3</sup>
- M** Assist grips \*<sup>1</sup>

\*<sup>1</sup>: Refer to "OWNER'S MANUAL".

\*<sup>2</sup>: If equipped

\*<sup>3</sup>: Refer to "MULTIMEDIA OWNER'S MANUAL".

► 7-passenger models

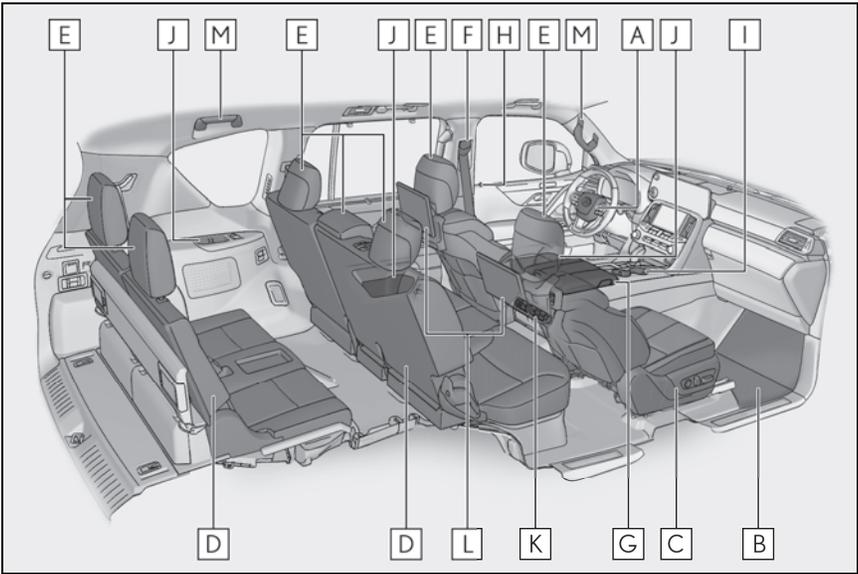


- A** SRS airbags \*1
- B** Floor mats ..... P.16
- C** Front seats \*1
- D** Rear seats \*1
- E** Head restraints \*1
- F** Seat belts \*1
- G** Cool box \*1
- H** Inside lock buttons..... P.91
- I** Cup holders \*1
- J** Bottle holders \*1
- K** Rear air conditioning system ..... P.73
- L** Rear seat entertainment system \*2,3
- M** Assist grips \*1

\*1: Refer to "OWNER'S MANUAL".

\*2: If equipped

\*3: Refer to "MULTIMEDIA OWNER'S MANUAL".

? Ceiling

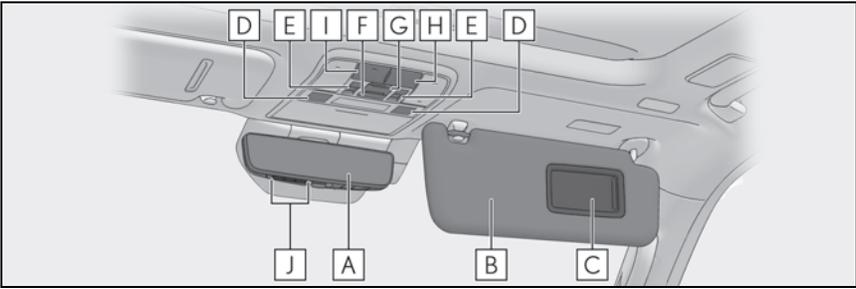

- A** Inside rear view mirror <sup>\*1,2</sup>  
Digital Rear-view Mirror <sup>\*1,2</sup>
- B** Sun visors <sup>\*1</sup>
- C** Vanity mirrors <sup>\*1</sup>
- D** Interior lights <sup>\*1</sup>  
Personal lights <sup>\*1</sup>
- E** Moon roof switches ..... P.93
- F** Intrusion sensor and tilt sensor cancel switch <sup>\*1</sup>
- G** "SOS" button <sup>\*2</sup> ..... P.88
- H** Interior light switch <sup>\*1</sup>
- I** Door-linked interior light switch <sup>\*1</sup>
- J** Garage door opener buttons ..... P.81

\*1: Refer to "OWNER'S MANUAL".

\*2: If equipped

## Hybrid System

Your vehicle is a Hybrid Electric Vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the “OWNER’S MANUAL”.

## Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- ? The accelerator pedal is released while driving with the shift position in D or M.
- ? The brake pedal is depressed while driving with the shift position in D or M.

## Sounds and vibrations specific to a Hybrid Electric Vehicle

Because there is no engine sound or vibration, it is easy to mistake the Hybrid Electric Vehicle for being off when it is actually still running, as indicated by the “READY” indicator being illuminated. For safety, make sure to always shift the shift position to P and apply the parking brake when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:


- ? Motor sounds may be heard from the engine compartment.
- ? Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- ? Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), under the luggage compartment (vehicles without third seats) or third seats (vehicles with third seats), when the hybrid system is started or stopped.
- ? Sounds from the hybrid system may be heard when the back door is open.
- ? Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- ? Engine sounds may be heard when accelerating sharply.
- ? Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- ? Vibration may be felt when the gasoline engine starts or stops.
- ? Cooling fan sounds may be heard from the air intake vents on the rear side trims.

## Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 3.7 gal. [14.0 L, 3.1 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

## Hybrid warning message


A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

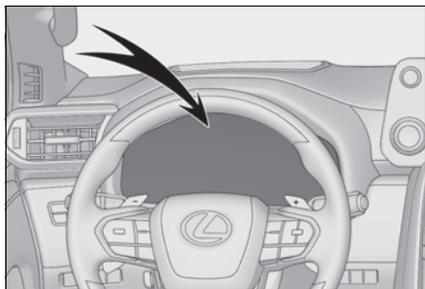


If a warning message is shown on the multi-information display, read the message and follow the instructions.

## Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

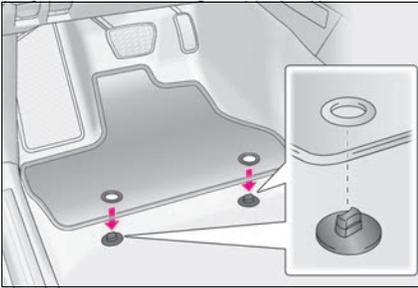

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

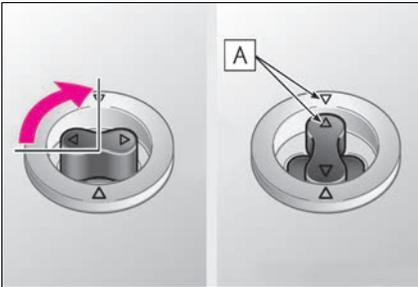


- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

Always align the  $\triangle$  marks **A**.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

# Keys

## Electronic key

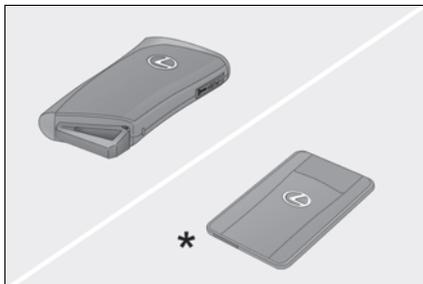


? Smart access system with push-button start (→P.19)

? Wireless remote control

\*: If equipped

## Mechanical key

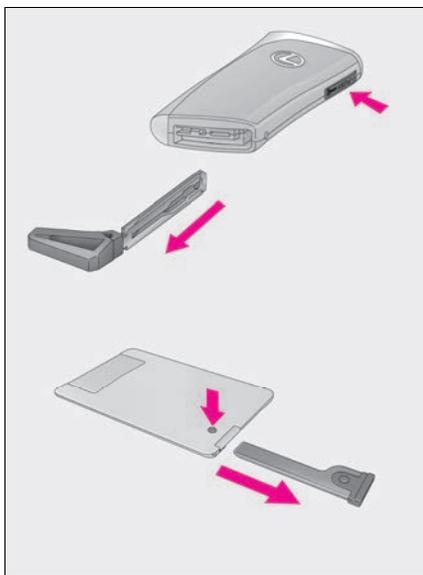


To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

## Wireless remote control

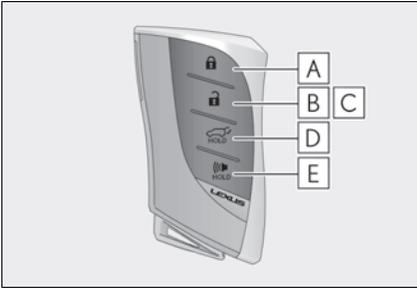

- A** Locks all the doors
- B** Unlocks all the doors
- C** Opens the windows and the moon roof\*
- D** Opens and closes the power back door
- E** Sounds the alarm


\*: These settings must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. The driver should always carry the electronic key.

For details on starting the hybrid system, see page 20.

### Unlocking and locking the doors from the outside

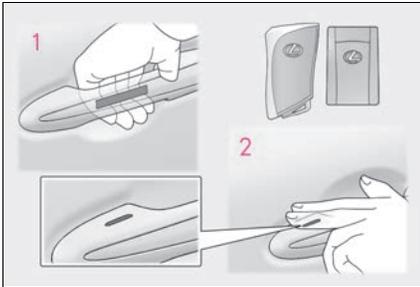

- 1** Grip the driver's door handle to unlock the door. Holding the driver's door handle for approximately 2 seconds unlocks all the doors. Grip the passenger's door handle to unlock all the doors.\*

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

\*: The door unlock settings can be changed.

- 2** Touch the lock sensor (the indentation on the upper part or lower part of the handle) to lock the doors.

Check that the door is securely locked.

### Unlocking and locking the back door from the outside

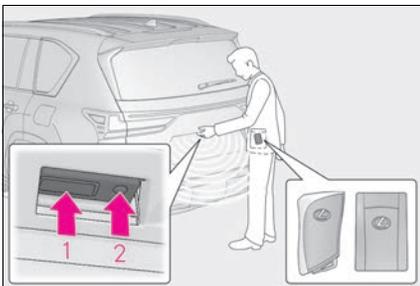

- 1** Unlocks all the doors  
The doors cannot be unlocked for 3 seconds after the doors are locked.
- 2** Locks all the doors  
Check that the door is securely locked.

For details on what to do when the electronic key does not operate properly, see page 103.

## Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

### Starting the hybrid system

- 1 Pull the parking brake switch to check that the parking brake is set. (→P.27)


The parking brake indicator will come on.

- 2 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the hybrid system cannot be started.

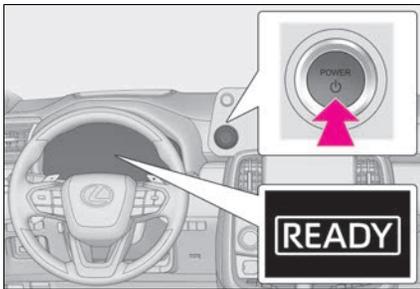

- 3 Press the power switch shortly and firmly.

When operating the power switch, one short, firm press is enough. It is not necessary to press and hold the switch.

If the "READY" indicator turns on, the hybrid system will operate normally.

Continue depressing the brake pedal until the "READY" indicator is illuminated.

The hybrid system can be started from any power switch mode.

- 4 Check that the "READY" indicator is illuminated.

The vehicle cannot be driven if the "READY" indicator is off.

## Stopping the hybrid system

- 1 Stop the vehicle completely.
- 2 Set the parking brake. (→P.27)
- 3 Press the P position switch. (→P.23)

Check that the shift position indicator shows P and the parking brake indicator is illuminated.


- 4 Press the power switch.

The hybrid system will stop, and the meter display will be extinguished (the shift position indicator will be extinguished a few seconds after the meter display).

- 5 Release the brake pedal and check that “ACCESSORY” or “POWER ON” is not shown on the meter.

## Changing power switch modes

Modes can be changed by pressing the power switch with the brake pedal released. (The mode changes each time the switch is pressed.)

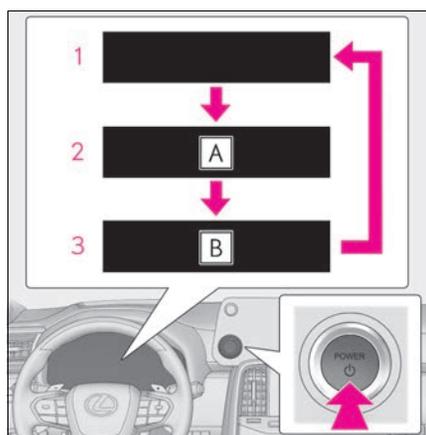

**A** “ACCESSORY”

**B** “POWER ON”

**1** OFF

The emergency flashers can be used.

The multi-information display will not be displayed.

**2** ACC\*

Some electrical components such as the audio system can be used.

**3** ON


All electrical components can be used.

\*: ACC mode can be enabled/disabled on the customize menu.

## If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1 Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2 Shift the shift position to N.
  - ▶ If the shift position is shifted to N
- 3 After slowing down, stop the vehicle in a safe place by the road.
- 4 Stop the hybrid system.
  - ▶ If the shift position cannot be shifted to N
- 3 Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.

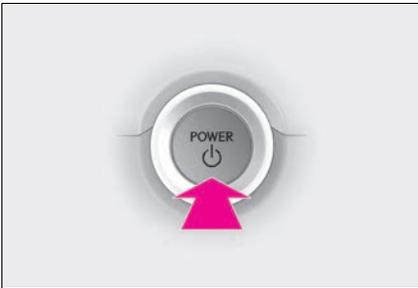


- 4 To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5 Stop the vehicle in a safe place by the road.

# Transmission

## Shift position display and how to change the shift position

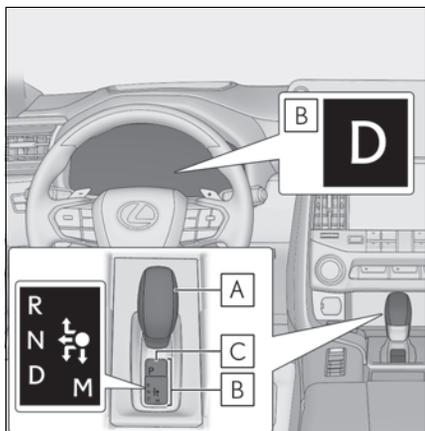

### A Shift lever

Operate the shift lever gently and securely in the direction of the arrow on the shift position indicator.

To shift to N, slide the shift lever in the direction of the arrow and hold it.

Release the shift lever after each shifting operation to allow it to return to its regular position (●).

Shifting to M is only possible when the shift position is in D.

When shifting from P to N, D or R, from N, D, M or R to P, from D or M to R, or from R to D, ensure that the brake pedal is being depressed and the vehicle is stationary.

### B Shift position indicator

Meter display:

The current shift position is illuminated.

Shift lever display:

The current shift position is illuminated.

When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.

### C P position switch

Fully stop the vehicle and set the parking brake, and then press the P position switch.

When the shift position is changed to P, the switch illuminates.

Check that the shift position indicator shows P.

## Shift position purpose and functions

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral (Condition in which the power is not transmitted)
D	Normal driving <sup>*1</sup>
M	M mode driving <sup>*2</sup> (→P.25)

<sup>\*1</sup>: To improve fuel efficiency and reduce noise, set the shift position in D for normal driving. You can choose gear range suitable for your driving situation by operating the paddle shift switches.

<sup>\*2</sup>: Any gear range can be fixed when driving in M mode.


## Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the “-” or “+” paddle shift switch when driving with the shift position in D.

When the “-” paddle shift switch is operated, the shift range switches to a range that enables engine braking force that is suitable to driving conditions.

When the “+” paddle shift switch is operated, the shift range switches to a range that is one range higher than the current range.

Changing the shift range allows restriction of the highest shift range, preventing unnecessary upshifting and enabling the level of engine braking force to be selected.

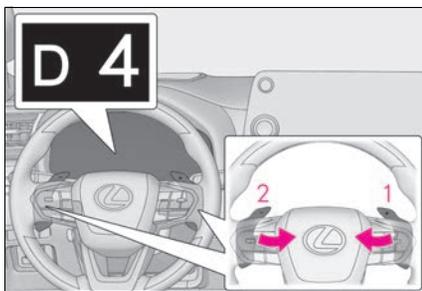

**1** Upshifting

**2** Downshifting

The selected shift range, from D1 to D10, will be displayed in the meter.

To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.


## ? Shift ranges and their functions

Meter display	Function
D2 - D10	A gear in the range between D1 and the selected shift range is automatically chosen depending on vehicle speed and driving conditions
D1	Setting the shift range at D1

A lower shift range will provide greater engine braking forces than a higher shift range.

## Selecting gears in M mode

To enter M mode, shift the shift position to M. Gears can be selected by operating the paddle shift switches allowing you to drive in the gear of your choosing.

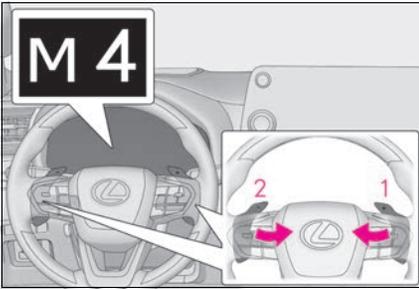

**1** Upshifting

**2** Downshifting

The gear changes once every time the paddle shift switch is operated.


The selected gear, from M1 to M10, will be fixed and displayed on the meter.

When in the M position, the gear will not change unless the paddle shift switch is operated.

However, even when in the M position, the gears will be automatically changed in the following situations:

- ? When vehicle speed drops (downshift only).
- ? When vehicle speed increases (upshift only).
- ? When the accelerator pedal is firmly depressed.
- ? When it is necessary to protect the transmission when the transmission fluid temperature is high or low, or other reasons.

## Turn Signal Lever

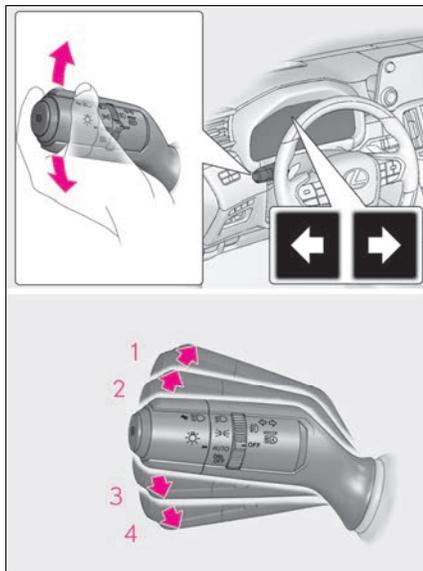


- 1 Right turn
- 2 Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- 3 Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- 4 Left turn

# Parking Brake

The parking brake can be set or released automatically or manually.

## Using the manual mode

The parking brake can be set and released manually.

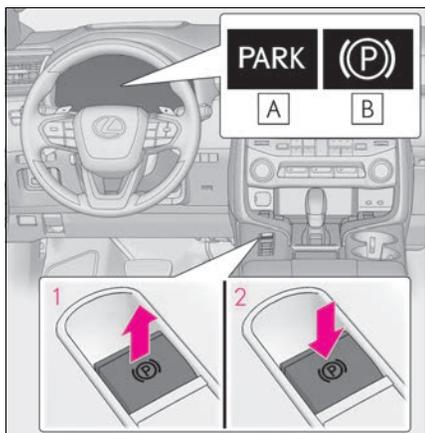

**A** U.S.A.

**B** Canada

**1** Pull the switch to set the parking brake.

The parking brake indicator light will turn on.

Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.


**2** Press the switch to release the parking brake.

- Operate the parking brake switch while depressing the brake pedal.
- Using the parking brake automatic release function, the parking brake can be released by depressing the accelerator pedal. When using this function, slowly depress the accelerator pedal.

Make sure that the parking brake indicator light turns off.

## Turning the automatic mode on

While the vehicle is stopped, pull and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

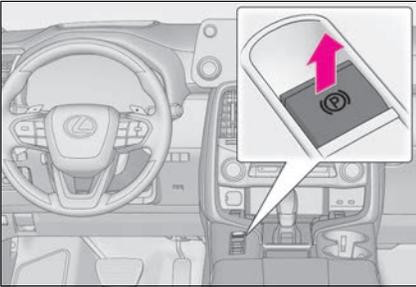


When the automatic mode is turned on, the parking brake operates as follows.

- ? When the shift position is shifted from P, the parking brake will be released, and the parking brake indicator light will turn off.
- ? When the shift position is shifted to P, the parking brake will be set, and the parking brake indicator light will turn on.

Operate the shift position and P position switch with the vehicle stopped and the brake pedal depressed.


## Turning the automatic mode off

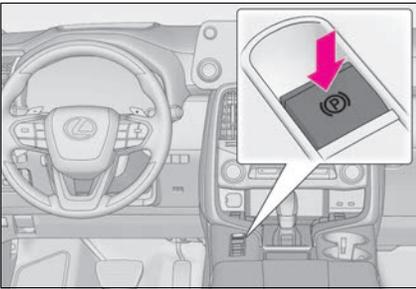

While the vehicle is stopped and depressing the brake pedal, press and hold the parking brake switch until a buzzer sounds and a message is shown on the multi-information display.

## Brake Hold

The brake hold system keeps the brake applied when the shift position is in D, M, N or P with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift position in D or M to allow smooth start off.

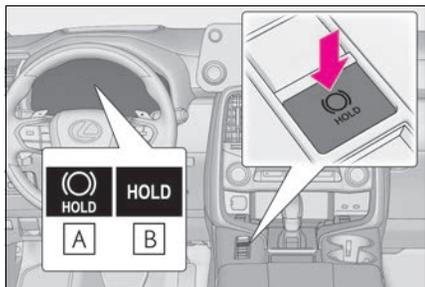

Turns the brake hold system on

The brake hold standby indicator (green)


**A** comes on. While the system is holding the brake, the brake hold operated indicator (yellow) **B** comes on.

## Multi-information Display

The multi-information display is used to display fuel efficiency related information and various types of driving-related information.

### Display contents

Following information is displayed in each area on the multi-information display.

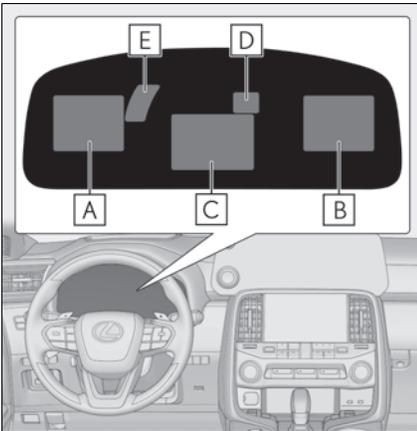

- A** Content display area (left)
- B** Content display area (right)
- C** Content display area (center)
- D** Driving support system information display area

When driving support system information is displayed on the content display area, the system operating state will not be displayed in this area.

- E** RSA (Road Sign Assist) display area (if equipped)

#### ? Content display area (center)

- ? Blank
- ? Driving support system information display
- ? Map display


#### ? Content display area (left/right)

- ? Blank
- ? Fuel Economy
- ? Driving support system information display
- ? Navigation system-linked information display
- ? Audio system-linked display
- ? Drive information display
- ? Trailer brake controller
- ? Auxiliary Gauges
- ? Engine/Transmission oil temperature
- ? Boost Gauges

## Head-up Display (if equipped)


The head-up display projects a variety of driving-related information and the operating state of the driving support systems on the windshield.

### Head-up display

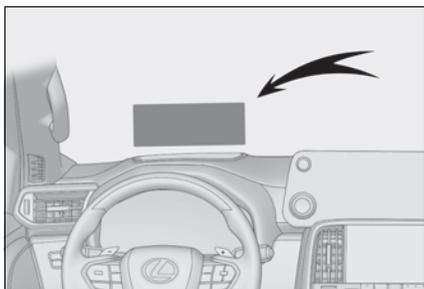

The meter display type setting of head-up display can be changed. The content displayed will differ according to the driving conditions and display mode of the head-up display. Depending on the situation, pop-up displays will also be displayed.


? Full

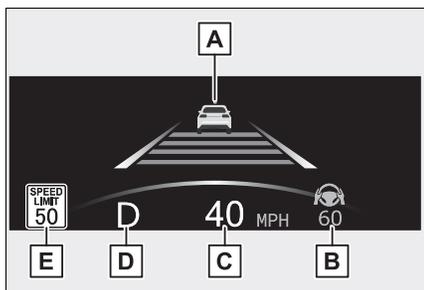

Illustrations used in this text are intended as examples, and may differ from the image that is actually displayed by the head-up display.

- A** Driving support system display area/  
Navigation system-linked display area/  
Tachometer display area
- B** Driving support system display area
- C** Speedometer
- D** Shift position/shift range/gear position  
(→P.23)
- E** RSA (Road Sign Assist) display (if  
equipped)


### ? Standard

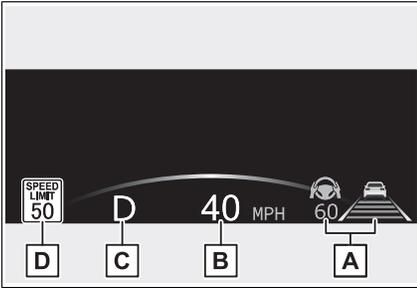

Illustrations used in this text are intended as examples, and may differ from the image that is actually displayed by the head-up display.

- A** Driving support system display area
- B** Speedometer
- C** Shift position/shift range/gear position (→P.23)
- D** RSA (Road Sign Assist) display (if equipped)

### ? Minimum

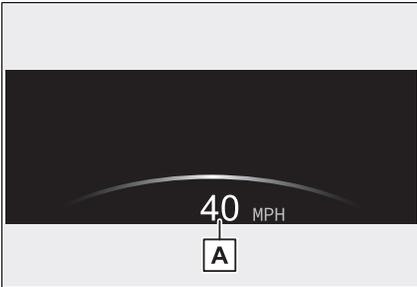

- A** Speedometer

## Using the head-up display

### ? Changing settings of the head-up display

- 1 Select  on the multimedia display.
- 2 Select "Vehicle customize".
- 3 Select "Head up display".

The following settings can be changed.

- ? Enabling/disabling the head-up display  
Select to enabling/disabling the head-up display.
- ? Head-up display type  
Select to change head-up display type. (→P.31)
- ? Brightness and vertical position of the head-up display  
Select to adjust the brightness or vertical position of the head-up display.
- ? Display angle  
Select to adjust the angle of the head-up display.


## Tachometer display area

Displays the engine speed in revolutions per minute.

The head-up display may seem dark or hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

## Displayed Content

### Components/Operations

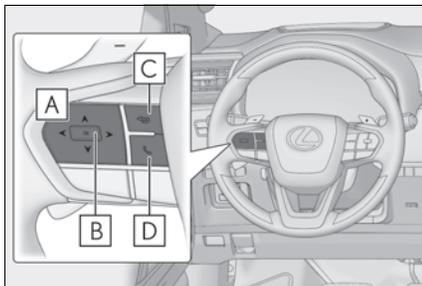

- A**  / : Change the screen and move the cursor
-  / : Change the displayed content and scroll up/down the screen
- B** Press: Enter/Set Press and hold: Reset/Display customizable items, display the cursor
- C** Return to the previous screen
- D** Call sending/receiving and history display

Linked with the hands-free system, sending or receiving call is displayed. For details regarding the hands-free system, refer to the "MULTIMEDIA OWNER'S MANUAL".

### Current fuel consumption/history screen

Fuel consumption information can be displayed on the multimedia display.

#### ? Displaying fuel consumption/history screen on the multimedia display

- 1** Select  on the main menu.
- 2** Select "Trip information".
- 3** Select "Current" or "History".


#### ? Current fuel consumption screen



- A** Resetting the history data
- B** Fuel consumption in the past 15 minutes
- C** Current fuel consumption
- D** Average vehicle speed since the hybrid system was started.
- E** Trip range
- F** Elapsed time since the hybrid system was started.

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.


### ? History fuel consumption screen

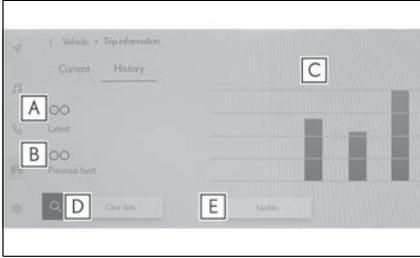

- A** Latest fuel consumption
- B** Best recorded fuel consumption
- C** Previous fuel consumption record
- D** Resetting the history data
- E** Updating the latest fuel consumption data

Use the displayed average fuel consumption as a reference. The image is an example only, and may vary slightly from actual conditions.

## Headlight Switch

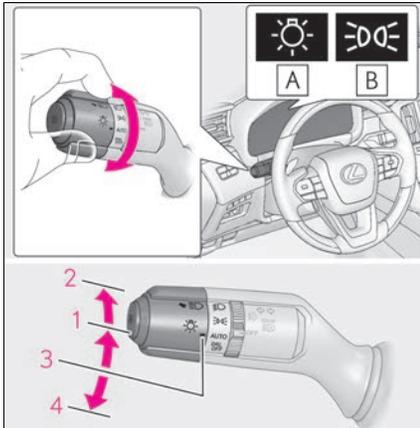


**A** For the U.S.A.

**B** For Canada

- 1** The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- 2** The headlights and all lights listed above (except daytime running lights) turn on.
- 3** **AUTO** The headlights, daytime running lights and all lights listed above turn on and off automatically.
- 4** **DRL**  
**OFF** (U.S.A.) Off

## Turning on the high beam headlights

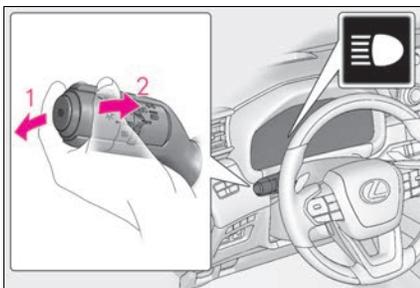


- 1** With the headlights on, push the lever forward to turn on the high beams. Pull the lever back to the center position to turn the high beams off.
- 2** Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.


## AHS (Adaptive High-beam System) (if equipped)

The Adaptive High-beam System uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically controls the light distribution of the headlights.

### Using the Adaptive High-beam System

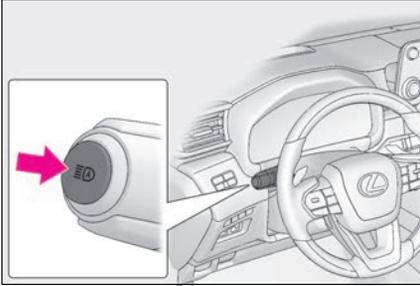

- 1 Press the Adaptive High-beam System switch.

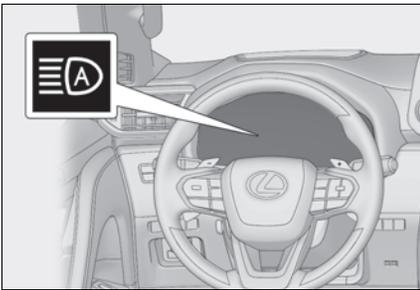


- 2 Turn the headlight switch to the **AUTO** or  position.

When the headlight switch lever is in the low beam position, the AHS will be enabled and the AHS indicator will illuminate.

## Turning the high beams on/off manually

### ? Changing to the high beams

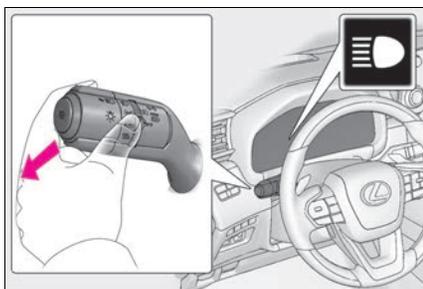


- 1 Push the lever forward.

The AHS indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to enable the Adaptive High-beam System again.

### ? Changing to the low beams

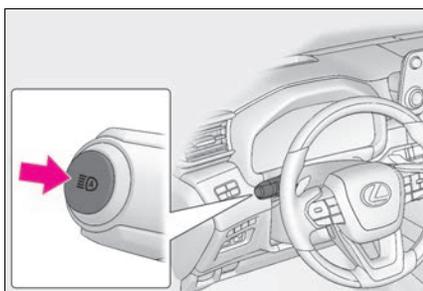


- 1 Press the Adaptive High-beam System switch.

The AHS indicator will turn off.

Press the switch to enable the Adaptive High-beam System again.

## Temporarily changing to the low beams

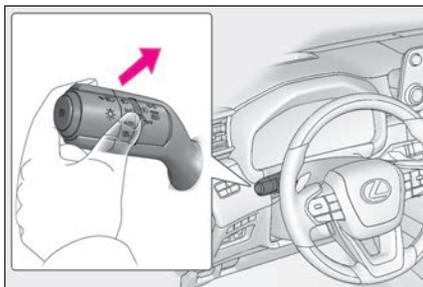


- 1 Pull the lever rearward and then return it to its original position.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. After this, the Adaptive High-beam System will operate.


## AHB (Automatic High Beam)

The Automatic High Beam uses a front camera located on the upper portion of the windshield to detect the brightness of the lights of vehicles ahead, streetlights, etc., and automatically changes the head lights between the high beams and low beams.

### Using the Automatic High Beam system

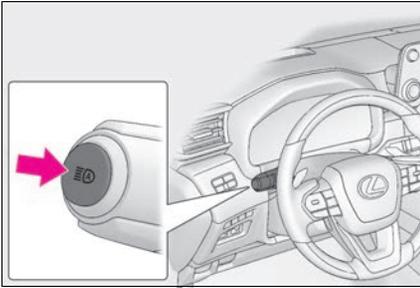

- 1 Press the Automatic High Beam switch.

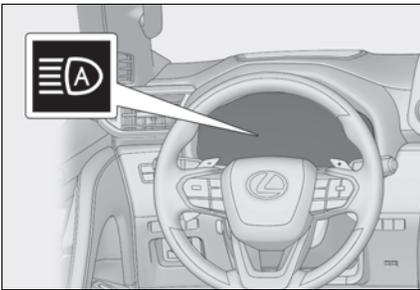


- 2 Turn the headlight switch to the AUTO or  position.

When the headlight switch lever is in the low beam position, the AHB system will be enabled and the AHB indicator will illuminate.

### Turning the high beams on/off manually

#### ? Changing to the high beams

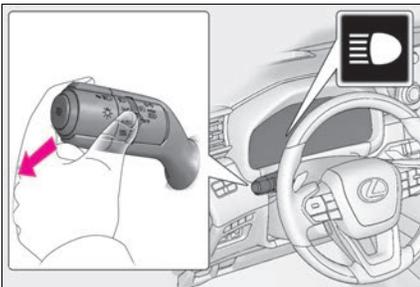


Push the lever forward.

The AHB indicator will turn off and the high beam indicator will turn on.

Pull the lever to its original position to enable the Automatic High Beam system again.

## ? Changing to the low beams

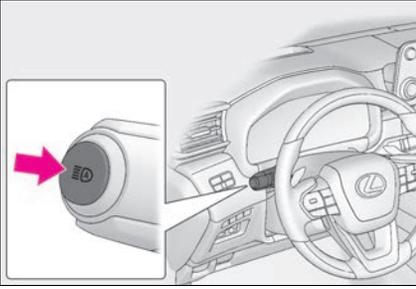


Press the Automatic High Beam switch.

The AHB indicator will turn off.

Press the switch to enable the Automatic High Beam system again.

## Temporarily changing to the low beams

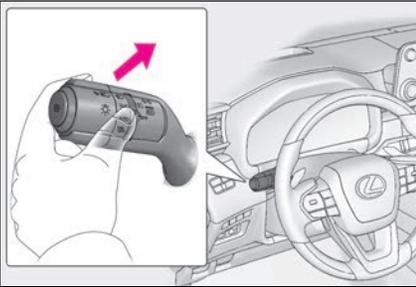


Pull the lever rearward and then return it to its original position.

The high beams will illuminate while the lever is pulled, however, after the lever is returned to its original position, the low beams will remain on for a certain amount of time. After this, the Automatic High Beam system will operate.

# Fog Light Switch

The fog lights offer improved visibility in difficult driving conditions, such as in rain and fog.

## Operating procedure

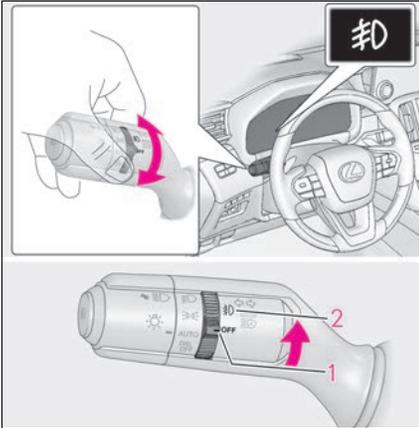





**1** OFF \*1 or ○ \*2 Off

**2** ☁ Fog lights on

\*1: For the U.S.A.

\*2: For Canada

## Windshield Wipers and Washer

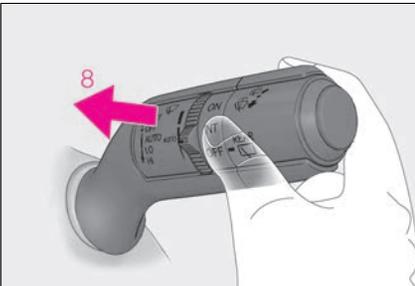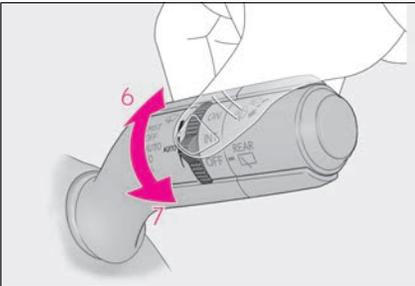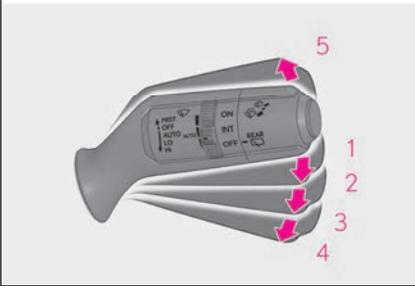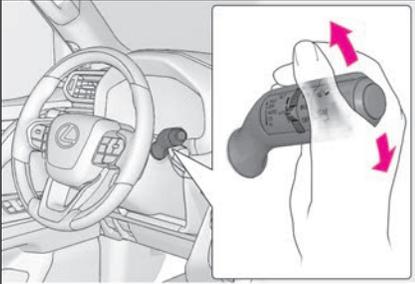

- 1 OFF** \*<sup>1</sup> or ○ \*<sup>2</sup> Off
- 2 AUTO** Rain-sensing operation
- 3 LO** \*<sup>1</sup> or ▼ \*<sup>2</sup> Low speed operation
- 4 HI** \*<sup>1</sup> or ▼▼ \*<sup>2</sup> High speed operation
- 5 MIST** \*<sup>1</sup> or ▲ \*<sup>2</sup> Temporary operation

\*<sup>1</sup>: For the U.S.A.

\*<sup>2</sup>: For Canada

When **AUTO** is selected, the sensor sensitivity can be adjusted by turning the switch ring.

- 6** Increases the sensitivity
- 7** Decreases the sensitivity




- 8**  Washer/wiper dual operation

Pulling the lever operates the wipers and washer.

After operating several times, the wipers operate one more time after a short delay to prevent dripping.

When the power switch is in ON and the headlights are on, if the lever is pulled, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## Rear Window Wiper and Washer

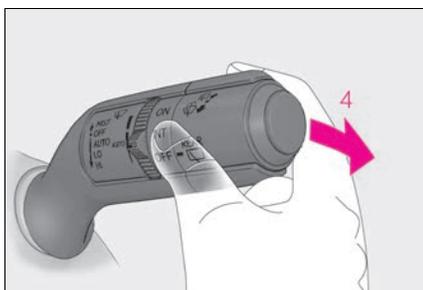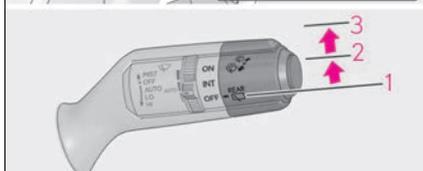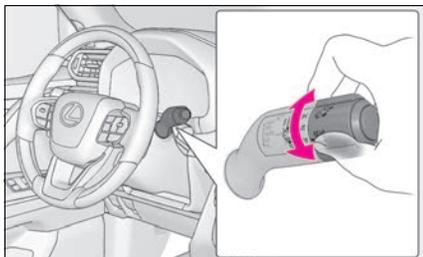

- 1 OFF** \*<sup>1</sup> or ○ \*<sup>2</sup> Off
- 2 INT** \*<sup>1</sup> or --- \*<sup>2</sup> Intermittent operation
- 3 ON** \*<sup>1</sup> or — \*<sup>2</sup> Normal operation

\*<sup>1</sup>: For the U.S.A.

\*<sup>2</sup>: For Canada

- 4**  Washer/wiper dual operation


Pushing the lever operates the wiper and washer.

The washer will automatically operate and clean the rear camera for the Multi-terrain Monitor.

## Driving Mode Select Switch

The driving modes can be selected to suit driving condition.

### System components

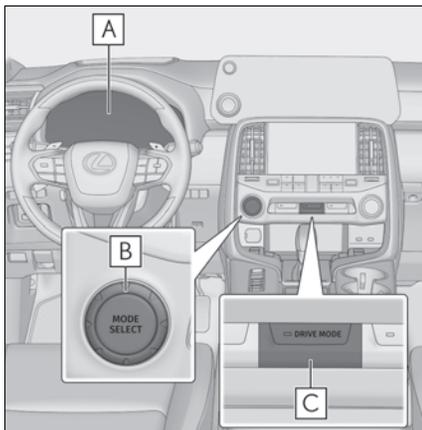


**A** Multi-information display (→P.30)

**B** MODE SELECT switch


**C** DRIVE MODE switch

### Selecting the driving mode

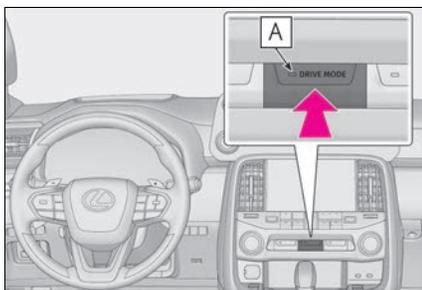

**1** Press the DRIVE MODE switch.  
The indicator **A** on the switch will turn on.

**2** Select the driving modes on the multi-information display while turning the MODE SELECT switch left and right.

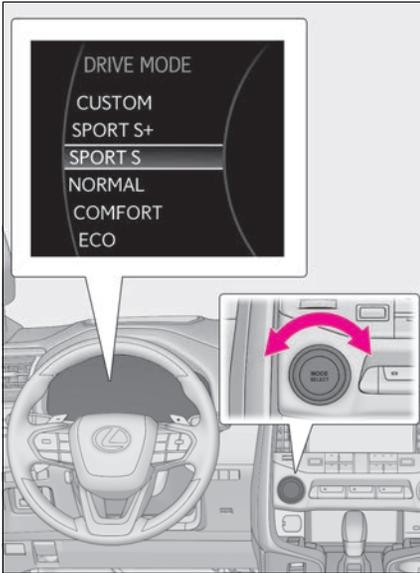

- Normal mode  
Provides an optimal balance of fuel economy, quietness, and dynamic performance. Suitable for city driving.
- Comfort mode  
By controlling the suspension, riding comfort is further enhanced. Suitable for city driving. The comfort mode indicator comes on.
- Eco drive mode  
Helps the driver accelerate in an eco-friendly manner and improve fuel economy through moderate throttle characteristics and by controlling the operation of the air conditioning system (heating/cooling). The Eco drive mode indicator comes on.

- SPORT S mode

Assists acceleration response by controlling the transmission. This mode is suitable for when powerful acceleration is desired. The SPORT S mode indicator comes on.

- SPORT S+ mode

Helps to ensure the controllability and stability of the vehicle by integrally controlling the steering wheel and suspensions as well as the transmission and hybrid system, making it suitable for sporty driving. The SPORT S+ mode indicator comes on.

- Custom mode

Allows you to drive with the power train, steering wheel, suspensions and air conditioning system functions set to your preferred settings. Custom mode settings can only be changed on the drive mode customization display of multimedia display.


The custom mode indicator comes on.

## AHC (Active Height Control Suspension)

The vehicle height modes can be selected to suit driving condition.

### System components


#### ? Height select switches

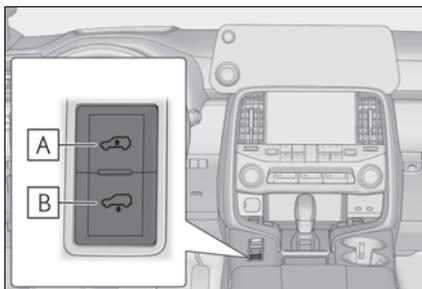

**A** Higher

**B** Lower


#### ? Meter display

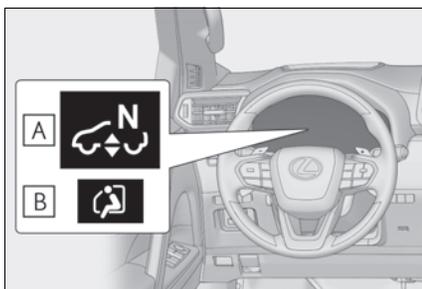

**A** AHC display

**B** Easy access mode indicator

#### ? Front Multi Operation Panel

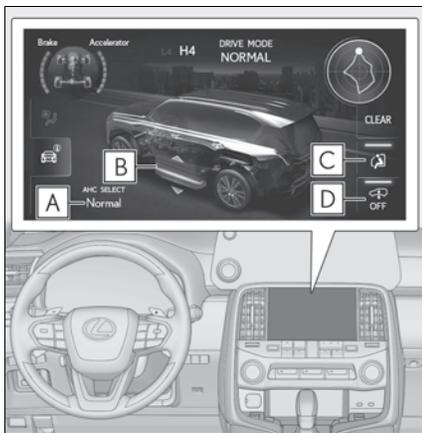

**A** Vehicle height mode

**B** AHC display

**C** Easy access mode switch


**D** Height control OFF switch

## Easy access mode

You can select this mode for easy access and easy loading of the vehicle.

To turn easy access mode on, turn the four-wheel drive control switch to H4 and press the easy access mode switch on the Front Multi Operation Panel.

When the easy access mode is in on, the indicator **A** on the switch and the easy access mode indicator on the meter comes on.

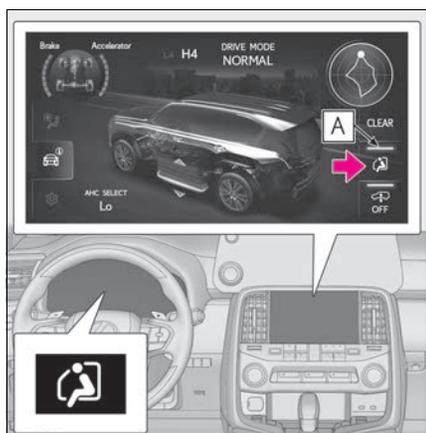

If the power switch is turned off within approximately 30 seconds after the vehicle is stopped while easy access mode is on, the vehicle height is lowered automatically.


When the vehicle begins to lower, a buzzer will sound twice. The easy access mode indicator display will come on while the vehicle is lowering to indicate that the vehicle is lowering.

When the operation is complete, the easy access mode indicator will turn off.

## Four-wheel Drive System

Use the four-wheel drive control switch and center differential lock switch to select the following transfer and center differential modes.

### Four-wheel drive control switch

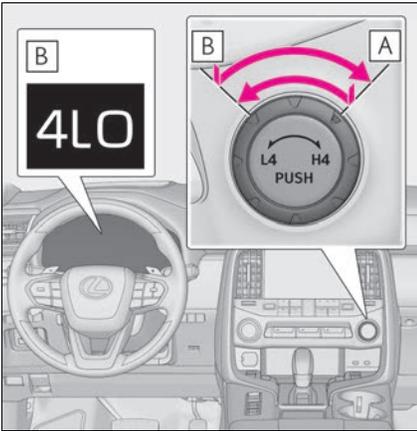

- A** H4 (high speed position)


Normal driving on all types of roads.

- B** L4 (low speed position)

Driving requiring maximum power and traction such as climbing or descending steep hills, off-road driving, and hard pulling in sand or mud, etc.

The low speed four-wheel drive indicator will come on.

### Center differential lock switch

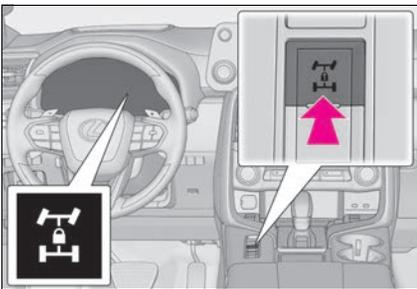

Lock the center differential when your vehicle's wheels get stuck in a ditch or when driving on a slippery or bumpy surface.

Press the switch to turn the system on/off.

The center differential lock indicator will come on.


To unlock the center differential, push the switch again.

Unlock the center differential after the wheels have been freed, or after moving to a flat, non-slippery surface.

## Crawl Control (with Turn Assist function)

Allows travel on extremely rough off-road surfaces at a fixed low speed without pressing the accelerator or brake pedal. Minimizes loss of traction or vehicle slip when driving on slippery road surfaces, allowing for stable driving.


### System components

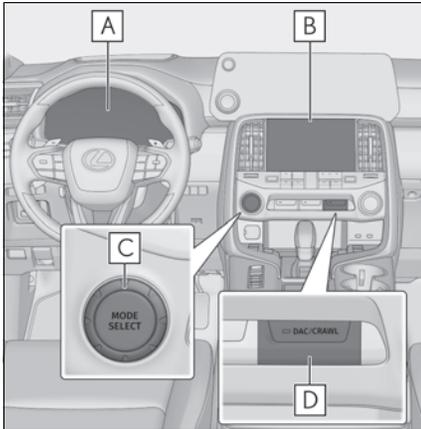

- A** Meter (→P.30)
- B** Front Multi Operation Panel
- C** MODE SELECT switch
- D** DAC/CRAWL switch

## Selectable modes

A mode which matches the road conditions can be selected from among the following 5 modes.

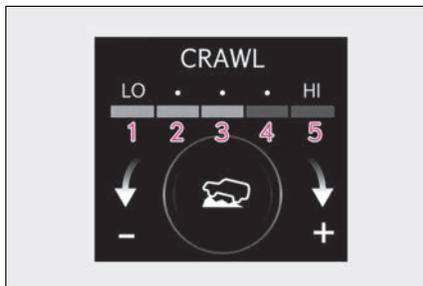

- 1** Lo  
Suitable for driving on rocky roads or decline
- 2** Lo-Mid  
Suitable for driving on rocky roads, decline or bumpy incline
- 3** Mid  
Suitable for driving on bumpy inclines

- 4** Mid-Hi

Suitable for driving on bumpy inclines, debris roads, snow-covered roads, muddy roads, gravel roads and grass roads


- 5** Hi

Suitable for driving on bumpy inclines, debris roads, snow-covered roads, muddy roads, gravel roads and grass roads

## Turn Assist function

This function assists cornering performance in accordance with steering operation when driving through a tight corner. It maintains vehicle speed while driving and implements control that improves turning performance according to the driver's steering wheel operation, to reduce the number of turns.

- 1** While Crawl Control is operating, press the  on Front Multi Operation Panel to display the off-road driving information display screen.

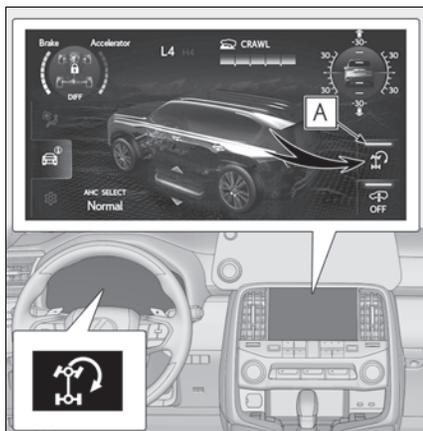

- 2** Press the Turn Assist switch

The indicator light **A** and Turn Assist indicator on the meter will come on.

To turn the system off, press the switch again.

## Multi-terrain Select


Multi-terrain Select is a system that improves drivability in off-road situations.

Select a mode that most closely matches the type of terrain on which you are driving from several modes.

Brake control, drive force control and suspension control can be optimized in accordance with the selected mode.

When AUTO mode is selected, brake control, drive force control and suspension control are optimized automatically according to the road conditions.

### System components

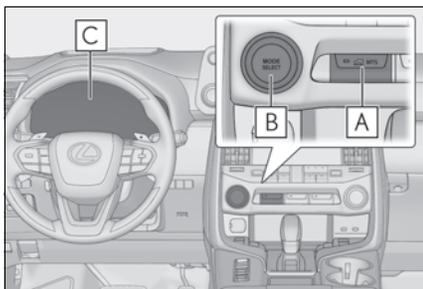


**A** MTS switch

**B** MODE SELECT switch

**C** Multi-information display


Selected mode is displayed.

### Switching modes

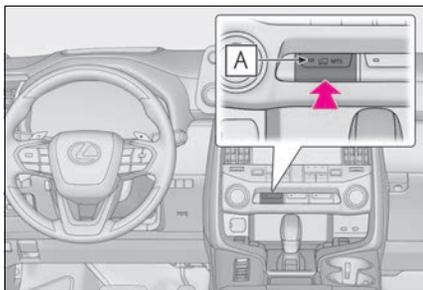

**1** Press the MTS switch.

The indicator **A** on the switch will turn on.

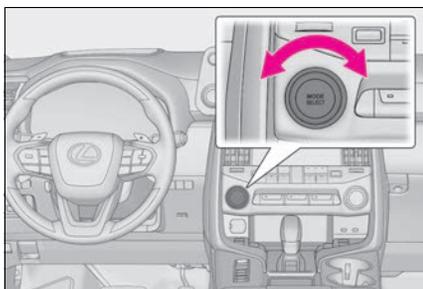

**2** Select the driving modes on the multi-information display while turning the MODE SELECT switch left and right.

Depending on the positions of the four-wheel drive control switch, a mode can be selected from among the following modes.

► **Four-wheel drive control switch is in L4**

Mode		Road Conditions
	AUTO	Suitable for the road conditions
	SAND	Suitable for sandy roads
	MUD	Suitable for muddy roads
	ROCK	Suitable for rocky terrain

If the brake control has activated, the slip indicator light will flash.

► **Four-wheel drive control switch is in H4**


Mode		Road Conditions
	AUTO	Suitable for the road conditions
	DIRT	Suitable for dirt roads
	SAND	Suitable for sandy roads
	MUD	Suitable for muddy roads
	DEEP SNOW	Suitable for deep snow roads

If the brake control has activated, the slip indicator light will flash.

When the vehicle is in SAND, MUD or DEEP SNOW mode, VSC is automatically turned off. (VSC OFF indicator light come on.)

## Multi-terrain Monitor

The Multi-terrain Monitor helps the driver to check the vehicle surroundings. It assists in determining the conditions around the driver in a variety of situations, such as when judging conditions during off-road driving or checking for obstacles when parking.

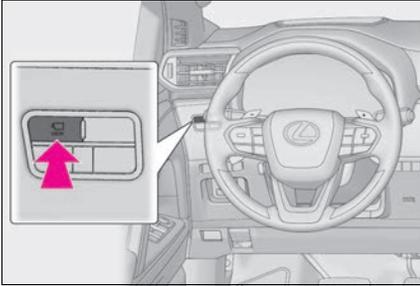

The camera switch is located as shown in the illustration.

# Basic Operation of Multimedia System

## Map scrolling operation

The map can be moved and a touched point can be set as the center of the map screen.

### ? Flick/drag operation



The map screen can be moved by touching, dragging or flicking it.


Touch [Recenter] to return to the center of the map to the current position.

### ? Touch and hold operation

If a desired point on the map screen is touched and held, the full route map screen to the selected point will be displayed.



1 Touch and hold the desired point.

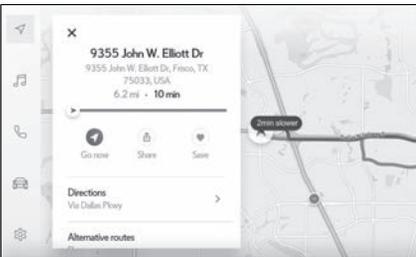

2 Full route map screen will be displayed for the selected point.

## Navigation (if equipped)


The navigation system indicates your present position and assists in locating a desired destination.

### Destination search screen

#### ? Searching for a destination using the keyboard

A destination can be searched for by entering keywords.

**1** Touch [  ] or [  ] on the map screen.

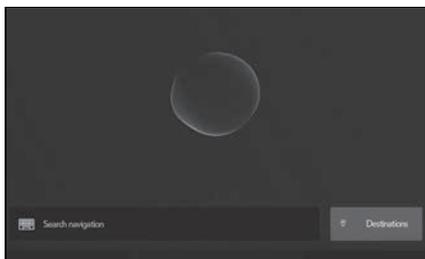

**2** Touch [Search navigation].



**3** Enter characters using the keyboard.

**4** Touch [Go].

**5** Touch the desired item from the list.

## ? Searching for a destination by category


A destination can be searched for from a list of categories.

1 Touch [📍] or [🔍] on the map screen.



2 Touch [Destinations].

3 Select [Navigation].

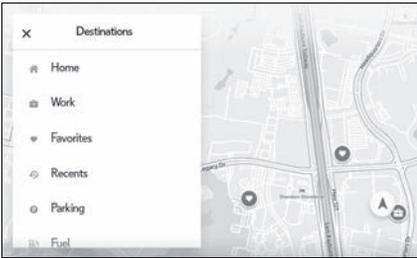

4 Touch the desired search method.

[Home]: Touch to set the registered home as the destination. A point must be registered as home before using this function.\*

[Work]: Touch to set the registered workplace as the destination. A point must be registered as a workplace before using this function.\*

[Favorites]: Touch to set a registered favorite as the destination. A point must be registered as a favorite before using this function.

[Recents]: Touch to set a destination from the destination history as the destination.

[Send to car]: Send to car enables customer to send a destination or POI to the vehicle from Lexus app.

[Parking]: Touch to search for a nearby parking lot to set as a destination.

[Fuel / Charging]: Touch to search for a fuel station/charging facility to set as a destination.

[Food]: Touch to search for a restaurant to set as a destination.

[Hospitals]: Touch to search for a hospital to set as a destination.

When setting a business as a destination, if your estimated time of arrival is outside of business hours or near closing time, a notification asking to confirm the destination will be displayed.

\*: Home and Work must be added via Lexus app.

5 Touch the desired destination from the list.


► **Editing the favorites list**

The favorites list can be edited.

1 Touch [📍] or [🔍] on the map screen.

2 Touch [Destinations].

3 Touch [Favorites].

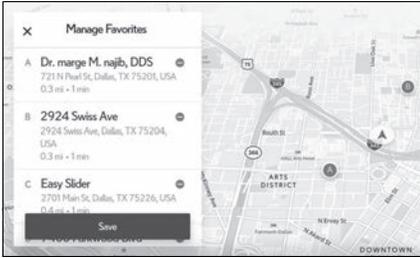

4 Touch [✎].

Touch [⊖] to delete a favorite.

The favorites list editing screen will be displayed.

5 Touch [Save].


► **Editing the destination history**

The destination history can be edited.

1 Touch [📍] or [🔍] on the map screen.

2 Touch [Destinations].

3 Touch [Recents].

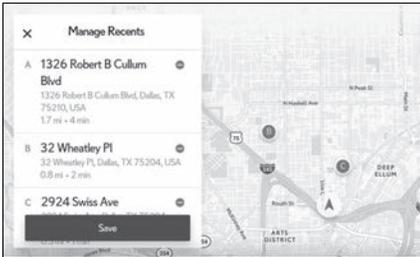

4 Touch [✎].


The destination history editing screen will be displayed.

Touch [⊖] to delete a destination history item.

5 Touch [Save].

## ? Searching for a destination using voice control

**1** Touch [  ] or [  ] on the map screen.

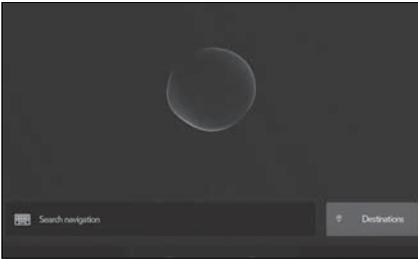

**2** Say the keyword you wish to use for the search.

**3** Touch the desired item from the list.

## Connecting a Smartphone or Communication Device

### Registering a Bluetooth® device from the multimedia system

A cellular phone or portable device must be registered in order to use hands-free calling or Bluetooth® audio. Once registration is complete, Bluetooth® will automatically be connected each time the multimedia system is started.

When Apple CarPlay/Android Auto is connected, the device will be automatically registered.


If no Bluetooth® device is connected, the registration screen can also be displayed by pressing and holding the [  ] switch on the steering wheel.

- 1 Touch [  ] from the main menu.
- 2 Touch [Bluetooth & Devices] on the sub menu.

If no device is registered, proceed to Procedure 4.

- 3 Touch [Add another device].

While a device is connected to the multimedia system, the confirmation screen for disconnecting the device may be displayed. Disconnect the device to perform registration.

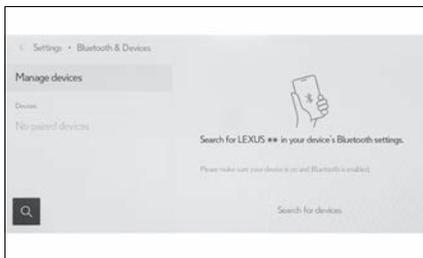

- 4 Touch [Search for devices].

- 5 Touch the device to register from the main area.

? The Bluetooth® address may be displayed instead of the device name.

? Certain models of Bluetooth® devices may not be displayed in the device list, unless a certain screen is displayed on the Bluetooth® device. Refer to the Bluetooth® device's instruction manual for details.

- 6 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth® device, and then touch [OK].
- ? Some Bluetooth® devices may need to be operated to complete registration.
- ? When an HFP supported Bluetooth® device is registered, that device is automatically set as the primary device if the driver does not have a primary device set.
- ? The Apple CarPlay or Android Auto settings may be displayed. The Apple CarPlay or Android Auto screen will be displayed if the use of either is enabled.
- ? A message indicating that connection is complete is displayed, and the name of the registered Bluetooth® device is displayed in the sub menu.
- ? If an operation failed screen is displayed, follow the operation instructions on the screen.

? **Registering from a Bluetooth® device**

If the Bluetooth® device cannot be found by searching with the multimedia system, register by searching for the multimedia system from the Bluetooth® device.

- 1 Touch [  ] from the main menu.
  - 2 Touch [Bluetooth & Devices] on the sub menu.
- If no device is registered, proceed to Procedure 4.
- 3 Touch [Add another device].

While a device is connected to the multimedia system, the confirmation screen for disconnecting the device may be displayed. Disconnect the device to perform registration.




- 4 Register the multimedia system from the Bluetooth® device to be used.
- ? Perform the operation according to the operating procedure of the Bluetooth® device.
- ? Be sure to display this Bluetooth® connection screen before performing registration on the Bluetooth® device.

- 5 Check that the displayed PIN code matches the PIN code displayed on the Bluetooth® device, and then touch [OK].
- ? Some Bluetooth® devices may need to be operated to complete registration.
- ? When an HFP supported Bluetooth® device is registered, that device is automatically set as the primary device if the driver does not have a primary device set.
- ? The Apple CarPlay or Android Auto settings may be displayed. The Apple CarPlay or Android Auto screen will be displayed if the use of either is enabled.
- ? A message indicating that connection is complete is displayed, and the name of the registered Bluetooth® device is displayed in the sub menu.
- ? If an operation failed screen is displayed, follow the operation instructions on the screen.

? **Operating with the steering switches**

Some hands-free call functions can be operated from the steering switches, such as receiving or making calls. The steering switch functions change depending on the status of the multimedia system.

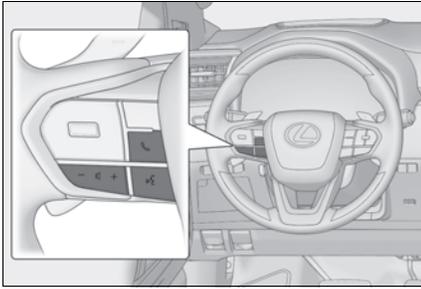

? Operate the switches as necessary.

[+] switch

Increases the ringtone volume or receiver volume.

Press and hold to adjust continuously.

[-] switch

Decreases the ringtone volume or receiver volume.

Press and hold to adjust continuously.

[] switch

Calls can be made using Intelligent Assistant.

To end voice command, press and hold the talk switch.


[] switch

- ? While a call cannot be made, displays call history screen or phone menu.
- ? Phone calls can be made when [] is displayed on the phone screen.
- ? While making a call or during a call, ends the call.
- ? While receiving a call or during call waiting, answers the call.

## Making calls from call history

Calls can be made to phone numbers that have been recorded in the call history as outgoing or incoming calls.

- 1 Touch [  ] from the main menu.
- 2 Touch [Recents] on the sub menu.

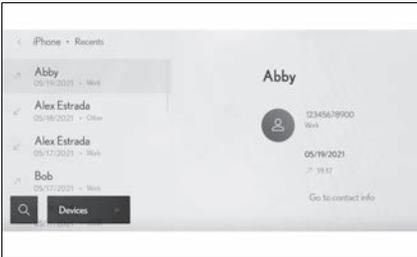

- 3 Select the contact.


For phone numbers that are not registered in the phonebook, the phone number will be displayed.

- 4 Touch the desired phone number.

## Making calls from the favorites list

Make a call from your favorites list.

- 1 Touch [  ] from the main menu.
- 2 Touch [Favorites] on the sub menu.

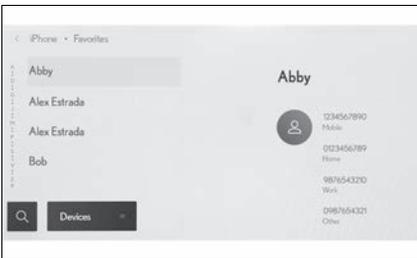

- 3 Select the person you want to call from your favorites list.

- 4 Touch the desired phone number.

## Making calls from contacts


Make a call from the contacts registered on the multimedia system.

- 1 Touch [  ] from the main menu.
- 2 Touch [Contacts] on the sub menu.
- 3 Select a contact.
- 4 Touch the desired phone number.



## Answering calls

When there is an incoming call, the incoming call sounds and the incoming call screen or incoming call notification is displayed.

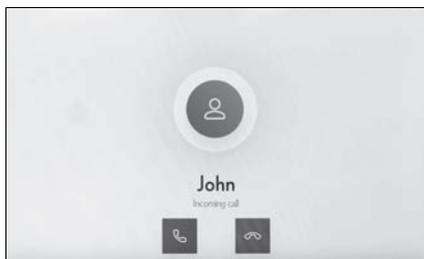

? Answer the call by doing one of the following.

- Touch [  ].
- Press the [  ] switch on the steering wheel.

## Making calls from the message function

Hands-free calls can be made using the message function.

? Touch the blue number to make a call.

Consecutive numbers may be recognized as phone numbers. In addition, some phone numbers, such as phone numbers from other countries, may not be recognized.

# Basic Operation of Audio System

## Changing the audio source

Source can be changed to radio, USB, etc.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].



- 3 Touch the source you wish to select.

## Listening to the radio

Switch to your preferred frequency or service and listen to the radio.

- 1 Touch [  ] from the main menu.
- 2 Touch [Sources].
- 3 Touch [Radio].
- 4 Select the station selection method or service as necessary.

[Favorites]: Select a broadcasting station from those registered as favorites.

[Tune]: Select the broadcasting station by entering a frequency with the numeric keypad.

[FM Radio]: Switches to FM mode. The FM station list, the 3 most recently listened stations, and the receivable FM broadcasting stations are displayed.

[AM Radio]: Switches to AM mode. The AM station list, the 3 most recently listened stations, and the receivable AM broadcasting stations are displayed.


[SiriusXM]\*: Switches to SiriusXM Radio mode. Displays [For You] and contents/Super Categories/[All channels]/[Listening History].

\*: This function is not available in some regions.

- 5 Select the broadcasting station from the station list or genre.

6 Operate the radio that is being received as necessary.

? Operating AM/FM from the screen

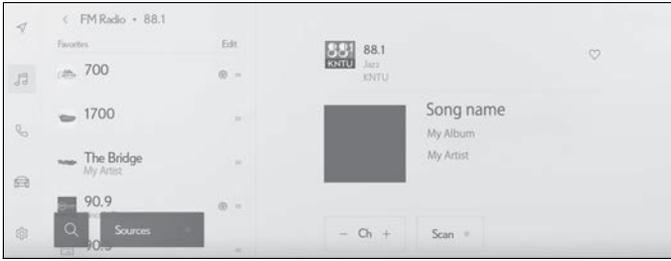

[Ch]: Touch [ - ] or [ + ] to search for the receivable broadcasting stations.

Touch and hold to jump to the next frequency with available radio signal. When released, the broadcasting station closest to that position with the best reception sensitivity is selected automatically.

[Scan]: SEEK UP and output the audio of the detected station for 10 sec. This is repeated.


[ HD 12 ]: Displayed when Multicast CH is supported in FM mode. Touch to display the SPS channel list. The mode can be changed to the displayed SPS channel list.

[ ♥ ]: Registers the currently received broadcasting station in favorites. When registered, touch to cancel.

Preset buttons of sub menu: Receives the selected broadcasting station.

? Operating SiriusXM Radio from the screen\*

\*: This function is not available in some regions.

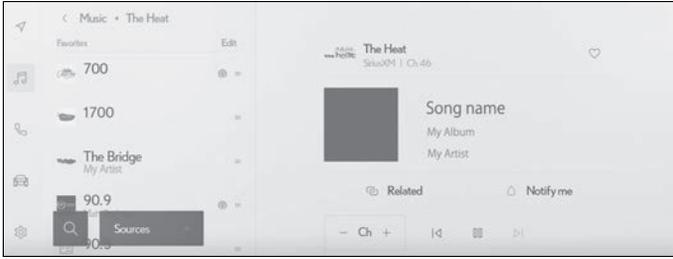

[Ch]: Touch [ - ] or [ + ] to search for the receivable channels. Touch and hold to jump to the next frequency with available radio signal. When released, the current channel is received.

[ <| ]/[ >| ]: Fast rewind or fast forward the radio cache. Touch and hold to jump to the start or end of the buffer.

[ || ]: Pause the radio cache.

[ ▶ ]: Play the radio cache.

[Related]: Displays content related to the received channel.


[Notify me]: Select an artist or song, or both an artist and song, to receive a notification when the corresponding broadcast starts. (When receiving a regular channel) Select a sports team to receive a notification when the corresponding broadcast starts. (When receiving a sport channel)

[ ♥ ]: Registers the currently received channel in favorites. When registered, touch to cancel.

Preset buttons of sub menu: Receive the registered channels.

? Operating with the steering switches

[<]/[>] switches

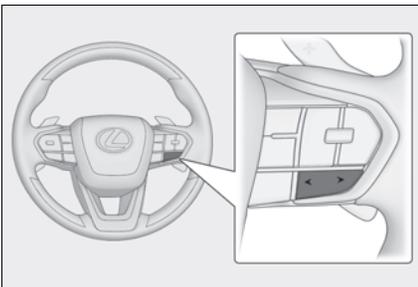

• AM/FM Radio

Switch the frequencies or broadcasting stations registered in the preset buttons order.

Press and hold to switch frequencies. When released, the broadcasting station closest to that position with the best radio reception is selected automatically.

• SiriusXM Radio

Switch the channels registered in the preset buttons order.


Press and hold to switch channels. When released, the channel closest to that position with the best radio reception is selected automatically.

## Playing iPod/iPhone

Play back music files on an iPod/iPhone connected to the USB Type-C port. When an iPod/iPhone is connected, a button with the device's name is displayed on the source selection screen. This may not be displayed for some devices.

Connect an iPod or iPhone.

- 1 Touch [  ] from the main menu.
  - 2 Touch [Sources].
  - 3 Touch the device name or [USB].
  - 4 Operate the iPod or iPhone that is playing as necessary.
- ? Perform operations from the screen

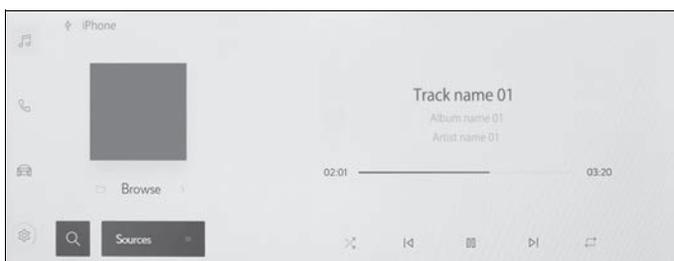

[  ]: Performs shuffle playback. Each touch switches the shuffle setting.\*

[  ]: Plays the currently playing track from the beginning. When at the start of the track, the previous track will play from the beginning.

Touch and hold to fast rewind. Release to start playback from that position.

[  ]: Pauses playback.

[  ]: Plays.

[  ]: Switches the tracks. Touch and hold to fast forward. Release to start playback from that position.


[  ]: Performs repeat playback. Each touch switches the repeat setting.

[Browse]: Displays the playback mode in the sub menu. Tracks can be selected from a list sorted by artist, album, song, playlist, genre, Podcast, composer, audiobook, or radio.

[Shuffle play] is displayed when playing a track selected from the list. Touch this to return to the playback screen and perform shuffle playback.

\*: The order in which shuffle or repeat settings switch depends on the connected device.

? Operating with the steering switches  
[<]/[>] switches

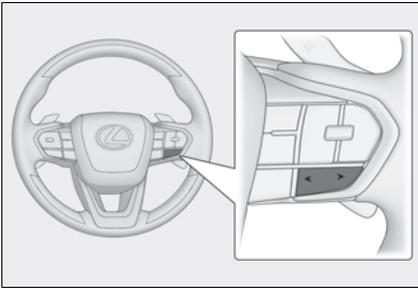


Switch the tracks.

Press and hold to fast forward or fast  
rewind. Release to start playback from that  
position.

## Lexus Climate Concierge

The seat heaters, seat ventilators (if equipped) and heated steering wheel (if equipped) are each automatically controlled according to the set temperature of the air conditioning system, the outside and cabin temperature, etc. Lexus Climate Concierge allows a comfortable condition to be maintained without adjusting each system.

### Turning on Lexus Climate Concierge

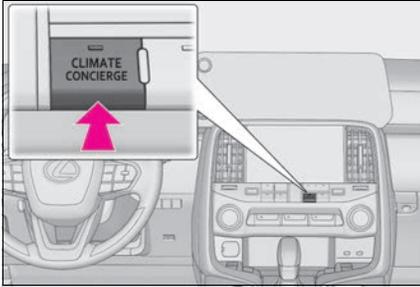

Press the "CLIMATE CONCIERGE" switch

The indicator above the switch illuminates, and the automatic air conditioning system, seat heaters and ventilators, and heated steering wheel operate in automatic mode.

If any of the system is operated manually, the indicator turns off. However, all other functions continue to operate in automatic mode.


## Front Automatic Air Conditioning System

Air outlets and fan speed are automatically adjusted according to the temperature setting.

The air conditioning system can be operated using the air conditioning control panel and air conditioning control screen on the Front Multi Operation Panel.


### Air conditioning controls

#### ► Air conditioning control panel

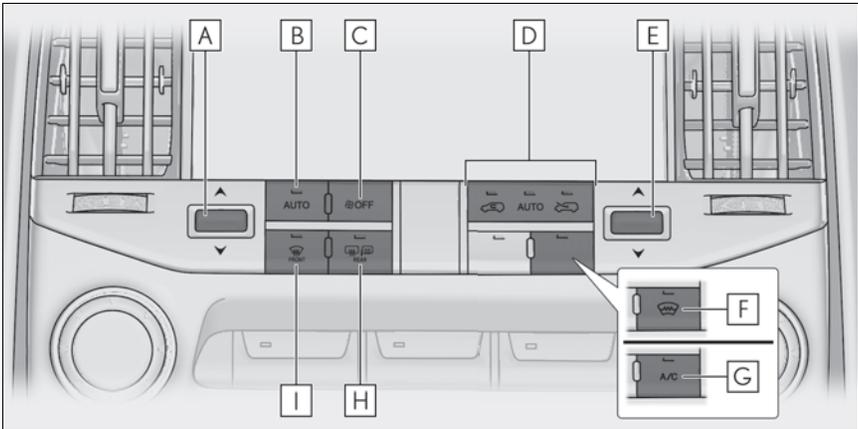

- A** Left-hand side temperature control switches
- B** Automatic mode switch
- C** "OFF" switch
- D** Outside/recirculated air mode switch
- E** Right-hand side temperature control switches
- F** Windshield de-icer switch (if equipped)
- G** "A/C" switch (if equipped)
- H** Rear window and outside rear view mirror defoggers switch
- I** Windshield defogger switch

## ► Front Multi Operation Panel

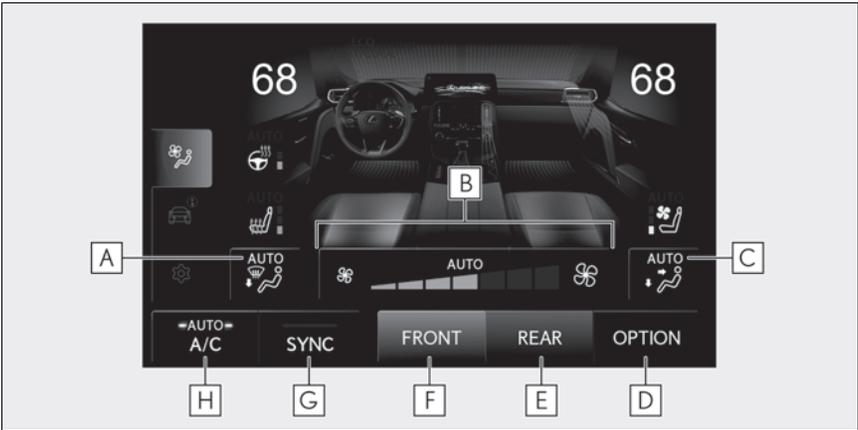


- A** Left-hand side airflow mode control switch
- B** Fan speed control switches
- C** Right-hand side airflow mode control switch
- D** "OPTION" switch
- E** "REAR" switch (→P.73)
- F** "FRONT" switch
- G** "SYNC" switch
- H** "A/C" switch

### ? Option control screen

Select the "OPTION" switch to display the option control screen.

The functions can be switched  (ON) and  (OFF).

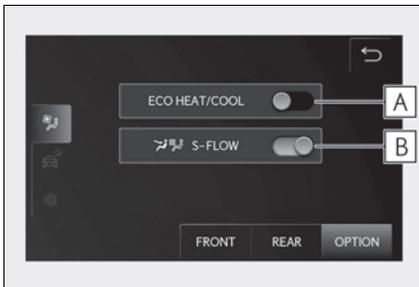

- A** Eco air conditioning mode
- B** Front seat concentrated airflow mode (S-FLOW)

## Using automatic mode


- 1** Press the automatic mode switch on the air conditioning control panel.
- 2** Press the outside/recirculated air mode switch to switch to automatic mode.
- 3** Adjust the temperature setting.
- 4** To stop the operation, press the "OFF" switch on the air conditioning control panel.

## Rear Automatic Air Conditioning System

Air outlets and fan speed are automatically adjusted according to the temperature setting.


### Rear air conditioning controls

#### ► Air conditioning control panel (5-passenger and 7-passenger models)

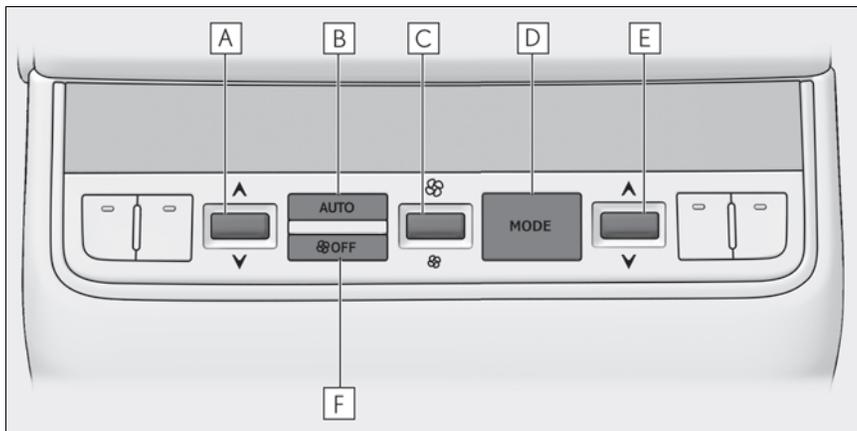


- A** Left-hand side temperature control switch
- B** Automatic mode switch
- C** Fan speed control switch
- D** Airflow mode control switch
- E** Right-hand side temperature control switch
- F** "OFF" switch

► Rear Multi Operation Panel (4-passenger models)

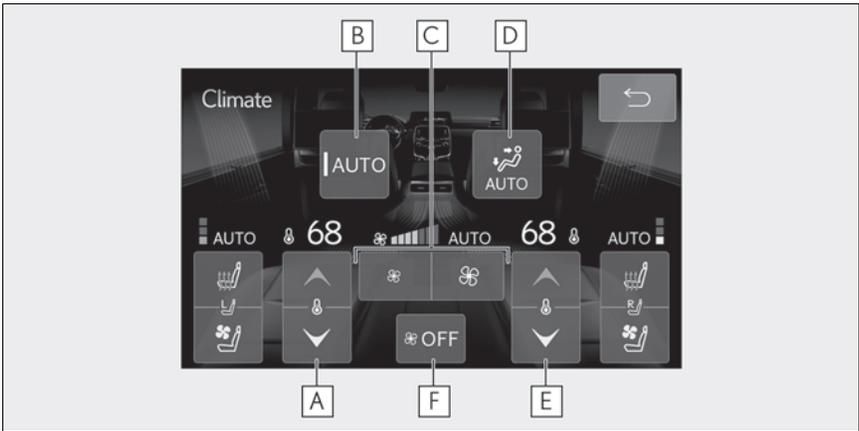

- A** Left-hand side temperature control switch
- B** Automatic mode switch
- C** Fan speed control switches
- D** Airflow mode control switch
- E** Right-hand side temperature control switch
- F** "OFF" switch

## ► Front Multi Operation Panel

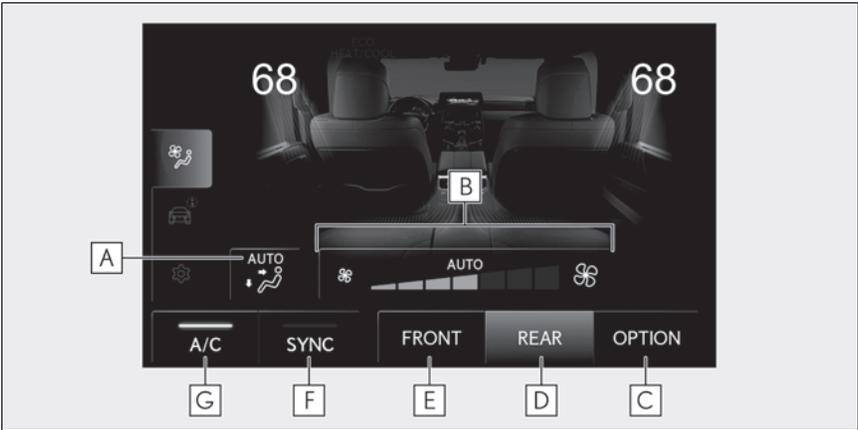


- A** Airflow mode control switch
- B** Fan speed control switches
- C** "OPTION" switch (→P.71)
- D** "REAR" switch
- E** "FRONT" switch (→P.70)
- F** "SYNC" switch
- G** "A/C" switch

## Starting Voice Control


Voice control can be started by any of the following operations:

### ? Press the talk switch

- 1 Press the  switch (talk switch) on the steering wheel.

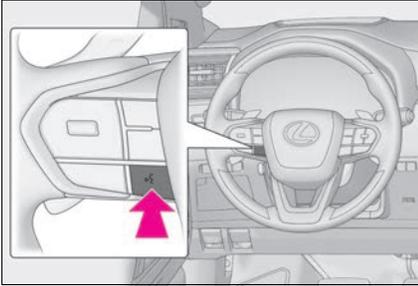

### ? Say the wake word

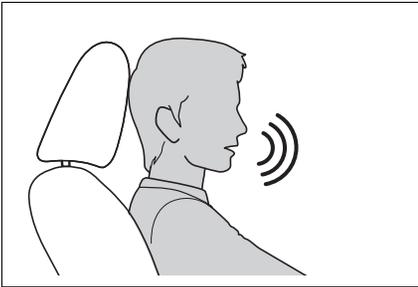

- 1 Say "Hey Lexus".

- ? The wake word can be turned on or off.
- ? The wake word can be used and then immediately issue a voice command.

Example: "Hey Lexus" "Take me to an Italian restaurant."

### ? Touch the microphone button



- 1 Touch  or  on the screen.

## Function list

The following tables list frequently used commands for each function category.

? The functions available may vary according to the system installed.

? Items with "Subscription" will require Intelligent Assistant functionality.

### ? Common

Action	Example voice command	Subscription
Shows list of general commands	"Help"	No
Stops the current conversation and re-starts at the beginning	"Start over"	No
Cancels the Intelligent Assistant system	"Cancel"	No

### ? Navigation

Intelligent Assistant system enables navigation voice search. This allows you with variety of features such as searching a point of interest (POI), navigate to an address as well as discovering new POIs.

Function	Example voice command	Subscription
Destination search	"Take me to <location category/business name>" "Take me to an Italian restaurant" "Take me to <address>" "Take me to 6565 Headquarters drive Plano TX" "Take me home" "Take me to work"	Yes
Map control	"Zoom in" "Zoom out"	Yes
Route information	"Cancel trip"	Yes
Telematics	"Call Destination Assist"	No

### ? **Multimedia control**

Allows you to engage in a dialog with the Intelligent Assistant to complete various multimedia tasks via voice input.

Function	Example voice command	Subscription
Radio	"Tune to 99.5 FM" "Tune to Rock on FM" "Tune to channel 2 on SiriusXM"	No
Media	"Mute audio" "Next" "Previous"	No
Media Streaming	"Play <artist/album/song/genre/playlist>" "Play Frank Sinatra"	Yes

### ? **Hands-free phone operation**

Allows you to engage in a dialog with the Intelligent Assistant to complete various tasks via voice input, such as making a phone call to a contact, or calling destination assist.

Function	Example voice command	Subscription
Phone call	"Call John Smith" "Dial 0123456789" "Call back" "Redial"	No
Message	"Send message to John Smith" "Read message"	No

### ? **Screen display switching**

Allows you to easily change to various function screen by voice.

Function	Example voice command	Subscription
Navigation	"Show map"	Yes
Phone	"Show recent calls"	No
Multimedia	"Show the FM station list"	No
Settings	"Show display settings"	No

### ? **Vehicle device control**

Allows you to easily change a vehicle setting or activate a function by voice.

Function	Example voice command	Subscription
Climate	"Turn on the air conditioner" "Set the temperature to 70 degrees" "Turn the fan speed up"	No

### ? **Notifications**


Offers notifications based on user preferences, vehicle geolocation and learned behavior. Each service can be set to On/Off from the Lexus app.

Function	Detail	Subscription
POI suggestion (Navigation)	<ul style="list-style-type: none"><li>• A POI shared through a smartphone app</li><li>• Parking suggestions near destination</li></ul>	Yes
Low fuel (Navigation)	Automatically notifies user of low fuel level. If applicable, provides POI list nearby (ahead) or along route and allows user to select and navigate by touch.	Yes

## Connecting to the USB Type-C Port

Connect a device such as smartphone or portable player.

? Connect the USB Type-C cable to the port.

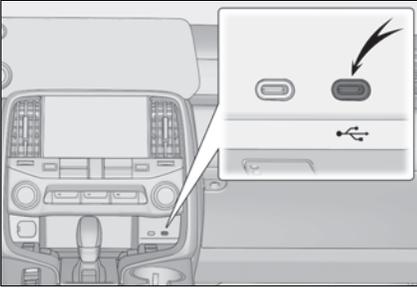

When connecting a USB flash drive, connect it directly to the USB Type-C port.

## Garage Door Opener

The garage door opener can be programmed using the HomeLink<sup>®</sup> to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

### ? HomeLink<sup>®</sup> programming procedure

The programming procedures can also be found at the following URL.

Website: [www.homelink.com/lexus](http://www.homelink.com/lexus)



The word “QR Code” is registered trademark of DENSO WAVE INCORPORATED in Japan and other countries.


For support, contact customer support at the following.

Help Line: 1-800-355-3515

## System components


The HomeLink<sup>®</sup> wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

### ► Vehicles with inside rear view mirror

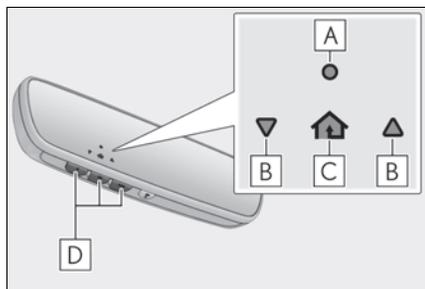

- A** HomeLink<sup>®</sup> indicator light
- B** Garage door operation indicators
- C** HomeLink<sup>®</sup> icon  
Illuminates while HomeLink<sup>®</sup> is operating.
- D** Buttons

## ► Vehicles with Digital Rear-view Mirror

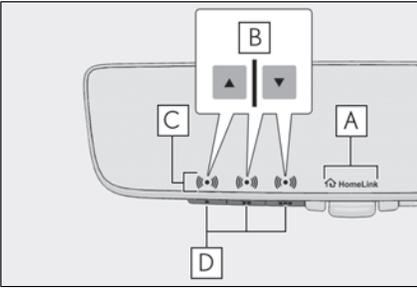

- A** HomeLink® logo  
Appears while HomeLink® is operating.  
When the menu button is pressed, the logo disappears even while the HomeLink® is operating.
- B** Garage door operation indicators
- C** HomeLink® indicator light  
Illuminates above each button selected.
- D** Buttons

## Programming the HomeLink®

- ? **Before programming HomeLink®**
- ? During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- ? It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- ? Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the “Learn” or “Smart” button on the garage door opener motor.


## ? Programming HomeLink®

Steps **1** through **3** must be performed within 60 seconds, otherwise the HomeLink® indicator light will stop flashing and programming will not be successfully completed.


- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes (orange).
- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

### ► Vehicles with inside rear view mirror

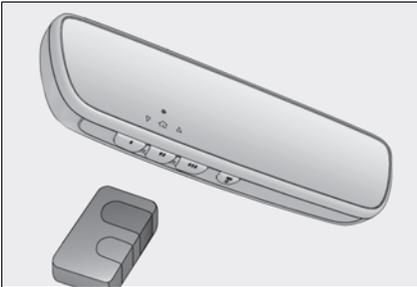


### ► Vehicles with Digital Rear-view Mirror

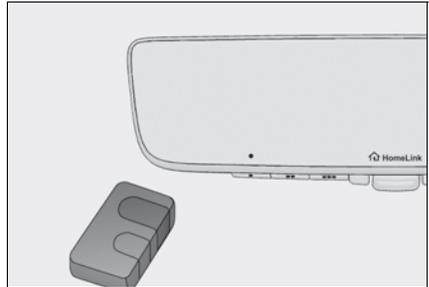


### 3 Program a device.

#### ▶ Vehicles with inside rear view mirror

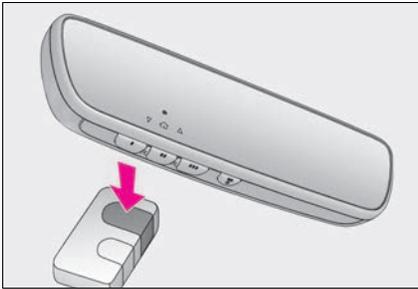

#### ▶ Vehicles with Digital Rear-view Mirror

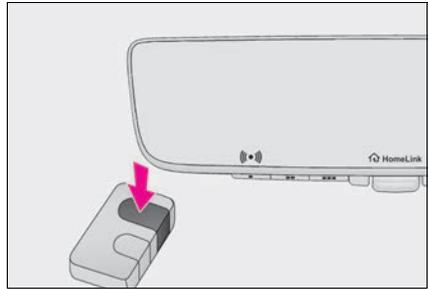

#### ▶ Programming a device other than an entry gate (for U.S.A. owners)

Press and hold the remote control transmitter button until the HomeLink<sup>®</sup> indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

#### ▶ Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink<sup>®</sup> indicator light changes from slowly flashing (orange) to rapidly flashing (green) (rolling code) or continuously lit (green) (fixed code).


#### 4 Test the HomeLink<sup>®</sup> operation by pressing the newly programmed button and observing the indicator light:

- ? HomeLink<sup>®</sup> indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink<sup>®</sup> button is pressed and released.
- ? HomeLink<sup>®</sup> indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink<sup>®</sup> button for 2 seconds then release it.
- ? If the garage door or other device does not operate, proceed to "Programming a rolling code system".

#### 5 Repeat the steps above to program another device for any of the remaining HomeLink<sup>®</sup> buttons.


## ? Programming a rolling code system

Two or more people may be necessary to complete rolling code programming.

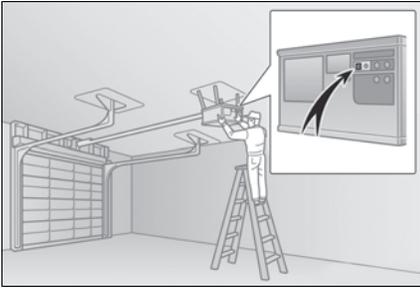

- 1 Locate the "Learn" or "Smart" button on the garage door opener motor in the garage.


This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the owner's manual supplied with the garage door opener motor for details.

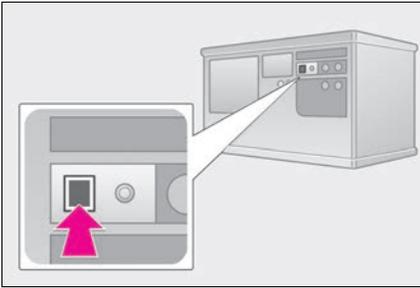


- 2 Press and release the "Learn" or "Smart" button.  
Perform step 3 within 30 seconds after performing step 2.

- 3 Press and hold the desired HomeLink<sup>®</sup> button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming. If the garage door opener motor operates when the HomeLink<sup>®</sup> button is pressed, the garage door opener motor recognizes the HomeLink<sup>®</sup> signal.

### ► Vehicles with inside rear view mirror

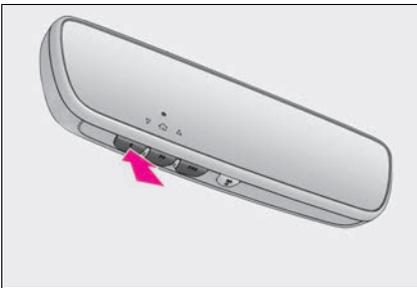

### ► Vehicles with Digital Rear-view Mirror

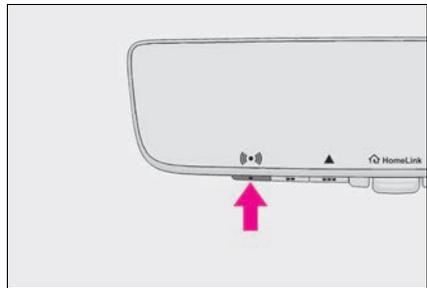

### ? **Enabling 2-way communication with a garage door (only available for compatible devices)**

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.homelink.com](http://www.homelink.com).)

- 1** Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink<sup>®</sup>, both garage door operation indicators will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform steps **2** and **3** within the first 10 presses of the HomeLink<sup>®</sup> button after programming has been completed.

- 2** Press a programmed HomeLink<sup>®</sup> button to operate a garage door.
- 3** Within 1 minute of pressing the HomeLink<sup>®</sup> button, after the garage door operation has stopped, press the “Learn” or “Smart” button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly (green) and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

### ? **Reprogramming a single HomeLink<sup>®</sup> button**

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1** Press and hold the desired HomeLink<sup>®</sup> button.
- 2** When the HomeLink<sup>®</sup> indicator starts flashing orange, release the HomeLink<sup>®</sup> button and perform “Programming HomeLink<sup>®</sup>” step **1** (it takes 20 seconds for the HomeLink<sup>®</sup> indicator to start flashing).

## **Operating HomeLink<sup>®</sup>**


Press the appropriate HomeLink<sup>®</sup> button. The HomeLink<sup>®</sup> indicator light should turn on.

## Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components

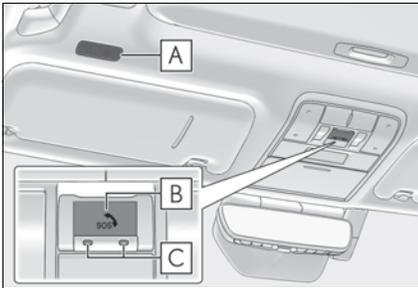

- A** Microphone
- B** "SOS" button
- C** LED light indicators

### Services

Subscribers have the following Safety Connect services available:

#### ? Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

? Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) in the United States, 1-877-539-8777 in Puerto Rico or 1-800-265-3987 in Canada, and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

? Emergency Assistance Button (“SOS”)

In the event of an emergency on the road, push the “SOS” button to reach the Safety Connect response center. The answering agent will determine your vehicle’s location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the “SOS” button, tell the response-center agent that you are not experiencing an emergency.

? Enhanced Roadside Assistance

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the “SOS” button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call the following or push the “SOS” button in your vehicle for further subscription details.

? The United States

1-800-25-LEXUS (1-800-255-3987)

? Canada

1-800-26-LEXUS (1-800-265-3987)

? Puerto Rico

1-877-539-8777

## Remote Connect (if equipped)

The functionality of Remote Connect and Service Connect are made possible by the use of a DCM and a smartphone.

For details about these services, refer to [www.lexus.com](http://www.lexus.com) (U.S.A.), [www.lexuspr.com/](http://www.lexuspr.com/) (Puerto Rico), [www.lexus.ca](http://www.lexus.ca) (Canada) or [www.lexus.mx](http://www.lexus.mx) (Mexico).

## Remote Connect subscription

Remote Connect is a smartphone application that lets you view and remotely control certain aspects of your vehicle.

### ? Availability of function

This function is not made available in some countries or areas.

## Service Connect (if equipped)

Service Connect uses DCM to collect and transmit vehicle data that allows Lexus to provide:

- ? Vehicle Health Report (VHR) (Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- ? Maintenance Notifications
- ? Vehicle Alert Notifications

### ? **Availability of function**

This function is not made available in some countries or areas.


## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

For details about the entry function or wireless remote control, refer to P.18, 19.


### Unlocking and locking the doors from the inside

#### ? Using the door lock switches

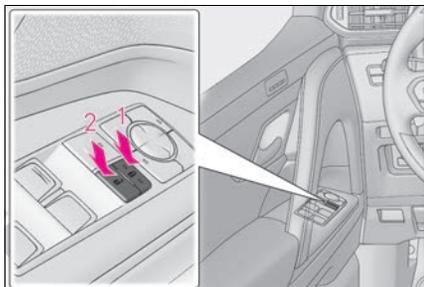


- 1 Locks all the doors
- 2 Unlocks all the doors

#### ? Inside lock buttons (to lock)

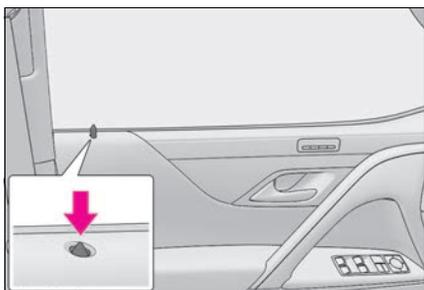

Push down the inside lock button to lock the door.

#### ? Inside door handles (to unlock)

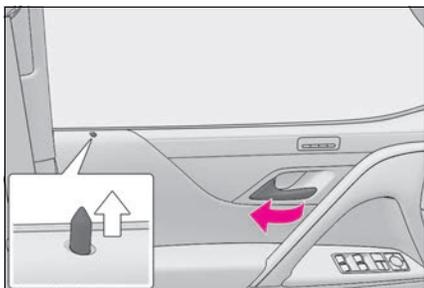

For the front doors: Pull the handle to unlock and open the door.

When the door is unlocked, the inside lock button will pop up.

For the rear doors: Pull the handle to unlock the door. Pull the handle a second time to open the door.


When the door is unlocked, the inside lock button will pop up.

# Power Windows

## Opening and closing the power windows

The power windows can be opened and closed using the switches.


Operating the switch moves the windows as follows:

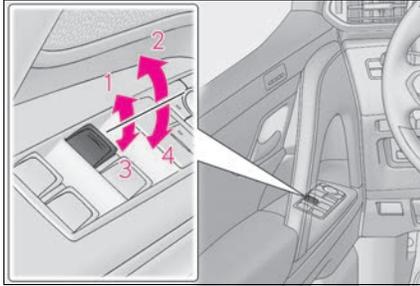

- 1 Closing
- 2 One-touch closing\*
- 3 Opening
- 4 One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

## Preventing accidental operation (window lock switch)

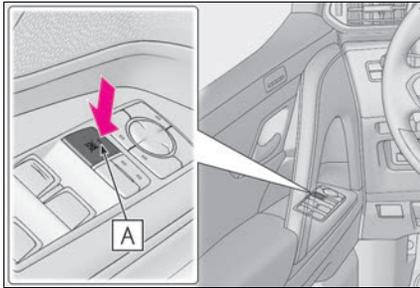

This function can be used to prevent children from accidentally opening or closing a passenger window.

Press the switch.

The indicator **A** will come on and the passenger windows will be locked.


The passenger windows can still be opened and closed using the driver's switch even if the lock switch is on.

# Moon Roof

Use the overhead switches to open and close the moon roof and tilt it up and down.

## Operating the moon roof

### ? Opening and closing

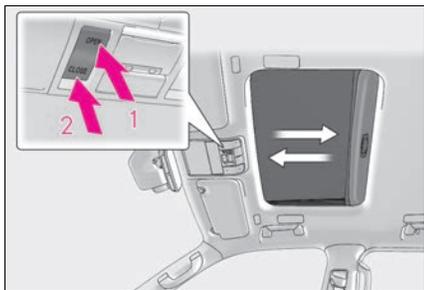

**1** Opens the moon roof\*


The moon roof stops slightly before the fully open position to reduce wind noise.

Press the switch again to fully open the moon roof.

**2** Closes the moon roof\*

\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

### ? Tilting up and down

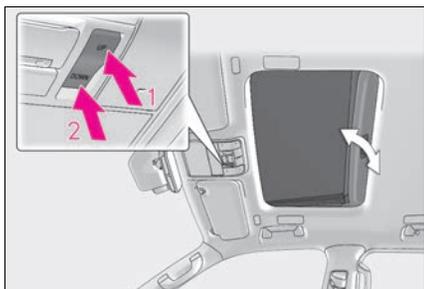

**1** Tilts the moon roof up\*

**2** Tilts the moon roof down\*


\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

# Fuel Tank Cap


## Before refueling the vehicle

- ? Close all the doors and windows, and turn the power switch to OFF.
- ? Confirm the type of fuel.

## Opening the fuel tank cap

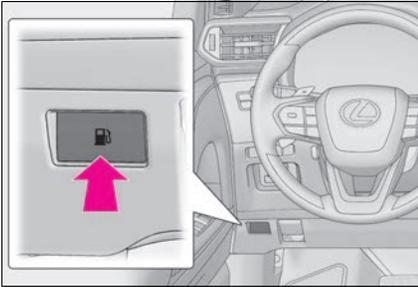


- 1 Press the opener switch to open the fuel filler door.

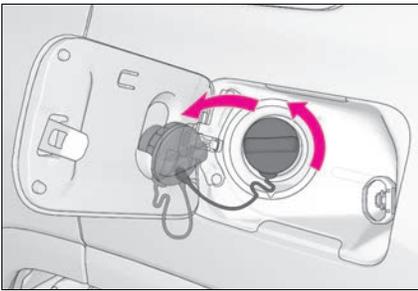

- 2 Turn the fuel tank cap slowly to open and hang it on the back of holder on the fuel filler door.

## Closing the fuel tank cap

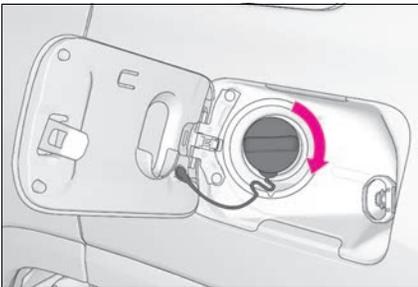


After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

## Back Door

### Opening/closing the back door

#### ? From the inside

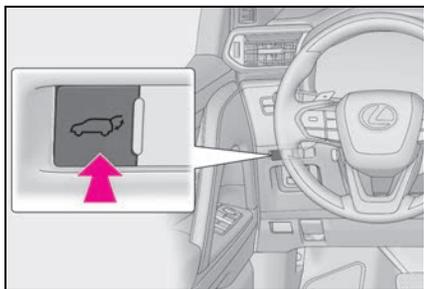

Press and hold the switch.

The power back door automatically opens/closes.

Pressing the switch while the power back door is opening/closing stops the operation.

When the switch is pressed and held again during the halted operation, the back door will perform the reverse operation.


## ? From the outside

### ▶ Wireless remote control

→ P.18

### ▶ Using the switches on the back door

#### ? Open

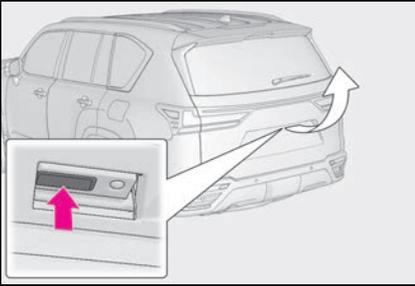


When the back door is unlocked: Press the back door opener switch.

When the back door is locked: While carrying the electronic key on your person, press and hold the back door opener switch.

The power back door automatically opens.

Pressing the switch while the power back door is opening/closing stops the operation.

#### ? Close

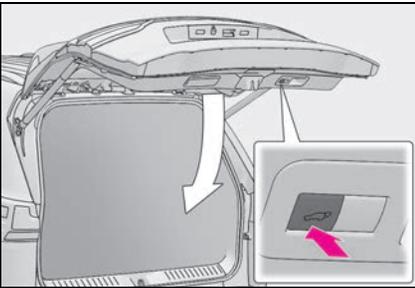


Press the  switch on the lower part of the back door.

The power back door automatically closes.

Pressing the  switch while the power back door is operating will stop the operation. When the  switch is pressed again during the halted operation, the back door will perform the reverse operation.

#### ? Close the back door and lock all doors (close & lock function)

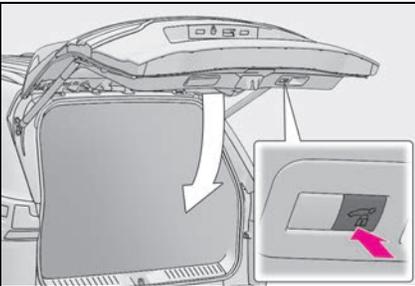

Close all of the doors except the back door, carrying an electronic key and press the


 switch on the lower part of the back door.

Pressing the  switch while the back door is operating will stop the operation. When the switch is pressed again during the halted operation, the back door will be closed.

## ? Opening/closing the back door using the kick sensor (vehicles with Hands Free Power Back Door)


The Hands Free Power Back Door enables automatic opening and closing of the power back door by putting your foot near the right lower part of the rear bumper and moving it away from the rear bumper. When operating the Hands Free Power Back Door, make sure that the power switch is in OFF, the Hands Free Power Back Door operation is enabled and you are carrying an electronic key.

- 1 While carrying an electronic key, stand within the smart access system with push-button start operation range, approximately 11.8 to 19.7 in. (30 to 50 cm) from the rear bumper.

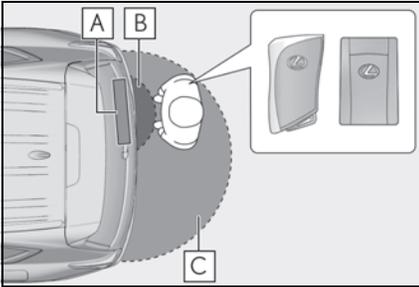

- A** Kick sensor
- B** Hands Free Power Back Door operation detection area
- C** Smart access system with pushbutton start operation detection area

- 2 Perform a kick operation by moving your foot to within approximately 3.9 in. (10 cm) of the rear bumper, and then pulling your foot back after the buzzer sounds.

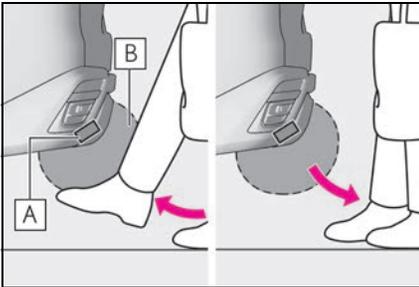

- A** Kick sensor
- B** Hands Free Power Back Door operation detection area

- 3 When the kick sensor detects that your foot is pulled back, a buzzer will sound and the back door will automatically fully open/close.



**What to do if...**

**List of Warning/Indicator Lights**

Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.

	(U.S.A.)	Brake system warning light
	(Canada)	
	(Red)	

Immediately stop the vehicle in a safe place and contact your Lexus dealer.

	Charging system warning light		Low engine oil pressure warning light
---	-------------------------------	---	---------------------------------------

Have the vehicle inspected by your Lexus dealer immediately.

	(Yellow)	Brake system warning light		(Flashes)	Low speed four-wheel drive indicator
	(U.S.A.)	Malfunction indicator lamp		(Flashes)	Front differential lock indicator (if equipped)
	(Canada)			(Flashes)	Center differential lock indicator
		SRS warning light		(Flashes)	Rear differential lock indicator (if equipped)
	(U.S.A.)	ABS warning light		(Flashes)	Brake hold operated indicator
	(Canada)			(Blinking and then continuously on)	Tire pressure warning light
	(Red or yellow)	Power steering system warning light			Trailer brake warning light
		Intuitive parking assist OFF indicator			
		Slip indicator light			

For further information, refer to the "OWNER'S MANUAL".

# What to do if...

## Follow the correction procedures.



PCS warning light



LTA indicator



LDA indicator



PDA indicator



Cruise control indicator



Dynamic radar cruise control indicator



Driving assist information indicator



Inappropriate pedal operation warning light



(U.S.A.)

Parking brake indicator



(Canada)



Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light\*



Driver's and front passenger's seat belt reminder light



Rear passengers' seat belt reminder light

## Stop and check.



High coolant temperature warning light

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

### See the "OWNER'S MANUAL"



Turn signal indicator



(U.S.A.)

Headlight indicator



(Canada)

Tail light indicator



Headlight high beam indicator



AHS indicator (if equipped)  
AHB indicator



Fog light indicator



PCS warning light



(White or green)

LTA indicator



(Flashes in yellow)

LTA indicator



(White or green)

LDA indicator



(Flashes in yellow)

LDA indicator



(Yellow)

LDA OFF indicator



(White or green)

PDA indicator



(White or green)

Cruise control indicator



(White or green)

Dynamic radar cruise control indicator



Driving assist information indicator



Outside rear view mirror indicators



Intuitive parking assist OFF indicator



Intuitive parking assist detection indicator (if equipped)



(Flashes)

Slip indicator light



VSC OFF indicator



Downhill assist control system indicator



Turn Assist indicator



Crawl Control indicator

For further information, refer to the "OWNER'S MANUAL".

**What to do if...**

**See the "OWNER'S MANUAL"**

	Easy access mode indicator		Low outside temperature indicator
	Low speed four-wheel drive indicator		Eco drive mode indicator
	Front differential lock indicator (if equipped)		Comfort mode indicator
	Center differential lock indicator		SPORT S mode indicator
	Rear differential lock indicator (if equipped)		SPORT S+ mode indicator
	(U.S.A.) Parking brake indicator		Custom mode indicator
	(Canada) Parking brake indicator		AUTO mode indicator
	Brake hold standby indicator		DIRT mode indicator
	Brake hold operated indicator		SAND mode indicator
	(U.S.A.) "AIR BAG ON/OFF" indicator		MUD mode indicator
	(Canada) lights		DEEP SNOW mode indicator
	Smart access system with push-button start indicator		ROCK mode indicator
	"READY" indicator		


**For further information, refer to the "OWNER'S MANUAL".**

\*: The tire pressure warning light may come on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. In this case, adjusting the tire inflation pressure will turn off the warning light (after a few minutes). In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## What to do if...

### If the electronic key does not operate properly

#### Locking and unlocking the doors

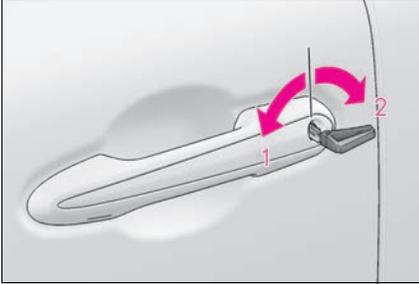


- 1 Locks all the doors
- 2 Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again within 5 seconds unlocks the other doors.

#### Starting the hybrid system

- 1 Ensure that the shift position is in P and depress the brake pedal.

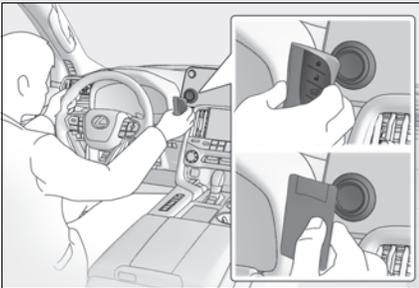

- 2 Touch the Lexus emblem side of the electronic key to the power switch.

When the electronic key is detected, a buzzer sounds and the power switch will turn to ON.

When the smart access system with push-button start is deactivated in customization setting and ACC customization is in on, the power switch will turn to ACC.

- 3 Firmly depress the brake pedal and check that  and a message are displayed on the multi-information display.
- 4 Press the power switch shortly and firmly.

In the event that the hybrid system still cannot be started, contact your Lexus dealer.

Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL".

If you need further assistance, contact your Lexus dealer.

## What to do if...

### If the hybrid system will not start

Make sure that the correct operating procedures have been followed.

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system. (→P.20)

If the hybrid system still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.

# Memo

A large white rectangular area with horizontal ruling lines, intended for writing a memo. The lines are evenly spaced and extend across the width of the page.



### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

### **? U.S. OWNERS**

? In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)**

? In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)**

### **? CANADIAN OWNERS**

? In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS or 1-800-265-3987 (Toll-Free)**

Please access our **websites** for further information.

? The U.S. mainland: **[www.lexus.com](http://www.lexus.com)**

? Hawaii: **[www.servcolexus.com](http://www.servcolexus.com)**

? Canada: **[www.lexus.ca](http://www.lexus.ca)**

©2025 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.



Owner's Manual Quick Guide:

Publication No. OM60Y56U

Part No. 01999-60Y56

Printed in Japan 01-2510 C

LX700h Owner's Manual Quick Guide (北米U)