

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Air Conditioning System (without navigation system)*</b>	
Using the automatic mode.....	72
Adjusting the temperature.....	72
<b>Air Conditioning System (with navigation system)*</b>	
Using the automatic mode.....	64
Adjusting the temperature.....	64
<b>Audio System (without navigation system)*</b>	
Basic operation.....	69
Radio.....	69
CD player.....	70
Operating an iPod.....	71
Remote control (steering wheel switches).....	71
<b>Audio System (with navigation system)*</b>	
Audio control screen.....	60
Basic operation.....	60
Radio.....	61
DVD player/CD player.....	61
Operating an iPod.....	63
Remote control (steering wheel switches).....	63
<b>Automatic High Beam</b> .....	38
<b>Cruise Control</b> .....	26
<b>Door Locks</b> .....	85
<b>Dynamic Radar Cruise Control</b> .....	28
<b>Eco Driving Indicator Light</b> .....	25
<b>Energy Monitor / Consumption Screen</b> .....	12
<b>Fuel Tank Cap</b> .....	88
<b>Garage Door Opener</b> .....	79
<b>Hands-free System For Cellular Phone (without navigation system)*</b>	
Bluetooth® phone pairing.....	65
Calling by number.....	65
Calling by name.....	66
Calling by speed dial.....	66
Phonebook transfer.....	67
Changing the registered name.....	68
Registering a speed dial.....	68

\*: This feature may be operated by Voice Command (See P. 73)


## Hands-free System For Cellular Phone (with navigation system)\*

Bluetooth® phone pairing .....	52
Phonebook transfer .....	53
Registering a voice tag .....	54
Registering a speed dial .....	55
Calling by name.....	57
Calling by speed dial .....	58
Receiving a call .....	59
<b>Headlights</b> .....	36
<b>Head-up Display</b> .....	33
<b>Hybrid System</b> .....	10
<b>Hybrid transmission</b> .....	19
<b>Intuitive Parking Assist</b> .....	35
<b>Keys</b> .....	14
<b>Lexus Enform with Safety Connect</b> .....	83
<b>LKA (Lane-Keeping Assist)</b> .....	32
<b>Moon Roof</b> .....	87
<b>Multi-information Display</b> .....	23
<b>Navigation System</b> *	
Register home.....	44
Destination input - Search by address .....	45
Destination input - Search points of interest by name.....	47
Destination input - Search points of interest by category.....	49
Destination input - Search points of interest by telephone number .....	50
Voice Command System.....	73
<b>Portable Audio Device Adapters</b> .....	78
<b>Power (Ignition) Switch</b> .....	17
<b>Power Windows</b> .....	86
<b>Remote Touch</b> .....	41
<b>Safety Connect</b> .....	81
<b>Smart Access System with Push-button Start</b> .....	15
<b>Theft Deterrent System</b> .....	16
<b>Turn Signal Lever</b> .....	25
<b>Voice Command System</b> *	
Basic operation .....	73
Command list .....	74
<b>Wide View Front Monitor</b> .....	35
<b>Windshield Wipers and Washer</b> .....	39

\*: This feature may be operated by Voice Command (See P. 73)

# Overview


# Instrument Panel

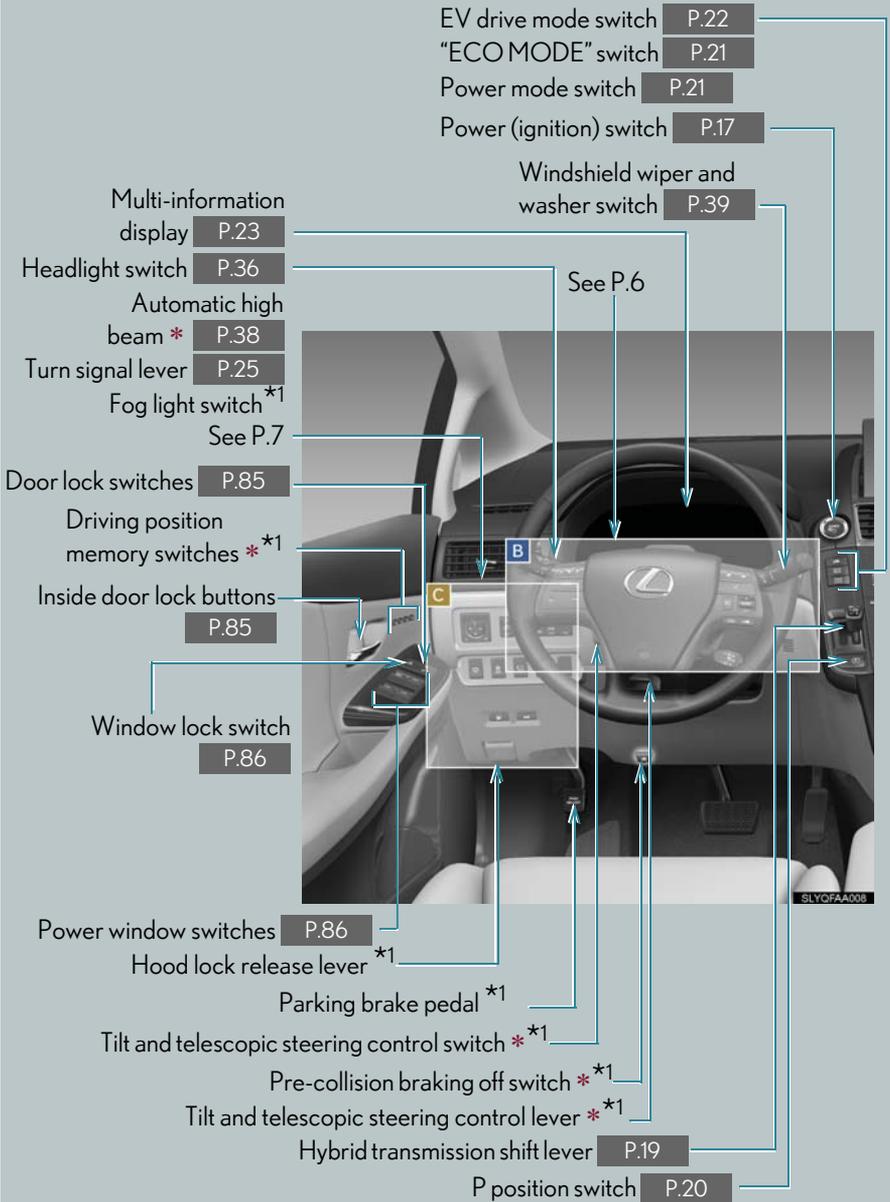

Trunk opener main switch \*<sup>1</sup>

Audio system  
P.60, 69

See P. 5

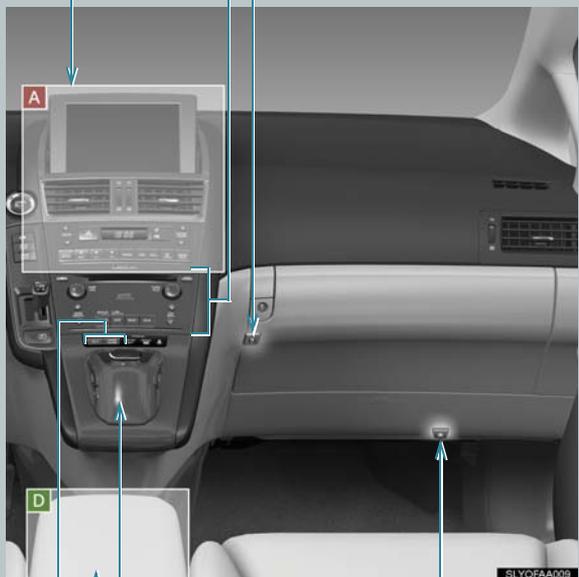

Remote Touch \* P.41

See P.8

Tire pressure warning  
reset switch \*<sup>1</sup>

OPEN CLOSE switch \*<sup>2</sup>  
TILT switch \*<sup>2</sup>

- \* : If equipped
- \*<sup>1</sup> : Refer to "Owner's Manual".
- \*<sup>2</sup> : Refer to "Navigation System Owner's Manual".


# Overview

# Instrument Panel

**A**

► Without navigation system

Air conditioning system **P. 72**

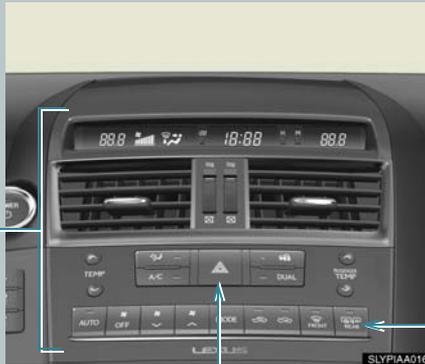

Emergency flasher switch \*1

Rear window and outside rear view mirror defogger switch \*1

► With navigation system

Navigation system **P. 44**

Emergency flasher switch \*1

Air conditioning system **P. 64**



Rear window and outside rear view mirror defogger switch \*2

B




- \* : If equipped
- \*1: Refer to "Owner's Manual".
- \*2: Refer to "Navigation System Owner's Manual".
- \*3: For vehicles without a navigation system, refer to the "Owner's Manual".
- \*4: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

# Overview

# Instrument Panel

C

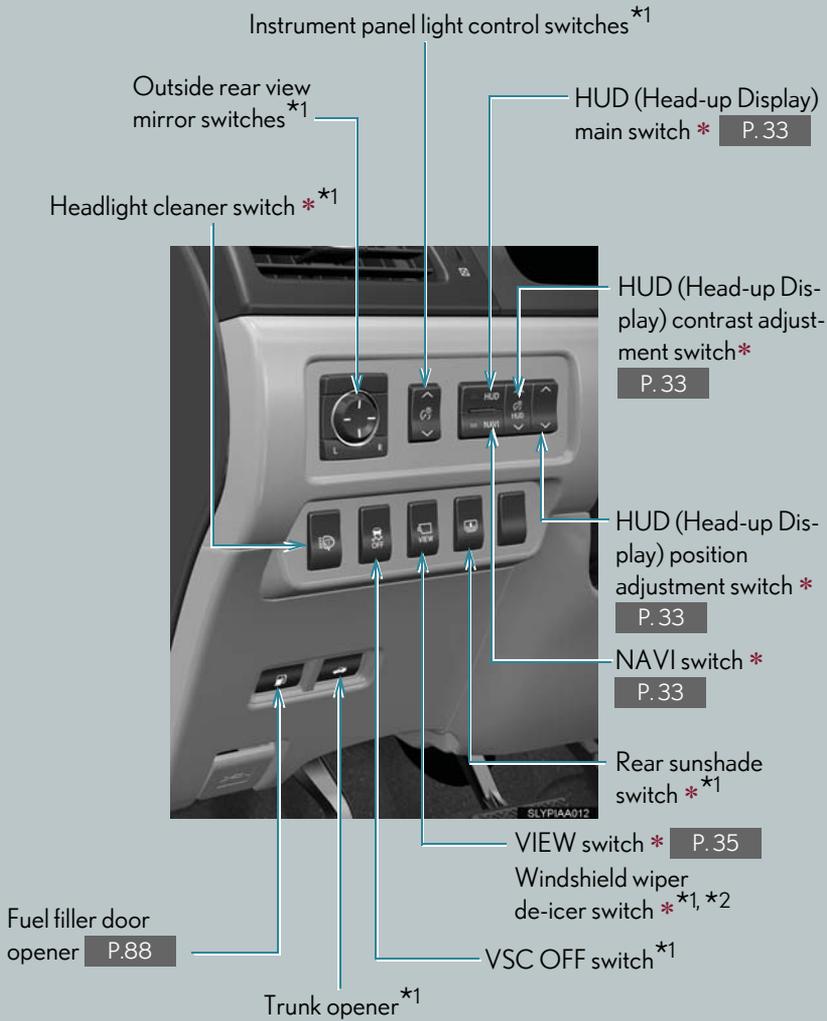

D




Seat heater switches \*<sup>\*1</sup>

Seat heater/ventilator switches \*<sup>\*1</sup>

\* : If equipped

\*<sup>1</sup>: Refer to "Owner's Manual".

\*<sup>2</sup>: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

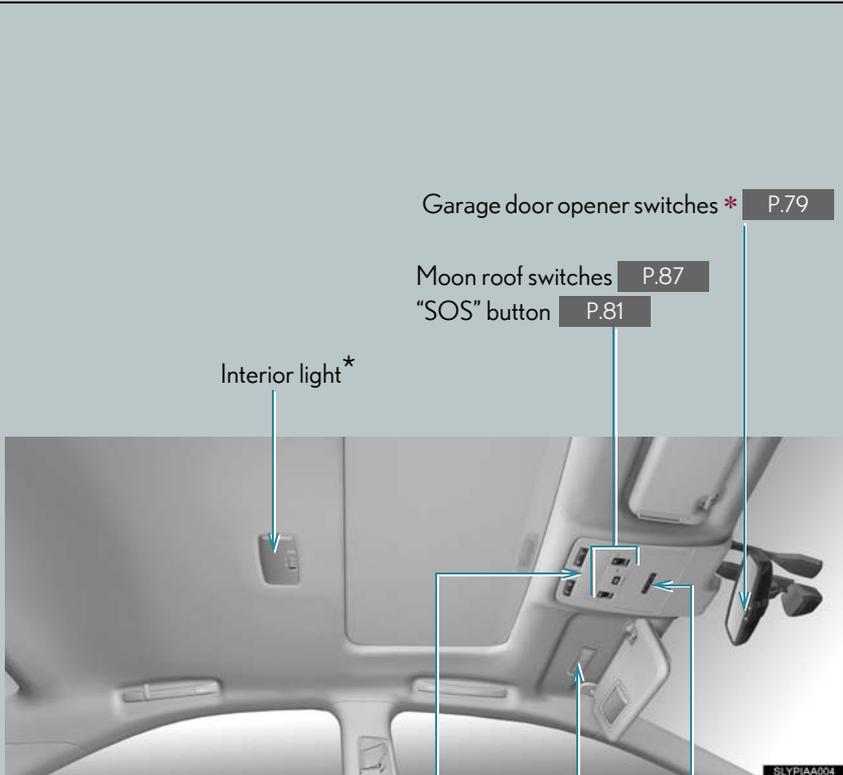

Garage door opener switches \* P.79

Moon roof switches P.87

"SOS" button P.81

Interior light\*

Interior light\*  
Personal light\*

Vanity lights\*

Garage door opener switches \* P.79

\* : If equipped

\* : Refer to "Owner's Manual".


## Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "Owner's Manual".

### Hybrid System Indicator

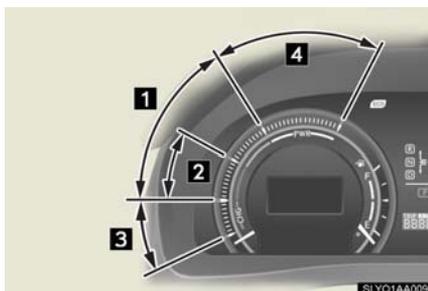

- 1** Eco area  
Eco Driving Indicator Light turns on
- 2** Hybrid Eco area  
Eco Driving Indicator Light turns on
- 3** Charge area  
Eco Driving Indicator Light turns on
- 4** Power area  
Eco Driving Indicator Light turns off

- By keeping the indicator needle within Eco area, Eco-friendly driving can be achieved. Hybrid Eco area shows that gasoline engine power is not being used very often.\*<sup>1</sup>
- Charge area indicates regeneration\*<sup>2</sup> status. Regenerated energy will be used to charge the hybrid battery.

\*<sup>1</sup>: The gasoline engine will automatically stop and restart under various conditions.

\*<sup>2</sup>: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

### Charging the battery

When shift position N is selected, the hybrid battery (traction battery) will not be charged. Thus, select P when the vehicle is stopped.

In addition, when driving in heavy traffic, use D or B.

### Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released while driving with shift position D or B selected.
- The brake pedal is depressed while driving with shift position D or B selected.

## ■ Sounds and vibrations specific to a hybrid vehicle

---

There may be no engine sounds or vibration even though the vehicle is able to move. Always change the shift position to P, and apply the parking brake when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds from the hybrid system may be heard when the trunk lid is open.
- Sounds may be heard from the transaxle when the engine is started or stopped, or while the engine is idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Other sounds, such as motors and mechanical noises, may be heard from the brake system when the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the side of rear left seat-back.

When driving in Eco drive mode, the fan noise may be louder than when driving normally.

## ■ Running out of fuel

---

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start.

(The minimum amount of fuel to add to make the low fuel level warning light go out is about 2.6 gal. [10 L, 2.1 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

## Energy Monitor / Consumption Screen

You can view the status of your hybrid system on the multi-information display and the navigation system screen.

### Energy monitor

The energy monitor can be displayed on both the navigation system screen and the multi-information display.


- How to display on the navigation system screen (→P.41):

Press the “MENU” button on the Remote Touch and select “Info. Phone” after that select “Fuel consumption”.

If the “Consumption” or “Past Record” screen is displayed, select the “Energy” and press the “ENTER” button on the Remote Touch.

- How to display on the multi-information display:

Toggle the “ENTER” switch on the steering wheel upward or downward through several times to select the energy monitor display.

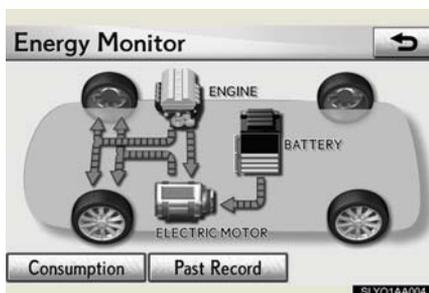


- The flow of energy is displayed on the navigation system screen.

Amber: gasoline energy

Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.

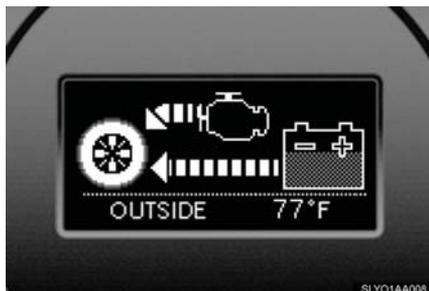


- The flow of energy is indicated by the movement of the arrows on the multi-information display.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

## ■ Consumption (with navigation system)

Press the “MENU” button on the Remote Touch and select “Info. Phone”, after that select “Fuel consumption” and press the “ENTER” button on the Remote Touch.

If the “Consumption” screen does not appear, select “Consumption” and press the “ENTER” button on the Remote Touch.

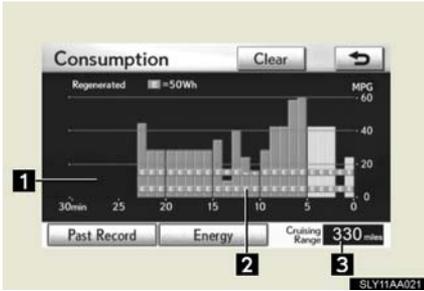


- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes  
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3 Cruising range

## ■ Past record (with navigation system)

Press the “MENU” button on the Remote Touch and select “Info. Phone”, after that select “Fuel consumption” and press the “ENTER” button on the Remote Touch.

If the “Past Record” screen does not appear, select “Past Record” and press the “ENTER” button on the Remote Touch.

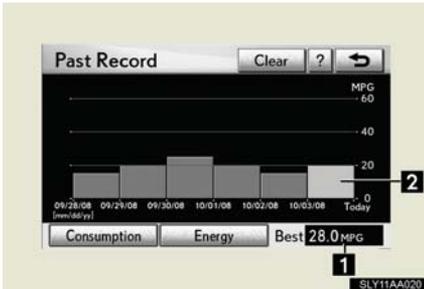

- 1 Best past fuel consumption
- 2 Average fuel consumption  
Displays the average fuel consumption between each reset of the total average fuel consumption on the multi-information display.  
When resetting, if the total average fuel consumption is better than the best past fuel consumption, the best past fuel consumption will be updated.

## ■ Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

# Keys

## Electronic key



Smart access system with push-button start  
(→P.15, 17)

\*: If equipped

## Mechanical key




Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

## Wireless remote control

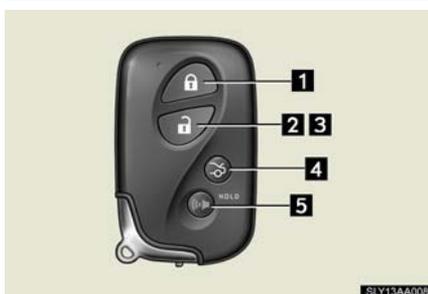

- 1 Locks all the doors
- 2 Unlocks all the doors  
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
- 3 Opens the windows and moon roof (press and hold)\*
- 4 Unlocks the trunk (press and hold)
- 5 Sounds the alarm (press and hold)

\*: This setting must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.

For details on starting the hybrid system, see page 17.

### ■ Entering the vehicle



Grip the handle to unlock the doors.

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

### ■ Exiting the vehicle



Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

### ■ Opening the trunk

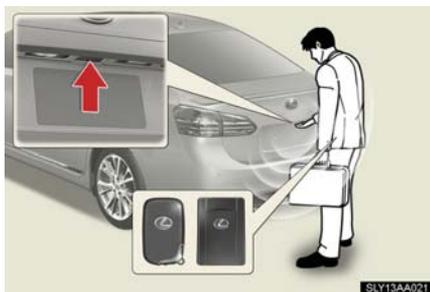


Press the button to unlock the trunk.

For details on what to do when the electronic key does not operate properly, see page 91.

# Theft Deterrent System

## ■ Immobilizer system

### ▶ Without navigation system

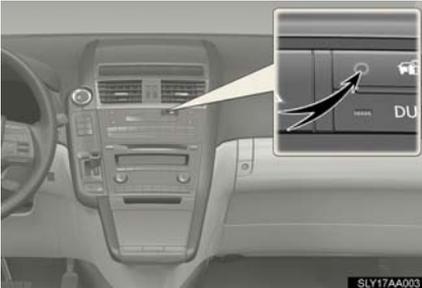

The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

### ▶ With navigation system



The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

## ■ Alarm

The system sounds the alarm and flashes the lights when forced entry is detected.

**To set the alarm:** Close the doors, trunk and hood, and lock all the doors using the entry function or wireless remote control. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

**To deactivate or stop the alarm:** start the hybrid system (The alarm will be deactivated or stopped after a few seconds.), or unlock the doors or trunk using the entry function, wireless remote control or mechanical key.

## Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes "POWER" switch modes.

### Starting the hybrid system




- 1 Check that the parking brake is set.
- 2 Firmly depress the brake pedal.  
The "POWER" switch indicator will turn green. If the indicator does not turn green, the hybrid system cannot be started.  
When shift position N is selected, the hybrid system cannot start. Select the P position when starting the hybrid system.
- 3 Press the "POWER" switch.  
After a while, the "READY" indicator comes on with a beep sound.  
The vehicle can move when the "READY" indicator is on even if the engine is stopped.  
Continue depressing the brake pedal until the hybrid system is completely started.  
The hybrid system can be started from any mode.

### Stopping the hybrid system

- 1 Stop the vehicle by depressing the brake pedal.
- 2 Set the parking brake.
- 3 Press the P position switch to shift into P.  
Check that the shift position indicator on the instrument cluster shows P.
- 4 Press the "POWER" switch.
- 5 Slowly release the brake pedal and check that the indicator on the "POWER" switch is off.

## ■ Changing “POWER” switch modes

Modes can be changed by pressing the “POWER” switch with the brake pedal released. (The mode changes each time the switch is pressed.)

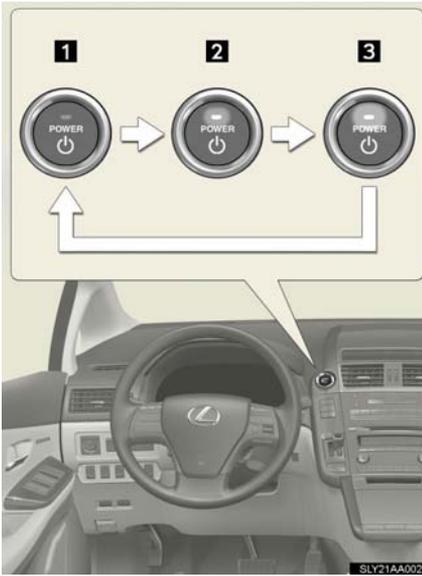

- 1** Off  
The emergency flashers can be used.
- 2** ACCESSORY mode  
Some electrical components such as the audio system can be used.  
The “POWER” switch indicator turns amber.
- 3** ON mode  
All electrical components can be used.  
The “POWER” switch indicator turns amber.

# Hybrid transmission

## Shifting the shift lever



### 1 Shift lever

Operate the shift lever gently and ensure correct shifting operation.



When shifting to the D or R positions, move the shift lever along the shift gate.



To shift to the N position, slide the shift lever to the left and hold it. The shift position will change to N.



Shifting to B is only possible when shift position D is selected.



The shift lever will always return to this position after a shifting operation.

When shifting from P to D or R, from D to R, or from R to D, ensure that the brake pedal is being depressed and the vehicle is stationary.

### 2 Shift position indicator

When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument panel.

When any shift position other than D or B is selected, the arrow toward B disappears from the shift position indicator.

## Shift position purpose

Shift position	Function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving*
B	Applying moderate engine braking when driving down hills or on steep slopes

\*: For good fuel economy and noise reduction, the D position should usually be used.

## ■ P position switch

The shift position can be changed to P through use of the P position switch.



Fully stop the vehicle and keep depressing the brake pedal, and then press the P position switch.


When the shift position is changed to P, the switch indicator comes on.

Check that the P position indicator is illuminated on the shift position indicator.

- Changing the shift position from P to other positions:
  - While depressing the brake pedal firmly, operate the shift lever. If the shift lever is operated without depressing the brake pedal, the buzzer will sound and the shifting operation will be disabled.
  - The shift position cannot be changed from P to B directly.

## ■ Selecting a driving mode

The following modes can be selected to suit driving conditions:

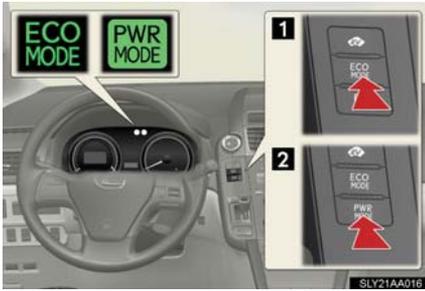

### 1 Eco drive mode

Suitable for improving the fuel economy, because the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions and the operation of the air conditioning system (heating/cooling) will be minimized.

When the “ECO MODE” switch is pressed, the “ECO MODE” indicator comes on in the meter.

### 2 Power mode

Suitable when the vehicle needs to drive powerfully or travels in mountainous areas.

When the power mode switch is pressed, the “PWR MODE” indicator comes on in the meter.

### ■ Using air conditioning in Eco drive mode

The Eco drive mode controls heating/cooling and fan speed operation to improve fuel consumption. When you want to improve the effectiveness of the air conditioning system, adjust the fan speed or cancel the Eco drive mode.

For more information, refer to the “Navigation System Owner’s Manual”.

## ■ EV drive mode

In EV drive mode, the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.



### Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

### ■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- Vehicle speed is about 19mph (30km/h) or more.
- The hybrid battery (traction battery) is low.  
In general, the remaining battery level indicated in the "Energy Monitor" display is level 3 or lower.
- The temperature of the hybrid system is high.  
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.  
The vehicle has been left in temperatures lower than about 32°F (0°C) for a long period of time etc.
- The gasoline engine is warming up.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

## Multi-information Display

The multi-information display presents the driver with a variety of driving-related data including the current outside air temperature.

### Multi-information switches




#### 1 Menu switch

Changes modes to electronic feature control mode (if equipped), customization mode or back to normal display mode.

#### 2 "ENTER" switch

Changes trip information items. This switch is also used to turn on/off electronic feature controls and to change customization settings.

### Display contents

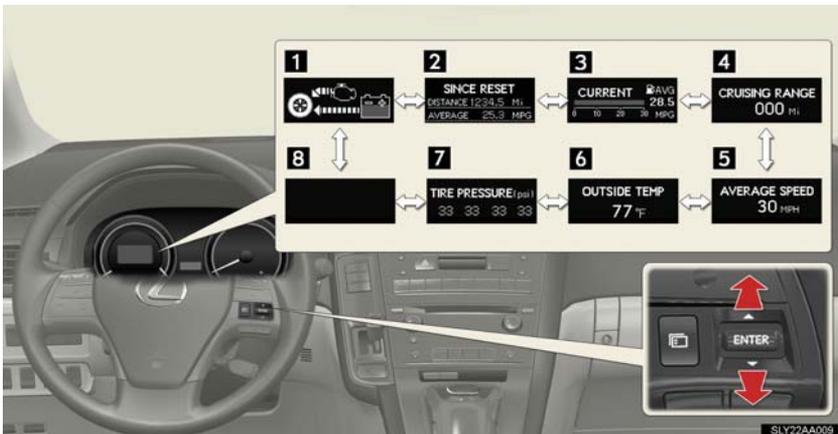


#### Trip information contents

- 1 Energy monitor
- 2 Total distance/Total average fuel consumption
- 3 Current fuel consumption/Average fuel consumption after refueling
- 4 Cruising range
- 5 Average vehicle speed
- 6 Outside temperature
- 7 Tire inflation pressure
- 8 Blank

#### Switching display items

Press the "ENTER" switch upward or downward.

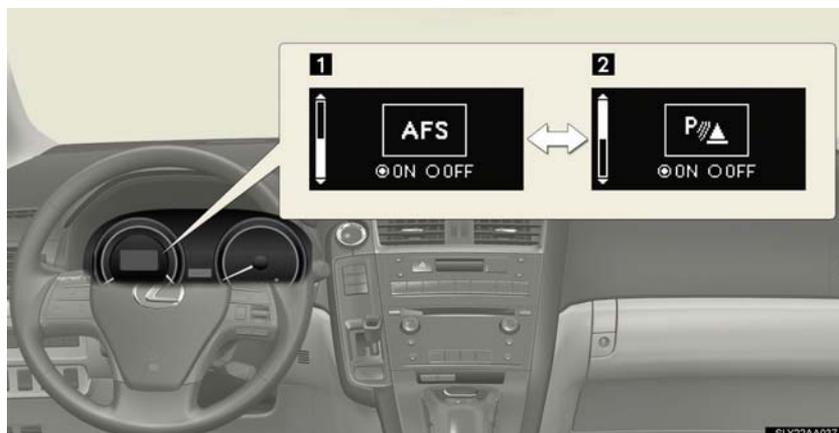

Electronic features control contents	Setting electronic feature controls
1 AFS (if equipped)	→P. 37
2 Intuitive parking assist (if equipped)	Refer to “Navigation System Owner’s Manual”

Display order may vary depending on vehicle condition.

Other contents	Details
Customization	Settings of functions such as the door lock and light illumination time can be changed
Dynamic radar cruise control (if equipped)	Automatically displayed when using the dynamic radar cruise control
LKA (Lane Keeping Assist) (if equipped)	Automatically displayed when using the lane keeping assist
PCS (Pre-Collision System) (if equipped)	Automatically displayed if there is a possibility of collision
Warning message	Automatically displayed when a malfunction occurs in any of the vehicle’s systems

## Eco Driving Indicator Light




### Eco-friendly driving


During Eco-friendly acceleration (Eco driving), Eco Driving Indicator Light will turn on. When the accelerator pedal is depressed excessively, and when the vehicle is stopped, the light turns off.

Eco Driving Indicator Light will operate when the vehicle is being driven with the shift position in D at a speed of about 80 mph (130 km/h) or below. The indicator will not operate when the vehicle is in power mode or EV drive mode. (→P. 21, 22)

## Turn Signal Lever

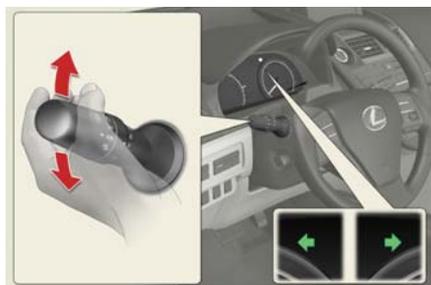


- 1 Right turn
- 2 Left turn
- 3 Lane change to the right (push and hold the lever partway)  
The right hand signals will flash until you release the lever.
- 4 Lane change to the left (push and hold the lever partway)  
The left hand signals will flash until you release the lever.

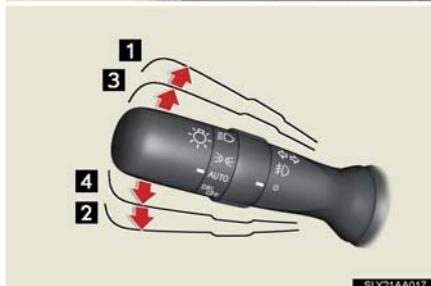

## Cruise Control (If Equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

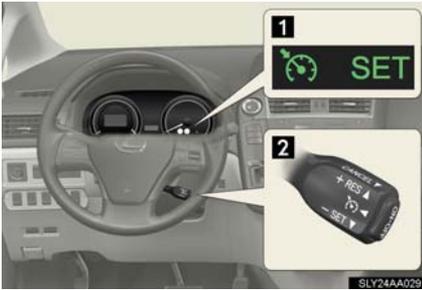

- 1 Indicators
- 2 Cruise control switch

### Setting the vehicle speed




- 1 Press the "ON-OFF" button to activate the cruise control.  
Press the button again to deactivate the cruise control.

- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.  
"SET" indicator will come on.

## ■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is obtained.

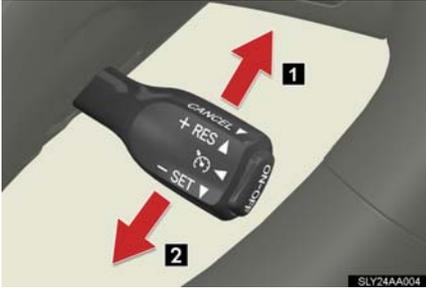

**1** Increases the speed

**2** Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.


Large adjustment: Hold the lever in the desired direction.

The set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

## ■ Canceling and resuming the constant speed control

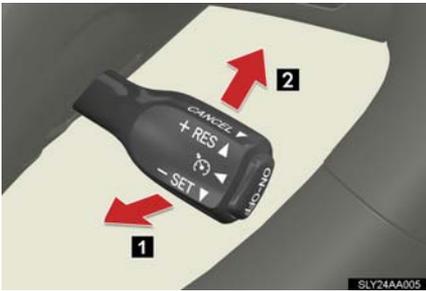

**1** Pulling the lever toward you cancels the constant speed control.


The speed setting is also canceled when the brakes are applied.

**2** Pushing the lever up resumes the constant speed control.

Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).


## Dynamic Radar Cruise Control (If Equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

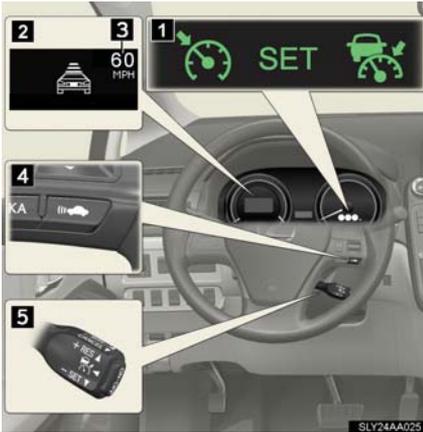



- 1 Indicators
- 2 Display
- 3 Set speed
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

## ■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)

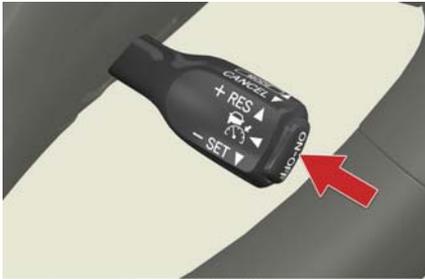

- 1 Press the "ON-OFF" button to activate the cruise control.

Press the button again to deactivate the cruise control.

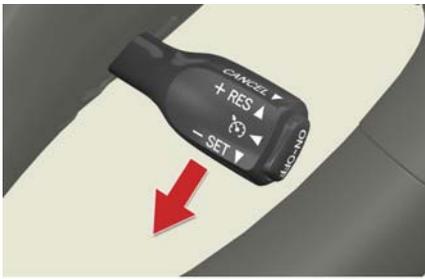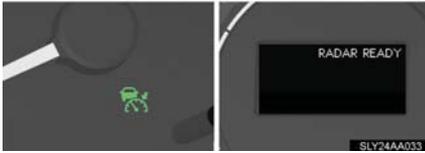


- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" indicator will come on.



## ■ Adjusting the set speed

To change the set speed, operate the lever until the desired set speed is displayed.

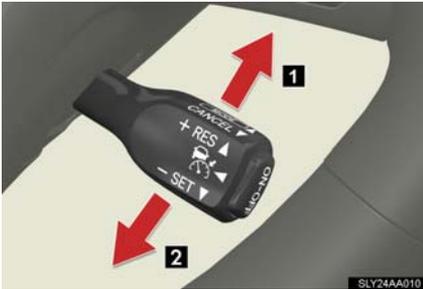

- 1 Increases the speed
  - 2 Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

In the vehicle-to-vehicle distance control mode, the set speed will be increased or decreased as follows:

### ▶ When the set speed is shown in “MPH”

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: By approximately 5 mph (8 km/h) for each 0.75 seconds the lever is held

### ▶ When the set speed is shown in “km/h”

Fine adjustment: By approximately 0.6 mph (1 km/h) each time the lever is operated

Large adjustment: By approximately 3.1 mph (5 km/h) for each 0.75 seconds the lever is held

In the constant speed control mode (→P. 31), the set speed will be increased or decreased as follows:

Fine adjustment: By approximately 1 mph (1.6 km/h) each time the lever is operated

Large adjustment: The set speed can be increased or decreased continually until the lever is released.

## ■ Changing the vehicle-to-vehicle distance




Pressing the button changes the vehicle-to-vehicle distance as follows:

- 1 Long
- 2 Medium
- 3 Short

The vehicle-to-vehicle distance is set automatically to long mode when the “POWER” switch is turned to ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.


## ■ Canceling and resuming the speed control

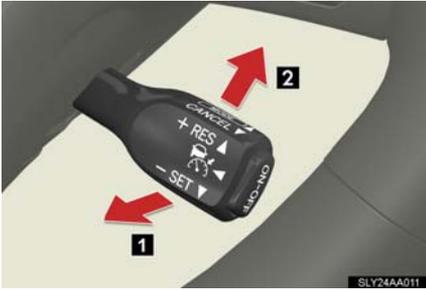

- 1** Pulling the lever toward you cancels the cruise control.  
The speed setting is also canceled when the brakes are applied.
- 2** Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## ■ Selecting conventional constant speed control mode

Dynamic radar cruise control can be used as conventional cruise control if you select constant speed control mode.

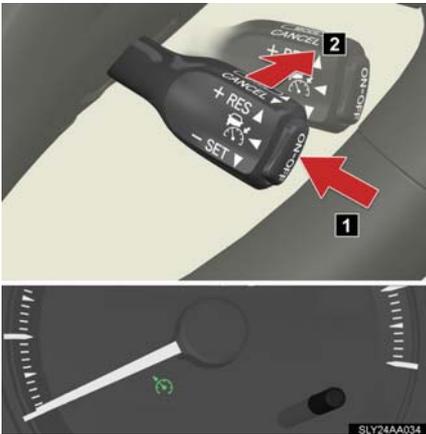

- 1** Press the “ON-OFF” button to activate the cruise control.  
Press the button again to deactivate the cruise control.  
Vehicle-to-vehicle distance control mode is always reset when the “POWER” switch is turned to ON mode.
- 2** Switch to constant speed control mode.  
(Push the lever forward and hold for approximately one second.)  
Constant speed control mode indicator will come on.  
Adjusting the speed setting:  
→P. 30  
Canceling and resuming the speed setting: →P. 31

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## LKA (Lane-Keeping Assist) (If Equipped)

While driving on a freeway or motor highway that has lane markers, this system recognizes the lanes using a camera as a sensor to assist the driver with staying in the lane. The LKA system has two functions.

### ► Lane departure warning function

If the system judges that the vehicle may deviate from its lane, it alerts the driver using rapid beeping, indications on the multi-information display, and a sensory warning\* given via the steering wheel.

\*: A slight steering torque is applied for a short period of time in the direction of the center of the lane.

### ► Lane keeping assist function

This function will be active when the vehicle-to-vehicle distance control mode of the cruise control is set with vehicle speed above approx. 45 mph (approx. 72 km/h) and while the lane departure warning function is active. When the lane keeping assist function is active, a slight steering torque will be applied, to help the driver maintain the vehicle inside the lane.

## ■ Turning the LKA system on

The lane departure warning function and lane keeping assist function will be activated depending on the recognition condition of lane markers, vehicle speed and the setting of radar cruise control (vehicle-to-vehicle distance control mode).




Press the "LKA" switch to activate the system.

"LKA" indicator will come on.

Press the switch again to turn the LKA system off.

## ■ Indication on the multi-information display

While the LKA system is on, the lane line display and steering wheel display (in case of lane keeping assist function) are shown on the multi-information display to inform that the LKA system is on.

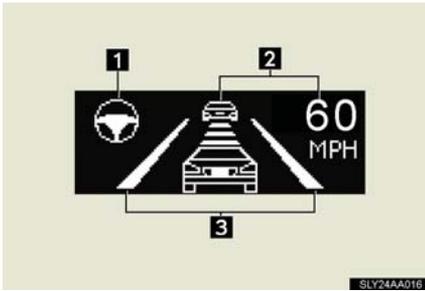

- 1** Steering wheel display  
The lane keeping assist function is active.
- 2** Dynamic radar cruise control display
- 3** Lane line display  
When thin lines are shown:  
A lane marker is not recognized by the system, or the LKA system functions are temporarily canceled.  
When solid lane lines are shown:  
The lane departure warning function is active.

## ■ Head-up Display (If Equipped)

The head-up display can be used to project vehicle speed and other information onto the windshield.



- 1** Head-up display  
Display brightness will change automatically according to the brightness of the surrounding area.
- 2** Turn-by-turn navigation switch  
Used to turn the turn-by-turn navigation on or off.
- 3** HUD (Head-up display) main switch
- 4** HUD (Head-up display) contrast adjustment switch  
Used to adjust the display brightness to the desired level.
- 5** HUD (Head-up display) position adjustment switch

## ■ Head-up display contents

In addition to the vehicle speed display (standard display), the following information will be displayed:



Vehicle speed display (standard display)

Displays the vehicle speed.



Audio display

Displays audio information for approximately 3 seconds when the audio system is operated.



Dynamic radar cruise control (if equipped)

Displays the approach warning message.



PCS (Pre-Collision System) (if equipped)

Indicates that there is a possibility of collision.



LKA (Lane keeping Assist) (if equipped)

Displays a warning message that alerts the driver of a deviation from the lane through use of the lane departure warning function.



Turn-by-turn navigation

Displays a notification of upcoming intersections during navigation system route guidance.



Touch tracer display

Displays the switch operation status when the steering switch is operated.

The head-up display may seem dark and hard to see when viewed through sunglasses, especially polarized sunglasses. Adjust the brightness of the head-up display or remove your sunglasses.

## Intuitive Parking Assist (If Equipped)


The distance to obstacles measured by the sensors is communicated via the display and a buzzer when parallel parking or maneuvering into a garage. Always check the surrounding area when using this system.

For details, refer to the "Navigation System Owner's Manual".

### Turning the system on and off



- 1 Press the menu switch
- 2 Press the "ENTER" switch upwards or downwards until the intuitive parking assist-sensor mark appears in the multi-information display.

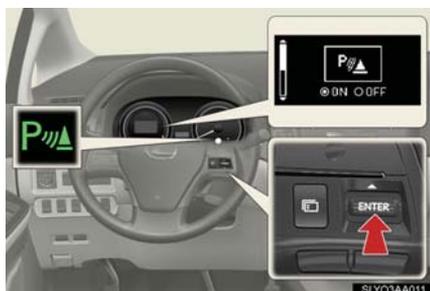

- 3 Press the "ENTER" switch to select "ON"

Each pressing of the switch turns the intuitive parking assist-sensor on and off.

## Wide View Front Monitor (If Equipped)

The wide view front monitor uses a super-wide angle lens to display on screen the areas to the left and right of the vehicle and the blind spots to the front of the vehicle. This system helps the driver check for approaching cars, bicycles and pedestrians when at intersections with poor visibility.





### ON/OFF

To display the front view, press the "VIEW" switch with the "POWER" switch in ON mode and vehicle speed at 7 mph (12 km/h) or less.

For details, refer to the "Navigation System Owner's Manual".


# Headlights

## U.S.A.

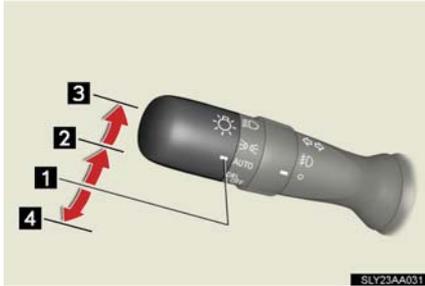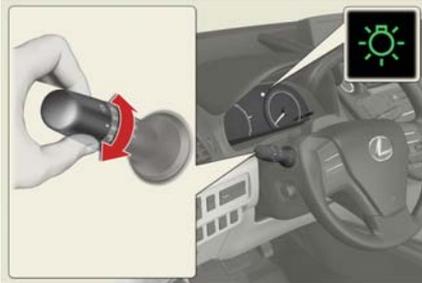


- 1** **AUTO** The headlights, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).
- 2**  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3**  The headlights and all the lights listed above turn on.
- 4**  The daytime running lights turn off.

## Canada

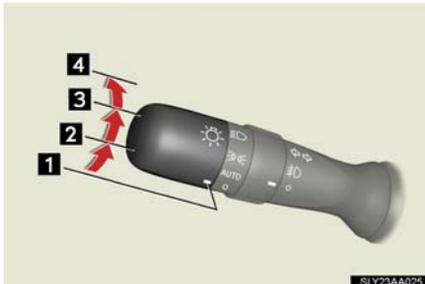

- 1**  The daytime running lights turn on.
- 2** **AUTO** The headlights, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).
- 3**  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 4**  The headlights and all the lights listed above turn on.

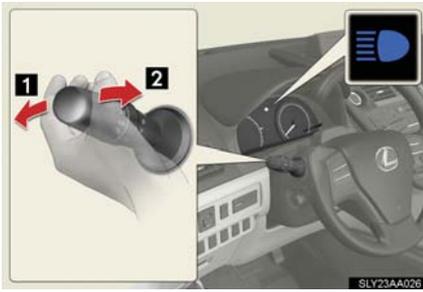

- 1 With the headlights on, push the lever away from you to turn on the high beams.  
When the light switch is in "AUTO" position, the Automatic High Beam system will be activated.  
Pull the lever toward you to the center position to turn the high beams off.
- 2 Pull the lever toward you and release it to flash the high beams once.  
You can flash the high beams with the headlights on or off.

### ■ AFS (Adaptive Front-lighting System) on and off (if equipped)

AFS (Adaptive Front-lighting System) secures excellent visibility at intersections and on curves by automatically adjusting the direction of the light axis of the headlights according to vehicle speed and the degree of the tire's angle as controlled by steering input. AFS operates at speeds of 6 mph (10 km/h) or higher.




- 1 Press the menu switch.  
The multi-information display will change modes to electronic feature control mode.
- 2 Press the "ENTER" switch upwards or downwards until AFS appears.





- 3 Press the "ENTER" switch to change to OFF.  
The "AFS OFF" indicator will come on.  
Each pressing of the switch turns AFS on and off.  
Press the menu switch to change to the normal display.

## Automatic High Beam (If Equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

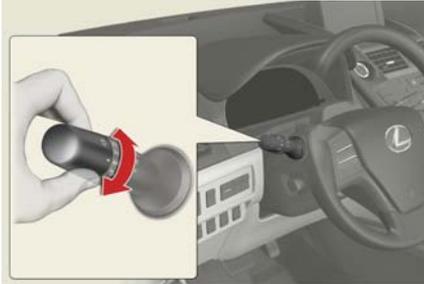

- 1 Turn the headlight switch to the "AUTO" position.

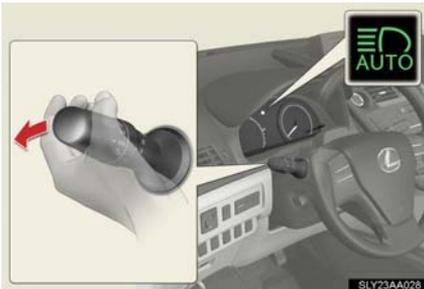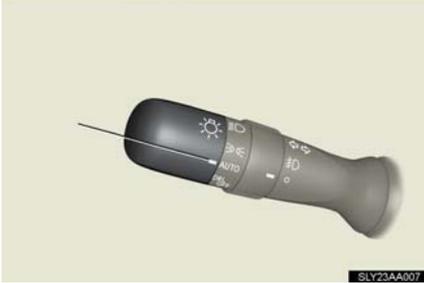

- 2 Push the lever away from you. The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

When all of the following conditions are fulfilled, high beam will be automatically turned on (after approximately 1 second):



- Vehicle speed is above approximately 20 mph (32 km/h).
- The area ahead of the vehicle is dark.
- There are no oncoming or preceding vehicles with headlights or tail lights turned on.

## Windshield Wipers and Washer


### Intermittent windshield wipers with interval adjuster (if equipped)



- 1  Intermittent windshield wiper operation
- 2  Low speed windshield wiper operation
- 3  High speed windshield wiper operation
- 4  Temporary operation

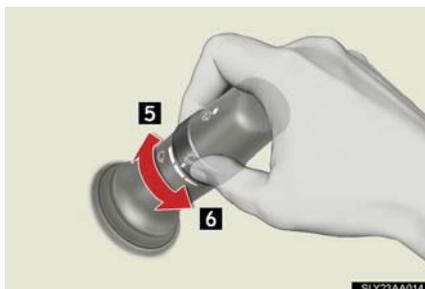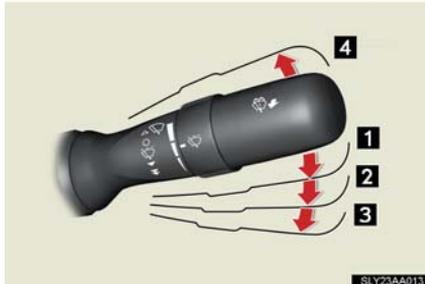

- 5 Increases the intermittent windshield wiper frequency
- 6 Decreases the intermittent windshield wiper frequency

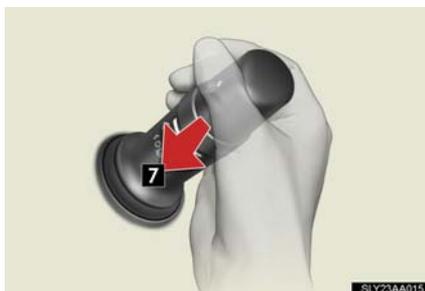


- 7 Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts. If the headlights are on, the headlight cleaners will operate once.


## Rain-sensing windshield wipers (if equipped)



- 1 **AUTO** Rain-sensing wiper operation
- 2 **▼** Low speed wiper operation
- 3 **▼** High speed wiper operation
- 4 **▲** Temporary operation

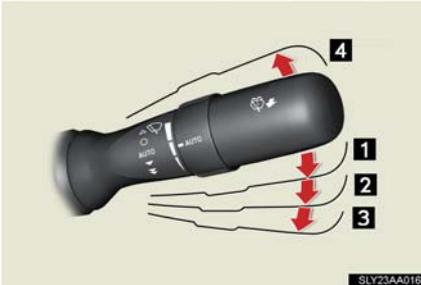

SLY23AA016

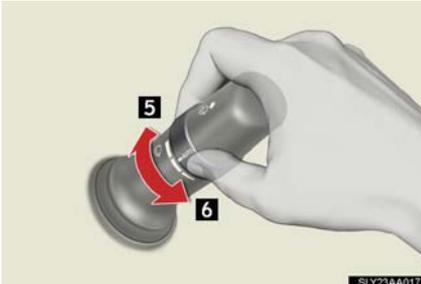

SLY23AA017

- 5 Increases the sensitivity
- 6 Decreases the sensitivity




SLY23AA018

- 7 **Washer/wiper dual operation**  
The wipers will automatically operate a couple of times after the washer squirts. (After operating several times, the wipers operate one more time after a short delay to prevent dripping.)  
If the headlights are on, the headlight cleaners will operate once.

## Remote Touch (If Equipped)


The Remote Touch can be used to operate the navigation screens and configure settings.

### Basic operation

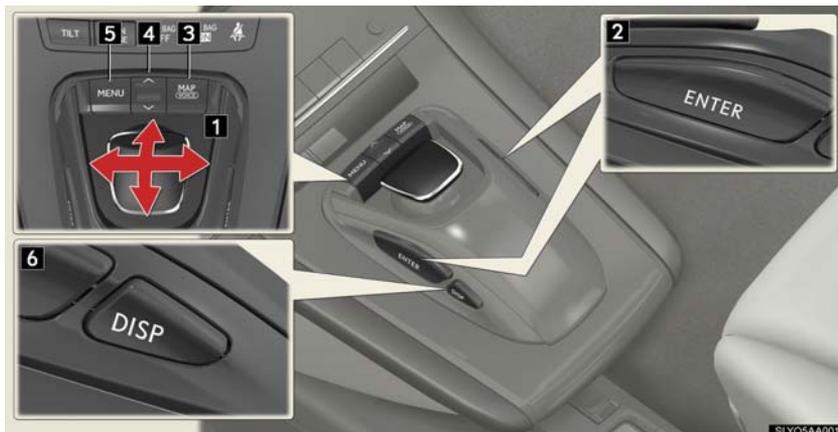

- 1** Remote Touch knob  
Use this knob to move the cursor and select items on the screen.  
Feedback force, pointer shape, and on or off of selection sounds can be changed. Refer to the "Navigation System Owner's Manual".
- 2** "ENTER" button  
Push this button to confirm a selection.
- 3** "MAP/VOICE" button  
Push this button to display the vehicle's current position.
- 4** "∧∨" button  
Push this button to change map scale and scroll through lists.
- 5** "MENU" button  
Push this button to display the "Start" (menu) screen.
- 6** "DISP" button  
Push this button to adjust picture quality.


## Start

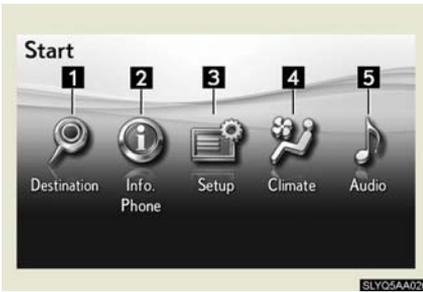

Push the "MENU" button on the Remote Touch to display the "Start" screen.


- 1 Destination
- 2 Info. Phone
- 3 Setup
- 4 Climate (→P.64)
- 5 Audio (→P.60)

## Display

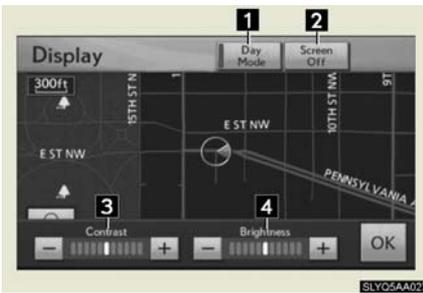


Push the "DISP" button on the Remote Touch to show the "Display" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on
- 2 Turns the screen off
- 3 Adjust contrast
- 4 Adjust brightness
- 5 Adjust color tone
- 6 Adjust color

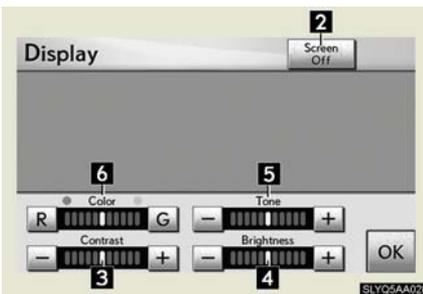

## Screen scroll operation

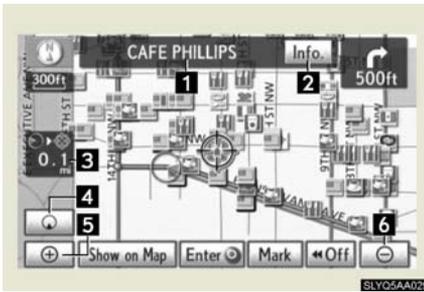


To scroll over the map, place the pointer in a position near the desired destination and then press and hold the “ENTER” button on the Remote Touch.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

## Setting a route

While route guidance is operating, you can change the route using the following method.

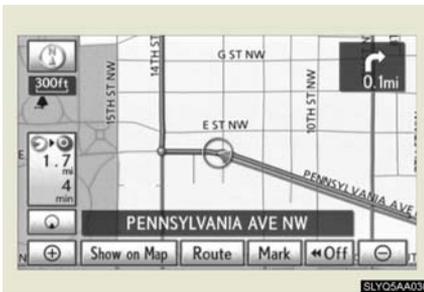

Select “Route”.

The following settings can be accessed

- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance



Some functions are unavailable while the vehicle is in motion. Refer to the “Navigation System Owner’s Manual”.

## Navigation System (If Equipped)

### Register home



- 1 Push the “MENU” button on the Remote Touch.  
Please refer to P.41 for the Remote Touch operation.




- 2 Select “Setup”.



- 3 Select “Navi.”.



- 4 Select “Home”.
- 5 Select “Set Home”.
- 6 Select “Address”.

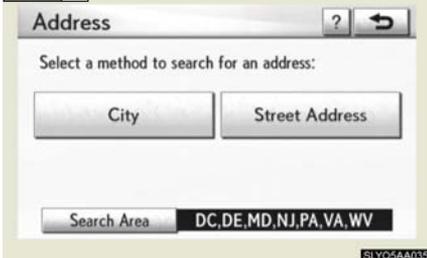**STEP 7**


- 7 Select "City".
- 8 Input a city name and select "OK".
- 9 Select the button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.
- 10 Input the street name and select "OK".
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select "OK".
- 13 Select "Enter".
- 14 Select "OK".

## Destination input — Search by address

### ► Select by city name

**STEP 1**


- 1 Push the "MENU" button on the Remote Touch.  
Please refer to P.41 for the Remote Touch operation.

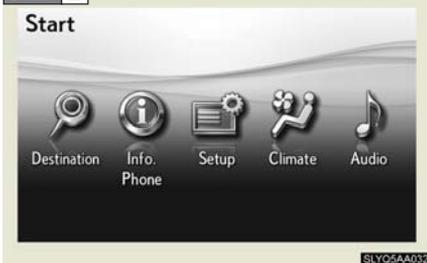**STEP 2**

- 2 Select "Destination".

**STEP 3**

- 3 Select "Address".

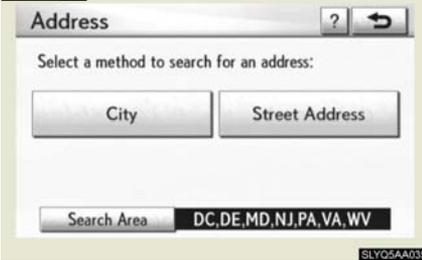**STEP 4**

4 Select "City".

**STEP 5**

5 Input a city name and select "OK".

6 Select the button of the desired city name from the displayed list.

7 Input the street name and select "OK".

8 When the desired street name is found, select the corresponding button.

9 Input a house number and select "OK".

10 Select "Go to".

11 Select "OK".

## Destination input — Search by address

### ► Select by street address


**STEP 1**

1 Push the "MENU" button on the Remote Touch.


Please refer to P.41 for the Remote Touch operation.

**STEP 2**


2 Select "Destination".

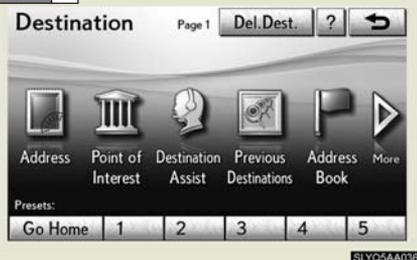**STEP 3**

3 Select "Address".

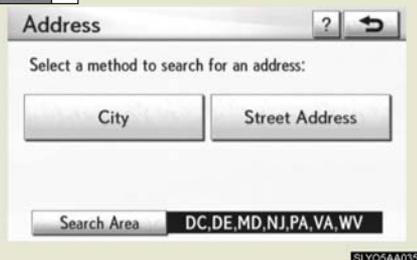**STEP 4**

4 Select "Street Address".

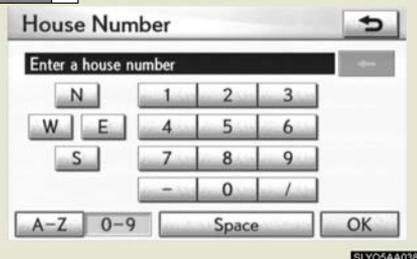**STEP 5**

5 Input a house number and select "OK".

6 Input the street name and select "OK".

7 When the desired street name is found, select the corresponding button.

8 Input a city name and select "OK".

9 Select the button of the desired city name from the displayed list.

10 Select "Go to".

11 Select "OK".

## Destination input — Search points of interest by name

**STEP 1**

1 Push the "MENU" button on the Remote Touch.

Please refer to P.41 for the Remote Touch operation.

STEP 2



SLY05AA032

2 Select "Destination".


STEP 3



SLY05AA036

3 Select "Point of Interest".

STEP 4

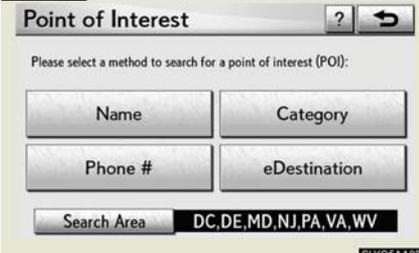

SLY05AA039

4 Select "Name".

STEP 5



SLY05AA040

5 Input the name of the point of interest and select "OK".

6 Select the button of the desired destination.

7 Select "Go to".

8 Select "OK".

## Destination input — Search points of interest by category

STEP 1




- 1 Push the "MENU" button on the Remote Touch.  
Please refer to P.41 for the Remote Touch operation.

STEP 2




- 2 Select "Destination".

STEP 3

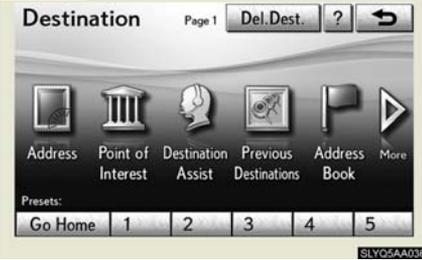

- 3 Select "Point of Interest".

STEP 4

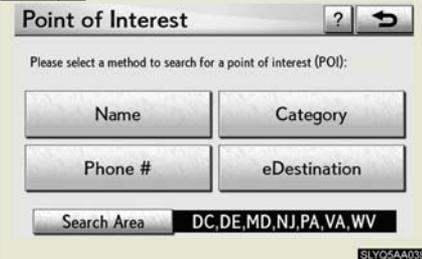

- 4 Select "Category".

**STEP 5**



- 5 Select "Near a Destination".
- 6 Select the button of the desired destination and set the search point.
- 7 Select the desired point of interest category.
- 8 Select the button of the desired item.
- 9 Select "Go to".
- 10 Select "OK".


## Destination input — Search points of interest by telephone number

**STEP 1**



- 1 Push the "MENU" button on the Remote Touch.  
Please refer to P41 for the Remote Touch operation.

**STEP 2**

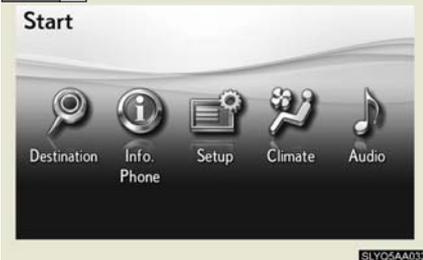

- 2 Select "Destination".

**STEP 3**



- 3 Select "Point of Interest".

STEP 4

Point of Interest ? ↩

Please select a method to search for a point of interest (POI):

Name Category

Phone # eDestination

Search Area DC,DE,MD,NJ,PA,VA,WV

SLY05AA039

4 Select "Phone #".

STEP 5

Phone # ↩

Enter a phone number

1 2 ABC 3 DEF

4 GHI 5 JKL 6 MNO

7 PQRS 8 TUV 9 WXYZ

0

OK

SLY05AA042

5 Input a telephone number and select "OK".

6 Select "Go to".

7 Select "OK".

# Hands-free System For Cellular Phone (with navigation system)

## Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.




To use a Bluetooth® phone, it is necessary to first register it in the system.


- 1 Push the "MENU" button on the Remote Touch.  
Please refer to P.41 for the Remote Touch operation.



- 2 Select "Setup".

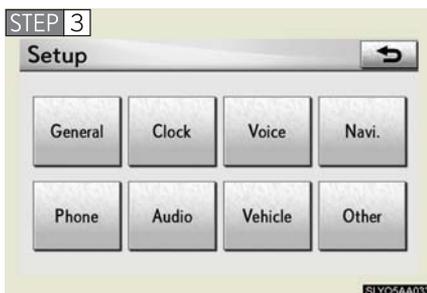

- 3 Select "Phone".

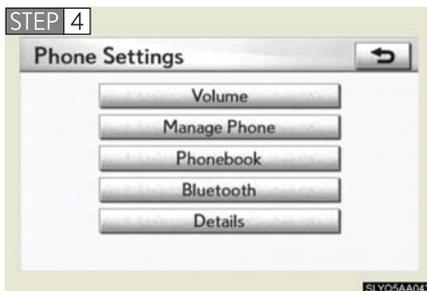

- 4 Select "Manage Phone".
- 5 Select "(add new)" to display the screen for connecting Bluetooth®.

**STEP 6**

- 6 Enter the passcode displayed on the screen into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 When the connection is completed, "Bluetooth connection successful." will appear and push the "MENU" button on the Remote Touch.

## Phonebook transfer

**STEP 1**

- 1 Push the "MENU" button on the Remote Touch.  
Please refer to P.41 for the Remote Touch operation.


**STEP 2**

- 2 Select "Setup".

**STEP 3**

- 3 Select "Phone".

**STEP 4**

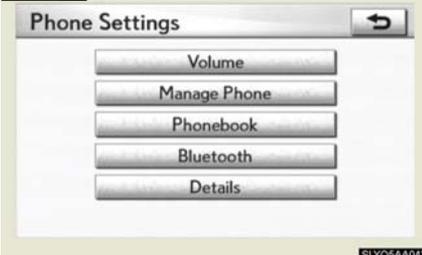

- 4 Select "Phonebook".
- 5 Select "Manage Contacts".
- 6 Select "Transfer Contacts".

**STEP 7**



- 7 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation

Phonebook transfer may not be possible depending on phone model.


## ■ Registering a voice tag

**STEP 1**



- 1 Push the "MENU" button on the Remote Touch. Please refer to P.41 for the Remote Touch operation.

**STEP 2**

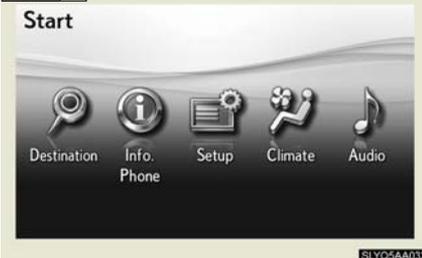


- 2 Select "Setup".

**STEP 3**

SLY05AA033

3 Select "Phone".

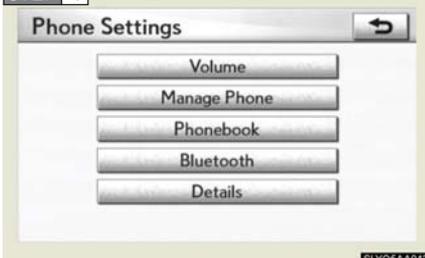**STEP 4**


SLY05AA043

4 Select "Phonebook".

5 Select "Manage Voice Tags".

6 Select "New Voice Tag".

7 Select the data you want to register.

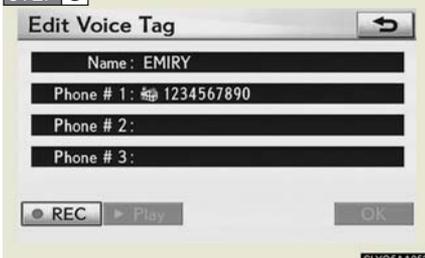**STEP 8**

SLY05AA053

8 Select "REC", and record a voice tag.

9 Select "OK".

## ■ Registering a speed dial

**STEP 1**

SLY11AA007

1 Push the "MENU" button on the Remote Touch.

Please refer to P.41 for the Remote Touch operation.

STEP 2



SLY05AA032

2 Select "Setup".

STEP 3



SLY05AA033

3 Select "Phone".

STEP 4



SLY05AA043

4 Select "Phonebook".

5 Select "Manage Speed Dials".

6 Select "New Speed Dial".

STEP 7



SLY05AA046

7 Select the data you want to register.

8 Select the desired phone number.

9 Select the button you want to register in.


10 The registration completion message is displayed on the screen.

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Navigation System Owner's Manual". Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)



1 Press .

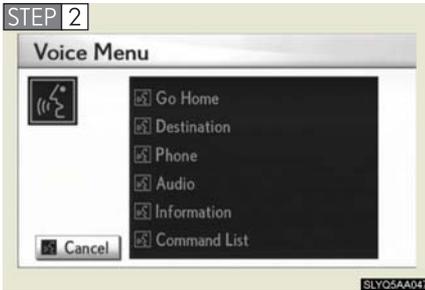

2 Follow the voice guidance and say "Phone".

3 Follow the voice guidance and say "Dial by name".



4 Follow the voice guidance and say a contact name.

5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).

6 Follow the voice guidance and say "Dial"



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial



1 Press 



2 Select "Speed Dials".



3 Select the desired number to call.

## ■ Receiving a call

### STEP 1



- 1 When a call is received, this screen is displayed with a sound.

### STEP 2



- 2 Push  on the steering wheel to talk on the phone.

To ignore the call, push  on the steering wheel.

## Audio System (with navigation system)

### Audio control screen

Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.41 for the Remote Touch operation.  
The "Start" screen will be displayed.



- 2 Using the Remote Touch, select "Audio" and press the "ENTER" button.

### Basic operation



- 1 Sound quality modes
- 2 Audio sources
  - AM·FM: AM radio/FM radio
  - SAT: Satellite radio
  - DISC: DVD player (if equipped)
  - CD: CD player (if equipped)
  - AUX: Auxiliary audio device/  
USB memory/iPod/  
Bluetooth® audio
- 3 Power/Volume

## Radio



- 1 Station presets
- 2 Scanning radio stations
- 3 Radio tune
- 4 Station select
- 5 Seek

### Entering station presets

- 1 Select the desired station by using the tune, seek or scan function.
- 2 Using the Remote Touch, select one of the preset switches (1-6), then press the “ENTER” button until a beep is heard, indicating that the station has been set.

## DVD player/CD player

### Playing an audio CD



- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Disc load
- 6 Track select/rewind/fast-forward
- 7 Eject

## ■ Playing a CD with MP3/WMA files



- 1 Disc select
- 2 Repeat play
- 3 Random playback
- 4 Search playback
- 5 Folder select
- 6 Disc load
- 7 File select
- 8 Eject

## ■ Playing a DVD (DVD player only)



- 1 Disc select
- 2 DVD operation
- 3 Image display (full screen)
- 4 Disc load
- 5 Chapter select
- 6 Eject

## ■ Loading a disc

- 1 Press the “LOAD” button.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.

## ■ Loading multiple discs

- 1 Press and hold the “LOAD” button until you hear a beep.
- 2 When the indicator changes from flashing amber to green, insert a disc after the disc slot door opens.
- 3 After inserting a disc, wait until the indicator changes from flashing amber to green, then insert the next disc after the disc slot door has opened.

Repeat 2 and 3 until you have inserted all discs.

To cancel the operation, press the “LOAD” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.


## ■ Operating an iPod



- 1 Menu
- 2 Pause/Playback
- 3 Repeat play
- 4 Random playback
- 5 Track list
- 6 Track select
- 7 Track select/rewind/fast-forward


## ■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

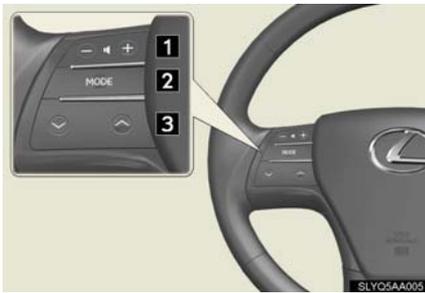

- 1 Volume
- 2 Power on/change mode: press  
Power off: press and hold
- 3 Radio mode: radio tuner  
DVD mode: track/chapter/disc select  
CD mode: disc/track/file (MP3/WMA)  
select  
iPod mode (if equipped): track select

# Air Conditioning System (with navigation system)

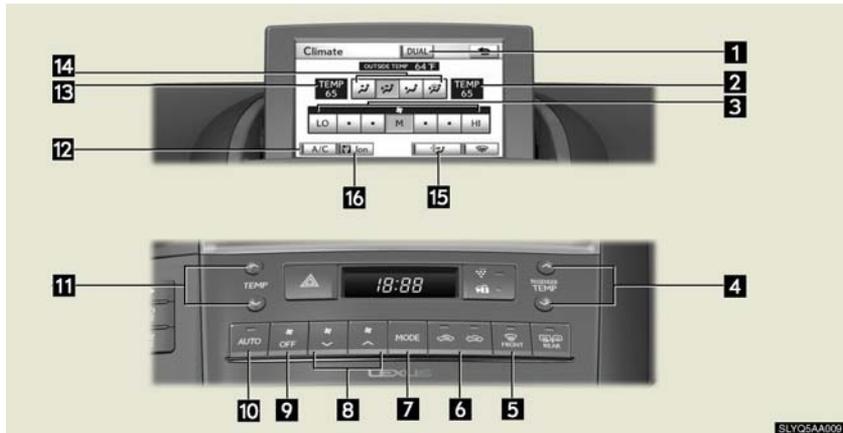

SLY05AA009

- |   |   |
|---|---|
| <b>1</b> Dual mode button                         | <b>9</b> "OFF" button   |
| <b>2</b> Passenger side temperature display       | <b>10</b> Automatic mode button                               |
| <b>3</b> Fan speed display                        | <b>11</b> Driver side temperature control                     |
| <b>4</b> Passenger side temperature control       | <b>12</b> Cooling and dehumidification function on/off button |
| <b>5</b> Windshield defogger                      | <b>13</b> Driver side temperature display                     |
| <b>6</b> Outside air/recirculated air mode button | <b>14</b> Air outlet display                                  |
| <b>7</b> Air outlet selector button               | <b>15</b> Micro dust pollen filter button                     |
| <b>8</b> Fan speed control button                 | <b>16</b> Plasmacluster™ button                               |

## ■ Using the automatic mode

Press **10** to turn on the airflow and **11** to adjust the temperature.

## ■ Adjusting the temperature

### ■ To simultaneously adjust the driver's side and passenger's side temperature settings

Select **1** to turn the "DUAL" indicator off and then press **11**.

### ■ To individually adjust the driver's side and passenger's side temperature settings

Select **1** or press **4** to turn the "DUAL" indicator on and then press **4** or **11**.

## Hands-free System For Cellular Phone (without navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name\*.

\*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .

 : Pressing this switch turns the voice command system on. Say a command after the beep.


### Calling by number



- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

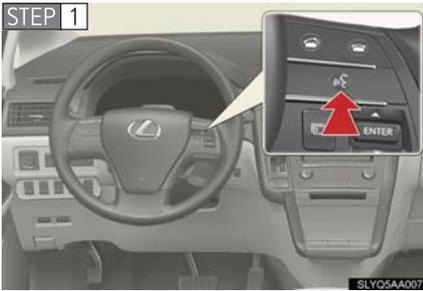

- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial



- 1 Press .



- 2 Press the desired preset button.
- 3 Press .

## ■ Phonebook transfer



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Changing the registered name



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Registering a speed dial



- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.


## Audio System (without navigation system)

### Basic operation



- 1 Power/Volume
- 2 Audio sources
  - AM•FM: AM radio/FM radio
  - SAT: Satellite radio
  - CD•AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

### Radio

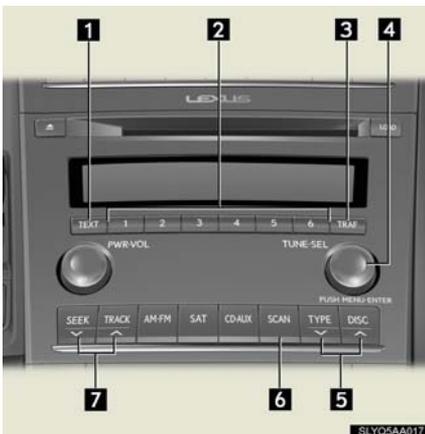


- 1 Text messages
- 2 Station presets
- 3 Traffic information
- 4 Radio tune
- 5 RDS genre select
- 6 Scanning radio stations
- 7 Seek

### Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.


## ■ CD player

### ■ Playing an audio CD

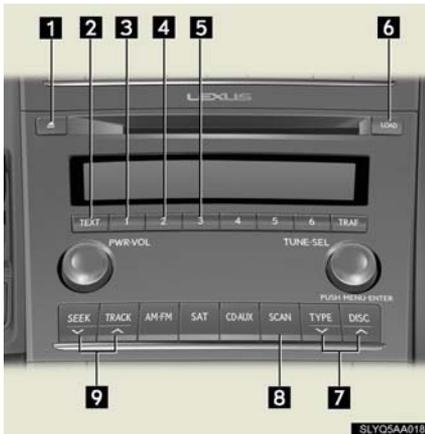

- 1 Eject
- 2 Text information
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Disc load
- 7 Disc select
- 8 Search playback
- 9 Track select/rewind/fast-forward

### ■ Playing a CD with MP3/WMA files

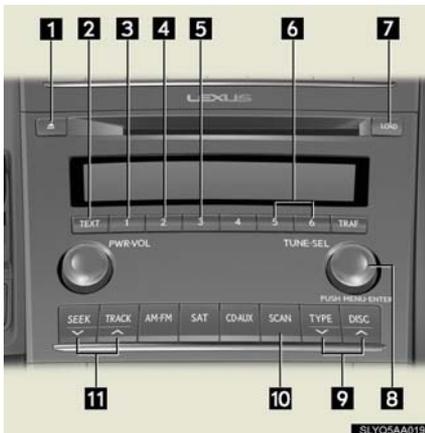

- 1 Eject
- 2 Text information
- 3 Random playback
- 4 Repeat play
- 5 Pause/Playback
- 6 Folder select
- 7 Disc load
- 8 File select
- 9 Disc select
- 10 Search playback
- 11 File select/rewind/fast-forwarding


### ■ Loading a CD

- 1 Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".

## ■ Loading multiple CDs

- 1 Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2 Insert a CD when the indicators on the slot turn from amber to green.  
The display changes from "WAIT" to "LOAD".  
The indicators on the slot turn to amber when the CD is inserted.
- 3 Insert the next CD when the indicators on the slot turn from amber to green again.  
Repeat the procedure for the remaining CDs.  
To cancel the operation, press the "LOAD" button. If you do not insert a CD within 15 seconds, loading will be cancelled automatically.


## ■ Operating an iPod

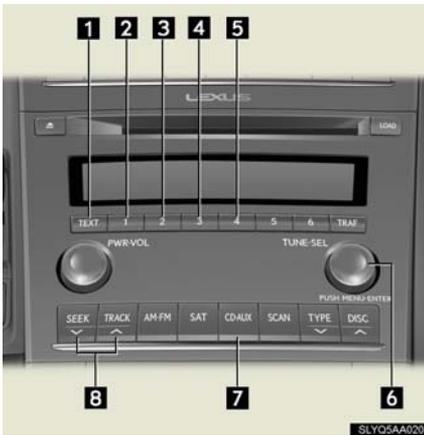

- 1 Text information
- 2 Random play
- 3 Repeat play
- 4 Pause/Playback
- 5 Go back
- 6 Menu/Track select
- 7 Playback
- 8 Track select/rewind/fast-forward


## ■ Remote control (steering wheel switches)

The audio system can be operated using the remote control located on the steering wheel.

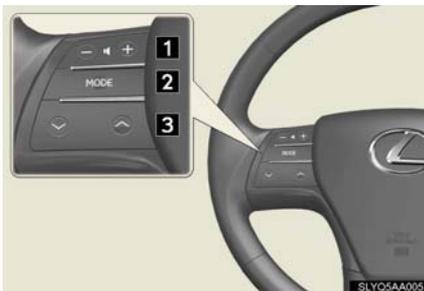

- 1 Volume
- 2 Power on/change mode: press  
Power off: press and hold
- 3 Radio mode: radio tuner  
CD mode: disc/track/file (MP3/WMA)  
select  
iPod mode (if equipped): track select

## Air Conditioning System (without navigation system)

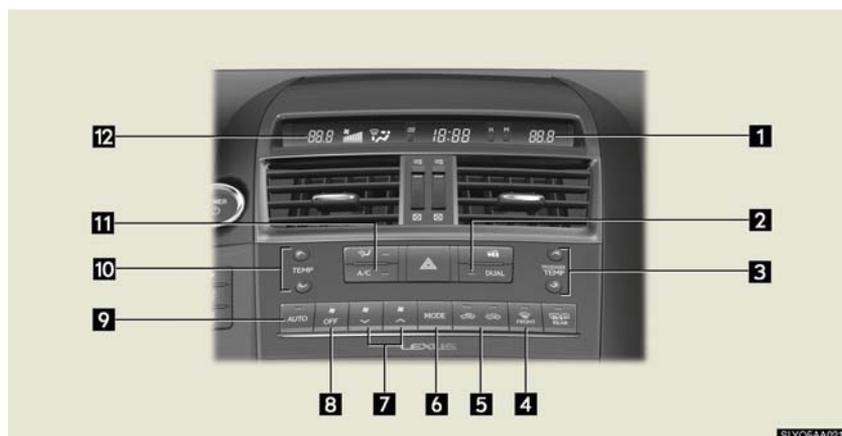

SLV05AA001

- |  |  |
|--|--|
| 1 Passenger side temperature display       | 7 Fan speed control button                             |
| 2 Dual mode button                         | 8 "OFF" button   |
| 3 Passenger side temperature control       | 9 Automatic mode button                                |
| 4 Windshield defogger                      | 10 Driver side temperature control                     |
| 5 Outside air/recirculated air mode button | 11 Cooling and dehumidification function on/off button |
| 6 Air outlet selector button               | 12 Driver side temperature display                     |

### Using the automatic mode

Press **9** to turn on the airflow and **10** to adjust the temperature.

### Adjusting the temperature

#### To simultaneously adjust the driver's side and passenger's side temperature settings

Press **2** to turn the "DUAL" indicator off and then press **10**.


#### To individually adjust the driver's side and passenger's side temperature settings

Press **2** or **3** to turn the "DUAL" indicator on and then press **10** or **3**.

# Voice Command System

## Basic operation

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

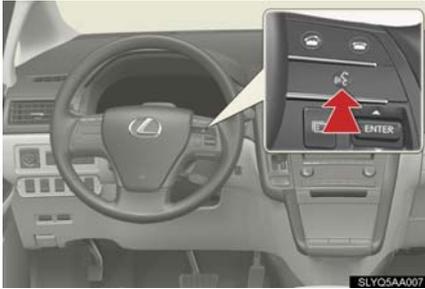

- 1 Press  on the steering wheel.
- 2 - If you know the command:  
Press  again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

Continue on to pages 74-78 for a detailed list of Voice Commands for the following categories:

PHONE .....	P.74, 76
DESTINATIONS .....	P.74
GENERAL NAVIGATION COMMANDS .....	P.75
AUDIO .....	P.77
XM INFORMATION.....	P.77
CLIMATE CONTROL/AIR CONDITIONING .....	P.78

### ■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press  at any time to interrupt the voice guidance.

## ■ Command list

### ► All vehicles

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

### ► With navigation system

DESTINATIONS				
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:	"Address" and then follow the prompts to enter city, state, street and house number		
To Enter a Point of Interest, SAY	A Point of Interest Category, Such As: "Dining", "Shopping Malls", "Police", "Gas", ETC.			
	"Destination" and then SAY:	"Point of Interest" and then SAY:	"Near Here"	And then follow the prompts
			"Along Route"	
			"Emergency"	
"Phone Number"				
To Enter a Previous Destination, SAY:	"Destination" and then SAY:	"Previous Destinations"		
To Enter/Go to Preset Destinations, SAY:	"Destination" and then SAY:	"Presets" and then SAY:	"Home" (HOME must already be set using manual controls)	
			"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)	

## GENERAL NAVIGATION COMMANDS

To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
	"North Up"
	"Heading Up"
To Change the Map Orientation, SAY:	"Map Direction"
	"Right Map North Up"
	"Right Map Heading Up"
To Change the Guidance Mode, SAY:	"Right Map Direction"
	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
To Save a Point on the Map, SAY:	"Freeway Mode"
	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

## GENERAL NAVIGATION COMMANDS

To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Final Destination Map"
	"Delete Next Destination"
	"Delete Final Destination"
To Operate Guidance Options, SAY:	"Delete All Destinations"
	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
To Operate the Traffic Information, SAY:	"Louder"
	"Softer"
To Operate the Traffic Information, SAY:	"Traffic Information"
To Show the Icon, SAY:	"Show GAS", "Show PARKING" ETC.

## PHONE

To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Send Tones"		NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Connect Phone" and then SAY:	"Select Phone"	
			"Add New Phone"	
			"Hands Free Power ON"	
			"Hands Free Power OFF"	

## AUDIO

To Turn Audio On or Off, SAY:	"Audio ON"				
	"Audio OFF"				
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD, CD Changer, DVD, DVD Changer, Bluetooth® Audio, iPod, USB Audio				
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"				
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"				
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"				
	"Type Up" or "Type Down"				
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:			"Select Channel Number"	
				"Select Channel Name" (English only)	
				"Select Channel Type" (English only)	
		"Command List" and then SAY:			
		"Seek Up" or "Seek Down"			
		"Type Up" or "Type Down"			

## XM INFORMATION

To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts

## XM INFORMATION

To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts

## CLIMATE CONTROL/AIR CONDITIONING

To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

## Portable Audio Device Adapters

These adapters can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Open the cover.



- 1** USB port
- 2** AUX port

## Garage Door Opener (If Equipped)


The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink<sup>®</sup> Universal Transceiver) is manufactured under license from HomeLink<sup>®</sup>.

### Programming the HomeLink<sup>®</sup> (for U.S.A. owners)


The HomeLink<sup>®</sup> compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

#### ► Overhead console type

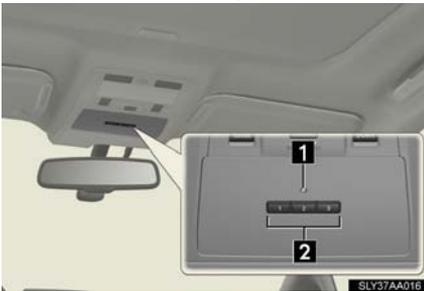

- 1 Indicator light
- 2 Buttons

#### ► Inside rear view mirror type

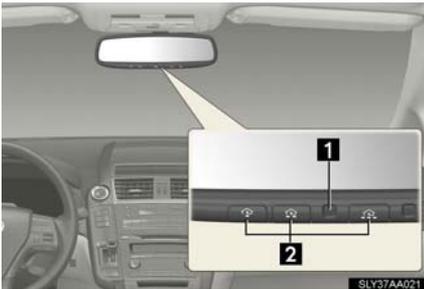


- 1 Indicator light
- 2 Buttons

## ■ Programming HomeLink®

### ► Overhead console type



### ► Inside rear view mirror type

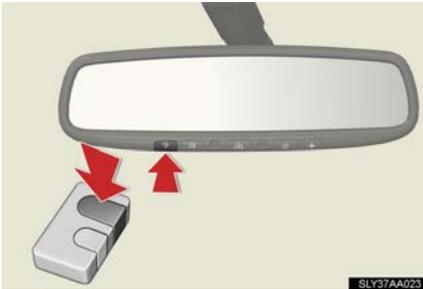

1 Hold your hand-held transmitter within 3 inches of the HomeLink® buttons.

2 Press and hold down the desired HomeLink® button.

3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

4 Press the training button on the motor-head unit in your garage.

5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

## ■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.


## ■ Operating HomeLink®

### ▶ Overhead console type



Press the appropriate HomeLink® button.  
The indicator light should come on.

### ▶ Inside rear view mirror type

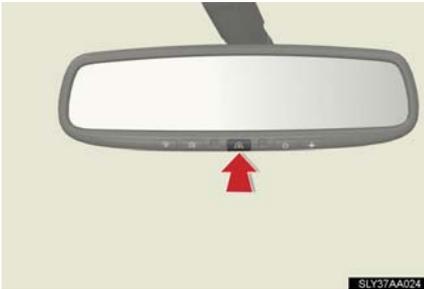


## Safety Connect

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

## ■ System components

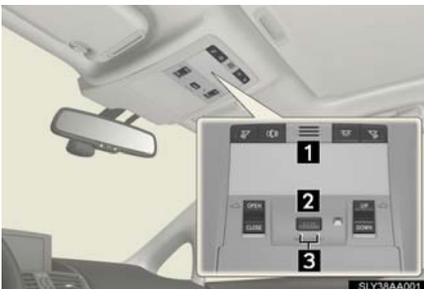

- 1 Microphone
- 2 "SOS" button
- 3 LED light indicators

## ■ Services

---

Subscribers have the following Safety Connect services available:

### ● Automatic Collision Notification\*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

### ● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

### ● Emergency Assistance Button (SOS)

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

### ● Enhanced Roadside Assistance

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

## Lexus Enform with Safety Connect (If Equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM<sup>®</sup> satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### Services

---

▶ **With an active Lexus Enform subscription, the following features are available:**

● **Safety Connect features (→P.81)**

- Automatic collision notification\*<sup>1</sup>
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced Roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com](http://www.lexus.com) and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● **XM<sup>®</sup> Sports and Stocks\*<sup>2</sup>**

XM<sup>®</sup> Sports and Stocks is a service included with XM<sup>®</sup> satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

● **XM NavWeather<sup>™</sup>\*<sup>3</sup>**

The subscription-based XM NavWeather<sup>™</sup> service allows the navigation system to display weather information on the map.

## ● XM<sup>®</sup> NavTraffic<sup>\*3</sup>

The subscription-based XM<sup>®</sup> NavTraffic service allows the navigation system to display traffic information on the map.

▶ **The following navigation-based Lexus Enform features are available without a subscription:**

### ● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

### ● Voice Command

The voice command system enables you to operate the navigation system, audio system and hands-free system by giving a command.

\*1: U.S. Patent No. 7,508,298 B2

\*2: Available at no extra charge with an active XM<sup>®</sup> satellite radio subscription.

\*3: Available via separate XM<sup>®</sup> subscription(s).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or push the "Destination Assist" button in your vehicle for further subscription details. XM<sup>®</sup> NavTraffic and XM NavWeather<sup>™</sup> require separate XM<sup>®</sup> subscription(s). XM<sup>®</sup> Sports and Stocks is available with an XM<sup>®</sup> Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM<sup>®</sup> subscription(s) to continue receiving these services.

## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


For details the entry function or wireless remote control (→P.14, 15)

### Door lock switches



- 1 Locks all the doors
- 2 Unlocks all the doors

### Inside lock button

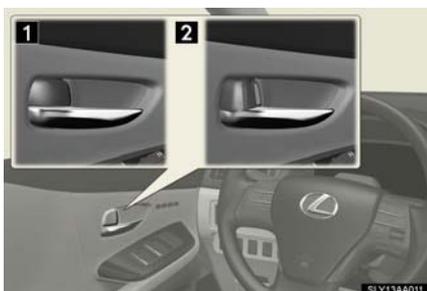

- 1 Locks the door
  - 2 Unlocks the door
- The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

### Rear door child-protector lock



The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

## Power Windows

### Power window switches



- 1 Closing
- 2 One-touch closing\*
- 3 Opening
- 4 One-touch opening\*

\*: Pushing the switch in the opposite direction will stop window travel partway.

### Window lock switch



Press the switch down to lock the passenger window switches.


The indicator will come on.

Use this switch to prevent children from accidentally opening or closing a passenger window.

The passenger windows can still be opened and closed using the power window switches on the driver's side even if the lock switch is on.

## Moon Roof


### Opening and closing

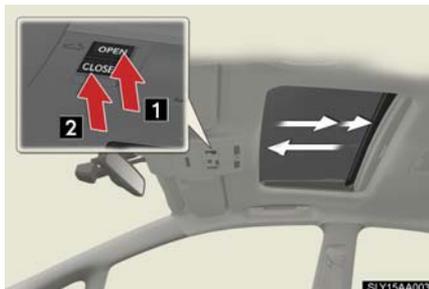

**1** Opens the moon roof\*  
The moon roof stops slightly before the fully open position to reduce wind noise. Press the switch again to fully open the moon roof.

**2** Closes the moon roof\*  
\*: Lightly press either of the moon roof switches to stop the moon roof part-way.

### Tilting up and down

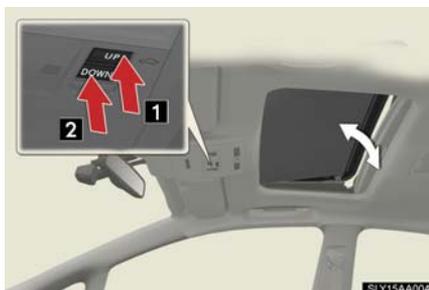

**1** Tilts the moon roof up\*

**2** Tilts the moon roof down\*  
\*: Lightly press either of the moon roof switches to stop the moon roof part-way.

## Fuel Tank Cap


### Before refueling the vehicle

Turn the "POWER" switch off and close all the doors and windows.


### Opening the fuel tank cap



- 1 Press the opener to open the fuel filler door.

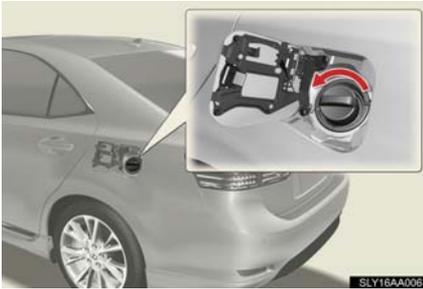

- 2 Turn the fuel tank cap slowly to open.

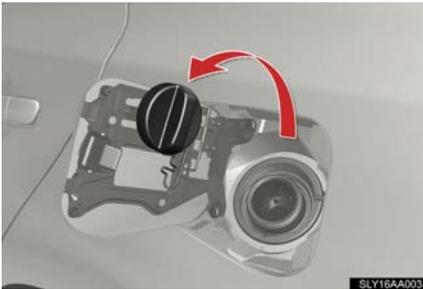

- 3 Hang the fuel tank cap on the back of the fuel filler door.

After refueling, turn the fuel tank cap until you hear a click. Once the cap is released, it will turn slightly in the opposite direction.

## What to do if...

### List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light



(Canada)

Stop the vehicle immediately.



Charging system warning light



High engine coolant temperature warning light (flashes or comes on)

Have the vehicle inspected immediately.



Brake system warning light



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

"ABS" warning light



(Canada)



Electric power steering system warning light



(Flashes)

"PCS" warning light (if equipped)



(Flashes)

"AFS OFF" indicator light (if equipped)



(comes on)

Slip indicator light



(Flashes)

"LKA" indicator light (if equipped)



(Flashes)

Cruise control indicator light



(Flashes)

Radar cruise control indicator light (if equipped)



(Flashes)

Automatic High Beam indicator light (if equipped)



(Flashes and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

## What to do if...

### Follow the correction procedures.



Open door warning light



Front passenger's seat belt reminder light



Low fuel level warning light



Master warning light



Driver's seat belt reminder light



Tire pressure warning light \*1

### See the Owner's Manual



Turn signal indicator



Cruise control indicator



Headlight indicator (U.S.A.)



Radar cruise control indicator (if equipped)



Tail light indicator (Canada)



"LKA" indicator (if equipped)



Headlight high beam indicator



"SET" indicator



Automatic High Beam indicator



Intuitive parking assist indicator (if equipped)



Front fog light indicator



"AFS OFF" indicator (if equipped)



"READY" indicator



Slip indicator



EV drive mode indicator



VSC OFF indicator



Eco Driving Indicator Light



"PCS" warning (if equipped)



"ECO MODE" indicator



SRS airbag on-off indicator



"PWR MODE" indicator

For further information, refer to the Owner's Manual.


\*1: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure.

\*2: When the "PCS" flashes quickly, "BRAKE!" will also be displayed.

## What to do if...

### If the electronic key does not operate properly

#### Unlocking and locking the doors

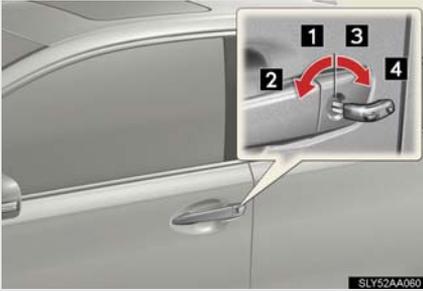

Use the mechanical key in order to perform the following operations (driver's door only):

- 1** Locks all the doors
- 2** Closes the windows and moon roof (turn and hold)\*
- 3** Unlocks the door  
Turning the key rearward unlocks the driver's door. Turning the key once again unlocks the other doors.
- 4** Opens the windows and moon roof (turn and hold)\*

\*: This setting must be customized at your Lexus dealer.

## What to do if...

### Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the “POWER” switch.  
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3 To change “POWER” switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the “POWER” switch. Modes can be changed each time the switch is pressed.  
To start the hybrid system: Press the “POWER” switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## What to do if...

### If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2010 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.