

Contents


The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Air Conditioning System (vehicles with a navigation system)	
Using the automatic mode.....	60
Adjusting the temperature.....	60
Air Conditioning System (vehicles without a navigation system)	
Using the automatic mode.....	73
Adjusting the temperature.....	73
Audio System (vehicles with a navigation system)	
Audio control screen.....	55
Basic operation.....	56
Radio.....	56
DVD player/CD player.....	57
Operating an iPod.....	59
Remote control (steering wheel switches).....	59
Audio System (vehicles without a navigation system)	
Basic operation.....	67
Radio.....	68
CD player.....	69
Operating an iPod.....	71
Remote control (steering wheel switches).....	72
Cruise Control.....	27
Door Locks.....	87
Dynamic Radar Cruise Control.....	29
Energy Monitor/Consumption Screen.....	12
Fuel Tank Cap.....	90
Garage Door Opener.....	81
Hands-free System For Cellular Phone (vehicles with a navigation system)	
Bluetooth® phone pairing.....	49
Phonebook transfer.....	50
Registering a voice tag.....	51
Registering a speed dial.....	52
Calling by name.....	53
Calling by speed dial.....	54
Receiving a call.....	55

Hands-free System For Cellular Phone (vehicles without a navigation system)	
Bluetooth® phone pairing	61
Calling by number	62
Calling by name.....	62
Calling by speed dial	63
Phonebook transfer	64
Changing the registered name	65
Registering a speed dial	66
Headlights	33
Hybrid System	10
Hybrid Transmission	21
Intuitive Parking Assist	32
Keys.....	15
Lexus Enform with Safety Connect.....	85
Moon Roof.....	89
Multi-information Display	25
Navigation System	
Register home	43
Destination input - Search by address	44
Destination input - Search points of interest by name.....	46
Destination input - Search points of interest by category.....	47
Destination input - Search points of interest by telephone number	48
Portable Audio Device Adapters.....	80
Power (Ignition) Switch.....	19
Power Windows.....	88
Remote Touch.....	40
Rear Window Wiper and Washer	39
Safety Connect	83
Smart Access System with Push-button Start.....	16
Theft Deterrent System	18
Turn Signal Lever	26
Voice Command System	
Basic operation	74
Command list	75
Windshield Wipers and Washer	35

Overview

Instrument Panel

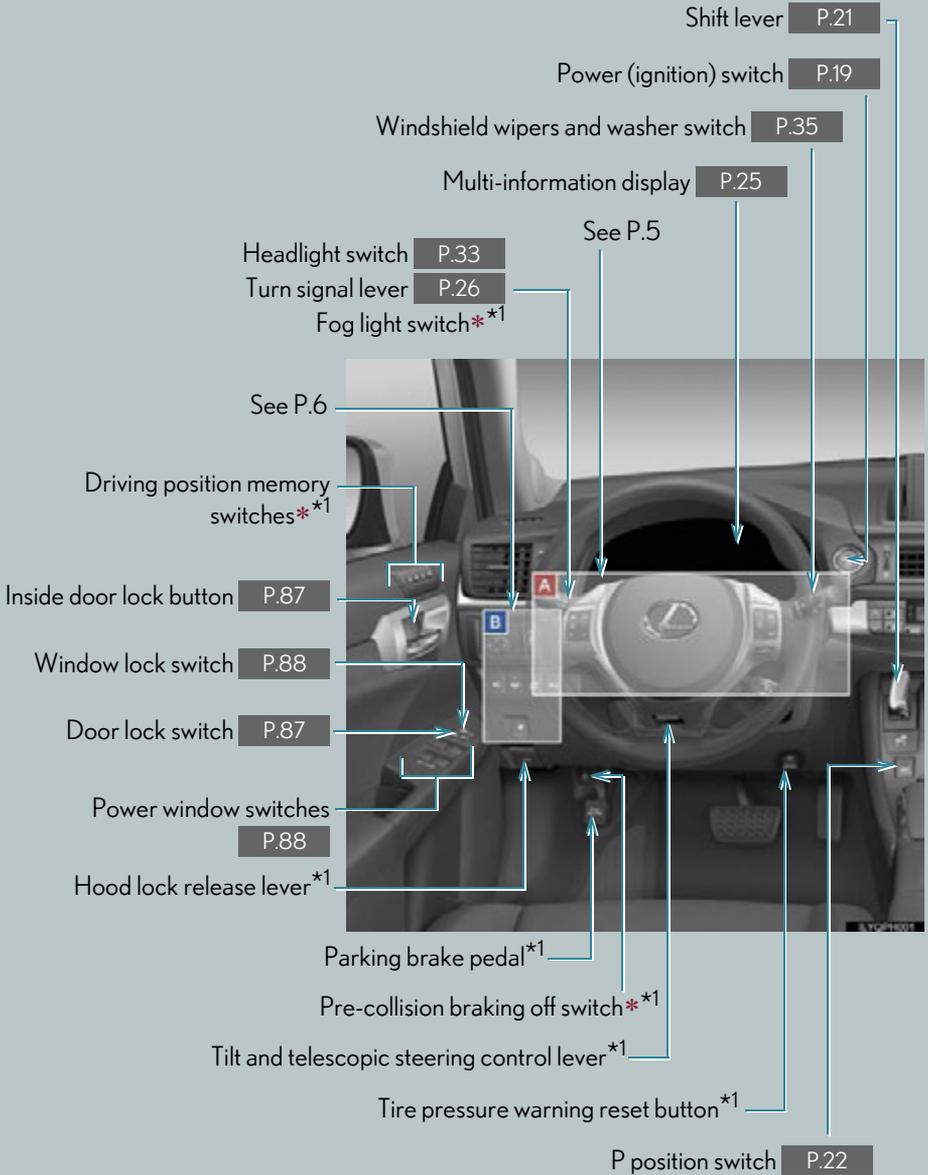

Rear window and outside rear view mirror
defoggers switch *2, *3


Audio system P.55, 67

Air conditioning system P.60, 73

Clock *2, *3

See P.7

Security indicator P.18

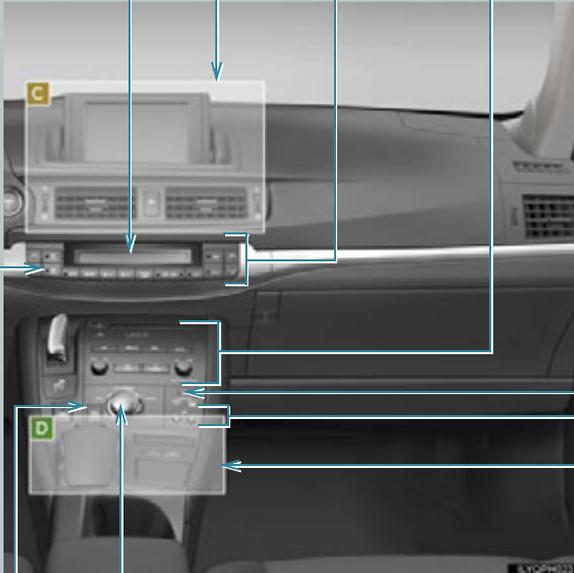

Seat heater switches * *1

See P.8

Driving mode select switch P.23

EV drive mode switch P.24

*: If equipped

*1: Refer to "Owner's Manual".

*2: For vehicles without a navigation system, refer to the "Owner's Manual".

*3: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

A

Audio remote control switches
P.59,72

Telephone switches*^{*2, *3}

Talk switch*^{*2, *3}

"DISP" button P.25




Horn*^{*1}

Cruise control switch* P.27

Dynamic radar cruise control switch*
P.29

Vehicle-to-vehicle distance button* P.31

B

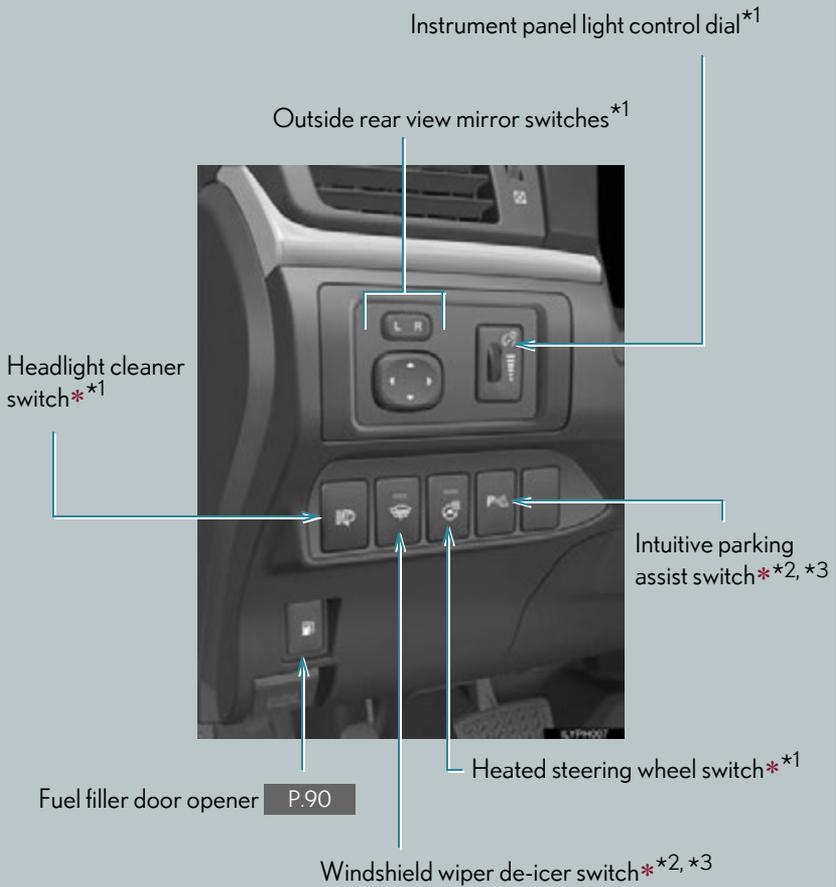

*: If equipped


*¹: Refer to "Owner's Manual".

*²: For vehicles without a navigation system, refer to the "Owner's Manual".

*³: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".


C

Without navigation system

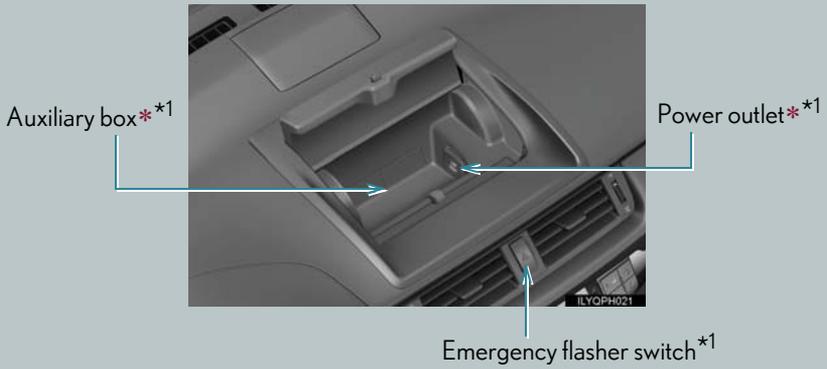


With navigation system

Navigation system*
P.43

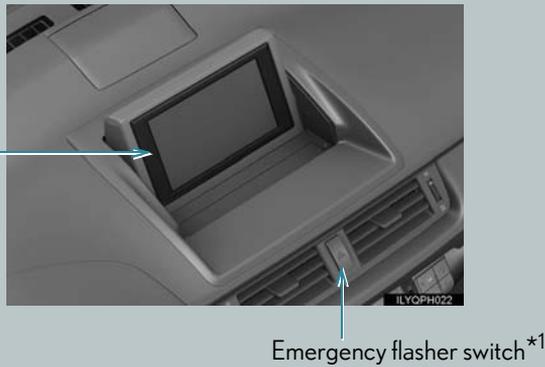


D

Without navigation system

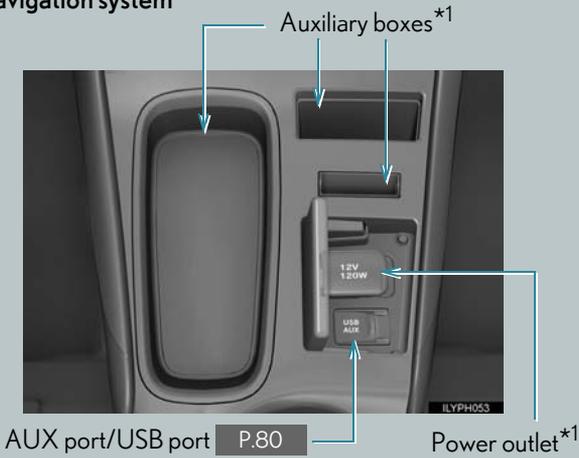

With navigation system

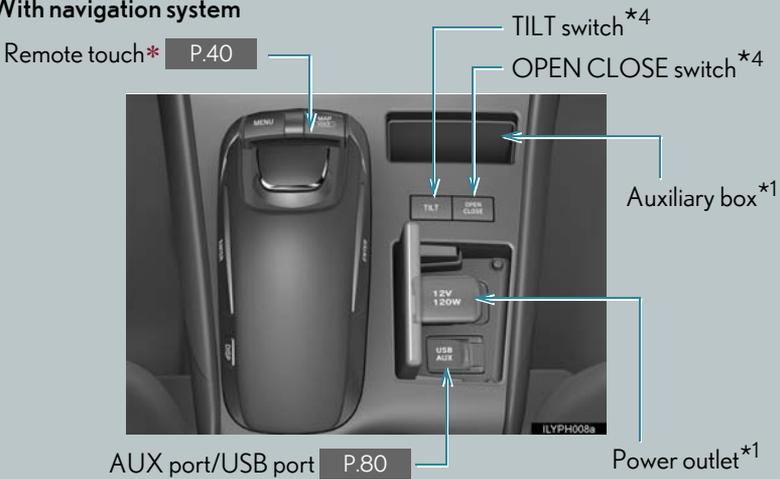

*: If equipped

*1: Refer to "Owner's Manual".

*4: Refer to the "Navigation System Owner's Manual".


Overview

Roof

Moon roof switches* P.89

"SOS" button* P.83

Garage door opener switches* P.81

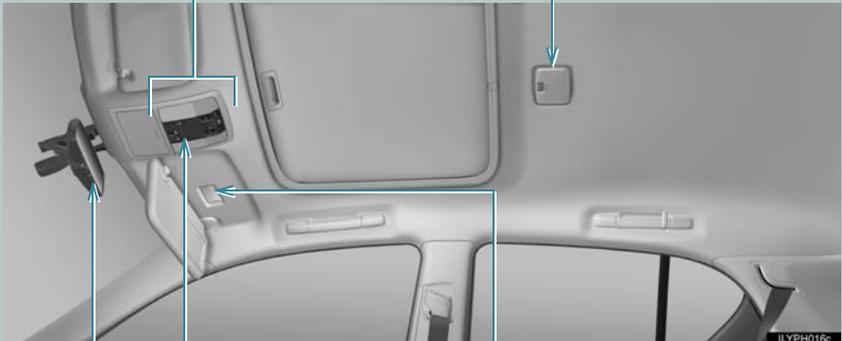

Interior light*1

Vanity lights*1

Interior lights*1
Personal lights*1

Compass*1*1

*: If equipped

*1: Refer to "Owner's Manual".


Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "Owner's Manual".

Hybrid System Indicator

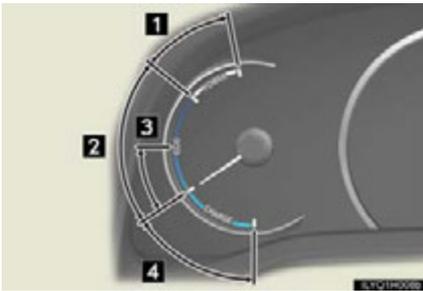

- 1** Power area
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- 2** Eco area
Shows that the vehicle is being driven in an Eco-friendly manner.
- 3** Hybrid Eco area
Shows that gasoline engine power is not being used very often.
The gasoline engine will automatically stop and restart under various conditions.
- 4** Charge area
Shows that energy is being recovered via the regenerative brake.

- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration* status. Regenerated energy will be used to charge the battery.

*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

■ Charging the hybrid battery (traction battery)

When shift position N is selected, the hybrid battery (traction battery) will not be charged. Thus, select P when the vehicle is stopped.

In addition, when driving in heavy traffic, use D or B.

■ Regenerative braking

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released while driving with the shift position in D or B.
- The brake pedal is depressed while driving with the shift position in D or B.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sounds or vibration even though the vehicle is able to move. For safety, apply the parking brake and make sure to shift the shift position to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Other sounds, such as motors and mechanical noises, may be heard from the brake system when the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the side of rear right seat-back.

■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start.

(The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.1 gal. [11.8 L, 2.6 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

Energy Monitor/Consumption Screen

You can view the status of your hybrid system on the multi-information display and the navigation system screen.

Energy monitor

The energy monitor can be displayed on both the navigation system screen and the multi-information display.

- How to display on the navigation system screen (if equipped):


Press the "MENU" button on the Remote Touch, and select "Info. Phone" after that select "Fuel consumption".

If the "Consumption" or "Past Record" screen is displayed, select "Energy" and press the "ENTER" button on the Remote Touch.

Please refer to P.40 for the Remote Touch operation.

- How to display on the multi-information display:

Press the "DISP" button on the steering wheel several times to select the energy monitor display.

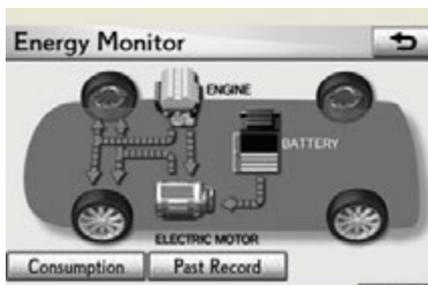

- The flow of energy is displayed on the navigation system screen.

Amber: gasoline energy

Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.



- The flow of energy is indicated by the movement of the arrows on the multi-information display.


The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

■ Consumption (vehicles with a navigation system)

Press the "MENU" button on the Remote Touch and select "Info. Phone", after that select "Fuel consumption" and press the "ENTER" button on the Remote Touch.

If the "Consumption" screen does not appear, select "Consumption" and press the "ENTER" button on the Remote Touch.

Please refer to P.40 for the Remote Touch operation.

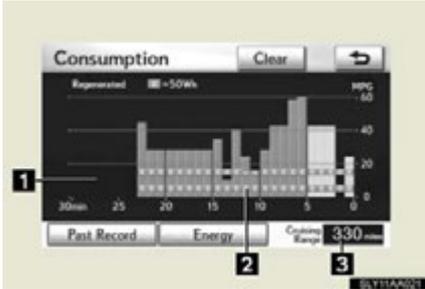


- 1 Fuel consumption in the past 30 minutes
- 2 Regenerated energy in the past 30 minutes
One symbol indicates 50 Wh. Up to 4 symbols are shown.
- 3 Cruising range

■ Past record (vehicles with a navigation system)

Press the "MENU" button on the Remote Touch and select "Info. Phone", after that select "Fuel consumption" and press the "ENTER" button on the Remote Touch.

If the "Past Record" screen does not appear, select "Past Record" and press the "ENTER" button on the Remote Touch.


Please refer to P.40 for the Remote Touch operation.

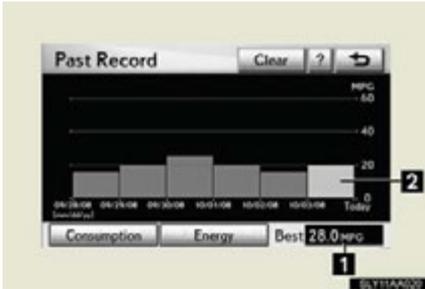

- 1 Best past fuel consumption
- 2 Average fuel consumption
Displays the average fuel consumption between each reset of the total average fuel consumption on the multi-information display.
When resetting, if the total average fuel consumption is better than the best past fuel consumption, the best past fuel consumption will be updated.

■ Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

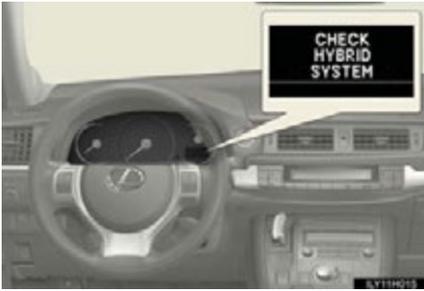

If a warning message is shown on the multi-information display, read the message and follow the instructions.

Keys

Electronic key



Smart access system with push-button start (→P:16)

Wireless remote control (→P:16)

*: If equipped

Mechanical key




Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

■ Wireless remote control

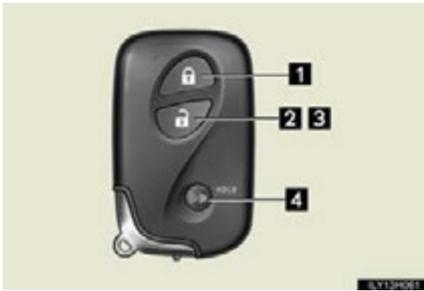


- 1 Locks all the doors
 - 2 Unlocks all the doors
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
 - 3 Opens the windows (press and hold)*
 - 4 Sounds the alarm (press and hold)
- *: This setting must be customized at your Lexus dealer.

■ Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.
For details on starting the hybrid system, see page 19.

■ Entering the vehicle

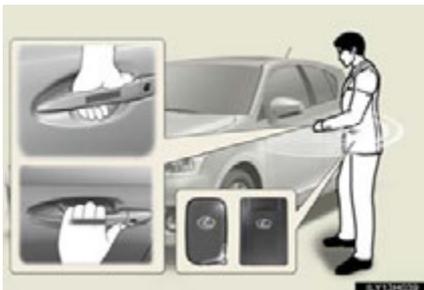

Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

■ Exiting the vehicle



Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

■ Unlocking and locking the back door



Press the unlock button to unlock all the doors.

The doors cannot be unlocked for 3 seconds after the doors are locked.



Press the lock button to lock all the doors.

For details on what to do when the electronic key does not operate properly, see page 93.

Theft Deterrent System

■ Immobilizer system



The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

■ Alarm

The system sounds the alarm and flashes the lights when forced entry is detected.

To set the alarm: Close the doors and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

To deactivate or stop the alarm:

- Unlock the doors
- Turn the "POWER" switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes "POWER" switch modes.

Starting the hybrid system



- 4] Check that the "READY" indicator is on.

If the "READY" indicator changes from a flashing light to a solid light and the buzzer sounds, the hybrid system is starting normally.

The vehicle will not move when the "READY" indicator is off.

The vehicle can move when the "READY" indicator is on even if the engine is stopped. (The gasoline engine starts or stops automatically in accordance with the state of the vehicle.)

- 1] Check that the parking brake is set.

- 2] Firmly depress the brake pedal.

Check that the "POWER" switch indicator turns green. If the indicator does not turn green, the hybrid system cannot be started.

When the shift position is N, the hybrid system cannot start. Shift the shift position to P, when starting the hybrid system. (→P.22)

- 3] Press the "POWER" switch.

Continue depressing the brake pedal until the hybrid system is completely started.

The hybrid system can be started from any "POWER" switch mode.

■ Stopping the hybrid system

- 1 Stop the vehicle completely.
- 2 Set the parking brake.
- 3 Shift the shift position to P.
Check that the shift position indicator shows P.
- 4 Press the “POWER” switch.
The hybrid system will stop, and the meter display will be extinguished (the shift position indicator will be extinguished a few seconds after the meter display).
- 5 Slowly release the brake pedal and check that the indicator on the “POWER” switch is off.

■ Changing “POWER” switch modes

Modes can be changed by pressing the “POWER” switch with the brake pedal released. (The mode changes each time the switch is pressed.)



- 1 Off
The emergency flashers can be used.
- 2 ACCESSORY mode
Some electrical components such as the audio system can be used.
The “POWER” switch indicator turns amber.
- 3 ON mode
All electrical components can be used.
The “POWER” switch indicator turns amber.

Hybrid Transmission

Shifting the shift lever



1 Shift lever

Operate the shift lever gently and ensure correct shifting operation.



When shifting to the D or R positions, move the shift lever along the shift gate.



To shift to the N position, slide the shift lever to the left and hold it. The shift position will change to N.



Shifting to B is only possible when shift position D is selected.



The shift lever will always return to this original position after a shifting operation.

When shifting from P to N, D or R, from D to R, or from R to D, ensure that the brake pedal is being depressed and the vehicle is stationary.

2 Shift position indicator

The current shift position is illuminated.

When any shift position other than D or B is selected, the arrow toward B disappears from the shift position indicator.

When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.

■ Shift position purpose

Shift position	Function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving*
B	Applying engine braking or strong braking when the accelerator pedal has been released on steep downward slopes etc.

*: For good fuel economy and noise reduction, the D position should usually be used.

■ P position switch

■ When shifting the shift position to P



Fully stop the vehicle and set the parking brake, and then press the P position switch. When the shift position is changed to P, the switch indicator comes on. Check that the P position is illuminated on the shift position indicator.

■ Shifting the shift position from P to other positions

- While depressing the brake pedal firmly, operate the shift lever. If the shift lever is operated without depressing the brake pedal, the buzzer will sound and the shifting operation will be disabled.
- When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.
- The shift position cannot be changed from P to B directly.

■ Selecting a driving mode

The following modes can be selected to suit driving conditions:



1 Normal mode

2 Eco drive mode

The torque generated in response to accelerator pedal depression will lessen compared to normal, and air conditioning operation (heating/cooling) will be restrained, thus suiting driving with improved fuel efficiency.

When the driving mode select switch is turned left, the “ECO MODE” indicator comes on in the instrument cluster.

Press the switch to change the driving mode to normal mode.

3 Sport mode

Use when high levels of response and feeling are desirable, such as when driving in mountainous regions or when overtaking.

When the driving mode select switch is turned right, the “SPORT MODE” indicator comes on in the instrument cluster.

Press the switch to change the driving mode to normal mode.

■ EV drive mode

In EV drive mode, the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.



Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

■ Situations in which EV drive mode cannot be turned on

It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.
The vehicle has been left in temperatures lower than about 68°F (20°C) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.
An "Energy Monitor" display of level 3 or lower may indicate a low battery level.
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

Multi-information Display

The multi-information display presents the driver with a variety of driving-related data including the warning messages.

Display contents



- Energy monitor
- Trip information
 - Current fuel consumption/Average fuel consumption after refueling
 - Average fuel consumption
 - Cruising range
 - Elapsed time
 - Average vehicle speed
- Instrument cluster setting
- Intuitive parking assist display (if equipped)
- Dynamic radar cruise control display (if equipped)
- Warning messages



Switching the display



Items displayed can be switched by pressing the “DISP” button.

- When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


Turn Signal Lever

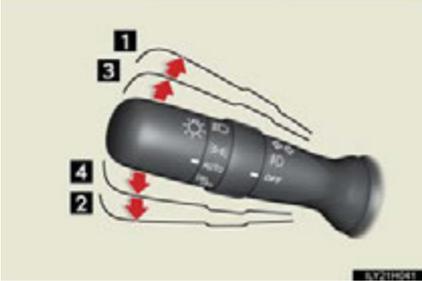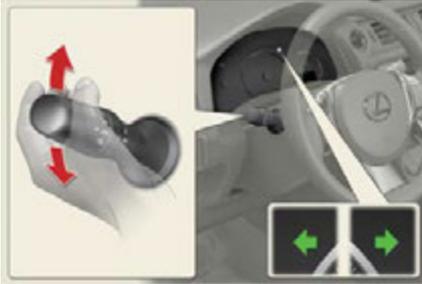

- 1 Right turn
- 2 Left turn
- 3 Lane change to the right (push and hold the lever partway)
The right hand signals will flash until you release the lever.
- 4 Lane change to the left (push and hold the lever partway)
The left hand signals will flash until you release the lever.

Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

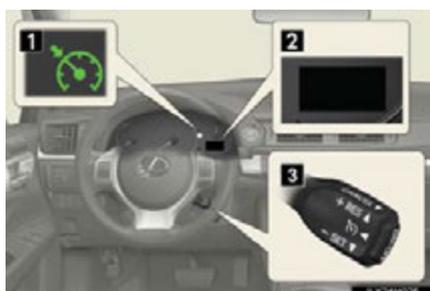

- 1 Indicators
- 2 Display
- 3 Cruise control switch

Setting the vehicle speed



- 1 Press the "ON-OFF" button to activate the cruise control.

Cruise control indicator will come on. Press the button again to deactivate the cruise control.




- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.



■ Adjusting the set speed

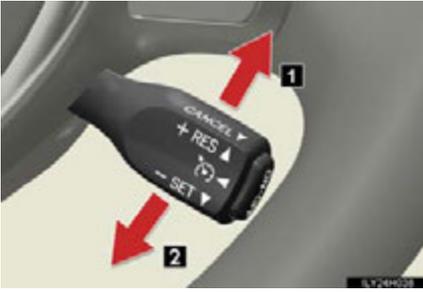

- 1** Increases the speed
- 2** Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.


■ Canceling and resuming the constant speed control



- 1** Pulling the lever toward you cancels the constant speed control.
The speed setting is also canceled when the brakes are applied.
- 2** Pushing the lever up resumes the constant speed control.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Dynamic Radar Cruise Control (if equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

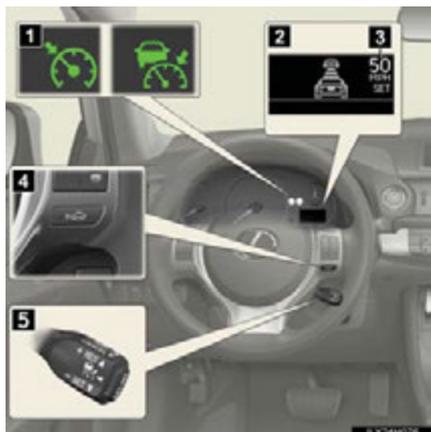

- 1 Indicators
- 2 Display
- 3 Set speed
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)



- 1 Press the “ON-OFF” button to activate the cruise control.

Rader cruise control indicator will come on.


Press the button again to deactivate the cruise control.

- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

“SET” will be displayed.


The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

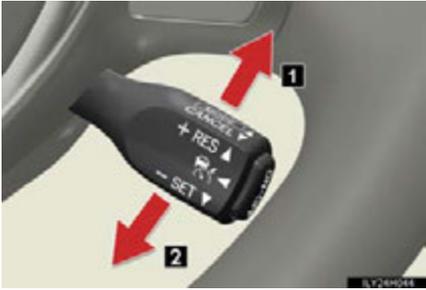

- 1** Increases the speed
 - 2** Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

■ Changing the vehicle-to-vehicle distance

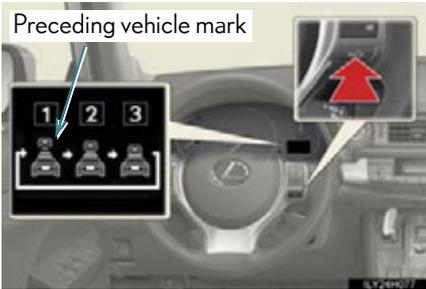

Pressing the button changes the vehicle-to-vehicle distance as follows:

- 1** Long
- 2** Medium
- 3** Short

The vehicle-to-vehicle distance is set automatically to long mode when the "POWER" switch is turned to ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

■ Canceling and resuming the constant speed control




- 1** Pulling the lever toward you cancels the constant speed control.
The speed setting is also canceled when the brakes are applied.
- 2** Pushing the lever up resumes the constant speed control.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

■ Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, touch screen and a buzzer. Always check the surrounding area when using this system.


■ Turning the system on and off

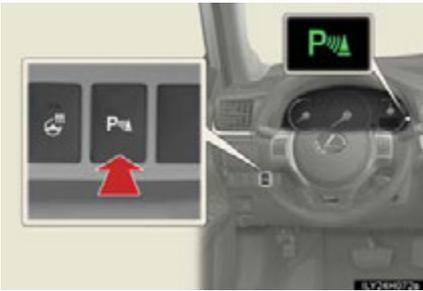

Turns the intuitive parking assist on/off
When on, the indicator light comes on to inform the driver that the system is operational.


Headlights

Type A

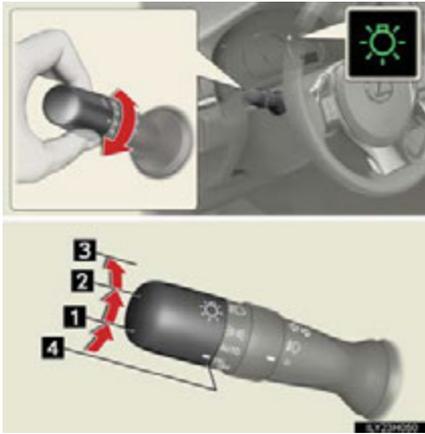


- 1 AUTO** The headlights, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).
- 2**  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3**  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4**  The daytime running light turn off.

Type B

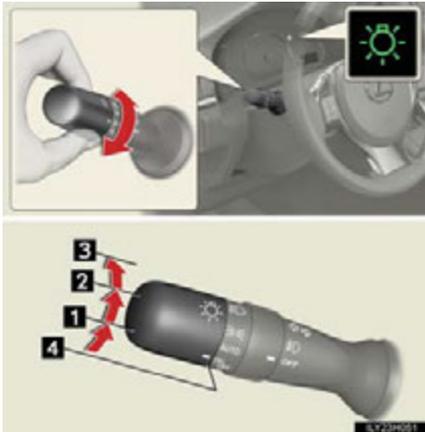


Type C

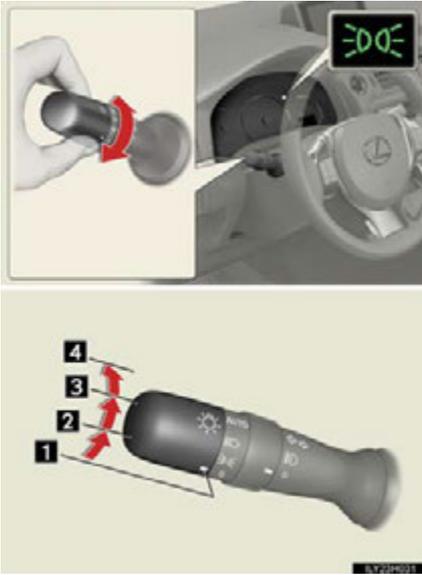

- 1**  The daytime running lights turn on.
- 2**  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3**  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4** **AUTO** The headlights, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).

■ Turning on the high beam headlights

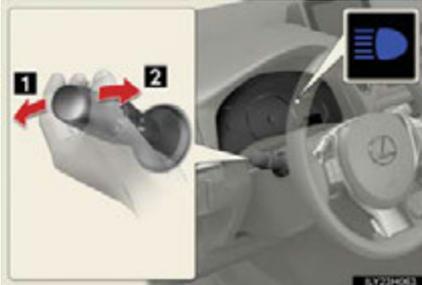

- 1** With the headlights on, push the lever away from you to turn on the high beams.
Pull the lever toward you to the center position to turn the high beams off.
- 2** Pull the lever toward you and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.




Windshield Wipers and Washer

■ Intermittent windshield wipers with interval adjuster (if equipped)

The wiper operation is selected by moving the lever as follows.

When intermittent windshield wiper operation is selected, wiper intervals can be also adjusted.

Type A

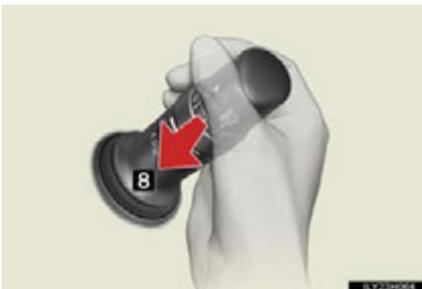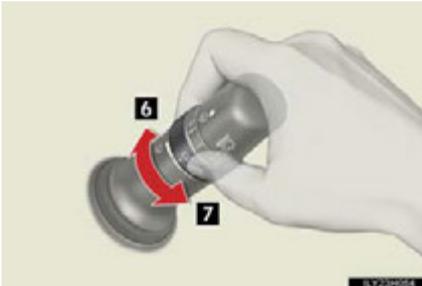
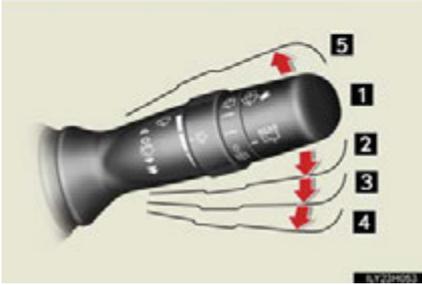


- 1  OFF
- 2  Intermittent windshield wiper operation
- 3  Low speed windshield wiper operation
- 4  High speed windshield wiper operation
- 5  Temporary operation

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.

Type B

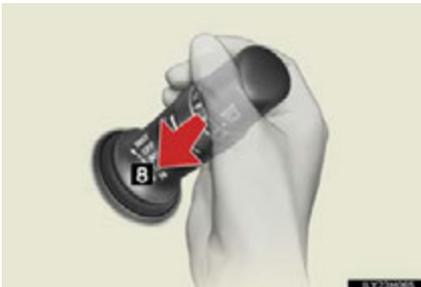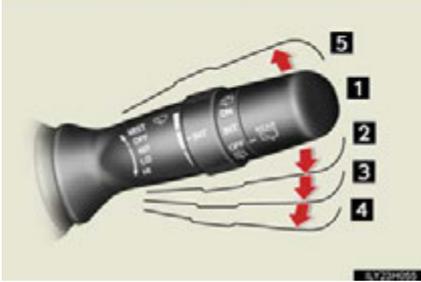

- 1 **OFF** OFF
- 2 **INT** Intermittent windshield wiper operation
- 3 **LO** Low speed windshield wiper operation
- 4 **HI** High speed windshield wiper operation
- 5 **MIST** Temporary operation

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.

■ Rain-sensing windshield wipers (if equipped)



When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

When "AUTO" is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring:


Type A



- 1  OFF
- 2  Rain-sensing wiper operation
- 3  Low speed wiper operation
- 4  High speed wiper operation
- 5  Temporary operation


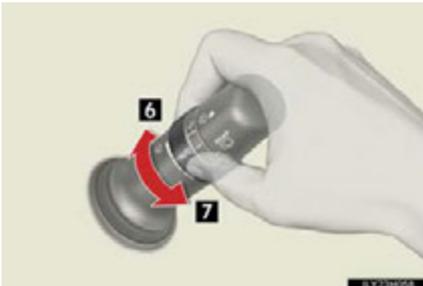
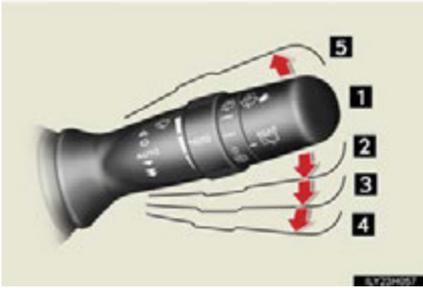


- 6 Increases the sensitivity
- 7 Decreases the sensitivity

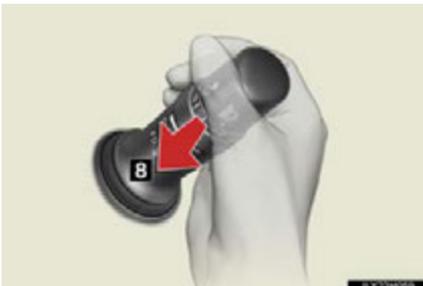

- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.

Type B

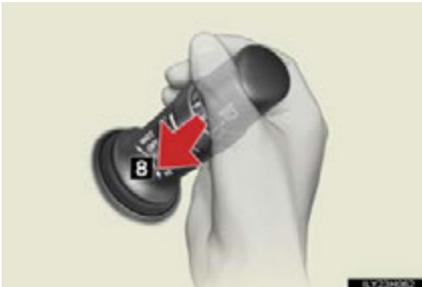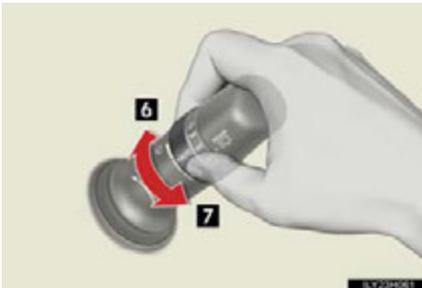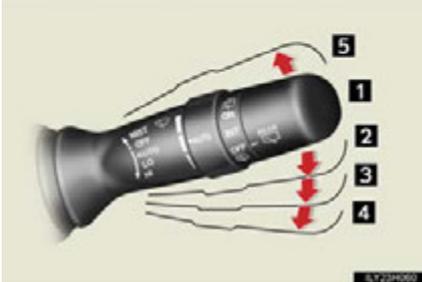



- 1 **OFF** OFF
- 2 **AUTO** Rain-sensing wiper operation
- 3 **LO** Low speed wiper operation
- 4 **HI** High speed wiper operation
- 5 **MIST** Temporary operation

- 6 Increases the sensitivity
- 7 Decreases the sensitivity

- 8 Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.



Rear Window Wiper and Washer (if equipped)

Type A

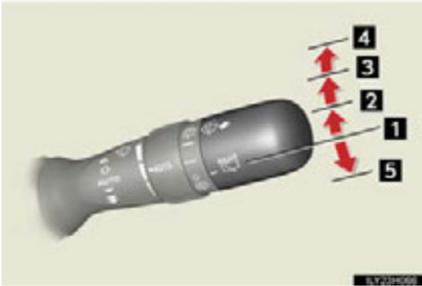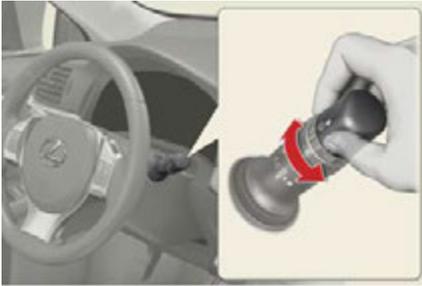

- 1  OFF
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Type B

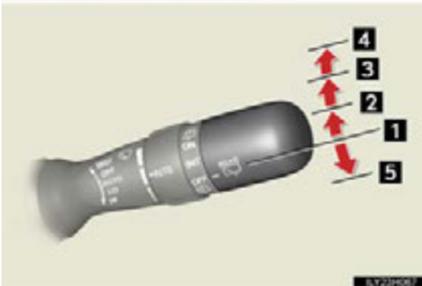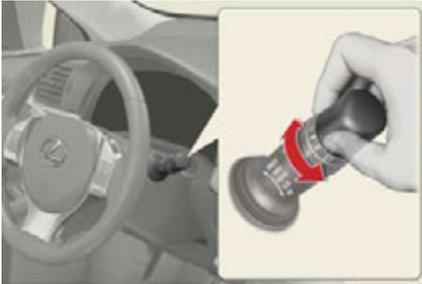


- 1  OFF
- 2  Intermittent window wiper operation
- 3  Normal window wiper operation
- 4  Washer/wiper dual operation
- 5  Washer/wiper dual operation

Remote Touch (if equipped)

The Remote Touch can be used to operate the navigation screens and configure settings.

Basic operation

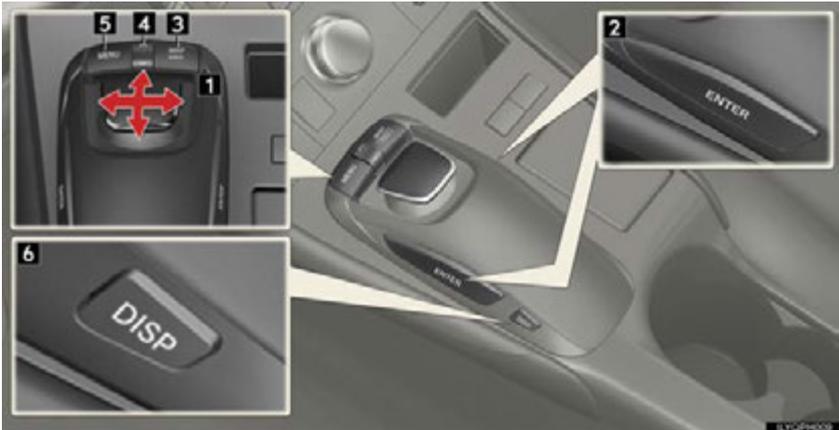

1 Remote Touch knob

Use this knob to move the cursor and select items on the screen.

Feedback force, pointer shape, and on or off of selection sounds can be changed. Refer to the "Navigation System Owner's Manual".

2 "ENTER" button

Press this button to confirm a selection.

3 "MAP/VOICE" button

Press this button to display the vehicle's current position.

4 "^v" button

Press this button to change map scale and scroll through lists.


5 "MENU" button

Press this button to display the "Start" (menu) screen.

6 "DISP" button

Press this button to adjust picture quality.

Start

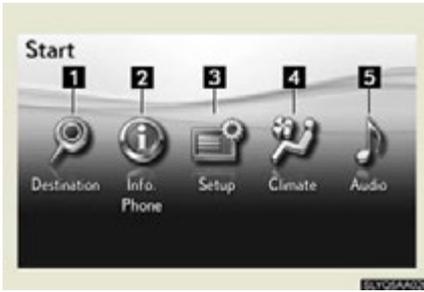

Press the "MENU" button on the Remote Touch to display the "Start" screen.


- 1 Destination
- 2 Info. Phone
- 3 Setup
- 4 Climate (→P.60)
- 5 Audio (→P.55)

Display




Press the "DISP" button on the Remote Touch to show the "Display" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on
- 2 Turns the screen off
- 3 Adjust contrast
- 4 Adjust brightness
- 5 Adjust color tone
- 6 Adjust color

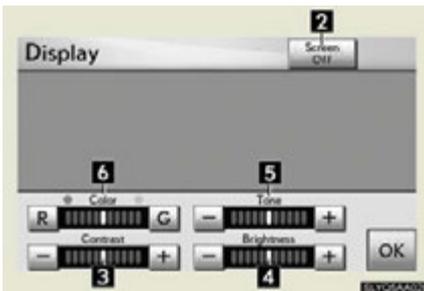

Screen scroll operation

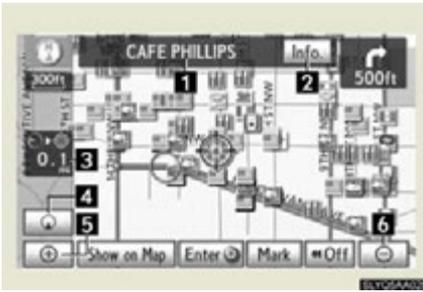

To scroll over the map, place the pointer in a position near the desired destination and then press and hold the “ENTER” button on the Remote Touch.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Switches the screens
- 5 Zooms in on the map
- 6 Zooms out on the map

Setting a route

While route guidance is operating, you can change the route using the following method.



Select “Route”.

The following settings can be accessed



- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the “Navigation System Owner’s Manual”.

Navigation System (if equipped)

Register home

STEP 2




STEP 3



STEP 4





STEP 7

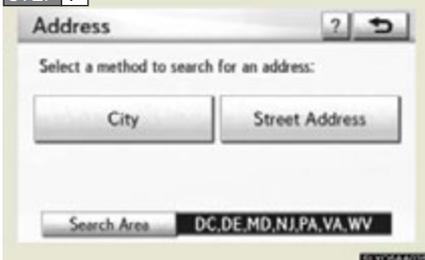

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Navi".
- 4 Select "Home".
- 5 Select "Set Home".
- 6 Select "Address".
- 7 Select "City".
- 8 Input a city name and select "OK".
- 9 Select the button of the desired city name from the displayed list.
- 10 Input the street name and select "OK".
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select "OK".
- 13 Select "Enter".
- 14 Select "OK".

Destination input——Search by address


Select by city name

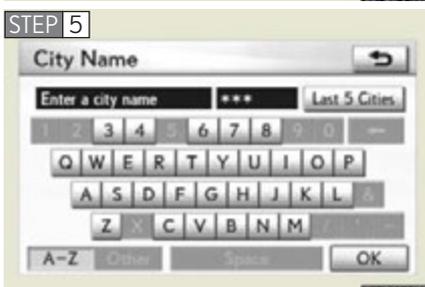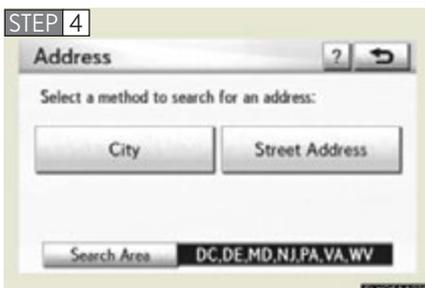


- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select “Destination”.
- 3 Select “Address”.
- 4 Select “City”.
- 5 Input a city name and select “OK”.
- 6 Select the button of the desired city name from the displayed list.
- 7 Input the street name and select “OK”.
- 8 When the desired street name is found, select the corresponding button.
- 9 Input a house number and select “OK”.
- 10 Select “Go to”.
- 11 Select “OK”.

Select by street address


STEP 2

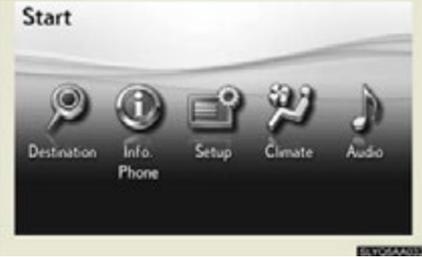


STEP 3

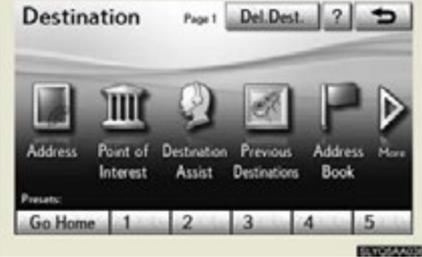

STEP 4



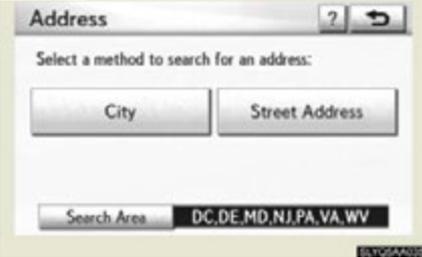


STEP 5

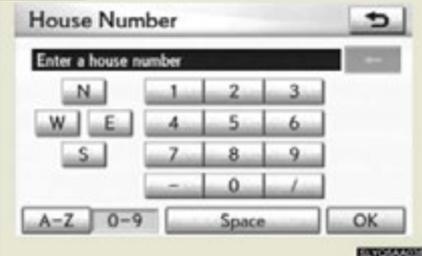

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Address".
- 4 Select "Street Address".
- 5 Input a house number and select "OK".
- 6 Input the street name and select "OK".
- 7 When the desired street name is found, select the corresponding button.
- 8 Input a city name and select "OK".
- 9 Select the button of the desired city name from the displayed list.
- 10 Select "Go to".
- 11 Select "OK".


Destination input—Search points of interest by name

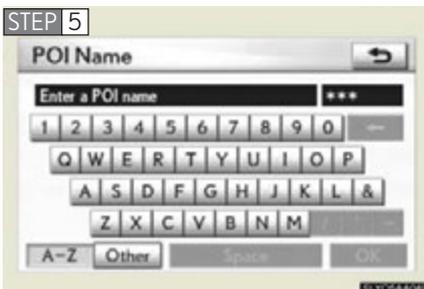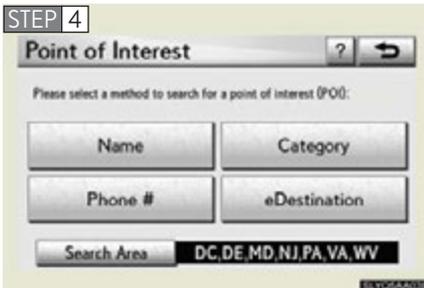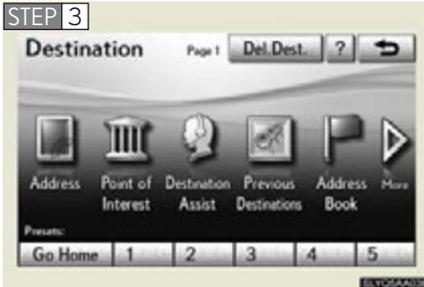

- 1 Press the “MENU” button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select “Destination”.
- 3 Select “Point of Interest”.
- 4 Select “Name”.
- 5 Input the name of the point of interest and select “OK”.
- 6 Select the button of the desired destination.
- 7 Select “Go to”.
- 8 Select “OK”.

Destination input — Search points of interest by category


STEP 2

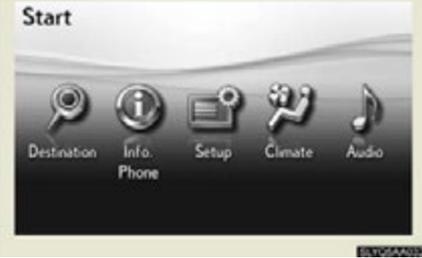


STEP 3



STEP 4


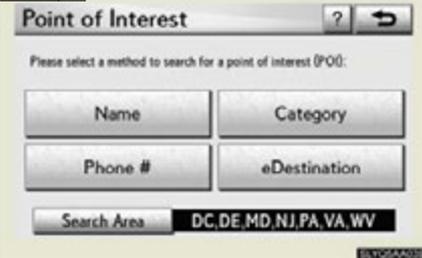


STEP 5

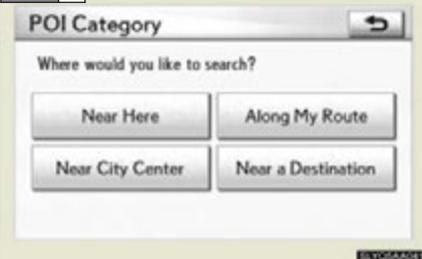

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P40 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".
- 4 Select "Category".
- 5 Select "Near a Destination".
- 6 Select the button of the desired destination and set the search point.
- 7 Select the desired point of interest category.
- 8 Select the button of the desired item.
- 9 Select "Go to".
- 10 Select "OK".

Destination input — Search points of interest by telephone number

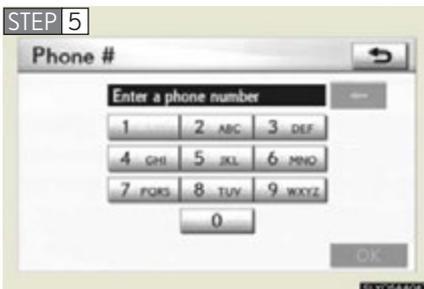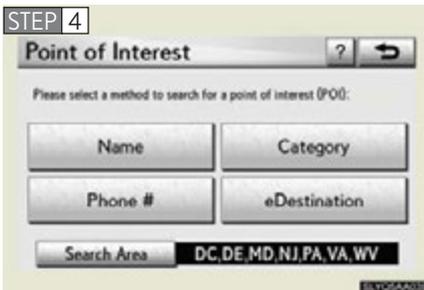


- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Destination".
- 3 Select "Point of Interest".
- 4 Select "Phone #".
- 5 Input a telephone number and select "OK".
- 6 Select "Go to".
- 7 Select "OK".

Hands-free System For Cellular Phone (vehicles with a navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.

STEP 2

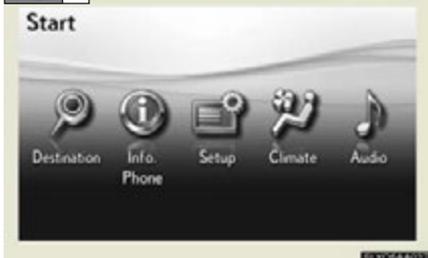


STEP 3



STEP 4



STEP 6

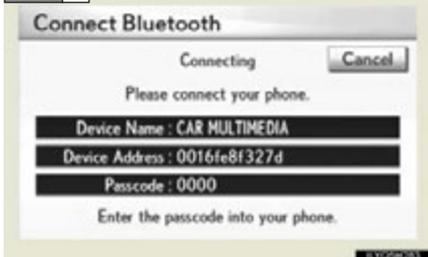

To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Manage Phone".
- 5 Select "(add new)" to display the screen for connecting Bluetooth®.
- 6 Enter the passcode displayed on the screen into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 When the connection is completed, "Bluetooth connection successful." will appear.

Phonebook transfer

STEP 2



STEP 3



STEP 4



STEP 7




- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Contacts".
- 6 Select "Transfer Contacts".
- 7 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

■ Registering a voice tag

STEP 2

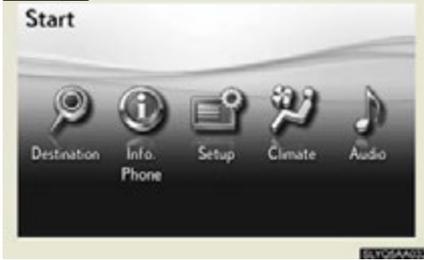


STEP 3



STEP 4






STEP 8

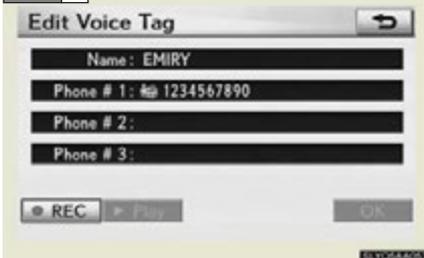

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Voice Tags".
- 6 Select "New Voice Tag".
- 7 Select the data you want to register.
- 8 Select "REC", and record a voice tag.
- 9 Select "OK".


■ Registering a speed dial

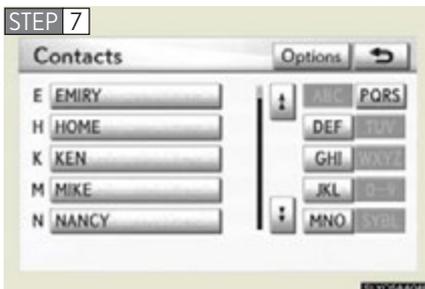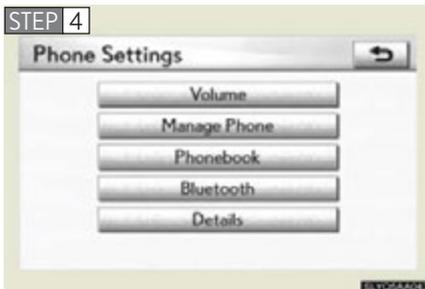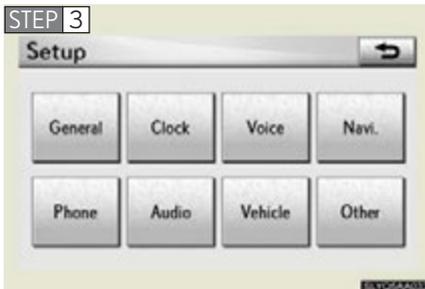

- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.40 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select "Phone".
- 4 Select "Phonebook".
- 5 Select "Manage Speed Dials".
- 6 Select "New Speed Dial".
- 7 Select the data you want to register.
- 8 Select the desired phone number.
- 9 Select the button you want to register in.
- 10 The registration completion message is displayed on the screen.

■ Calling by name


You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the “Navigation System Owner’s Manual”. Only when English is selected as the system language can you call by saying a name registered in the phonebook without registering any voice tags beforehand. (Names in the phonebook work as voice tags.)

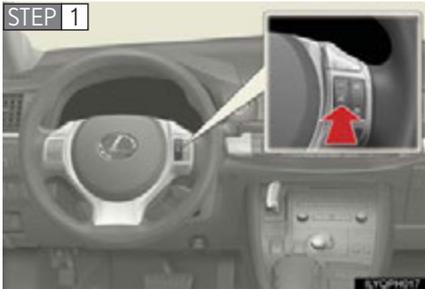

- 1 Press .
- 2 Follow the voice guidance and say “Phone”.
- 3 Follow the voice guidance and say “Dial by name”.
- 4 Follow the voice guidance and say a contact name.
- 5 Follow the voice guidance and say the type of phone number (home, mobile, work, other).
- 6 Follow the voice guidance and say “Dial”.

 : Pressing this switch turns the voice command system on. Say a command after the beep.


■ Calling by speed dial

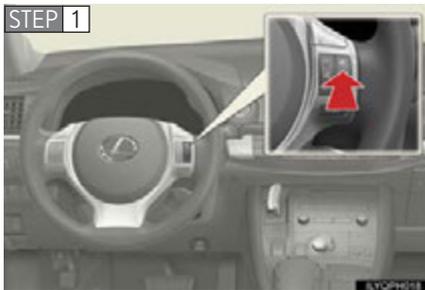

1 Press .


2 Select "Speed Dials".

3 Select the desired number to call.

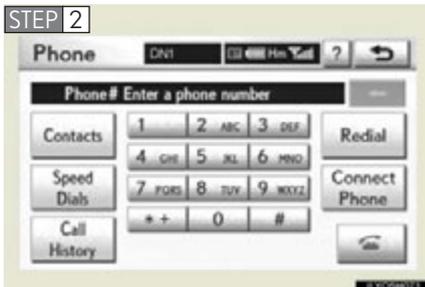

■ Receiving a call

STEP 1

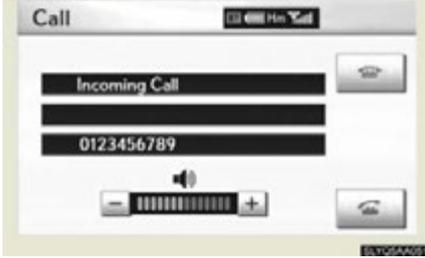

1 When a call is received, this screen is displayed with a sound.

2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

STEP 2



■ Audio System (vehicles with a navigation system)

■ Audio control screen

Follow the procedure below to display the audio control screen.



1 Press the "MENU" button on the Remote Touch.

Please refer to P.40 for the Remote Touch operation.

The "Start" screen will be displayed.

2 Using the Remote Touch, select "Audio" and press the "ENTER" button.

Basic operation



- 1 Sound quality modes
- 2 Audio sources
 - AM•FM: AM radio/FM radio
 - SAT (if equipped): Satellite radio
 - DISC (if equipped): DVD changer
 - CD (if equipped): CD changer
 - AUX•USB: Bluetooth® audio/Auxiliary audio device/USB memory/iPod
- 3 Power/Volume

Radio



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Adjusting the frequency
- 4 Station selector
- 5 Seeking the frequency

Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Using the Remote Touch, select one of the preset switches (1-6), then press the "ENTER" button until a beep is heard, indicating that the station has been set.

DVD changer/CD changer

Playing an audio CD



- 1 CD selection
- 2 Repeat play
- 3 Random playback
- 4 Search play
- 5 Selecting a track
- 6 CD insert
- 7 CD eject

Playing a CD with MP3/WMA files



- 1 CD selection
- 2 Repeat play
- 3 Random playback
- 4 Search play
- 5 Folder selection
- 6 File selection
- 7 Selecting a file
- 8 CD insert
- 9 CD eject

■ Playing a DVD (DVD changer only)



- 1 DVD selection
- 2 DVD operation
- 3 Image display (full screen)
- 4 Chapter selection
- 5 DVD insert
- 6 DVD eject

■ Loading a disc

- 1 Press the “LOAD” button.
- 2 When the indicator on the slot turns from amber to green, insert a disc.

■ Loading multiple discs

- 1 Press and hold the “LOAD” button until you hear a beep.
- 2 When the indicator on the slot turns from amber to green, insert a disc.
The indicator on the slot turns to amber when the disc is being inserted.
- 3 When the indicator on the slot turns from amber to green, insert the next disc.
Repeat the procedure for the remaining discs.
To cancel the operation, press the “LOAD” button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.


■ Operating an iPod



- 1 iPod menu
- 2 Playback/pause
- 3 Repeat play
- 4 Shuffle playback
- 5 Song list
- 6 Song selection


■ Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

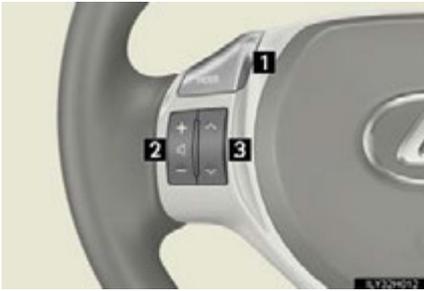

- 1 Turns the power on, selects an audio source
- 2 Increases/decreases volume
- 3 Radio mode: Selects a radio station
DVD mode: Selects a track, chapter and disc
CD mode: Selects a track, file (MP3 and WMA) and disc
iPod mode: Selects a song

Air Conditioning System (vehicles with a navigation system)

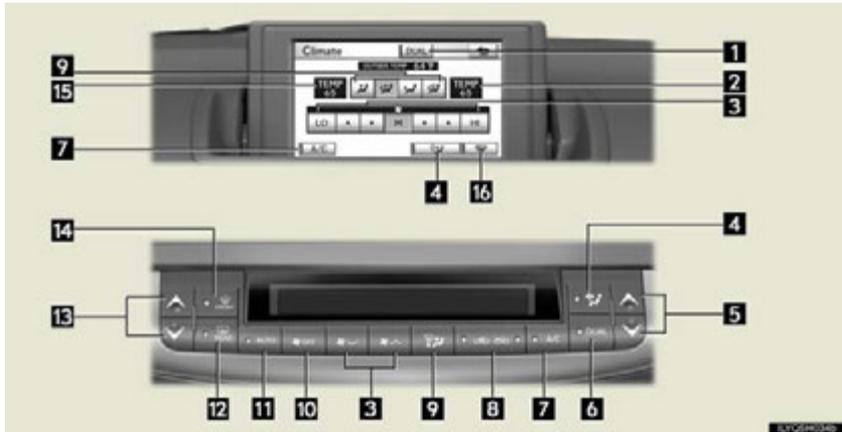

- 1 Dual mode button
- 2 Passenger side temperature display
- 3 Fan speed control button
- 4 Micro dust pollen filter button
- 5 Passenger side temperature control
- 6 Dual mode button
- 7 Cooling and dehumidification function on/off button
- 8 Outside air/recirculated air mode button
- 9 Air outlet selector button
- 10 "OFF" button
- 11 Automatic mode button
- 12 Rear window and outside rear view mirror defoggers switch
- 13 Driver side temperature control
- 14 Windshield defogger
- 15 Driver side temperature display
- 16 Windshield wiper de-icer button

Using the automatic mode

Press **11** to turn on the airflow and **13** to adjust the temperature.

Adjusting the temperature

To simultaneously adjust the driver's side and passenger's side temperature settings

Select **1** or press **6** to turn the "DUAL" indicator off and then press **13**.

To individually adjust the driver's side and passenger's side temperature settings

Select **1** or press **6** or **5** to turn the "DUAL" indicator on and then press **13** or **5**.

Hands-free System For Cellular Phone (vehicles without a navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/bluetooth" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.


- 1 Press  or .
- 2 Press  and say "Pair phone".
- 3 Press  and say a name*.

*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .

: Pressing this switch turns the voice command system on. Say a command after the beep.


■ Calling by number

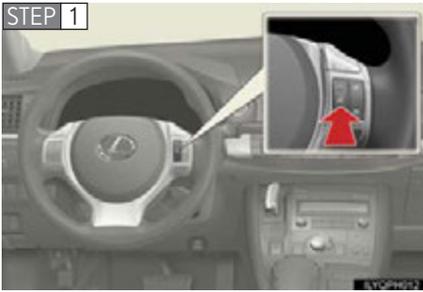

- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

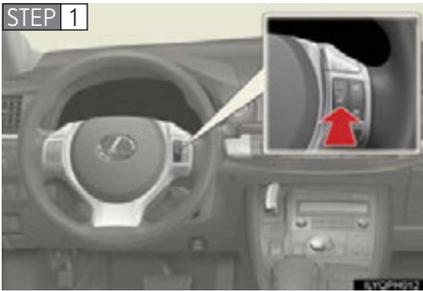


- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
 - a. Press .
 - b. Press  and say "Dial".

: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Calling by speed dial

STEP 1

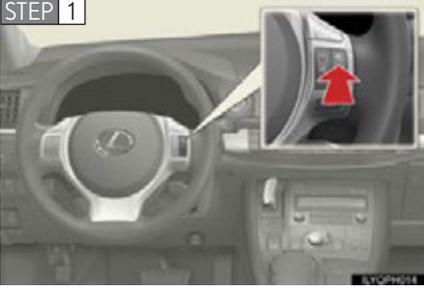

1 Press .


2 Press the desired preset button.

3 Press .

STEP 2



■ Phonebook transfer

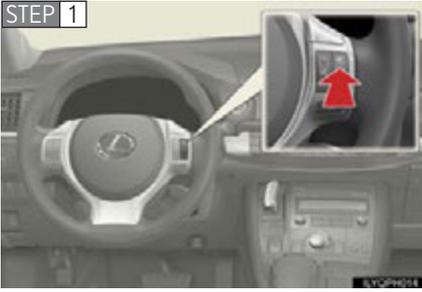


- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.

 : Pressing this switch turns the voice command system on. Say a command after the beep.


■ Changing the registered name

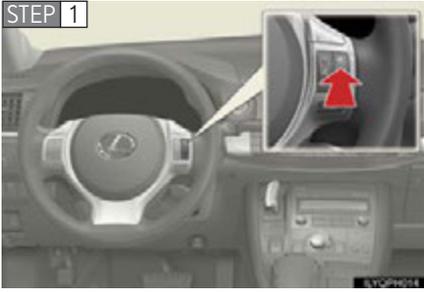

- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".

: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Registering a speed dial

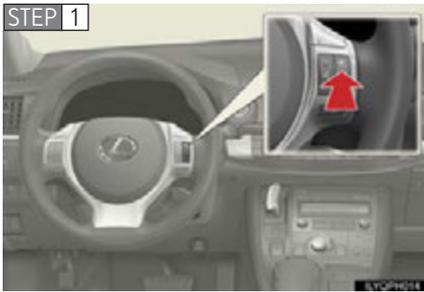


- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm"

: Pressing this switch turns the voice command system on. Say a command after the beep.

Audio System (vehicles without a navigation system)

Basic operation

Type A

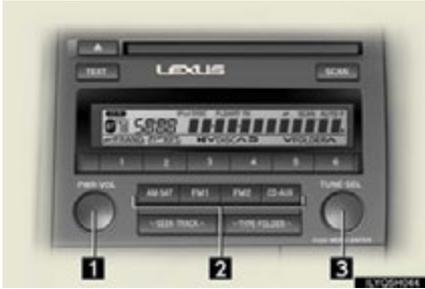

- 1 Power/Volume
- 2 Audio sources
AM•SAT: AM radio/Satellite radio
FM1/FM2: FM radio
CD•AUX: CD player/Auxiliary audio device/USB memory/
iPod/Bluetooth® audio
- 3 Sound quality modes

Type B



- 1 Power/Volume
- 2 Audio sources
AM•FM: AM radio/FM radio
SAT: Satellite radio
CD•AUX: CD player/Auxiliary audio device/USB memory/
iPod/Bluetooth® audio
- 3 Sound quality modes


Type C



- 1 Power/Volume
- 2 Audio sources
AM: AM radio
FM: FM radio
CD: CD player
AUX•USB: Auxiliary audio device/
USB memory/iPod/
Bluetooth® audio
- 3 Sound quality modes

Radio

Type A

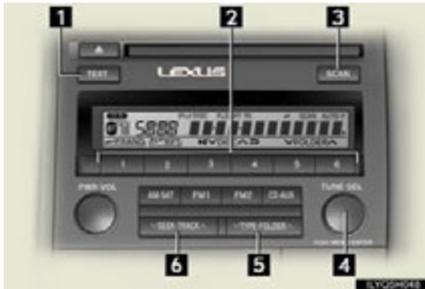

- 1 Displaying text message
- 2 Station selector
- 3 Scanning for receivable stations
- 4 Adjusting the frequency
- 5 Changing the program type
- 6 Seeking the frequency

Type B



- 1 Station selector
- 2 Displaying text message
- 3 Traffic information button
- 4 Adjusting the frequency
- 5 Scanning for receivable stations
- 6 Changing the program type
- 7 Seeking the frequency

Type C



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Displaying text message
- 4 Adjusting the frequency
- 5 Station selector
- 6 Seeking the frequency

Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

■ CD player

■ Playing an audio CD

Type A



- 1 Displaying text message
- 2 CD eject
- 3 Repeat play
- 4 Search play
- 5 Playback
- 6 Selecting a track
- 7 Random playback

Type B



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Displaying text message
- 6 Search play
- 7 CD selection
- 8 Playback
- 9 Selecting a track
- 10 Random playback

Type C



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Search play
- 6 Displaying text message
- 7 CD selection
- 8 Playback
- 9 Selecting a track
- 10 Random playback

■ Playing a CD with MP3/WMA files

Type A



- 1 Displaying text message
- 2 CD eject
- 3 Repeat play
- 4 Search play
- 5 File selection
- 6 Playback
- 7 Folder selection
- 8 Selecting a file
- 9 Random playback

Type B



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Displaying text message
- 6 Folder selection
- 7 File selection
- 8 Search play
- 9 CD selection
- 10 Playback
- 11 Selecting a file
- 12 Random playback

Type C



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Search play
- 6 Displaying text message
- 7 Folder selection
- 8 File selection
- 9 CD selection
- 10 Playback
- 11 Selecting a file
- 12 Random playback

■ Loading a CD

Type A

Insert a CD.

Type B and C

- 1 Press the "LOAD" button.
"WAIT" is shown on the display.
- 2 When the indicator on the slot turns from amber to green, insert a CD.
The display changes from "WAIT" to "LOAD".

■ Loading multiple CDs (Type B and C)

- 1 Press and hold the "LOAD" button until you hear a beep.
"WAIT" is shown on the display.
- 2 When the indicator on the slot turns from amber to green, insert a CD.
The display changes from "WAIT" to "LOAD".
The indicator on the slot turns to amber when the CD is being inserted.
- 3 When the indicator on the slot turns from amber to green, insert the next CD.
Repeat the procedure for the remaining CDs.
To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.


■ Operating an iPod

Type A



- 1 Displaying text message
- 2 Repeat play
- 3 Playback/pause
- 4 Go back
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback

Type B

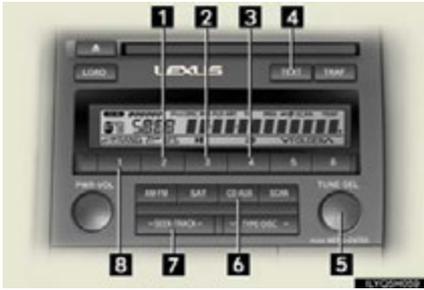

- 1 Repeat play
- 2 Playback/pause
- 3 Go back
- 4 Displaying text message
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback


Type C



- 1 Repeat play
- 2 Playback/pause
- 3 Go back
- 4 Displaying text message
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback


Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

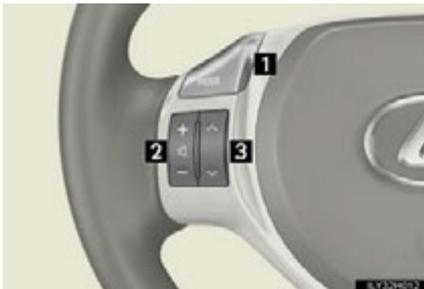

- 1 Turns the power on, selects an audio source
- 2 Increases/decreases volume
- 3 Radio mode: Selects a radio station
CD mode: Selects a track, file (MP3 and WMA) and disc
iPod mode: Selects a song

Air Conditioning System (vehicles without a navigation system)

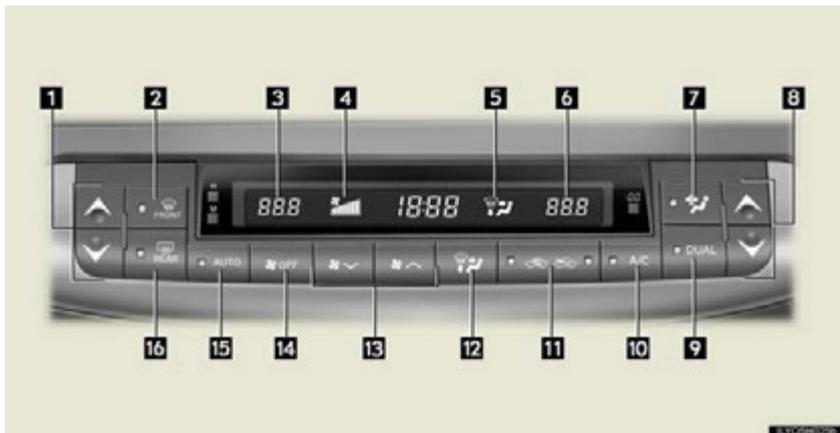

- 1** Driver's side temperature control buttons
- 2** Windshield defogger button
- 3** Driver's side temperature display
- 4** Fan speed display
- 5** Air outlet display
- 6** Passenger's side temperature display
- 7** Micro dust and pollen filter mode button
- 8** Passenger's side temperature control buttons
- 9** Dual mode button
- 10** Cooling and dehumidification function on/off button
- 11** Outside/recirculated air mode button
- 12** Air outlet selector button
- 13** Fan speed control buttons
- 14** "OFF" button
- 15** Automatic mode button
- 16** Rear window and outside rear view mirror defoggers switch

■ Using the automatic mode

Press **15** to turn on the airflow and **1** to adjust the temperature.

■ Adjusting the temperature

■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press **9** to turn the "DUAL" indicator off and then press **1**.

■ To individually adjust the driver's side and passenger's side temperature settings

Press **9** or **8** to turn the "DUAL" indicator on and then press **1** or **8**.

Voice Command System

NOTE: When inputting voice commands you must wait until after the beep to speak.

Basic operation



- 1 Press  on the steering wheel.
- 2 - If you know the command:
Press  again.
- If you do not know the command:
Follow the voice guidance to learn the command and then press  again.
- 3 Say a command after the beep.

Continue on to pages 75-79 for a detailed list of Voice Commands for the following categories:

PHONE.....	P.75, 77
DESTINATIONS.....	P.75
GENERAL NAVIGATION COMMANDS.....	P.76
AUDIO	P.78
XM INFORMATION	P.79
CLIMATE CONTROL/AIR CONDITIONING.....	P.79

- Important voice commands information and tips
 - Voice commands can be used while driving.
 - You must wait until after the beep to say a command.
 - In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
 - If you know what command to use, you can press  at any time to interrupt the voice guidance.

■ Command list

All vehicles

PHONE			
To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Dial by Name"	NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Dial by Number"	
		"Redial"	
		"Call Back"	
		"Mute"	

Vehicles with a navigation system

DESTINATIONS						
To Enter an Address/ Destination, SAY: (English only)	"Destination" and then SAY:		"Address" and then follow the prompts to enter city, state, street and house number			
To Enter a Point of Interest, SAY:	A Point of Interest Category, Such As: "Dining", "Shopping Malls", "Police", "Gas", ETC.					
	"Destination" and then SAY:	"Point of Interest" and then SAY:	<table border="1"> <tr> <td>"Near Here"</td> <td rowspan="3">And then follow the prompts</td> </tr> <tr> <td>"Along Route"</td> </tr> <tr> <td>"Emergency" Phone Number"</td> </tr> </table>	"Near Here"	And then follow the prompts	"Along Route"
"Near Here"	And then follow the prompts					
"Along Route"						
"Emergency" Phone Number"						
To Enter a Previous Destination, SAY:	"Destination" and then SAY:		"Previous Destinations"			
To Enter/Go to Preset Destinations, SAY:	"Destination" and then SAY:	"Presets" and then SAY:	<table border="1"> <tr> <td>"Home" (HOME must already be set using manual controls)</td> </tr> <tr> <td>"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)</td> </tr> </table>	"Home" (HOME must already be set using manual controls)	"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)	
"Home" (HOME must already be set using manual controls)						
"Preset 1" or "Preset 2" ETC. (preset addresses must already be set using manual controls)						

GENERAL NAVIGATION COMMANDS

To Change the Map Screen, SAY:	"Map"
	"Dual Map"
	"Single Map"
	"Compass Mode"
To Change the Map Scale/ Size, SAY:	"Zoom In"
	"Zoom Out"
	"Right Map Zoom In"
	"Right Map Zoom Out"
To Change the Map Orientation, SAY:	"North Up"
	"Heading Up"
	"Map Direction"
	"Right Map North Up"
	"Right Map Heading Up"
To Change the Guidance Mode, SAY:	"Right Map Direction"
	"Arrow Mode"
	"Turn List Mode"
	"Intersection Mode"
To Save a Point on the Map, SAY:	"Freeway Mode"
	"Mark This Point"
To Remove Icons from Map, SAY:	"Clear All Icons"
To Set the Destination, SAY:	"Previous Start Point"
To Change the Route, SAY:	"Quick Route"
	"Short Route"
	"Alternate Route"
	"Detour"
	"Detour Entire Route"

GENERAL NAVIGATION COMMANDS

To Review the Route, SAY:	"Route Overview"
	"Next Destination Map"
	"First Destination Map"
	"Second Destination Map"
	"Third Destination Map"
	"Fourth Destination Map"
	"Fifth Destination Map"
To Delete the Destination, SAY:	"Delete Next Destination"
	"Delete Final Destination"
	"Delete All Destinations"
To Operate Guidance Options, SAY:	"Pause Guidance"
	"Resume Guidance"
	"Repeat Guidance"
	"Louder"
To Operate the Traffic Information, SAY:	"Softer"
	"Traffic Information"
To Show the Icon, SAY:	"Show GAS", "Show PARKING" ETC.

PHONE

To Operate a Bluetooth Connected Phone/Make Calls, SAY:	"Phone" and then SAY:	"Send Tones"		NOTE: You can also make a call by simply saying: "Call XXX-555-5555" ETC.
		"Connect Phone" and then SAY:	"Select Phone"	
			"Add New Phone"	
			"Hands Free Power ON"	
		"Hands Free Power OFF"		

AUDIO

To Turn Audio On or Off, SAY:	"Audio ON"		
	"Audio OFF"		
To Change the Audio Mode, SAY:	FM, AM, Radio, Satellite Radio, Auxiliary, CD, CD Changer, DVD, DVD Changer, Bluetooth® Audio, iPod, USB Audio		
To Change to a different CD/DVD track, SAY:	"Track Up", "Track Down" or "Previous Track"		
To Change to a different CD/DVD, SAY:	"Disc Up" "Disc Down"		
To Change Radio Stations, SAY:	"Seek Up" or "Seek Down"		
	"Type Up" or "Type Down"		
To Operate Satellite RadioXM Controls, SAY:	"Satellite Radio" and then SAY:	"Select Channel Number"	
		"Select Channel Name" (English only)	
		"Select Channel Type" (English only)	
		"Command List" and then SAY:	
		"Seek Up" or "Seek Down"	
		"Type Up" or "Type Down"	

XM INFORMATION

To Operate XM NavWeather, SAY: (English only)	"Information" and then SAY:	"XM NavWeather" and follow the prompts
To Operate XM NavTraffic, SAY: (English only)	"Information" and then SAY:	"XM NavTraffic" and follow the prompts
To Operate XM Sports, SAY: (English only)	"Information" and then SAY:	"XM Sports" and follow the prompts
To Operate XM Stocks, SAY: (English only)	"Information" and then SAY:	"XM Stocks" and follow the prompts
To Operate Lexus Insider, SAY:	"Information" and then SAY:	"Lexus Insider" and follow the prompts

CLIMATE CONTROL/AIR CONDITIONING


To Turn On and Adjust setting for Climate Control and Temperature, SAY:	"Automatic Climate Control"
	"Raise Temperature"
	"Lower Temperature"
To Set a Specific Temperature, SAY:	"70 Degrees" or "65 Degrees" ETC.

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Press down and release the lid.

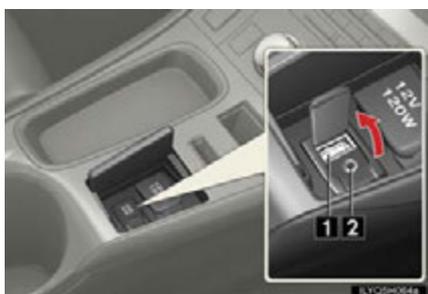

- 1 USB port
- 2 AUX port

Garage Door Opener (if equipped)

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].

■ Programming the HomeLink[®] (for U.S.A. owners)

The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.



1 Indicator light

2 Buttons

■ Programming HomeLink®



- 1 Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.
- 2 Press and hold down the desired HomeLink® button.
- 3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.
- For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

- 4 Press the training button on the motor-head unit in your garage.
- 5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

■ Programming other devices

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

■ Operating HomeLink®



Press the appropriate HomeLink® button.
The indicator light should come on.

■ Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

■ System components



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

■ Services

Subscribers have the following Safety Connect services available:

● Automatic Collision Notification*

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

● Stolen Vehicle Location

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

● Emergency Assistance Button (SOS)

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

● Enhanced Roadside Assistance

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform with Safety Connect (if equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM[®] satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

Services

With an active Lexus Enform subscription, the following features are available:

● **Safety Connect features** (→P.83)

- Automatic collision notification *1
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced roadside assistance

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

● **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com and go to the "Owners" section where you will need to register and log in. After this, you can create your personalized folders containing the locations you wish to send to your vehicle. (See Lexus Enform Guide for more information.)

● XM® Sports and Stocks*2

XM® Sports and Stocks is a service included with XM® satellite radio subscriptions for Lexus Enform vehicles. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

● XM NavWeather™*3

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map.

● XM® NavTraffic*3

The subscription-based XM® NavTraffic service allows the navigation system to display traffic information on the map.

The following navigation-based Lexus Enform features are available without a subscription:

● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

● Voice Command

The voice command system enables you to operate the navigation system, audio/video system, air conditioning system and hands-free system by giving a command.

*1: U.S. Patent No. 7,508,298 B2

*2: Available at no extra charge with an active XM® satellite radio subscription.

*3: Available via separate XM® subscription(s).

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select "Destination Assist" in your vehicle for further subscription details. XM® NavTraffic and XM NavWeather™ require separate XM® subscription(s). XM® Sports and Stocks is available with an XM® Satellite Radio subscription. After a 90-day free trial, you must set up the appropriate XM® subscription(s) to continue receiving these services.

Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


For details the entry function or wireless remote control (→P.15, 16)

Door lock switch



- 1 Locks all the doors
- 2 Unlocks all the doors

Inside lock button

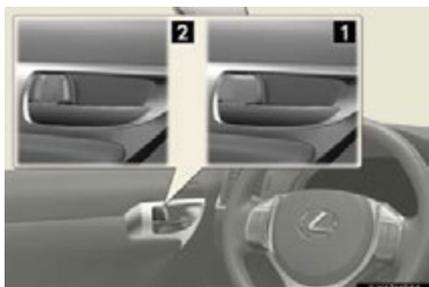

- 1 Locks the door
- 2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

Rear door child-protector lock




The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

Power Windows

Power window switches

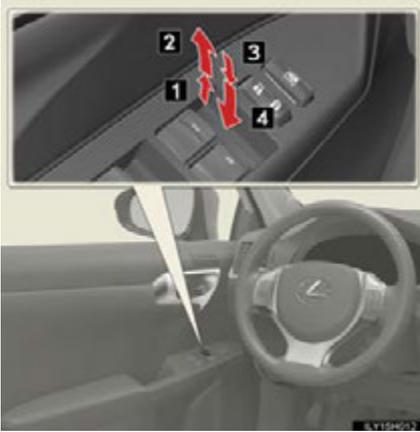

- 1 Closing
- 2 One-touch closing*
- 3 Opening
- 4 One-touch opening*

*: Pushing the switch in the opposite direction will stop window travel partway.

Window lock switch




Press the switch down to lock the passenger window.

Use this switch to prevent children from accidentally opening or closing a passenger window.

Moon Roof (if equipped)


Opening and closing

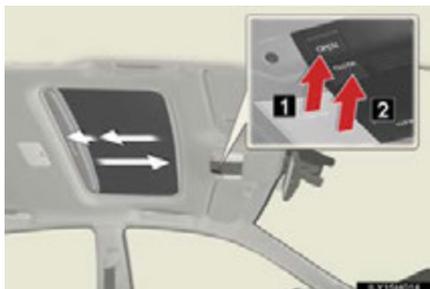

- 1** Opens the moon roof*
Push and hold "OPEN". The moon roof tilts up and then opens automatically.
- 2** Closes the moon roof*
Push and hold "CLOSE". The moon roof closes automatically to the tilt up position. Push and hold "CLOSE" again to fully close the moon roof.

*: Lightly press either of the moon roof switches to stop the moon roof part-way.

Tilting up and down

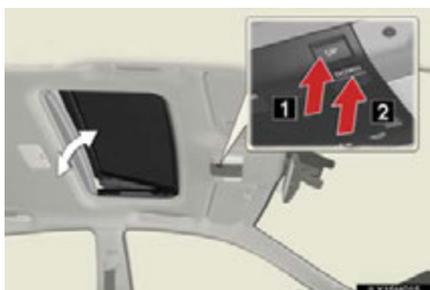

- 1** Tilts the moon roof up*
- 2** Tilts the moon roof down*


*: Lightly press either of the moon roof switches to stop the moon roof part-way.

Fuel Tank Cap

■ Before refueling the vehicle

Turn the "POWER" switch off and close all the doors and windows.


■ Opening the fuel tank cap

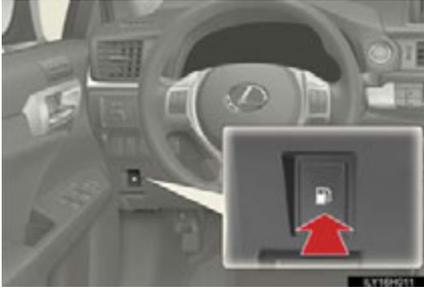

- 1 Press the opener to open the fuel filler door.



- 2 Turn the fuel tank cap slowly to open.

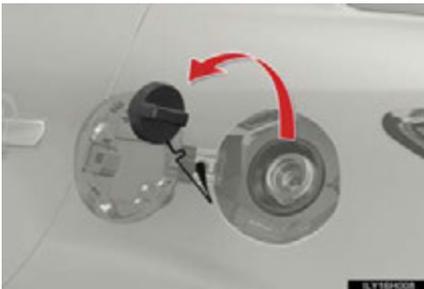

- 3 Hang the fuel tank cap on the back of the fuel filler door.

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

BRAKE

(U.S.A.)

Brake system warning light (red indicator)



(Canada)

Stop the vehicle immediately.



Charging system warning light



Low engine oil pressure warning light



High coolant temperature warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light

ABS

(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light

PCS

(Flashes)

Pre-collision system warning light (if equipped)



(Comes on)

Slip indicator light



Brake system warning light (yellow indicator)



Automatic headlight leveling system warning light (if equipped)



(Blinking and then continuously on)

Tire pressure warning light

For further information, refer to the Owner's Manual.

What to do if...

Follow the correction procedures.



Open door warning light



Master warning light



Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light*



Seat belt reminder light

See the Owner's Manual



Turn signal indicator



"SPORT MODE" indicator



Headlight indicator (U.S.A.)



Cruise control indicator



Tail light indicator (Canada)



Radar cruise control indicator (if equipped)



Headlight high beam indicator



Intuitive parking assist indicator (if equipped)



Front fog light indicator (if equipped)



(Flashes)

Slip indicator



"READY" indicator



(Flashes faster)

Pre-collision system warning light (if equipped)



EV indicator



Shift position indicators



EV drive mode indicator



"ECO MODE" indicator



(Flashes)

SRS airbag on-off indicator

For further information, refer to the Owner's Manual.

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...

If the electronic key does not operate properly

Unlocking and locking the doors



Use the mechanical key in order to perform the following operations:

- 1** Locks all the doors
- 2** Closes the windows* (turn and hold)
- 3** Unlocks the door

Turning the key rearward unlocks the driver's door. Turning the key once again within 3 seconds unlocks the other doors.

- 4** Opens the windows* (turn and hold)

*: This setting must be customized at your Lexus dealer.

What to do if...

Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the “POWER” switch.
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3 To change “POWER” switch modes: Within 10 seconds of the buzzer sounding, release the brake pedal and press the “POWER” switch. Modes can be changed each time the switch is pressed.
To start the hybrid system: Press the “POWER” switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

What to do if...



If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com
- Hawaii: www.servcolexus.com
- Canada: www.lexus.ca

©2011 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.