

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

 
<b>Air Conditioning System (vehicles with a navigation system)*</b>	
Using the automatic mode.....	64
Adjusting the temperature.....	64
<b>Air Conditioning System (vehicles without a navigation system)</b>	
Using the automatic mode.....	77
Adjusting the temperature.....	77
<b>Audio System (vehicles with a navigation system)*</b>	
Audio control screen.....	60
Basic operation.....	61
Radio.....	61
DVD player/CD player.....	62
Operating an iPod.....	63
Remote control (steering wheel switches).....	60
<b>Audio System (vehicles without a navigation system)</b>	
Basic operation.....	71
Radio.....	72
CD player.....	73
Operating an iPod.....	75
Remote control (steering wheel switches).....	76
<b>Cruise Control</b> .....	29
<b>Door Locks</b> .....	89
<b>Dynamic Radar Cruise Control</b> .....	31
<b>Energy Monitor/Consumption Screen</b> .....	14
<b>Fuel Tank Cap</b> .....	92
<b>Garage Door Opener</b> .....	82

\*: These features may be operated by Voice Command (See P.78)

<b>Hands-free System For Cellular Phone (vehicles with a navigation system)*</b>	
Bluetooth® phone pairing .....	53
Phonebook transfer .....	54
Registering a speed dial .....	55
Calling by name.....	57
Calling by speed dial .....	57
Receiving a call .....	59
<b>Hands-free System For Cellular Phone (vehicles without a navigation system)*</b>	
Bluetooth® phone pairing .....	65
Calling by number .....	66
Calling by name.....	66
Calling by speed dial .....	67
Phonebook transfer .....	68
Changing the registered name .....	69
Registering a speed dial .....	70
<b>Headlights</b> .....	35
<b>Hybrid System</b> .....	12
<b>Hybrid Transmission</b> .....	23
<b>Intuitive Parking Assist</b> .....	34
<b>Keys</b> .....	17
<b>Lexus Enform with Safety Connect</b> .....	86
<b>Moon Roof</b> .....	91
<b>Multi-information Display</b> .....	27
<b>Navigation System</b>	
Register home .....	45
Destination input - Search by address .....	46
Destination input - Search points of interest by name.....	49
Destination input - Search points of interest by category.....	50
Destination input - Search points of interest by telephone number .....	51
Voice Command System.....	78


\*: These features may be operated by Voice Command (See P.78)

Portable Audio Device Ports .....	81
Power (Ignition) Switch.....	21
Power Windows.....	90
Remote Touch.....	42
Rear Window Wiper and Washer.....	41
Safety Connect .....	84
Smart Access System with Push-button Start .....	18
Theft Deterrent System .....	20
Turn Signal Lever .....	28
Voice Command System	
Basic operation.....	78
Command list.....	79
Windshield Wipers and Washer.....	37



## Overview

## Instrument Panel

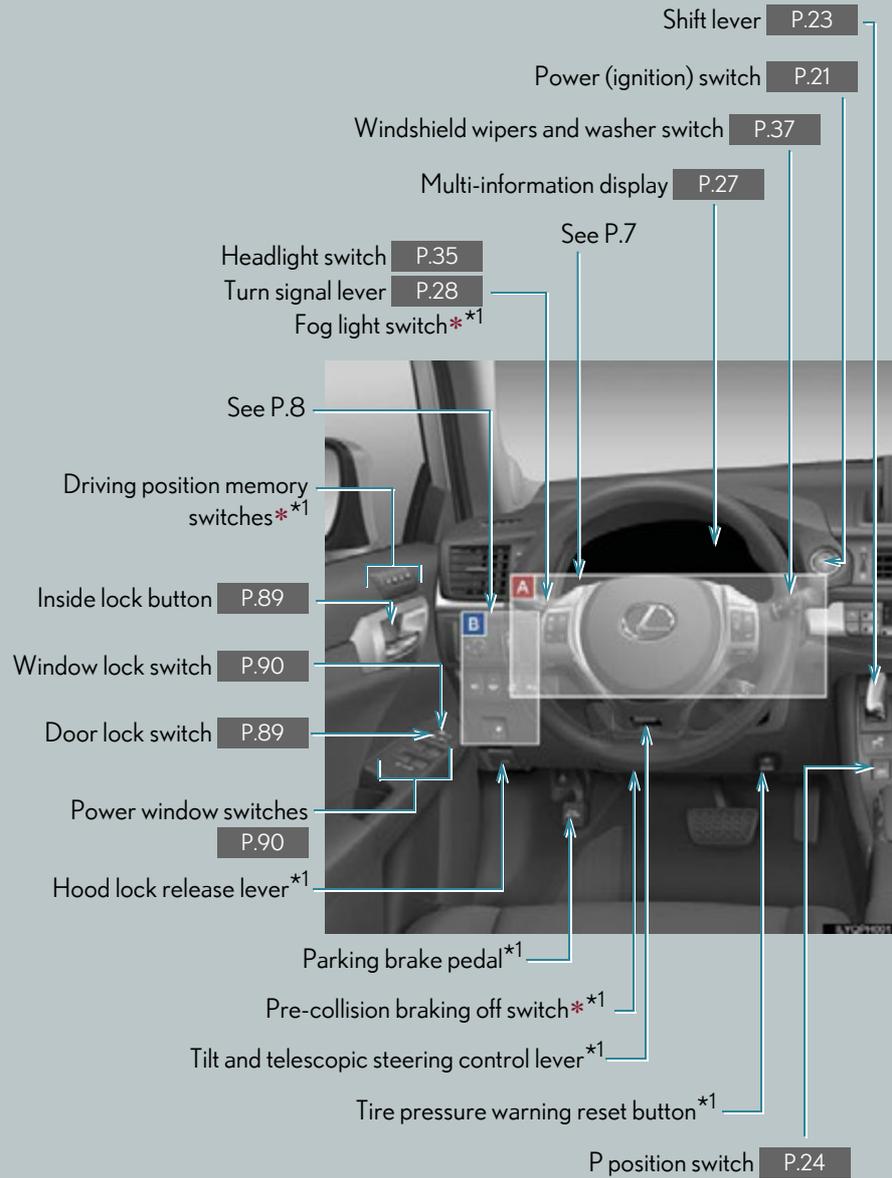

Rear window and outside rear view mirror defoggers switch \*2, \*3


Audio system P.60, 71

Air conditioning system P.64, 77

Clock \*2, \*3

See P.9

Security indicator P.20

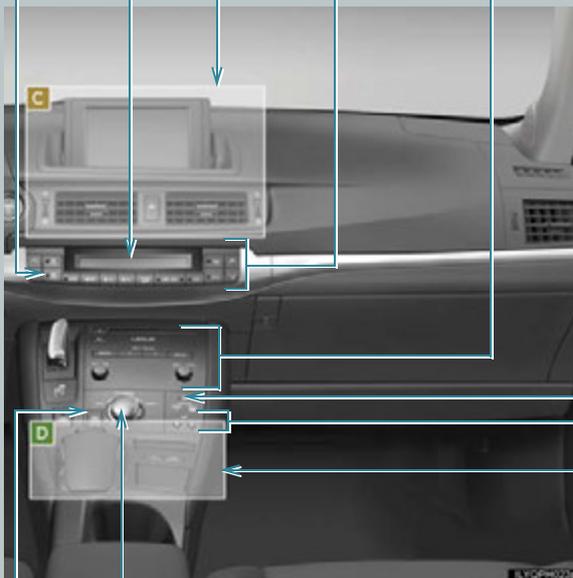

Seat heater switches \*1

See P.10

Driving mode select switch P.25

EV drive mode switch P.26

\*: If equipped

\*1: Refer to "Owner's Manual".

\*2: For vehicles without a navigation system, refer to the "Owner's Manual".

\*3: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

## Overview

## Instrument Panel

A

Audio remote control switches

P.60,76

Telephone switches\*<sup>\*2, \*3</sup>

Talk switch\*<sup>\*2, \*3</sup>

"DISP" switch P.27



Horn\*<sup>\*1</sup>


Cruise control switch\* P.29

Dynamic radar cruise control switch\*

P.31

Vehicle-to-vehicle distance button\* P.33


B

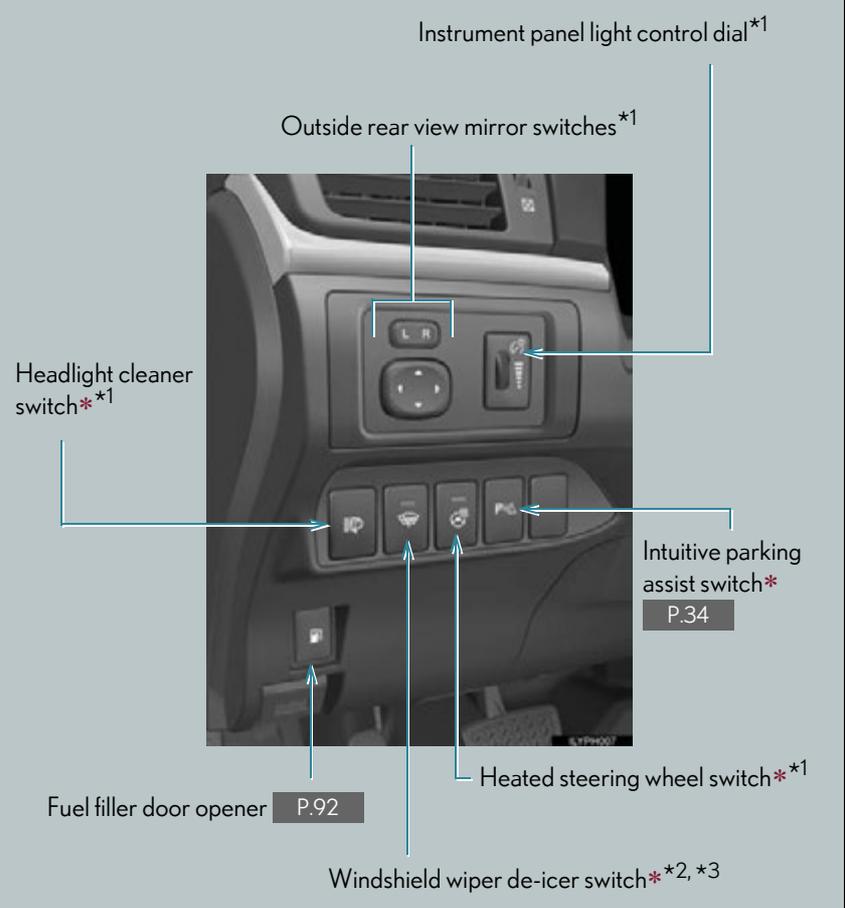

- \*: If equipped
- \*1: Refer to "Owner's Manual".
- \*2: For vehicles without a navigation system, refer to the "Owner's Manual".
- \*3: For vehicles with a navigation system, refer to the "Navigation System Owner's Manual".

C

Without navigation system

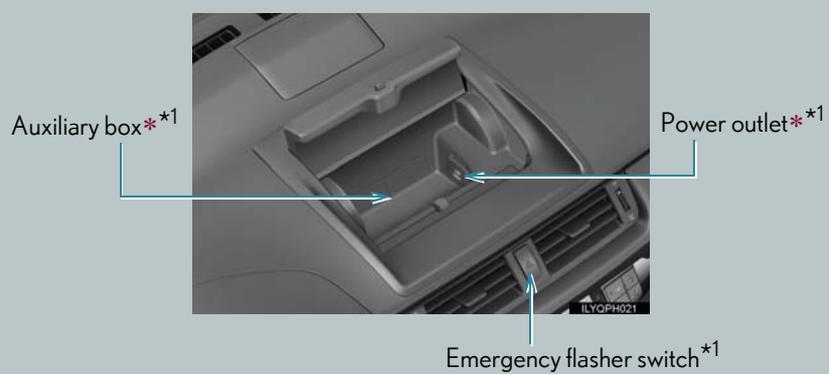


With navigation system




D

Without navigation system

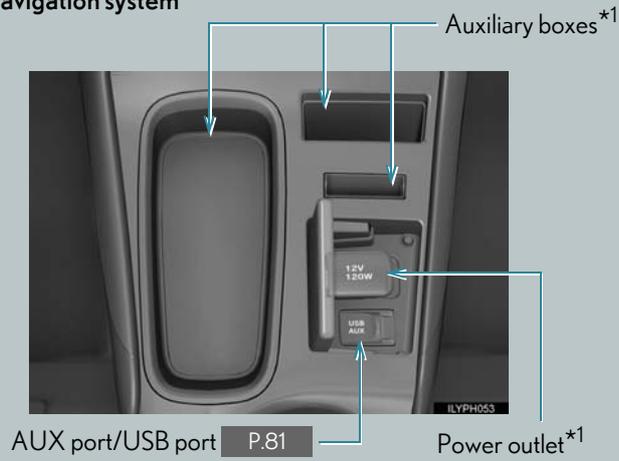

With navigation system

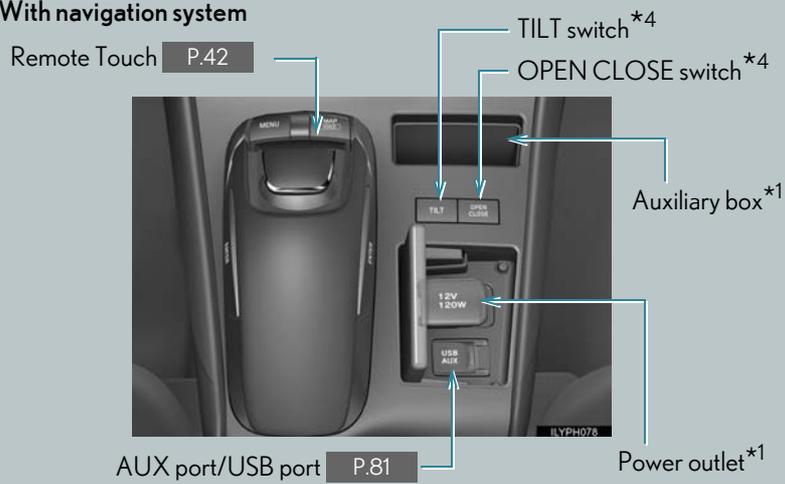

- \*: If equipped
- \*1: Refer to "Owner's Manual".
- \*4: Refer to the "Navigation System Owner's Manual".

## Overview


## Roof

Garage door opener switches\* P.82

Moon roof switches\* P.91

"SOS" button\* P.84

Interior light\*<sup>1</sup>

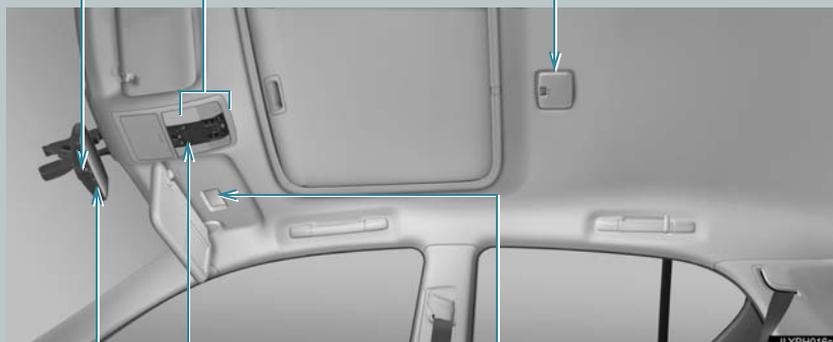

Vanity lights\*<sup>1</sup>

Interior lights\*<sup>1</sup>  
Personal lights\*<sup>1</sup>

Compass\*<sup>1</sup>

\*: If equipped

\*<sup>1</sup>: Refer to "Owner's Manual".


## Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "Owner's Manual".

### Hybrid System Indicator

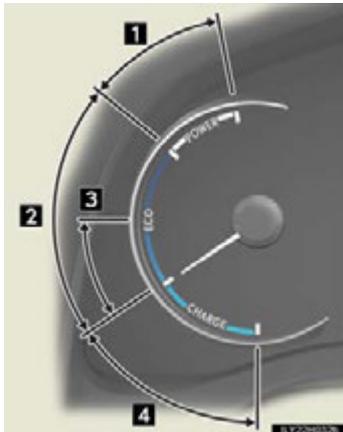

- 1** Power area  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- 2** Eco area  
Shows that the vehicle is being driven in an Eco-friendly manner.
- 3** Hybrid Eco area  
Shows that gasoline engine power is not being used very often. The gasoline engine will automatically stop and restart under various conditions.
- 4** Charge area  
Shows that energy is being recovered via the regenerative brake.

- Hybrid System Indicator is displayed when the driving mode is other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration<sup>\*</sup> status. Regenerated energy will be used to charge the battery.

\*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

## ■ Charging the hybrid battery (traction battery)

---

When shift position N is selected, the hybrid battery (traction battery) will not be charged. Thus, select P when the vehicle is stopped.

In addition, when driving in heavy traffic, use D or B.

## ■ Regenerative braking

---

The motor generator converts kinetic energy to electric energy when:

- The accelerator pedal is released while driving with the shift position in D or B.
- The brake pedal is depressed while driving with the shift position in D or B.

## ■ Sounds and vibrations specific to a hybrid vehicle

---

There may be no engine sounds or vibration even though the vehicle is able to move. For safety, apply the parking brake and make sure to shift the shift position to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed and accelerator is loosened.
- Other sounds, such as motors and mechanical noises, may be heard from the brake system when the brake pedal is depressed.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the side of rear right seat-back.

## ■ Running out of fuel

---

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start.

(The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.1 gal. [11.8 L, 2.6 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope.)

## Energy Monitor/Consumption Screen


You can view the status of your hybrid system on the multi-information display and the navigation system screen.

### Energy monitor

The energy monitor can be displayed on both the navigation system screen and the multi-information display.

- How to display on the navigation system screen (if equipped):

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.
- 2 Select "Info/Apps" ("Info") on the "Menu" screen.
- 3 Select "Fuel Consumption" on the "Information" screen.  
If the "Energy Monitor" screen is not displayed, select "Energy".

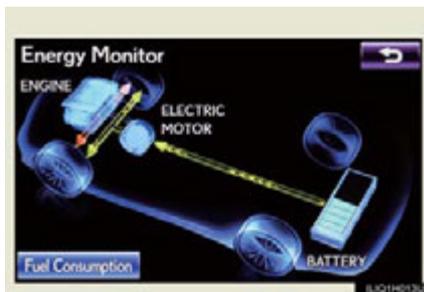

The flow of energy is displayed on the navigation system screen.

Amber: gasoline energy


Yellow: electrical energy

Green: energy recovery

A green arrow appears when regenerative braking occurs.

- How to display on the multi-information display:

Press the "DISP" switch on the steering wheel several times to select the energy monitor display.

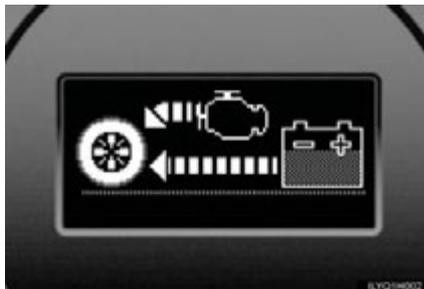


The flow of energy is indicated by the movement of the arrows on the multi-information display.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

## ■ Consumption (vehicles with a navigation system)

---

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.
- 2 Select "Info/Apps" ("Info") on the "Menu" screen.
- 3 Select "Fuel Consumption" on the "Information" screen.  
If the "Consumption" screen does not appear, select "Fuel Consumption" on the "Energy Monitor" screen or "Consumption" on the "Past Record" screen.

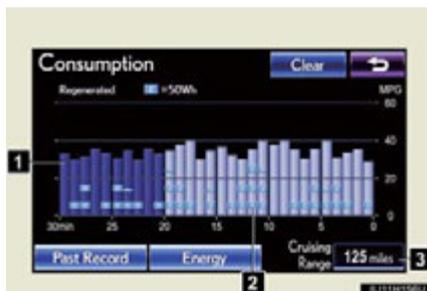

- 1 Fuel consumption per minute
  - 2 Regenerated energy per minute
  - 3 Cruising range
- E** : One symbol indicates 50 Wh.

The image is example only, and may vary slightly from actual conditions.

## ■ Past record (vehicles with a navigation system)

---

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.
- 2 Select "Info/Apps" ("Info") on the "Menu" screen.
- 3 Select "Fuel Consumption" on the "Information" screen.  
If the "Past Record" screen does not appear, select "Fuel Consumption" on the "Energy Monitor" screen or "Past Record" on the "Consumption" screen.



- 1 Best past fuel consumption
- 2 Average fuel consumption  
Use the displayed average fuel consumption as a reference.

The image is example only, and may vary slightly from actual conditions.

### ■ Hybrid warning message

---


A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

## Keys

### ■ Electronic key

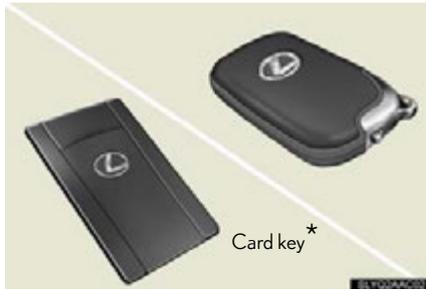

Smart access system with push-button start (→P:18)

Wireless remote control (→P:18)

\*: If equipped

### ■ Mechanical key



Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

To take out the mechanical key:

Electronic keys: Slide the release lever and take the key out.

Card key: Press the lock release button and take the key out.

## ■ Wireless remote control



- 1 Locks all the doors
  - 2 Unlocks all the doors  
Pressing the button unlocks the driver's door. Pressing the button again within 3 seconds unlocks the other doors.
  - 3 Opens the windows (press and hold)\*
  - 4 Sounds the alarm (press and hold)
- \*: This setting must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket.  
For details on starting the hybrid system, see page 21.

## ■ Entering the vehicle



Grip the driver's door handle to unlock the door. Grip the passenger's door handle to unlock all the doors.\*

Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

\*: The door unlock settings can be changed. Refer to the "Owner's Manual".

## ■ Exiting the vehicle



Touch the lock sensor (the indentation on the upper part of the door handle) to lock the doors.

## ■ Unlocking and locking the back door



Press the back door opener switch button to unlock all the doors.

The doors cannot be unlocked for 3 seconds after the doors are locked.



Press the lock button to lock all the doors.

For details on what to do when the electronic key does not operate properly, see page 95.

## Theft Deterrent System

### ■ Immobilizer system



The indicator light flashes after the "POWER" switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the "POWER" switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

### ■ Alarm (if equipped)

The system sounds the alarm and flashes the lights when forced entry is detected.

**To set the alarm:** Close the doors and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

**To deactivate or stop the alarm:**

- Unlock the doors
- Turn the "POWER" switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

## Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes "POWER" switch modes.

### Starting the hybrid system



1] Check that the parking brake is set.

2] Firmly depress the brake pedal.

Check that the "POWER" switch indicator turns green. If the indicator does not turn green, the hybrid system cannot be started.

When the shift position is N, the hybrid system cannot start. Shift the shift position to P, when starting the hybrid system. (→P.24)

3] Press the "POWER" switch.

Continue depressing the brake pedal until the hybrid system is completely started.

The hybrid system can be started from any "POWER" switch mode.

4] Check that the "READY" indicator is on.

If the "READY" indicator changes from a flashing light to a solid light and the buzzer sounds, the hybrid system is starting normally.

The vehicle will not move when the "READY" indicator is off.

The vehicle can move when the "READY" indicator is on even if the engine is stopped. (The gasoline engine starts or stops automatically in accordance with the state of the vehicle.)

## ■ Stopping the hybrid system


---

- 1 Stop the vehicle completely.
- 2 Set the parking brake.
- 3 Shift the shift position to P.  
Check that the shift position indicator shows P.
- 4 Press the "POWER" switch.  
The hybrid system will stop, and the meter display will be extinguished (the shift position indicator will be extinguished a few seconds after the meter display).
- 5 Slowly release the brake pedal and check that the indicator on the "POWER" switch is off.

## ■ Changing "POWER" switch modes

---

Modes can be changed by pressing the "POWER" switch with the brake pedal released. (The mode changes each time the switch is pressed.)

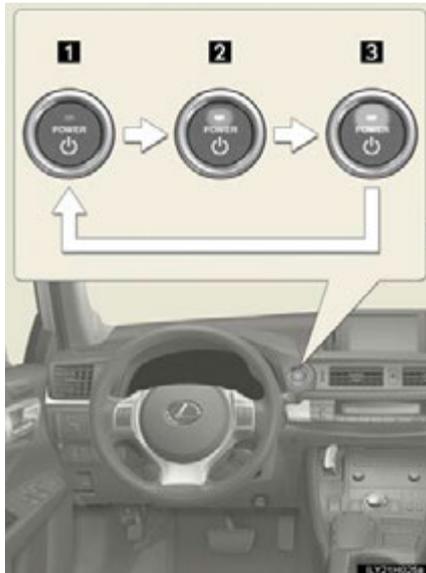

- 1 Off  
The emergency flashers can be used.
- 2 ACCESSORY mode  
Some electrical components such as the audio system can be used.  
The "POWER" switch indicator turns amber.
- 3 ON mode  
All electrical components can be used.  
The "POWER" switch indicator turns amber.

## Hybrid Transmission

### Shifting the shift lever



#### 1 Shift lever

Operate the shift lever gently and ensure correct shifting operation.



When shifting to the D or R positions, move the shift lever along the shift gate.



To shift to the N position, slide the shift lever to the left and hold it. The shift position will change to N.



Shifting to B is only possible when shift position D is selected.



The shift lever will always return to this original position after a shifting operation. When shifting from P to N, D or R, from D to R, or from R to D, ensure that the brake pedal is being depressed and the vehicle is stationary.

#### 2 Shift position indicator

The current shift position is illuminated.

When any shift position other than D or B is selected, the arrow toward B and B position indicator disappear from the shift position indicator.

When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.

## ■ Shift position purpose

Shift position	Function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving*
B	Applying engine braking or strong braking when the accelerator pedal has been released on steep downward slopes etc.

\*: For good fuel economy and noise reduction, the D position should usually be used.

## ■ P position switch

### ■ When shifting the shift position to P



Fully stop the vehicle and set the parking brake, and then press the P position switch.

When the shift position is changed to P, the switch indicator comes on.

Check that the P position is illuminated on the shift position indicator.

### ■ Shifting the shift position from P to other positions

- While depressing the brake pedal firmly, operate the shift lever. If the shift lever is operated without depressing the brake pedal, the buzzer will sound and the shifting operation will be disabled.
- When selecting the shift position, make sure that the shift position has been changed to the desired position by checking the shift position indicator provided on the instrument cluster.
- The shift position cannot be changed from P to B directly.

## ■ Selecting a driving mode

The following modes can be selected to suit driving conditions:



**1** Normal mode

**2** Eco drive mode

Suitable for improving the fuel economy, because the torque corresponding to the accelerator pedal depression amount can be generated more smoothly than it is in normal conditions and the operation of the air conditioning system (heating/cooling) will be minimized.

When the driving mode select switch is turned left, the "ECO MODE" indicator comes on in the instrument cluster.

Press the switch to change the driving mode to normal mode.

**3** Sport mode


Use when high levels of response and feeling are desirable, such as when driving in mountainous regions or when overtaking.

When the driving mode select switch is turned right, the "SPORT MODE" indicator comes on in the instrument cluster. Press the switch to change the driving mode to normal mode.

## ■ EV drive mode

In EV drive mode, the electric motor (traction motor), powered by the hybrid battery (traction battery), is used to drive the vehicle.

This mode allows you to drive in residential areas late at night, or in indoor parking lots etc. without concern for noises and exhaust gas emissions.

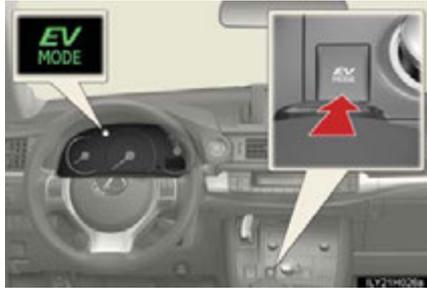

### Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

### ■ Situations in which EV drive mode cannot be turned on


It may not be possible to turn EV drive mode on in the following situations. If it cannot be turned on, a buzzer will sound and a message will be shown on the multi-information display.

- The temperature of the hybrid system is high.  
The vehicle has been left in the sun, driven on a hill, driven at high speeds, etc.
- The temperature of the hybrid system is low.  
The vehicle has been left in temperatures lower than about 68°F (20°C) for a long period of time etc.
- The gasoline engine is warming up.
- The hybrid battery (traction battery) is low.  
An "Energy Monitor" display of level 3 or lower may indicate a low battery level.
- Vehicle speed is high.
- The accelerator pedal is depressed firmly or the vehicle is on a hill etc.
- The windshield defogger is in use.

## Multi-information Display

The multi-information display presents the driver with a variety of driving-related data including the warning messages.

### Display contents

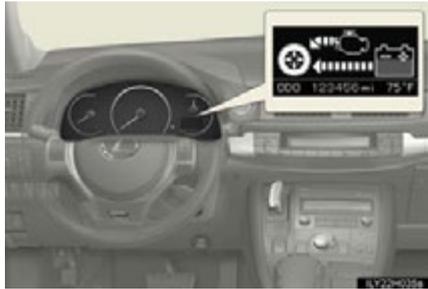

- Energy monitor
- Trip information
  - Current fuel consumption/Average fuel consumption after refueling
  - Average fuel consumption
  - Cruising range
  - Elapsed time
  - Average vehicle speed
- Instrument cluster setting
- Intuitive parking assist display (if equipped)
- Dynamic radar cruise control display (if equipped)
- Warning messages


### Switching the display



Items displayed can be switched by pressing the "DISP" switch.

- When using the intuitive parking assist or dynamic radar cruise control, the appropriate display is shown on the screen.
- If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


## Turn Signal Lever

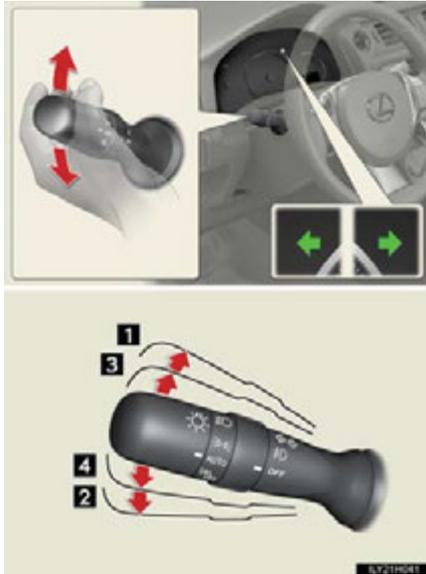

- 1 Right turn
- 2 Left turn
- 3 Lane change to the right (push and hold the lever partway)  
The right hand signals will flash until you release the lever.
- 4 Lane change to the left (push and hold the lever partway)  
The left hand signals will flash until you release the lever.

## Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.

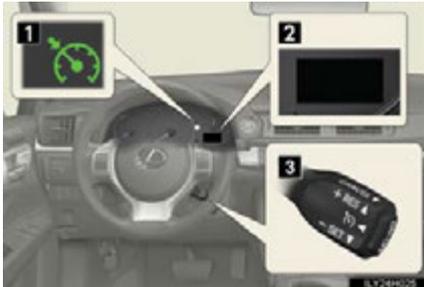

- 1 Indicators
- 2 Display
- 3 Cruise control switch

### Setting the vehicle speed



- 1 Press the "ON-OFF" button to activate the cruise control.  
Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.



- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.  
"SET" will be displayed.  
The vehicle speed at the moment the lever is released becomes the set speed.



### ■ Adjusting the set speed

---



- 1** Increases the speed
  - 2** Decreases the speed
- Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

### ■ Canceling and resuming the constant speed control


---



- 1** Pulling the lever toward you cancels the constant speed control.  
The speed setting is also canceled when the brakes are applied.
- 2** Pushing the lever up resumes the constant speed control.  
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## Dynamic Radar Cruise Control (if equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

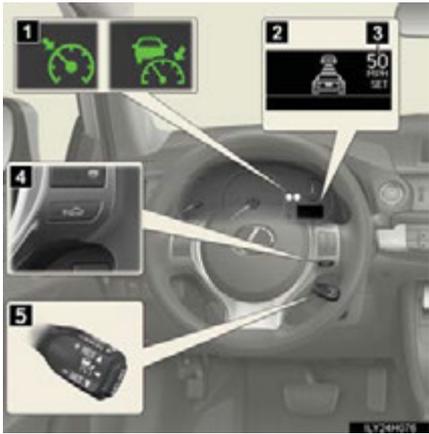

- 1 Indicators
- 2 Display
- 3 Set speed
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

## ■ Setting the vehicle speed (vehicle-to-vehicle distance control mode)



- 1 Press the "ON-OFF" button to activate the cruise control.

Radar cruise control indicator will come on.


Press the button again to deactivate the cruise control.

- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.

"SET" will be displayed.

The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

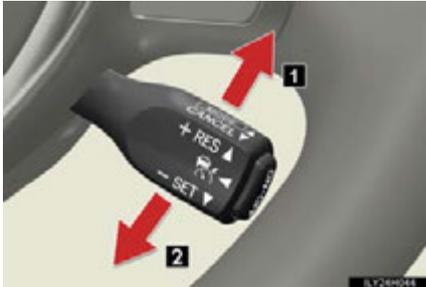


- 1 Increases the speed
- 2 Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

## ■ Changing the vehicle-to-vehicle distance

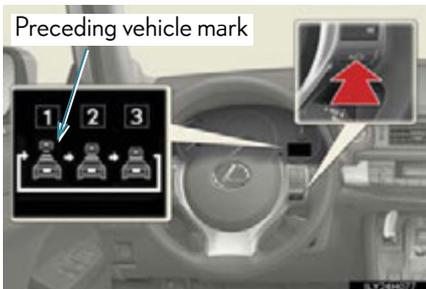

Pressing the button changes the vehicle-to-vehicle distance as follows:

- 1 Long
- 2 Medium
- 3 Short

The vehicle-to-vehicle distance is set automatically to long mode when the "POWER" switch is turned to ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## ■ Canceling and resuming the constant speed control

---




- 1** Pulling the lever toward you cancels the constant speed control. The speed setting is also canceled when the brakes are applied.
- 2** Pushing the lever up resumes the constant speed control. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## ■ Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the multi-information display, navigation system screen (if equipped) and a buzzer. Always check the surrounding area when using this system.

## ■ Turning the system on and off

---

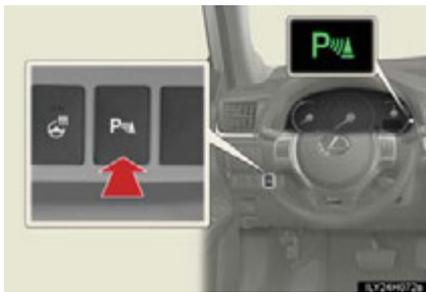


Turns the intuitive parking assist on/off

When on, the buzzer sounds and the indicator light comes on to inform the driver that the system is operational.


## Headlights

### Type A

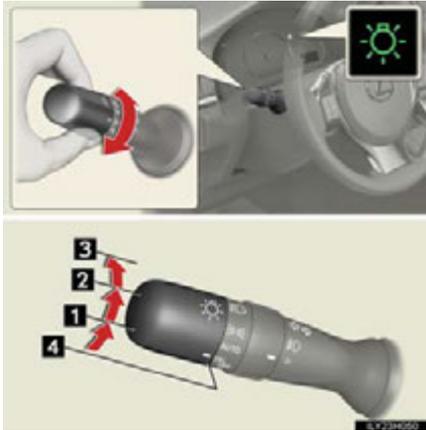


- 1 AUTO** The headlights and side marker, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).
- 2**  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3**  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4**  The daytime running light turn off.

### Type B

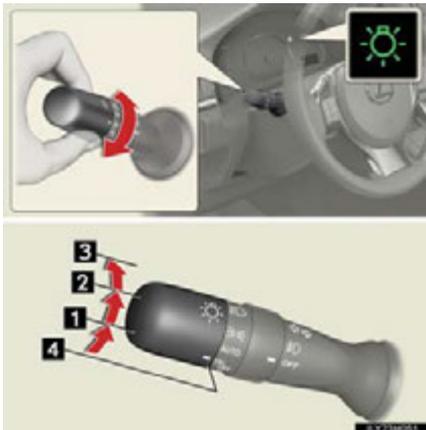


### Type C

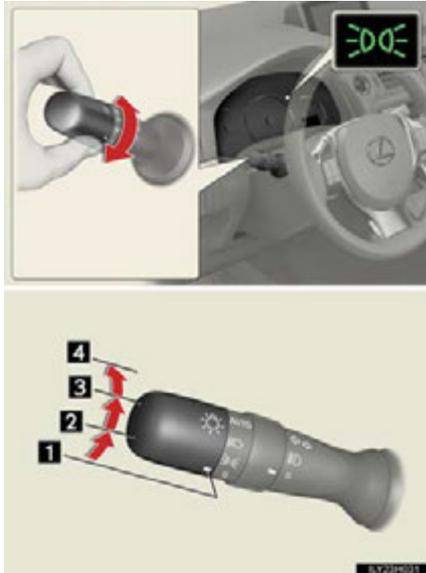

- 1**  The daytime running lights turn on.
- 2**  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- 3**  The headlights and all the lights listed above (except daytime running lights) turn on.
- 4** **AUTO** The headlights and side marker, parking lights, daytime running lights and so on turn on and off automatically (when the "POWER" switch is in ON mode).

### ■ Turning on the high beam headlights

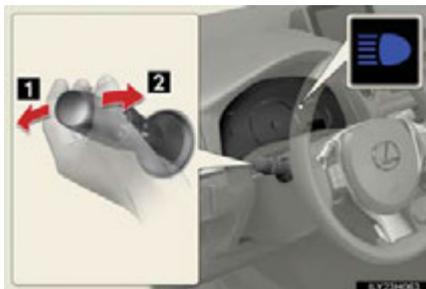

- 1** With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- 2** Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.




## Windshield Wipers and Washer

### ■ Intermittent windshield wipers with interval adjuster (if equipped)

The wiper operation is selected by moving the lever as follows.

When intermittent windshield wiper operation is selected, wiper intervals can be also adjusted.

#### Type A

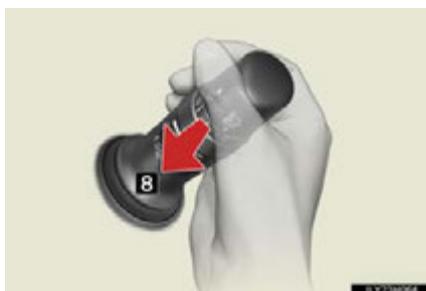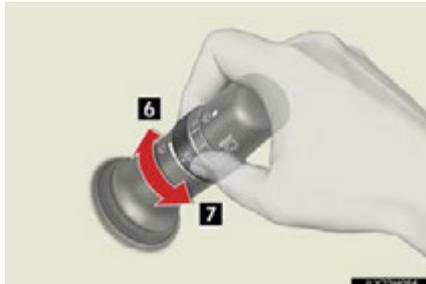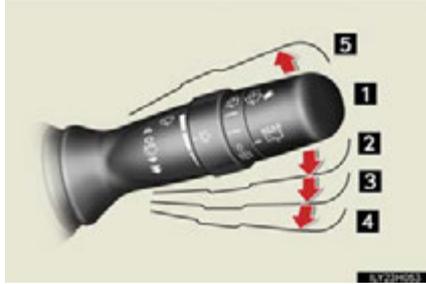


- 1 OFF
- 2 Intermittent windshield wiper operation
- 3 Low speed windshield wiper operation
- 4 High speed windshield wiper operation
- 5 Temporary operation

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

- 8 Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.

Type B

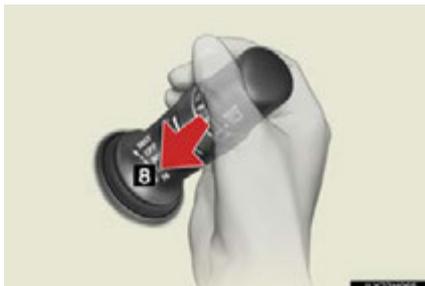

- 1 **OFF** OFF
- 2 **INT** Intermittent windshield wiper operation
- 3 **LO** Low speed windshield wiper operation
- 4 **HI** High speed windshield wiper operation
- 5 **MIST** Temporary operation

- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

- 8 Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.

## ■ Rain-sensing windshield wipers (if equipped)

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

When "AUTO" is selected, the sensor sensitivity can be adjusted as follows by turning the switch ring:


### Type A



- 1  OFF
- 2  Rain-sensing wiper operation
- 3  Low speed wiper operation
- 4  High speed wiper operation
- 5  Temporary operation



- 6 Increases the sensitivity
- 7 Decreases the sensitivity


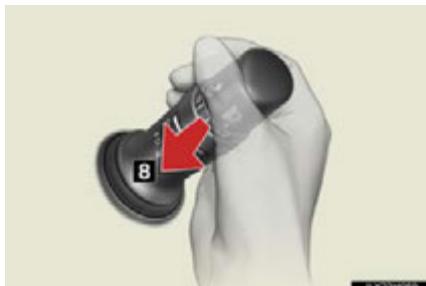


- 8 Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.


Type B



- 1 **OFF** OFF
- 2 **AUTO** Rain-sensing wiper operation
- 3 **LO** Low speed wiper operation
- 4 **HI** High speed wiper operation
- 5 **MIST** Temporary operation

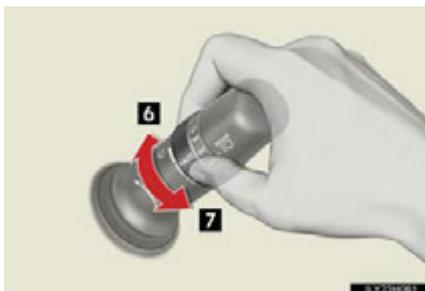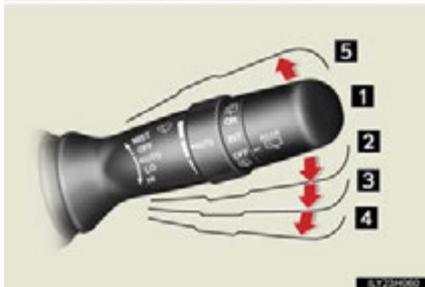



- 6 Increases the sensitivity
- 7 Decreases the sensitivity

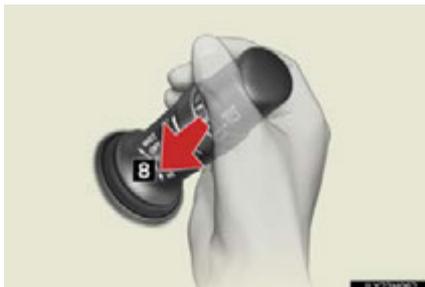

- 8 Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.


## Rear Window Wiper and Washer (if equipped)

Type A

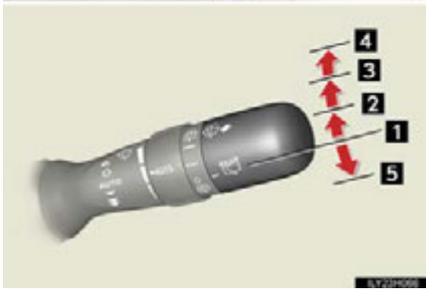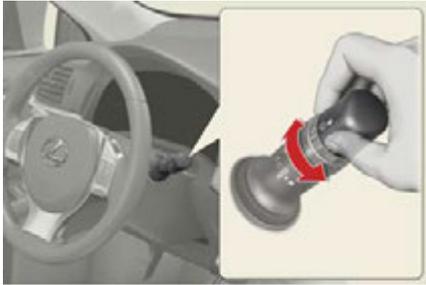

- 1 OFF
- 2 Intermittent window wiper operation
- 3 Normal window wiper operation
- 4 Washer/wiper dual operation
- 5 Washer/wiper dual operation

Type B

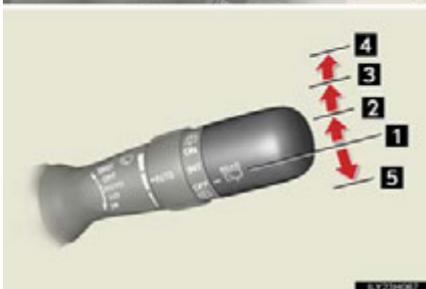


- 1 **OFF** OFF
- 2 **INT** Intermittent window wiper operation
- 3 **ON** Normal window wiper operation
- 4 Washer/wiper dual operation
- 5 Washer/wiper dual operation

## Remote Touch (if equipped)

The Remote Touch can be used to operate the navigation screens and configure settings.

### Basic operation

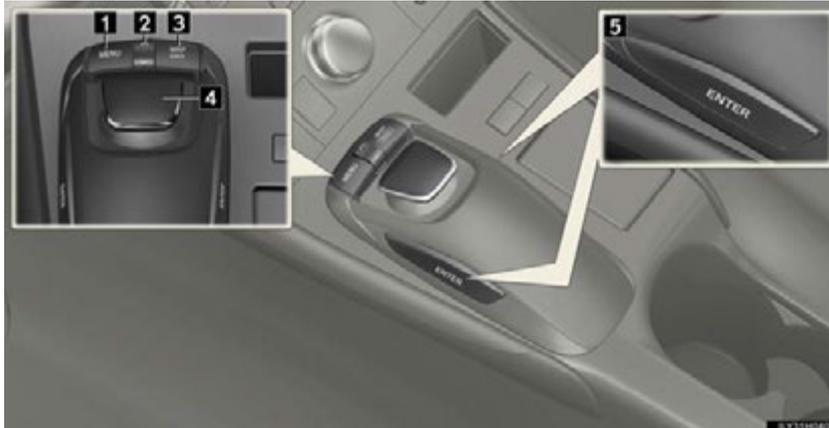

- 1** "MENU" button  
Press to display the "Menu" screen.
- 2** "∧∨" button  
Press to change the scale of the map and to scroll the list screen.
- 3** "MAP/VOICE" button  
Press to repeat a voice guidance, cancel the screen scroll, start guidance, and display the current position.
- 4** Remote Touch knob  
Move in the desired direction to select a function, letter and map screen button.
- 5** "ENTER" button  
Press to enter the selected function, letter or map screen button.


## ■ Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- 1 "Destination"
- 2 "Info/Apps" ("Info")
- 3 "Setup"
- 4 "Radio" (→P.61)
- 5 "Media" (→P.60)
- 6 "Climate" (→P.64)
- 7 "Phone" (→P.53)
- 8 "Display" (→P.43)

## ■ Display

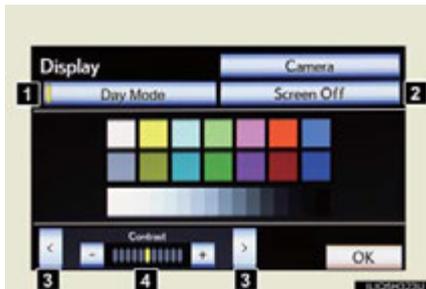

Press the "MENU" button on the Remote Touch and select "Display" on the "Menu" screen.

- 1 Displays the screen in "Day Mode" with the headlight switch on\*
- 2 Turns the screen off
- 3 Change function
- 4 Adjust contrast/brightness

\*: The displays condition is not changed to night mode even if headlight switch is turned on when the vehicle is in a bright area such as outside in direct sunlight or the instrument panel light control dial is turned fully to upper.



## ■ Screen scroll operation




To scroll over the map, place the pointer in a position near the desired destination and then press and hold the “ENTER” button on the Remote Touch.

- 1 Indicates the street name, city name, etc. for the selected point
- 2 Displays various information for the selected point (if available)
- 3 Indicates the distance from the current position to the pointer
- 4 Displays the “Map Mode” screen
- 5 Zooms in on the map
- 6 Zooms out on the map


## ■ Setting a route

While route guidance is operating, you can change the route using the following method.

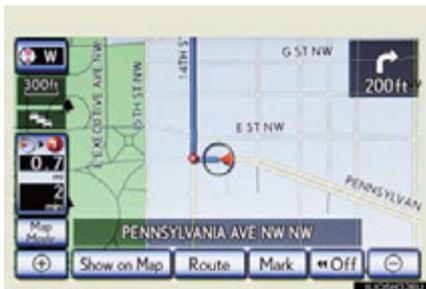

Select “Route”.

The following settings can be accessed

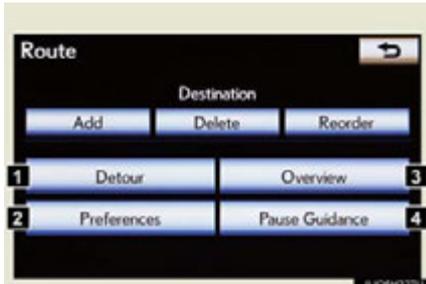

- 1 Detour setting
- 2 Route preferences
- 3 Route overview
- 4 Pause and resume route guidance

Some functions are unavailable while the vehicle is in motion. Refer to the “Navigation System Owner’s Manual”.

## Navigation System (if equipped)

### Register home



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.




- 2 Select "Setup".



- 3 Select "Navigation".



- 4 Select "Home".
- 5 Select "Set Home".
- 6 Select "Address".

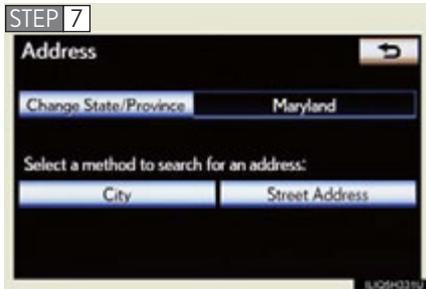

- 7 Select "City".
- 8 Input a city name and select "OK".
- 9 Select the screen button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.
- 10 Input the street name and select "OK".
- 11 When the desired street name is found, select the corresponding button.
- 12 Input a house number and select "OK".
- 13 Select "Enter".
- 14 Select "OK".

## Destination input — Search by address

### Select by city name




- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.



- 2 Select "Destination".



3 Select "Address".

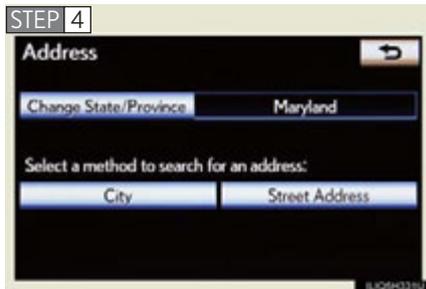

4 Select "City".



5 Input a city name and select "OK".

6 Select the screen button of the desired city name from the displayed list.

7 Input the street name and select "OK".

8 When the desired street name is found, select the corresponding screen button.

9 Input a house number and select "OK".

10 Select "Go to".

11 Select "OK".

Select by street address




1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.




2 Select "Destination".



3 Select "Address".

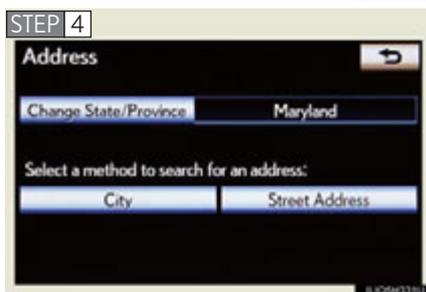

4 Select "Street Address".

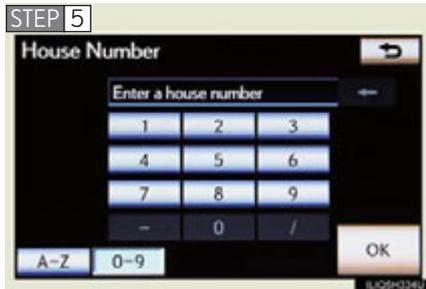

- 5 Input a house number and select "OK".
- 6 Input the street name and select "OK".
- 7 When the desired street name is found, select the corresponding screen button.
- 8 Input a city name and select "OK".
- 9 Select the screen button of the desired city name from the displayed list.
- 10 Select "Go to".
- 11 Select "OK".

### Destination input — Search points of interest by name




- 1 Press the "MENU" button on the Remote Touch. Please refer to P.42 for the Remote Touch operation.



- 2 Select "Destination".



- 3 Select "Point of Interest".

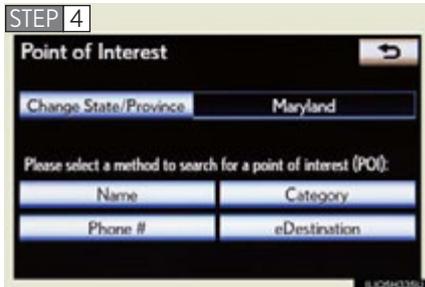

4] Select "Name".



5] Input the name of the point of interest and select "OK".

6] Select the screen button of the desired destination.

7] Select "Go to".

8] Select "OK".

**Destination input — Search points of interest by category**




1] Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.




2] Select "Destination".



3 Select "Point of Interest".

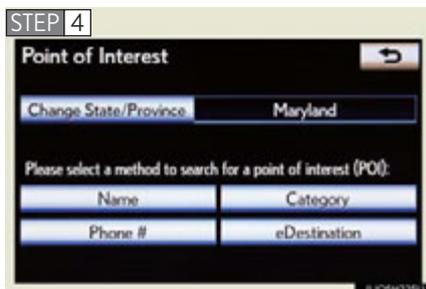

4 Select "Category".

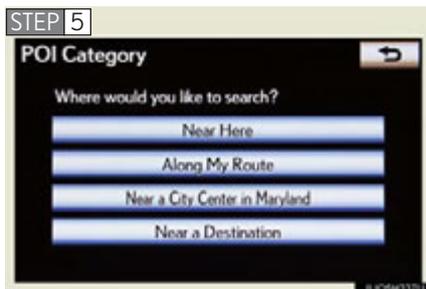

5 Select "Near a Destination".

6 Select the screen button of the desired destination and set the search point.

7 Select the desired point of interest category from the displayed list.

8 Select the screen button of the desired item.

9 Select "Go to".

10 Select "OK".

**Destination input — Search points of interest by phone number**



1 Press the "MENU" button on the Remote Touch.


Please refer to P.42 for the Remote Touch operation.




2 Select "Destination".



3 Select "Point of Interest".

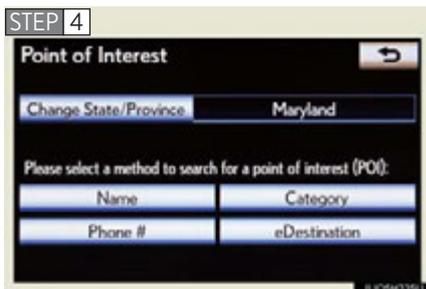

4 Select "Phone #".

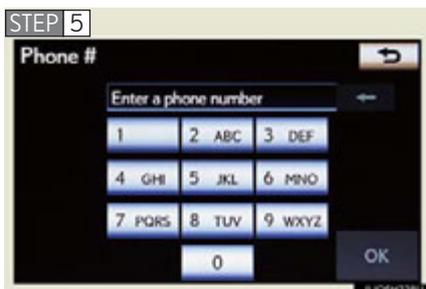

5 Input a phone number and select "OK".

6 Select "Go to".

7 Select "OK".

## Hands-free System For Cellular Phone (vehicles with a navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.



- 2 Select "Phone".



- 3 Select "Yes".



- 4] Enter the passcode displayed on the screen into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 5] If a completion message is displayed, registration is complete.

**Phonebook transfer**



- 1] Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.



- 2] Select "Setup".



- 3] Select "Phone".
- 4] Select "Phonebook".
- 5] Select "Manage Contacts".



6 Select "Transfer Contacts".

7 Select "Update Contacts".



8 Transfer the phonebook data to the system by using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.

Phonebook transfer may not be possible depending on phone model.

### ■ Registering a speed dial



1 Press the "MENU" button on the Remote Touch. Please refer to P.42 for the Remote Touch operation.



2 Select "Setup".



3 Select "Phone".

4 Select "Phonebook".

5 Select "Manage Speed Dials".



6 Select "New".



7 Select the data you want to register.


8 Select the desired phone number.

9 Select the screen button you want to register in.

10 The registration completion message is displayed on the screen.

## ■ Calling by name

You can call by giving a voice command. For operation and command of the voice recognition, refer to the "Navigation System Owner's Manual".

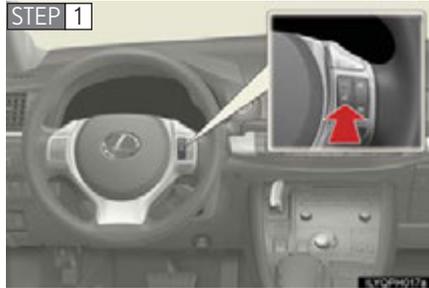


1 Press .



- 2 Following the system guidance, wait for the beep and then say "Call" and the desired name.
- 3 Following the system guidance, wait for the beep and say "Dial".

 : Pressing this switch turns the voice command system on. Say a command after the beep.


## ■ Calling by speed dial

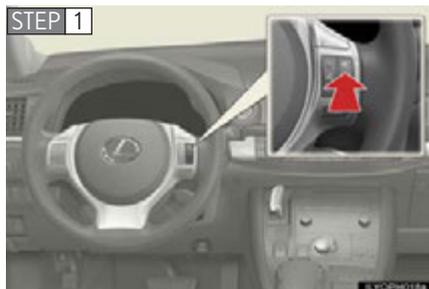

1 Press .



2 Select "Speed Dials".

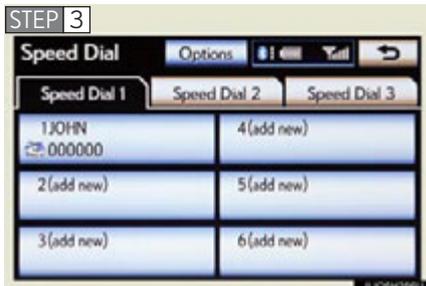

3 Select the desired number to call.

### ■ Calling using SMS/MMS message



1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.



2 Select "Phone".




- 3 Select "Messages".
- 4 Select "SMS/MMS" tab.
- 5 Select the desired received message from the displayed list.
- 6 Press  on the steering wheel.

### ■ Receiving a call



- 1 When a call is received, this screen is displayed with a sound.

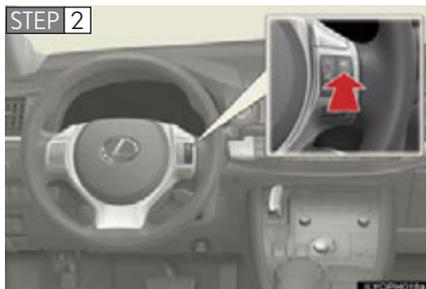

- 2 Press  on the steering wheel to talk on the phone.  
To refuse the call, press  on the steering wheel.

## Audio System (vehicles with a navigation system)

### Audio control screen

Follow the procedure below to display the audio control screen.




- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.42 for the Remote Touch operation.



- 2 Using the Remote Touch, select "Radio" or "Media" and press the "ENTER" button.

### Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

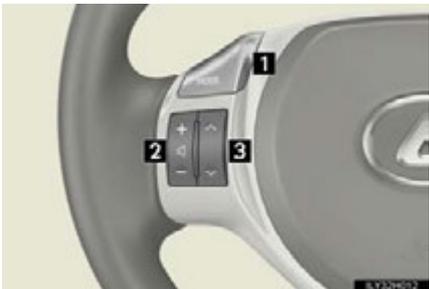

- 1 Turns the power on, selects an audio source
- 2 Increases/decreases volume
- 3 Radio mode: Selects a preset station  
Audio CD mode: Selects a track  
MP3/WMA disc mode: Selects a file  
DVD mode: Selects a chapter  
iPod mode: Selects a track

## Basic operation



- 1 Function menu tab
- 2 Sound quality modes
- 3 "MEDIA" button
  - DISC: DVD player/CD player
  - BT audio: Bluetooth® audio
  - AUX: Auxiliary audio device
  - USB: USB memory
  - iPod: iPod
- 4 Power/Volume
- 5 "RADIO" button
  - AM: AM radio
  - FM: FM radio
  - SAT: Satellite radio
  - Apps: Internet radio broadcast

## Radio



- 1 Station selector
- 2 Scanning for receivable stations
- 3 Using HD Radio™ Technology
- 4 Adjusting the frequency
- 5 Preset tuning/seeking the frequency
- 6 "RADIO" button

### Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Using the Remote Touch, select one of the screen buttons (1-6), then press and hold the "ENTER" button until a beep is heard, indicating that the station has been set.

## ■ DVD player/CD player

### ■ Playing an audio CD



- 1 Selecting a track
- 2 Random playback
- 3 Repeat play
- 4 Playback/pause
- 5 CD eject

### ■ Playing a CD with MP3/WMA files



- 1 Folder selection
- 2 File selection
- 3 Random playback
- 4 Repeat play
- 5 Playback/pause
- 6 CD eject

### ■ Playing a DVD



- 1 Rewind
- 2 Stop
- 3 Playback/pause
- 4 Image display (full screen)
- 5 Fast forward
- 6 Chapter selection
- 7 DVD eject

### ■ Operating an iPod



- 1 Track selection
- 2 Shuffle playback
- 3 Repeat play
- 4 Playback/pause
- 5 Selecting a play mode

## Air Conditioning System (vehicles with a navigation system)



- |  |  |
|--|--|
| 1 Driver side temperature display                            | 10 Dual mode   |
| 2 Driver side temperature control                            | 11 Cooling and dehumidification function on/off              |
| 3 Fan speed control  | 12 Outside air/recirculated air mode button                  |
| 4 Air flows to the feet and the windshield defogger operates | 13 "OFF" button  |
| 5 Outside temperature  | 14 Automatic mode  |
| 6 Air outlet selector  | 15 Rear window and outside rear view mirror defoggers switch |
| 7 Passenger side temperature control                         | 16 Windshield defogger                                       |
| 8 Passenger side temperature display                         | 17 Windshield wiper de-icer                                  |
| 9 Micro dust pollen filter                                   |  |

### ■ Using the automatic mode

Press **14** to turn on the airflow and **2** to adjust the temperature.

### ■ Adjusting the temperature

In dual mode, driver and passenger side temperature settings can be adjusted separately.


Press **7** to adjust the temperature for the passenger side.

To cancel the dual mode, press **10**.

## Hands-free System For Cellular Phone (vehicles without a navigation system)

### Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.

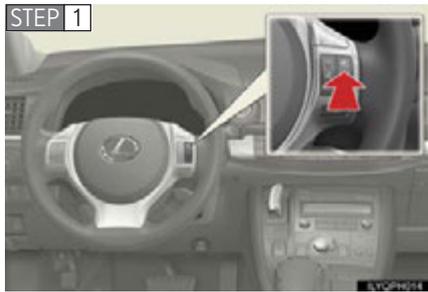


To use a Bluetooth® phone, it is necessary to first register it in the system.

- 1] Press  or .
- 2] Press  and say "Pair phone".
- 3] Press  and say a name\*.  
\*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.
- 4] Press  and say "Confirm" to display the passkey.
- 5] Enter the passkey shown on the display into the phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 6] Once the voice guidance for registration completion is finished, press .

: Pressing this switch turns the voice command system on. Say a command after the beep.


## ■ Calling by number

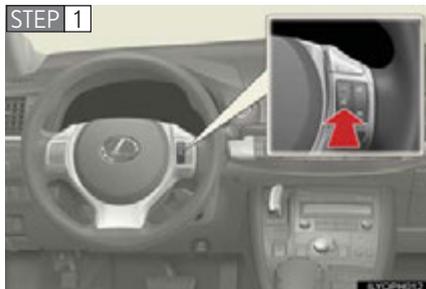

- 1 Press  and say "Dial by number".
- 2 Press  and say the phone number.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

## ■ Calling by name

You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "Owner's Manual".

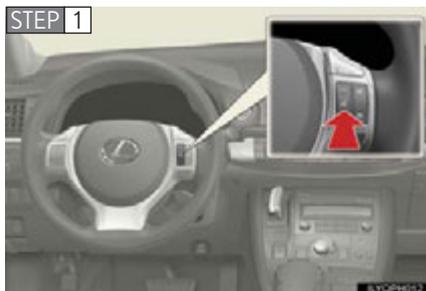


- 1 Press  and say "Dial by name".
- 2 Press  and say a contact name.
- 3 Dialing
  - a. Press .
  - b. Press  and say "Dial".

 : Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by speed dial

---

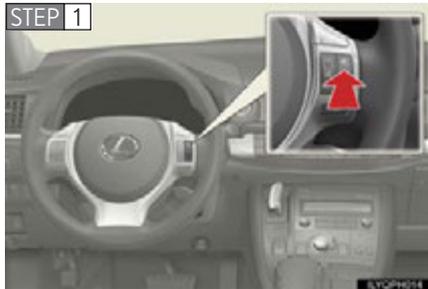


1 Press .



2 Press the desired preset button.

3 Press .

## ■ Phonebook transfer

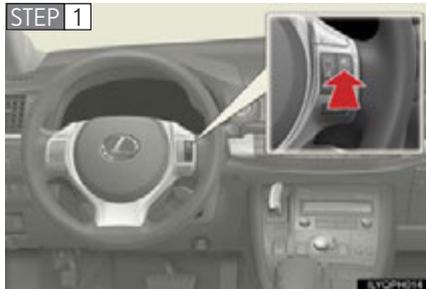


- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone.  
Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.

 : Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Changing the registered name


---

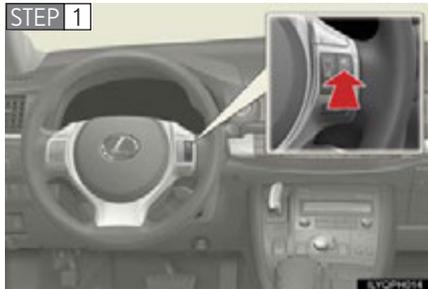

- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Change name".
- 4 Press  and say the desired name.
- 5 Press  and say "Confirm".
- 6 Press  and say the new name.
- 7 Press  and say "Confirm".

 : Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Registering a speed dial

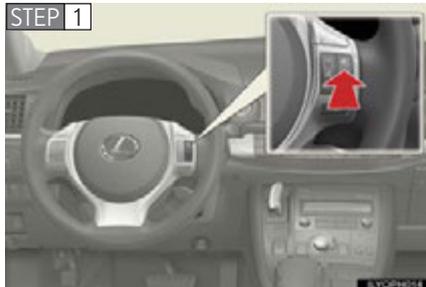

- 1] Press .
- 2] Press  and say "Phone book".
- 3] Press  and say "Set speed dial".
- 4] Select the data to be registered.
- 5] Press  and say the desired name.
- 6] Press  and say "Confirm".
- 7] Press the desired preset button.
- 8] Press  and say "Confirm"

 : Pressing this switch turns the voice command system on. Say a command after the beep.

## Audio System (vehicles without a navigation system)

### Basic operation

#### Type A



- 1 Power/Volume
- 2 Audio sources
  - AM•SAT: AM radio/Satellite radio
  - FM1/FM2: FM radio
  - CD•AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

#### Type B



- 1 Power/Volume
- 2 Audio sources
  - AM•FM: AM radio/FM radio
  - SAT: Satellite radio
  - CD•AUX: CD player/Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

#### Type C



- 1 Power/Volume
- 2 Audio sources
  - AM: AM radio
  - FM: FM radio
  - CD: CD player
  - AUX•USB: Auxiliary audio device/USB memory/iPod/Bluetooth® audio
- 3 Sound quality modes

## ■ Radio

### Type A




- 1 Displaying text message
- 2 Station selector
- 3 Scanning for receivable stations
- 4 Adjusting the frequency
- 5 Changing the program type
- 6 Seeking the frequency

### Type B



- 1 Station selector
- 2 Displaying text message
- 3 Traffic information button
- 4 Adjusting the frequency
- 5 Scanning for receivable stations
- 6 Changing the program type
- 7 Seeking the frequency

### Type C

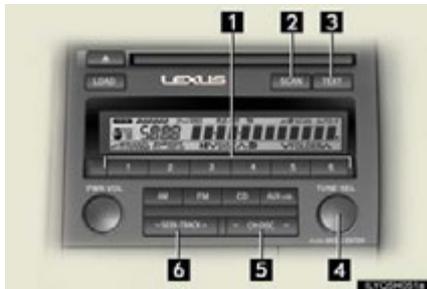

- 1 Station selector
- 2 Scanning for receivable stations
- 3 Displaying text message
- 4 Adjusting the frequency
- 5 Station selector
- 6 Seeking the frequency

### ■ Entering station presets

- 1 Select the desired station by using the tune, the seek or the scan function.
- 2 Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.

## ■ CD player

### ■ Playing an audio CD

#### Type A



- 1 Displaying text message
- 2 CD eject
- 3 Repeat play
- 4 Search play
- 5 Playback
- 6 Selecting a track
- 7 Random playback

#### Type B



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Displaying text message
- 6 Search play
- 7 CD selection
- 8 Playback
- 9 Selecting a track
- 10 Random playback


#### Type C



- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Search play
- 6 Displaying text message
- 7 CD selection
- 8 Playback
- 9 Selecting a track
- 10 Random playback


■ Playing a CD with MP3/WMA files

Type A

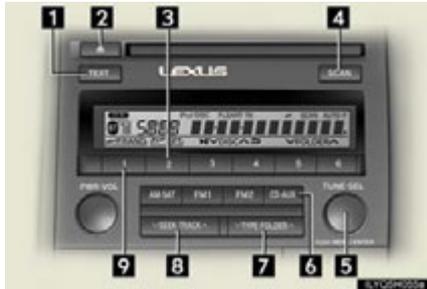


- 1 Displaying text message
- 2 CD eject
- 3 Repeat play
- 4 Search play
- 5 File selection
- 6 Playback
- 7 Folder selection
- 8 Selecting a file
- 9 Random playback

Type B

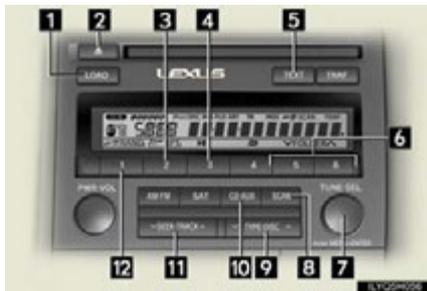

- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Displaying text message
- 6 Folder selection
- 7 File selection
- 8 Search play
- 9 CD selection
- 10 Playback
- 11 Selecting a file
- 12 Random playback

Type C

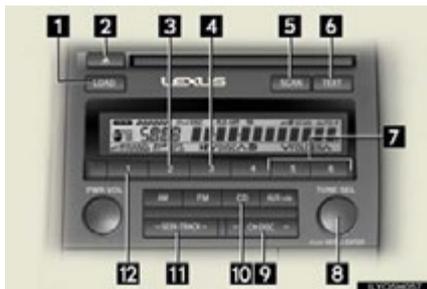

- 1 CD insert
- 2 CD eject
- 3 Repeat play
- 4 Playback/pause
- 5 Search play
- 6 Displaying text message
- 7 Folder selection
- 8 File selection
- 9 CD selection
- 10 Playback
- 11 Selecting a file
- 12 Random playback

## ■ Loading a CD

### Type A

Insert a CD.

### Type B and C

- 1 Press the "LOAD" button.  
"WAIT" is shown on the display.
- 2 When the indicator on the slot turns from amber to green, insert a CD.  
The display changes from "WAIT" to "LOAD".

## ■ Loading multiple CDs (Type B and C)

- 1 Press and hold the "LOAD" button until you hear a beep.  
"WAIT" is shown on the display.
- 2 When the indicator on the slot turns from amber to green, insert a CD.  
The display changes from "WAIT" to "LOAD".  
The indicator on the slot turns to amber when the CD is being inserted.
- 3 When the indicator on the slot turns from amber to green, insert the next CD.  
Repeat the procedure for the remaining CDs.  
To cancel the operation, press the "LOAD" button. If you do not insert a disc within 15 seconds, loading will be canceled automatically.

## ■ Operating an iPod


---

### Type A




- 1 Displaying text message
- 2 Repeat play
- 3 Playback/pause
- 4 Go back
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback

### Type B

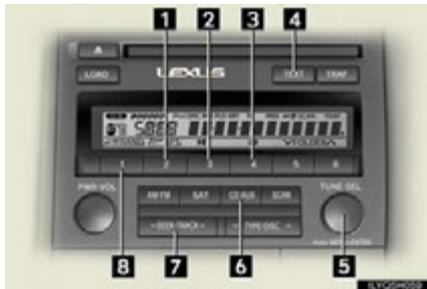

- 1 Repeat play
- 2 Playback/pause
- 3 Go back
- 4 Displaying text message
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback


### Type C

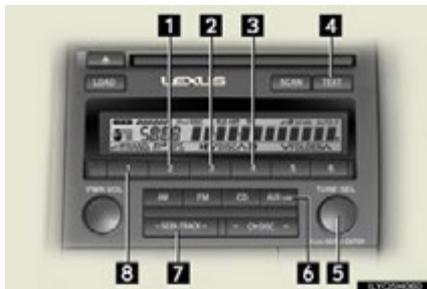

- 1 Repeat play
- 2 Playback/pause
- 3 Go back
- 4 Displaying text message
- 5 iPod menu/Song selection
- 6 Playback
- 7 Song selection
- 8 Shuffle playback


### Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

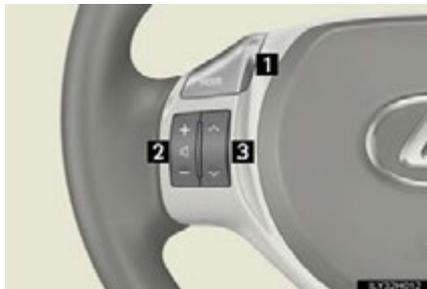

- 1 Turns the power on, selects an audio source
- 2 Increases/decreases volume
- 3 Radio mode: Selects a radio station  
CD mode: Selects a track, file (MP3 and WMA) and disc  
iPod mode: Selects a song

## Air Conditioning System (vehicles without a navigation system)

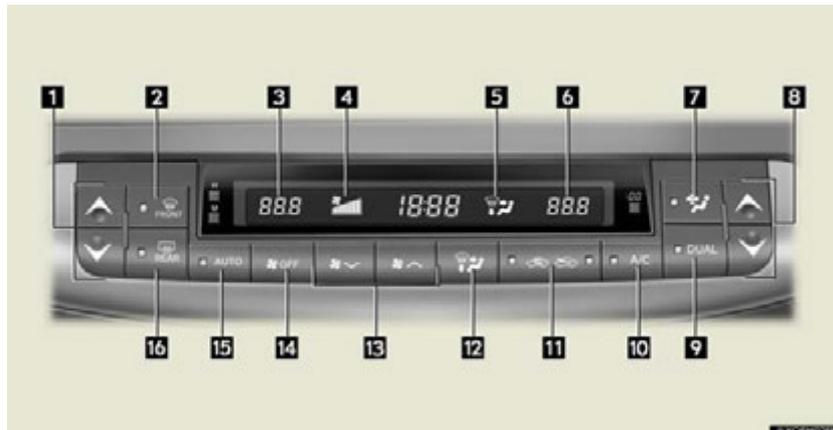

- |  |  |
|--|--|
| 1 Driver's side temperature control buttons    | 9 Dual mode button   |
| 2 Windshield defogger button                   | 10 Cooling and dehumidification function on/off button       |
| 3 Driver's side temperature display            | 11 Outside/recirculated air mode button                      |
| 4 Fan speed display                            | 12 Air outlet selector button                                |
| 5 Air outlet display                           | 13 Fan speed control buttons                                 |
| 6 Passenger's side temperature display         | 14 "OFF" button  |
| 7 Micro dust and pollen filter mode button     | 15 Automatic mode button                                     |
| 8 Passenger's side temperature control buttons | 16 Rear window and outside rear view mirror defoggers switch |

### ■ Using the automatic mode

Press **15** to turn on the airflow and **1** to adjust the temperature.

### ■ Adjusting the temperature

#### ■ To simultaneously adjust the driver's side and passenger's side temperature settings

Press **9** to turn the "DUAL" indicator off and then press **1**.


#### ■ To individually adjust the driver's side and passenger's side temperature settings

Press **9** or **8** to turn the "DUAL" indicator on and then press **1** or **8**.

## Voice Command System (vehicles with a navigation system)

### Basic operation

NOTE: When inputting voice commands you must wait until after the beep to speak.

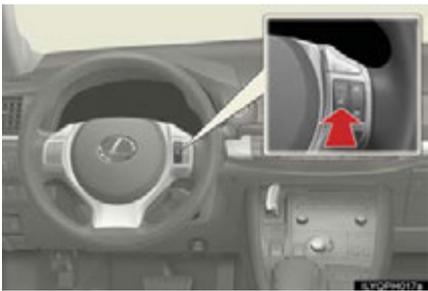

- 1] Press  on the steering wheel.
- 2] - If you know the command:  
Press  again.  
- If you do not know the command:  
Follow the voice guidance to learn the command and then press  again.
- 3] Say a command after the beep.

- Important voice commands information and tips
  - Voice commands can be used while driving.
  - You must wait until after the beep to say a command.
  - In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
  - If you know what command to use, you can press  at any time to interrupt the voice guidance.

## ■ Command list

### Set a Destination

Command	Action
"Find Nearby <POI category>"	Displays a list of <POI category <sup>*</sup> > near the current position.
"Enter an Address"	Enables setting a destination by saying the address.
"Go Home"	Displays the route to home.
"Call Destination Assist"	Connects Lexus Enform with Safety Connect response center.
"Destination by Phone Number"	Enables setting a destination by saying the phone number.

\*: For example; Gas stations, Restaurants, etc.

### Use the Phone

Command	Action
"Call <name> <type>"	Calls made by saying a name from the phonebook. For example: Say "Call John Smith", "Call John Smith, mobile" etc.
"Dial <number>"	Calls made by saying the phone number. For example: Say "Dial 911", "Dial 5556667777" etc.
"International Call"	Calls international numbers by saying the phone number.

### Play Music

Command	Action
"Play Artist <name>"	Plays tracks by the selected artist. For example: Say "Play artist <XXXXX>"*
"Play Album <name>"	Plays tracks from the selected album. For example: Say "Play album <XXXXX>"*
"Play Song <name>"	Plays the selected track. For example: Say "Play song Summertime", "Play song Concerto in A Major" etc.
"Play Playlist <name>"	Plays tracks from the selected playlist. For example: Say "Play playlist My Favorite Songs", "Play Playlist Classic Hits" etc.

\*: Say the desired artist name or album name in the place of the "<>".

### Get Information

Command	Action
"Traffic"	Displays the traffic incident list.
"Weather"	Displays weather information.
"Sports Scores"	Displays the sports list.
"Stock Quotes"	Displays the stocks list.
"Fuel Prices"	Displays the fuel prices list.
"Lexus Insider"	Displays the Lexus insider list.

### Select audio mode

Command	Action
"Radio", "AM", "FM", "Satellite radio", "Disc", "Auxiliary", "Bluetooth* audio", "iPod", "USB audio"	Change the audio mode.
"Audio on"	Turns the audio system on.
"Audio off"	Turns the audio system off.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

### Climate/air conditioning system command

Command	Action
"Automatic climate control"	Turns air conditioning system on and off.
"Warmer"	Turns temperature up.
"Cooler"	Turns temperature down.


"Select audio mode" and "Climate/air conditioning system command" are enabled when expanded voice commands are turned "On". Refer to the "Navigation System Owner's Manual".

## Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Press down and release the lid.

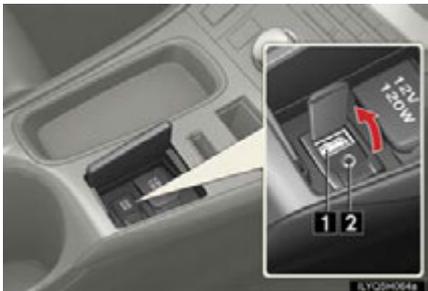

- 1 USB port
- 2 AUX port


## **Garage Door Opener (if equipped)**

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink<sup>®</sup> Universal Transceiver) is manufactured under license from HomeLink<sup>®</sup>.

### **Programming the HomeLink<sup>®</sup>**

The HomeLink<sup>®</sup> compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.

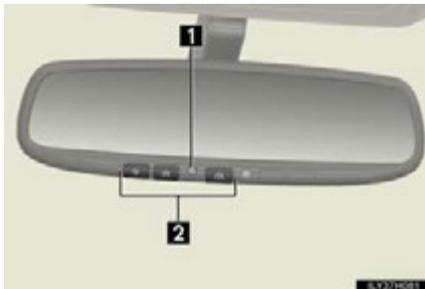

**1** Indicator light

**2** Buttons

## ■ Programming HomeLink®



1 Hold your hand-held transmitter 1 to 3 in. (25 to 75 mm) of the HomeLink® buttons.

2 Press and hold down the desired HomeLink® button.

3 For U.S.A. owners:

While pressing the HomeLink® button, press and hold down the button on the hand-held transmitter until the indicator light changes from a slow to a rapid flash.

For Canadian owners:

While pressing the HomeLink® button, repeatedly press and release (cycle) the button on the hand-held transmitter every 2 seconds until the indicator light changes from a slow to a rapid flash.

If your garage door is of the rolling code type:

4 Press the training button on the motor-head unit in your garage.

5 Press and hold the vehicle's programmed HomeLink® button for 2 seconds and release it. Repeat this step once again.

If the door does not open, press and release the same button once again.

## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.


To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## ■ Operating HomeLink®

---

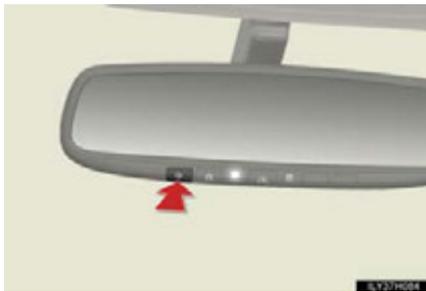

Press the appropriate HomeLink® button.  
The indicator light should come on.

## ■ Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

## ■ System components

---



- 1 Microphone
- 2 LED light indicators
- 3 "SOS" button

## ■ Services

---

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification\***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

## Lexus Enform with Safety Connect (if equipped)

Lexus Enform and Safety Connect are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology and XM satellite data services to provide safety and security as well as convenience features to subscribers.

Lexus Enform and Safety Connect services are supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Lexus Enform service is available by subscription on select, telematics hardware-equipped vehicles.

For details, refer to the "Owner's Manual" and "Navigation System Owner's Manual".

### Services

---

With an active Lexus Enform subscription, the following features are available:

● **Safety Connect features** (→P.84)

- Automatic collision notification \*1
- Stolen vehicle location
- Emergency assistance button (SOS)
- Enhanced roadside assistance

● **Apps**

Apps is a service that enables the usable contents of a mobile phone to be displayed on and operated from the navigation system screen. Before Apps can be used, a few settings need to be performed.

● **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus Enform response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, via the Lexus.com owner's Web site, to select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

You can store up to 200 locations online to access and update at any time.

Your locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contains the locations to be sent to your vehicle can be created. (See Lexus Enform with Safety Connect Guide for more information.)

- **XM Sports and Stocks \*2**

XM Sports and Stocks is a service included with XM satellite radio subscriptions. These services are also available with an XM Travellink subscription. With this service, you can receive updates via the navigation system on your personally selected sports teams and stocks.

- **XM Fuel Prices \*3**

XM Fuel Prices is a service included with an XM Travellink subscription. It enables the navigation system to display current fuel prices and gas station locations, which can be set as a destination if desired.

- **XM NavWeather™\*3**

The subscription-based XM NavWeather™ service allows the navigation system to display weather information on the map screen.

- **XM NavTraffic®\*3**

The subscription-based XM NavTraffic® service allows the navigation system to display traffic information on the map screen.

The following navigation-based Lexus Enform features are available without a subscription:

● **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owner's vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles. Up to 20 articles can be stored at a time.

● **Voice Command**

The voice command system enables you to operate the navigation system, audio/video system, air conditioning system and hands-free system by giving a command.

\*1: U.S. Patent No. 7,508,298 B2

\*2: Available at no extra charge with an active XM satellite radio subscription.

\*3: Available via separate XM subscription(s).

■ **Subscription**

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select "Destination Assist" in your vehicle for further subscription details. XM NavTraffic<sup>®</sup>, XM NavWeather<sup>™</sup> and XM TravelLink require separate XM subscription(s). XM Sports<sup>\*</sup>, XM Stocks<sup>\*</sup> and XM Fuel Prices are available with an XM TravelLink subscription. After a 90-day trial, you must contact XM and set up the appropriate XM subscription(s) to continue receiving these services.

\*: XM Sports and XM Stocks are included with an XM Satellite Radio subscription.

## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


For details the entry function or wireless remote control (→P:17, 18)

### Door lock switch



- 1 Locks all the doors
- 2 Unlocks all the doors

### Inside lock button

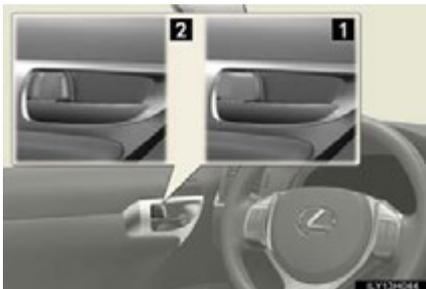

- 1 Locks the door
- 2 Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

### Rear door child-protector lock




The door cannot be opened from inside the vehicle when the lock is set.

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

## Power Windows

### Power window switches

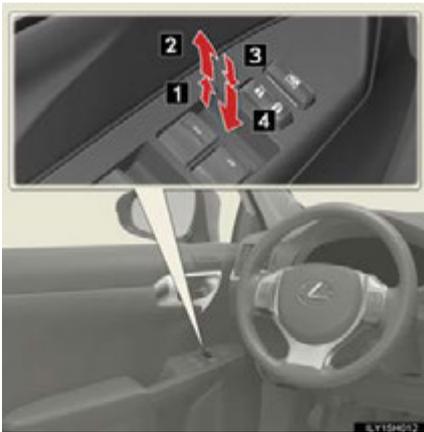

- 1 Closing
- 2 One-touch closing\*
- 3 Opening
- 4 One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

### Window lock switch




Press the switch down to lock the passenger window.

Use this switch to prevent children from accidentally opening or closing a passenger window.

## Moon Roof (if equipped)


### ■ Opening and closing

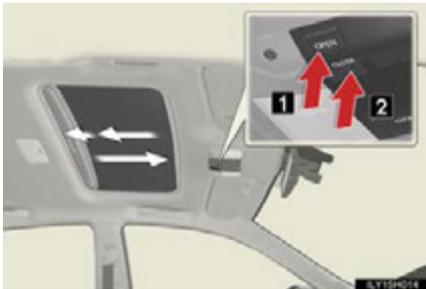

- 1** Opens the moon roof\*  
Push and hold "OPEN" for more than 1 second. The moon roof tilts up and then opens automatically.
- 2** Closes the moon roof\*  
Push and hold "CLOSE" for more than 1 second. The moon roof closes automatically and stops slightly before the tilt up position.  
Push and hold "CLOSE" again to fully close the moon roof.

\*: Lightly press either of the moon roof switches to stop the moon roof part-way.

### ■ Tilting up and down

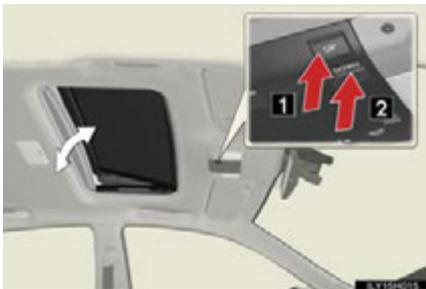

- 1** Tilts the moon roof up\*
  - 2** Tilts the moon roof down\*
- \*: Lightly press either of the moon roof switches to stop the moon roof part-way.

## Fuel Tank Cap

### ■ Before refueling the vehicle

Turn the "POWER" switch off and close all the doors and windows.


### ■ Opening the fuel tank cap



1 Press the opener to open the fuel filler door.



2 Turn the fuel tank cap slowly to open.

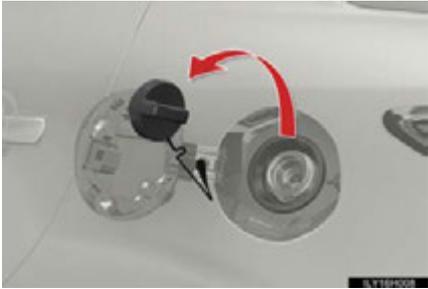

3 Hang the fuel tank cap on the back of the fuel filler door.

**What to do if...**

**List of Warning/Indicator Lights**

**Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.**



(U.S.A.)

Brake system warning light (red indicator)



(Canada)

**Stop the vehicle immediately.**



Charging system warning light



Low engine oil pressure warning light



High coolant temperature warning light

**Have the vehicle inspected immediately.**



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



(Flashes)

Pre-collision system warning light (if equipped)



(Comes on)

Slip indicator light



Brake system warning light (yellow indicator)



Automatic headlight leveling system warning light (if equipped)



(Blinking and then continuously on)

Tire pressure warning light

**For further information, refer to the Owner's Manual.**

## What to do if...

### Follow the correction procedures.

	Open door warning light		Master warning light
	Low fuel level warning light		Tire pressure warning light*
	Seat belt reminder light		(Illuminates without blinking)

### See the Owner's Manual

	Turn signal indicator		"SPORT MODE" indicator
	Headlight indicator (U.S.A.)		Cruise control indicator
	Tail light indicator (Canada)		Radar cruise control indicator (if equipped)
	Headlight high beam indicator		Intuitive parking assist indicator (if equipped)
	Front fog light indicator (if equipped)		Slip indicator (Flashes)
	"READY" indicator		Pre-collision system warning light (if equipped) (Flashes faster)
	EV indicator		Shift position indicators
	EV drive mode indicator		
	"ECO MODE" indicator		"AIR BAG ON/OFF" indicator

For further information, refer to the Owner's Manual.

\*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## What to do if...

### If the electronic key does not operate properly

#### Unlocking and locking the doors



Use the mechanical key in order to perform the following operations:

- 1** Locks all the doors
  - 2** Closes the windows\* (turn and hold)
  - 3** Unlocks the door  
Turning the key rearward unlocks the driver's door. Turning the key once again within 3 seconds unlocks the other doors.
  - 4** Opens the windows\* (turn and hold)
- \*: These settings must be customized at your Lexus dealer.

## What to do if...

### ■ Starting the hybrid system



- 1 Depress the brake pedal.
- 2 Touch the Lexus emblem side of the electronic key to the "POWER" switch.  
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3 Press the "POWER" switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the Owner's Manual. If you need further assistance, contact your Lexus dealer.

## What to do if...



### If the hybrid system doesn't start

Make sure that the correct operating procedures have been followed.

#### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the Owner's Manual for more information or contact your Lexus dealer.



#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)

- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)

- Canada: [www.lexus.ca](http://www.lexus.ca)

©2012 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.