

Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

 
| | |
|---|----|
| Air Conditioning System* | |
| Control screen..... | 70 |
| Using the automatic mode..... | 71 |
| Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)..... | 71 |
| Audio System (with Lexus Display Audio System) | |
| Lexus Display Audio operation buttons..... | 57 |
| Using the steering switches to change audio sources..... | 57 |
| Audio menu screen..... | 58 |
| Operating the audio system using the steering wheel switches..... | 60 |
| Audio System (with navigation system)* | |
| Audio control screen..... | 46 |
| Remote control (steering wheel switches)..... | 46 |
| Basic operation..... | 47 |
| Radio..... | 48 |
| DVD player/CD player..... | 49 |
| Operating an iPod..... | 51 |
| Audio System (without a Lexus Display Audio System or navigation system) | |
| Basic operation..... | 67 |
| Radio..... | 67 |
| CD player..... | 67 |
| Operating an iPod..... | 68 |
| Remote control (steering wheel switches)..... | 68 |
| Cruise Control | 26 |
| Dynamic Radar Cruise Control | 28 |
| Energy Monitor/Consumption Screen | 14 |
| Floor Mat Installation | 11 |
| Garage Door Opener | 77 |

*: These features may be operated by Voice Command (See P.72)

| | |
|---|----|
| Hands-free System For Cellular Phone (with Lexus Display Audio System) | |
| How to register a Bluetooth® phone | 54 |
| Registering favorites | 54 |
| Dialing..... | 54 |
| Dialing from the phonebook | 54 |
| When the phonebook is empty..... | 55 |
| Dialing from favorites | 55 |
| To answer the phone..... | 56 |
| To refuse a call | 56 |
| Operating a telephone using the steering wheel switches | 56 |
| Hands-free System For Cellular Phone (with navigation system)* | |
| Bluetooth® phone pairing | 41 |
| Contacts transfer | 42 |
| Registering the contacts in the favorites list..... | 43 |
| Calling by name..... | 44 |
| Calling by favorites list | 44 |
| Calling using e-mail/SMS/MMS message | 45 |
| Receiving a call | 45 |
| Steering switches | 45 |
| Hands-free System For Cellular Phone | |
| (without a Lexus Display Audio System or navigation system)* | |
| Bluetooth® phone pairing | 61 |
| Calling by number | 62 |
| Calling by name..... | 62 |
| Calling by speed dial | 63 |
| Phonebook transfer | 64 |
| Changing the registered name | 65 |
| Registering a speed dial | 66 |
| Headlights | 20 |
| Hybrid System | 12 |


*: These features may be operated by Voice Command (See P.72)

| | |
|---|----|
| Intuitive Parking Assist | 30 |
| Lexus Display Audio Controller (with Lexus Display Audio System) | 52 |
| Lexus Enform (for U.S.A.) | 81 |
| Multi-information Display | 19 |
| Navigation System | |
| Register home | 35 |
| Destination input - Search by address | 36 |
| Destination input - Search points of interest by name..... | 38 |
| Destination input - Search points of interest by category..... | 39 |
| Destination input - Search points of interest by telephone number | 40 |
| Voice Command System..... | 72 |
| Portable Audio Device Ports | 77 |
| Remote Touch (with navigation system) | 32 |
| Rear Window Wiper and Washer | 25 |
| LEXUS Enform Safety Connect | 79 |
| Seat Heaters | 71 |
| Tire Pressure Warning System | 31 |
| Turn Signal Lever | 18 |
| Voice Command System | |
| Basic operation..... | 72 |
| Command list | 73 |
| Windshield Wipers and Washer | 21 |
| XM Satellite Radio | 83 |



Overview

Instrument Panel

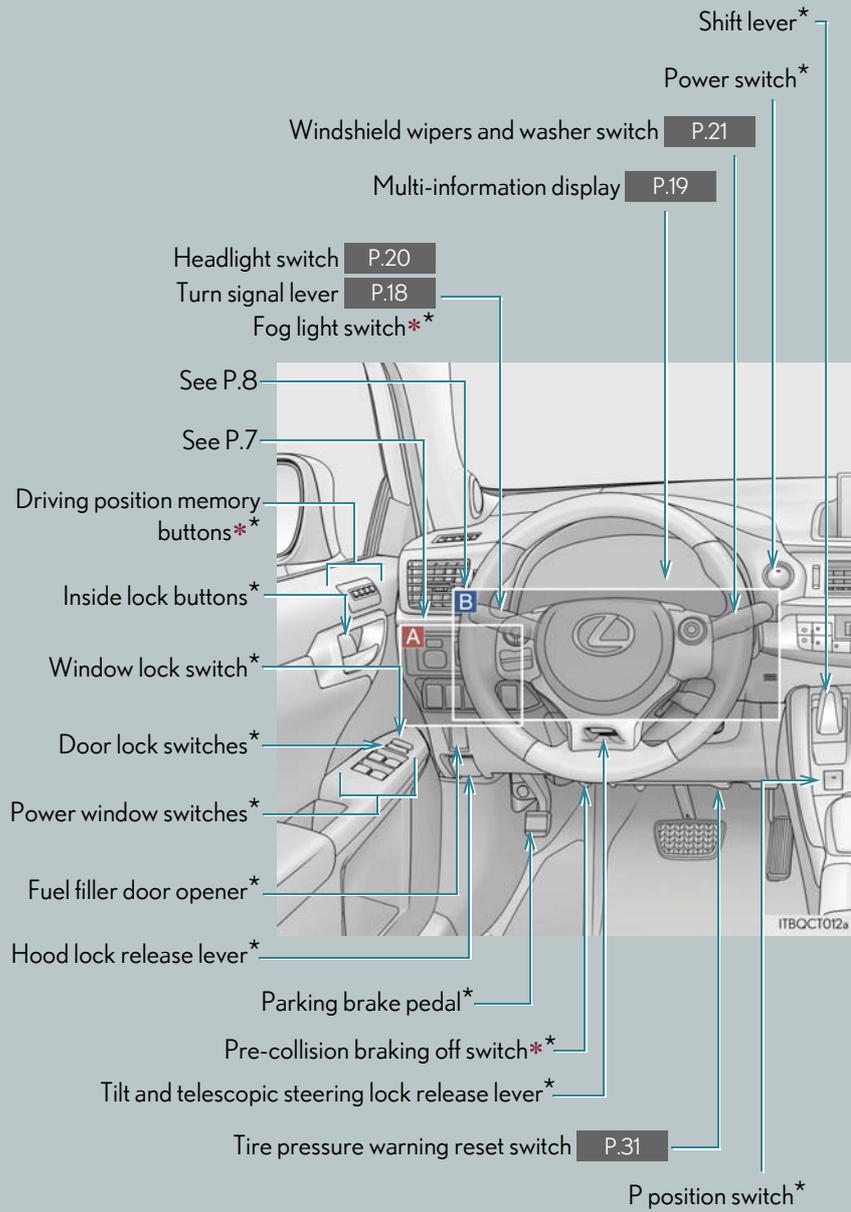

Remote Touch screen* P.32


Navigation system* P.35

Lexus Display Audio system* P.52

Emergency flasher switch*

Air conditioning system P.69

Audio system P.46, 57, 67

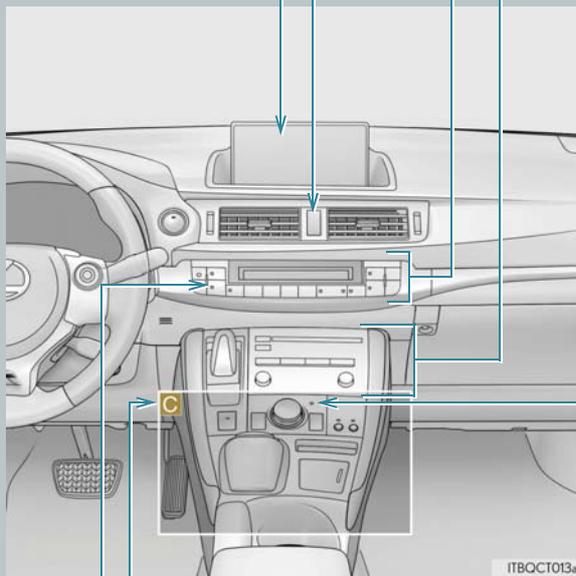

Security indicator*

See P.9

Rear window and outside rear view mirror defoggers switch*


*: If equipped

*: Refer to "OWNER'S MANUAL".

Overview

Instrument Panel

A

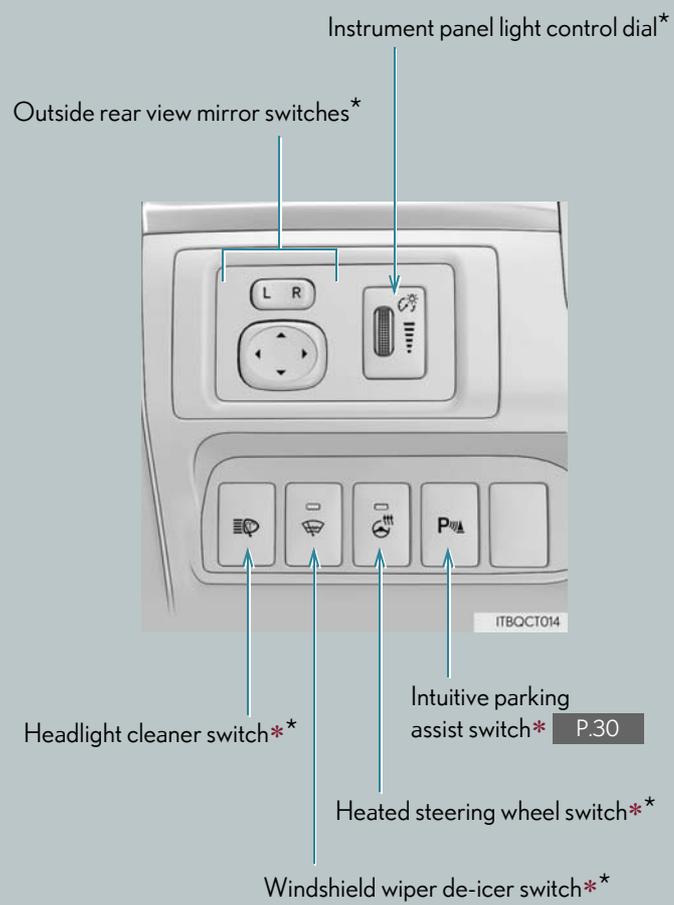


*: If equipped

*: Refer to "OWNER'S MANUAL".

B

Audio remote control switches
P.46, 60, 68

"DISP" switch P.19

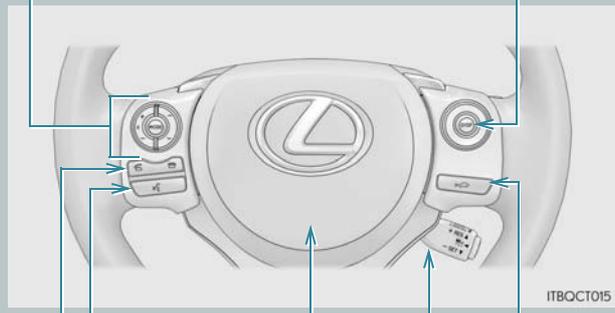

Horn*

Talk switch P.45, 56, 61, 72

Telephone switches P.45, 56, 61


Cruise control switch P.26, 28

Vehicle-to-vehicle distance button* P.29

*: If equipped
*: Refer to "OWNER'S MANUAL".

Overview

Instrument Panel

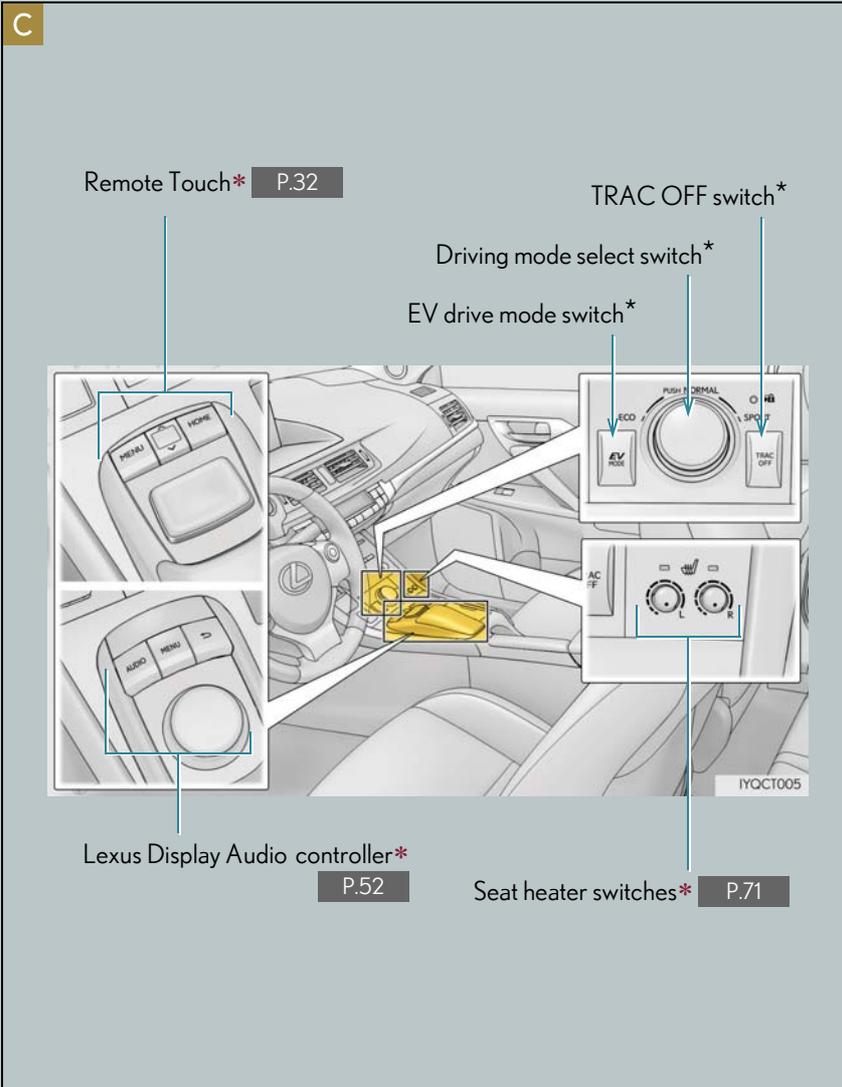


*: If equipped

*: Refer to "OWNER'S MANUAL".

Overview


Roof

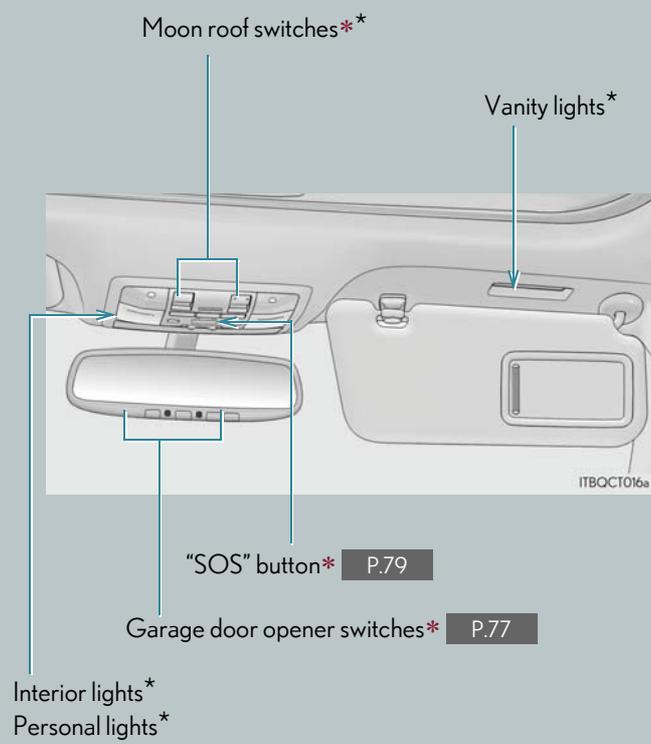


*: If equipped
*: Refer to "OWNER'S MANUAL".

Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

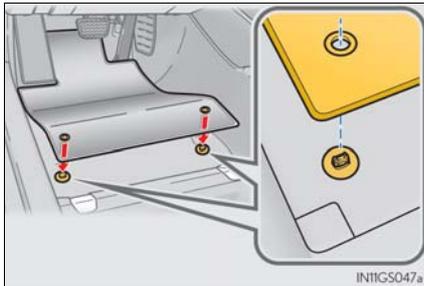

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

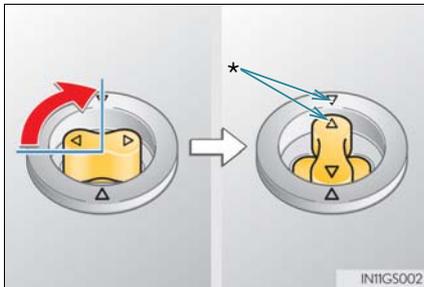

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

*: Always align the Δ marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.


Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "OWNER'S MANUAL".

Hybrid System Indicator

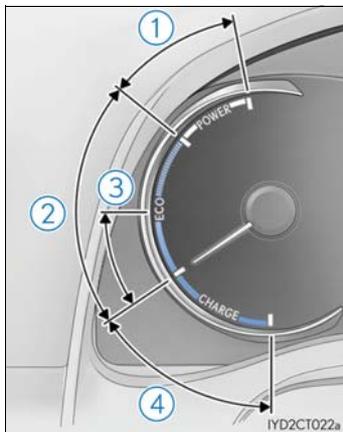

- ① Power area
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- ② Eco area
Shows that the vehicle is being driven in an Eco-friendly manner.
- ③ Hybrid Eco area
Shows that gasoline engine power is not being used very often. The gasoline engine will automatically stop and restart under various conditions.
- ④ Charge area
Shows that energy is being recovered via the regenerative brake.

- Hybrid System Indicator is displayed when the driving mode is in other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration* status. Regenerated energy will be used to charge the hybrid battery (traction battery).

*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

Charging the hybrid battery (traction battery)

When shift position is in N, the hybrid battery (traction battery) is not charged. When the vehicle is stopped, always put the shift position to P.

Also, even in heavy traffic conditions, drive the vehicle in D or B.

■ Regenerative braking

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift position in D or B.
- The brake pedal is depressed while driving with the shift position in D or B.

■ Sounds and vibrations specific to a hybrid vehicle

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, apply the parking brake and make sure to shift the shift position to P when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), behind the rear seats, when the hybrid system is started or stopped.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Operating sounds or motor sounds that occur when the brake pedal is operated.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vent on the side of rear right seat-back.

 
■ Running out of fuel

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start.

(The minimum amount of fuel to add to make the low fuel level warning light go out is about 3.1 gal. [11.8 L, 2.6 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

■ Hybrid warning message

A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.



If a warning message is shown on the multi-information display, read the message and follow the instructions.

Energy Monitor/Consumption Screen

You can view the status of your hybrid system on the multi-information display and the navigation system (if equipped)/Lexus Display Audio system (if equipped).

■ Energy monitor

- How to display on the navigation system
Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".
If the "Trip Information" or "Past Record" screen is displayed, select "Energy".



The flow of energy is displayed on the navigation system screen.

Red: gasoline energy
Amber: electrical energy
Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the Lexus Display Audio system
Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".
If the "Energy Monitor" screen does not appear, move the controller to the right and select "Energy".




The flow of energy is displayed on the Lexus Display Audio screen.

Red: gasoline energy
Amber: electrical energy
Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the multi-information display
Press the “DISP” switch on the steering wheel several times to select the energy monitor display.

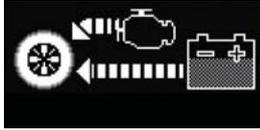

The flow of energy is indicated by the movement of the arrows on the multi-information display.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.

■ Fuel consumption (vehicles with a navigation system or Lexus Display Audio system)

- Trip information

► Navigation system

Press the “MENU” button on the Remote Touch, then select “Info” on the “Menu” screen, and then select “Fuel Consumption”.

If the “Energy Monitor” or “Past Record” screen is displayed, select “Trip Information”.




- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Regenerated energy in the past 15 minutes
One symbol indicates 30 Wh. Up to 5 symbols are shown.
- ⑤ Average vehicle speed since the hybrid system was started.
- ⑥ Elapsed time since the hybrid system was started.
- ⑦ Cruising range

► **Lexus Display Audio system**

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Trip Information" screen does not appear, move the controller to the right and select "Trip Information".

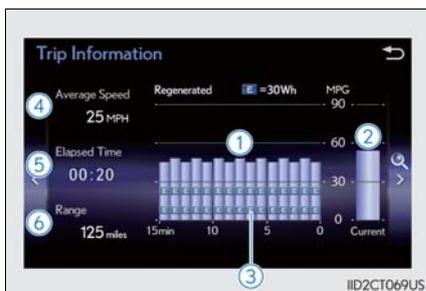

- ① Fuel consumption in the past 15 minutes
- ② Current fuel consumption
- ③ Regenerated energy in the past 15 minutes
One symbol indicates 30 Wh. Up to 5 symbols are shown.
- ④ Average vehicle speed since the hybrid system was started.
- ⑤ Elapsed time since the hybrid system was started.
- ⑥ Cruising range

● Past record

► **Navigation system**

Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Energy Monitor" or "Trip Information" screen is displayed, select "Past Record".



- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

► **Lexus Display Audio system**


Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Past Record" screen does not appear, move the controller to the right and select "Past Record".



- ① Previous fuel consumption record
- ② Current fuel consumption
- ③ Best recorded fuel consumption

Turn Signal Lever

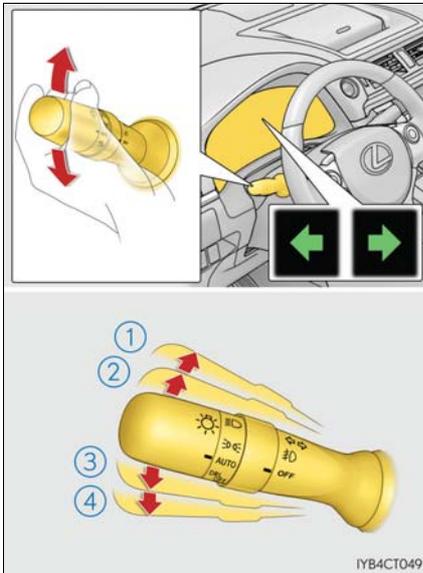

- ① Right turn
- ② Lane change to the right (move the lever partway and release it)
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)
The left hand signals will flash 3 times.
- ④ Left turn

■ Customization

The number of times the turn signals flash during a lane change can be changed.

 
Multi-information Display

The multi-information display presents the driver with a variety of vehicle data.

■ Display contents

- Energy monitor
Displays the status of the hybrid system.
- Drive information
Displays driving range, fuel consumption and other cruising related information.
- Setting
Changes instrument cluster display settings
- Intuitive parking assist display (if equipped)
Automatically displayed when the system is used (→P.30)
- Dynamic radar cruise control display (if equipped)
Automatically displayed when the system is used (→P.28)
- Warning messages
Automatically displayed when a malfunction occurs in one of the vehicle's systems


■ Switching the display



Items displayed can be switched by pressing the "DISP" switch.


Headlights

► Type A

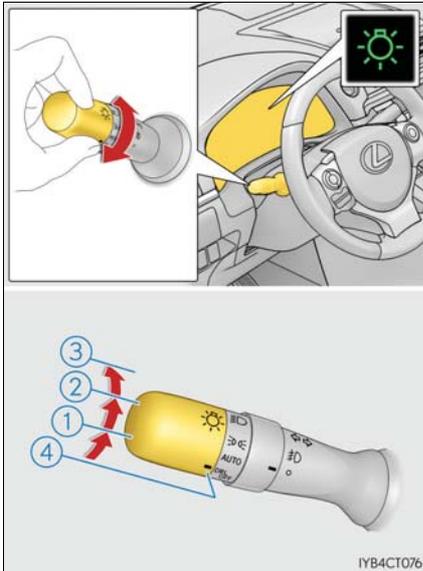


- ① **AUTO** The headlights, side marker, parking lights, daytime running lights and so on turn on and off automatically (when the power switch is in ON mode).
- ②  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- ③  The headlights and all the lights listed above (except daytime running lights) turn on.
- ④  **DRL OFF** The daytime running lights turn off.

► Type B

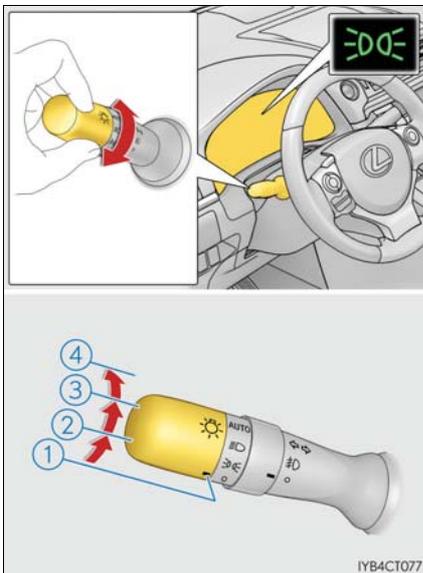

- ①  The daytime running lights turn on.
- ②  The side marker, parking, tail, license plate, daytime running lights and instrument panel lights turn on.
- ③  The headlights and all the lights listed above (except daytime running lights) turn on.
- ④ **AUTO** The headlights, side marker, parking lights, daytime running lights and so on turn on and off automatically (when the power switch is in ON mode).

■ Turning on the high beam headlights

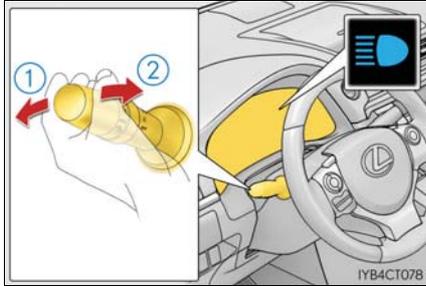


- ① With the headlights on, push the lever away from you to turn on the high beams.
Pull the lever toward you to the center position to turn the high beams off.
- ② Pull the lever toward you and release it to flash the high beams once.
You can flash the high beams with the headlights on or off.

■ Windshield Wipers and Washer


■ Intermittent windshield wipers with interval adjuster (if equipped)

► Type A

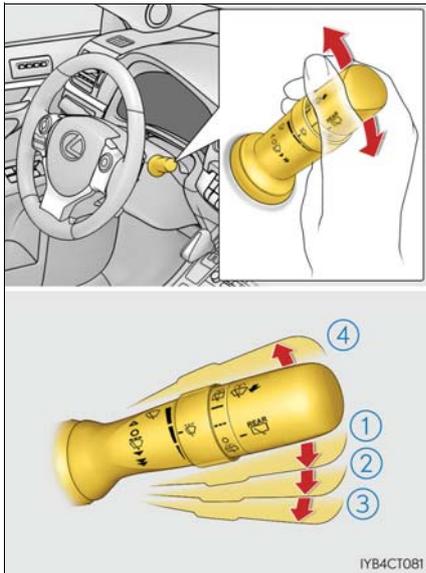

- ① Intermittent operation
- ② Low speed operation
- ③ High speed operation
- ④ Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.

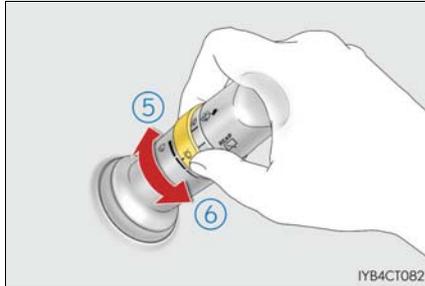


- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency




- ⑦ Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.


► Type B

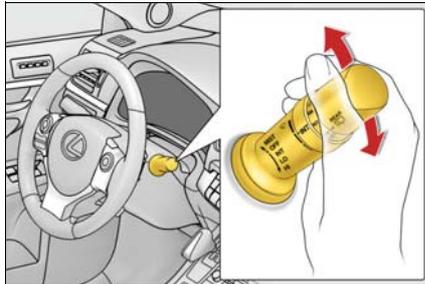

- ① Intermittent operation
- ② Low speed operation
- ③ High speed operation
- ④ Temporary operation

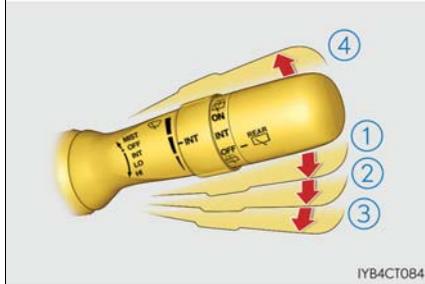

Wiper intervals can be adjusted when intermittent operation is selected.

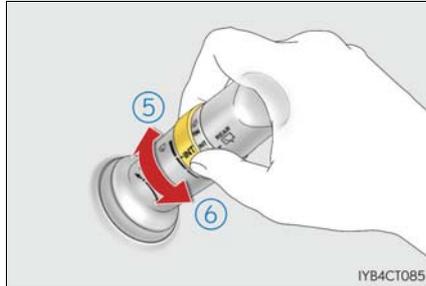


- ⑤ Increases the intermittent windshield wiper frequency
- ⑥ Decreases the intermittent windshield wiper frequency



- ⑦ Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.


■ Rain-sensing windshield wipers (if equipped)

► Type A

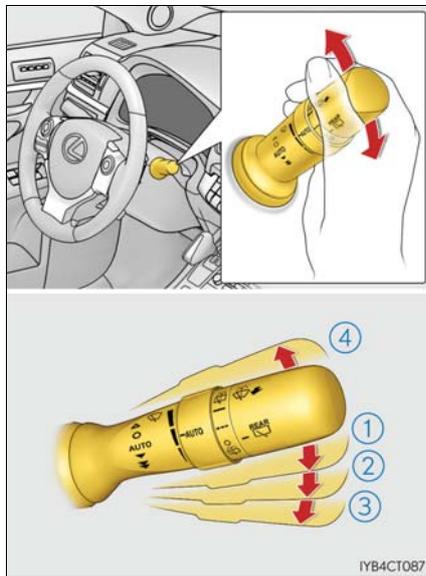

- ① Rain-sensing operation
- ② Low speed operation
- ③ High speed operation
- ④ Temporary operation
When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.

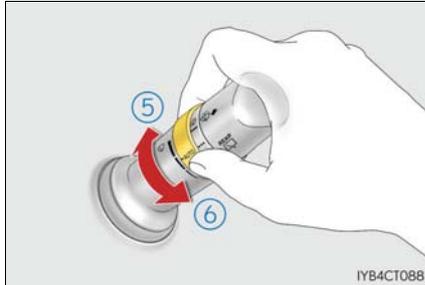


- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity




- ⑦ Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

► Type B

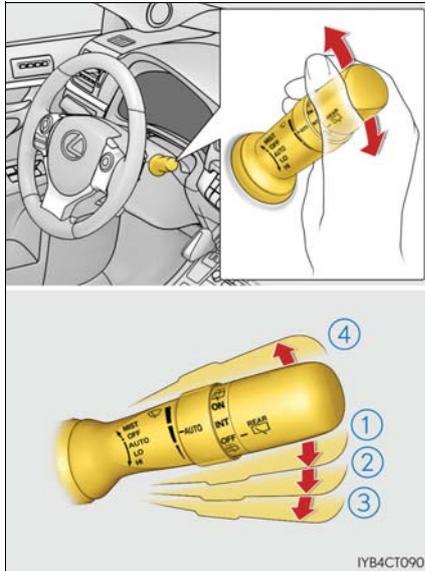


- ① Rain-sensing operation
- ② Low speed operation
- ③ High speed operation
- ④ Temporary operation
When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.

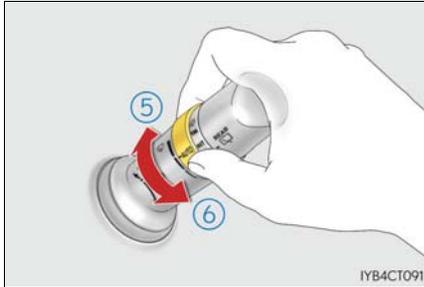


- ⑤ Increases the sensitivity
- ⑥ Decreases the sensitivity

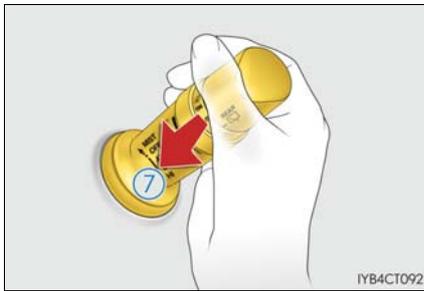


- ⑦ Washer/wiper dual operation
The wipers will automatically operate a couple of times after the washer squirts.
Vehicles with headlight cleaners: If the headlights are on, the headlight cleaners will operate once.

Rear Window Wiper and Washer


► Type A

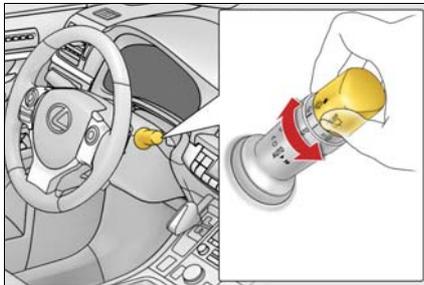

- ① - - - Intermittent operation
- ② — Normal operation
- ③ Washer/wiper dual operation
- ④ Washer/wiper dual operation

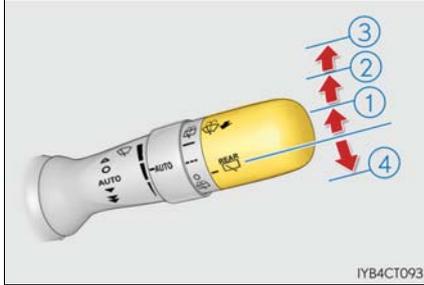

► Type B

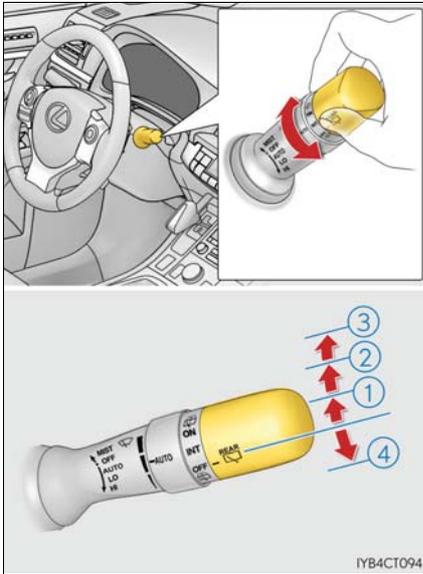

- ① **INT** Intermittent operation
- ② **ON** Normal operation
- ③  Washer/wiper dual operation
- ④  Washer/wiper dual operation


Cruise Control (if equipped)

Use the cruise control to maintain a set speed without depressing the accelerator pedal.




- ① Indicator
- ② Display
- ③ Cruise control switch

■ Setting the vehicle speed

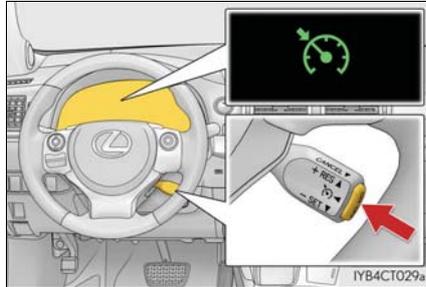


 - 1 Press the "ON-OFF" button to activate the cruise control.
Cruise control indicator will come on.
Press the button again to deactivate the cruise control.




- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed.
"SET" will be displayed.
The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

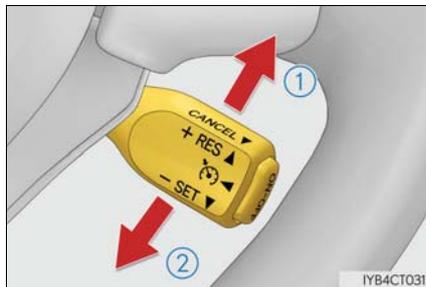

- ① Increases the speed
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

 
■ Canceling and resuming the constant speed control



- ① Pulling the lever toward you cancels the constant speed control.
The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the constant speed control.
Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Dynamic Radar Cruise Control (if equipped)

Dynamic radar cruise control supplements conventional cruise control with a vehicle-to-vehicle distance control. In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates or decelerates in order to maintain a set following distance from vehicles ahead.

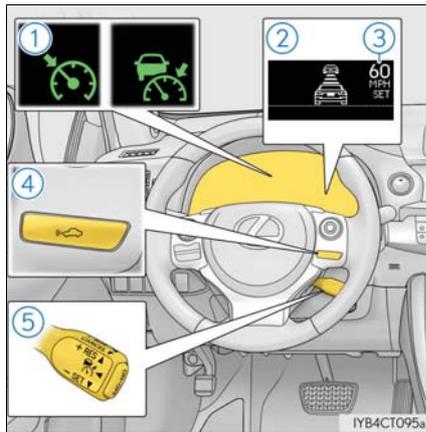


- 1 Indicators
- 2 Display
- 3 Set speed
- 4 Vehicle-to-vehicle distance button
- 5 Cruise control switch

Setting the vehicle speed (vehicle-to-vehicle distance control mode)




 - 1 Press the "ON-OFF" button to activate the Dynamic radar cruise control. Radar cruise control indicator will come on. Press the button again to deactivate the cruise control.




- 2 Accelerate or decelerate the vehicle to the desired speed, and push the lever down to set the speed. "SET" and set speed will be displayed. The vehicle speed at the moment the lever is released becomes the set speed.

■ Adjusting the set speed

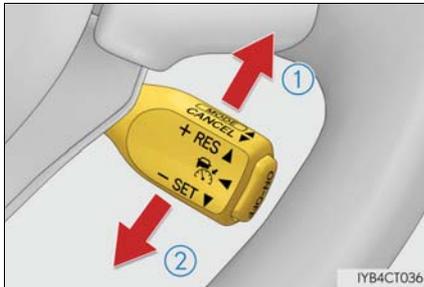

- ① Increases the speed
- ② Decreases the speed
Fine adjustment: Momentarily move the lever in the desired direction.
Large adjustment: Hold the lever in the desired direction.

■ Changing the vehicle-to-vehicle distance

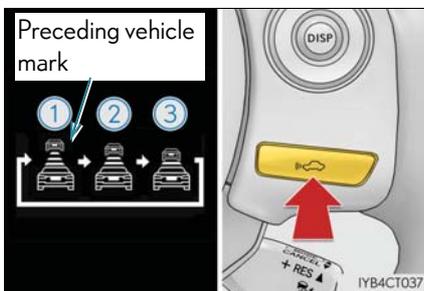


Pressing the button changes the vehicle-to-vehicle distance as follows:

- ① Long
 - ② Medium
 - ③ Short
- The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode. If a vehicle is running ahead of you, the preceding vehicle mark will be also displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

 ■ Canceling and resuming the speed control




- ① Pulling the lever toward you cancels the Dynamic radar cruise control. The speed setting is also canceled when the brakes are applied.
- ② Pushing the lever up resumes the Dynamic radar cruise control and returns vehicle speed to the set speed. Resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the displays and a buzzer. Always check the surrounding area when using this system.

 ■ Turning the system on and off



Turns the intuitive parking assist on/off

When on, the indicator light comes on to inform the driver that the system is operational.

Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

■ Initializing the tire pressure warning system




Press and hold the tire pressure warning reset switch until the tire pressure warning light blinks slowly 3 times.

Remote Touch (with navigation system)

The Remote Touch can be used to operate the Remote Touch screens.

Basic operation

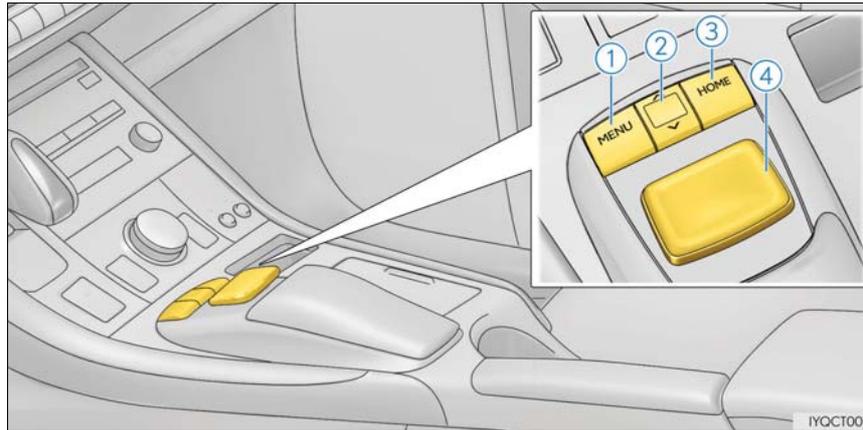

- ① "MENU" button
Press to display the "Menu" screen.
- ② "∧∨" button
Press to change the scale of the map and to scroll the list screen.
- ③ "HOME" button
Press to display the home screen.
- ④ Remote Touch knob
Move in the desired direction to select a function, letter and screen button.
Press to enter the selected function, letter or screen button.

Menu



Press the "MENU" button on the Remote Touch to display the "Menu" screen.

- ① "Climate" (→P. 69)
- ② "Nav" (→P. 35)
- ③ "LEXUS App Suite"
- ④ "Info"
- ⑤ "Radio" (→P. 48)
- ⑥ "Media" (→P. 46)
- ⑦ "Phone" (→P. 41)
- ⑧ "Setup"
- ⑨ "Display"

■ Home

▶ Three-way split screen



Press the “HOME” button on the Remote Touch to display the home screen. The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth® connection
- ② Select to change the display items/area and the home screen layout.

▶ Two-way split screen



■ Screen scroll operation




To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.


- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

■ Setting a route


While route guidance is operating, you can change the route using the following method.

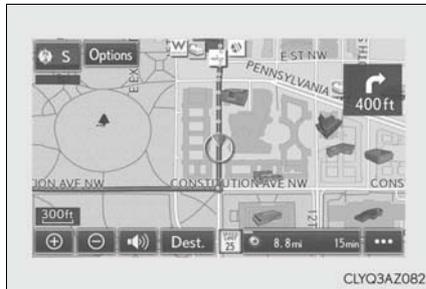

1 Select "Options".

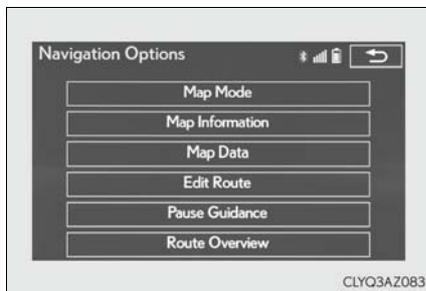

2 Select "Edit Route".

 



3 Select the item to be set.

- ① Set route preferences
- ② Set detours
- ③ Change route type
- ④ Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

Navigation System (if equipped)

 Register home

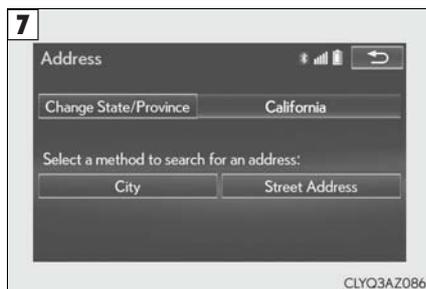

1 Press the "MENU" button on the Remote Touch.

Please refer to P.32 for the Remote Touch operation.

2 Select "Setup".

3 Select "Navigation".

4 Select "Home".

5 Select "Set Home Location".

6 Select "Address".

7 Select "City".

8 Enter a city name and select "OK".

9 Select the screen button of the desired city name from the displayed list.

For security reasons, use a point close to your home instead of your actual home address.

10 Enter a street name and select "OK".

11 When the desired street name is found, select the corresponding screen button.

12 Enter a house number and select "OK".

13 Select "OK".

 

■ Destination input — Search by address

Select by city name



- 1** Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
- 2** Select "Nav".
- 3** Select "Dest".
- 4** Select "Address".
- 5** Select "City".
- 6** Enter a city name and select "OK".
- 7** Select the screen button of the desired city name from the displayed list.
- 8** Enter a street name and select "OK".
- 9** When the desired street name is found, select the corresponding screen button.
- 10** Enter a house number and select "OK".
- 11** Select "Go".
- 12** Select "OK".

Select by street address

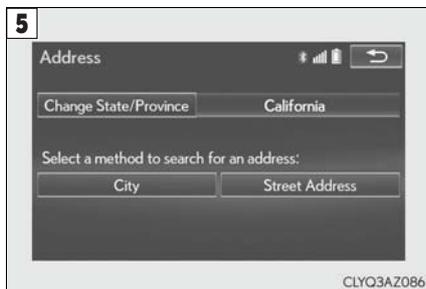

1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.

2 Select "Nav".

3 Select "Dest".

4 Select "Address".

5 Select "Street Address".

6 Enter a house number and select "OK".

7 Enter a street name and select "OK".

8 When the desired street name is found, select the corresponding screen button.

 
9 Enter a city name and select "OK".

10 Select the screen button of the desired city name from the displayed list.

11 Select "Go".

12 Select "OK".

■ Destination input — Search points of interest by name



- 1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
- 2 Select "Nav".
- 3 Select "Dest".
- 4 Select "Point of Interest".
- 5 Select "Name".
- 6 Enter a POI name and select "OK".
- 7 Select the screen button of the desired POI.
- 8 Select "Go".
- 9 Select "OK".

■ Destination input — Search points of interest by category



1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.


2 Select "Nav".

3 Select "Dest".

4 Select "Point of Interest".




5 Select "Category".

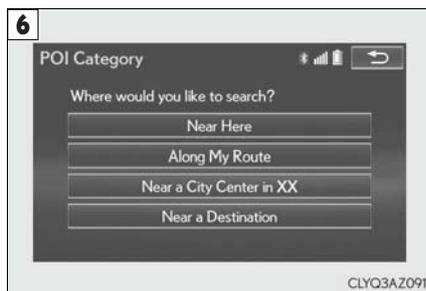

6 Select "Near a Destination".

 7 Select the desired POI category from the displayed list.



8 Select the screen button of the desired POI.

9 Select "Go".

10 Select "OK".

■ Destination input — Search points of interest by telephone number



- 1** Press the “MENU” button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
- 2** Select “Nav”.
- 3** Select “Dest”.
- 4** Select “Point of Interest”.
- 5** Select “Phone #”.
- 6** Enter a phone number and select “OK”.
- 7** Select “Go”.
- 8** Select “OK”.

Hands-free System For Cellular Phone (with navigation system)

Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.

 
- 1 Press on the steering wheel.
- 2 Select "Yes".



- 3 When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device. Refer to the cellular phone user's manual for cellular phone operation.




- 4 Register the Bluetooth® device using your Bluetooth® device.
- 5 Check that the following screen is displayed when registration is complete.



- 6 Select "OK" when the connection status changes from "Connecting..." to "Connected".

■ Contacts transfer

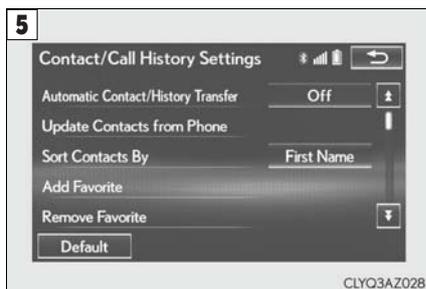

1 Press the “MENU” button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.

2 Select “Setup”.

3 Select “Phone”.



4 Select “Contact/Call History Settings”.

5 Select “Update Contacts from Phone”.

6 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

■ Registering the contacts in the favorites list

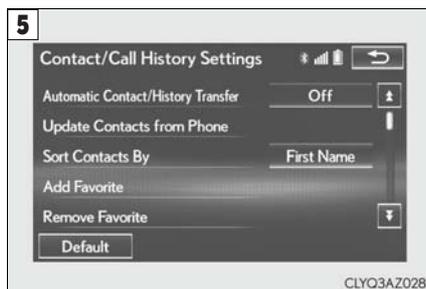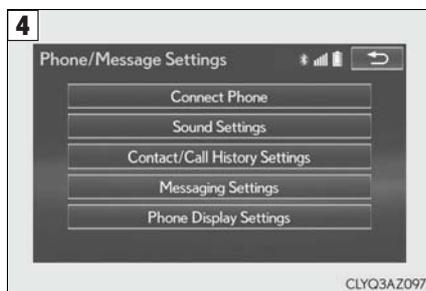

1 Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.

2 Select "Setup".

3 Select "Phone".

4 Select "Contact/Call History Settings".


5 Select "Add Favorite".

6 Select the desired contact to add to the favorites list.

7 Check that a confirmation screen is displayed when the operation is complete.

■ Calling by name


You can call by giving a name registered in the contacts. For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

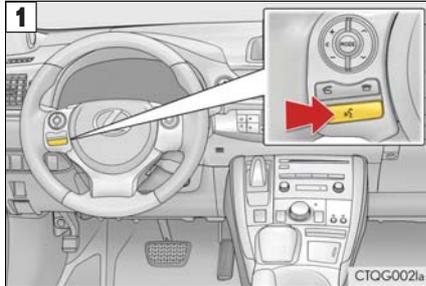


- 1 Press .
- 2 Say "Call <contacts> <phone types>".

 : Pressing this switch turns the voice command system on. Say a command after the beep.

 ■ Calling by favorites list




 - 1 Press  on the steering wheel.
- 2 Select the "Favorites" tab and select the desired contact.



- 3 Select the desired number.
- 4 Check that the "Call" screen is displayed.

 
■ Calling using e-mail/SMS/MMS message



- 1 Press  on the steering wheel.
- 2 Select .
- 3 Select the desired message.
- 4 Select .
- 5 Check that the "Call" screen is displayed.

The tab display may vary depending on the type of cellular phone.

 
■ Receiving a call



- 1 When a call is received, this screen is displayed with a sound.
- 2 Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

 ■ Steering switches



- ① Increases/decreases volume
- ② Sending/Receiving/"Phone" screen display
- ③ End call/Refuse call
- ④ Start the voice command system

Audio System (with navigation system)

Audio control screen


Follow the procedure below to display the audio control screen.



- 1** Press the "MENU" button on the Remote Touch.
Please refer to P.32 for the Remote Touch operation.
The "Menu" screen will be displayed.
- 2** Using the Remote Touch, select "Radio" or "Media" and select each tab.

Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

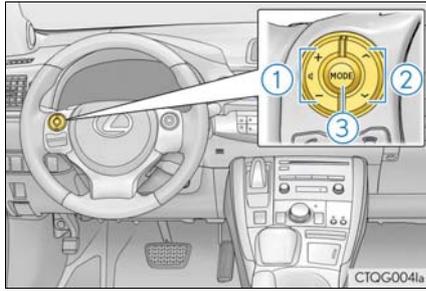

- 1** Increases/decreases volume
- 2** Radio mode: Selects a radio station/channel
Audio CD mode: Selects a track
MP3/WMA/AAC disc mode: Selects a file
DVD mode: Selects a chapter
iPod mode: Selects a track/file
- 3** Press: Change audio modes
Press and hold: Mute/unmute or pause/resume the current operation

Basic operation



① Sound settings

② Audio sources

“RADIO” button:

AM: AM radio

FM: FM radio

SAT: Satellite radio^{*1}

APPS (if equipped):

Internet radio broadcast

“MEDIA” button:

DISC: DVD player/CD player

iPod: iPod

USB: USB memory

Bluetooth^{*2}: Bluetooth[®] audio


AUX: Auxiliary audio device

③ Power/Volume

*1: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 83)

*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

■ Radio

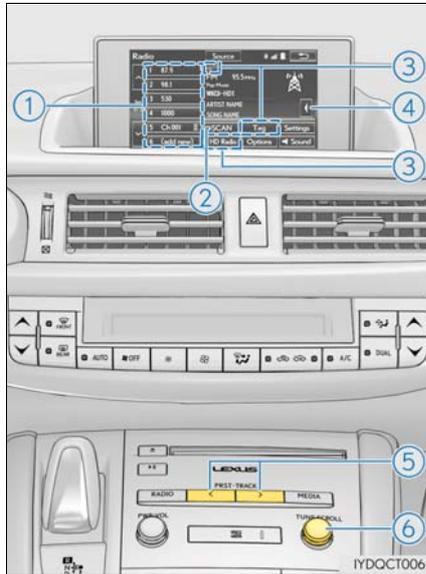

- ① Tuning to preset stations/channels
- ② Scanning for receivable stations
- ③ Using HD Radio™ Technology (for U.S.A., if equipped)
- ④ Cache radio operation buttons
- ⑤ Press: Selects a preset station
Press and hold: Seeks for a station
- ⑥ Adjusting the frequency


■ Entering station presets

- ① Tune in the desired station.
- ② Select "add new".
- ③ Select "Yes" on the confirmation screen.
- ④ Select "OK" after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.


■ DVD player/CD player

■ Playing an audio CD

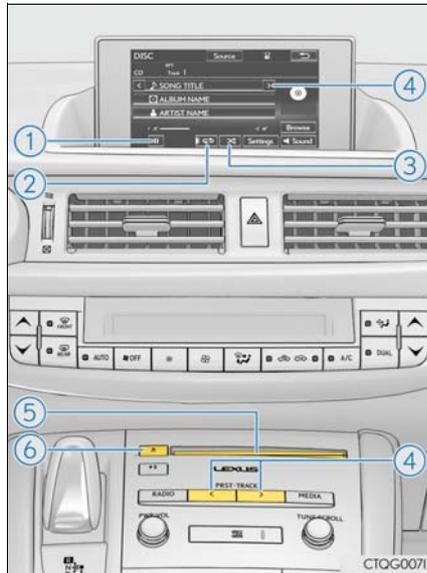


- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a track
- ⑤ Disc slot
- ⑥ CD eject

■ Playing a CD with MP3/WMA/AAC files

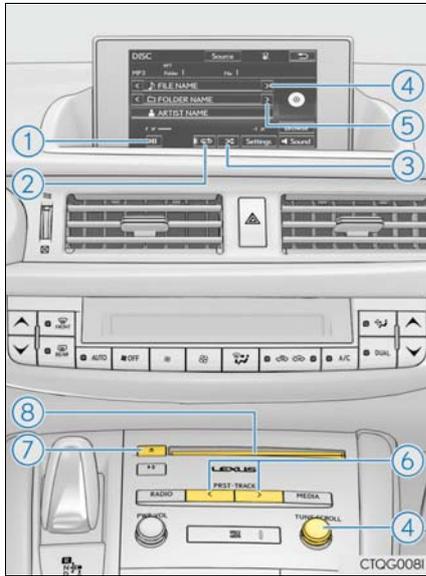

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a file
- ⑤ Selecting a folder
- ⑥ Selecting a file/fast forward/rewind
- ⑦ CD eject
- ⑧ Disc slot


■ Playing a DVD

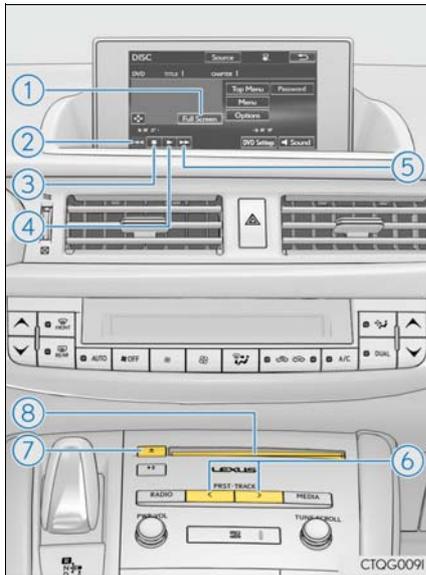

- ① Image display (full screen)
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Selecting a chapter
- ⑦ DVD eject
- ⑧ Disc slot


■ Operating an iPod

■ Playing an iPod audio

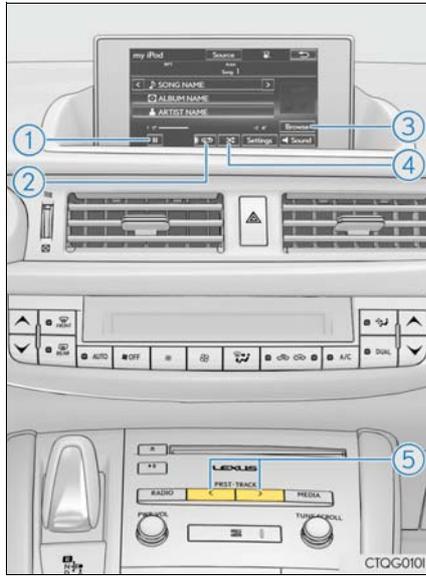

- ① Playback/pause
- ② Repeat playback
- ③ Selecting a play mode
- ④ Random playback
- ⑤ Selecting a track/fast forward/rewind

■ Playing an iPod video

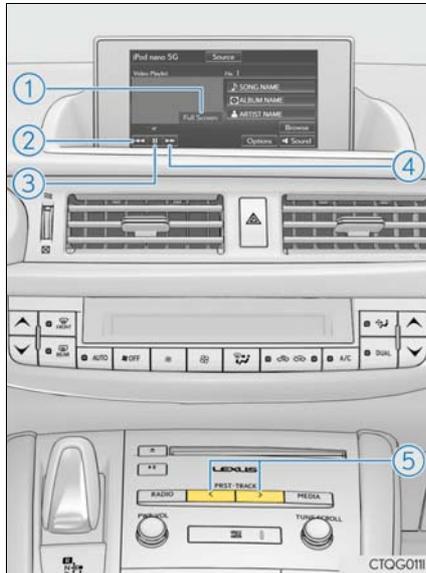


- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

Lexus Display Audio Controller (with Lexus Display Audio System)

By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.

 Basic operation



- ① Display the "Source" screen or audio top screen
- ② Display the "Menu" screen (→P. 53)
- ③ Back button
Display the previous screen
- ④ Turn or move the controller to select a function and number.
Move the controller to display the left or right side of the screen.
Push the controller to enter the selected function and number.

■ “Menu” screen

To display the “Menu” screen, press the “MENU” button on the controller unit.



| Button | Function |
|-----------|--|
| “Radio” | Display the radio top screen (→P. 58) |
| “Media” | Display the media top screen (→P. 58) |
| “Climate” | Automatic air conditioning system (→P. 69) |
| “Phone” | Display the phone top screen |
| “Info” | Display the “Information” screen |
| “Setup” | Setup menu |
| “Display” | Display settings |

■ Screen for display settings

Go to “Display”: “MENU” button → “Display”



- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the rear view monitor camera.
- ④ Change to day mode.

Hands-free System For Cellular Phone (with Lexus Display Audio System)

How to register a Bluetooth® phone

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" (for U.S.A.) for phone information.

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to "Bluetooth* Setup": "MENU" button → "Setup" → "Bluetooth*"
- 3 Move the controller to the left and then select "Add Device"



- 4 When this screen is displayed, input the passcode displayed on the screen into your Bluetooth® phone.
- 5 Register the Bluetooth® phone using your Bluetooth® phone.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "MENU" button → "Setup" → "Phone" → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

Dialing

- 1 Go to "Dial Pad": "MENU" button → "Phone" → "Dial Pad"
- 2 Input a phone number.
- 3 Press the off-hook switch on the steering wheel or select .

Dialing from the phonebook

- 1 Go to "Contacts": "MENU" button → "Phone" → "Contacts"
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

■ When the phonebook is empty

You can transfer the phone numbers in a Bluetooth[®] phone to the system. Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth[®] phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.


- 1 Press the off-hook switch on the steering wheel.
If the phonebook is empty, a message will be displayed.

► For a PBAP compatible Bluetooth[®] phone and “Automatic Transfer” is off



- 2 To transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Transfer”.
Select “Once” if you want to transfer new contacts from a cellular phone.

► For a PBAP incompatible and OPP compatible Bluetooth[®] phone

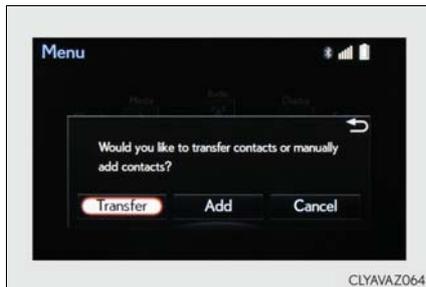


- 2 Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.
Select “Add” if you want to add a new contact manually.

■ Dialing from favorites

You can make a call using numbers registered in the favorites.

- 1 Go to “Favorites”: “MENU” button → “Phone” → “Favorites”
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

■ To answer the phone

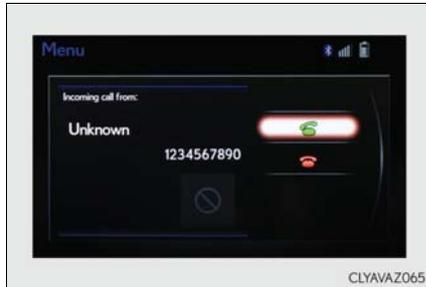


- 1 When a call is received, the following screen is displayed together with a sound.
- 2 Press the off-hook switch on the steering wheel or select .

■ To refuse a call

Press the on-hook switch on the steering wheel or select .

 
■ Operating a telephone using the steering wheel switches



- 1 Volume switch
During an incoming call: Adjusts the ring tone volume
During speaking on the phone: Adjusts in call volume
The voice guidance volume cannot be adjusted using this button.
- 2 Off-hook switch
 - Start call
 - Receiving
 - Phone top screen display
- 3 On-hook switch
 - End call
 - Refuse call
- 4 Talk switch
Press: Turns the voice command system on
Press and hold: Turns the voice command system off

Audio System (with Lexus Display Audio System)

■ Lexus Display Audio operation buttons

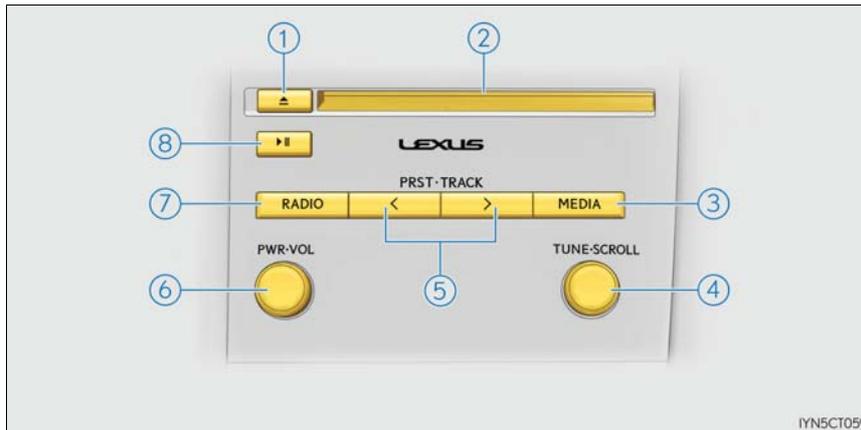

- ① Eject a disc.
- ② Disc slot
- ③ Display the media top screen.
- ④ "TUNE•SCROLL" knob
Select a radio station band, track or file.
- ⑤ Seek up or down for a radio station, or to access a desired track or file.
- ⑥ "PWR•VOL" knob
Press to turn the audio system on/off, and turn to adjust the volume.
- ⑦ Display the radio top screen.
- ⑧ Except radio and A/V mode: Pause or resume playing a track.
Radio and A/V mode: Turn mute on/off

■ Using the steering switches to change audio sources

Press the "MODE" switch when the audio system is turned on. The audio source changes each time the "MODE" switch is pressed.

■ Audio menu screen

To display the audio menu screen, move the controller to the left while on an audio top screen.

▶ AM, FM radio or XM Satellite Radio *



- ① Scan for receivable stations (AM, FM radio)
- ② Seek a station of the nearest frequency (stops when a station is found) (AM, FM radio)
- ③ Captures the song title and artist name information for potential purchase (when the "HD" indicator on the selected station is appears) (FM radio)
- ④ Changes the channel of HD Radio (HD2, HD3, HD4 where applicable) (FM radio)
- ⑤ Seek a station of the traffic announcement (FM radio)
- ⑥ Select to set the station list shows of HD radio on/off (AM, FM radio)
- ⑦ Change radio settings
- ⑧ Change sound settings

*: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P.83)

► CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth®




- ① Play or pause a track/file
- ② Select a track/file
- ③ Select a folder/album (MP3/WMA/AAC disc or USB)
- ④ Select and hold: Fast-forward or rewind a track/file
- ⑤ Select a repeat mode.
- ⑥ Select a random/shuffle play mode.
- ⑦ Select a full screen mode (iPod video mode)
- ⑧ Change iPod settings (iPod)
- ⑨ Change USB settings (USB)
- ⑩ Connect a Bluetooth device (Bluetooth®)
- ⑪ Change the cover art settings (CD or MP3/WMA/AAC disc)
- ⑫ Change sound settings

► A/V



- ① Select full screen mode
- ② Change A/V settings
- ③ Change sound settings

■ Operating the audio system using the steering wheel switches

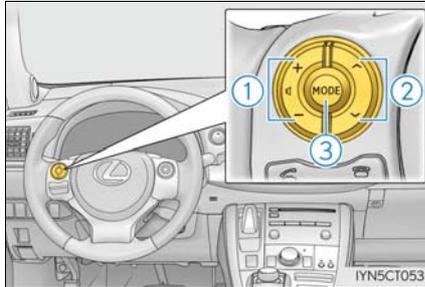


- ① Volume switch
 - Increases/decreases volume
 - Press and hold: Continuously increases/decreases volume
- ② Radio mode:
 - Press: Select a radio station
 - Press and hold: Seek up/down CD, MP3/WMA/AAC disc, Bluetooth[®], iPod or USB mode:
 - Press: Select a track/file/video
 - Press and hold: Fast up/down tracks/files/videos (MP3/WMA/AAC disc, iPod or USB)
- ③ "MODE" switch
 - Turns the power on, selects audio source
 - Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.

Hands-free System For Cellular Phone (without a Lexus Display Audio System or navigation system)

Bluetooth® phone pairing

 Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "www.lexus.com/MobileLink" for more phone information.



To use a Bluetooth® phone, it is necessary to first register it in the system.


- 1 Press  or .
- 2 Press  and say "Pair Phone".
- 3 Press  and say a name*.

*: This name will be used to identify your phone in the case that more than one phone has been registered to the system.

- 4 Press  and say "Confirm" to display the passkey.
- 5 Enter the passkey shown on the display into the phone.
Refer to the cellular phone user's manual for cellular phone operation.
- 6 Once the voice guidance for registration completion is finished, press .

 : Pressing this switch turns the voice command system on. Say a command after the beep.


■ Calling by number

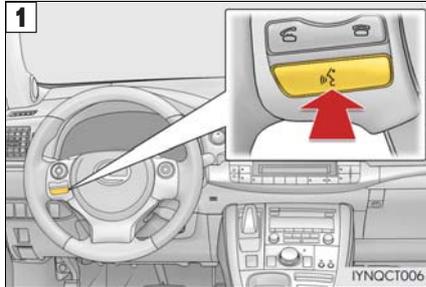

- 1** Press  and say "Dial by number".
- 2** Press  and say the phone number.
- 3** Dialing
 - a. Press .
 - b. Press  and say "Dial".

■ Calling by name


You can call by saying a voice tag registered in the phonebook. For setting the voice recognition, refer to the "OWNER'S MANUAL".

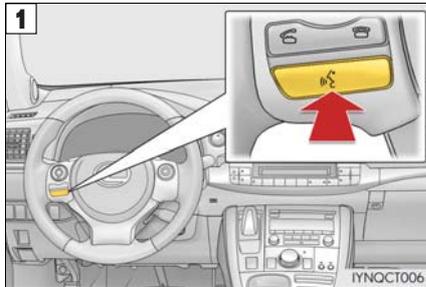


- 1** Press  and say "Dial by name".
- 2** Press  and say a contact name.
- 3** Dialing
 - a. Press .
 - b. Press  and say "Dial".

 : Pressing this switch turns the voice command system on. Say a command after the beep.

 ■ Calling by speed dial




1 Press .

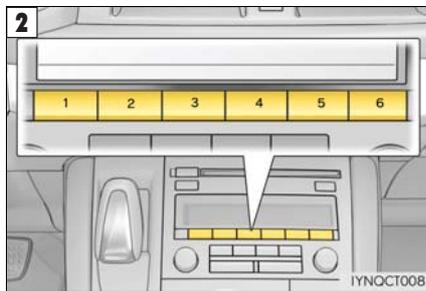

2 Press the desired preset button.

3 Press .

■ Phonebook transfer

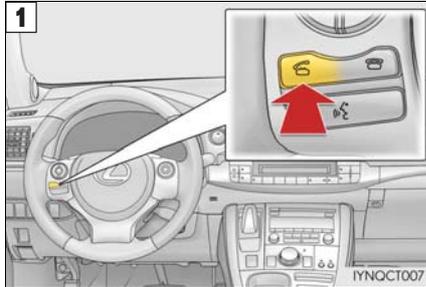


- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Add entry".
- 4 Press  and say "By phone".
- 5 Press  and say "Confirm".
- 6 Transfer the phonebook data to the system using the cellular phone. Refer to the cellular phone user's manual for cellular phone operation.
- 7 Press  and say "Previous" or "Next" until the desired data is displayed.
- 8 Press  and say "Confirm".
- 9 Press  and say the desired name.
- 10 Press  and say "Confirm".
- 11 Press  and say "Confirm" again.

Phonebook transfer may not be possible depending on phone model.

 : Pressing this switch turns the voice command system on. Say a command after the beep.

 ■ Changing the registered name





- 1** Press .
- 2** Press  and say "Phone book".
- 3** Press  and say "Change name".
- 4** Press  and say the desired name.
- 5** Press  and say "Confirm".
- 6** Press  and say the new name.
- 7** Press  and say "Confirm".



: Pressing this switch turns the voice command system on. Say a command after the beep.

■ Registering a speed dial

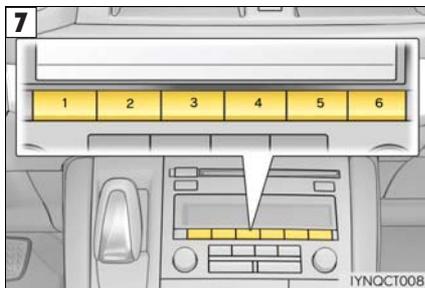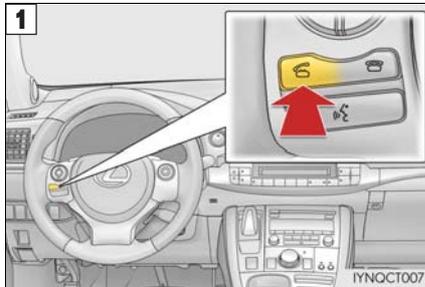


- 1 Press .
- 2 Press  and say "Phone book".
- 3 Press  and say "Set speed dial".
- 4 Select the data to be registered.
- 5 Press  and say the desired name.
- 6 Press  and say "Confirm".
- 7 Press the desired preset button.
- 8 Press  and say "Confirm".

 : Pressing this switch turns the voice command system on. Say a command after the beep.


Audio System (without a Lexus Display Audio System or navigation system)

 Basic operation



- ① Power/Volume
- ② Audio sources
AM•SAT: AM radio/Satellite radio
FM1/FM2: FM radio
CD•AUX: CD player/Auxiliary audio device/
 USB memory/iPod/
 Bluetooth® audio
- ③ Sound quality modes

Radio

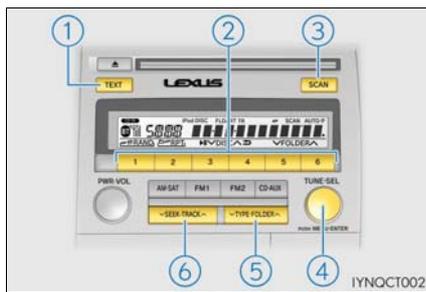


- ① Displaying text message
- ② Station selector
- ③ Scanning for receivable stations
- ④ Adjusting the frequency
- ⑤ Changing the program type
- ⑥ Seeking the frequency

Entering station presets

- ① Select the desired station by using the tune, the seek or the scan function.
- ② Press and hold one of the preset buttons (1-6) until you hear a beep, indicating that the station is set.


CD player

 Playing an audio CD



- ① Displaying text message
- ② CD eject
- ③ Repeat play
- ④ Search play
- ⑤ Playback
- ⑥ Selecting a track
- ⑦ Random playback

■ Playing a CD with MP3/WMA files

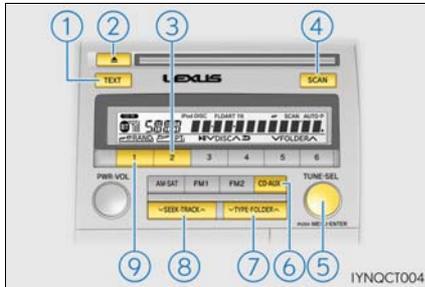


- ① Displaying text message
- ② CD eject
- ③ Repeat play
- ④ Search play
- ⑤ File selection
- ⑥ Playback
- ⑦ Folder selection
- ⑧ Selecting a file
- ⑨ Random playback

■ Loading a CD

Insert a CD.

 
■ Operating an iPod



- ① Displaying text message
- ② Repeat play
- ③ Playback/pause
- ④ Go back
- ⑤ iPod menu/Song selection
- ⑥ Playback
- ⑦ Song selection
- ⑧ Shuffle playback


■ Remote control (steering wheel switches)

 Some audio features can be controlled using the switches on the steering wheel.



- ① Increases/decreases volume
- ② Radio mode: Selects a radio station
CD mode: Selects a track, file (MP3 and WMA) and disc
iPod mode: Selects a song
- ③ Turns the power on, selects an audio source


Air Conditioning System

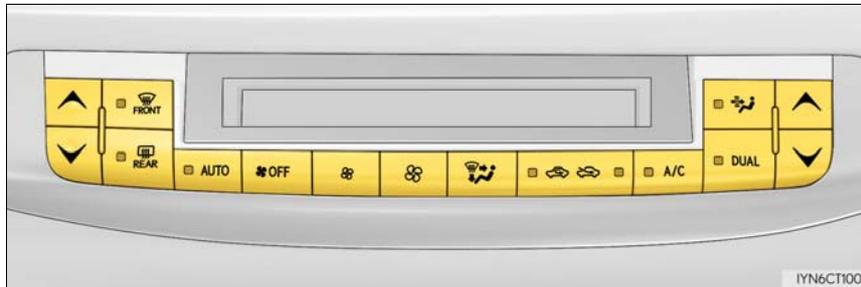

■ Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

■ Adjusting the fan speed setting

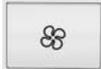Press  to increase the fan speed and  to decrease the fan speed.
Press the "OFF" button to turn the fan off.

■ Changing the air flow mode

To change the airflow, press .

The air outlets used are switched each time the button is pressed.

■ Control screen (if equipped)

▶ Vehicles with a Lexus Display Audio System



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ "AUTO": Select to set automatic mode on/off
"OFF": Turn the fan off
- ⋮ : Display the option control screen
- ④ Select the air flow mode
- ⑤ Adjust the right-hand side temperature setting

▶ Vehicles with a navigation system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen
- ⑥ Turn the fan off
- ⑦ Select to set automatic mode on/off

■ Option control screen

Select **⋮** on the climate screen to display the option control screen. The functions can be switched on and off.

▶ Vehicles with a Lexus Display Audio System



- ① Select to set cooling and dehumidification function on/off
- ② Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ③ Prevent ice from building up on the windshield and wiper blades (if equipped)
- ④ Remove pollen from the air (Micro dust and pollen filter)

► Vehicles with a navigation system



- ① Select to set cooling and dehumidification function on/off
- ② Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ③ Prevent ice from building up on the windshield and wiper blades (if equipped)
- ④ Remove pollen from the air (Micro dust and pollen filter)

■ Using the automatic mode


Press the "AUTO" button to turn on the airflow and adjust the temperature setting.

■ Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)

To turn on the "DUAL" mode, perform any of the following procedures:

- Press the "DUAL" button.
- Select "DUAL" on the option control screen.
- Adjust the passenger's side temperature setting.


■ Seat Heaters

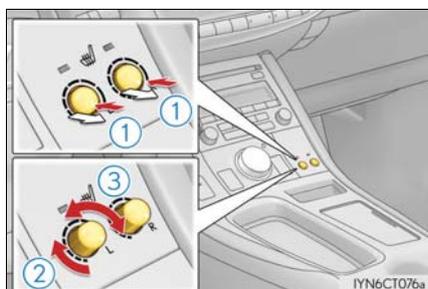

- ① Pops the knob out
- ② Turns the seat heater on
The indicator light comes on.
- ③ Adjusts the seat temperature
The further you turn the knob clockwise, the warmer the seat becomes.

Voice Command System

Basic operation

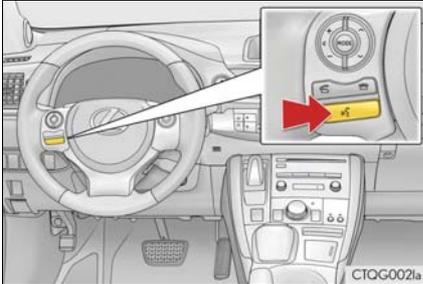

- 1** Press the talk switch.
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.
On the list screen, you can select the desired command.

Continue on to pages 73-76 for a detailed list of Voice Commands for the following categories:

| | |
|------------|------|
| Basic..... | P.73 |
| Apps..... | P.73 |
| Navi..... | P.73 |
| Phone..... | P.74 |
| Radio..... | P.74 |
| Audio..... | P.75 |
| Info..... | P.75 |
| Other..... | P.76 |

- Important voice commands information and tips
 - Voice commands can be used while driving.
 - You must wait until after the beep to say a command.
 - In vehicles with a navigation system, a large  (TALK icon) will appear on the navigation screen to prompt you to say a command.
 - If you know what command to use, you can press  at any time to interrupt the voice guidance.

NOTE: When inputting voice commands you must wait until after the beep to speak.

■ Command list

► Basic (vehicles with a Lexus Display Audio System)

| Command | Action |
|---------------|---|
| "Help" | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back" | Returns to the previous screen |
| "Go to <tab>" | Displays the command list of the selected tab |

► Basic (vehicles with a navigation system)

| Command | Action |
|---------------|---|
| "Help" | Prompts voice guidance to offer examples of commands or operation methods |
| "Go Back" | Returns to the previous screen |
| "Go to <tab>" | Displays the command list of the selected tab |
| "More Hints" | Displays more commonly used commands |
| "Cancel" | Cancels the voice command system |

► Apps (vehicles with a navigation system) (for U.S.A., if equipped)

| Command | Action |
|-----------------|---|
| "Launch <apps>" | Activates the LEXUS App Suite application |

► Navi (vehicles with a navigation system)

| Command | Action |
|------------------------|--|
| "Find <POI category>" | Displays a list of <POI category ^{*1} > near the current position ^{*2} |
| "Enter an Address" | Enables setting a destination by saying the address |
| "Go Home" | Displays the route to home |
| "Pause Guidance" | Stops the route guidance |
| "Resume Guidance" | Resumes the route guidance |
| "Show <POI> icons" | Displays the specified POI icons |
| "Delete Destination" | Deletes the destination |
| "Previous Destination" | Displays previous destinations |

*1: For example; "Gas stations", "Restaurants", etc.

*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► Phone

| Command | Action |
|--------------------------------|--|
| "Redial" | Places a call to the phone number of the latest outgoing call |
| "Call Back" | Places a call to the phone number of latest incoming call |
| "Show Recent Calls" | Displays the call history screen |
| "Dial <phone number>" | Places a call to the said phone number |
| "Call <contacts> <phonetypes>" | Place a call to the said phone type of the contact from the phone book |

► Radio (vehicles with a navigation system)

| Command | Action |
|--------------------------------------|--|
| "Tune to <frequency> AM" | Changes the radio to the specified AM frequency |
| "Tune to <frequency> FM" | Changes the radio to the specified FM frequency |
| "Play <genre> station" | Changes the radio to an FM station of the specified genre |
| "Tune to FM <frequency> HD <number>" | Changes the radio to the specified HD radio station |
| "Tune to preset <number>" | Changes the radio to the specified preset radio station |
| "Tune to <name>" | Changes the radio to the satellite radio channel with the specified name |
| "Tune to channel <number>" | Changes the radio to the specified satellite radio channel number |
| "Play <genre> satellite station" | Changes the radio to a satellite radio channel of the specified genre |

► **Audio (vehicles with a Lexus Display Audio System)**

| Command | Action |
|-----------------------------|---|
| "Play Playlist <playlists>" | Plays tracks from the selected playlist |
| "Play Artist <artist>" | Plays tracks from the selected artist |
| "Play Song <songs>" | Plays the selected track |
| "Play Album <albums>" | Plays tracks from the selected album |
| "Turn Music On/Off" | Turns the audio system on/off |
| Audio source name | Selects audio source |

► **Audio (vehicles with a navigation system)**

| Command | Action |
|------------------------|---|
| "Play Playlist <name>" | Plays tracks from the selected playlist |
| "Play Artist <name>" | Plays tracks from the selected artist |
| "Play Song <name>" | Plays the selected track |
| "Play Album <name>" | Plays tracks from the selected album |

► **Info (vehicles with a Lexus Display Audio System)**

| Command | Action |
|-----------------|------------------------------|
| "Show Forecast" | Displays weather information |
| "Show Traffic" | Displays traffic information |

► **Info (vehicles with a navigation system) (for U.S.A., if equipped)**

| Command | Action |
|----------------------|--|
| "Destination Assist" | Connects the system to the Lexus response center |
| "Show Forecast" | Displays weather information |
| "Show Traffic" | Displays traffic information |
| "Lexus Insider" | Displays the Lexus insider list |

► Other (vehicles with a navigation system)

| Command | Action |
|----------------------------|--|
| "Turn Climate Control On" | Turns air conditioning system on |
| "Turn Climate Control Off" | Turns air conditioning system off |
| "Warmer" | Increases the temperature of the air conditioning system |
| "Cooler" | Decreases the temperature of the air conditioning system |
| "<#> degrees" | Changes the set temperature of the air conditioning system to <#> degrees *1 |
| "Turn Music On" | Turns the audio system on |
| "Turn Music Off" | Turns the audio system off |
| "AM Radio" | Selects AM radio mode |
| "FM Radio" | Selects FM radio mode |
| "Sirius XM" | Selects satellite radio mode |
| "Disc" | Selects the selected disc mode |
| "USB" | Selects USB audio mode |
| "iPod" | Selects iPod audio mode |
| "Bluetooth *2 Audio" | Selects Bluetooth® audio mode |
| "A.V." | Selects VTR mode |
| "Auxiliary" | Selects AUX audio mode |

*1: Only within the possible temperature range of the air conditioning system

*2: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

 
Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.



Press down and release the lid.



Open the cover and connect the portable audio device.

 
Garage Door Opener (if equipped)

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

The garage door opener (HomeLink[®] Universal Transceiver) is manufactured under license from HomeLink[®].


Programming the HomeLink[®]

The HomeLink[®] compatible transceiver in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming method below appropriate for the device.




- ① Garage door operation indicators
- ② HomeLink[®] indicator light
- ③ Buttons

■ Programming HomeLink®

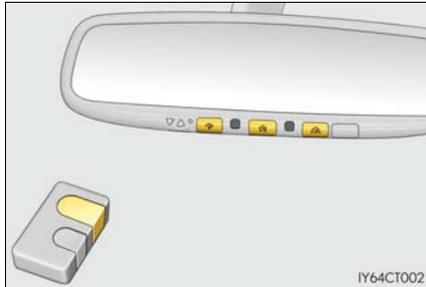

- 1** Point the remote control transmitter for the device 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.
Keep the HomeLink® indicator light in view while programming.

 ► For U.S.A. owners



- 2** Press and hold the HomeLink® button you want to program and the remote control transmitter button simultaneously. When the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), release both buttons.

► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

- 2** With one hand, press and hold the HomeLink® button you want to program. With your other hand, press and release the remote control transmitter every 2 seconds and repeat this cycle until the HomeLink® indicator light starts to flash rapidly. Then, release the buttons.
- 3** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:
 - If the indicator light is solid/continuous, programming has been completed and your device should activate when the HomeLink® button is pressed and released.
 - If the indicator light blinks rapidly for 2 seconds and then turns into a solid/continuous light, proceed to the heading "Programming a Rolling Code System".
- 4** Repeat the steps above to program another device for any of the remaining HomeLink® buttons.

 
■ Programming a Rolling Code System

- 1** Locate the “learn” or “smart” button on the garage door opener motor in the garage.
This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Please refer to the Owner’s manual supplied with the garage door opener motor for details.
- 2** Press and release the “learn” or “smart” button.
Perform step **3** within 30 seconds after performing step **2**.
- 3** Press and hold the programmed HomeLink[®] button (located inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming.
If the garage door opener motor activates when the HomeLink[®] button is pressed, the garage door opener motor recognizes the HomeLink[®] signal.

■ LEXUS Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus’ designated response center, which operates 24 hours per day, 7 days per week. Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

■ System components



- ① Microphone
- ② LED light indicators
- ③ “SOS” button

■ Services

Subscribers have the following Safety Connect services available:

- **Automatic Collision Notification***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

*: U.S. Patent No. 7,508,298 B2

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at Lexus.com.

- **Emergency Assistance Button (SOS)**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at Lexus.com.

■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

Lexus Enform (for U.S.A., if equipped)

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

Function achieved by using a cellular phone (with navigation system)

Services

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

● LEXUS App Suite

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

Subscription

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

Function achieved by using DCM and the navigation system (with navigation system)

Services

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

- **Destination Assist**

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

- **eDestination**

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at www.lexus.com/drivers/ to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

- **Lexus Insider**

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

- **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

■ Function achieved by using DCM

- **Services**

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 79)

■ LEXUS Enform Remote

- **Services**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to

<http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

- **Subscription**

→P. 82

XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

■ Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at www.siriusxm.com (U.S.A.) or www.xmradio.ca (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

▶ **U.S.A. Customers:**

Visit www.siriusxm.com or call 1-877-515-3987

▶ **Canadian Customers:**

Visit www.xmradio.ca or call 1-877-438-9677

What to do if...

List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.



(U.S.A.)

Brake system warning light (red indicator)



(Canada)

Stop the vehicle immediately.



Charging system warning light



Low engine oil pressure warning light

Have the vehicle inspected immediately.



(U.S.A.)

Malfunction indicator lamp



(Canada)



SRS warning light



(U.S.A.)

ABS warning light



(Canada)



Electric power steering system warning light



(Flashes)

“PCS” warning light (if equipped)



Slip indicator light



Brake system warning light (yellow indicator)



Automatic headlight leveling system warning light (if equipped)



(Blinking and then continuously on)

Tire pressure warning light

For further information, refer to the “OWNER’S MANUAL”.

What to do if...

Follow the correction procedures.



High coolant temperature warning light



Seat belt reminder light



Open door warning light



Master warning light



Low fuel level warning light



(Illuminates without blinking)

Tire pressure warning light*

See the "OWNER'S MANUAL"



Turn signal indicator



Cruise control indicator



Headlight indicator (U.S.A.)



Radar cruise control indicator (if equipped)



Tail light indicator (Canada)



Intuitive parking assist indicator (if equipped)



Headlight high beam indicator



Slip indicator light

(Flashes)



Fog light indicator



"TRAC OFF" indicator



"READY" indicator



"PCS" warning light (if equipped)

(Flashes faster)



EV indicator



Shift position indicators



EV drive mode indicator



"ECO MODE" indicator



"AIR BAG ON/OFF" indicator



"SPORT MODE" indicator

For further information, refer to the "OWNER'S MANUAL".

*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

What to do if...

If the hybrid system does not start

Make sure that the correct operating procedures have been followed.

 
Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system.

If the hybrid system still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.

If the electronic key does not operate properly

Unlocking and locking the doors




Use the mechanical key in order to perform the following operations:

- ① Locks all the doors
- ② Closes the windows* (turn and hold)
- ③ Unlocks the door
Turning the key rearward unlocks the driver's door. Turning the key once again within 3 seconds unlocks the other doors.
- ④ Opens the windows* (turn and hold)

*: These settings must be customized at your Lexus dealer.

What to do if...

■ Starting the hybrid system

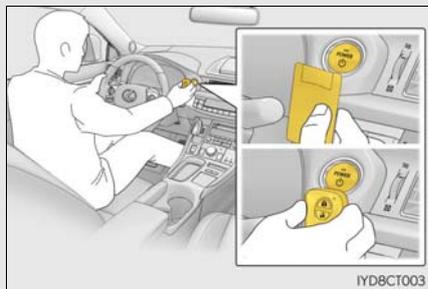

- 1** Depress the brake pedal.
- 2** Touch the Lexus emblem side of the electronic key to the power switch.
If any of the doors is opened or closed while the key is being touched to the switch, an alarm will sound to indicate that the start function cannot detect the electronic key.
- 3** Press the power switch within 10 seconds of the buzzer sounding, keeping the brake pedal depressed.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, replace it with a new battery. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.



Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

1-800-25-LEXUS or **1-800-255-3987** (Toll-Free)

■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

1-800-26-LEXUS or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: www.lexus.com

- Hawaii: www.servcolexus.com

- Canada: www.lexus.ca

©2015 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.