

# Contents

The Quick Guide is not intended as a substitute for your *Owner's Manual*. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

<b>Air Conditioning System*</b> .....	83
Adjusting the temperature setting .....	83
Adjusting the fan speed setting .....	83
Change the airflow mode .....	83
Air conditioning control screen .....	84
Using automatic mode .....	85
Adjusting the temperature for driver and passenger seats separately ("DUAL" mode) .....	85
<b>ASC (Active Sound Control)</b> .....	54
<b>Audio System (with Lexus Display Audio)*</b> .....	79
Display Audio operation buttons .....	79
Using the steering wheel switches to change audio sources .....	79
Audio menu screen .....	80
Operating the audio system using the steering wheel switches .....	82
<b>Audio System (with navigation system)*</b> .....	69
Audio control screen .....	69
Remote control (steering wheel switches) .....	69
Basic operation .....	70
Radio .....	70
DVD player/CD player .....	71
Operating an iPod .....	73
<b>Automatic High Beam</b> .....	33

\*: This feature may be operated by Voice command (See P.87)

Back door.....	104
Brake Hold.....	29
BSM (Blind Spot Monitor).....	52
Cruise Control.....	48
Door Locks.....	100
Driving Mode Select Switch.....	51
Dynamic Radar Cruise Control.....	41
Dynamic Radar Cruise Control with Full-speed Range.....	44
Energy Monitor/Consumption Screen.....	14
EV Drive Mode.....	25
Floor Mat Installation.....	11
Fog Lights.....	34
Fuel Tank Cap.....	103
Garage Door Opener.....	93
<b>Hands-free System For Cellular Phone (with Lexus Display Audio)*.....</b>	<b>76</b>
How to register a Bluetooth® phone.....	76
Registering favorites.....	76
Dialing.....	76
Dialing from the phonebook.....	76
When the phonebook is empty.....	77
Dialing from favorites.....	77
To answer the phone.....	78
To refuse a call.....	78
Operating a telephone using the steering wheel switches.....	78

\*: This feature may be operated by Voice command (See P.87)

<b>Hands-free System For Cellular Phone (with navigation system)*</b> .....	64
Bluetooth® phone pairing.....	64
Contacts transfer .....	65
Registering the contacts in the favorites list.....	66
Calling by name .....	67
Calling by favorites list .....	67
Calling using e-mail/SMS/MMS message.....	68
Receiving a call.....	68
Steering switches .....	68
<b>Headlights</b> .....	32
<b>Hybrid System</b> .....	12
<b>Hybrid Transmission</b> .....	25
<b>Keys</b> .....	18
<b>LDA (Lane Departure Alert with Steering Control)</b> .....	50
<b>Lexus Display Audio Controller (with Lexus Display Audio)</b> .....	74
<b>Lexus Enform (for U.S.A.)</b> .....	97
<b>Lexus Enform Safety Connect (for U.S.A.)</b> .....	95
<b>Moon Roof</b> .....	102
<b>Multi-information Display</b> .....	30
<b>Navigation System*</b> .....	58
Register home .....	58
Destination input — Search by address.....	59
Destination input — Search points of interest by name .....	61
Destination input — Search points of interest by category .....	62
Destination input — Search points of interest by telephone number .....	63
Voice Command System.....	87

\*: This feature may be operated by Voice command (See P.87)


Parking Brake.....	28
Portable Audio Device Ports.....	93
Power (Ignition) Switch.....	22
Power Windows.....	101
Rear Window Wiper and Washer.....	39
Remote Touch (with navigation system).....	55
Seat Heaters/Seat Ventilators.....	86
Smart Access System with Push-button Start.....	20
Theft Deterrent System.....	21
Tire Pressure Warning System.....	53
Turn Signal Lever.....	27
Voice Command System*.....	87
Basic operation.....	87
Command list.....	88
Windshield Wipers and Washer.....	35
XM Satellite Radio.....	99

\*: This feature may be operated by Voice command (See P.87)

# Overview

# Instrument Panel

- Turn signal lever P.27
  - Headlight switch P.32
  - Fog light switch P.34
  - Inside lock buttons P.100
  - Multi-information display P.30
  - Windshield wiper and washer switch P.35
  - Power switch P.22
- See P.7
- See P.8

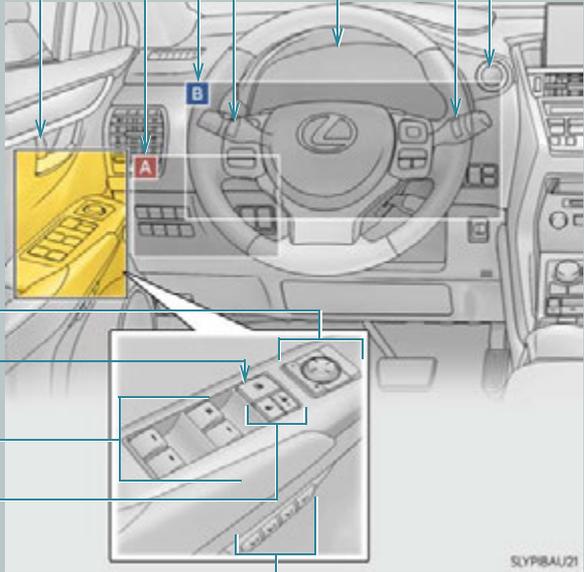


Outside rear view mirror switches\*

Window lock switch P.101

Power window switches P.101

Door lock switch P.100


Driving position memory switches\*\*

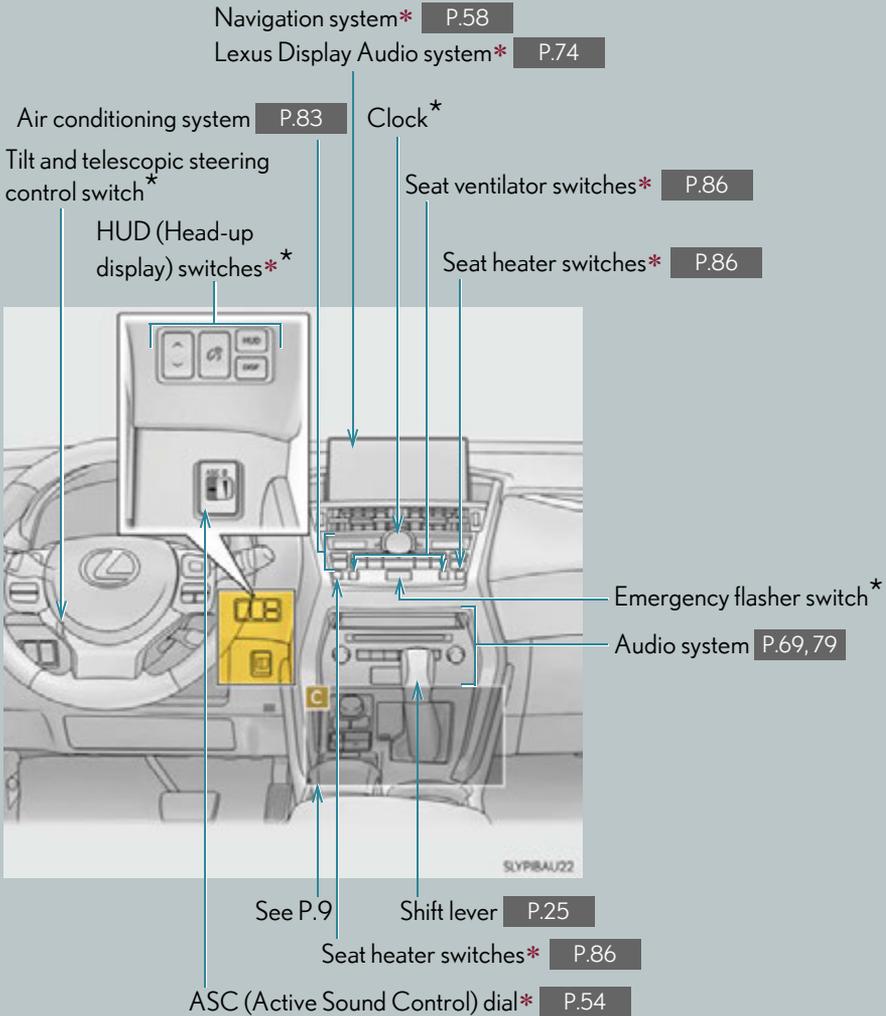

\*: If equipped

\*: Refer to "OWNER'S MANUAL".


A

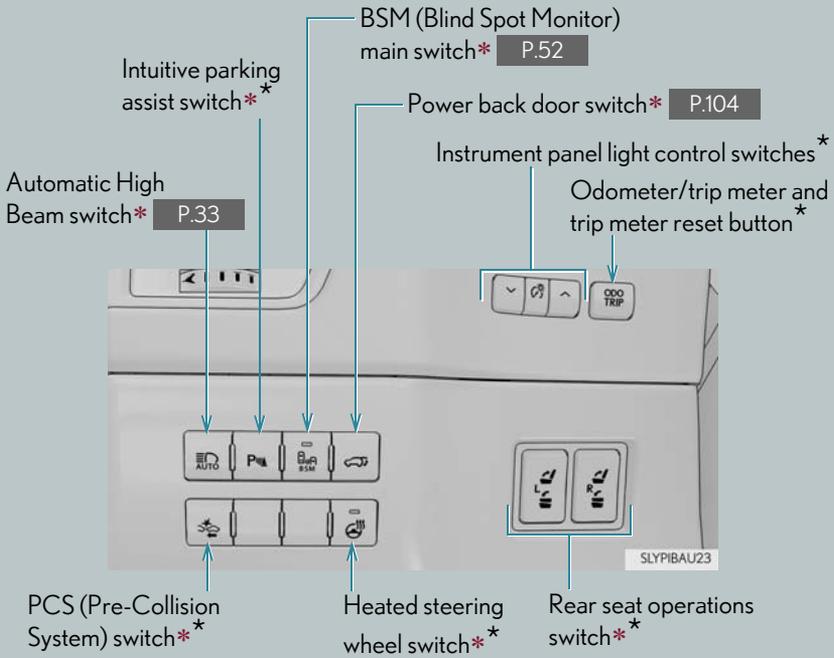

B

Audio remote control switches P.69

Meter control switches P.31

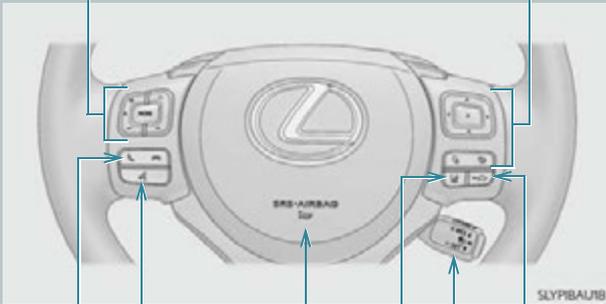

Talk switch  
P.68, 78

Horn\*

Vehicle-to-vehicle  
distance button\* P.42, 46

Telephone switches P.68, 78


Cruise control switch\*  
P.41, 44, 48

LDA switch\* P.50

\*: If equipped


\*: Refer to "OWNER'S MANUAL".

C

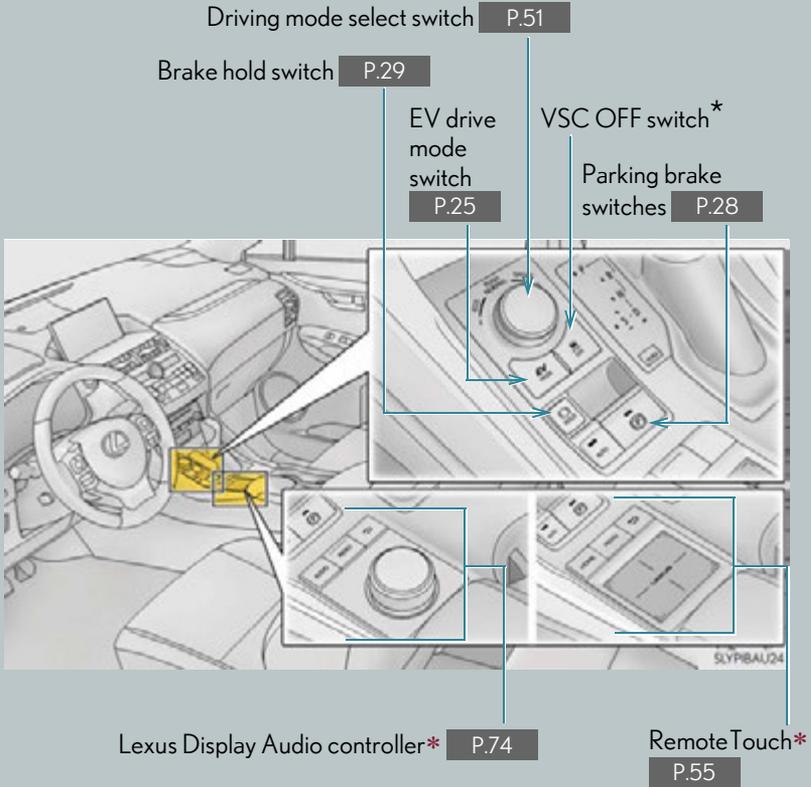

\*: If equipped


\*: Refer to "OWNER'S MANUAL".

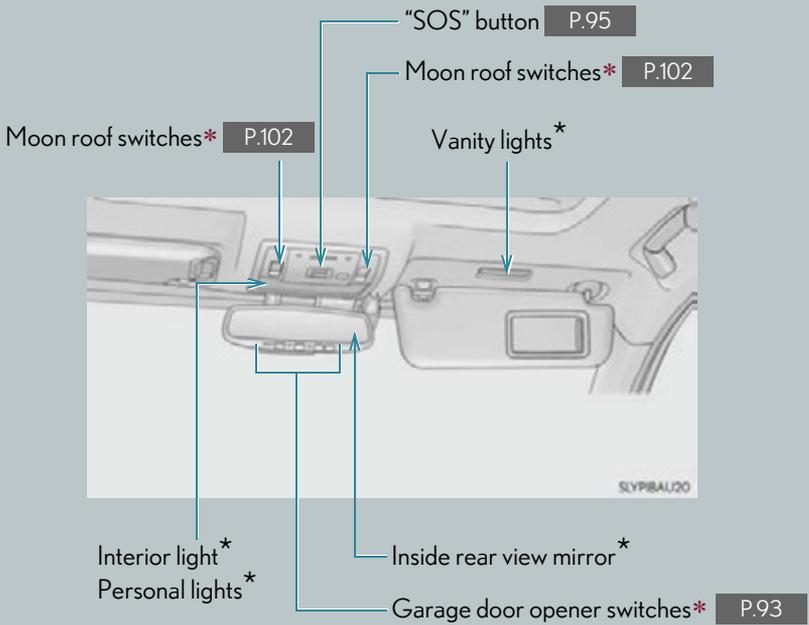


\*: If equipped  
\*: Refer to "OWNER'S MANUAL".

## Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

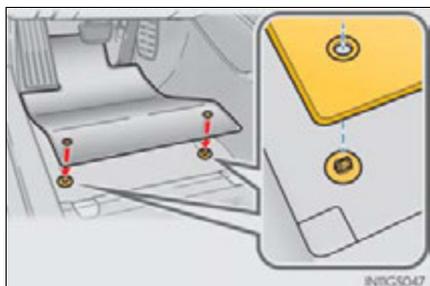

- 1** Insert the retaining hooks (clips) into the floor mat eyelets.

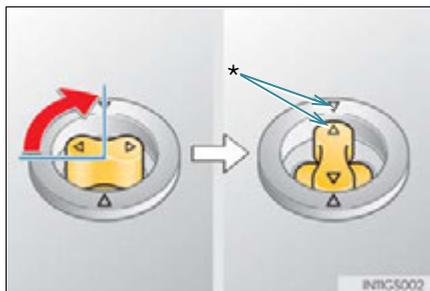

- 2** Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

\*: Always align the  $\triangle$  marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Hybrid System

Your vehicle is a hybrid vehicle. It has characteristics different from conventional vehicles. Be sure you are closely familiar with the characteristics of your vehicle, and operate it with care.

The hybrid system combines the use of a gasoline engine and an electric motor (traction motor) according to driving conditions, improving fuel efficiency and reducing exhaust emissions.

For details, refer to the "OWNER'S MANUAL".

### Hybrid System Indicator



- ① Power area  
Shows that an Eco-friendly driving range is being exceeded (during full power driving etc.)
- ② Eco area  
Shows that the vehicle is being driven in an Eco-friendly manner.
- ③ Hybrid Eco area  
Shows that gasoline engine power is not being used very often.  
The gasoline engine will automatically stop and restart under various conditions.
- ④ Charge area  
Shows that energy is being recovered via the regenerative brake.

- Hybrid System Indicator is displayed when the driving mode is in other than the sport mode.
- By keeping the indicator needle within Eco area, more Eco-friendly driving can be achieved.
- Charge area indicates regeneration<sup>\*</sup> status. Regenerated energy will be used to charge the hybrid battery (traction battery).

\*: When used in this manual, "regeneration" refers to the conversion of energy created by the movement of the vehicle into electrical energy.

## ■ Charging the hybrid battery (traction battery)

---

When the shift lever is in N, the hybrid battery (traction battery) is not being charged. When the vehicle is stopped, always put the shift lever to P.

Also, even in heavy traffic conditions, drive the vehicle in D or S.

## ■ Regenerative braking

---

In the following situations, kinetic energy is converted to electric energy and deceleration force can be obtained in conjunction with the recharging of the hybrid battery (traction battery).

- The accelerator pedal is released while driving with the shift lever in D or S.
- The brake pedal is depressed while driving with the shift lever in D or S.

## ■ Sounds and vibrations specific to a hybrid vehicle

---

There may be no engine sound or vibration even though the vehicle is able to move with the "READY" indicator is illuminated. For safety, make sure to shift the shift lever to P and apply the parking brake when parked.

The following sounds or vibrations may occur when the hybrid system is operating and are not a malfunction:

- Motor sounds may be heard from the engine compartment.
- Sounds may be heard from the hybrid battery (traction battery) behind the rear seats when the hybrid system starts or stops.
- Relay operating sounds such as a snap or soft clank will be emitted from the hybrid battery (traction battery), behind the rear seats, when the hybrid system is started or stopped.
- Sounds from the hybrid system may be heard when the back door is open.
- Sounds may be heard from the transmission when the gasoline engine starts or stops, when driving at low speeds, or during idling.
- Engine sounds may be heard when accelerating sharply.
- Sounds may be heard due to regenerative braking when the brake pedal is depressed or as the accelerator pedal is released.
- Vibration may be felt when the gasoline engine starts or stops.
- Cooling fan sounds may be heard from the air intake vents under the rear seats.

## ■ Running out of fuel

---

When the vehicle has run out of fuel and the hybrid system cannot be started, refuel the vehicle with at least enough gasoline to make the low fuel level warning light go off. If there is only a small amount of fuel, the hybrid system may not be able to start. (The standard amount of fuel is about 2.7 gal. [10.1 L, 2.2 Imp.gal.], when the vehicle is on a level surface. This value may vary when the vehicle is on a slope. Add extra fuel when the vehicle is inclined.)

## Energy Monitor/Consumption Screen

You can view the status of your hybrid system on the multi-information display and the navigation system (if equipped)/Lexus Display Audio system (if equipped).

### Energy monitor

- How to display on the navigation system screen

Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Trip Information" or "Past Record" screen is displayed, select "Energy".



The flow of energy is displayed on the navigation system screen.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

- How to display on the Lexus Display Audio screen

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Energy Monitor" screen does not appear, move the controller to the right and select "Energy".



The flow of energy is displayed on the Lexus Display Audio screen.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

● How to display on the multi-information display

Press **<** or **>** of the meter control switches and select **i**, and then press **^** or **v** to select the energy monitor display.



The flow of energy is indicated by the movement of the arrows on the multi-information display.

Red: gasoline energy

Amber: electrical energy

Light blue: energy recovery

A light blue arrow appears when regenerative braking occurs.

The displayed energy flow, battery level, etc. will change in response to the current driving conditions.


## Fuel consumption

● Trip information

▶ Navigation system screen

Press the “MENU” button on the Remote Touch, then select “Info” on the “Menu” screen, and then select “Fuel Consumption”.

If the “Energy Monitor” or “Past Record” screen is displayed, select “Trip Information”.

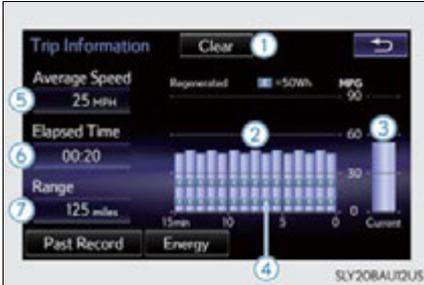

- ① Resetting the consumption data
- ② Fuel consumption in the past 15 minutes
- ③ Current fuel consumption
- ④ Regenerated energy in the past 15 minutes  
One symbol indicates 50 Wh. Up to 5 symbols are shown.
- ⑤ Average vehicle speed since the hybrid system was started.
- ⑥ Elapsed time since the hybrid system was started.
- ⑦ Cruising range

### ► Lexus Display Audio screen

Press the “MENU” button on the Lexus Display Audio controller, then select “Info” on the “Menu” screen, and then select “Fuel Consumption”.

If the “Trip Information” screen does not appear, move the controller to the right and select “Trip Information”.



- ① Fuel consumption in the past 15 minutes
- ② Current fuel consumption
- ③ Regenerated energy in the past 15 minutes  
One symbol indicates 50 Wh. Up to 5 symbols are shown.
- ④ Average vehicle speed since the hybrid system was started.
- ⑤ Elapsed time since the hybrid system was started.
- ⑥ Cruising range

● Past record

▶ **Navigation system screen**

Press the "MENU" button on the Remote Touch, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".

If the "Energy Monitor" or "Trip Information" screen is displayed, select "Past Record".



- ① Resetting the past record data
- ② Best recorded fuel consumption
- ③ Average fuel consumption
- ④ Previous fuel consumption record
- ⑤ Updating the average fuel consumption data

▶ **Lexus Display Audio screen**

Press the "MENU" button on the Lexus Display Audio controller, then select "Info" on the "Menu" screen, and then select "Fuel Consumption".


If the "Past Record" screen does not appear, move the controller to the right and select "Past Record".



- ① Previous fuel consumption record
- ② Current fuel consumption
- ③ Best recorded fuel consumption

## ■ Hybrid warning message


A message is automatically displayed when a malfunction occurs in the hybrid system or an improper operation is attempted.

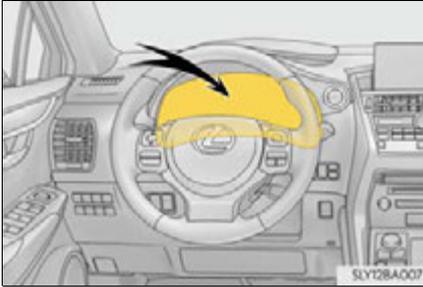

If a warning message is shown on the multi-information display, read the message and follow the instructions.

## Keys

### ■ Electronic key

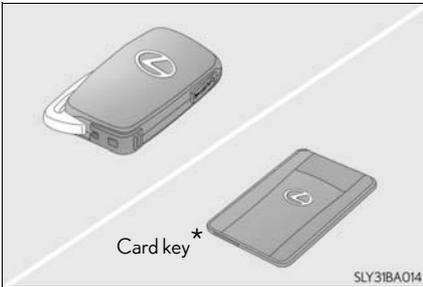


Smart access system with push-button start  
(→P. 20, 22)

Wireless remote control (→P. 19)

\*: If equipped


## ■ Mechanical key

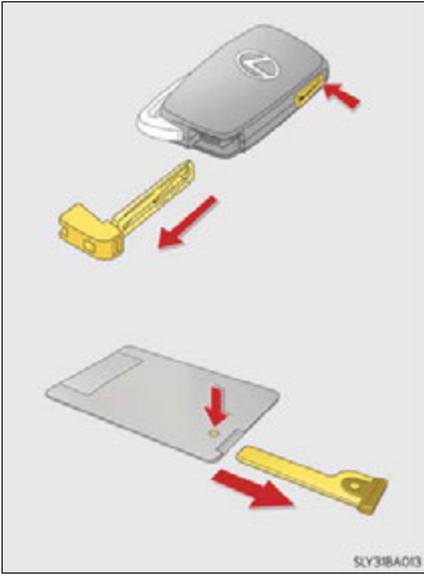

To take out the mechanical key, push the release button and take the key out.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

## ■ Wireless remote control

 

- ① Locks all the doors
- ② Unlocks all the doors
- ③ Opens the windows and moon roof<sup>\*1,2</sup>
- ④ Opens and closes the power back door<sup>\*1</sup>
- ⑤ Sounds the alarm

<sup>\*1</sup>: If equipped


<sup>\*2</sup>: This setting must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. The driver should always carry the electronic key.

For details on starting the hybrid system, see page 22.

### Entering and exiting the vehicle

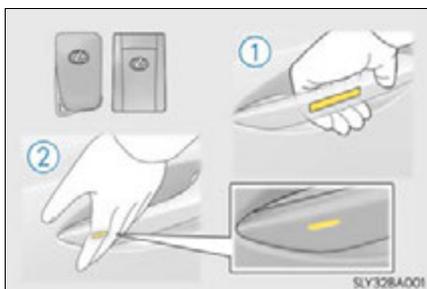

- ① Grip the driver's door handle to unlock the door. Grip any passenger door handle to unlock all the doors.\*


Make sure to touch the sensor on the back of the handle.

The doors cannot be unlocked for 3 seconds after the doors are locked.

- \*: The door unlock settings can be changed.

- ② Touch the lock sensor (the indentation on the surface of the door handle) to lock all the doors.  
Check that the door is securely locked.

### Locking and unlocking the back door

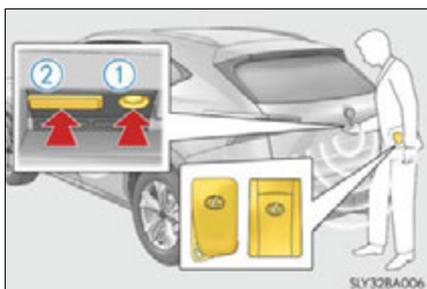


- ① Locks all the doors  
Check that the door is securely locked.
- ② Unlocks all the doors  
The doors cannot be unlocked for 3 seconds after the doors are locked.

For details on what to do when the electronic key does not operate properly, see page 108.

## Theft Deterrent System

### ■ Immobilizer system

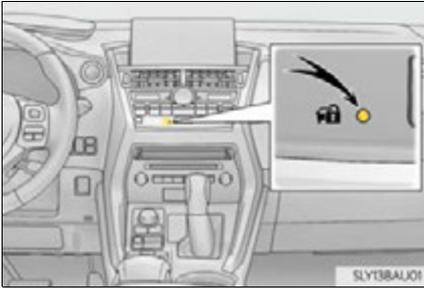

The indicator light flashes after the power switch has been turned off to indicate that the system is operating.

The indicator light stops flashing after the power switch has been turned to ACCESSORY or ON mode to indicate that the system has been canceled.

### ■ Alarm

The alarm uses light and sound to give an alert when an intrusion is detected.

#### **To set the alarm:**

Close the doors and hood, and lock all the doors. The system will be set automatically after 30 seconds.

The indicator light changes from being on to flashing when the system is set.

#### **To deactivate or stop the alarm:**

- Unlock the doors.
- Turn the power switch to ACCESSORY or ON mode, or start the hybrid system. (The alarm will be deactivated or stopped after a few seconds.)

## Power (Ignition) Switch

Performing the following operations when carrying the electronic key on your person starts the hybrid system or changes power switch modes.

### Starting the hybrid system

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display.

If it is not displayed, the hybrid system cannot be started.



- 4 Press the power switch.  
If the "READY" indicator turns on, the hybrid system will operate normally.  
Continue depressing the brake pedal until the "READY" indicator is illuminated.  
The hybrid system can be started from any power switch mode.


- 5 Check that the "READY" indicator is illuminated.  
The vehicle will not move when the "READY" indicator is off.

## ■ Stopping the hybrid system

- 1 Stop the vehicle completely.
- 2 Shift the shift lever to P.
- 3 Set the parking brake.  
If the parking brake is in automatic mode, the parking brake is set automatically when shifting the shift lever to P.
- 4 Press the power switch.
- 5 Release the brake pedal and check that the display on the instrument cluster is off.

## ■ Changing power switch modes

Modes can be changed by pressing the power switch with brake pedal released. (The mode changes each time the switch is pressed.)

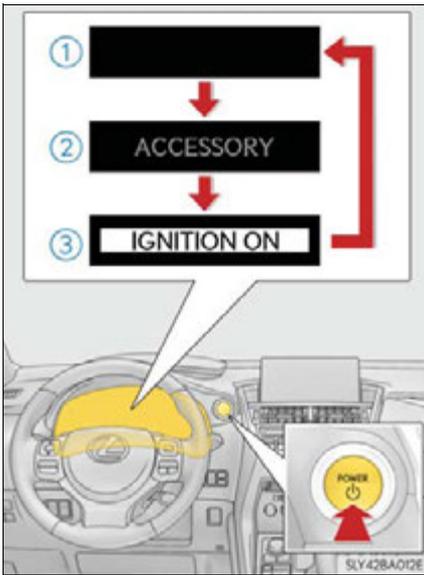

- 1 Off\*  
The emergency flashers can be used.
- 2 ACCESSORY mode  
Some electrical components such as the audio system can be used. "ACCESSORY" will be displayed on the multi-information display.
- 3 ON mode  
All electrical components can be used. "IGNITION ON" will be displayed on the multi-information display.

\*: If the shift lever is in a position other than P when turning off the hybrid system, the power switch will be turned to ACCESSORY mode, not to off.

## ■ If your vehicle has to be stopped in an emergency

---

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.  
▶ **If the shift lever is shifted to N**
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the hybrid system.  
▶ **If the shift lever cannot be shifted to N**
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.




- 4** To stop the hybrid system, press and hold the power switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

## EV Drive Mode

In EV drive mode, electric power is supplied by the hybrid battery (traction battery), and only the electric motor (traction motor) is used to drive the vehicle.

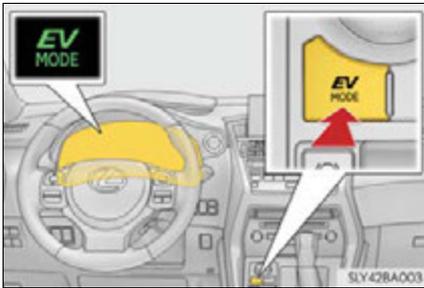


Turns EV drive mode on/off

When EV drive mode is turned on, the EV drive mode indicator will come on. Pressing the switch when in EV drive mode will return the vehicle to normal driving (using the gasoline engine and electric motor [traction motor]).

## Hybrid Transmission

### Shifting the shift lever

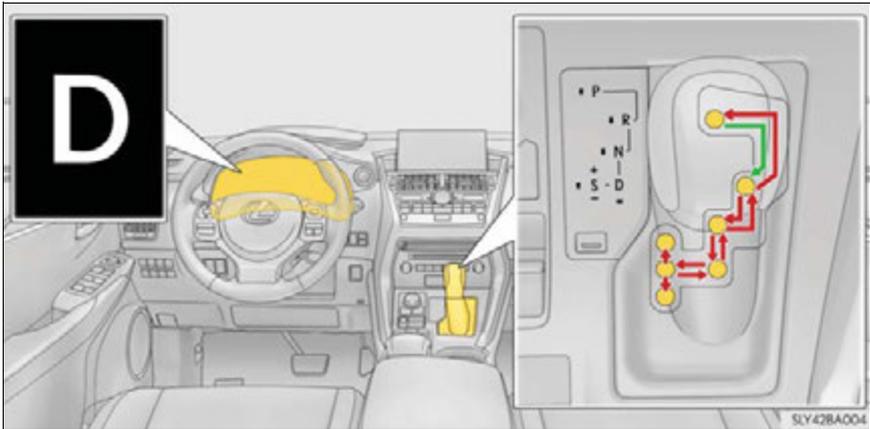

- ← While the power switch is in ON mode, move the shift lever with the brake pedal depressed. When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

## ■ Shift position purpose

Shift position	Objective or function
P	Parking the vehicle/starting the hybrid system
R	Reversing
N	Neutral
D	Normal driving <sup>*1</sup>
S	S mode driving <sup>*2</sup>

\*1: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving.


\*2: By selecting shift ranges using S mode, you can control accelerating force and engine braking force.

## ■ Selecting the driving mode

→P. 51

## ■ Selecting shift ranges in the S position

To enter S mode, shift the shift lever to S. Shift ranges can be selected by operating the shift lever, allowing you to drive in the shift range of your choice. The shift range can be selected by operating the shift lever.

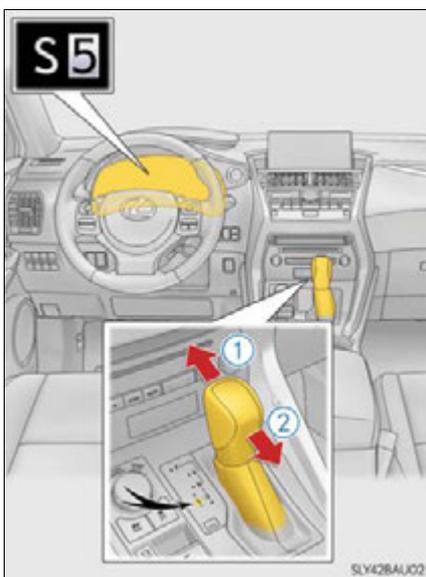

① Upshifting

② Downshifting


The selected shift range, from 1 to 6, will be displayed.

The initial shift range in S mode is 4.

## ■ Shift ranges and their functions

- You can choose from 6 levels of accelerating force and engine braking force.
- A lower shift range will provide greater accelerating force and engine braking force than a higher shift range, and the engine revolutions will also increase.

## Turn Signal Lever

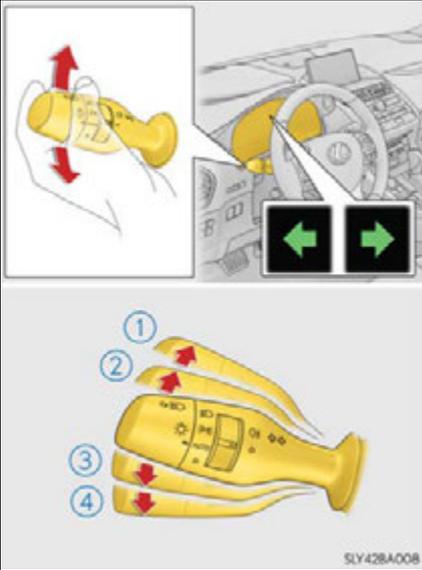


- ① Right turn
- ② Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- ③ Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- ④ Left turn

# Parking Brake

## Automatic mode


The parking brake is set or released automatically according to shift lever operation. Even when in automatic mode, the parking brake can be set and released manually. (→P. 29)

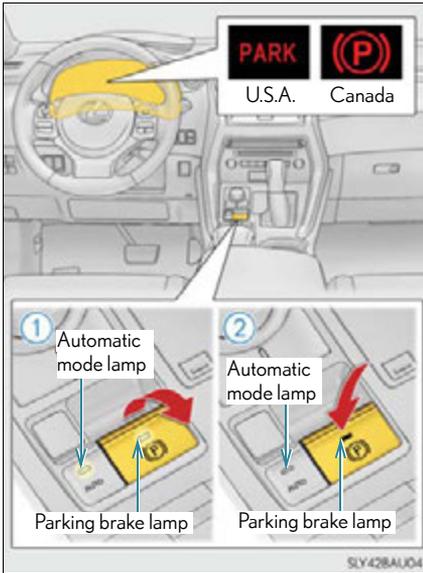

- ① Turns automatic mode on (while the vehicle is stopped, pull and hold the parking brake switch until the automatic mode lamp turns on)
  - When the shift lever is moved out of P, the parking brake will be released, and the parking brake indicator light and parking brake lamp turn off.
  - When the shift lever is moved into P, the parking brake will be set, and the parking brake indicator light and parking brake lamp turn on.Operate the shift lever with the brake pedal depressed.
- ② Turns automatic mode off (while the vehicle is stopped, press and hold the parking brake switch until the automatic mode lamp turns off)

## Manual mode

The parking brake can be set and released manually.

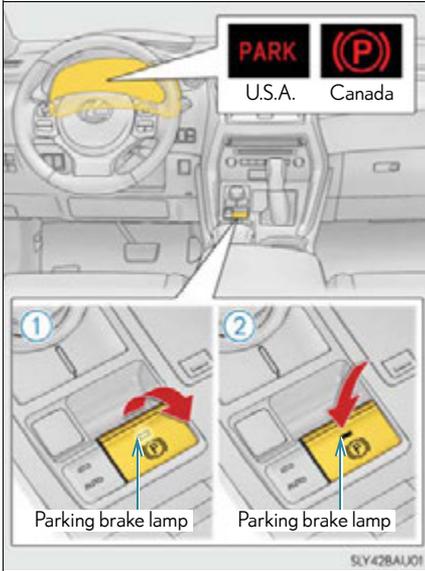

- ① Sets the parking brake  
The parking brake indicator light and parking brake lamp will turn on. Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.
- ② Releases the parking brake  
Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light and parking brake lamp turn off.

If the parking brake indicator light and parking brake lamp flashes, operate the switch again.

## Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, S or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or S to allow smooth start off.



Turns the brake hold system on  
The brake hold standby indicator (green) comes on. While the system is holding the brake, the brake hold operated indicator (yellow) comes on.

## Multi-information Display

The multi-information display presents the driver with a variety of vehicle data.



Drive information

Select to display various drive data.



Navigation system-linked display

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (north-up display/heading-up display)



Audio system-linked display (if equipped)

Select to enable selection of an audio source or track on the display using the meter control switches.



Dynamic radar cruise control (if equipped)/Dynamic radar cruise control with full-speed range (if equipped)/Cruise control (if equipped)

Select to display the dynamic radar cruise control/dynamic radar cruise control with full-speed range/cruise control information, when the system is used.

(→P. 41, 44, 48)

The displayed icon changes depending on the system used.



LDA (Lane Departure Alert with steering control) [Vehicles without dynamic radar cruise control, dynamic radar cruise control with full-speed range, nor cruise control; Vehicles with LDA (Lane Departure Alert with steering control)]

If activated, the operational status of LDA (Lane Departure Alert with steering control) will also be displayed.



Warning message display


Select to display warning messages and measures to be taken if a malfunction is detected.



Settings display

Select to change the meter display settings.

## ■ Operating the meter control switches

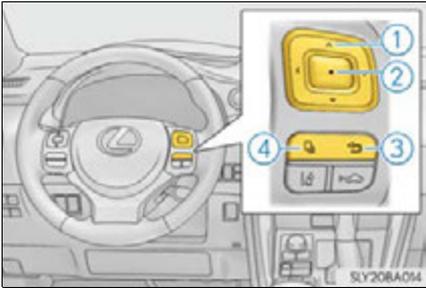

The multi-information display is operated using the meter control switches.

- ① Select an item/change pages
- ② Enter/Set
- ③ Return to the previous screen
- ④ Press:

Displays the screen registered to 

When no screen has been registered, the drive information screen will be displayed.

Press and hold:


Registers the currently displayed screen to 

The registration confirmation screen is displayed. If the selected screen cannot be registered, a registration failure message will be shown.

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


# Headlights

## ► Type A

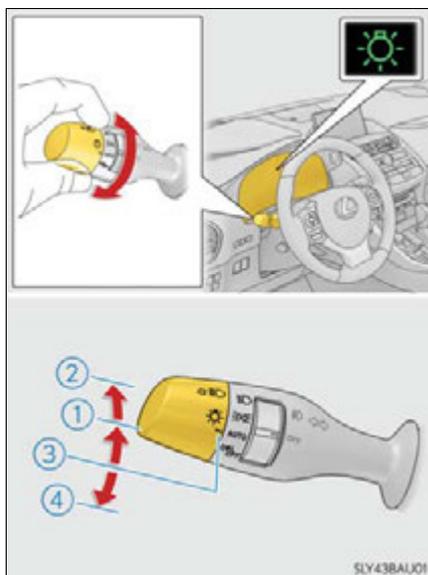


- ①  The side marker, parking, tail, license plate, daytime running lights, instrument panel and switch lights turn on.
- ②  The headlights and all the lights listed above (except daytime running lights) turn on.
- ③ AUTO The headlights, daytime running lights and all the lights listed above turn on and off automatically (when the power switch is in ON mode).
- ④  The daytime running lights turn off.

## ► Type B

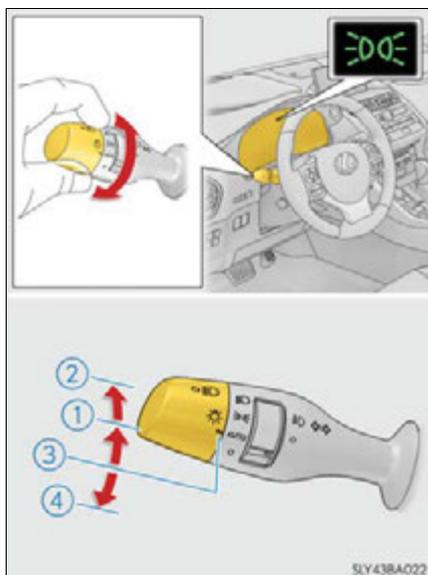

- ①  The side marker, parking, tail, license plate, daytime running lights, instrument panel and switch lights turn on.
- ②  The headlights and all the lights listed above (except daytime running lights) turn on.
- ③ AUTO The headlights, daytime running lights and all the lights listed above turn on and off automatically (when the power switch is in ON mode).
- ④  The daytime running lights turn on.

## ■ Turning on the high beam headlights

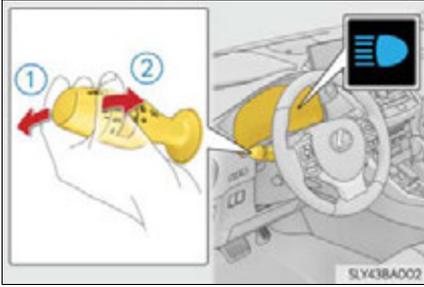


- 1 With the headlights on, push the lever away from you to turn on the high beams. Pull the lever toward you to the center position to turn the high beams off.
- 2 Pull the lever toward you and release it to flash the high beams once. You can flash the high beams with the headlights on or off.

## ■ Automatic High Beam (if equipped)

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns high beam on or off as necessary.

## ■ Activating the Automatic High Beam system

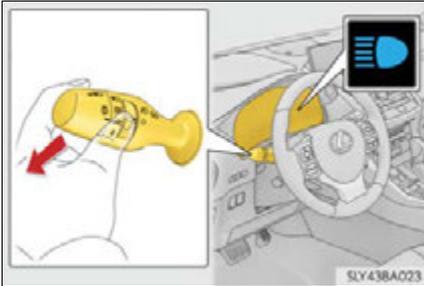


- 1 Push the lever away from you with the headlight switch in **AUTO** or  position.



- 2 Press the Automatic High Beam switch. The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

## Turning the high beam on/off manually

### ● Switching to low beam

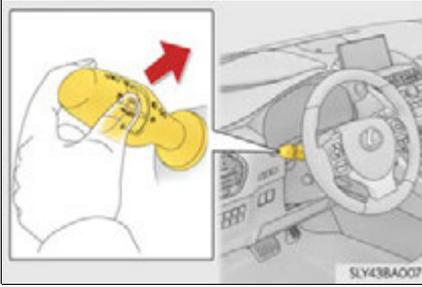


Pull the lever to original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

### ● Switching to high beam

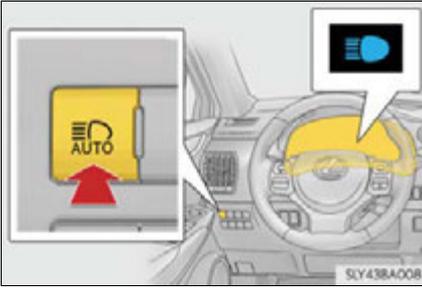


Press the Automatic High Beam switch.

The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

## Fog Lights




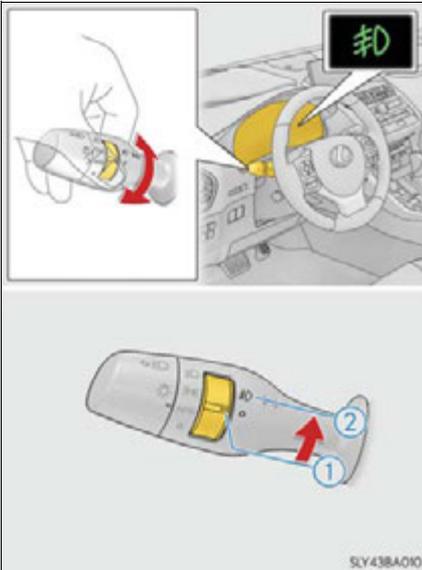


- ① ○ Turns the fog lights off
- ② ☹ Turns the fog lights on

## Windshield Wipers and Washer

### Intermittent windshield wipers with interval adjuster (if equipped)

#### ► Type A

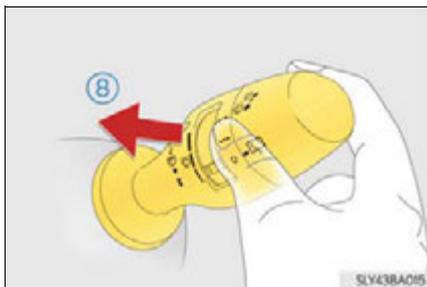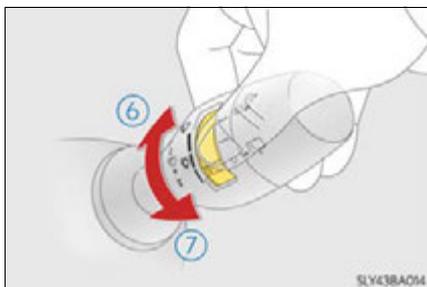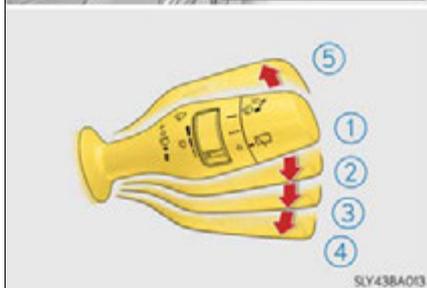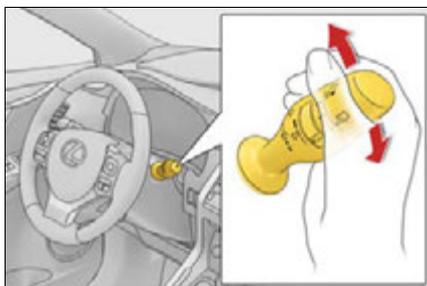

- ① ○ Off
- ②  Intermittent operation
- ③ ▼ Low speed operation
- ④  High speed operation
- ⑤ ▲ Temporary operation





Wiper intervals can be adjusted when intermittent operation is selected.

- ⑥ Increases the intermittent windshield wiper frequency
- ⑦ Decreases the intermittent windshield wiper frequency

- ⑧ Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Type B

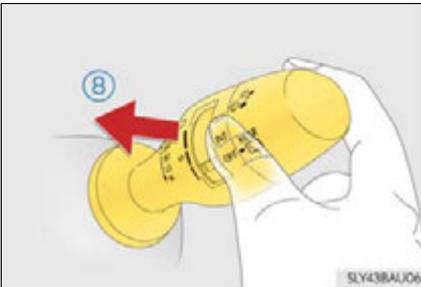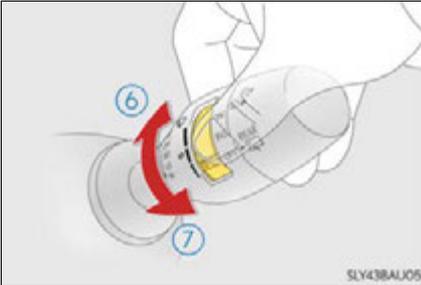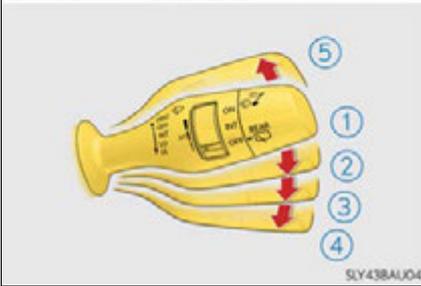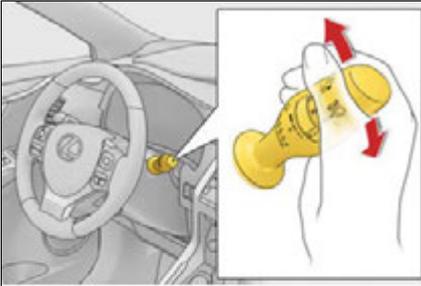

- ① **OFF** Off
- ② **INT** Intermittent operation
- ③ **LO** Low speed operation
- ④ **HI** High speed operation
- ⑤ **MIST** Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.





- ⑥ Increases the intermittent windshield wiper frequency
- ⑦ Decreases the intermittent windshield wiper frequency

- ⑧ **Washer/wiper dual operation**  
The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## ■ Rain-sensing windshield wipers (if equipped)

### ► Type A

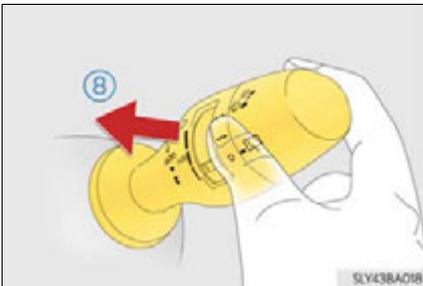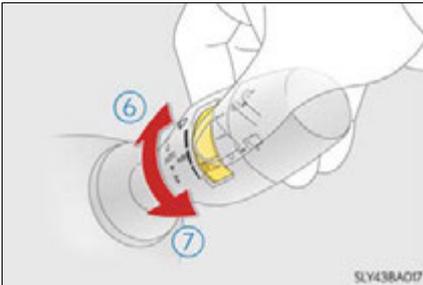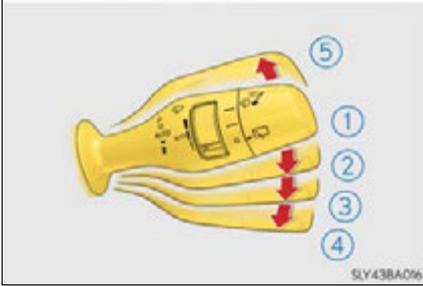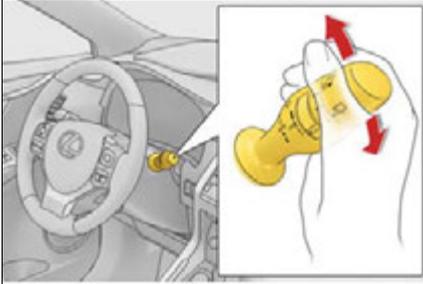

- ① ○ Off
- ② AUTO Rain-sensing operation
- ③ ▼ Low speed operation
- ④ ▼ High speed operation
- ⑤ ▲ Temporary operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.





The sensor sensitivity can be adjusted when "AUTO" is selected.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity

- ⑧ Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Type B

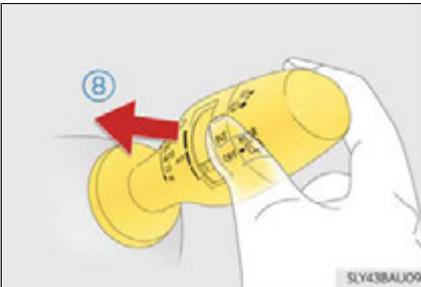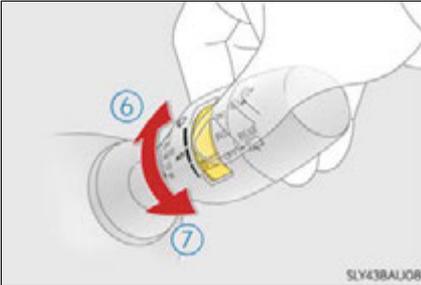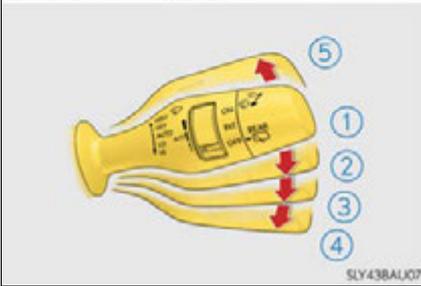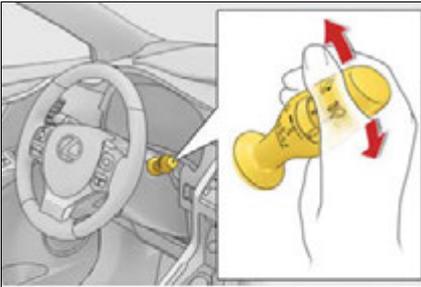




- ① **OFF** Off
  - ② **AUTO** Rain-sensing operation
  - ③ **LO** Low speed operation
  - ④ **HI** High speed operation
  - ⑤ **MIST** Temporary operation
- When “AUTO” is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when “AUTO” is selected.

- ⑥ Increases the sensitivity
- ⑦ Decreases the sensitivity
- ⑧ **Washer/wiper dual operation**  
The wipers will automatically operate a couple of times after the washer squirts.  
Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## Rear Window Wiper and Washer




### ► Type A

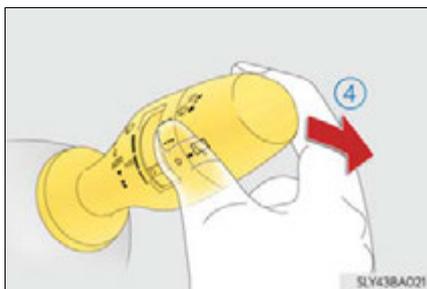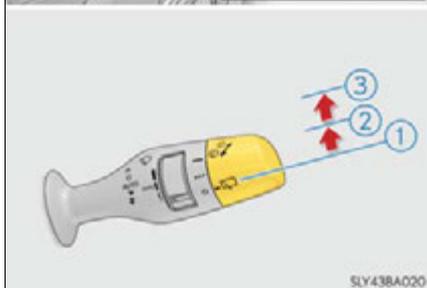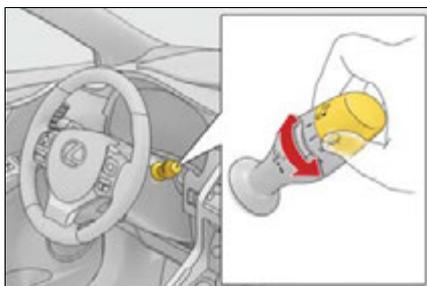

- ① ○ Off
- ② - - - Intermittent operation
- ③ — Normal operation

- ④ Washer/wiper dual operation  
The wipers will automatically operate a couple of times after the washer squirts.

► Type B

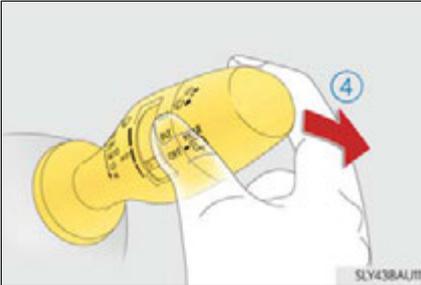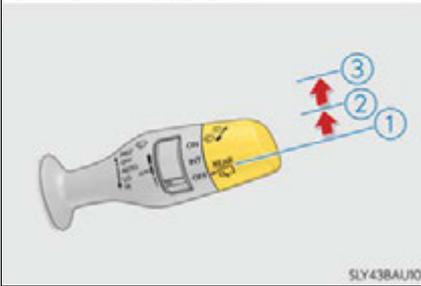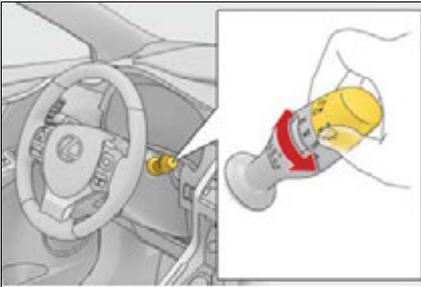


- ① **OFF** Off
- ② **INT** Intermittent operation
- ③ **ON** Normal operation

- ④ **Washer/wiper dual operation**  
The wipers will automatically operate a couple of times after the washer squirts.

## Dynamic Radar Cruise Control (if equipped)


Without accelerator pedal operation by the driver, in vehicle-to-vehicle distance control mode, the vehicle automatically accelerates and decelerates in accordance to the changes in speed of the preceding vehicle. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control on freeways and highways.

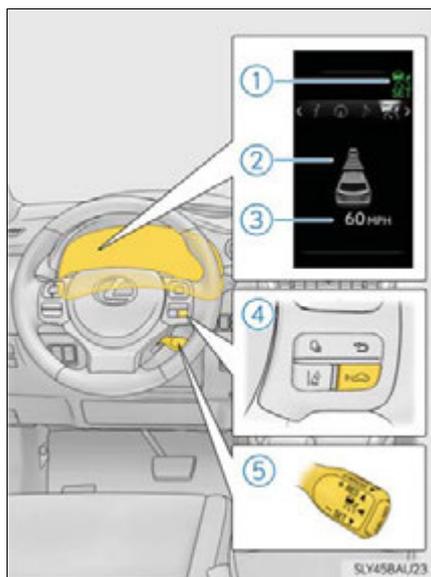

- ① Indicators
- ② Display
- ③ Set speed
- ④ Vehicle-to-vehicle distance button
- ⑤ Cruise control switch


### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

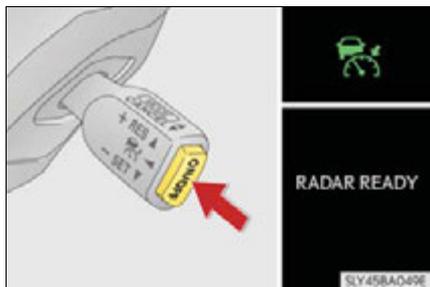

- 1** Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

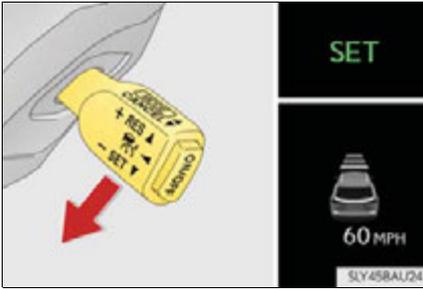


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

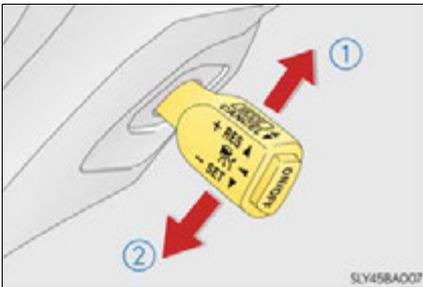


- 1 Increases the speed

- 2 Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

## ■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

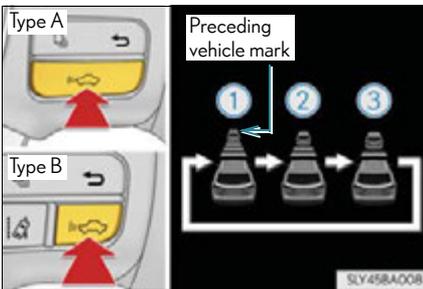

Pressing the button changes the vehicle-to-vehicle distance as follows:

- 1 Long

- 2 Medium


- 3 Short

The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.


The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.

## ■ Canceling and resuming the speed control

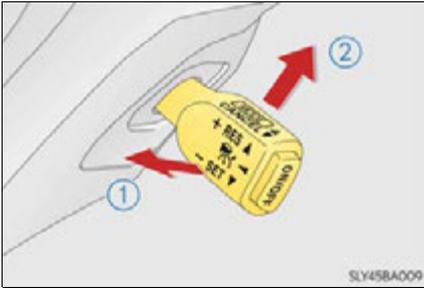

- ① Pulling the lever toward you cancels the speed control.  
The speed setting is also canceled when the brake pedal is depressed.
- ② Pushing the lever up resumes the speed control and returns vehicle speed to the set speed.  
However, resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## ■ Selecting constant speed control mode

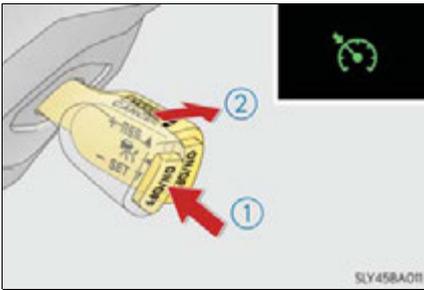


- ① Press the “ON/OFF” button to activate the cruise control.  
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.  
(Push the lever forward and hold for approximately 1 second.)  
Cruise control indicator will come on.  
When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.

## Dynamic Radar Cruise Control with Full-speed Range (if equipped)


Without accelerator pedal operation by the driver, in vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops in accordance to the changes in speed of the preceding vehicle. In constant speed control mode, the vehicle runs at a fixed speed.

Use the dynamic radar cruise control with full-speed range on freeways and highways.

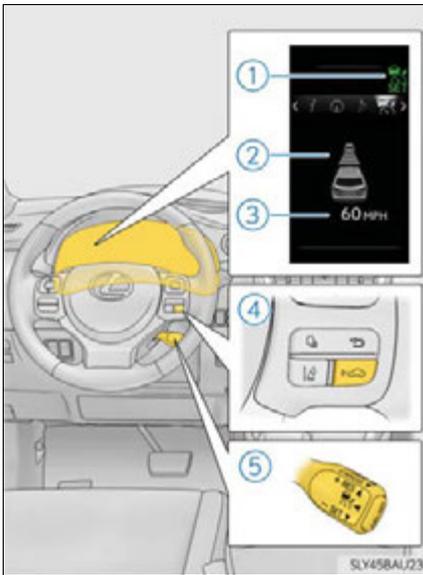


- ① Indicators
- ② Display
- ③ Set speed
- ④ Vehicle-to-vehicle distance button
- ⑤ Cruise control switch

### Setting the vehicle speed (vehicle-to-vehicle distance control mode)

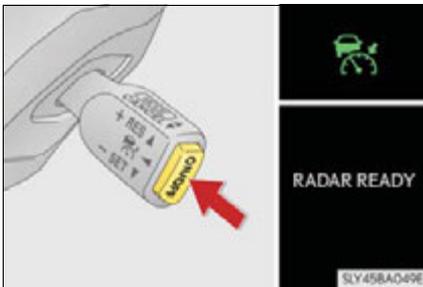

- 1** Press the "ON/OFF" button to activate the cruise control.  
Radar cruise control indicator will come on and a message will be displayed on the multi-information display.  
Press the button again to deactivate the cruise control.

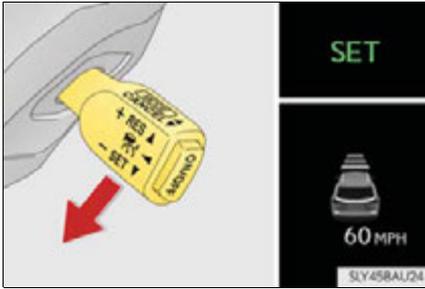


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 30 mph [50 km/h]) and push the lever down to set the speed.

Cruise control “SET” indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

While the vehicle is in vehicle-to-vehicle distance control mode, if the lever is released when vehicle speed is less than 30 mph (50 km/h) and a vehicle ahead can be detected, the vehicle will start following the vehicle ahead at a set speed of 30 mph (50 km/h).


## ■ Adjusting the set speed

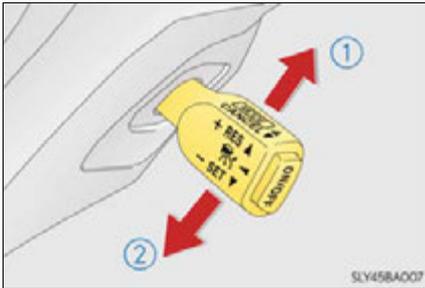

- ① Increases the speed  
(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)

- ② Decreases the speed  
Fine adjustment: Momentarily move the lever in the desired direction.  
Large adjustment: Hold the lever in the desired direction.

## ■ Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

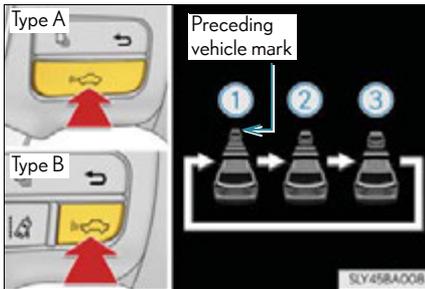

Pressing the button changes the vehicle-to-vehicle distance as follows:


- ① Long
- ② Medium
- ③ Short

The vehicle-to-vehicle distance is set automatically to long mode when the power switch is turned to ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark will also be displayed.

The vehicle-to-vehicle distance control mode maintains the preset cruising speed as long as no vehicle is detected ahead.


## ■ Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

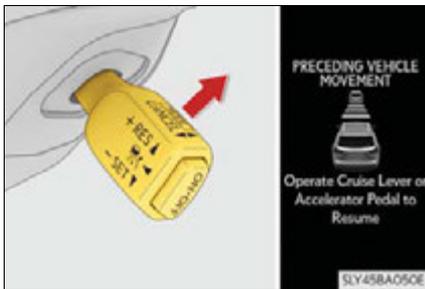

After the vehicle ahead of you starts off, push the lever up.


Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

## ■ Canceling and resuming the speed control

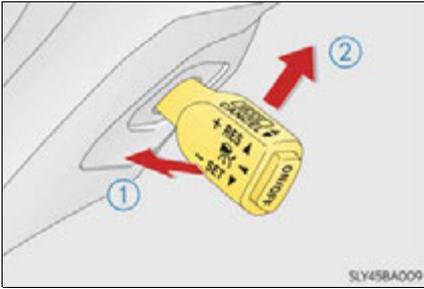

- ① Pulling the lever toward you cancels the speed control.  
The speed setting is also canceled when the brake pedal is depressed. (When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)
- ② Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.  
However, when a vehicle ahead is not detected in vehicle-to-vehicle distance control mode, cruise control does not resume when the actual vehicle speed is approximately 25 mph (40 km/h) or less. Also, when the vehicle is in constant speed control mode and the actual vehicle speed is approximately 25 mph (40 km/h) or less, cruise control does not resume as the set speed is cleared.


## ■ Selecting constant speed control mode

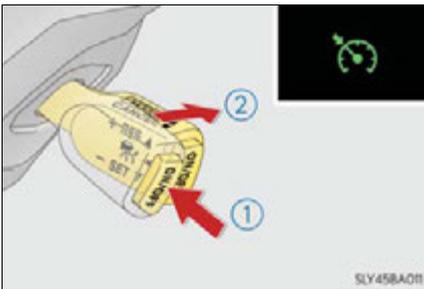

- ① Press the "ON/OFF" button to activate the cruise control.  
Press the button again to deactivate the cruise control.
- ② Switch to constant speed control mode.  
(Push the lever forward and hold for approximately 1 second.)  
Cruise control indicator will come on.  
When in constant speed control mode, to return to vehicle-to-vehicle distance control mode, push the lever forward again and hold for approximately 1 second.


## Cruise Control (if equipped)

Use the cruise control to maintain a set speed without operating the accelerator pedal.  
Use the cruise control on freeways and highways.

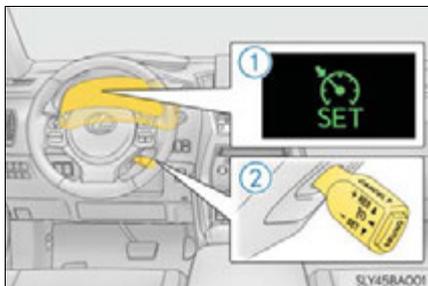


- 1 Indicators
- 2 Cruise control switch

### Setting the vehicle speed

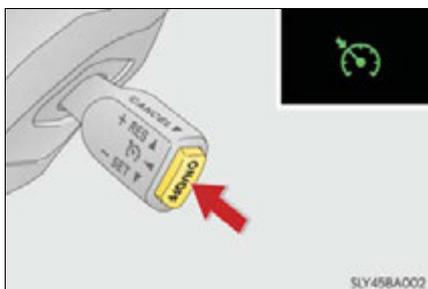


- 1 Press the "ON/OFF" button to activate the cruise control.  
Cruise control indicator will come on.  
Press the button again to deactivate the cruise control.

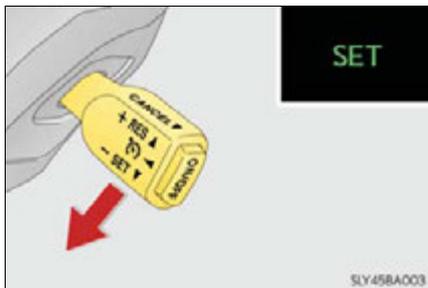

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (above approximately 25 mph [40 km/h]) and push the lever down to set the speed.  
Cruise control "SET" indicator will come on.  
The vehicle speed at the moment the lever is released becomes the set speed.

## ■ Adjusting the set speed

 


① Increases the speed

② Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever in the desired direction.

## ■ Canceling and resuming the constant speed control

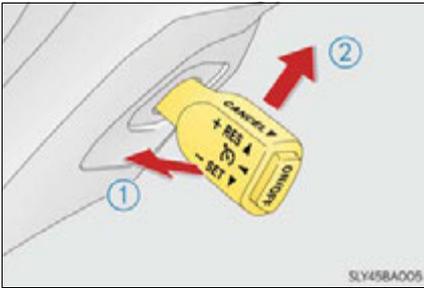

① Pulling the lever toward you cancels the constant speed control.

The speed setting is also canceled when the brake pedal is depressed.


② Pushing the lever up resumes the constant speed control.

However, resuming is available when the vehicle speed is more than approximately 25 mph (40 km/h).

## LDA (Lane Departure Alert with Steering Control) (if equipped)

While driving on a highway or freeway that has white (or yellow) lane markers and few curves, a camera, which is located on the upper part of the windshield, uses this system to recognize the white (yellow) lane markers and when the driver has deviated from the lane. If the system judges that the vehicle has deviated from the current traffic lane, along with alerting the driver with a buzzer and indications in the multi-information display, it will provide assistance by operating the steering wheel to avoid further deviation from the marker lines.


### Turning the LDA on

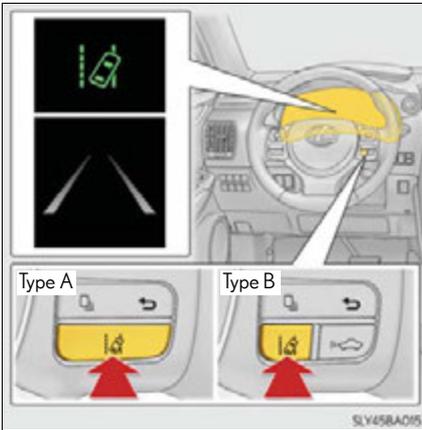

Press the LDA switch to activate the LDA. LDA indicator will come on and lane lines will be displayed on the multi-information display. Press the switch again to deactivate the LDA. When the power switch is turned off, the LDA returns to off.

## Driving Mode Select Switch

The driving modes can be selected to suit driving conditions.

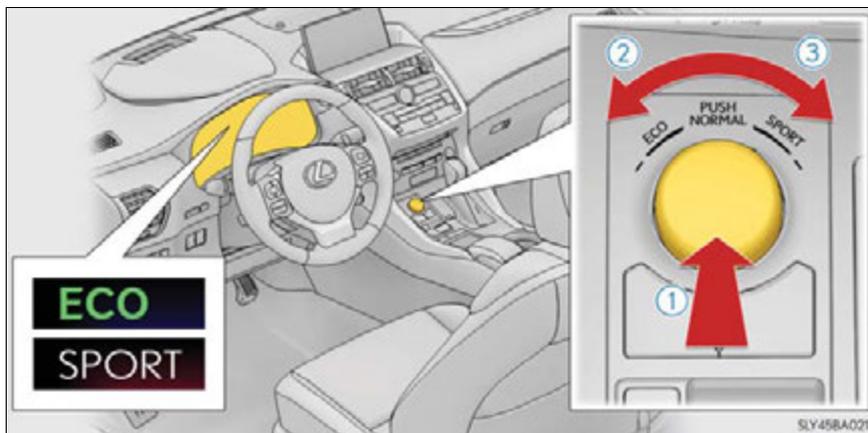


- ① Normal mode  
For normal driving.  
Press the switch to change the driving mode to normal mode when selected to Eco drive mode or sport mode.
- ② Eco drive mode  
Use Eco drive mode to help achieve low fuel consumption during trips that involve frequent accelerating.  
When not in Eco drive mode and the driving mode select switch is turned to the left, "ECO" indicator will be shown on the multi-information display.
- ③ Sport mode  
Assists acceleration response by controlling the hybrid system and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads.  
When not in sport mode and the driving mode select switch is turned to the right, "SPORT" indicator will be shown on the multi-information display and the hybrid system indicator changes to the tachometer.

## BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
- The Rear Cross Traffic Alert function  
Assists the driver when backing up

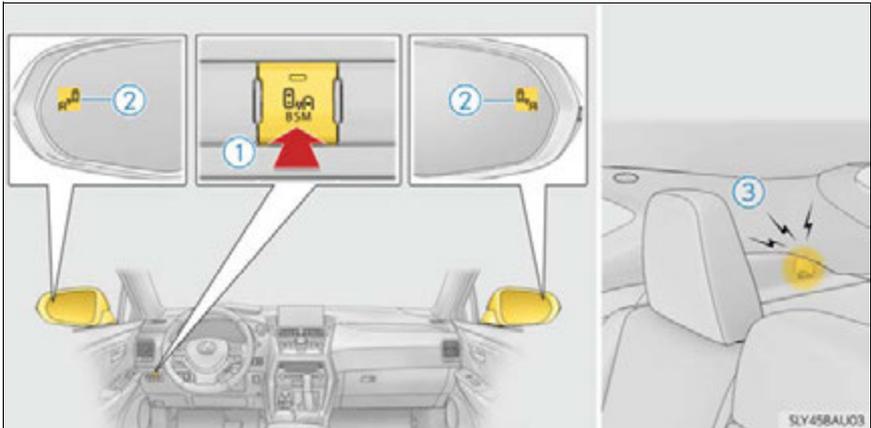

- ① BSM main switch  
Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. This switch is for both Blind Spot Monitor function and Rear Cross Traffic Alert function.
- ② BSM outside rear view mirror indicators  
Blind Spot Monitor function:  
When a vehicle is detected in the blind spot, the BSM outside rear view mirror indicator on the detected side illuminates. If the turn signal lever is operated when a vehicle is in the blind spot, the BSM outside rear view mirror indicator flashes.  
Rear Cross Traffic Alert function:  
When a vehicle approaching from the right or left rear of the vehicle is detected, the BSM outside rear view mirror indicators flash.
- ③ Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)  
When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the right-hand rear seat.

## Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.

### The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

### Initializing the tire pressure warning system



- 1 Press  of the meter control switch.



- 2 Press  or  of the meter control switch, select , and then press .



- 3 Press  or  of the meter control switch, select the "TPMS" screen and then press and hold the .



- 4 A message and an indicator are displayed by the multi-information display, and initialization is completed.

## ASC (Active Sound Control) (if equipped)

The ASC system is an electronic sound system that generates engine sound, conveying the kinetic situations of the vehicle's acceleration and deceleration to the driver through the speakers inside the instrument panel.

The vehicle's response to the driver's acceleration behavior and shift operations are also conveyed in sound.

When sport mode is selected, the sound conveyed to the driver will be louder.

### Controlling volume




- ① Louder
  - ② Lower
- The indicator comes on when the ASC system is on.
- When the dial is turned to the lowest volume, the ASC system will be turned off and the indicator will go off.

## Remote Touch (with navigation system)

The Remote Touch can be used to operate the Remote Touch screens.

### Basic operation

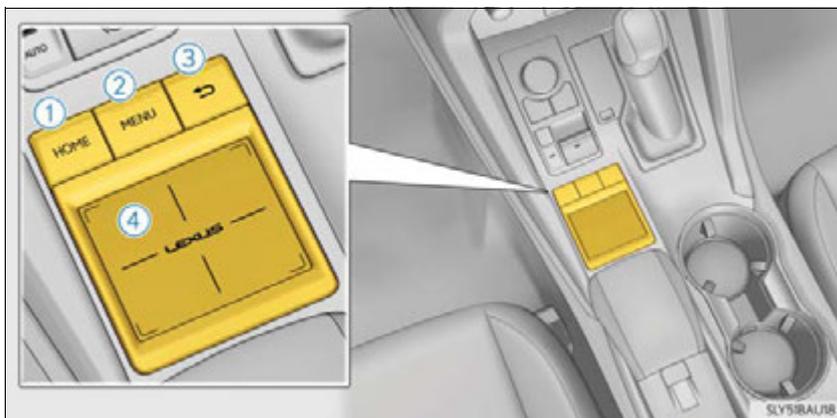

- ① “HOME” button  
Press to display the home screen.
- ② “MENU” button  
Press to display the “Menu” screen.
- ③  button  
Press to display the previous screen.
- ④ Touchpad  
Slide your finger on the touchpad and move the pointer to select a function, letter and screen button.  
Press the touchpad to enter the selected function, letter or screen button.

### Menu




Press the “MENU” button on the Remote Touch to display the “Menu” screen.

- ① “Climate” (→P. 83)
- ② “Nav” (→P. 58)
- ③ “LEXUS App Suite”
- ④ “Info”
- ⑤ “Radio” (→P. 70)
- ⑥ “Media” (→P. 69)
- ⑦ “Phone” (→P. 64)
- ⑧ “Setup”
- ⑨ “Display”

## Home

### ▶ Three-way split screen

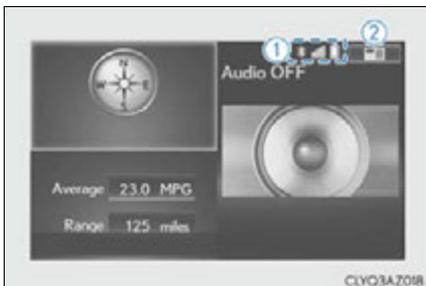

Press the "HOME" button on the Remote Touch to display the home screen.

The home screen can display multiple information screens, such as the navigation system screen, audio system screen and fuel consumption screen, simultaneously. When a screen is selected, the selected screen is switched to a full-screen display.

- ① Displays the condition of the Bluetooth® connection
- ② Select to change the display items/area and the home screen layout.

### ▶ Two-way split screen



## Screen scroll operation



To scroll over the map screen, place the cursor mark in the desired position and then press and hold the Remote Touch knob.

- ① Cursor mark
- ② Distance from the current position to the cursor mark.
- ③ Zooms in on the map
- ④ Zooms out on the map
- ⑤ Select to return to the current position.
- ⑥ Select to register as a memory point.
- ⑦ Select to set as a destination.

## Setting a route

While route guidance is operating, you can change the route using the following method.



**1** Select “Options”.



**2** Select “Edit Route”.





**3** Select the item to be set.

- ① Set route preferences
- ② Set detours
- ③ Change route type
- ④ Start from adjacent road

Some functions are unavailable while the vehicle is in motion. Refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.

# Navigation System (if equipped)

## Register home

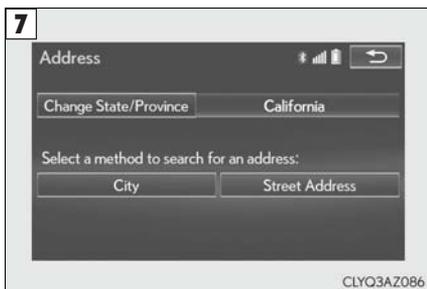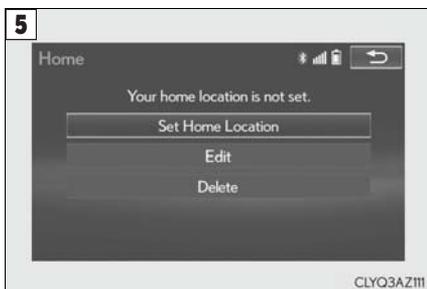

**1** Press the "MENU" button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.

**2** Select "Setup".

**3** Select "Navigation".

**4** Select "Home".

**5** Select "Set Home Location".

**6** Select "Address".

**7** Select "City".

**8** Enter a city name and select "OK".

**9** Select the screen button of the desired city name from the displayed list.  
For security reasons, use a point close to your home instead of your actual home address.

**10** Enter a street name and select "OK".


**11** When the desired street name is found, select the corresponding screen button.

**12** Enter a house number and select "OK".

**13** Select "OK".

## Destination input — Search by address

### Select by city name

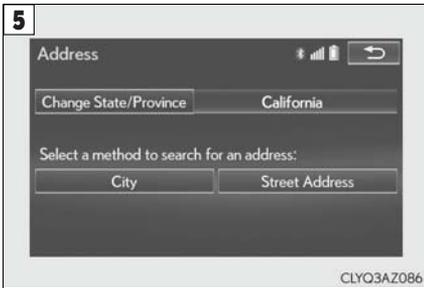

**1** Press the "MENU" button on the Remote Touch.

Please refer to page 55 for the Remote Touch operation.

**2** Select "Nav".

**3** Select "Dest".

**4** Select "Address".

**5** Select "City".

**6** Enter a city name and select "OK".

**7** Select the screen button of the desired city name from the displayed list.

**8** Enter a street name and select "OK".



**9** When the desired street name is found, select the corresponding screen button.

**10** Enter a house number and select "OK".

**11** Select "Go".

**12** Select "OK".

## Select by street address

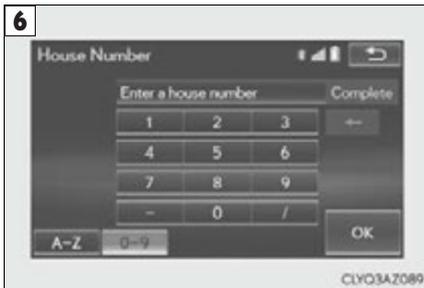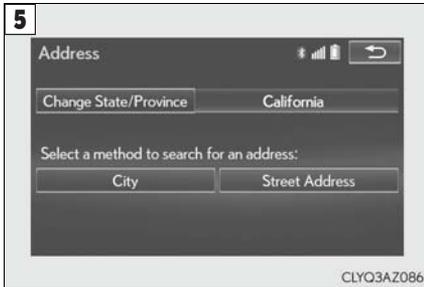

- 1** Press the "MENU" button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.
- 2** Select "Nav".
- 3** Select "Dest".
- 4** Select "Address".
- 5** Select "Street Address".
- 6** Enter a house number and select "OK".
- 7** Enter a street name and select "OK".
- 8** When the desired street name is found, select the corresponding screen button.
- 9** Enter a city name and select "OK".
- 10** Select the screen button of the desired city name from the displayed list.
- 11** Select "Go".
- 12** Select "OK".

## Destination input — Search points of interest by name

4



1 Press the “MENU” button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.

2 Select “Nav”.

3 Select “Dest.”.

4 Select “Point of Interest”.


5



5 Select “Name”.

6 Enter a POI name and select “OK”.

7

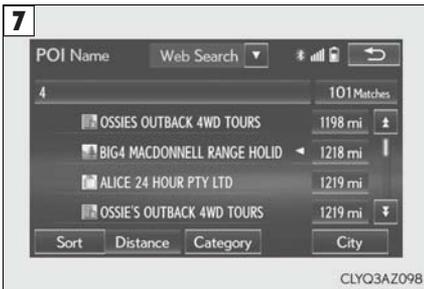

7 Select the screen button of the desired POI.

8 Select “Go”.

9 Select “OK”.

## Destination input — Search points of interest by category



**1** Press the "MENU" button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.


**2** Select "Nav".

**3** Select "Dest".

**4** Select "Point of Interest".




**5** Select "Category".

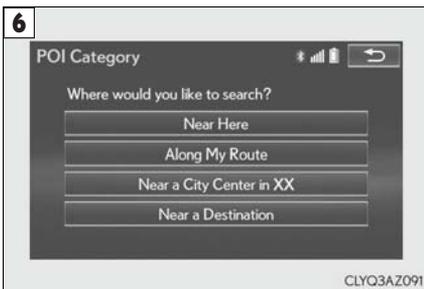

**6** Select "Near a Destination".

**7** Select the desired POI category from the displayed list.

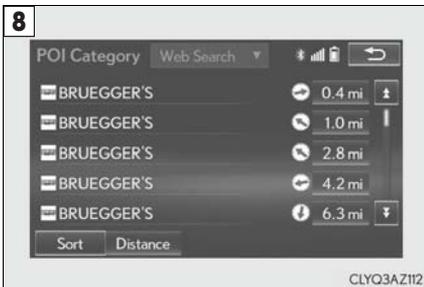

**8** Select the screen button of the desired POI.

**9** Select "Go".

**10** Select "OK".

## Destination input — Search points of interest by telephone number

4



1 Press the "MENU" button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.

2 Select "Nav".

3 Select "Dest".

4 Select "Point of Interest".

5



5 Select "Phone #".

6 Enter a phone number and select "OK".

7 Select "Go".

8 Select "OK".

# Hands-free System For Cellular Phone (with navigation system)


## Bluetooth® phone pairing

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "[www.lexus.com/MobileLink](http://www.lexus.com/MobileLink)" (for U.S.A.) for more phone information.




To use a Bluetooth® phone, it is necessary to first register it in the system.


- 1** Press on the steering wheel.
- 2** Select "Yes" or "OK".

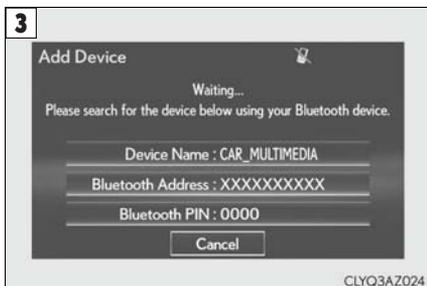

- 3** When this screen is displayed, search for the device name displayed on this screen on the screen of your Bluetooth® device. Refer to the cellular phone user's manual for cellular phone operation.

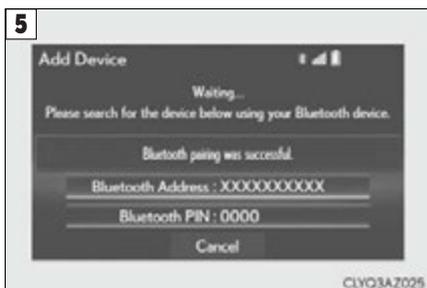

- 4** Register the Bluetooth® device using your Bluetooth® device.
- 5** Check that the following screen is displayed when registration is complete.

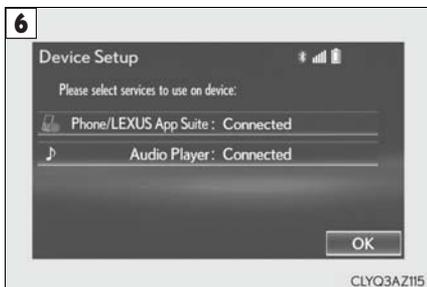

- 6** Select "OK" when the connection status changes from "Connecting..." to "Connected".

## ■ Contacts transfer

3



1 Press the “MENU” button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.

2 Select “Setup”.


3 Select “Phone”.

4



4 Select “Contact/Call History Settings”.

5

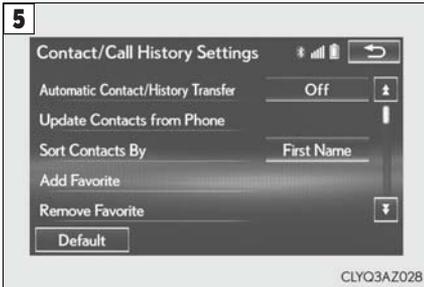


5 Select “Update Contacts from Phone”.

6 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on phone model.

## ■ Registering the contacts in the favorites list

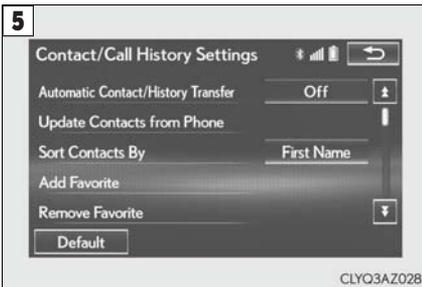

**1** Press the “MENU” button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.

**2** Select “Setup”.

**3** Select “Phone”.

**4** Select “Contact/Call History Settings”.


**5** Select “Add Favorite”.

**6** Select the desired contact to add to the favorites list.

**7** Check that a confirmation screen is displayed when the operation is complete.

## ■ Calling by name


You can call by giving a name registered in the contacts. For details, refer to the “NAVIGATION SYSTEM OWNER’S MANUAL”.

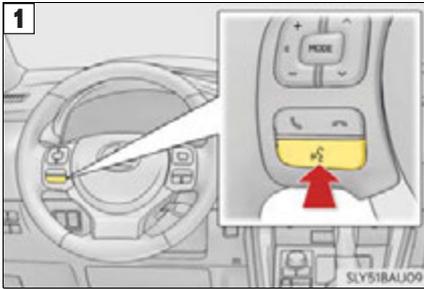


- 1 Press .
- 2 Say “Call <contacts> <phone types>”.

 : Pressing this switch turns the voice command system on. Say a command after the beep.

## ■ Calling by favorites list

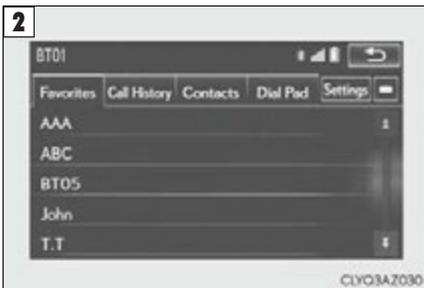


- 1 Press  on the steering wheel.
- 2 Select the “Favorites” tab and select the desired contact.

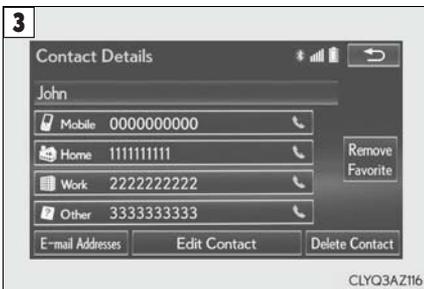

- 3 Select the desired number.
- 4 Check that the “Call” screen is displayed.

## ■ Calling using e-mail/SMS/MMS message

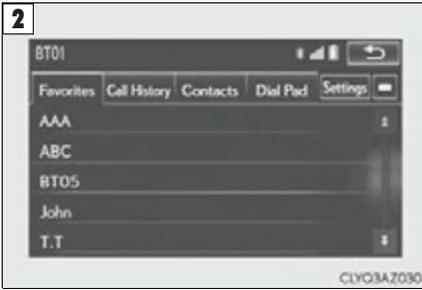

- 1** Press  on the steering wheel.
- 2** Select .
- 3** Select the desired message.
- 4** Select .
- 5** Check that the “Call” screen is displayed.

The tab display may vary depending on the type of cellular phone.


## ■ Receiving a call



- 1** When a call is received, this screen is displayed with a sound.
- 2** Press  on the steering wheel to talk on the phone.

To refuse the call, press  on the steering wheel.

## ■ Steering switches

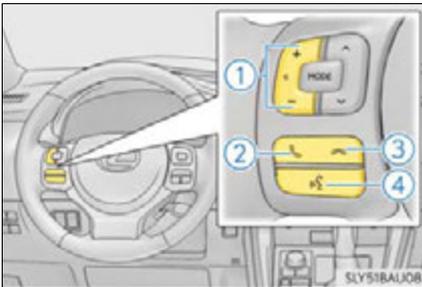

- 1** Increases/decreases volume
- 2** Sending/Receiving/“Phone” screen display
- 3** End call/Refuse call
- 4** Start the voice command system

## Audio System (with navigation system)

### Audio control screen


Follow the procedure below to display the audio control screen.



- 1 Press the "MENU" button on the Remote Touch.  
Please refer to page 55 for the Remote Touch operation.  
The "Menu" screen will be displayed.
- 2 Using the Remote Touch, select "Radio" or "Media" and select each tab.

### Remote control (steering wheel switches)

Some audio features can be controlled using the switches on the steering wheel.

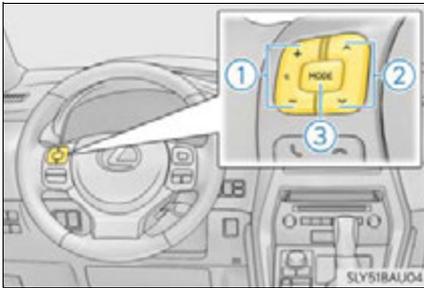

- 1 Increases/decreases volume
- 2 Radio mode: Selects a radio station/channel  
Audio CD mode: Selects a track  
MP3/WMA/AAC disc mode: Selects a file  
DVD mode: Selects a chapter  
iPod mode: Selects a track/file
- 3 Press: Change audio modes  
Press and hold: Mute/unmute or pause/resume the current operation

## Basic operation




- ① Sound settings
- ② Audio sources
  - “RADIO” button:
    - AM: AM radio
    - FM: FM radio
    - SAT: Satellite radio\*<sup>1</sup>
    - APPS (if equipped):
      - Internet radio broadcast
  - “MEDIA” button:
    - DISC: DVD player/CD player
    - iPod: iPod
    - USB: USB memory
    - Bluetooth\*<sup>2</sup>: Bluetooth<sup>®</sup> audio
    - AUX: Auxiliary audio device
- ③ Power/Volume

\*<sup>1</sup>: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 99)

\*<sup>2</sup>: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## Radio

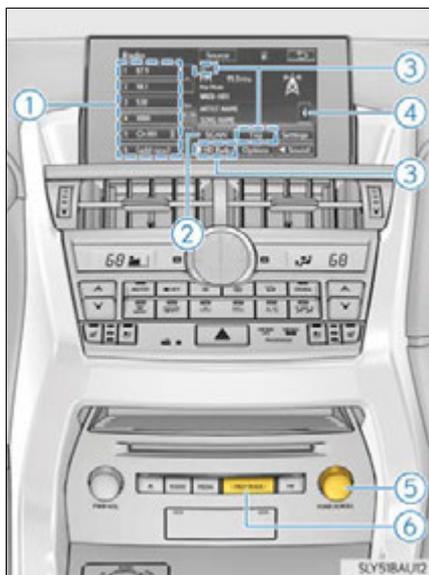

- ① Tuning to preset stations/channels
- ② Scanning for receivable stations
- ③ Using HD Radio<sup>™</sup> Technology (for U.S.A., if equipped)
- ④ Cache radio operation buttons
- ⑤ Adjusting the frequency
- ⑥ Press: Selects a preset station  
Press and hold: Seeks for a station

## ■ Entering station presets


- 1 Tune in the desired station.
- 2 Select “add new”.
- 3 Select “Yes” on the confirmation screen.
- 4 Select “OK” after setting the new preset station.

Radio mode has a mix preset function, which can store up to 36 stations (6 stations per page x 6 pages) from any of the AM, FM or SAT bands.

## ■ DVD player/CD player


---

### ■ Playing an audio CD

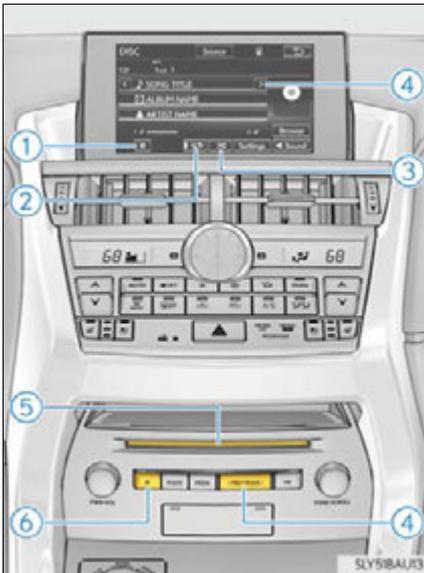

- 1 Playback/pause
- 2 Repeat playback
- 3 Random playback
- 4 Selecting a track
- 5 Disc slot
- 6 CD eject

## ■ Playing a CD with MP3/WMA/AAC files

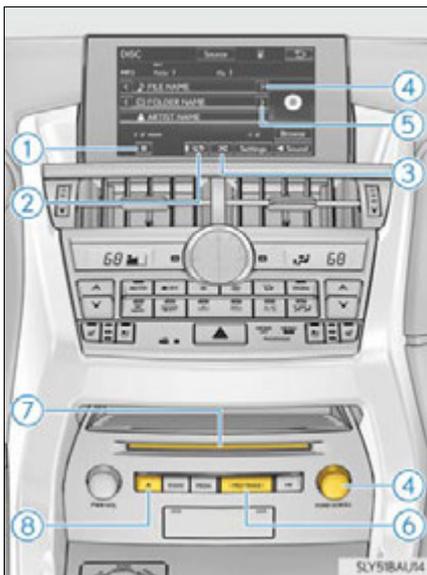

- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a file
- ⑤ Selecting a folder
- ⑥ Selecting a file/fast forward/rewind
- ⑦ Disc slot
- ⑧ CD eject

## ■ Playing a DVD



- ① Image display (full screen)
- ② Rewind
- ③ Stop
- ④ Playback/pause
- ⑤ Fast forward
- ⑥ Selecting a chapter
- ⑦ Disc slot
- ⑧ DVD eject

## ■ Operating an iPod

### ■ Playing an iPod audio



- ① Playback/pause
- ② Repeat playback
- ③ Random playback
- ④ Selecting a play mode
- ⑤ Selecting a track/fast forward/rewind

### ■ Playing an iPod video




- ① Image display (full screen)
- ② Rewind
- ③ Playback/pause
- ④ Fast forward
- ⑤ Selecting a file

## Lexus Display Audio Controller (with Lexus Display Audio)

By using the Lexus Display Audio controller, you can control the audio system, hands-free system, etc.


### Basic operation

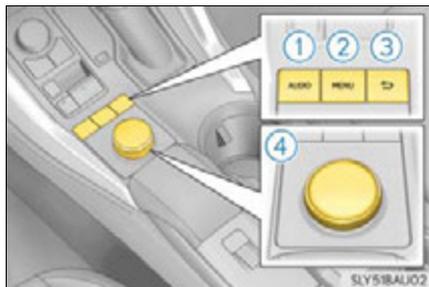

- ① Display the "Source" screen or audio top screen
- ② Display the "Menu" screen (→P. 75)
- ③ Display the previous screen
- ④ Turn or move the controller to select a function and number.  
Move the controller to display the left or right side of screen.  
Push the controller to enter the selected function and number.

## ■ “Menu” screen

To display the “Menu” screen, press the “MENU” button on the controller unit.

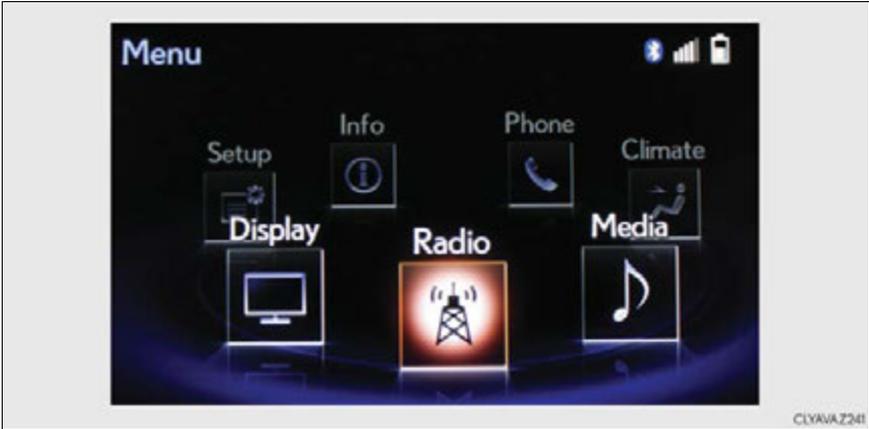

Button	Function
“Radio”	Display the radio top screen (→P. 80)
“Media”	Display the media top screen (→P. 80)
“Climate”	Automatic air conditioning system (→P. 83)
“Phone”	Display the phone top screen
“Info”	Display the “Information” screen
“Setup”	Setup menu
“Display”	Display settings

## ■ Screen for display settings

Go to “Display”: “MENU” button → “Display”




- ① Turn off screen.
- ② Adjust screen quality.
- ③ Adjust screen quality of the rear view monitor camera.
- ④ Change to day mode.

# Hands-free System For Cellular Phone (with Lexus Display Audio)

## How to register a Bluetooth® phone

Compatible Bluetooth®-equipped phones can be connected to the vehicle, enabling hands-free operation. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to "[www.lexus.com/MobileLink](http://www.lexus.com/MobileLink)" (for U.S.A.) for more phone information.

- 1 Turn the Bluetooth® connection setting of your device set to on.
- 2 Go to "Bluetooth\* Setup": "MENU" button → "Setup" → "Bluetooth\*"
- 3 Move the controller to the left and then select "Add Device"

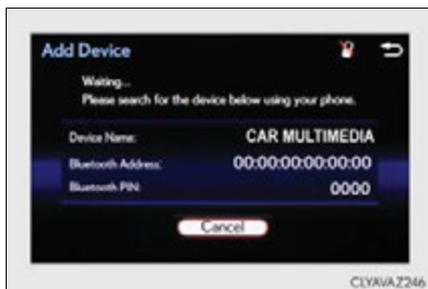

- 4 When this screen is displayed, input the passcode displayed on the screen into your Bluetooth® phone.

- 5 Register the Bluetooth® phone using your Bluetooth® phone.

\*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

## Registering favorites

You can register the desired contact from the phonebook. Up to 15 contacts per phone can be registered.

- 1 Go to "Add Favorite": "MENU" button → "Setup" → "Phone" → "Contact/Call History Settings" → "Add Favorite"
- 2 Choose the contact to register.

## Dialing

- 1 Go to "Dial Pad": "MENU" button → "Phone" → "Dial Pad".
- 2 Input a phone number.
- 3 Press the off-hook switch on the steering wheel or select .

## Dialing from the phonebook

- 1 Go to "Contacts": "MENU" button → "Phone" → "Contacts".
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

## ■ When the phonebook is empty


---

You can transfer the phone numbers in a Bluetooth® phone to the system.

Operation methods differ between PBAP (Phone Book Access Profile) compatible and PBAP incompatible Bluetooth® phones. If the cellular phone does not support either PBAP or OPP (Object Push Profile) service, you cannot transfer contacts.


- 1 Press the off-hook switch on the steering wheel.  
If the phonebook is empty, a message will be displayed.

▶ For a PBAP compatible Bluetooth® phone and “Automatic Transfer” is off

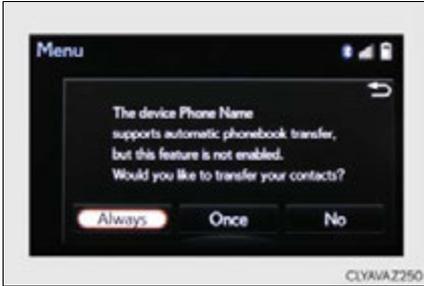

- 2 To transfer new contacts from a cellular phone, select “Always” and then enable “Automatic Transfer”.  
Select “Once” if you want to transfer new contacts from a cellular phone.

▶ For a PBAP incompatible and OPP compatible Bluetooth® phone

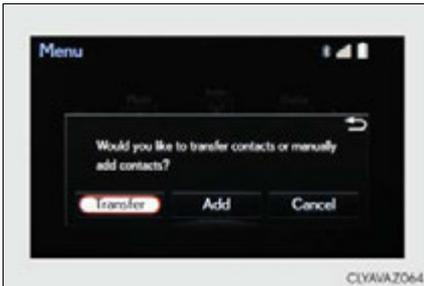

- 2 Select “Transfer” and operate your cellular phone to transfer new contacts from a cellular phone.  
Select “Add” if you want to add a new contact manually.


## ■ Dialing from favorites

 ---

You can make a call using numbers registered in the favorites.

- 1 Go to “Favorites”: “MENU” button → “Phone” → “Favorites”.
- 2 Choose the desired contact to call from the list.
- 3 Choose the number and then press the off-hook switch on the steering wheel or press the controller.

## ■ To answer the phone




- 1 When a call is received, the screen shown left is displayed together with a sound.
- 2 Press the off-hook switch on the steering wheel or select .

## ■ To refuse a call

 Press the on-hook switch on the steering wheel or select .


## ■ Operating a telephone using the steering wheel switches



- 1 Volume switch  
During an incoming call: Adjusts the ring tone volume  
During speaking on the phone: Adjusts in call volume  
The voice guidance volume cannot be adjusted using this button.
- 2 Off hook switch
  - Start call
  - Receiving
  - Phone top screen display
- 3 On hook switch
  - End call
  - Refuse call
- 4 Talk switch  
Press: Turns the voice command system on  
Press and hold: Turns the voice command system off

## Audio System (with Lexus Display Audio)

### Display Audio operation buttons

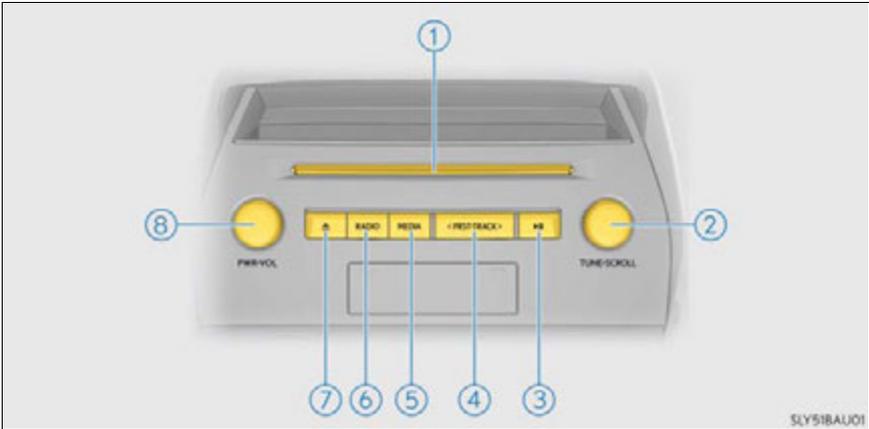

- ① Disc slot
- ② Select a radio station band, track or file.
- ③ Except radio and A/V mode: Pause or resume playing a track or file.  
Radio and A/V mode: Turn mute on/off
- ④ Seek up or down for a radio station, or to access a desired track or file.
- ⑤ Display the media top screen.
- ⑥ Display the radio top screen.
- ⑦ Eject a disc.
- ⑧ Press to turn the audio system on/off, and turn to adjust the volume.

### Using the steering wheel switches to change audio sources

Press the "MODE" switch when the audio system is turned on. The audio source changes each time the "MODE" switch is pressed.

## ■ Audio menu screen

To display the audio menu screen, move the controller to the left while on an audio top screen.

### ▶ AM, FM radio or XM Satellite Radio\*



- ① Scan for receivable stations (AM, FM radio)
- ② Seek a station of the nearest frequency (stops when a station is found) (AM, FM radio)
- ③ Captures the song title and artist name information for potential purchase (when the "HD" indicator on the selected station is appears) (FM radio)
- ④ Changes the channel of HD Radio (HD2, HD3, HD4 where applicable) (FM radio)
- ⑤ Seek a station of the traffic announcement (FM radio)
- ⑥ Select to set the station list shows of HD radio on/off (AM, FM radio)
- ⑦ Change radio settings
- ⑧ Change sound settings

\*: To listen to a satellite radio broadcast in the vehicle, a subscription to the XM Satellite Radio service is necessary. (→P. 99)

► CD, MP3/WMA/AAC disc, iPod, USB or Bluetooth®




- ① Play or pause a track/file
- ② Select a track/file
- ③ Select a folder/album (MP3/WMA/AAC disc or USB)
- ④ Select and hold: Fast-forward or reverse a track/file
- ⑤ Select a repeat mode.
- ⑥ Select a random/shuffle play mode.
- ⑦ Select a full screen mode (iPod video mode)
- ⑧ Change iPod settings (iPod)
- ⑨ Change USB settings (USB)
- ⑩ Connect a Bluetooth device (Bluetooth®)
- ⑪ Change the cover art settings (CD or MP3/WMA/AAC disc)
- ⑫ Change sound settings

► A/V



- ① Select full screen mode
- ② Change A/V settings
- ③ Change sound settings

## ■ Operating the audio system using the steering wheel switches

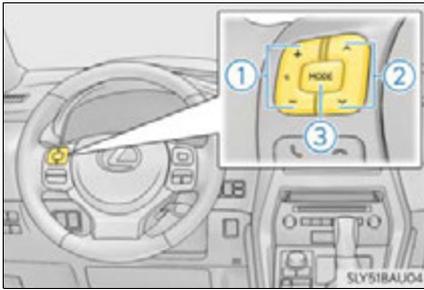

- ① Volume switch
  - Increases/decreases volume
  - Press and hold: Continuously increases/decreases volume
- ② Radio mode:
  - Press: Select a radio station
  - Press and hold: Seek up/down CD, MP3/WMA/AAC disc, Bluetooth®, iPod or USB mode:
  - Press: Select a track/file/video
  - Press and hold: Quickly move up/down through tracks/files/videos
- ③ "MODE" switch
  - Turns the power on, selects audio source
  - Press and hold this switch to mute or pause the current operation. To cancel the mute or pause, press and hold.

## Air Conditioning System



### Adjusting the temperature setting

Press  to increase the temperature and  to decrease the temperature.

### Adjusting the fan speed setting

Press  to increase the fan speed and  to decrease the fan speed.  
Press the "OFF" button to turn the fan off.

### Change the airflow mode

To change the air outlets, press .

## ■ Air conditioning control screen

### ▶ Vehicles with a Lexus Display Audio system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select to set auto mode on/off, fan off and displaying the option control screen.
- ④ Select the air flow mode
- ⑤ Adjust the right-hand side temperature setting

### ▶ Vehicles with a navigation system



- ① Adjust the left-hand side temperature setting
- ② Adjust the fan speed setting
- ③ Select the air flow mode
- ④ Adjust the right-hand side temperature setting
- ⑤ Display the option control screen
- ⑥ Turn the fan off
- ⑦ Select to set automatic mode on/off

## Option control screen

Select **...** on the climate screen to display the option control screen. The functions can be switched on and off.

### ► Vehicles with a Lexus Display Audio system



- ① Select to set cooling and dehumidification function on/off
- ② Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ③ Prevent ice from building up on the windshield and wiper blades
- ④ Remove pollen from the air (Micro dust and pollen filter)

### ► Vehicles with a navigation system



- ① Select to set cooling and dehumidification function on/off
- ② Adjust the temperature for driver and passenger seats separately ("DUAL" mode)
- ③ Prevent ice from building up on the windshield and wiper blades
- ④ Remove pollen from the air (Micro dust and pollen filter)

## Using automatic mode

Press the "AUTO" button to turn on the airflow and adjust the temperature setting.

## Adjusting the temperature for driver and passenger seats separately ("DUAL" mode)


To turn on the "DUAL" mode, perform any of the following procedures:

- Press the "DUAL" button.
- Select "DUAL" on the option control screen.
- Adjust the temperature setting of the passenger side with the passenger side temperature adjustment button.

## Seat Heaters (if equipped)/ Seat Ventilators (if equipped)

### Seat heaters

#### ▶ Vehicles without seat ventilators

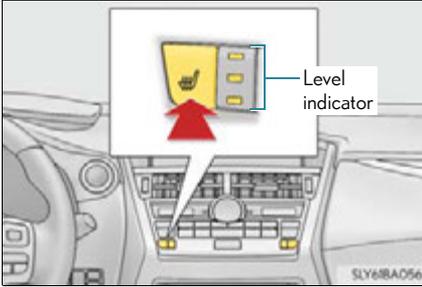


Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The level indicator (amber) light up during operation.

#### ▶ Vehicles with seat ventilators

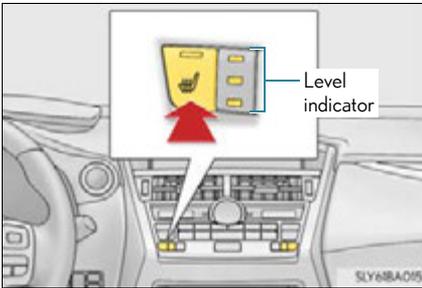


Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The indicator (amber) and level indicator (green) light up during operation.

### Seat ventilators

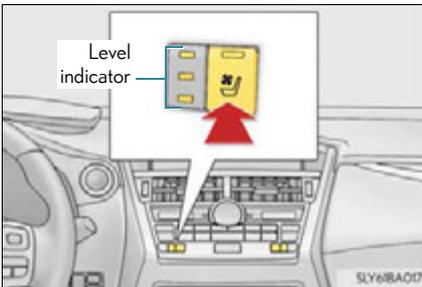


Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The indicator (green) and level indicator (green) light up during operation.

# Voice Command System
 
## Basic operation



- 1** Press the talk switch.  
To cancel the voice command system, press and hold the talk switch.
- 2** After a beep sounds, say the desired command.  
On the list screen, you can select the desired command.

Continue on to pages 88-92 for a detailed list of voice commands for the following categories:

Basic.....	page 88
Apps.....	page 88
Navi.....	page 89
Phone.....	page 89
Radio.....	page 90
Audio.....	page 90
Info.....	page 91
Other.....	page 92

### ■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- In vehicles with a navigation system, a large TALK icon  will appear on the navigation screen to prompt you to say a command.
- If you know what command to use, you can press talk switch at any time to interrupt the voice guidance.

**NOTE:** When inputting voice commands you must wait until after the beep to speak.

## ■ Command list

### ► Basic (vehicles with a Lexus Display Audio System)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab

### ► Basic (vehicles with a navigation system)

Command	Action
"Help"	Prompts voice guidance to offer examples of commands or operation methods
"Go Back"	Returns to the previous screen
"Go to <tab>"	Displays the command list of the selected tab
"More Hints"	Displays more commonly used commands
"Cancel"	Cancels the voice command system

### ► Apps (vehicles with a navigation system)

When the voice recognition language is set to English.

Command	Action
"Launch <apps>"	Activates the LEXUS App Suite application

► **Navi (vehicles with a navigation system)**

Command	Action
"Find <POI category>"	Displays a list of <POI category> <sup>*1</sup> near the current position <sup>*2</sup>
"Enter an Address"	Enables setting a destination by saying the address
"Go Home"	Displays the route to home
"Pause Guidance"	Stops the route guidance
"Resume Guidance"	Resumes the route guidance
"Show <POI> icons"	Displays the specified POI icons
"Delete Destination"	Deletes the destination(s)
"Previous Destination"	Displays previous destinations

\*1: For example; "Gas stations", "Restaurants", etc.

\*2: Depending on the search results, a POI list may be provided by a relevant POI application of the LEXUS App suite.

► **Phone**

Command	Action
"Redial"	Places a call to the phone number of the latest outgoing call
"Call Back"	Places a call to the phone number of latest incoming call
"Show Recent Calls"	Displays the call history screen
"Dial <phone number>"	Places a call to the said phone number
"Call <contacts> <phonetypes>"	Place a call to the said phone type of the contact from the phone book

► **Radio (vehicles with a navigation system)**

Command	Action
"Tune to <frequency> AM"	Changes the radio to the specified AM frequency
"Tune to <frequency> FM"	Changes the radio to the specified FM frequency
"Play <genre> station"	Changes the radio to an FM station of the specified genre
"Tune to FM <frequency> HD <number>"	Changes the radio to the specified HD radio station
"Tune to preset <number>"	Changes the radio to the specified preset radio station
"Tune to <name>"	Changes the radio to the satellite radio channel with the specified name
"Tune to channel <number>"	Changes the radio to the specified satellite radio channel number
"Play <genre> satellite station"	Changes the radio to a satellite radio channel of the specified genre

► **Audio (vehicles with a Lexus Display Audio System)**

Command	Action
"Play Playlist <playlists>"	Plays tracks from the selected playlist
"Play Artist <artist>"	Plays tracks from the selected artist
"Play Song <songs>"	Plays the selected track
"Play Album <albums>"	Plays tracks from the selected album
"Turn Music On/Off"	Turns the audio system on/off
"Play the <audio sources>"	Selects audio source

► **Audio (vehicles with a navigation system)**

Command	Action
"Play Playlist <name>"	Plays tracks from the selected playlist
"Play Artist <name>"	Plays tracks from the selected artist
"Play Song <name>"	Plays the selected track
"Play Album <name>"	Plays tracks from the selected album

► **Info (vehicles with a Lexus Display Audio System)**

Command	Action
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information

► **Info (vehicles with a navigation system)**

Command	Action
"Destination Assist"	Connects the system to the Lexus response center
"Show Forecast"	Displays weather information
"Show Traffic"	Displays traffic information
"Lexus Insider"	Displays the Lexus insider list

► Other (vehicles with a navigation system)

Command	Action
"Turn Climate Control On"	Turns air conditioning system on
"Turn Climate Control Off"	Turns air conditioning system off
"Warmer"	Increases the temperature of the air conditioning system
"Cooler"	Decreases the temperature of the air conditioning system
"<XX> degrees"	Changes the set temperature of the air conditioning system to <xx> degrees* <sup>1</sup>
"Turn Music On"	Turns the audio system on
"Turn Music Off"	Turns the audio system off
"AM Radio"	Selects AM radio mode
"FM Radio"	Selects FM radio mode
"Sirius XM"	Selects satellite radio mode
"Disc"	Selects the selected disc mode
"USB"	Selects USB audio mode
"iPod"	Selects iPod audio mode
"Bluetooth* <sup>2</sup> Audio"	Selects Bluetooth® audio mode
"A.V."	Selects VTR mode
"Auxiliary"	Selects AUX audio mode


\*<sup>1</sup>: Only within the possible temperature range of the air conditioning system

\*<sup>2</sup>: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

Commands relating to operation of the audio/visual and air conditioning systems can only be performed when the audio and air conditioning systems are turned on. Refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

## Portable Audio Device Ports

These ports can be used to connect a portable audio device and listen to it through the vehicle's speakers.

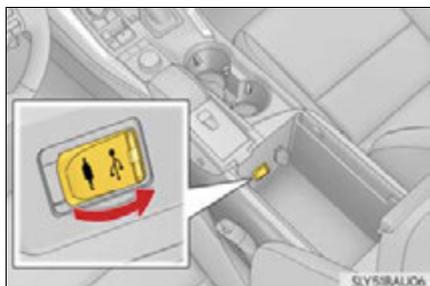


Open the cover and connect the portable audio device.

## Garage Door Opener

The garage door opener can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

## HomeLink®

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

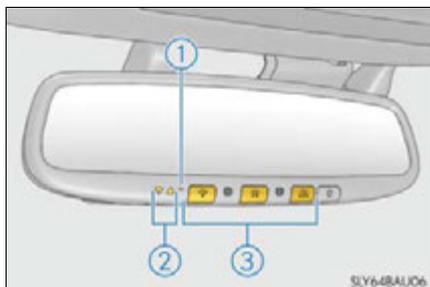


- ① HomeLink® indicator light
- ② Garage door operation indicators
- ③ Buttons

## ■ Programming the HomeLink®

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes orange.

Perform **3** within 60 seconds of **1**, or the indicator light will stop flashing and programming will not be able to be completed.

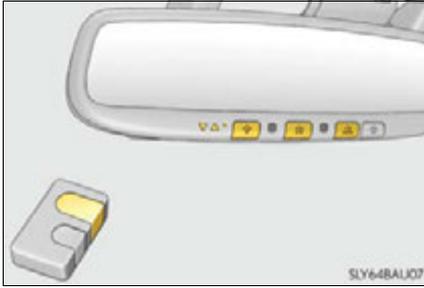

- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.

### ► For U.S.A. owners



- 3** Press and hold the remote control transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

### ► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

- 3** Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code).

- 4** Test the HomeLink® operation by pressing the newly programmed button and observing the indicator light:

- Device with fixed code: If the indicator light is solid/continuous, programming has been completed and your garage door or other device should operate when the HomeLink® button is pressed and released.
- Device with rolling code: If the indicator light flashes rapidly, your garage door opener motor (or other device) is equipped with a rolling code. Complete the programming process by firmly pressing and holding the programmed HomeLink® button for 2 seconds and then release the button.
- If the garage door or other device does not operate, proceed to "Programming a rolling code system".

- 5** Repeat the steps above to program another device for any of the remaining HomeLink<sup>®</sup> buttons.

If your garage door is of the rolling code type:

- 6** Press the training button on the motor-head unit in your garage.
- 7** Press and hold the vehicle's programmed HomeLink<sup>®</sup> button for 2 seconds and release it. Repeat this step once again.
- If the door does not open, press and release the same button once again.

## ■ Programming other devices

---

For U.S.A. owners:

To program an entry gate, see the Owner's Manual.

To program other devices, contact your Lexus dealer.

For Canadian owners:

To program all other devices, follow the same procedure as for garage door programming.

## ■ Operating the HomeLink<sup>®</sup>

---

Press the appropriate HomeLink<sup>®</sup> button. The HomeLink<sup>®</sup> indicator light should turn on.


## Lexus Enform Safety Connect (for U.S.A., if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

## ■ System components

---

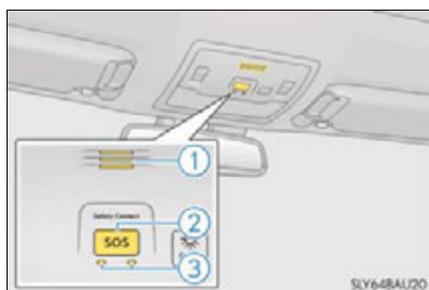

- ① Microphone
- ② "SOS" button
- ③ LED light indicators

## ■ Services

---

Subscribers have the following Safety Connect services available:

### ● **Automatic Collision Notification\***

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

\*: U.S. Patent No. 7,508,298 B2

### ● **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

### ● **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

### ● **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc. For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## ■ Subscription

---

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms are available. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) or push the "SOS" button in your vehicle for further subscription details.

## **Lexus Enform (for U.S.A., if equipped)**

Lexus Enform is a service that includes Safety Connect, Remote, Destinations, Insider and App Suite.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### **Function achieved by using a cellular phone (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, only LEXUS App Suite can be achieved by using a cellular phone.

LEXUS App Suite is a service that enables the usable contents of a cellular phone to be displayed on and operated from the navigation screen. Before LEXUS App Suite can be used, a few settings need to be performed.

#### **● LEXUS App Suite**

When LEXUS App Suite is activated, an application may need to update. By updating, an application can be kept the latest version. To updating the application, it is necessary to download the updated data and install it.

#### **Subscription**

LEXUS App Suite will be available on a trial period included upon purchase of a new vehicle. User registration is required to start using the service.

When a trial period has elapsed after purchasing a new vehicle, a fee will be charged to renew the contract. Services requiring a separate contract can also be used. For details, refer to <http://www.lexus.com/enform/> or call 1-800-255-3987.

### **Function achieved by using DCM and the navigation system (with navigation system)**

---

#### **Services**

Of the functions included with Lexus Enform, LEXUS Enform Destinations (Destination Assist, eDestination), and Lexus Insider can be achieved by making DCM cooperate with the navigation system.

These are subscription-based telematics services that use Global Positioning System (GPS) data, embedded cellular technology to provide safety and security as well as convenience features to subscribers. The services are supported by Lexus' designated response center, which operates 24 hours a day, 7 days a week.

The services are available by subscription on select, telematics hardware-equipped vehicles.

## ● Destination Assist

Destination Assist provides you with live assistance for finding destinations via the Lexus response center. You can request either a specific business, address, or ask for help locating your desired destination by category, such as restaurants, gas stations, shopping centers or other points of interest (POI).

After you tell the agent your choice of destination, its coordinates are sent wirelessly to your vehicle's navigation system.

## ● eDestination

With the eDestination feature, you can go online, and via the Lexus.com owner's Web site, select and organize destinations of your choice and then wirelessly send them to your vehicle's navigation system.

Up to 200 locations can be stored online and accessed or updated at any time.

Locations can be organized into up to 20 personalized folders.

You must first go online at [www.lexus.com/drivers/](http://www.lexus.com/drivers/) to view the Owners site where you will need to register and log in. After this, personalized folders that contain the locations to be sent to your vehicle can be created. (See Lexus Enform Guide for more information.)

## ● Lexus Insider

Lexus Insider is an optional service that can send audio messages, or articles, to participating owners' vehicles via the navigation system. Potential Lexus Insider subjects might include, for example, Lexus vehicle technology tips, updates on regional Lexus events, or audio excerpts from Lexus Magazine articles.

## ■ Subscription

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services. A variety of subscription terms are available.

Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987), or select the "Destination Assist" in your vehicle for further subscription details.

## ■ Function achieved by using DCM

---

### ■ Services

Of the functions included with Lexus Enform Safety Connect, Safety Connect can be achieved by using DCM.

- Lexus Enform Safety Connect (→P. 95)

## ■ LEXUS Enform Remote

---

### ■ Services

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>. For further details, contact your Lexus dealer.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

### ■ Subscription

→P. 98

## XM Satellite Radio

An XM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "OWNER'S MANUAL" and "NAVIGATION SYSTEM OWNER'S MANUAL".

### Subscription

For XM Services requiring a subscription (such as XM Radio), the following paragraph shall be included.

Required XM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.xmradio.ca](http://www.xmradio.ca) (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:


- ▶ U.S.A. Customers:  
Visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-515-3987
- ▶ Canadian Customers:  
Visit [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-438-9677

## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switch.


For details the smart access system with push-button start or wireless remote control (→P.19, 20)

### Door lock switch

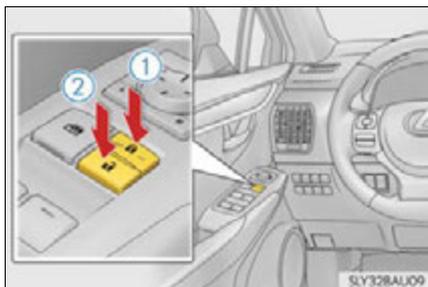

- ① Locks all the doors
- ② Unlocks all the doors

### Inside lock buttons

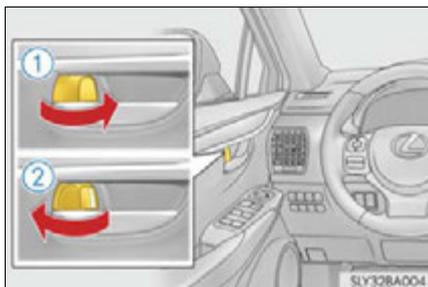

- ① Locks the door
  - ② Unlocks the door
- The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

### Rear door child-protector lock




The door cannot be opened from inside the vehicle when the lock is set.

- ① Unlock
  - ② Lock
- These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

## Power Windows


### Power window switches

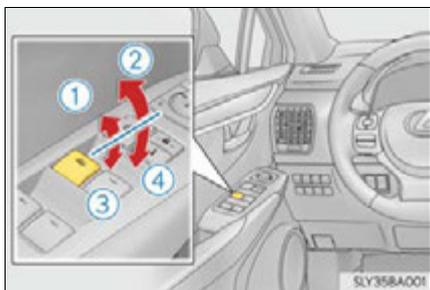

- ① Closing
- ② One-touch closing\*
- ③ Opening
- ④ One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

### Window lock switch

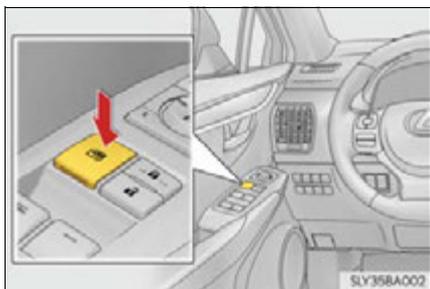


Press the switch down to lock the passenger window.

Use this switch to prevent children from accidentally opening or closing a passenger window.

## Moon Roof (if equipped)


### Opening and closing

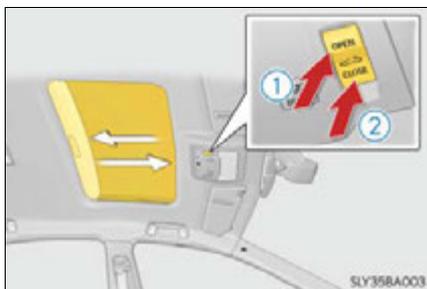

- ① Opens the moon roof  
Press and hold the "OPEN" switch. The moon roof tilts up and then fully opens automatically.\*
- ② Closes the moon roof  
Press and hold the "CLOSE" switch. The moon roof fully closes automatically.\*

\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

### Tilting up and down

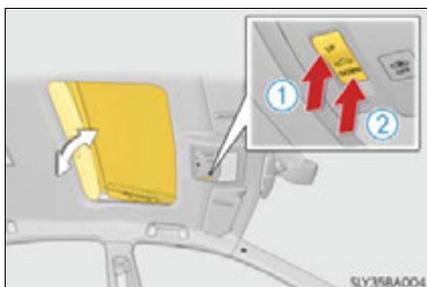

- ① Tilts the moon roof up  
Press and hold the "UP" switch. It automatically opens until the tilt up stop position.\*
- ② Tilts the moon roof down  
Press and hold the "DOWN" switch. The moon roof full close automatically.\*

\*: Lightly press either end of the moon roof switch to stop the moon roof partway.

## Fuel Tank Cap


### Before refueling the vehicle

- Turn the power switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

### Opening the fuel tank cap




- 1** With the doors unlocked, press the center of the rear edge of the fuel filler door. Push inward and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.

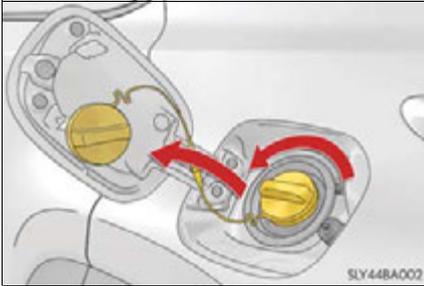

- 2** Turn the fuel tank cap slowly to open and put it into the holder on the fuel filler door.

## Back door

### Back door opener

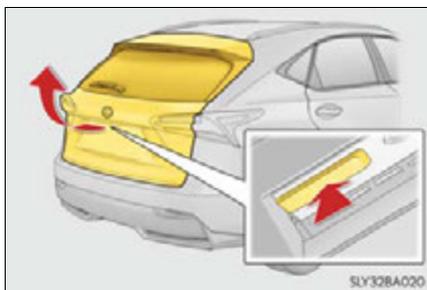

#### ► Vehicles without a power back door

Raise the back door while pressing up the back door opener switch.

#### ► Vehicles with a power back door

When the back door is unlocked:

Press the back door opener switch.

When the back door is locked:


While carrying the electronic key on your person, press the back door opener switch.

### Power back door switches (vehicles with a power back door)



#### ► Instrument panel

To open or close the back door, press the switch for 1 second.

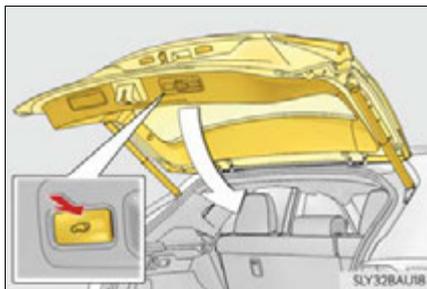

#### ► Back door

To close the back door, press the switch.

► Wireless remote control (→P. 19)

### Back door closer (vehicles with a power back door)

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

## What to do if...

### List of Warning/Indicator Lights

Stop the vehicle immediately. Continuing to drive the vehicle may be dangerous.

**BRAKE**

(U.S.A.)

Brake system warning light



(Canada)



Low engine oil pressure warning light



High coolant temperature warning light



Charging system warning light

Have the vehicle inspected immediately.



Brake system warning light



Electric power steering system warning light



(U.S.A.)

Malfunction indicator lamp



(Canada)



PCS warning light (if equipped)



SRS warning light



Slip indicator light



(U.S.A.)

ABS warning light



Brake hold operated indicator



(Canada)



Tire pressure warning light\*<sup>1</sup>

For further information, refer to the Owner's Manual.

## What to do if...

### Follow the correction procedures.



(Flashes)  
(U.S.A.)

Parking brake indicator



Master warning light



(Flashes)  
(Canada)



Tire pressure warning light\*<sup>2</sup>



Low fuel level warning light



Brake Override System/  
Drive-Start Control warning  
light



Driver's and front passenger's  
seat belt reminder light

### See the Owner's Manual



Turn signal indicator



"ECO" indicator



(U.S.A.)

Headlight indicator



"SPORT" indicator



(Canada)

Tail light indicator



Radar cruise control indicator  
(if equipped)



Headlight high beam indicator



Cruise control "SET" indicator



Automatic High Beam  
indicator (if equipped)



Cruise control indicator



Fog light indicator



LDA indicator (if equipped)



"READY" indicator



Steering control indicator  
(if equipped)



EV indicator



Intuitive parking assist  
indicator (if equipped)



EV drive mode indicator



(Flashes)

Slip indicator light

For further information, refer to the Owner's Manual.

## What to do if...

### See the Owner's Manual



VSC OFF indicator



PCS warning light  
(if equipped)



(U.S.A.)

Parking brake indicator



(Canada)



Brake hold standby indicator



Brake hold operated indicator



Low outside temperature  
indicator



BSM outside rear view mirror  
indicators (if equipped)



Security indicator



"AIR BAG ON/OFF"  
indicator

For further information, refer to the Owner's Manual.

- \*1: When the light comes on after blinking for 1 minute.
- \*2: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

### If the hybrid system does not start

Make sure that the correct operating procedures have been followed.

**Brake pedal**


Make sure that the brake pedal is firmly depressed when attempting to start the hybrid system

If the hybrid system still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.


## What to do if...

### If the electronic key does not operate properly

#### Unlocking the door

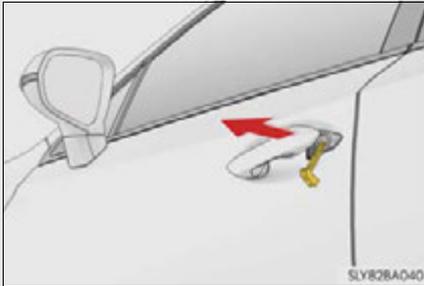


- 1 Insert the mechanical key while pulling on the driver's door handle.

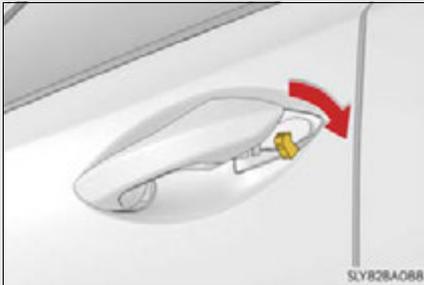

- 2 Unlocking the door.

- 3 Remove the key, return the handle, and then pull the handle again.

#### Locking the door

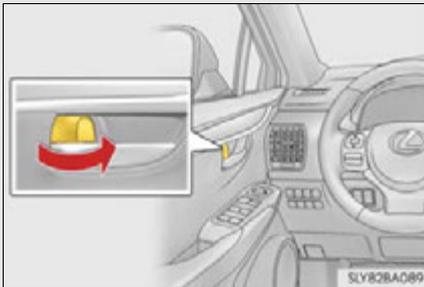


- 1 Move the inside lock button to the lock position.

- 2 Close the door.

## What to do if...


### Starting the hybrid system

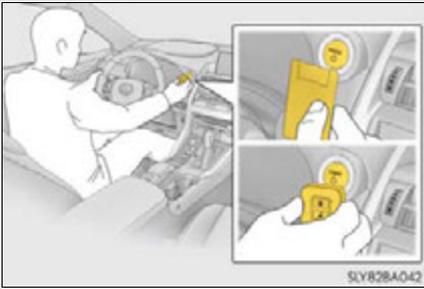

**1** Ensure that the shift lever is in P and depress the brake pedal.

**2** Touch the Lexus emblem side of the electronic key to the power switch. When the electronic key is detected, a buzzer sounds and the power switch will turn to ON mode. When the smart access system with push-button start is deactivated in customization setting, the power switch will turn to ACCESSORY mode.

**3** Firmly depress the brake pedal and check that message shown on the multi-information display.

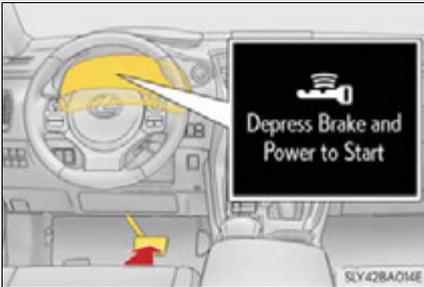

**4** Press the power switch.

In the event that the hybrid system still cannot be operated, contact your Lexus dealer.

If the electronic key battery is depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL". If you need further assistance, contact your Lexus dealer.



### Your Lexus dealer

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### ■ U.S. OWNERS

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS** or **1-800-255-3987** (Toll-Free)

#### ■ CANADIAN OWNERS

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS** or **1-800-265-3987** (Toll-Free)

Please access our **websites** for further information.

- The U.S. mainland: [www.lexus.com](http://www.lexus.com)
- Hawaii: [www.servcolexus.com](http://www.servcolexus.com)
- Canada: [www.lexus.ca](http://www.lexus.ca)

©2015 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.