

# Contents

The Quick Guide is not intended as a substitute for your *OWNER'S MANUAL*. We strongly encourage you to review the *OWNER'S MANUAL* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.


|                                                                 |            |
|-----------------------------------------------------------------|------------|
| <b>Air Conditioning System*</b>                                 |            |
| Control panel .....                                             | 76         |
| Main control screen.....                                        | 78         |
| Option control screen .....                                     | 79         |
| Side display.....                                               | 80         |
| Using automatic mode .....                                      | 80         |
| <b>ASC (Active Sound Control).....</b>                          | <b>54</b>  |
| <b>Audio System*</b>                                            |            |
| Audio control screen .....                                      | 70         |
| Selecting an audio source .....                                 | 70         |
| Steering switch operation .....                                 | 71         |
| Radio .....                                                     | 72         |
| CD.....                                                         | 73         |
| DVD .....                                                       | 74         |
| iPod.....                                                       | 75         |
| <b>Automatic High Beam.....</b>                                 | <b>31</b>  |
| <b>Back Door .....</b>                                          | <b>105</b> |
| <b>Brake Hold.....</b>                                          | <b>26</b>  |
| <b>BSM (Blind Spot Monitor) .....</b>                           | <b>52</b>  |
| <b>Door Locks .....</b>                                         | <b>101</b> |
| <b>Driving Mode Select Switch .....</b>                         | <b>50</b>  |
| <b>Dynamic Radar Cruise Control with Full-Speed Range .....</b> | <b>41</b>  |
| <b>Engine (ignition) switch.....</b>                            | <b>17</b>  |
| <b>Fuel Consumption Information .....</b>                       | <b>60</b>  |
| <b>Floor Mat Installation .....</b>                             | <b>13</b>  |

|                                                                      |            |
|----------------------------------------------------------------------|------------|
| <b>Fuel Tank Cap</b> .....                                           | <b>104</b> |
| <b>Garage Door Opener</b> .....                                      | <b>91</b>  |
| <b>Hands-free System For Cellular Phone *</b>                        |            |
| Registering/connecting Bluetooth® device .....                       | 66         |
| Contacts transfer .....                                              | 67         |
| Registering the contacts in the favorites list.....                  | 68         |
| Calling by favorites list .....                                      | 68         |
| Calling the message sender .....                                     | 68         |
| Receiving a call .....                                               | 69         |
| Steering switches .....                                              | 69         |
| <b>Headlights</b> .....                                              | <b>29</b>  |
| <b>Intuitive Parking Assist</b> .....                                | <b>46</b>  |
| <b>Keys</b> .....                                                    | <b>14</b>  |
| <b>Lexus Enform Remote</b> .....                                     | <b>98</b>  |
| <b>Lexus Enform Safety Connect</b> .....                             | <b>96</b>  |
| <b>Lexus Enform Service Connect</b> .....                            | <b>99</b>  |
| <b>Lexus Safety System+</b> .....                                    | <b>39</b>  |
| <b>LDA (Lane Departure Alert with Steering Control)</b> .....        | <b>40</b>  |
| <b>Moon Roof</b> .....                                               | <b>103</b> |
| <b>Multi-information Display</b> .....                               | <b>27</b>  |
| <b>Navigation System *</b>                                           |            |
| Registering home .....                                               | 62         |
| Destination search - Search by address.....                          | 62         |
| Destination search - Search points of interest by name .....         | 64         |
| Destination search - Search points of interest by category .....     | 65         |
| Destination search - Search points of interest by phone number ..... | 65         |
| Voice Command System .....                                           | 83         |

\*: These features may be operated by Voice Command (See P.83)


|                                                           |     |
|-----------------------------------------------------------|-----|
| Panoramic View Monitor .....                              | 48  |
| Parking Brake .....                                       | 24  |
| Parking Support Brake Function (for static objects) ..... | 47  |
| Pictorial Index .....                                     | 5   |
| Power Windows .....                                       | 102 |
| Rear Window Wiper and Washer .....                        | 37  |
| Remote Touch .....                                        | 55  |
| Seat Heaters/Seat Ventilators .....                       | 81  |
| SiriusXM Satellite Radio .....                            | 100 |
| Smart Access System with Push-button Start .....          | 16  |
| Tire Pressure Warning System .....                        | 53  |
| Turn Signal Lever .....                                   | 23  |
| USB/AUX Ports .....                                       | 90  |
| Voice Command System *                                    |     |
| Basic operation .....                                     | 83  |
| Command list .....                                        | 85  |
| Windshield Wipers and Washer .....                        | 33  |

\*: These features may be operated by Voice Command (See P.83)

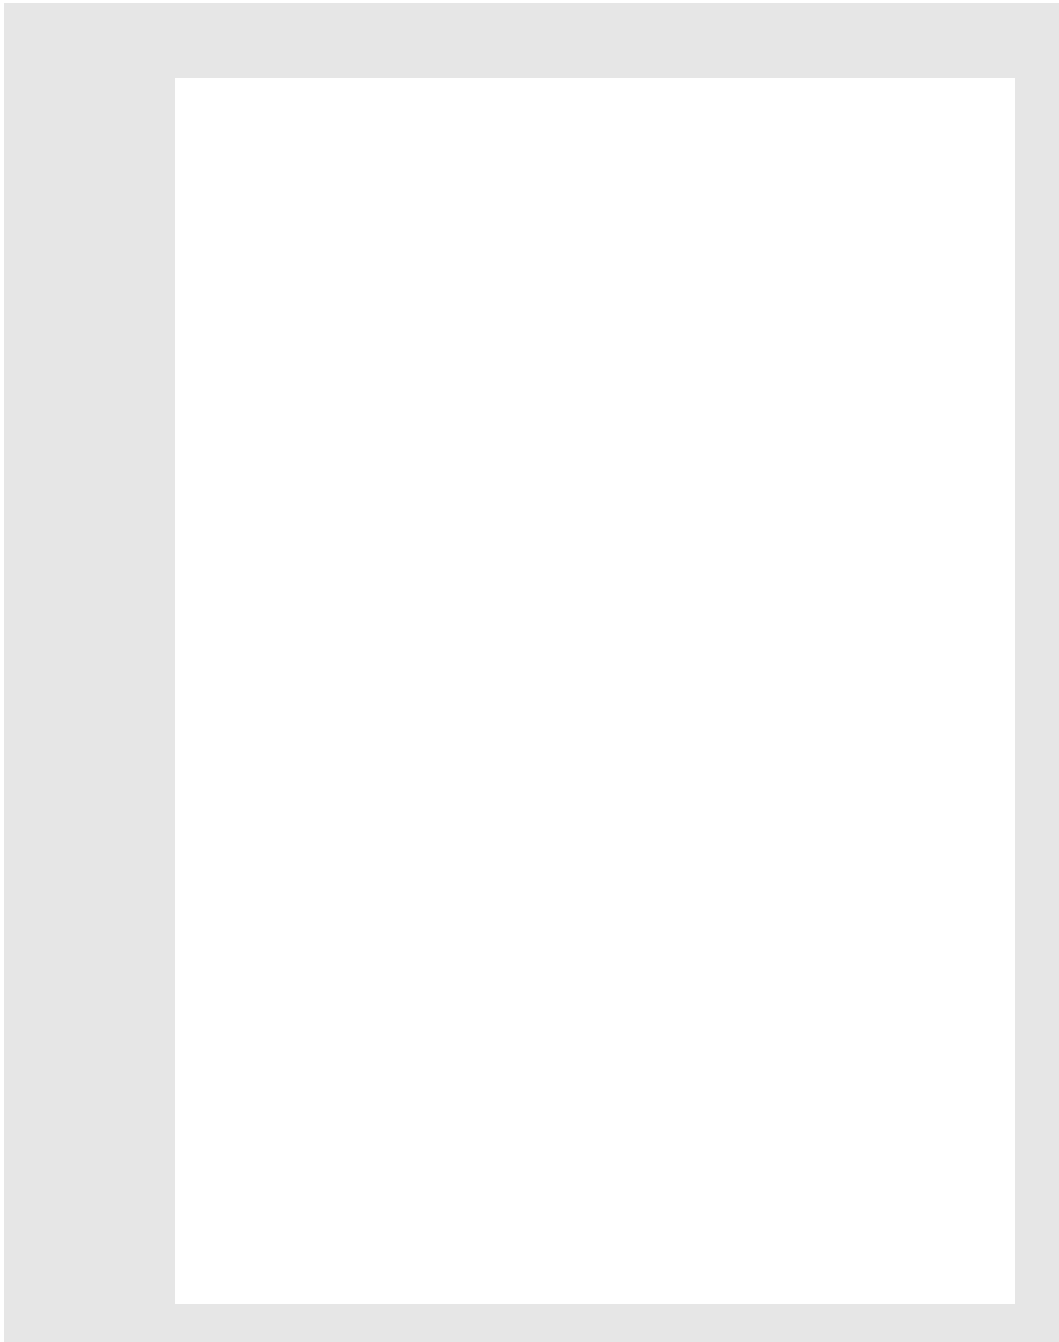

## Pictorial Index

### ■ Instrument panel

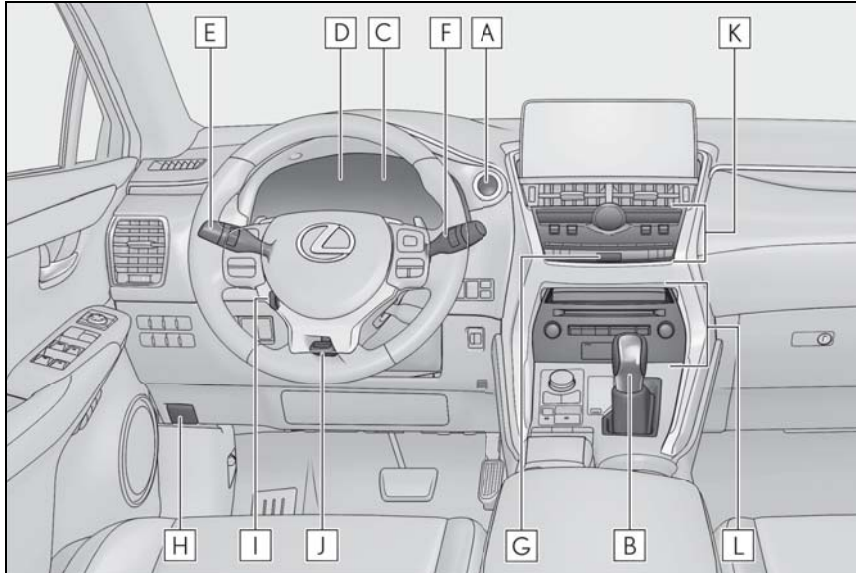


- A Engine switch** ..... P.17
  - Starting the engine/changing the modes..... P.17, 18
  - Emergency stop of the engine ..... P.19
  - When the engine will not start ..... P.112
  - Warning messages <sup>\*1</sup>
- B Shift lever** ..... P.20
  - Changing the shift position..... P.20
  - Precautions against towing <sup>\*1</sup>
  - When the shift lever does not move <sup>\*1</sup>
- C Meters** <sup>\*1</sup>
  - Reading the meters/adjusting the instrument panel light <sup>\*1</sup>
  - Warning lights/indicator lights ..... P.107
  - When the warning lights come on <sup>\*1</sup>
- D Multi-information display** ..... P.27
  - Display..... P.27
  - When the warning messages are displayed <sup>\*1</sup>

|          |                                                                                             |          |
|----------|---------------------------------------------------------------------------------------------|----------|
| <b>E</b> | <b>Turn signal lever</b> .....                                                              | P.23     |
|          | <b>Headlight switch</b> .....                                                               | P.29     |
|          | Headlights/parking lights/tail lights/license plate lights/<br>daytime running lights ..... | P.29     |
|          | Fog lights <sup>*1</sup>                                                                    |          |
| <b>F</b> | <b>Windshield wiper and washer switch</b> .....                                             | P.33, 37 |
|          | Usage .....                                                                                 | P.33, 37 |
|          | Adding washer fluid <sup>*1</sup>                                                           |          |
|          | Warning messages <sup>*1</sup>                                                              |          |
| <b>G</b> | <b>Emergency flasher switch</b> <sup>*1</sup>                                               |          |
| <b>H</b> | <b>Hood lock release lever</b> <sup>*1</sup>                                                |          |
| <b>I</b> | <b>Tilt and telescopic steering control switch</b> <sup>*1, 2</sup>                         |          |
|          | Adjustment <sup>*1</sup>                                                                    |          |
|          | Driving position memory <sup>*1, 2</sup>                                                    |          |
| <b>J</b> | <b>Tilt and telescopic steering lock release lever</b> <sup>*1, 2</sup>                     |          |
|          | Adjustment <sup>*1</sup>                                                                    |          |
| <b>K</b> | <b>Air conditioning system</b> .....                                                        | P.76     |
|          | Usage .....                                                                                 | P.78     |
|          | Rear window defogger .....                                                                  | P.76     |
| <b>L</b> | <b>Audio system</b> .....                                                                   | P.70     |

<sup>\*1</sup>: Refer to the "OWNER'S MANUAL".

<sup>\*2</sup>: If equipped


## ■ Switches

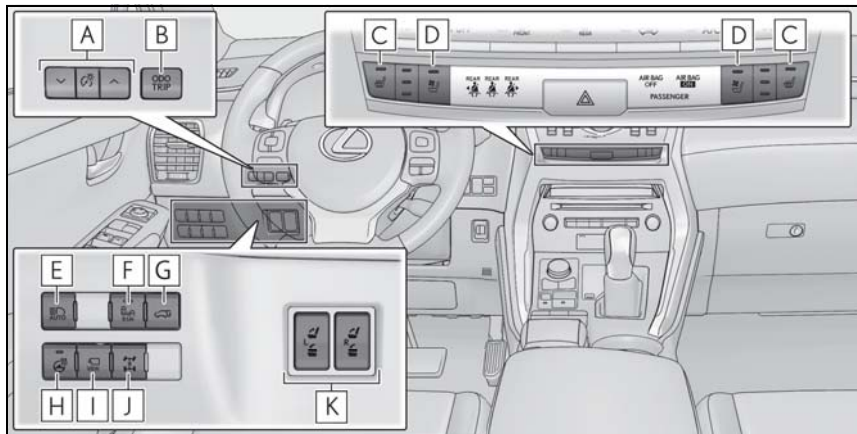

- A** Instrument panel light control switches <sup>\*1</sup>
- B** Odometer/trip meter and trip meter reset button <sup>\*1</sup>
- C** Front seat heater switches <sup>\*2</sup> ..... P.81
- D** Seat ventilator switches <sup>\*2</sup> ..... P.82
- E** Automatic High Beam switch ..... P.31
- F** BSM (Blind Spot Monitor) main switch <sup>\*2</sup> ..... P.52
- G** Power back door switch <sup>\*2</sup> ..... P.105
- H** Heated steering wheel switch <sup>\*1,2</sup>
- I** Camera switch <sup>\*2</sup> ..... P.48
- J** All-wheel drive lock switch <sup>\*1,2</sup>
- K** Rear seat operation switches <sup>\*1,2</sup>

<sup>\*1</sup>: Refer to the "OWNER'S MANUAL".


<sup>\*2</sup>: If equipped

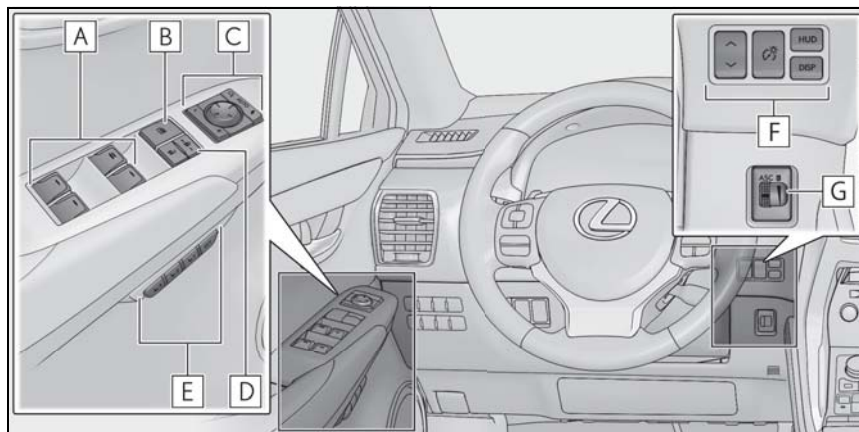

- A** Power window switches..... P.102
- B** Window lock switch ..... P.102
- C** Outside rear view mirror switches <sup>\*1</sup>
- D** Door lock switch ..... P.101
- E** Driving position memory switches <sup>\*1,2</sup>
- F** HUD (Head-up display) switches <sup>\*1,2</sup>
- G** ASC (Active Sound Control) dial <sup>\*2</sup> ..... P.54


<sup>\*1</sup>: Refer to the "OWNER'S MANUAL".

<sup>\*2</sup>: If equipped

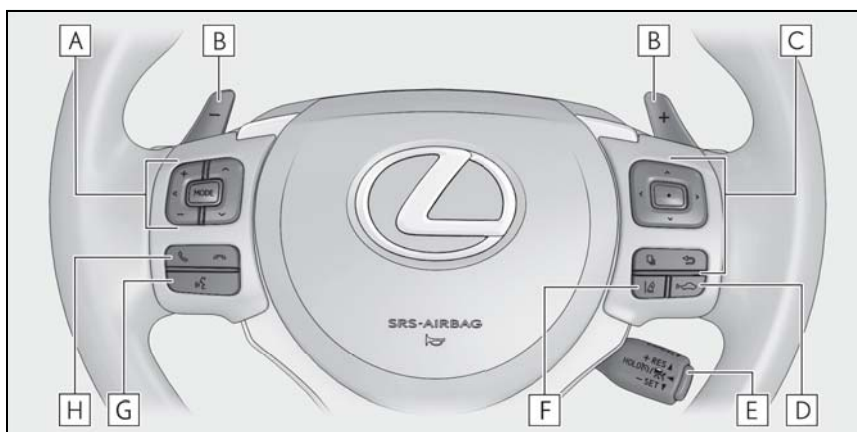

- A** Audio remote control switches\*
- B** Paddle shift switches .....P.21, 22
- C** Meter control switches ..... P.27
- D** Vehicle-to-vehicle distance switch..... P.41
- E** Cruise control switch
  - Dynamic radar cruise control with full-speed range..... P.41
- F** LDA (Lane Departure Alert with steering control) switch..... P.40
- G** Talk switch ..... P.69, 83
- H** Telephone switches ..... P.69

\*: Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

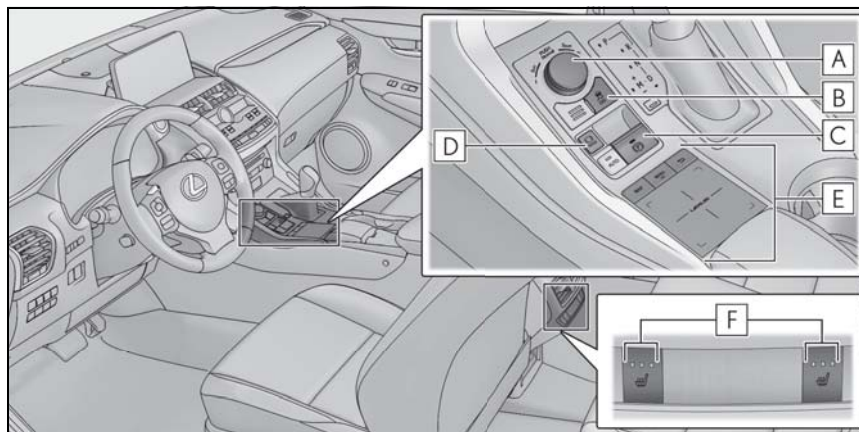


- A** Driving mode select switch ..... P.50
- B** VSC off switch <sup>\*1</sup>
- C** Parking brake switches ..... P.24
  - Applying/releasing..... P.24
  - Precautions against winter season <sup>\*1</sup>
  - Warning buzzer/message <sup>\*1</sup>
- D** Brake hold switch ..... P.26
- E** Remote Touch ..... P.55
- F** Rear seat heater switches <sup>\*2</sup> ..... P.81

<sup>\*1</sup>: Refer to the "OWNER'S MANUAL".

<sup>\*2</sup>: If equipped


## ■ Interior

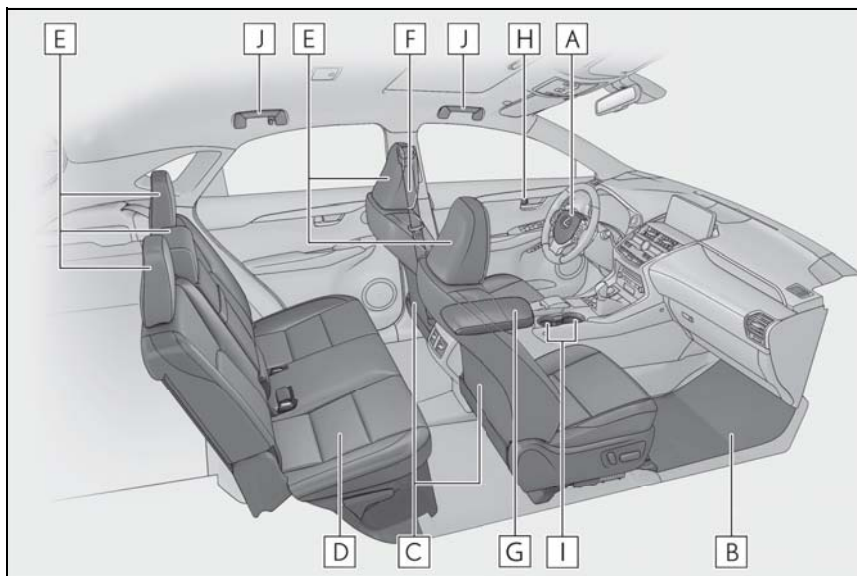

- A** SRS airbags\*
- B** Floor mats ..... P.13
- C** Front seats\*
- D** Rear seats\*
- E** Head restraints\*
- F** Seat belts\*
- G** Console box\*
- H** Inside lock buttons ..... P.101
- I** Cup holders\*
- J** Assist grips\*

\*: Refer to the "OWNER'S MANUAL".

## ■ Ceiling

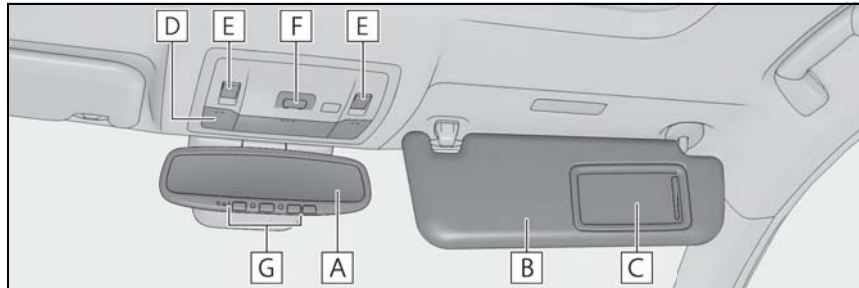

**A** Inside rear view mirror <sup>\*1</sup>

**B** Sun visors <sup>\*1</sup>

**C** Vanity mirrors <sup>\*1</sup>

**D** Interior light <sup>\*1</sup>

Personal lights <sup>\*1</sup>

**E** Moon roof switches <sup>\*2</sup> ..... P.103

**F** "SOS" button <sup>\*2</sup> ..... P.96


**G** Garage door opener switches <sup>\*2</sup> ..... P.91

<sup>\*1</sup>: Refer to the "OWNER'S MANUAL".


<sup>\*2</sup>: If equipped

## Floor Mat Installation

Use only floor mats designed specifically for vehicles of the same model and model year as your vehicle. Fix them securely in place onto the carpet.

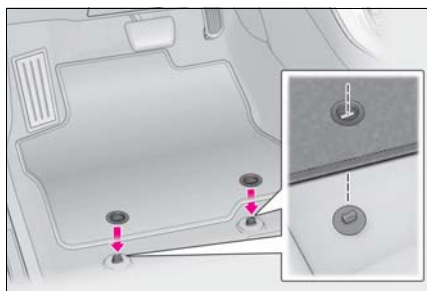

- 1 Insert the retaining hooks (clips) into the floor mat eyelets.

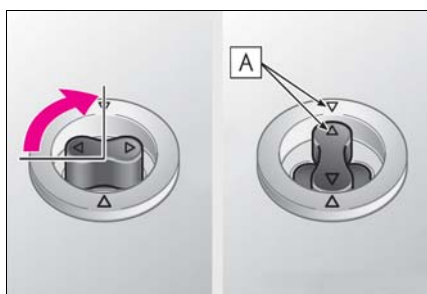


- 2 Turn the upper knob of each retaining hook (clip) to secure the floor mats in place.

**A** Always align the  marks.

The shape of the retaining hooks (clips) may differ from that shown in the illustration.

## Keys
 
### Electronic key




- Smart access system with push-button start (→P.16)

- Wireless remote control

\*: If equipped

### Mechanical key

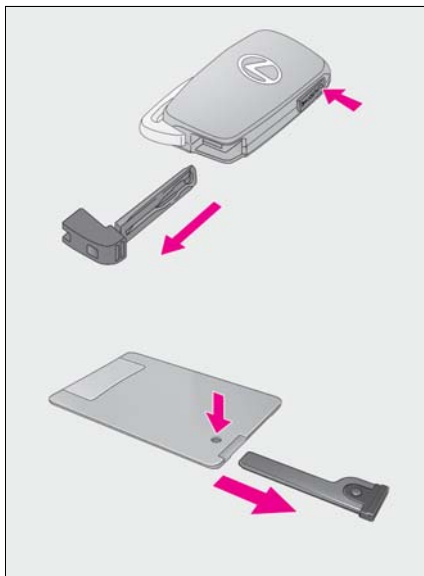


To take out the mechanical key, push the release button and take the key out.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

After using the mechanical key, store it in the electronic key. Carry the mechanical key together with the electronic key. If the electronic key battery is depleted or the entry function does not operate properly, you will need the mechanical key.

## Wireless remote control

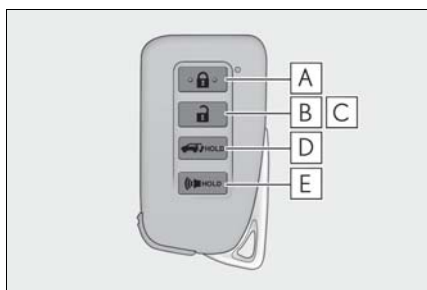

- A** Locks all the doors
- B** Unlocks all the doors
- C** Opens the windows and moon roof<sup>\*1,2</sup>
- D** Opens and closes the power back door<sup>\*1</sup>
- E** Sounds the alarm

<sup>\*1</sup>: If equipped


<sup>\*2</sup>: This setting must be customized at your Lexus dealer.

## Smart Access System with Push-button Start

The following operations can be performed simply by carrying the electronic key (including the card key) on your person, for example in your pocket. The driver should always carry the electronic key.

For details on starting the engine, see page 17.

### Unlocking and locking the doors from the outside

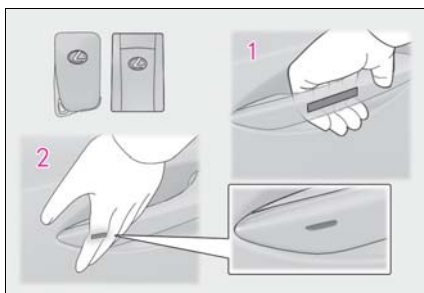

- 1 Grip the driver's door handle to unlock the door. Grip any passenger door handle to unlock all the doors.\*

Make sure to touch the sensor on the back of the handle.


The doors cannot be unlocked for 3 seconds after the doors are locked.

\*: The door unlock settings can be changed.

- 2 Touch the lock sensor (the indentation on the surface of the door handle) to lock all the doors.

Check that the door is securely locked.

### Unlocking and locking the back door

 

- 1 Locks all the doors  
Check that the door is securely locked.


- 2 Unlocks all the doors  
The doors cannot be unlocked for 3 seconds after the doors are locked.

For details on what to do when the electronic key does not operate properly, see page 111.

## Engine (ignition) switch

Performing the following operations when carrying the electronic key on your person starts the engine or changes engine switch modes.

### Starting the engine

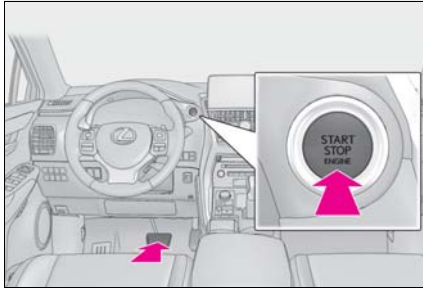

- 1 Check that the parking brake is set.
- 2 Check that the shift lever is in P.
- 3 Firmly depress the brake pedal.



and a message will be displayed on the multi-information display. If it is not displayed, the engine cannot be started.

- 4 Press the engine switch shortly and firmly.

When operating the engine switch, one short, firm press is enough.

It is not necessary to press and hold the switch.

The engine will crank until it starts or for up to 30 seconds, whichever is less.

Continue depressing the brake pedal until the engine is completely started.


The engine can be started from any engine switch mode.

## Stopping the engine

- 1 Stop the vehicle completely.
- 2 Set the parking brake (→P.24), and shift the shift lever to P (→P.20).
- 3 Press the engine switch.
- 4 Release the brake pedal and check that the display on the instrument cluster is off.

## Changing engine switch modes

Modes can be changed by pressing the engine switch with brake pedal released. (The mode changes each time the switch is pressed.)

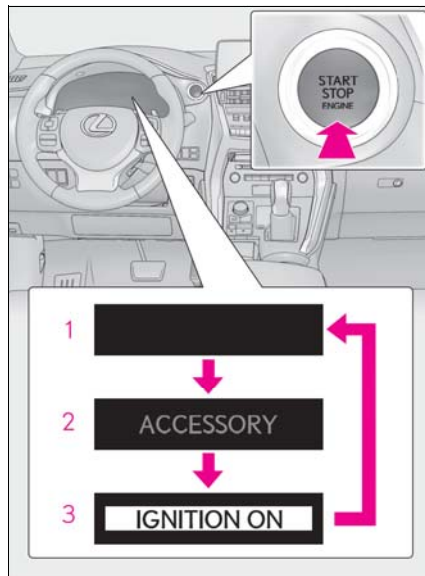

### 1 Off\*

The emergency flashers can be used.

### 2 ACCESSORY mode

Some electrical components such as the audio system can be used.

"ACCESSORY" will be displayed on the multi-information display.

### 3 IGNITION ON mode

All electrical components can be used.

"IGNITION ON" will be displayed on the multi-information display.

\*: If the shift lever is in a position other than P when turning off the engine, the engine switch will be turned to ACCESSORY mode, not to off.

### If your vehicle has to be stopped in an emergency

Only in an emergency, such as if it becomes impossible to stop the vehicle in the normal way, stop the vehicle using the following procedure:

- 1** Steadily step on the brake pedal with both feet and firmly depress it.  
Do not pump the brake pedal repeatedly as this will increase the effort required to slow the vehicle.
- 2** Shift the shift lever to N.
- ▶ **If the shift lever is shifted to N**
- 3** After slowing down, stop the vehicle in a safe place by the road.
- 4** Stop the engine.
- ▶ **If the shift lever cannot be shifted to N**
- 3** Keep depressing the brake pedal with both feet to reduce vehicle speed as much as possible.




- 4** To stop the engine, press and hold the engine switch for 2 consecutive seconds or more, or press it briefly 3 times or more in succession.

- 5** Stop the vehicle in a safe place by the road.

## Automatic Transmission

### Shifting the shift lever

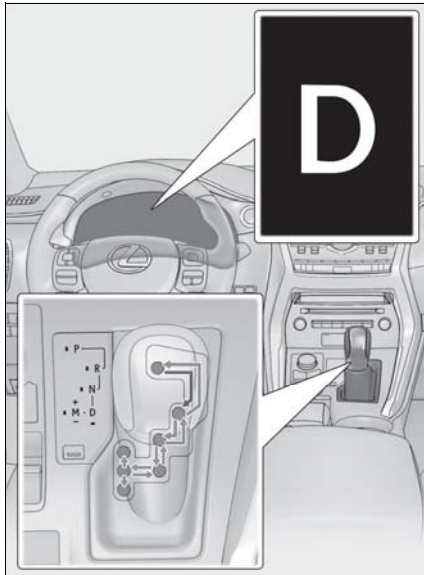

← While the engine switch is in IGNITION ON mode, move the shift lever with the brake pedal depressed. When shifting the shift lever between P and D, make sure that the vehicle is completely stopped.

### Shift position purpose and functions

| Shift position | Objective or function                   |
|----------------|-----------------------------------------|
| P              | Parking the vehicle/starting the engine |
| R              | Reversing                               |
| N              | Neutral                                 |
| D              | Normal driving <sup>*1</sup>            |
| M              | M mode driving <sup>*2</sup> (→P.22)    |

<sup>\*1</sup>: To improve fuel efficiency and reduce noise, shift the shift lever to D for normal driving. You can choose gear range suitable for your driving situation by operating the paddle shift switches.


<sup>\*2</sup>: Any gear range can be fixed when driving in M mode.

## Selecting the driving mode

→P.50

## Selecting shift ranges in the D position

To drive using temporary shift range selection, operate the “-” paddle shift switch while the shift lever in D. Changing the shift range enables the level of engine braking force to be selected. The shift range can then be selected by operating the “-” and “+” paddle shift switches.

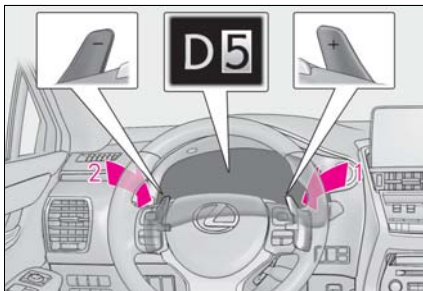

**1** Upshifting

**2** Downshifting

The selected shift range, from 1 to 6, will be displayed on the multi-information display.

The initial shift range when the “-” paddle shift switch is operated is automatically set to 2, 3, 4 or 5 according to the vehicle speed.


To return to normal D position driving, the “+” paddle shift switch must be held down for a period of time.

| Meter display | Function                                                                                                                      |
|---------------|-------------------------------------------------------------------------------------------------------------------------------|
| D2 - D6       | A gear in the range between 1 and the selected gear is automatically chosen depending on vehicle speed and driving conditions |
| D1            | 1st gear is set                                                                                                               |

A lower shift range will provide greater engine braking forces than a higher shift range.

## Selecting gears in the M position

To enter M mode, shift the shift lever to M. Gears can then be selected by operating the shift lever or paddle shift switches, allowing you to drive in the gear of your choice. The gear can be selected by operating the shift lever or the “-” and “+” paddle shift switches.

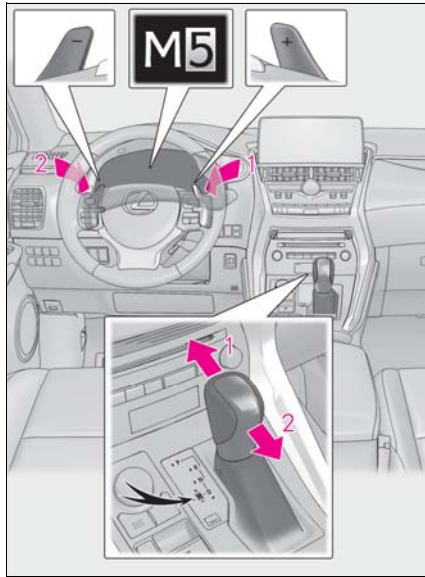

**1** Upshifting

**2** Downshifting


The gear changes once every time the shift lever or paddle shift switch is operated. The selected gear, from 1 to 6, will be fixed and displayed on the multi-information display.

When in the M position, the gear will not change unless the shift lever or paddle shift switches are operated.

However, even when in the M position, the gears will be automatically changed in the following situation:

- When vehicle speed drops (downshift only).
- When the accelerator pedal is depressed further, while driving (downshift only).
- When the needle of the tachometer is in the red zone (the range which exceeds the allowable revs of the engine).

## Turn Signal Lever

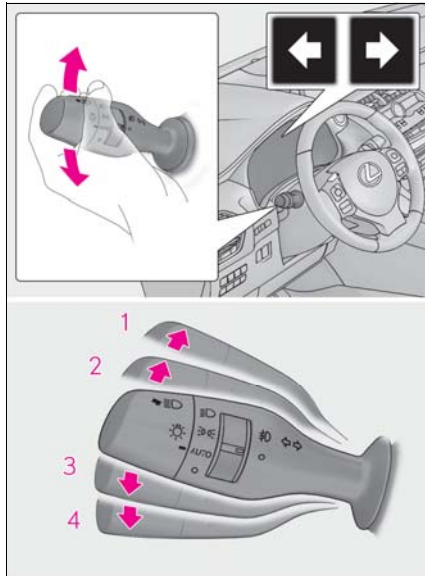


- 1** Right turn
- 2** Lane change to the right (move the lever partway and release it)  
The right hand signals will flash 3 times.
- 3** Lane change to the left (move the lever partway and release it)  
The left hand signals will flash 3 times.
- 4** Left turn

## Parking Brake

The parking brake can be set or released automatically or manually.

### Using the manual mode

The parking brake can be set and released manually.

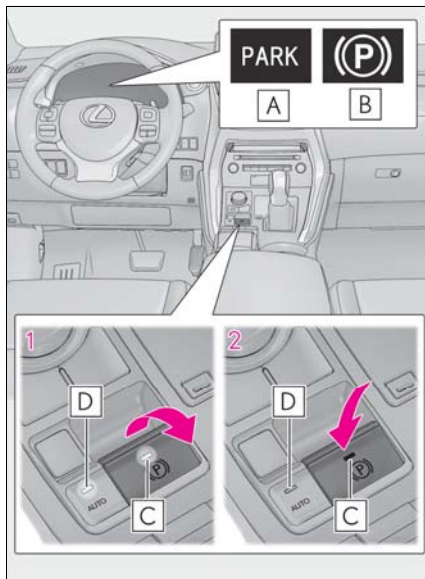

- A** Parking brake indicator (U.S.A.)
- B** Parking brake indicator (Canada)
- C** Parking brake lamp
- D** Automatic mode lamp

#### 1 Sets the parking brake

The parking brake indicator light and parking brake lamp will turn on.


Pull and hold the parking brake switch if an emergency occurs and it is necessary to operate the parking brake while driving.

#### 2 Releases the parking brake

Operate the parking brake switch while depressing the brake pedal. Make sure that the parking brake indicator light and parking brake lamp turn off.

If the parking brake indicator light and parking brake lamp flashes, operate the switch again.

## Turns automatic mode on

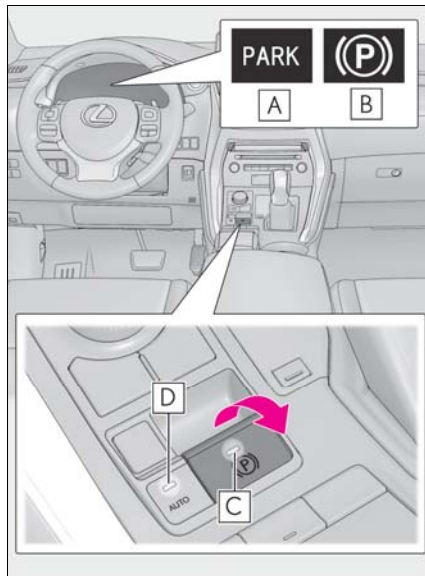

While the vehicle is stopped, pull and hold the parking brake switch until the automatic mode lamp turns on


- A** Parking brake indicator (U.S.A.)
- B** Parking brake indicator (Canada)
- C** Parking brake lamp
- D** Automatic mode lamp

The parking brake is set or released automatically according to shift lever operation.

- When the shift lever is moved out of P, the parking brake will be released, and the parking brake indicator light and parking brake lamp turn off.
- When the shift lever is moved into P, the parking brake will be set, and the parking brake indicator light and parking brake lamp turn on.

Operate the shift lever with the brake pedal depressed.

## Turns automatic mode off

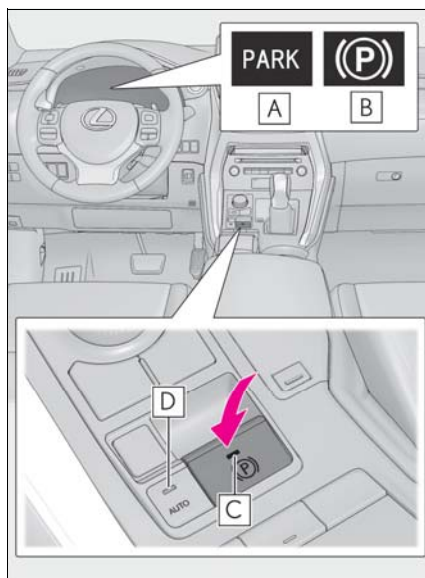


While the vehicle is stopped, press and hold the parking brake switch until the automatic mode lamp turns off

- A** Parking brake indicator (U.S.A.)
- B** Parking brake indicator (Canada)
- C** Parking brake lamp
- D** Automatic mode lamp

## Brake Hold

The brake hold system keeps the brake applied when the shift lever is in D, M or N with the system on and the brake pedal has been depressed to stop the vehicle. The system releases the brake when the accelerator pedal is depressed with the shift lever in D or M to allow smooth start off.

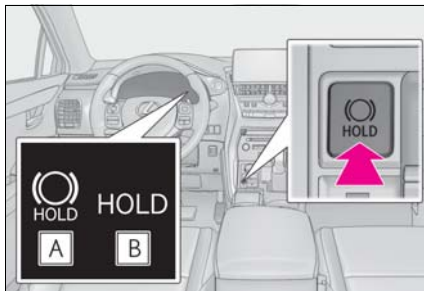


Turns the brake hold system on

The brake hold standby indicator **A** (green) comes on. While the system is holding the brake, the brake hold operated indicator **B** (yellow) comes on.

## Multi-information Display


The multi-information display presents the driver with a variety of vehicle data.

### Display

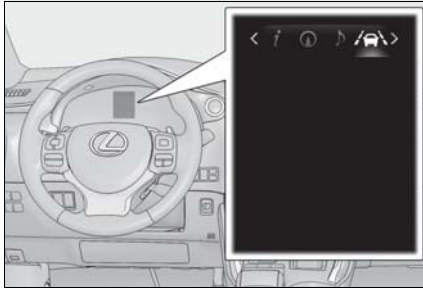

Selecting a menu icon displays a variety of vehicle data or allows vehicle settings to be customized.

### Changing the meter display

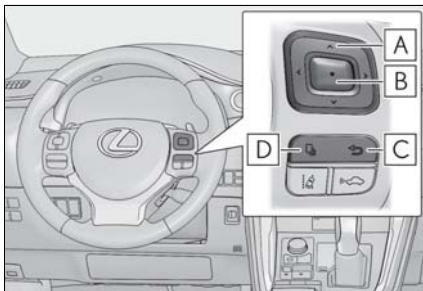

**A** Select an item/change pages

**B** Enter/set

**C** Return to the previous screen

**D** Press:

Displays the screen registered to

When no screen has been registered, the drive information screen will be displayed.

Press and hold:

Registers the currently displayed screen to

The registration confirmation screen is displayed. If the selected screen cannot be registered, a registration failure message will be shown.

## Menu icons



### Drive information

Select to display various drive data.



### Navigation system-linked display (if equipped)

Select to display the following navigation system-linked information.

- Route guidance
- Compass display (heading-up display)



### Audio system-linked display

Select to enable selection of an audio source or track on the display using the meter control switches.



### Driving assist system information

Select to display the operational status of the following systems:

- LDA (Lane Departure Alert with steering control) (→P.40)
- Dynamic radar cruise control with full-speed range (→P.41)

The displayed icon changes depending on the system used.



### Warning message display

Select to display warning messages and measures to be taken if a malfunction is detected.




### Settings display

Select to change the meter display settings

If a problem is detected in any of the vehicle's systems, a warning message is shown on the multi-information display.


## Headlights

### ► Type A

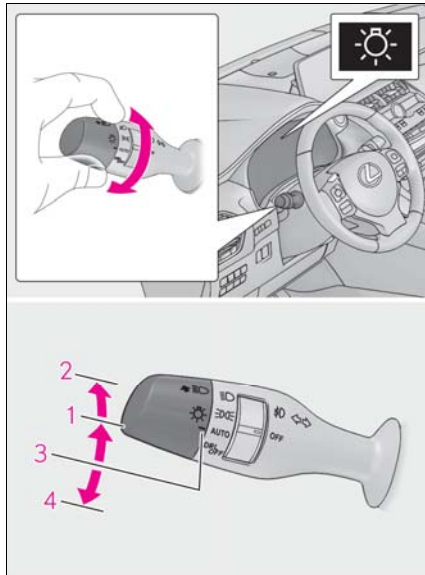


- 1  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- 2  The headlights and all the lights listed above (except daytime running lights) turn on.
- 3 **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically.
- 4  The daytime running lights turn off.

### ► Type B

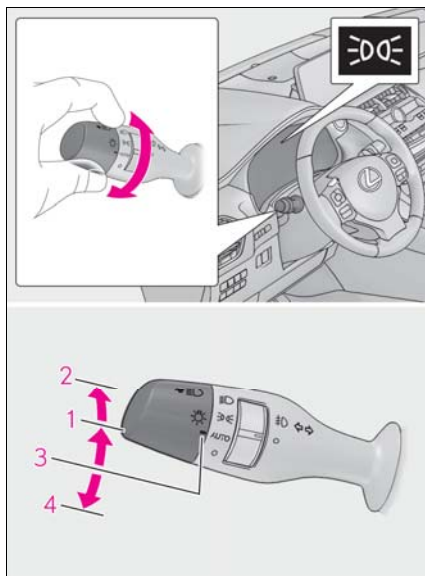

- 1  The side marker, parking, tail, license plate, instrument panel lights, and daytime running lights turn on.
- 2  The headlights and all the lights listed above (except daytime running lights) turn on.
- 3 **AUTO** The headlights, daytime running lights and all the lights listed above turn on and off automatically (when the engine switch is in IGNITION ON mode).
- 4  The daytime running lights turn on.

## Turning on the high beam headlights

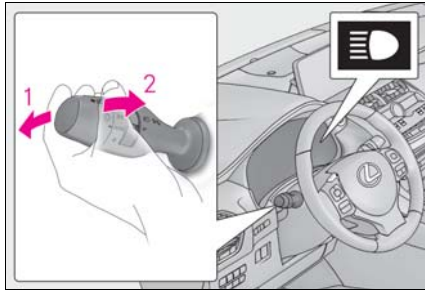

- 1 With the headlights on, push the lever away from you to turn on the high beams.

Pull the lever toward you to the center position to turn the high beams off.


- 2 Pull the lever toward you and release it to flash the high beams once.

You can flash the high beams with the headlights on or off.


## Automatic High Beam

The Automatic High Beam uses an in-vehicle camera sensor to assess the brightness of streetlights, the lights of oncoming and preceding vehicles, etc., and automatically turns the high beam on or off as necessary.

### Activating the Automatic High Beam system

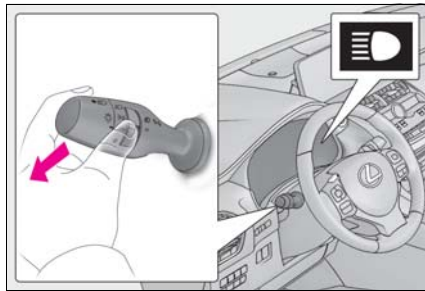

- 1 Push the lever away from you with the headlight switch in **AUTO** or  position.

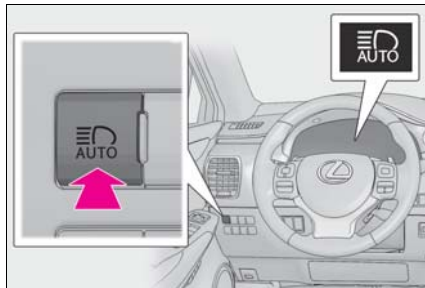


- 2 Press the Automatic High Beam switch.

The Automatic High Beam indicator will come on when the headlights are turned on automatically to indicate that the system is active.

## Changing to manual control mode
 
### ■ Switching to low beam




Pull the lever to original position.

The Automatic High Beam indicator will turn off.

Push the lever away from you to activate the Automatic High Beam system again.

### ■ Switching to high beam

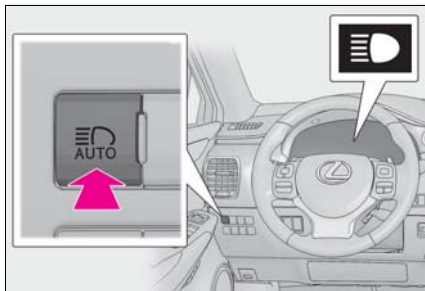

Press the Automatic High Beam switch.





The Automatic High Beam indicator will turn off and the high beam indicator will turn on.

Press the switch to activate the Automatic High Beam system again.

## Windshield Wipers and Washer

### ■ Intermittent windshield wipers with interval adjuster (if equipped)

#### ► Type A

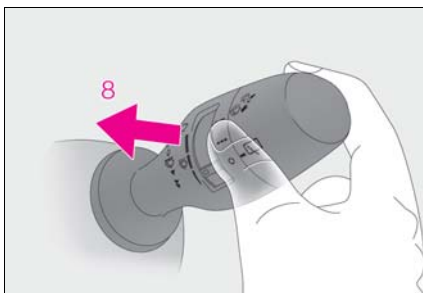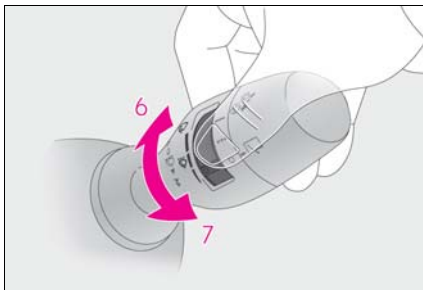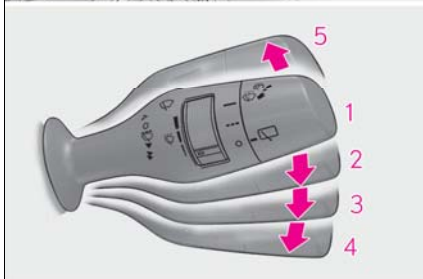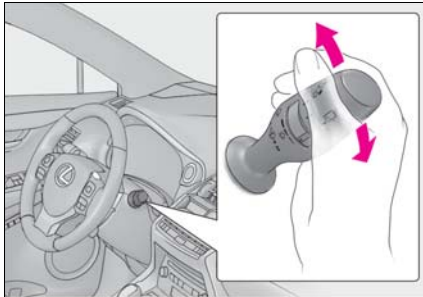

- 1 ○ Off
- 2 ☐ Intermittent operation
- 3 ▼ Low speed operation
- 4 ▽ High speed operation
- 5 ▲ Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.





- 6 Increases the intermittent windshield wiper frequency
- 7 Decreases the intermittent windshield wiper frequency

#### 8 Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Type B

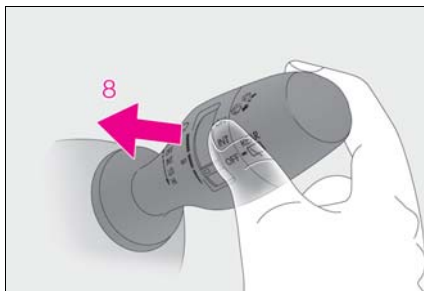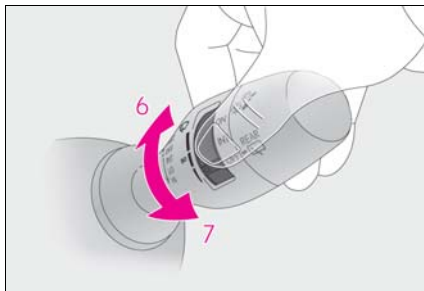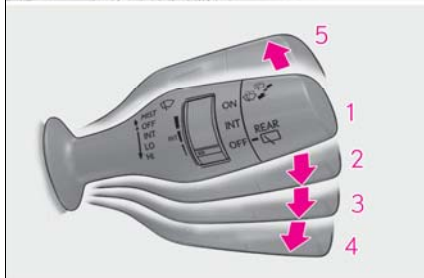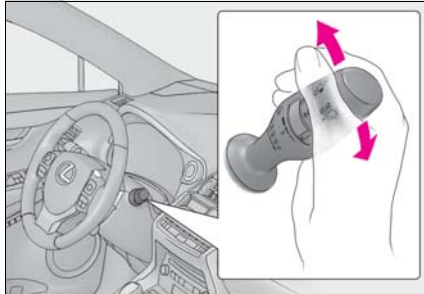

- 1 OFF** Off
- 2 INT** Intermittent operation
- 3 LO** Low speed operation
- 4 HI** High speed operation
- 5 MIST** Temporary operation

Wiper intervals can be adjusted when intermittent operation is selected.





- 6** Increases the intermittent windshield wiper frequency
- 7** Decreases the intermittent windshield wiper frequency

- 8 Washer/wiper dual operation**  
The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## ■ Rain-sensing windshield wipers (if equipped)

### ► Type A

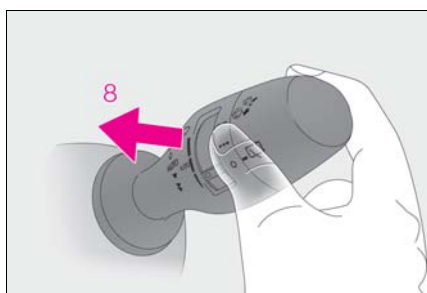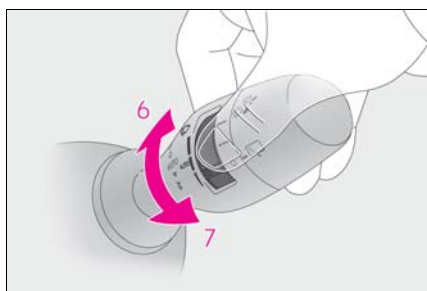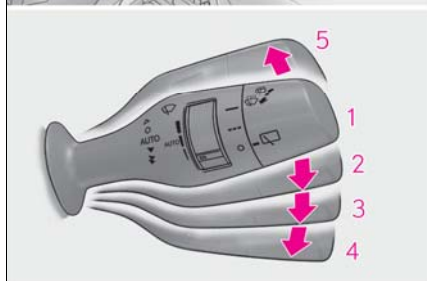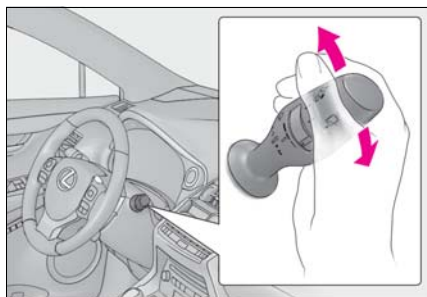

- 1 ○ Off
- 2 **AUTO** Rain-sensing operation
- 3 ▼ Low speed operation
- 4 ▼ High speed operation
- 5 ▲ Temporary operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.





- 6 Increases the sensitivity
- 7 Decreases the sensitivity

### 8 Washer/wiper dual operation

The wipers will automatically operate a couple of times after the washer squirts.

Vehicles with headlight cleaners:  
When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

► Type B

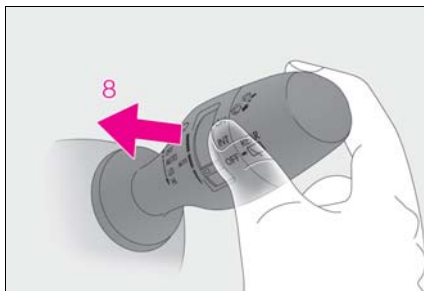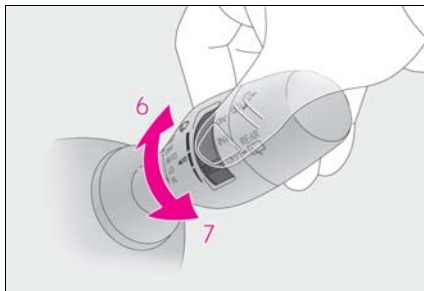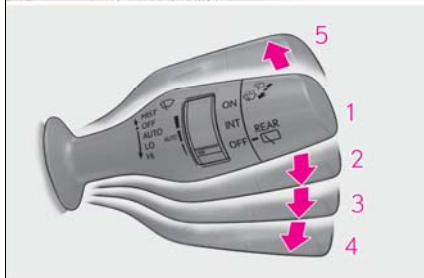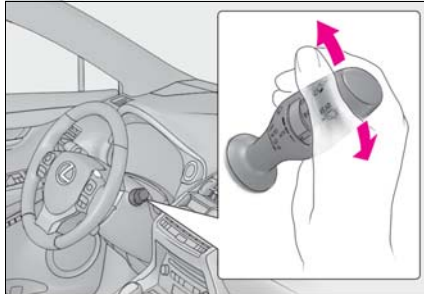

- 1 OFF** Off
- 2 AUTO** Rain-sensing operation
- 3 LO** Low speed operation
- 4 HI** High speed operation
- 5 MIST** Temporary operation

When "AUTO" is selected, the wipers will operate automatically when the sensor detects falling rain. The system automatically adjusts wiper timing in accordance with rain volume and vehicle speed.

The sensor sensitivity can be adjusted when "AUTO" is selected.

- 6** Increases the sensitivity
- 7** Decreases the sensitivity

**8 Washer/wiper dual operation**

The wipers will automatically operate a couple of times after the washer squirts.




Vehicles with headlight cleaners:

When the headlights are on and the lever is pulled and held, the headlight cleaners will operate once. After this, the headlight cleaners will operate every 5th time the lever is pulled.

## Rear Window Wiper and Washer

### Operating the wiper lever


#### ► Type A

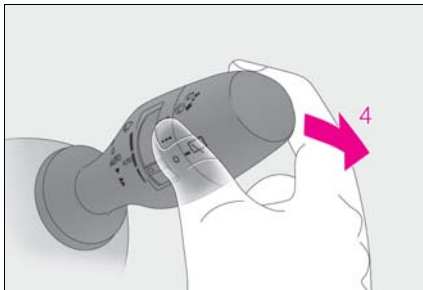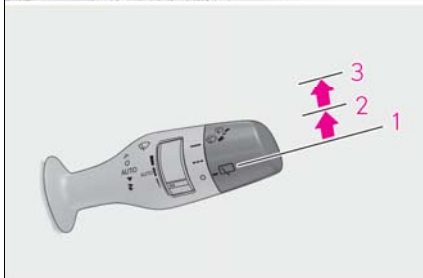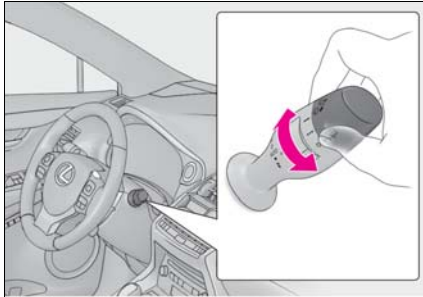

- 1 ○ Off
- 2 --- Intermittent operation
- 3 — Normal operation

- 4 Washer/wiper dual operation  
The wiper will automatically operate a couple of times after the washer squirts.

► Type B

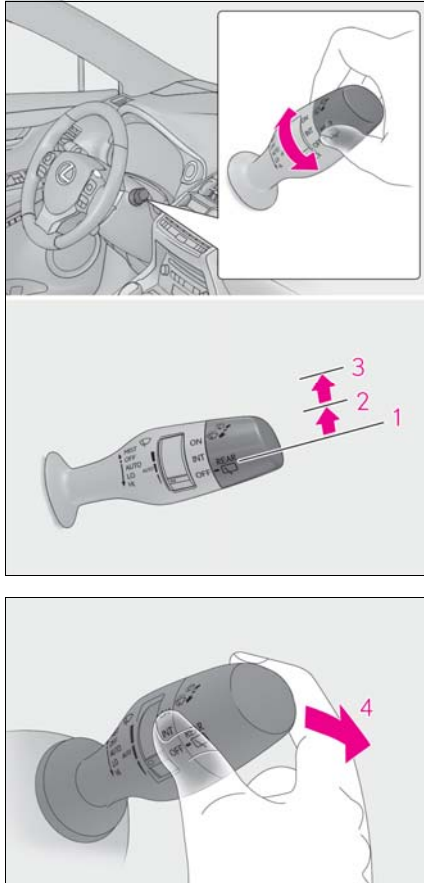

- 1 OFF** Off
- 2 INT** Intermittent operation
- 3 ON** Normal operation

- 4 Washer/wiper dual operation**  
The wiper will automatically operate a couple of times after the washer squirts.

## Lexus Safety System+

The Lexus Safety System+ consists of the following drive assist systems and contributes to a safe and comfortable driving experience:

### Drive assist systems of Lexus Safety System+

#### ■ PCS (Pre-Collision System)

The pre-collision system uses a radar sensor and camera sensor to detect vehicles and pedestrians in front of your vehicle. When the system determines that the possibility of a frontal collision with a vehicle or pedestrian is high, a warning operates to urge the driver to take evasive action and the potential brake pressure is increased to help the driver avoid the collision. If the system determines that the possibility of a frontal collision with a vehicle or pedestrian is extremely high, the brakes are automatically applied to help avoid the collision or help reduce the impact of the collision.

#### ■ LDA (Lane Departure Alert with steering control)

→P.40

#### ■ Automatic High Beam

→P.31

#### ■ Dynamic radar cruise control with full-speed range


→P.41

## LDA (Lane Departure Alert with Steering Control)

When driving on highways and freeways with white (yellow) lines, this function alerts the driver when the vehicle might depart from its lane and provides assistance by operating the steering wheel to keep the vehicle in its lane.

The LDA system recognizes visible white (yellow) lines with the camera sensor on the upper portion of the windshield.

### Turning LDA system on

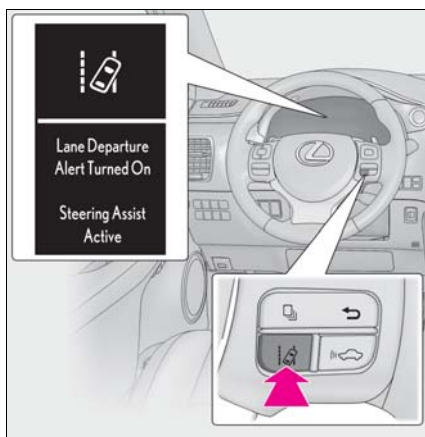

Press the LDA switch to turn the LDA system on.

The LDA indicator illuminates and a message is displayed on the multi-information display.

Press the LDA switch again to turn the LDA system off.


When the LDA system is turned on or off, operation of the LDA system continues in the same condition the next time the engine is started.

## Dynamic Radar Cruise Control with Full-Speed Range

In vehicle-to-vehicle distance control mode, the vehicle automatically accelerates, decelerates and stops to match the speed changes of the preceding vehicle even if the accelerator pedal is not depressed. In constant speed control mode, the vehicle runs at a fixed speed.


Use the dynamic radar cruise control with full-speed range on freeways and highways.

### System Components

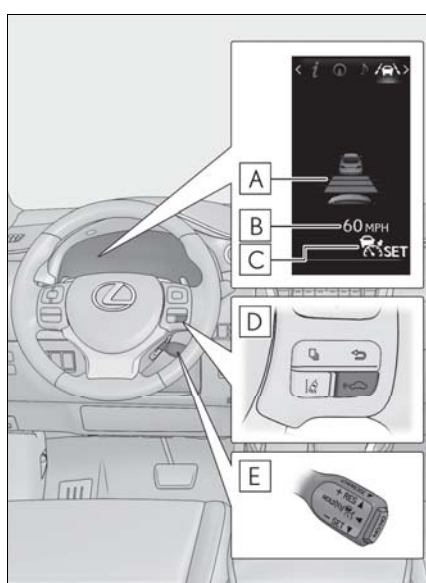

- A** Display
- B** Set speed
- C** Indicators
- D** Vehicle-to-vehicle distance switch
- E** Cruise control switch

## Setting the vehicle speed (vehicle-to-vehicle distance control mode)

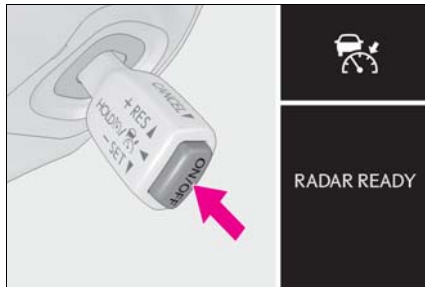


- 1 Press the "ON/OFF" button to activate the cruise control.

Radar cruise control indicator will come on and a message will be displayed on the multi-information display.

Press the button again to deactivate the cruise control.

If the "ON/OFF" button is pressed and held for 1.5 seconds or more, the system turns on in constant speed control mode.

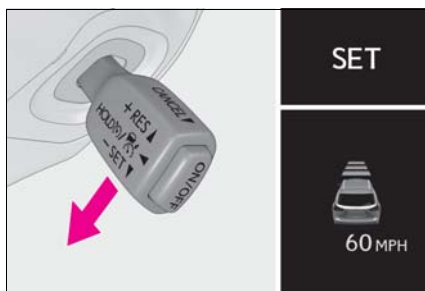


- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 30 mph (50 km/h)) and push the lever down to set the speed.

Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

If the lever is operated while the vehicle speed is below approximately 30 mph (50 km/h) and a preceding vehicle is present, the set speed will be adjusted to approximately 30 mph (50 km/h).

## Adjusting the set speed

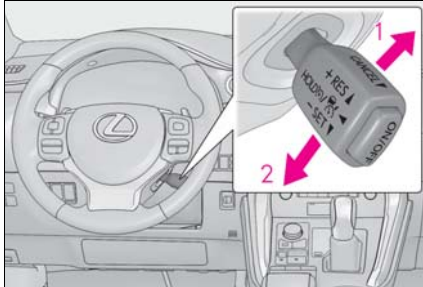


**1** Increases the speed  
(Except when the vehicle has been stopped by system control in vehicle-to-vehicle distance control mode)

**2** Decreases the speed

Fine adjustment: Momentarily move the lever in the desired direction.

Large adjustment: Hold the lever up or down to change the speed, and release when the desired speed is reached.

## Changing the vehicle-to-vehicle distance (vehicle-to-vehicle distance control mode)

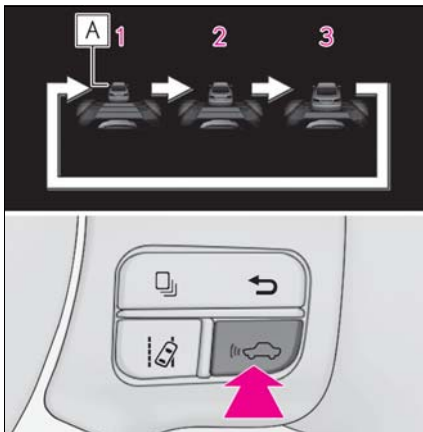

Pressing the switch changes the vehicle-to-vehicle distance as follows:

**1** Long


**2** Medium

**3** Short

The vehicle-to-vehicle distance is set automatically to long mode when the engine switch is turned to IGNITION ON mode.

If a vehicle is running ahead of you, the preceding vehicle mark **A** will also be displayed.


### Resuming follow-up cruising when the vehicle has been stopped by system control (vehicle-to-vehicle distance control mode)

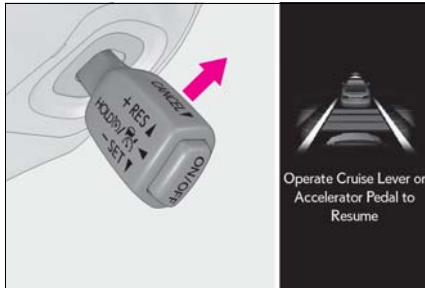

After the vehicle ahead of you starts off, push the lever up.

Your vehicle will also resume follow-up cruising if the accelerator pedal is depressed after the vehicle ahead of you starts off.

### Canceling and resuming the speed control

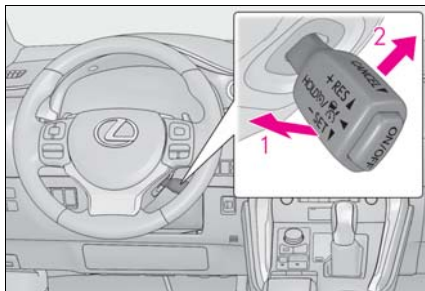

- 1** Pulling the lever toward you cancels the speed control.


The speed control is also canceled when the brake pedal is depressed.

(When the vehicle has been stopped by system control, depressing the brake pedal does not cancel the setting.)

- 2** Pushing the lever up resumes the cruise control and returns vehicle speed to the set speed.

However, when a vehicle ahead is not detected, cruise control does not resume when the vehicle speed is approximately 25 mph (40 km/h) or less.


## Selecting constant speed control mode

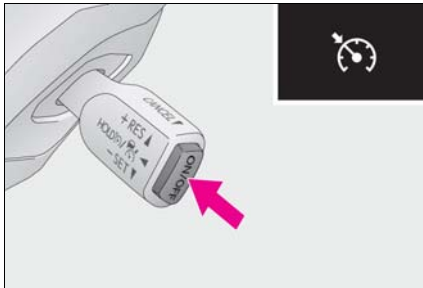

- 1 With the cruise control off, press and hold the "ON/OFF" button for 1.5 seconds or more.

Immediately after the "ON/OFF" button is pressed, the radar cruise control indicator will come on. Afterwards, it switches to the cruise control indicator.

Switching to constant speed control mode is only possible when operating the lever with the cruise control off.

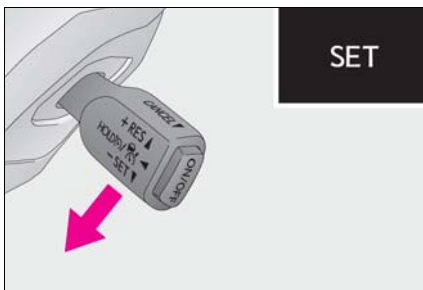

- 2 Accelerate or decelerate, with accelerator pedal operation, to the desired vehicle speed (at or above approximately 25 mph [40 km/h]) and push the lever down to set the speed.


Cruise control "SET" indicator will come on.

The vehicle speed at the moment the lever is released becomes the set speed.

## Intuitive Parking Assist (if equipped)

The distance from your vehicle to nearby obstacles when parallel parking or maneuvering into a garage is measured by the sensors and communicated via the displays and a buzzer. Always check the surrounding area when using this system.

### Turning intuitive parking assist on/off

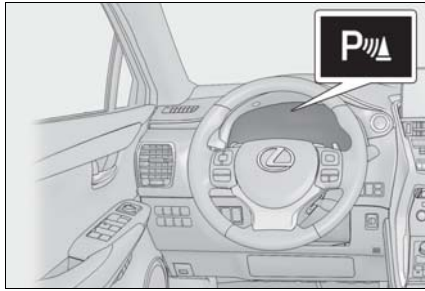

- 1 Press or of meter control switches and select .
- 2 Press or of meter control switches and select "PKSA".
- 3 Press or of meter control switches, select , and then press to select the desired setting (on/off).

When ON (enable) is selected, the Intuitive parking assist indicator comes on.

## Parking Support Brake Function (for static objects) (if equipped)

When a collision may occur with an obstacle while parking or traveling at low speeds, when the vehicle suddenly moves forward due to mistaken accelerator pedal operation, or when the vehicle moves due to the shift lever being in the wrong position, the sensors detect obstacles to the front or rear in the traveling direction of the vehicle, and the system operates to lessen impact with obstacles such as walls, and reduce resulting damage.

### Changing settings of the Parking Support Brake function (for static objects)




- 1 Press or of the meter control switches and select .
- 2 Press or of the meter control switches and select .
- 3 Press on the meter control switches to enable/disable the system.

The PKSB OFF indicator comes on when the Parking Support Brake function is OFF (not operating).

## Panoramic View Monitor (if equipped)

Panoramic view monitor assists the driver in viewing the surroundings, when operating at low speeds, by combining the front, side and rear cameras and displaying a complete vehicle overhead image on the screen.

### Camera switch

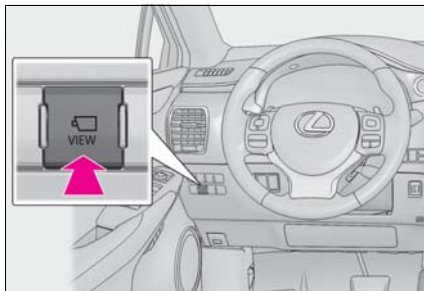


The camera switch is located as shown in the illustration.


### How to switch the display

When you press the camera switch or shift the shift lever to the "R" position while the engine switch is in IGNITION ON mode, the panoramic view monitor operates. (The following is an example)


#### ► When the shift lever is in the "P" position

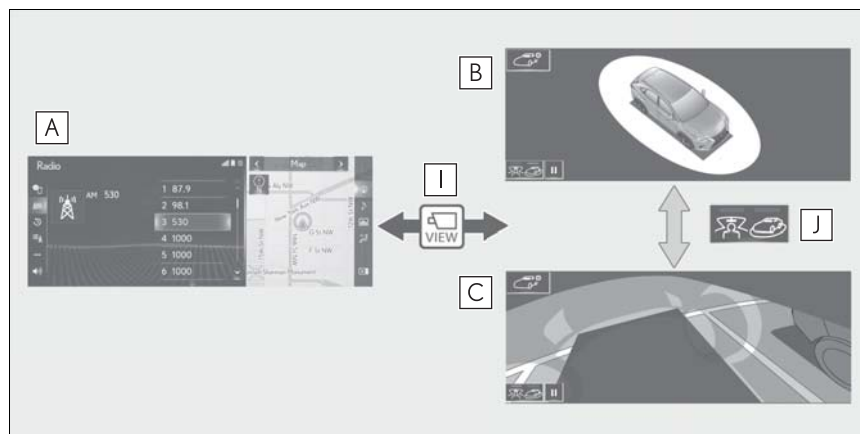

► When the shift lever is in the “D” or “N” position

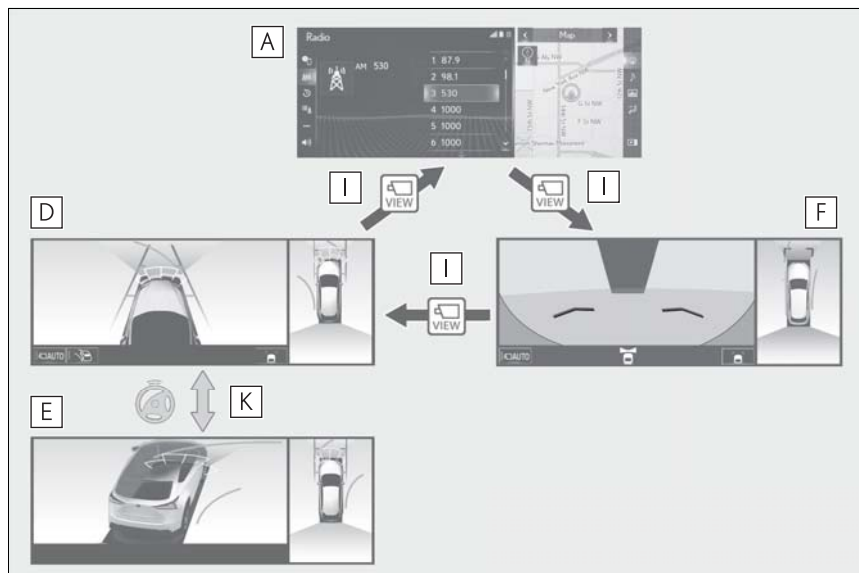

► When the shift lever is in the “R” position

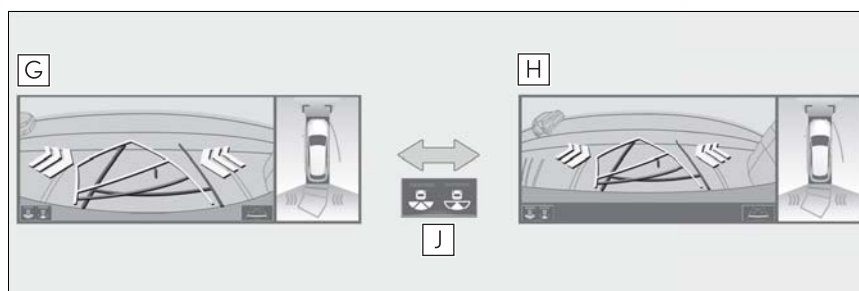


- A** Map screen, audio screen, etc.
- B** Moving view
- C** See-through view
- D** Side Clearance View & panoramic view
- E** Cornering View & panoramic view
- F** Wide front view & panoramic view
- G** Rear view & panoramic view
- H** Wide rear view & panoramic view
- I** Pressing the camera switch
- J** Selecting the display mode switching button
- K** When the steering wheel is turned by 180° or more from the center (straight-line) position

## Driving Mode Select Switch

The driving modes can be selected to suit driving conditions.

### ► Vehicles without Adaptive Variable Suspension system

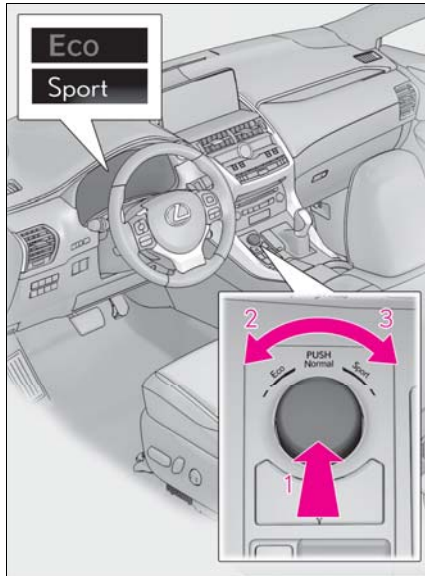

#### 1 Normal mode

For normal driving.

Press the switch to change the driving mode to Normal mode when selected to Eco mode or Sport mode.

#### 2 Eco mode

In contrast to Normal mode when stepping on the accelerator pedal, torque generation becomes slower, air conditioning operations (heating/cooling) are restrained, and driving is suited for improved fuel consumption.


When not in Eco mode and the driving mode select switch is turned to the left, "Eco" indicator will be shown on the multiinformation display.

#### 3 Sport mode

Assists acceleration response by controlling the engine, transmission and steering. Suitable for when precise handling is desirable, for example when driving on mountain roads.

When not in Sport mode and the driving mode select switch is turned to the right, "Sport" indicator will be shown on the multi-information display.

## ► Vehicles with Adaptive Variable Suspension system

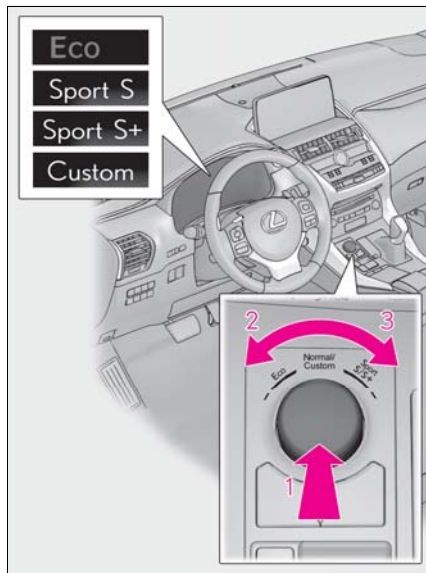

### 1 Normal/Custom mode

Press the switch and select Normal mode or Custom mode. Each time the switch is pressed, the system changes between Normal mode and Custom mode. When Custom mode is selected, the "Custom" indicator comes on.

When in Eco mode or Sport mode, when the switch is pressed, the system returns to Normal mode. Press the switch to change the driving mode to Normal mode when selected to Eco mode or Sport mode.

Custom mode can be setup on the navigation system or multimedia system screen.

#### • Normal mode

Suitable when driving in the city, for good fuel consumption efficiency, silence, and driveability.

#### • Custom mode

Driving is possible by setting the desired function for power train control, chassis control or air conditioning operations.

### 2 Eco mode

In contrast to Normal mode when stepping on the accelerator pedal, torque generation becomes slower, air conditioning operations (heating/cooling) are restrained, and driving is suited for improved fuel consumption.

When not in Eco mode and the driving mode select switch is turned to the left, "Eco" indicator will be shown on the multi-information display.

### 3 Sport mode

#### • Sport S mode

Assists acceleration response by controlling the engine and transmission. Suitable for when powerful acceleration is desirable.

When not in Sport S mode and the driving mode select switch is turned to the right, "Sport S" indicator will be shown on the multi-information display.

#### • Sport S+ mode


Helps to ensure superior vehicle stability by simultaneously controlling the steering and suspension in addition to the engine and transmission. Suitable for sporty driving.

When in Sport S mode and the driving mode select switch is turned to the right, "Sport S+" indicator will be shown on the multi-information display.

## BSM (Blind Spot Monitor) (if equipped)

The Blind Spot Monitor is a system that has 2 functions;

- The Blind Spot Monitor function  
Assists the driver in making the decision when changing lanes
  - The Rear Cross Traffic Alert function  
Assists the driver when backing up
- These functions use the same sensors.

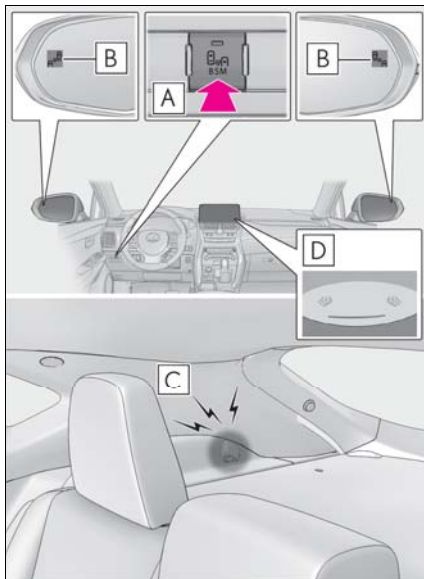

### A BSM main switch

Pressing the switch turns the system on or off. When the switch is set to on, the switch's indicator illuminates and the buzzer sounds. This switch is for both Blind Spot Monitor function and Rear Cross Traffic Alert function.

### B BSM outside rear view mirror indicators

**Blind Spot Monitor function:**

When a vehicle is detected in a blind spot of the outside rear view mirrors or approaching rapidly from behind into a blind spot, the outside rear view mirror indicator on the detected side will illuminate. If the turn signal lever is operated toward the detected side, the outside rear view mirror indicator will flash.

**Rear Cross Traffic Alert function:**

When a vehicle approaching from the right or left at the rear of the vehicle is detected, both outside rear view mirror indicators will flash.

### C Rear Cross Traffic Alert buzzer (Rear Cross Traffic Alert function only)

When a vehicle approaching from the right or left rear of the vehicle is detected, a buzzer sounds from behind the right-hand rear seat.

### D Navigation/multimedia system screen (Rear Cross Traffic Alert function only)

If a vehicle approaching from the right or left at the rear of the vehicle is detected, the Rear Cross Traffic Alert icon for the detected side will be displayed.

## Tire Pressure Warning System

Your vehicle is equipped with a tire pressure warning system that uses tire pressure warning valves and transmitters to detect low tire inflation pressure before serious problems arise.


### The tire inflation pressure display function



The tire pressure detected by the tire pressure warning system can be displayed on the multi-information display.

### Initializing the tire pressure warning system

- 1 Turn the engine switch to IGNITION ON mode.

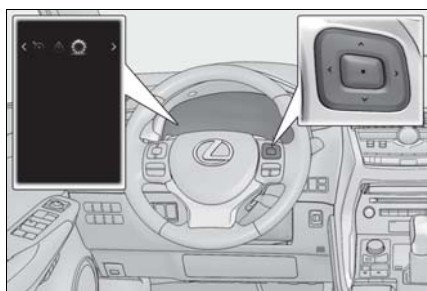

- 2 Press  or  of the meter control switches and select .

- 3 Press  or  of the meter control switches, select the "Vehicle Settings" and then press .


- 4 Press  or  of the meter control switches, select the "TPMS" and then press and hold the .

The "Tire Pressure Recalibrating. Please Wait Until Complete" will be displayed on the multi-information display and the tire pressure warning light will blink slowly 3 times. When the message disappears, initialization is complete.

## ASC (Active Sound Control) (if equipped)

The ASC system is an electronic sound system that generates engine sound, conveying the kinetic situations of the vehicle's acceleration and deceleration to the driver through the speakers inside the instrument panel. The vehicle's response to the driver's acceleration behavior and shift operations are also conveyed in sound.

When Sport mode is selected, the sound conveyed to the driver will be louder.

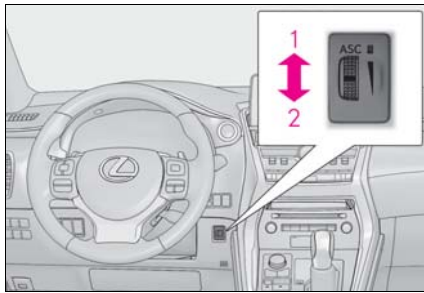

**1** Louder

**2** Lower


The indicator comes on when the ASC system is on.

When the dial is turned to the lowest volume, the ASC system will be turned off and the indicator will go off.

## Remote Touch

The Remote Touch can be used to operate the navigation/multimedia system display. Remote Touch is the name for the device that includes the "MAP" ("HOME") button, "MENU" button, back button, touchpad and sub function button.

### Names and operations of each part

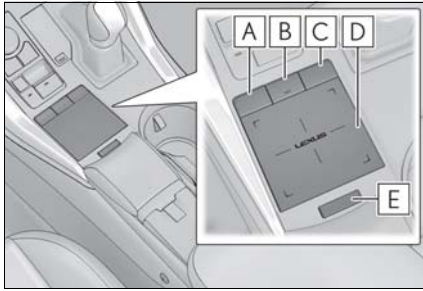

#### ► 10.3-inch display model

##### **A** "MAP" button

Press this button to display the vehicle's current position.

#### ► 8-inch display model

##### **A** "HOME" button

Press this button to display the home screen.

##### **B** "MENU" button

Press this button to display the menu screen.

##### **C** Back button

Press this button to display the previous screen.

##### **D** Touchpad

Slide your finger on the touchpad and move the pointer to select a function, letter and screen button.

Press the touchpad to enter the selected function, letter or screen button. Certain finger movements on the touchpad can perform functions, such as changing map scalings and scrolling list screens.

##### **E** Sub function button

When  is displayed on the screen, a function screen assigned to the screen can be displayed.

## Menu screen

Press the “MENU” button on the Remote Touch to display the menu screen.

### ► 10.3-inch display model



### ► 8-inch display model




| Switch                                                                              | Function                                                                                    |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
|    | Select to display the "Destination" screen. *1                                              |
|    | Select to display the radio control screen. *1                                              |
|    | Select to display the media control screen. *1                                              |
|    | Select to display the hands-free control screen. (→P.68)                                    |
|    | Select to display the "Apps" screen. *1,2                                                   |
|  | Select to display the information screen. (→P.60)                                           |
|  | Select to display the "Setup" screen. *1                                                    |
|  | Select to display the air conditioning control screen. (→P.78)                              |
|  | Select to adjust the contrast and brightness of the screens, turn the screen off, etc. *1,2 |

\*1: Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".


\*2: This function is not made available on some models.

### Split-screen display (10.3-inch display model only)

Different information can be displayed on the left and right of the screen. For example, air conditioning system screen can be displayed and operated while the fuel consumption information screen is being displayed. The large screen on the left of the display is called the main display, and the small screen to the right is called the side display.

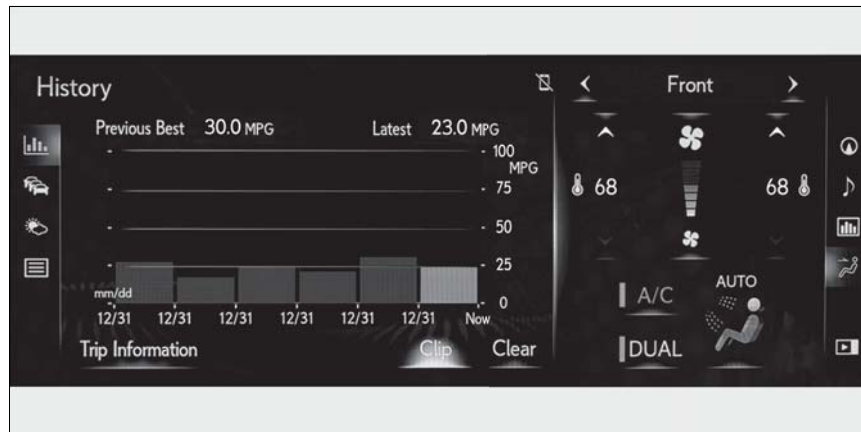


### Side display (10.3-inch display model only)

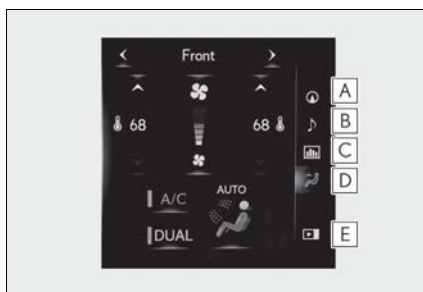

The following functions can be displayed and operated on the side display.

- A** Navigation system (→P.62)
- B** Audio (→P.72, 73, 74, 75)
- C** Vehicle information (→P.61)
- D** Air conditioning system (→P.80)
- E** Show/hide the side display

## Screen scroll operation

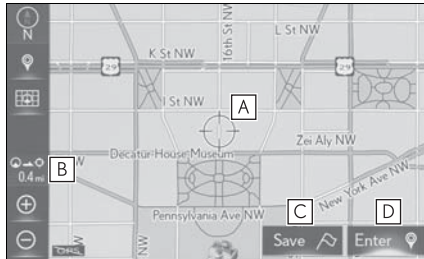

Select the desired point on the map screen.

Move the desired point on the center of the map screen.


- A** Cursor mark
- B** Distance from the current position to the cursor mark
- C** Select to register as a memory point
- D** Select to set as a destination

Press the “MAP” button on the Remote Touch to return to the current position.

## Editing route

While route guidance is operating, you can change the route using the following method.

- 1** Select  on the map screen.

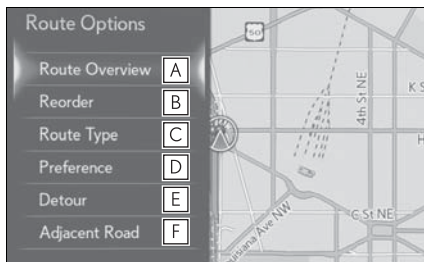

- 2** Select the desired item to be set.

- A** Select to display the overview of the entire route
- B** Select to reorder destinations
- C** Select to change route type
- D** Select to set route preferences
- E** Select to set detours
- F** Select to start from adjacent road

- 3** Check that the route overview is displayed.

## Fuel Consumption Information

Fuel consumption information can be displayed on the navigation/multimedia system display.

The fuel consumption information can be displayed and operated on the side display. For details, refer to the "OWNER'S MANUAL".

### Fuel consumption

#### Trip information

Press the "MENU" button on the Remote Touch, then select  on the screen.

If a screen other than "Trip Information" is displayed, select "Trip Information".



- A** Resetting the consumption data
- B** Fuel consumption in the past 15 minutes
- C** Current fuel consumption
- D** Average vehicle speed since the engine was started.


**E** Elapsed time since the engine was started.

**F** Cruising range

#### History

Press the "MENU" button on the Remote Touch, then select  on the screen.

If a screen other than "History" is displayed, select "History".

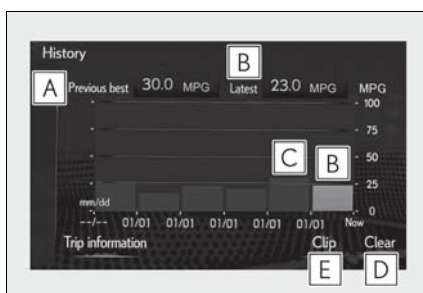


- A** Best recorded fuel consumption
- B** Latest fuel consumption
- C** Previous fuel consumption record
- D** Resetting the history data
- E** Updating the latest fuel consumption data

### Side display (10.3-inch display model only)

Vehicle information can be displayed on the side display.


Select  or  to display the desired screen.

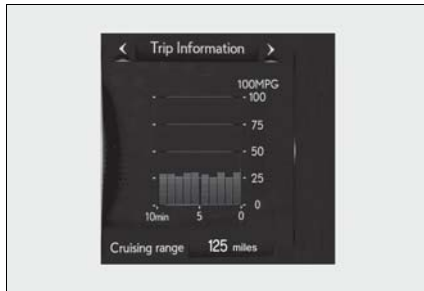

- Trip information (type A/type B)
- History

## Navigation System

### Registering home

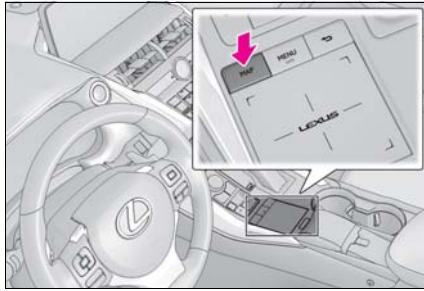

- 1 Press the "MAP" button on the Remote Touch.  
Please refer to P.55 for the Remote Touch operation.
- 2 Select .
- 3 Select .
- 4 Select "Yes".
- 5 Search for your home.
- 6 Select "OK".  
Registration of home is complete.

### Displaying the destination search screen


#### ■ Search by address

There are 2 methods to search for a destination by address.

- 1 Display the destination search screen by either operation:

- "MAP" button → 
- "MENU" button → "Destination"

- 2 Select "Address".

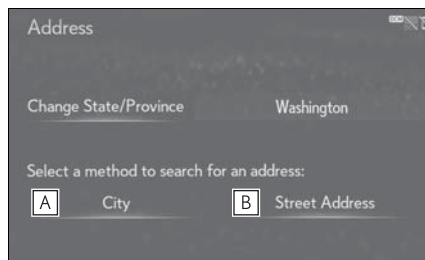

- 3 Select the desired search method.

- A** Select to search by city
- B** Select to search by street address

► **Search by city (A)**

**4** Select "City".

**5** Enter a city name and select "Search".

"Last 5 Cities": Select the city name from the list of the last 5 cities.

**6** Select the desired city name.

**7** Enter a street name and select "Search".

**8** Select the desired street name.

**9** Enter a house number and select "Search".

► **Search by street address (B)**

**4** Select "Street Address".

**5** Enter a house number and select "Search".

**6** Enter a street name and select "Search".

**7** Select the desired street name.

**8** Enter a city name and select "Search".


**9** Select the desired city name.

### ■ Search by point of interest

There are 3 methods to search for a destination by Point of Interest.

**1** Display the destination search screen by either operation:

- "MAP" button → 
  - "MENU" button → "Destination"
- 2** Select "Point of Interest".

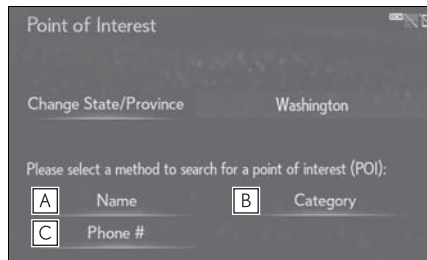

**3** Select the desired search method.


- A** Select to search by name
- B** Select to search by category
- C** Select to search by phone number

► **Search by name (A)**

- 4** Select "Name".
- 5** Enter a POI name and select "Search".
- 6** Select the desired POI.

► **Search by category** (B)

4 Select "Category".

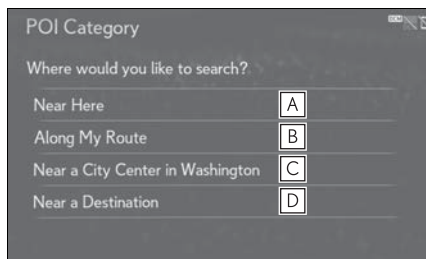

6 Select the desired POI category.

7 Select the desired POI.

► **Search by phone number** (C)

4 Select "Phone #".

5 Enter a phone number and select "OK".

5 Select the desired search point.

A Select to search for POIs near your current position.

B Select to search for POIs along the set route.

C Select to search for POIs near a specific city center.




D Select to search for POIs near a destination. When more than 1 destination has been set, a list will be displayed on the screen. Select the desired destination.

## Hands-free System For Cellular Phone

### Registering/connecting Bluetooth® device

To use the hands-free system, it is necessary to register a Bluetooth® phone with the system. Please refer to the cellular phone manufacturer's user guide for pairing procedures, or go to <http://www.lexus.com/MobileLink> to find approved Bluetooth® phones for this system.


- 1 Turn the Bluetooth® connection setting of your cellular phone on.
- 2 Press the "MENU" button on the Remote Touch.  
Please refer to P.55 for the Remote Touch operation.
- 3 Select "Phone".
- 4 Select "Yes" to register a phone.

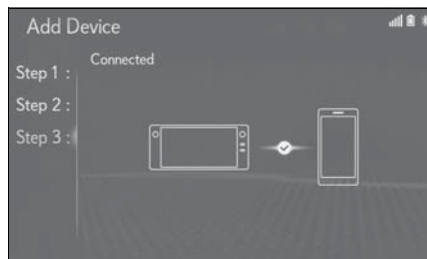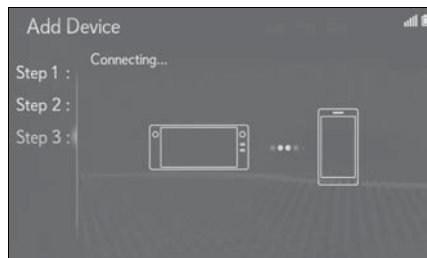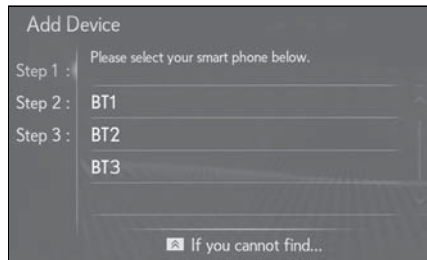

- 5 Select the desired Bluetooth® device.  
If the desired Bluetooth® phone is not on the list, select "If you cannot find..." and follow the guidance on the screen.
- 6 Register the Bluetooth® device using your Bluetooth® device.
- 7 Check that the this screen is displayed, indicating pairing was successful.
- 8 Check that "Connected" is displayed and registration is complete.

## Contacts transfer


- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.55 for the Remote Touch operation.
- 2 Select "Setup".
- 3 Select  "Phone" on the sub menu.
- 4 Select "Contacts/Call History".

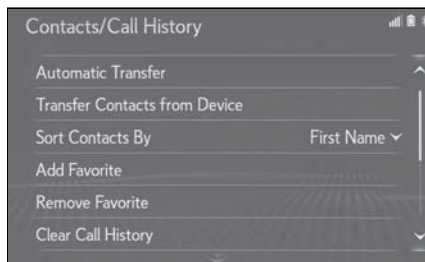

- 5 Select "Transfer Contacts from Device".
- 6 Select "From Phone (Bluetooth)".
- 7 Transfer the contact data to the system using a Bluetooth® phone.
- 8 Check that a confirmation screen is displayed when the operation is complete.

Contacts transfer may not be possible depending on the type of phone.

## Registering the contacts in the favorites list

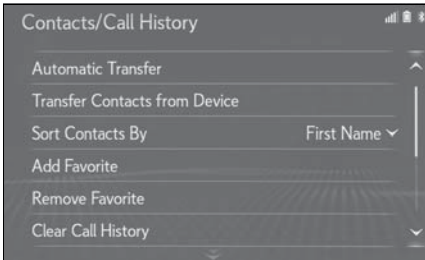- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.55 for the Remote Touch operation.
  - 2 Select "Setup".
  - 3 Select  "Phone" on the sub menu.
  - 4 Select "Contacts/Call History".
- 
- 5 Select "Add Favorite".
  - 6 Select the desired contact to add to the favorites list.
  - 7 Check that a confirmation screen is displayed when the operation is complete.

## Calling by favorites list

- 1 Press the "MENU" button on the Remote Touch.  
Please refer to P.55 for the Remote Touch operation.
- 2 Select "Phone".
- 3 Select  "Favorites" on the sub menu and select the desired contact.
- 4 Select the desired number.
- 5 Check that the call screen is displayed.


## Calling the message sender

- 1 Select  or press the  switch on the steering wheel.
- 2 Check that the call screen is displayed.


## Receiving a call

Select  "Answer" or press the  switch on the steering wheel to talk on the phone.

### ► Main display

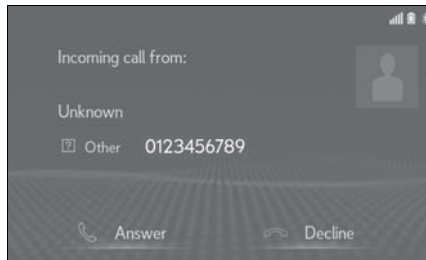


### ► Side display\*<sup>\*</sup>

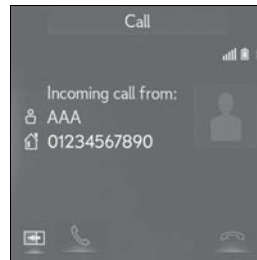

- To refuse to receive the call, select  "Decline"
- To adjust the volume of a received call, turn the "PWR·VOL" knob, or use the volume control switch on the steering wheel.

\*: 10.3-inch display model

## Steering switches

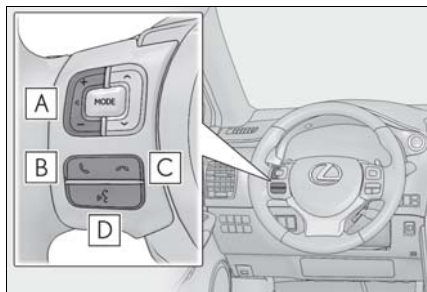

- A** Volume control switch  
Press to adjust the volume.
- B** Off hook switch  
Press to start talking.
- C** On hook switch  
Press to end talking/dialing.
- D** Talk switch  
Press to start the voice command system.

## Audio System

### Audio control screen

Follow the procedure below to display the audio control screen.

► **Using the audio control switch**

Press the "RADIO" or "MEDIA" button.

► **Using the Remote Touch**


Press the "MENU" button on the Remote Touch, then select "Radio" or "Media".

Please refer to P.55 for the Remote Touch operation.

### Selecting an audio source

► **Using the audio control switch**

**1** Display the audio control screen.

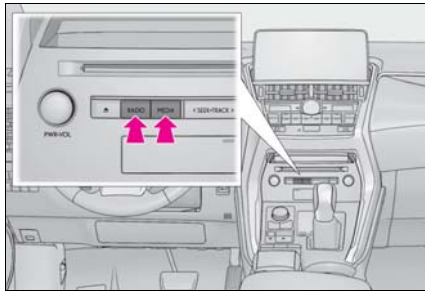

**2** Each time the "RADIO" or "MEDIA" button is pressed, the audio source changes.

"RADIO" button: Press to change radio modes.

"MEDIA" button: Press to change media

► **From the audio source selection screen**


**1** Display the audio control screen.

**2** Select  "Source" on the sub menu.

**3** Select the desired source.

## Steering switch operation


Some parts of the audio/visual system can be adjusted using the switches on the steering wheel.

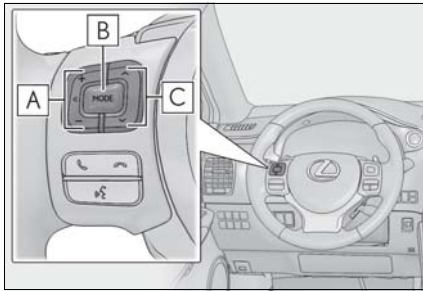

- A** Increases/decreases volume
- B** Press: Change audio sources  
Press and hold: Mute/unmute or pause/resume the current operation
- C** AM, FM, HD mode: Selects a radio station  
SXM mode: Selects a channel  
Audio CD mode: Selects a track  
MP3/WMA/AAC disc mode: Selects a track  
DVD mode: Selects a chapter  
USB mode: Selects a file/track  
iPod mode: Selects a track/file  
Bluetooth<sup>®</sup> audio mode: Selects a track


## Radio
 
### ■ Audio control switch



- A** Press to seek up/down
- B** Turn to step up/down frequencies/channels  
Turn to move up/down the list.

### ■ Control screen

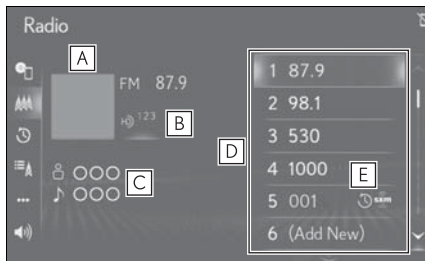


- A** Displays cover art
- B** Select to display HD) multicast channels available
- C** Displays the artist info and song title or album and genre
- D** Select to tune to preset stations/channels
- E** Display items on the channels registered to smart favorites

### ■ Presetting a station

 - 1** Tune in the desired station.
- 2** Select "(Add New)".
- 3** Select "Yes" on the confirmation screen.
- 4** Select "OK" after setting the new preset station.

## CD


### ■ Audio control switch



- A** Press to select a track/file.  
Press and hold to fast forward/rewind.
- B** Turn to select a track/file.  
Turn to move up/down the list.
- C** Press to pause/play.


### ■ Control screen

#### ► Audio CD

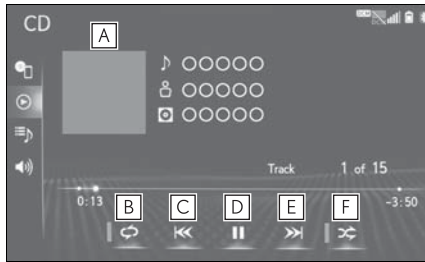

- A** Displays cover art
- B** Select to set repeat playback.
- C** Select to change the track/file.  
Select and hold to fast rewind.
- D** Select to play/pause.
- E** Select to change the track/file.  
Select and hold to fast forward.
- F** Select to set random playback.


#### ► MP3/WMA/AAC disc

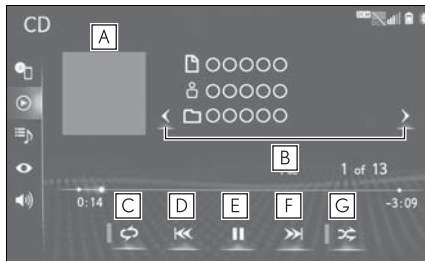

- A** Displays cover art
- B** Select to change the folder.
- C** Select to set repeat playback.
- D** Select to change the track/file.  
Select and hold to fast rewind.
- E** Select to play/pause.
- F** Select to change the track/file.  
Select and hold to fast forward.
- G** Select to set random playback.


## DVD

### ■ Audio control switch

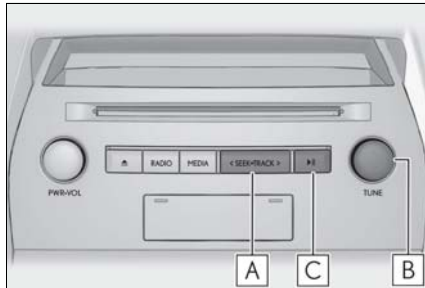

- A** Press to select a chapter.  
Press and hold to fast forward/rewind.
- B** Turn to select a chapter.
- C** Press to pause/play.


### ■ Control screen

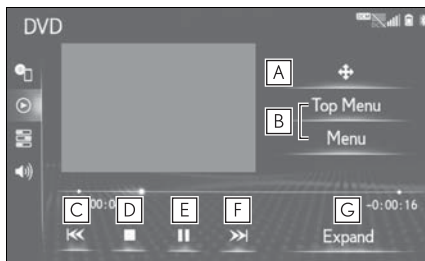

- A** Select to display the menu control key.
- B** Select to display the menu screen.
- C** Select to change the chapter.  
Select and hold to rewind.
- D** Select to stop the video screen.
- E** Select to play/pause.
- F** Select to change the chapter.  
During playback: Select and hold to fast forward.  
During a pause: Select and hold to slow forward.
- G** Select to display expanded screen video.


## iPod

### ■ Audio control switch

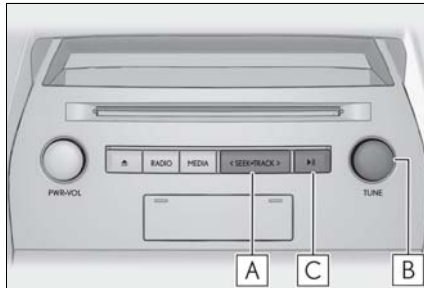

- A** Press to select a track.  
Press and hold to fast forward/rewind.
- B** Turn to select a track.  
Turn to move up/down the list.
- C** Press to pause/play.

### ■ Control screen

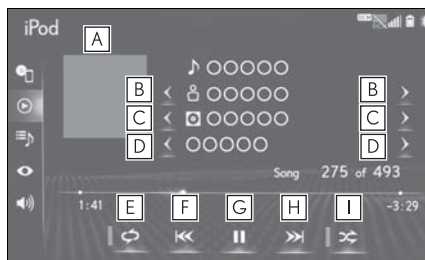


- A** Displays cover art
- B** Select to change the artist.
- C** Select to change the album.
- D** Select to change the playlist.
- E** Select to set repeat playback.
- F** Select to change the track.  
Select and hold to fast rewind.
- G** Select to play/pause.
- H** Select to change the track.  
Select and hold to fast forward.
- I** Select to set random playback.

## Air Conditioning System

Press the "MENU" button on the Remote Touch, then select  to display the air conditioning control screen.

### Control panel

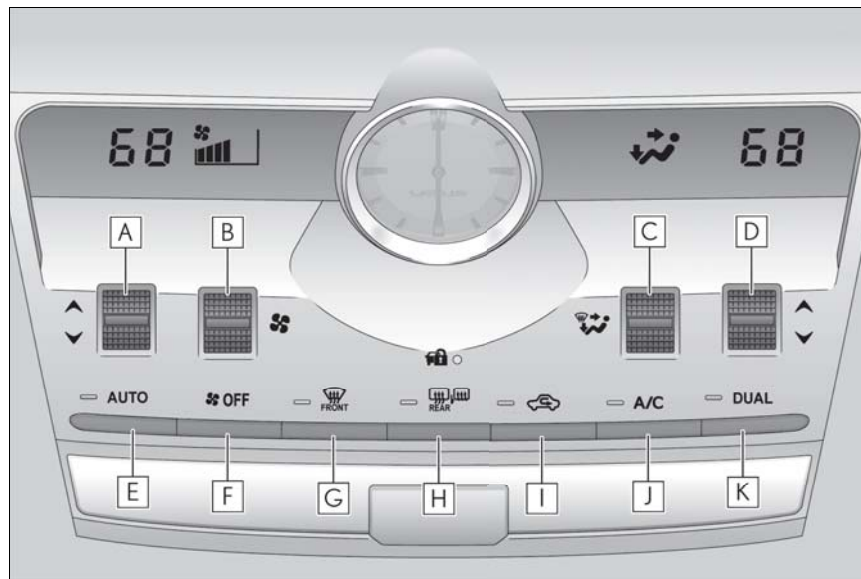

- A** Left-hand side temperature control switch
- B** Fan speed control switch
- C** Airflow mode control switch
- D** Right-hand side temperature control switch
- E** Automatic mode switch
- F** Off switch
- G** Front windshield defogger switch
- H** Rear windshield and outside rear view mirror defogger switch
- I** Outside/recirculated air mode switch
- J** A/C switch
- K** DUAL switch

### ■ Adjusting the temperature setting

Operate the temperature control switch upwards to increase the temperature and downwards to decrease the temperature.

If "A/C" switch is not pressed, the system will blow ambient temperature air or heated air.

### ■ Adjusting the fan speed setting


Operate the fan speed control switch upwards to increase the fan speed and downwards to decrease the fan speed.

Press the off switch to turn the fan off.

### ■ Change the airflow mode

Operate the airflow mode control switch upwards or downwards.

The mode changes as follows each time the switch is operated.

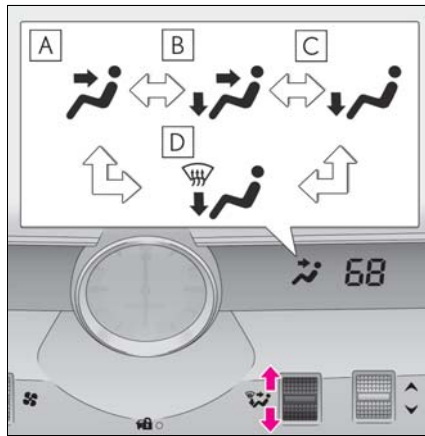

**A** Air flows to the upper body.

**B** Air flows to the upper body and feet.

**C** Air flows to the feet.

**D** Air flows to the feet and the windshield defogger operates.

## Air conditioning control screen

### ■ Main control screen

Using the touchpad of the Remote Touch, select the button on the screen.

**B** to **E** can be adjusted by performing the following operations.


Flick operation: Move the pointer to the desired item and flick the touchpad up or down.

The item can be adjusted by one level.

Trace operation: After selecting the desired item, slide your finger up or down.

The item can be adjusted by the amount that you trace.

Trace operation cannot be used while driving.

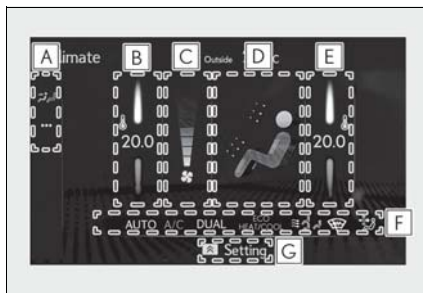

#### **A** Sub menu

Selecting the sub menu item to switch the main screen.



: Display the air conditioning control screen



: Display the option control screen

**B** Adjust the left-hand side temperature setting

**C** Adjust the fan speed setting

**D** Select the air flow mode



: Air flows to the upper body



: Air flows to the upper body and feet



: Air flows to the feet



: Air flows to the feet and the windshield defogger operates

**E** Adjust the right-hand side temperature setting

**F** Function on/off indicators

When the function is on, the indicator illuminates on the control screen.

**G** Sub function menu

When the button on the Remote Touch is pressed, the following functions can be switched on and off.

“AUTO”: Set automatic mode on/off

“Off”: Turn the fan off

“A/C”: Set cooling and dehumidification function

“DUAL”: Adjust the temperature for driver and passenger seats separately (“DUAL” mode)


**ECO HEAT/COOL**: Set eco air conditioning mode

#### ■ Option control screen

Select **...** on the sub menu to display the option control screen.

The functions can be switched on and off.

When the function is on, the indicator illuminates on the screen.

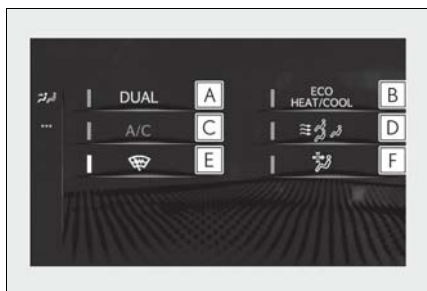

**A** Adjusting the temperature for driver and passenger seats separately (“DUAL” mode)

**B** Set eco air conditioning mode  
Air conditioning and heater output is limited to prioritize fuel economy.


**C** Cooling and dehumidification function

**D** Select S-FLOW mode

**E** Prevent ice from building up on the windshield and wiper blades (Windshield wiper de-icer) (if equipped)

**F** Removing pollen from the air (Micro dust and pollen filter)

### ■ Side display (10.3-inch display model only)

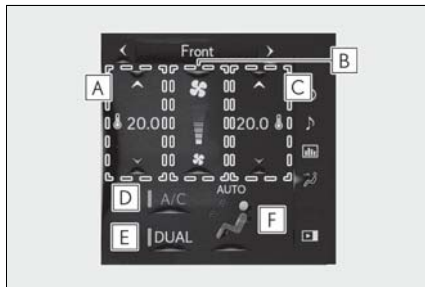

- A** Adjust the left-hand side temperature setting
- B** Adjust the fan speed setting
- C** Adjust the right-hand side temperature setting
- D** Set cooling and dehumidification function on/off

- E** Adjust the temperature for the driver's and front passenger's seats separately ("DUAL" mode)
- F** Select the air flow mode

### Using automatic mode


- 1** Press the "AUTO" button.
- 2** Adjust the temperature setting.
- 3** To stop the operation, press the "OFF" button.

## Seat Heaters (if equipped)/Seat Ventilators (if equipped)

### Seat heaters

#### ■ Front

##### ► Vehicles without seat ventilators

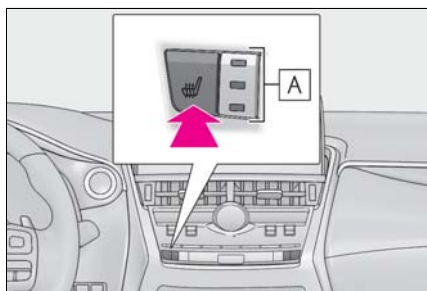


Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The level indicator (amber) **A** light up during operation.

##### ► Vehicles with seat ventilators

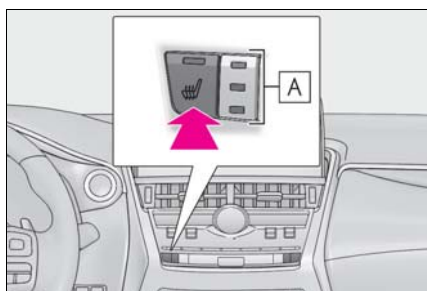


Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The indicator (amber) and level indicator (green) **A** light up during operation.

#### ■ Rear

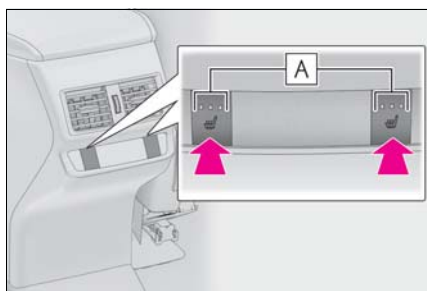


Each time the switch is pressed, the operation condition changes as follows.

Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The level indicator (amber) **A** lights up during operation.

## Seat ventilators (front)

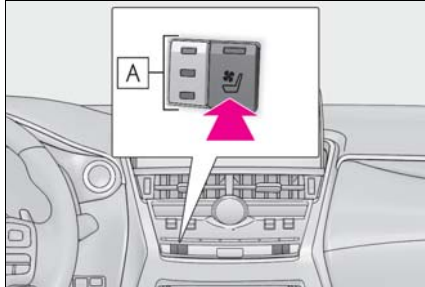

Each time the switch is pressed, the operation condition changes as follows.


Hi (3 segments lit) → Mid (2 segments lit)  
→ Lo (1 segment lit) → Off

The indicator (green) **A** and level indicator (green) light up during operation.

## Voice Command System

### Basic operation

**NOTE:** Wait for the confirmation beep before speaking a command.

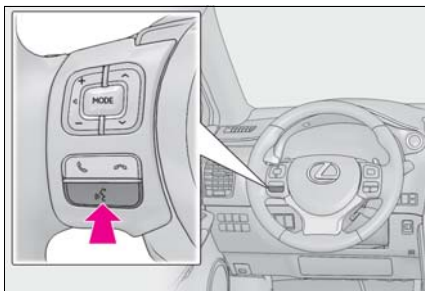

**1** Press the talk switch

Voice guidance for the voice command system can be skipped by pressing the talk switch.

**2** If "Getting Started with Voice" screen is displayed, select "OK" or press the talk switch.

**3** After hearing a beep, say a supported command.

- To display sample commands of the desired function, say the desired function or select the desired function button. To display more commands, select "More Commands".
- Selecting "Help" or saying "Help" prompts the voice command system to offer examples of commands and operation methods.
- Registered POIs, registered names in the contacts list etc., can be said in the place of the "<>" next to the commands.

Continue on to pages 85-89 for a detailed list of Voice Commands for the following categories:

|                                 |      |
|---------------------------------|------|
| Common .....                    | P.85 |
| Top menu .....                  | P.85 |
| Navigation <sup>*1</sup> .....  | P.86 |
| Phone .....                     | P.87 |
| Radio .....                     | P.88 |
| Audio .....                     | P.88 |
| Information <sup>*2</sup> ..... | P.89 |
| Apps .....                      | P.89 |
| Air conditioning .....          | P.89 |

<sup>\*1</sup>: 10.3-inch display model

<sup>\*2</sup>: This function is not made available in some countries, areas, or on some models.

■ Important voice commands information and tips

- Voice commands can be used while driving.
- You must wait until after the beep to say a command.
- If you know what command to use, you can press the talk switch at any time to interrupt the voice guidance.

## Command list

### ■ Common

| Command      | Action                                                                                    |
|--------------|-------------------------------------------------------------------------------------------|
| "Help"       | Displays examples of some of the available commands                                       |
| "Go Back"    | Returns to the previous screen                                                            |
| "Cancel"     | Cancels the voice command system                                                          |
| "Start over" | Returns to top menu screen                                                                |
| "Pause"      | Temporarily pauses a voice session until it is resumed by pressing the talk switch again. |

### ■ Top menu

| Command                            | Action                                         |
|------------------------------------|------------------------------------------------|
| "Show command examples for <menu>" | Displays the command list of the selected menu |
| "More Commands"                    | Displays more commonly used commands           |
| "Voice Settings"                   | Displays Voice Setting screen                  |
| "Train my voice"                   | Displays Train Voice Recognition screen *      |

\*: Vehicle must be parked

## ■ Navigation \*1

| Command                                              | Action                                                                                                                   |
|------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
| "Get directions to <house #, street, city, state>"*2 | Enables setting a destination by saying the address *3,4                                                                 |
| "Find a <POI category/POI name>"                     | Displays a list of <POI category *5/POI name *6> near the current position                                               |
| "Find a <POI> near my destination"                   | Displays a list of <POI> near the destination                                                                            |
| "Find a <POI category> in a city"*2                  | Displays a list of <POI> in a specified city and state *4                                                                |
| "Go Home"                                            | Displays the route to home                                                                                               |
| "Go to Favorite <1-5>"                               | Sets the location registered to the corresponding favorite number as the destination                                     |
| "Show Recent Destinations"                           | Displays recent destinations. Selecting a number from the list will start navigation to the selected recent destination. |
| "Cancel Route"                                       | Cancels the route guidance                                                                                               |
| "Delete destinations"                                | Displays a list of destination to delete *7                                                                              |
| "Show <POI category> icons"                          | Displays the specified point of interest category *5 icons on the map                                                    |
| "Destination Assist"                                 | Connects the system to the Lexus response center                                                                         |

\*1: 10.3-inch display model

\*2: English and French only

\*3: Best recognition results occur when saying the full address without the zipcode

\*4: When the language is set to french, the supported area is only Quebec Province in Canada

\*5: For example; "Gas stations", "Restaurants", etc.

\*6: Major national brands are always supported. Local brands are also supported with a subscription to the Lexus Enform. Contact your Lexus dealer for details.

\*7: Used when multiple destinations are set on a route

## ■ Phone

| Command                        | Action                                                                       |
|--------------------------------|------------------------------------------------------------------------------|
| "Call <contact>"*              | Places a call to the specified contact from the phone book                   |
| "Call <contact> <phonetype>"*  | Places a call to the specified phone type of the contact from the phone book |
| "Dial <phone number>"          | Places a call to the specified phone number                                  |
| "Redial"                       | Places a call to the phone number of the latest outgoing call                |
| "Call Back"                    | Places a call to the phone number of latest incoming call                    |
| "Show Recent Calls"            | Displays the call history screen                                             |
| "Send a message to <contacts>" | Sends a text message to specified contact from the phone book                |

\*: If the system does not recognize the name of a contact, create a voice tag. The name of a contact can also be recognized by adding a voice tag.

## ■ While in a phone call

| Command         | Action                                                       |
|-----------------|--------------------------------------------------------------|
| "Send <digits>" | Sends DTMF tones has specified                               |
| "Mute"          | Mutes the microphone (far side cannot hear the conversation) |
| "Unmute"        | Unmutes the microphone                                       |

## ■ While incoming message notification is displayed

| Command        | Action                                                |
|----------------|-------------------------------------------------------|
| "Read Message" | Reads the incoming message over the vehicle speakers  |
| "Ignore"       | Ignores the incoming message notification             |
| "Reply"        | Initiates sending a reply to the incoming message     |
| "Call"         | Places a call to the phone number of incoming message |

## ■ Radio

| Command                               | Action                                                                                 |
|---------------------------------------|----------------------------------------------------------------------------------------|
| "Tune to <frequency> AM"              | Changes the radio to the specified AM frequency                                        |
| "Tune to <frequency> FM"              | Changes the radio to the specified FM frequency                                        |
| "Play a <genre> station"              | Changes the radio to an FM station of the specified genre <sup>*1</sup>                |
| "Tune to preset <1-36>"               | Changes the radio to the specified preset radio station                                |
| "Tune to a <genre> satellite station" | Changes the radio to a satellite radio channel of the specified genre <sup>*2</sup>    |
| "Tune to <satellite channel name>"    | Changes the radio to the satellite radio channel with the specified name <sup>*2</sup> |
| "Tune to channel <number> on XM"      | Changes the radio to a satellite radio channel of the specified number <sup>*2</sup>   |

\*1: A station list must be built first using the radio screen

\*2: Requires a satellite radio subscription

## ■ Audio<sup>\*</sup>

| Command                                    | Action                                      |
|--------------------------------------------|---------------------------------------------|
| "Play Playlist <name>"                     | Plays tracks from the selected playlist     |
| "Play Artist <name>"                       | Plays tracks from the selected artist       |
| "Play Song <name>"                         | Plays the selected track                    |
| "Play Album <name>"                        | Plays tracks from the selected album        |
| "Play Genre <name>"                        | Plays tracks from the selected genre        |
| "Play Composer <name>"                     | Plays tracks from the selected composer     |
| "Play Podcast <name>"                      | Plays tracks from the selected podcast      |
| "Play Audiobook <name>"                    | Plays tracks from the selected audiobook    |
| "Audio On"                                 | Turns the audio system on                   |
| "Audio Off"                                | Turns the audio system off                  |
| "Change the audio source to <source name>" | Sets the source to the specified audio mode |

\*: The audio device must be connected via a USB cable to use the functionality in this section

### ■ Information \*1

| Command                         | Action                                                               |
|---------------------------------|----------------------------------------------------------------------|
| "Get the Forecast"              | Displays weather information                                         |
| "Get the Forecast for <city>"*2 | Displays weather for the specified city                              |
| "Show Traffic"                  | Displays traffic information                                         |
| "Show Traffic near here"        | Displays traffic information near your current location              |
| "Show Traffic along route"      | Displays traffic information along your current route                |
| "Show Traffic on this street"   | Displays traffic information along road you are currently driving on |
| "Show Traffic for saved route"  | Displays traffic information for a saved route                       |
| "Show Predictive Traffic"       | Displays the predictive traffic map                                  |

\*1: This function is not made available in some countries, areas, or on some models.

\*2: Only major US cities are supported by voice

### ■ Apps\*

| Command         | Action                                               |
|-----------------|------------------------------------------------------|
| "Launch <apps>" | Activates the Lexus Enform App Suite 2.0 application |

\*: When an application is opened and is in full screen mode, pressing the talk switch will start the voice command system and commands for the currently displayed application will be available.


### ■ Air conditioning

| Command                                     | Action                                                                     |
|---------------------------------------------|----------------------------------------------------------------------------|
| "Turn the AC on/Turn the AC off"            | Turns air conditioning system on or off                                    |
| "Change the Fan speed to <#>"               | Changes the set fan speed of the air conditioning system to <#>            |
| "Set temperature to <#> degrees"            | Changes the set temperature of the air conditioning system to <#> degrees* |
| "Increase Temperature/Decrease Temperature" | Increases or decreases the temperature of the air conditioning system      |
| "Increase Fan speed/Decrease Fan Speed"     | Increases or decreases the fan speed of the air conditioning system        |


\*: Only within the possible temperature range of the air conditioning system

## USB/AUX Ports

There are 2 USB ports and an AUX port in the console box.

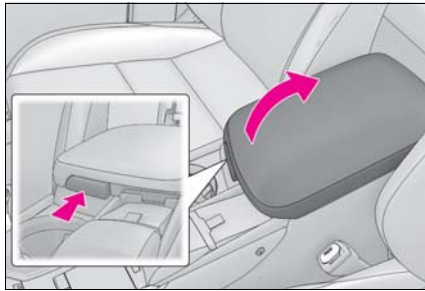

- 1** Press the button to release the lock and lift the armrest.

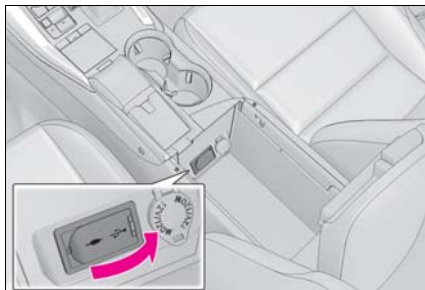

- 2** Open the cover and connect a device.


- Turn on the power of the device if it is not turned on.

## Garage Door Opener

The garage door opener can be programmed using the HomeLink® to operate garage doors, gates, entry doors, door locks, home lighting systems, security systems, and other devices.

### System components

The HomeLink® wireless control system in your vehicle has 3 buttons which can be programmed to operate 3 different devices. Refer to the programming methods on the following pages to determine the method which is appropriate for the device.

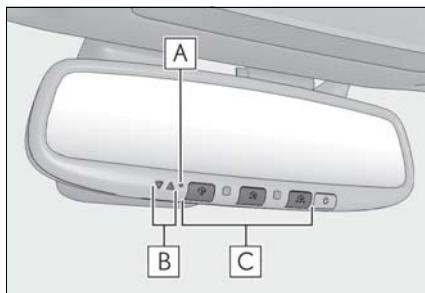

- A** HomeLink® indicator light
- B** Garage door operation indicators
- C** Buttons

#### ■ Before programming HomeLink®

- During programming, it is possible that garage doors, gates, or other devices may operate. For this reason, make sure that people and objects are clear of the garage door or other devices to prevent injury or other potential harm.
- It is recommended that a new battery be placed in the remote control transmitter for more accurate programming.
- Garage door opener motors manufactured after 1995 may be equipped with rolling code protection. If this is the case, you may need a stepladder or other sturdy, safe device to reach the "learn" or "smart" button on the garage door opener motor.

### ■ Programming HomeLink®

Steps **1** through **3** must be performed within 60 seconds, otherwise the indicator light will stop flashing and programming will not be able to be completed.

- 1** Press and release the HomeLink® button you want to program and check that the HomeLink® indicator light flashes orange.
- 2** Point the remote control transmitter for the device at the rear view mirror, 1 to 3 in. (25 to 75 mm) from the HomeLink® buttons.

Keep the HomeLink® indicator light in view while programming.


- 3** Program a device.

#### ► Programming a device other than an entry gate (for U.S.A. owners)



Press and hold the remote control transmitter button until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code), then release the button.

#### ► Programming an entry gate (for U.S.A. owners)/Programming a device in the Canadian market

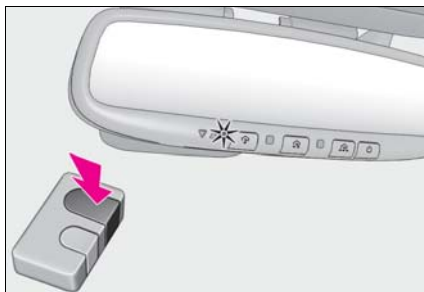


Press and release the remote control transmitter button at 2 second intervals, repeatedly, until the HomeLink® indicator light changes from slowly flashing orange to rapidly flashing green (rolling code) or continuously lit green (fixed code).

- 4 Test the HomeLink<sup>®</sup> operation by pressing the newly programmed button and observing the indicator light:
  - Indicator light illuminates: Programming of a fixed code device has completed. The garage door or other device should operate when a HomeLink<sup>®</sup> button is pressed and released.
  - Indicator light flashes rapidly: The garage door opener motor or other device is equipped with a rolling code. To complete programming, firmly press and hold the HomeLink<sup>®</sup> button for 2 seconds then release it.
  - If the garage door or other device does not operate, proceed to "Programming a rolling code system".
- 5 Repeat the steps above to program another device for any of the remaining HomeLink<sup>®</sup> buttons.


#### ■ Programming a rolling code system

2 or more people may be necessary to complete rolling code programming.

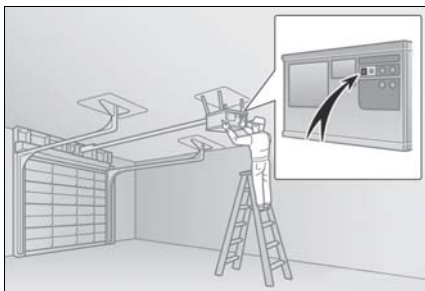


- 1 Locate the "Learn" or "Smart" button on the garage door opener motor in the garage.

This button can usually be found where the hanging antenna wire is attached to the unit. The name and color of the button may vary by manufacturer. Refer to the Owner's manual supplied with the garage door opener motor for details.

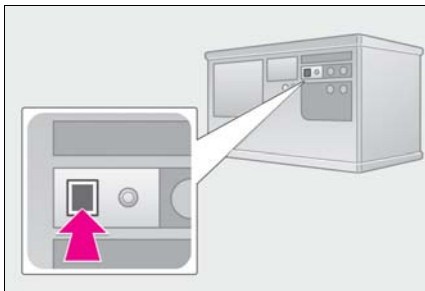

- 2 Press and release the "Learn" or "Smart" button.  
Perform 3 within 30 seconds after performing 2.

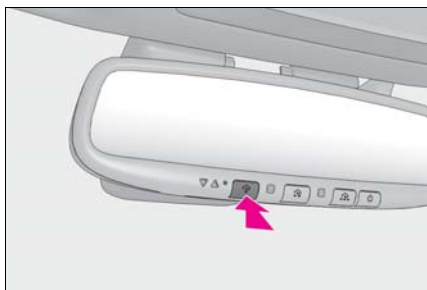

- 3** Press and hold the desired HomeLink<sup>®</sup> button (inside the vehicle) for 2 seconds and release it. Repeat this sequence (press/hold/release) up to 3 times to complete programming. If the garage door opener motor operates when the HomeLink<sup>®</sup> button is pressed, the garage door opener motor recognizes the HomeLink<sup>®</sup> signal.

#### ■ Enabling 2-way communication with a garage door (only available for compatible devices)

When enabled, 2-way communication allows you to check the status of the opening and closing of a garage door through indicators in your vehicle.

2-way communication is only available if the garage door opener motor used is a compatible device. (To check device compatibility, refer to [www.Homelink.com](http://www.Homelink.com).)

- 1** Within 5 seconds after programming the garage door opener has been completed, if the garage door opener motor is trained to HomeLink<sup>®</sup>, both garage door operation indicators will flash rapidly green and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

If the indicators do not flash, perform **2** and **3** within the first 10 presses of the HomeLink<sup>®</sup> button after programming has been completed.

- 2** Press a programmed HomeLink<sup>®</sup> button to operate a garage door.
- 3** Within 1 minute of pressing the HomeLink<sup>®</sup> button, after the garage door operation has stopped, press the "Learn" or "Smart" button on the garage door opener motor. Within 5 seconds of the establishment of 2-way communication with the garage door opener, both garage door operation indicators in the vehicle will flash rapidly green and the light on the garage door opener motor will blink twice, indicating that 2-way communication is enabled.

### ■ Reprogramming a single HomeLink® button

When the following procedure is performed, buttons which already have devices registered to them can be overwritten:

- 1** With one hand, press and hold the desired HomeLink® button.
- 2** When the HomeLink® indicator starts flashing (orange), continue to hold the HomeLink® button and perform "Programming HomeLink®" **1** (it takes 20 seconds for the HomeLink® indicator to start flashing).

### Operating HomeLink®


Press the appropriate HomeLink® button. The HomeLink® indicator light should turn on.

## Lexus Enform Safety Connect (if equipped)

Safety Connect is a subscription-based telematics service that uses Global Positioning System (GPS) data and embedded cellular technology to provide safety and security features to subscribers. Safety Connect is supported by Lexus' designated response center, which operates 24 hours per day, 7 days per week.

Safety Connect service is available by subscription on select, telematics hardware-equipped vehicles.

### System components

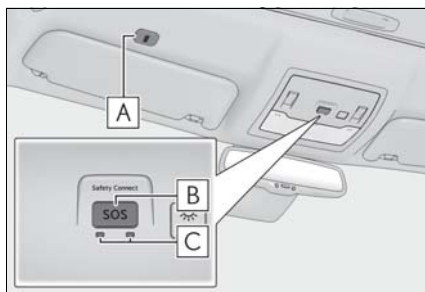

- A** Microphone
- B** "SOS" button
- C** LED light indicators

### Services

Subscribers have the following Safety Connect services available:

- Automatic Collision Notification

In case of either airbag deployment or severe rear-end collision, the system is designed to automatically call the response center. The responding agent receives the vehicle's location and attempts to speak with the vehicle occupants to assess the level of emergency. If the occupants are unable to communicate, the agent automatically treats the call as an emergency, contacts the nearest emergency services provider to describe the situation, and requests that assistance be sent to the location.

- **Stolen Vehicle Location**

If your vehicle is stolen, Safety Connect can work with local authorities to assist them in locating and recovering the vehicle. After filing a police report, call the Safety Connect response center at 1-800-25-LEXUS (1-800-255-3987) and follow the prompts for Safety Connect to initiate this service.

In addition to assisting law enforcement with recovery of a stolen vehicle, Safety-Connect-equipped vehicle location data may, under certain circumstances, be shared with third parties to locate your vehicle. Further information is available at [Lexus.com](http://Lexus.com).

- **Emergency Assistance Button ("SOS")**

In the event of an emergency on the road, push the "SOS" button to reach the Safety Connect response center. The answering agent will determine your vehicle's location, assess the emergency, and dispatch the necessary assistance required.

If you accidentally press the "SOS" button, tell the response-center agent that you are not experiencing an emergency.

- **Enhanced Roadside Assistance**

Enhanced Roadside Assistance adds GPS data to the already included warranty-based Lexus roadside service.

Subscribers can press the "SOS" button to reach a Safety Connect response-center agent, who can help with a wide range of needs, such as: towing, flat tire, fuel delivery, etc.

For a description of the Roadside Assistance services and their limitations, please see the Safety Connect Terms and Conditions, which are available at [Lexus.com](http://Lexus.com).

## **Subscription**

After you have signed the Telematics Subscription Service Agreement and are enrolled, you can begin receiving services.

A variety of subscription terms is available for purchase. Contact your Lexus dealer, call 1-800-25-LEXUS (1-800-255-3987) in the United States (1-800-26-LEXUS in Canada), (1-877-539-8777 in Puerto Rico), or push the "SOS" button in your vehicle for further subscription details.

## **Lexus Enform Remote (if equipped)**

Lexus Enform Remote is a cellular phone application that lets you view and remotely control certain aspects of your vehicle.

For details about the functions and services of this application, refer to <http://www.lexus.com/enform/>.

Function of the Lexus Enform Remote is achieved by using an embedded cellular device in the vehicle (DCM: Data Communication Module).

## **Subscription**

After you sign the Telematics Subscription Service Agreement, download the Lexus Enform Remote app from your cellular phone's app store, and register within the app (or enroll and complete registration at the dealer), you can begin using these services.

A variety of subscription terms are available. Contact your Lexus dealer, or call 1-800-25-LEXUS (1-800-255-3987) for further subscription details.

## **Lexus Enform Service Connect (if equipped)**

Lexus Enform Service Connect uses embedded telematics hardware to collect and transmit vehicle data that allows Lexus to provide:

- Vehicle Health Report (VHR) (Safety Recalls, Service Campaigns, Current Vehicle Alerts, Required Maintenance, and Vehicle Condition Status)
- Maintenance Notifications
- Vehicle Alert Notifications

For details about this service and how to register, refer to <http://www.lexus.com/enform/>.

The Lexus Enform Service Connect is achieved by using a Data Communication Module (DCM) built in the vehicle.

## SiriusXM Satellite Radio

A SiriusXM Satellite Radio is a tuner designed exclusively to receive broadcasts provided under a separate subscription.

For details, refer to the "NAVIGATION SYSTEM OWNER'S MANUAL".

### Subscription

For SiriusXM Services requiring a subscription (such as SiriusXM Satellite Radio), the following paragraph shall be included.

Required SiriusXM Radio monthly subscriptions sold separately after trial period. Subscription fee is consumer only. All fees and programming subject to change. Subscriptions are subject to the Customer Agreement available at [www.siriusxm.com](http://www.siriusxm.com) (U.S.A.) or [www.siriusxm.ca](http://www.siriusxm.ca) (Canada) XM service only available in the 48 contiguous United States and 10 Canadian provinces. © 2011 Sirius XM Radio Inc. Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All other marks, channel names and logos are the property of their respective owners.

For more information, program schedules, and to subscribe or extend subscription after complimentary trial period; more information is available at:

► **U.S.A. Customers:**

Visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-877-447-0011

► **Canadian Customers:**

Visit [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677


## Door Locks

The vehicle can be locked and unlocked using the entry function, wireless remote control or door lock switches.

For details about the entry function or wireless remote control, refer to P.15, 16.


### Unlocking and locking the doors from the inside

#### ■ Door lock switches

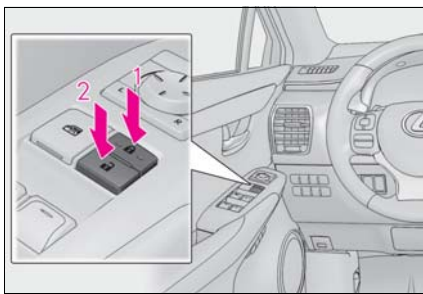

- 1** Locks all the doors
- 2** Unlocks all the doors

#### ■ Using the inside lock buttons

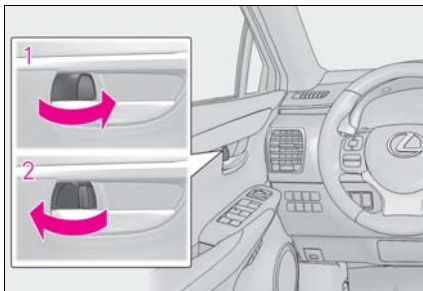


- 1** Locks the door
- 2** Unlocks the door

The front doors can be opened by pulling the inside handle even if the lock buttons are in the lock position.

#### ■ Rear door child-protector lock

The door cannot be opened from inside the vehicle when the lock is set.

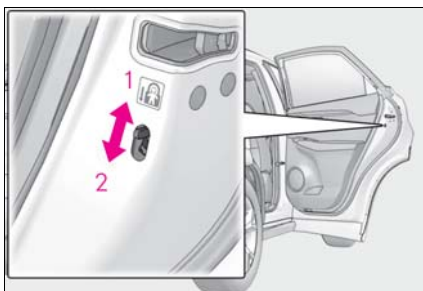


- 1** Unlock
- 2** Lock

These locks can be set to prevent children from opening the rear doors. Push down on each rear door switch to lock both rear doors.

## Power Windows
 
### Opening and closing the power windows




- 1** Closing
- 2** One-touch closing\*
- 3** Opening
- 4** One-touch opening\*

\*: To stop the window partway, operate the switch in the opposite direction.

### To prevent accidental operation (window lock switch)


This function is designed to prevent children from accidentally opening or closing a passenger window.

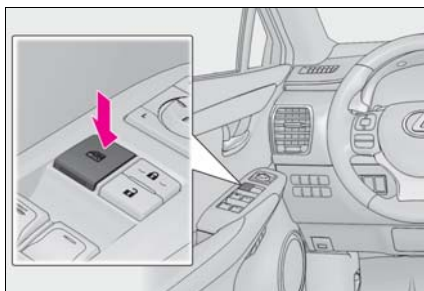

Press the switch down to lock the passenger window.

## Moon Roof (if equipped)

### Opening and closing

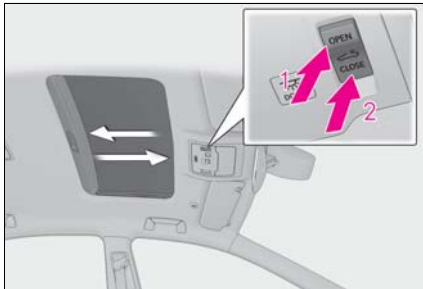

#### 1 Open


Press and hold the "OPEN" switch. The moon roof tilts up and then fully opens automatically.\*

#### 2 Close

Press and hold the "CLOSE" switch. The moon roof fully closes automatically.\*

\*: Lightly press either end of the moon roof open/close switch to stop the moon roof while it is operating.

### Tilting up and down

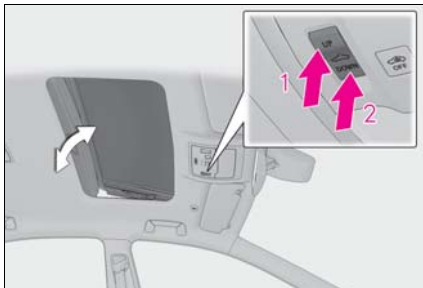

#### 1 Tilt up

Press and hold the "UP" switch. It automatically opens until the tilt up stop position.\*

#### 2 Tilt down

Press and hold the "DOWN" switch. The moon roof full close automatically.\*


\*: Lightly press either end of the moon roof switch to stop the moon roof while it is operating.

## Fuel Tank Cap

### Before refueling the vehicle


- Turn the engine switch off and ensure that all the doors and windows are closed.
- Confirm the type of fuel.

### Opening the fuel tank cap

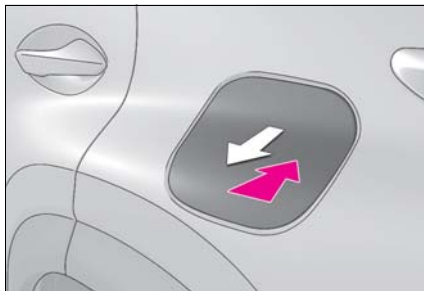

- 1** With all doors unlocked, press the center of the rear edge of the fuel filler door.


Push inward and take your hand away to slightly open the fuel filler door. Then open the door fully by hand.

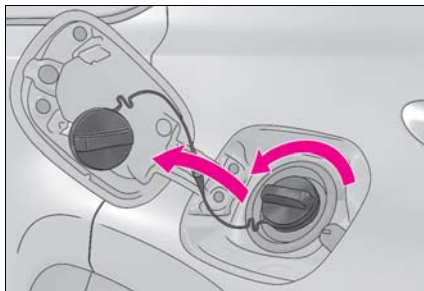

- 2** Turn the fuel tank cap slowly to open and put it into the holder on the fuel filler door.

## Back Door

### Back door opener switch

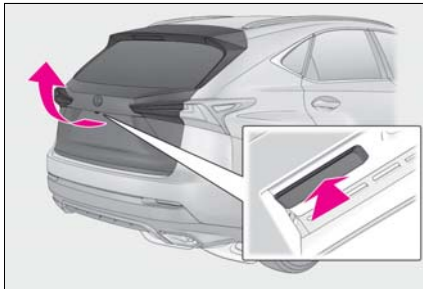

#### ► Vehicles without power back door

Raise the back door while pressing up the back door opener switch.


#### ► Vehicles with power back door

When the back door is unlocked: Press the back door opener switch.

When the back door is locked: While carrying the electronic key on your person, press the back door opener switch.


### Power back door switch

#### ► Instrument panel

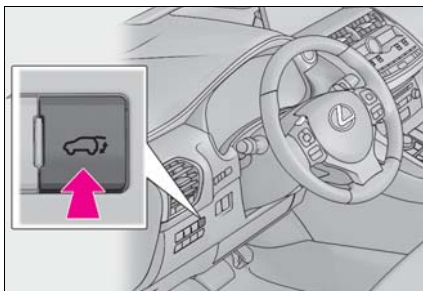

To open or close the back door, press the  for 1 second.

#### ► Power back door

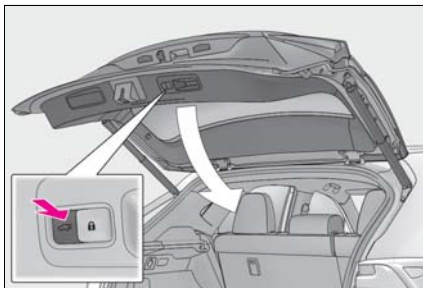


To close the back door, press the .

## Wireless remote control

→P.15

## Kick sensor (vehicles with hands free power back door)

The power back door enables automatic opening and closing of the power back door by putting your foot near the lower center part of the rear bumper and then moving it away.

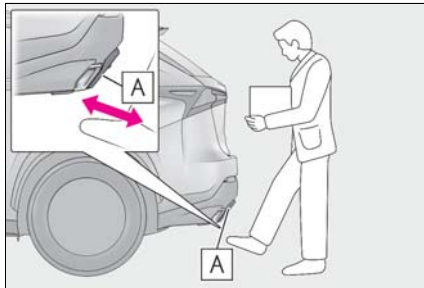

- 1 While carrying an electronic key, put your foot within 3.94 in. (100 mm) of the lower center part of the rear bumper, where the kick sensor **A** is located, and move it away.

When all of the doors are locked:  
When the movement is detected by the kick sensor, all of the doors will be unlocked.

- 2 The buzzer sounds and the power back door begins to operate.

The buzzer sounds and the power back door automatically opens or closes.

To stop the power back door partway or operate it again, use either the kick sensor, the wireless remote control, or power back door switch.

## Back door closer (vehicles with power back door)

In the event that the back door is left slightly open, the back door closer will automatically close it to the fully closed position.

What to do if...

List of Warning/Indicator Lights

Immediately stop the vehicle in a safe place and contact your Lexus dealer. Continuing to drive the vehicle may be dangerous.

|                                                                                   |          |                               |                                                                                   |                                        |
|-----------------------------------------------------------------------------------|----------|-------------------------------|-----------------------------------------------------------------------------------|----------------------------------------|
|  | (U.S.A.) | Brake system warning light    |  | Low engine oil pressure warning light  |
|  | (Canada) |                               |  | High coolant temperature warning light |
|  |          | Charging system warning light |                                                                                   |                                        |

Have the vehicle inspected by your Lexus dealer immediately.

|                                                                                     |          |                                              |                                                                                     |                                                           |
|-------------------------------------------------------------------------------------|----------|----------------------------------------------|-------------------------------------------------------------------------------------|-----------------------------------------------------------|
|    |          | Brake system warning light                   |    | PCS warning light                                         |
|   | (U.S.A.) | Malfunction indicator lamp                   |   | PKSB OFF indicator (if equipped)                          |
|  | (Canada) |                                              |  | Slip indicator light                                      |
|  |          | SRS warning light                            |  | Brake hold operated indicator                             |
|  | (U.S.A.) | ABS warning light                            |  | Tire pressure warning light                               |
|  | (Canada) |                                              |  | Brake Override System / Drive-Start Control warning light |
|  |          | Electric power steering system warning light |                                                                                     |                                                           |

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

### Follow the correction procedures.



(Orange)

LDA indicator



(Flashes)

(U.S.A.)

Parking brake  
indicator



(Flashes)

(Canada)



Low fuel level warning light



Driver's and front passenger's  
seat belt reminder light



Rear passengers' seat belt  
reminder light



Master warning light



(Illuminates  
without  
blinking)

Tire pressure warning light\*

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

### See the "OWNER'S MANUAL"

|                                                                                     |                                                     |                                                                                     |                                                          |
|-------------------------------------------------------------------------------------|-----------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------|
|    | Turn signal indicator                               |    | PKSB OFF indicator<br>(if equipped)                      |
|    | Headlight indicator (U.S.A.)                        |    | Slip indicator light<br>(Flashes)                        |
|    | Tail light indicator (Canada)                       |    | VSC off indicator                                        |
|    | Headlight high beam indicator                       |    | PCS warning light                                        |
|    | Automatic High Beam<br>indicator                    |    | All-wheel drive lock indicator<br>(AWD models only)      |
|    | Fog light indicator                                 |    | (U.S.A.)<br>Parking brake<br>indicator                   |
|   | Eco Driving Indicator Light                         |   | (Canada)                                                 |
|  | Dynamic radar cruise control<br>indicator           |  | Brake hold standby indicator                             |
|  | Cruise control "SET" indicator                      |  | Brake hold operated<br>indicator                         |
|  | Cruise control indicator                            |  | Low outside temperature<br>indicator                     |
|  | LDA indicator<br>(White or<br>green)                |  | BSM outside rear view mirror<br>indicators (if equipped) |
|  | LDA indicator<br>(Flashes in<br>orange)             |  | Security indicator                                       |
|  | Intuitive parking assist<br>indicator (if equipped) |  | "AIR BAG ON/OFF"<br>indicator                            |

For further information, refer to the "OWNER'S MANUAL".

## What to do if...

### See the "OWNER'S MANUAL"



"AIR BAG ON/OFF"  
indicator

#### ● Drive mode indicators



"Eco" indicator



"Sport S+" indicator  
(if equipped)



"Sport" indicator



"Custom" indicator  
(if equipped)



"Sport S" indicator  
(if equipped)

For further information, refer to the "OWNER'S MANUAL".


\*: It also comes on due to natural causes such as natural air leaks and tire inflation pressure changes caused by temperature. Adjust the tire inflation pressure to the specified level. The light will turn off after a few minutes. In case the light does not turn off even if the tire inflation pressure is adjusted, have the system checked by your Lexus dealer.

## What to do if...


### If the electronic key does not operate properly

#### Locking and unlocking the door

##### ■ Unlocking the door

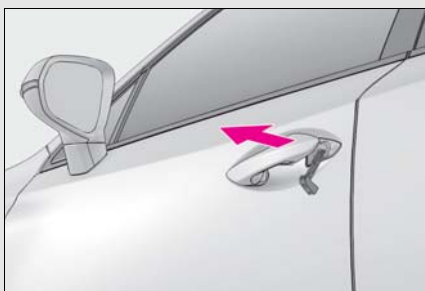

- 1 Insert the mechanical key while pulling on the driver's door handle.

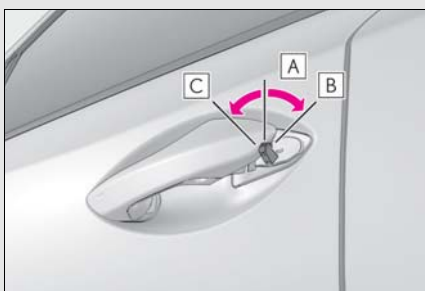


- 2 Turn the key in order to perform the following operations.

- A** Unlocking the door
- B** Opens the windows and moon roof\* (turn and hold)
- C** Closes the windows and moon roof\* (turn and hold)

\*: This setting must be customized at your Lexus dealer

- 3 Remove the key, return the handle, and then pull the handle again.

##### ■ Locking the door

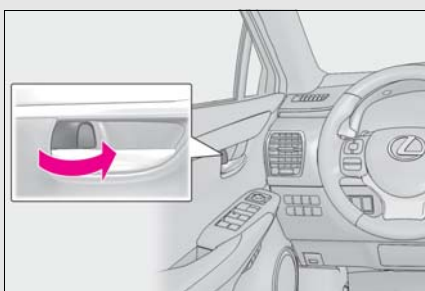


- 1 Move the inside lock button to the lock position.

- 2 Close the door.

## What to do if...

### Starting the engine

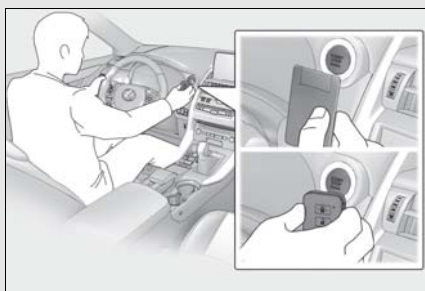

**1** Ensure that the shift lever is in P and depress the brake pedal.


**2** Touch the Lexus emblem side of the electronic key to the engine switch.

When the electronic key is detected, a buzzer sounds and the engine switch will turn to IGNITION ON mode.

When the smart access system with push-button start is deactivated in customization setting, the engine switch will turn to ACCESSORY mode.

**3** Firmly depress the brake pedal and check that message shown on the multi-information display.

**4** Press the engine switch.

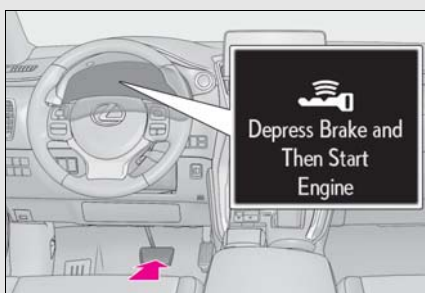

In the event that the engine still cannot be operated, contact your Lexus dealer.

If the electronic key battery becomes depleted, a warning message will be shown on the multi-information display. Replace the battery with a new one. For instructions on replacing the battery, refer to the "OWNER'S MANUAL".

If you need further assistance, contact your Lexus dealer.

### What to do if...

#### If the engine will not start

Make sure that the correct operating procedures have been followed.

##### Brake pedal

Make sure that the brake pedal is firmly depressed when attempting to start the engine. (→P.17)

If the engine still does not start, see the "OWNER'S MANUAL" for more information or contact your Lexus dealer.



#### **Your Lexus dealer**

Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, please call the following number:

#### **■ U.S. OWNERS**

- In the U.S. mainland or Canada:

Lexus Roadside Assistance

**1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)**

- In Hawaii:

Servco Automotive Roadside Assistance/Customer Services

**1-800-25-LEXUS or 1-800-255-3987 (Toll-Free)**

#### **■ CANADIAN OWNERS**

- In Canada or the U.S. mainland:

Lexus Roadside Assistance/Customer Service

**1-800-26-LEXUS or 1-800-265-3987 (Toll-Free)**

Please access our **websites** for further information.

- The U.S. mainland: **[www.lexus.com](http://www.lexus.com)**

- Hawaii: **[www.servcolexus.com](http://www.servcolexus.com)**

- Canada: **[www.lexus.ca](http://www.lexus.ca)**

©2018 TOYOTA MOTOR CORPORATION

All rights reserved. This material may not be reproduced or copied, in whole or in part, without the written permission of Toyota Motor Corporation.