

FOREWORD

Welcome to the growing group of value-conscious people who drive Lexus vehicles. We are proud of the advanced engineering and quality construction of each vehicle we build.

This Owner's Manual explains the features of your new Lexus. Please read it and follow the instructions carefully so that you can enjoy many years of safe motoring.

When it comes to service, remember that your Lexus dealer knows your vehicle best and is interested in your complete satisfaction. Your Lexus dealer will provide quality maintenance and any other assistance you may require.

If there is not a Lexus dealer near you, or you need emergency assistance for any reason, please call the following number:

U.S. OWNERS

- When traveling in the U.S. mainland or Canada:
Lexus Roadside Assistance 1-800-25-LEXUS (Toll-Free)
(1-800-255-3987)
- HAWAII:
Lexus Customer Service Assistance 1-800-25-LEXUS (Toll-Free)
(1-800-255-3987)

CANADIAN OWNERS

- When traveling in Canada or the U.S. mainland:
Lexus Roadside Assistance/Customer Service 1-800-26-LEXUS (Toll-Free)
(1-800-265-3987)

Please leave this Owner's Manual in this vehicle at the time of resale. The next owner will need this information also.

All information and specifications in this manual are current at the time of printing. However, because of the Lexus policy of continual product improvement, we reserve the right to make changes at any time without notice.

Please note that this manual applies to all models and explains all equipment, including options. Therefore, you may find some explanations for equipment not installed on your vehicle.

TOYOTA MOTOR CORPORATION

INTRODUCTION

New vehicle warranty

Your new vehicle is covered by the following Lexus limited warranties:

- New vehicle warranty
- Emission control systems warranty
- Others

For further information, please refer to the "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet".

Your responsibility for maintenance

It is the owner's responsibility to make sure the specified maintenance is performed. Section 5 of this Owner's Manual gives details of these maintenance requirements. Included in Section 6 is general maintenance. For scheduled maintenance information, please refer to the "Owner's Manual Supplement/Scheduled Maintenance".

Accessories, spare parts and modification of your Lexus

A wide variety of non-genuine spare parts and accessories for Lexus vehicles are currently available in the market. You should know that Toyota does not warrant these products and is not responsible for their performance, repair, or replacement, or for any damage they may cause to, or adverse effect they may have on, your Lexus vehicle.

This vehicle should not be modified with non-genuine Lexus products. Modification with non-genuine Lexus products could affect its performance, safety or durability, and may even violate governmental regulations. In addition, damage or performance problems resulting from the modification may not be covered under warranty.

Spark ignition system of your Lexus

The spark ignition system in your Lexus meets all requirements of the Canadian Interference-Causing Equipment Standard.

Installation of a mobile two-way radio system

As the installation of a mobile two-way radio system in your vehicle could affect electronic systems such as the multiport fuel injection system/sequential multiport fuel injection system, cruise control system, anti-lock brake system, SRS airbag system and seat belt pretensioner system, be sure to check with your Lexus dealer for precautionary measures or special instructions regarding installation.

Scrapping of your Lexus

The SRS airbag and seat belt pretensioner devices in your Lexus contain explosive chemicals. If the vehicle is scrapped with the airbags and seat belt pretensioners left as they are, this may cause an accident such as fire. Be sure to have the systems of the SRS airbag and seat belt pretensioner removed and disposed of by a qualified service shop or by your Lexus dealer before you scrap your vehicle.

HOW TO USE THIS MANUAL

The contents of this manual are explained briefly on this page to help you make the best use of the manual. Please read this page and the rest of the Owner's Manual carefully to make sure you fully understand the operation of your vehicle.

This will help you enjoy safe and comfortable driving.

TABLE OF CONTENTS

The table of contents and the pictorial index provide easy reference to the appropriate pages.

BASIC OPERATION – QUICK REFERENCE

Operation of basic equipment is briefly explained in an easily understandable way for quick reference.

SECTION 1 – INSTRUMENTS AND CONTROLS

The vehicle's equipment is divided into the 7 groups listed below. Use of the equipment is explained, including any points you should pay particular attention to.

1. Keys and doors
2. Switches
3. Gauges, meters and service reminder indicators
4. Interior equipment
5. Exterior equipment
6. Comfort adjustment
7. Theft deterrent

SECTION 2 – AIR CONDITIONING AND AUDIO

The features of the vehicle's air conditioning and audio are explained in detail. Be sure to read this section so that you can make full use of them.

SECTION 3 – STARTING AND DRIVING

Starting the engine, driving, stopping, operation of features affecting vehicle handling, hints on vehicle safety and safe driving techniques are all explained. Please read everything in this section, and remember – drive safely!

SECTION 4 – IN CASE OF AN EMERGENCY

This section explains what to do in the event of an urgent situation such as the engine not starting or getting a flat tire, etc. If such a problem occurs, check the contents of this Owner's Manual and follow the instructions given.

SECTION 5 – MAINTENANCE

This section explains the importance of regular maintenance. Regular and periodic inspection and maintenance of your Lexus will help to keep your vehicle in its best condition.

SECTION 6 – SERVICE PROCEDURES AND SPECIFICATIONS

Simple maintenance procedure and service data are provided here for your reference should you wish to perform inspection and maintenance yourself.

HOW TO USE THIS MANUAL

INDEX

The page number is listed for each item in the Owner's Manual so that you can rapidly find the item and page you are searching for.


GAS STATION INFORMATION

The information you need to know for appropriate servicing at the gas station is provided here.

QUICK INDEX

This is designed so that you can quickly find the needed information when an urgent situation arises.

Safety symbol

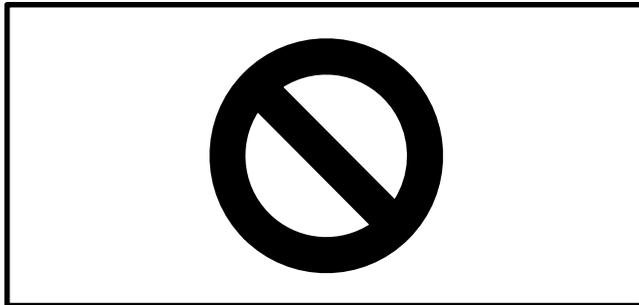

In this manual, you will also see a circle with a slash through it. This means "Do not", "Do not do this", or "Do not let this happen".

Safety and vehicle damage warnings

In this manual you will see CAUTION and NOTICE warnings. These are used in the following ways:

CAUTION

This is a warning against something which may cause injury to people if the warning is ignored. You are informed what you must or must not do in order to avoid or reduce the risk to yourself and other people.

NOTICE

This is a warning against something which may cause damage to the vehicle or its equipment if the warning is ignored. You are informed what you must or must not do in order to avoid or reduce the risk of damage to your Lexus and its equipment.

Your Lexus Owner's Manual provides you with a considerable amount of information. To use this information most effectively, please take the time to familiarize yourself with the contents and use of the manual.

INSTRUMENT PANEL




PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1	<i>Power door lock switch and power window switches</i>	11	<i>Automatic air conditioning controls</i>
	18, 28		124
2	<i>Power rear view mirror control switches</i>	12	<i>Car audio</i>
	82		138
3	<i>Headlight cleaner switch</i>	13	<i>Seat heater switches</i>
	26		30
4	<i>Headlight, turn signal and fog light switch</i>	14	<i>Glove box</i>
	22, 25		53
5	<i>Instrument panel light control</i>	15	<i>Parking brake lever</i>
	46		168
6	<i>Cruise control switch</i>	16	<i>Driving pattern selector switch</i>
	180		169
7	<i>Wiper and washer switches</i>	17	<i>Ashtray</i>
	25		52
8	<i>Emergency flasher switch</i>	18	<i>Cigarette lighter</i>
	30		52
9	<i>Outside temperature display/Clock</i>	19	<i>Automatic transmission selector lever</i>
	50		169
10	<i>Front passenger's seat belt reminder light</i>	20	<i>Traction control system off switch</i>
	40		183
		21	<i>Hood lock release lever</i>
			64

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in U. S. A.)

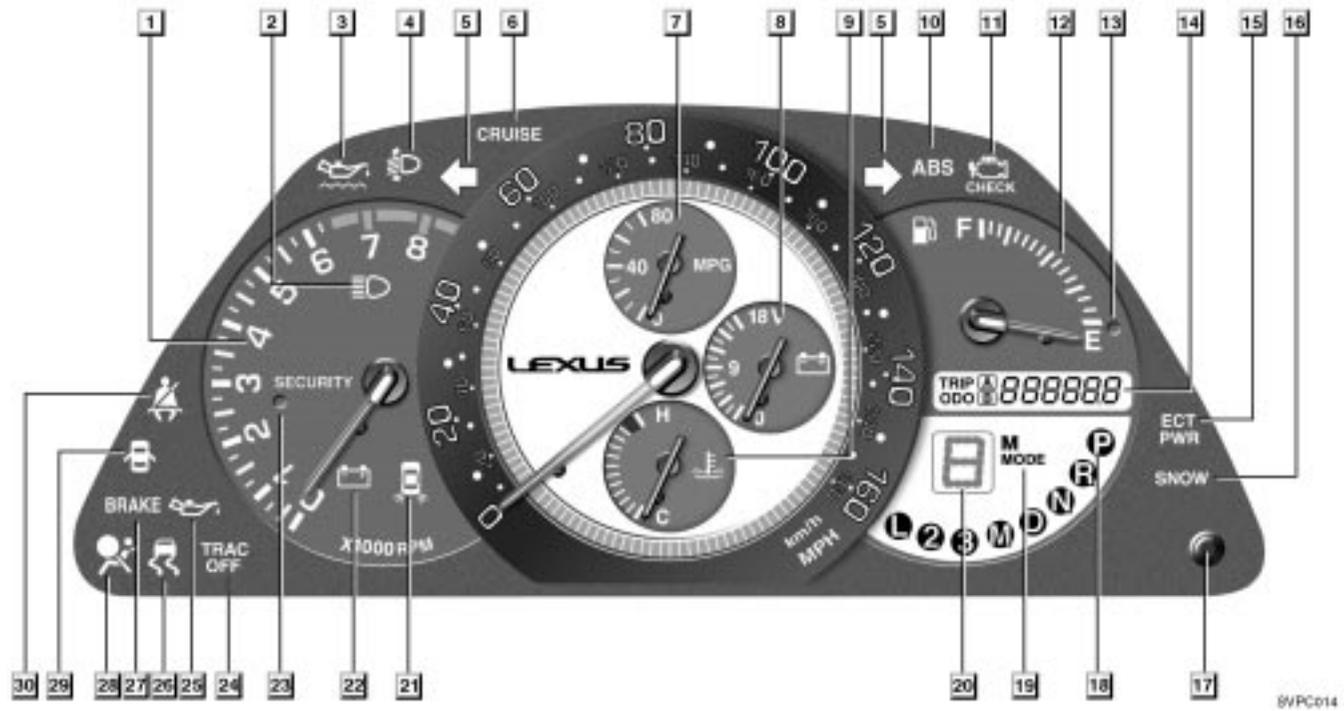


PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1	<i>Tachometer</i>	16	<i>Snow mode indicator light</i>
	37		171
2	<i>Headlight high beam indicator light</i>	17	<i>ODO/TRIP knob</i>
	24		38
3	<i>Low engine oil level warning light</i>	18	<i>Automatic transmission indicator lights</i>
	42		169
4	<i>Automatic headlight leveling system warning light</i>	19	<i>M mode indicator</i>
	23		173
5	<i>Turn signal indicator lights</i>	20	<i>Gear position indicator for manual control</i>
	24		173
6	<i>Cruise control indicator light</i>	21	<i>Rear light failure warning light</i>
	180		44
7	<i>Momentary fuel consumption meter</i>	22	<i>Discharge warning light</i>
	36		41
8	<i>Voltmeter</i>	23	<i>Security indicator light</i>
	36		120
9	<i>Engine coolant temperature gauge</i>	24	<i>Traction control system off indicator/warning light</i>
	35		44
10	<i>Anti-lock brake system warning light</i>	25	<i>Low engine oil pressure warning light</i>
	43		42
11	<i>Malfunction indicator lamp</i>	26	<i>Slip indicator light</i>
	43		183
12	<i>Fuel gauge</i>	27	<i>Brake system warning light</i>
	34		39
13	<i>Low fuel level warning light</i>	28	<i>SRS warning light</i>
	44		41
14	<i>Odometer and trip meter</i>	29	<i>Open door warning light</i>
	38		44
15	<i>Power mode indicator light</i>	30	<i>Driver's seat belt reminder light</i>
	171		40

For detailed information, refer to the description given in each section.

INSTRUMENT CLUSTER (Vehicles sold in Canada)

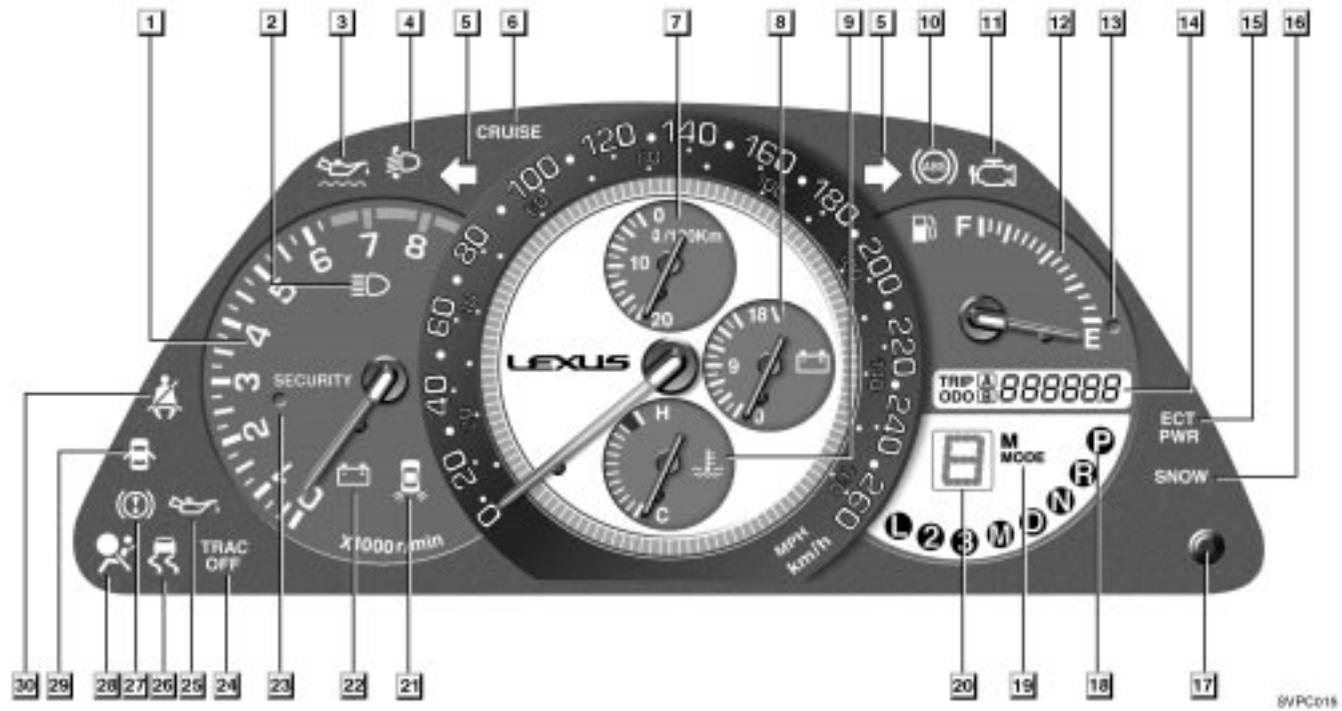


8VPC015

PICTORIAL INDEX

	<i>Page</i>		<i>Page</i>
1	<i>Tachometer</i>	16	<i>Snow mode indicator light</i>
	37		171
2	<i>Headlight high beam indicator light</i>	17	<i>ODO/TRIP knob</i>
	24		38
3	<i>Low engine oil level warning light</i>	18	<i>Automatic transmission indicator lights</i>
	42		169
4	<i>Automatic headlight leveling system warning light</i>	19	<i>M mode indicator</i>
	23		173
5	<i>Turn signal indicator lights</i>	20	<i>Gear position indicator for manual control</i>
	24		173
6	<i>Cruise control indicator light</i>	21	<i>Rear light failure warning light</i>
	180		44
7	<i>Momentary fuel consumption meter</i>	22	<i>Discharge warning light</i>
	36		41
8	<i>Voltmeter</i>	23	<i>Security indicator light</i>
	36		120
9	<i>Engine coolant temperature gauge</i>	24	<i>Traction control system off indicator/warning light</i>
	35		44
10	<i>Anti-lock brake system warning light</i>	25	<i>Low oil pressure warning light</i>
	43		42
11	<i>Malfunction indicator lamp</i>	26	<i>Slip indicator light</i>
	43		183
12	<i>Fuel gauge</i>	27	<i>Brake system warning light</i>
	34		39
13	<i>Low fuel level warning light</i>	28	<i>SRS warning light</i>
	44		41
14	<i>Odometer and trip meter</i>	29	<i>Open door warning light</i>
	38		44
15	<i>Power mode indicator light</i>	30	<i>Driver's seat belt reminder light</i>
	171		40

For detailed information, refer to the description given in each section.

SEAT AND STEERING WHEEL

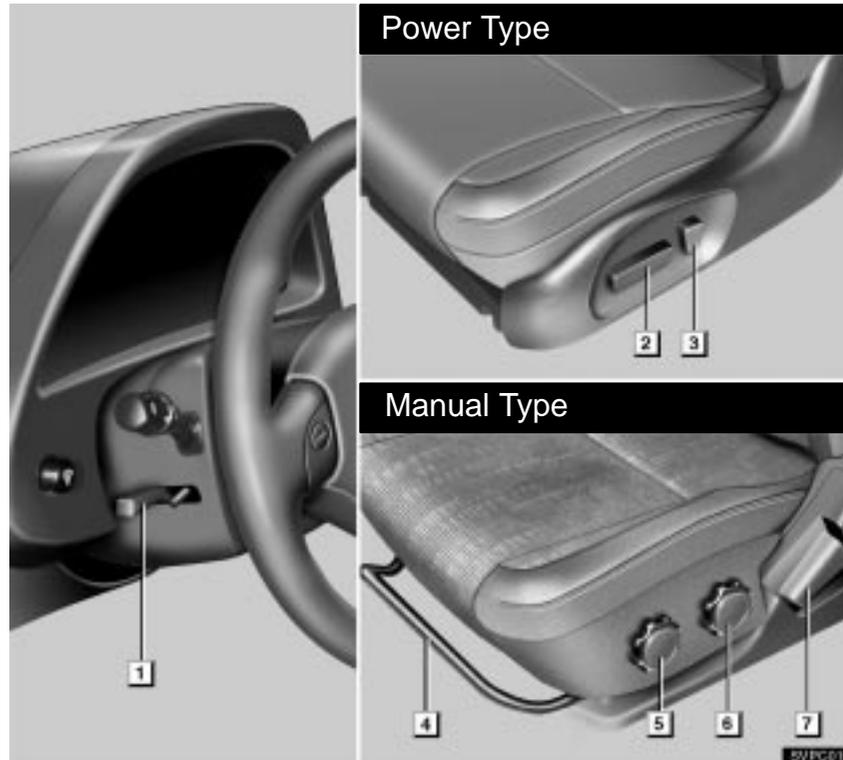


	<i>Page</i>
1 <i>Tilt steering adjustment lever</i>	81
2 <i>Seat position, seat cushion angle and height control switch</i>	77, 78
3 <i>Seatback angle control switch</i> ...	77
4 <i>Seat position lock release lever</i>	73
5 <i>Seat cushion front edge angle adjusting knob</i>	75
6 <i>Seat cushion height adjusting knob</i>	74
7 <i>Seatback lock release lever</i>	74

For detailed information, refer to the description given in each section.

PICTORIAL INDEX

EXTERIOR VIEW

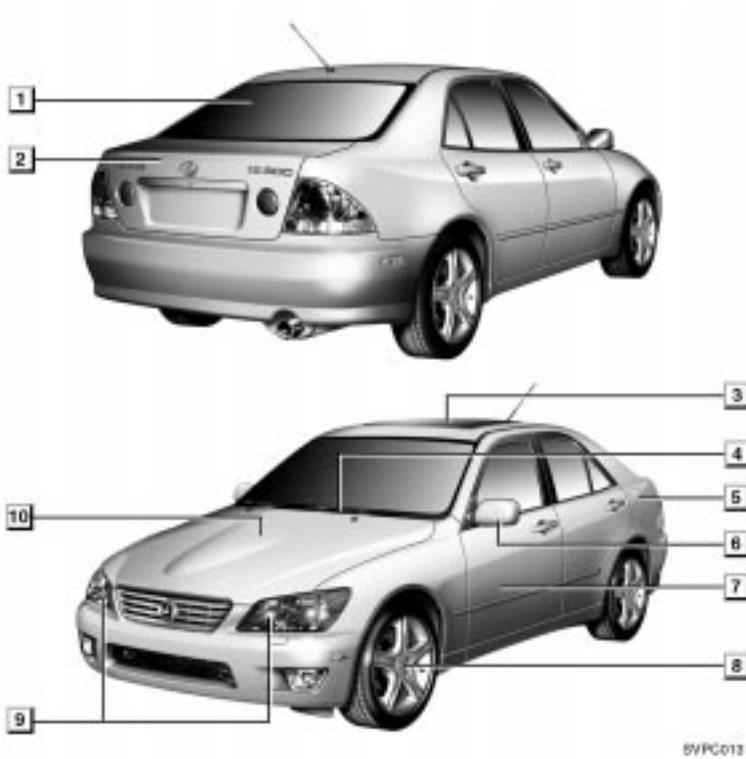

	<i>Page</i>
1 Rear window defogger	27
2 Trunk lid	65
3 Moon roof	69
4 Wiper and washer	25, 274
5 Fuel filler door	67
6 Outside rear view mirror	81
7 Door	17
8 Tire and wheel	254
9 Headlights	22, 276
10 Hood	64

For detailed information, refer to the description given in each section.

BASIC OPERATION


QUICK REFERENCE

Driver's seat 2
Steering wheel 3
Automatic transmission 4
Headlight and turn signal switch 5
Wiper switch 6

BASIC OPERATION – QUICK REFERENCE

1. DRIVER'S SEAT

Power Type

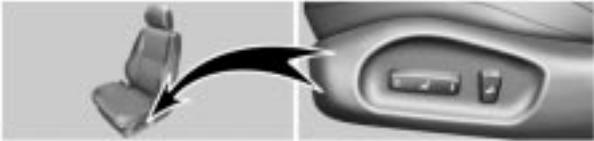

Seat adjustment

	Seat position		
	Seat cushion angle		
			
Seat cushion height			
	Seatback angle		
—	Head restraint height		
—	Head restraint angle		

SVBA011

Manual Type



Seat adjustment

	Seat position	
	Seatback angle	
	Seat cushion height	
	Seat cushion angle	
	Head restraint height	
	Head restraint angle	

SVBA012

2. STEERING WHEEL

• TILT STEERING WHEEL



To tilt the steering wheel up or down to the desired angle:

1. Pull the lever backward while holding the steering wheel.
2. Up or down the steering wheel to the desired angle.
3. Release the lever.

3. AUTOMATIC TRANSMISSION




SELECTOR LEVER POSITION

- P:** Parking, engine starting and key removal position
- R:** Reverse position
- N:** Neutral position
- D:** Normal driving position (Shifting into overdrive possible)
- M:** Position for manual shifting up or downshifting (Shifting into overdrive not possible)*
- 3, 2:** Position for more powerful engine braking
- L:** Position for maximum engine braking

*:When the cruise control is being used, even if you downshift from "D" to "M", engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 182.

OPERATION OF SELECTOR LEVER

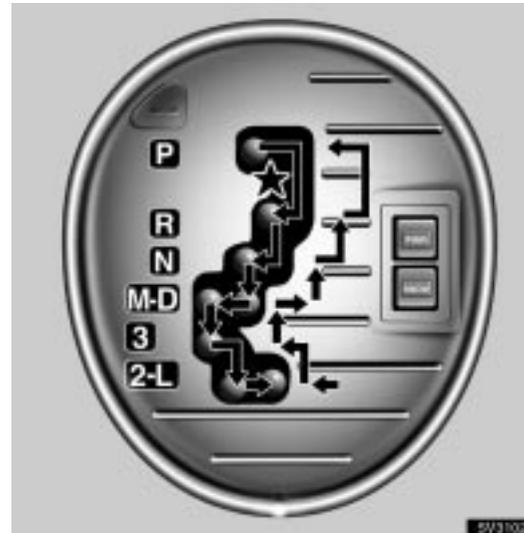

★ Shift while pressing the brake pedal. (Ignition switch must be in the "ON" position.)

4. HEADLIGHT AND TURN SIGNAL SWITCH

• HEADLIGHT SWITCH

With the ignition OFF

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on.
	Automatic light control

SSBA0116

With the engine started and parking brake released

	Parking, tail, license plate, side marker and instrument panel lights turn on.
	Headlights also turn on at full intensity.
	Automatic light control

SSBA0116

	High beam
	Headlight flasher

SSBA0116

• TURN SIGNAL SWITCH

	Right or left turn
	Lane change (Right or left)

SSBA0116

BASIC OPERATION – QUICK REFERENCE

5. WIPER SWITCH

	Mist wiper operation
	Intermittent operation
	Low speed operation
	High speed operation
	Washer on

©2008 GM

SECTION 1 - 1

INSTRUMENTS AND CONTROLS

Keys and doors

Keys	8
Engine immobiliser system	10
Wireless remote control	11
Doors	17

KEYS AND DOORS

KEYS



- 1 Master key (black) – The master key works in every lock. For your Lexus dealer to make you a new key with built-in transponder chip, your dealer will need it.**
- 2 Sub key (gray) – The sub key will not open the trunk and the glove box.**
- 3 Key number plate – Keep the plate in a safe place such as your wallet, not in the vehicle.**

A transponder chip for engine immobiliser system has been filled in the head of the master and sub keys. These chips are needed to enable the system to function correctly, so be careful not to lose these keys. If you make your own duplicate key, you will not be able to cancel the system or start the engine.

To protect things locked in the trunk or glove box when you have your vehicle parked, leave the sub key with the attendant.

Since the doors and trunk lid can be locked without a key, you should always carry a spare master key in case you accidentally lock your keys inside the vehicle.

If you should lose your keys or if you need additional keys, duplicates can be made by a Lexus dealer using the key number.

We recommend you to write down the key number and keep it in safe place.



Since a transponder chip is not built in this flat key, you cannot start the engine with this key. Use this key to release the lock in case you accidentally lock your keys inside the vehicle or trunk.

Insert your flat key in its key case as shown. We recommend that you always carry this with you for emergency use. Do not leave it in your vehicle.

NOTICE

- Do not let the key case become bent as the key may fall out or become bent also.
- The flat key is designed for emergency use only.



When using a key containing a transponder chip, observe the following precautions:

- When starting the engine, do not use the key with a key ring resting on the key grip and do not press the key ring against the key grip. Otherwise the engine may not start, or may stop soon after it starts.



- When starting the engine, do not use the key with other transponder keys around (including keys of other vehicles) and do not press other key plates against the key grip. Otherwise the engine may not start, or may stop soon after it starts. If this happens, remove the key once and then insert it again after taking off other transponder keys (including keys of other vehicles) from the ring or while gripping or covering them with your hand to start the engine.

KEYS AND DOORS



- ***Do not bend the key grip.***
- ***Do not cover the key grip with any material that cuts off electromagnetic waves.***
- ***Do not knock the key hard against other objects.***
- ***Do not leave the key exposed to high temperatures for a long period, such as on the dashboard and hood under the direct sunlight.***
- ***Do not put the key in water or wash it in an ultrasonic washer.***
- ***Do not use the key with electromagnetic materials.***

ENGINE IMMOBILISER SYSTEM



The engine immobiliser system is a theft prevention system. When you insert the key in the ignition switch, the transponder chip in the key's head transmits an electronic code to the vehicle. The engine will start, only when the electronic code in the chip corresponds to the registered ID code for the vehicle.

The system is automatically set when the key is removed from the ignition switch. At this time, the security indicator light flashes. When you insert the key in the ignition switch, the security indicator light goes out and the system is canceled automatically, which enables the engine to start.

For your Lexus dealer to make you a new key with built-in transponder chip, your dealer will need your key number and master key. However, there is a limit to the number of additional keys your Lexus dealer can make for you.

If you make your own duplicate key, you will not be able to cancel the system or start the engine.

For vehicles sold in U.S.A.

FCC ID: MOZ RI-4ATY
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.


CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

WIRELESS REMOTE CONTROL *

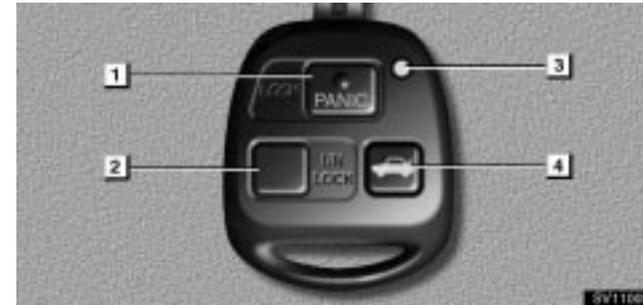

- 1 Locking the doors and sounding an alarm
- 2 Unlocking the doors
- 3 Indicator light
- 4 Unlocking the trunk lid

*NOTE: *This feature can be set inoperative as vehicle theft deterrent measure in case of the loss of the wireless remote control key. Ask your Lexus dealer for details.*

When you operate any button on the key, push it slowly and surely.

The operational range of the wireless remote control is approximately 1 meter (3 ft.). The effective range may vary with different conditions. To activate the wireless remote control without fail, do it approximately 1 meter (3 ft.) from your Lexus.

KEYS AND DOORS

In the following cases, the battery in the key may be discharged. If this is a case, replace it using a special screwdriver.

- The remote control does not work.
- The operational range of wireless remote control becomes extremely short.
- The indicator light on the key is dimmed or does not come on.

For the replacement of the battery, see "Replacing the battery" on page 15. You can also have the battery of the key replaced by your Lexus dealer.

If you lose the wireless key, contact your Lexus dealer as soon as possible to avoid the possibility of theft, or an accident.

You can use up to 4 wireless remote control keys for the same vehicle. Contact your Lexus dealer for detailed information.

The wireless remote control key is an electronic component. Observe the following instructions in order not to cause damage to the key.

- Do not leave the wireless remote control key on places where the temperature becomes high such as on the dashboard.
- Do not disassemble it.
- Avoid knocking it hard against other objects or dropping it.
- Avoid putting it in water.

Locking/Unlocking the doors

When you push the "LOCK" button on the key briefly, all the doors can be locked from outside the vehicle.

At this time, one beep sounds* and the emergency flashers flash once.** However, when you push the "LOCK" button with any door not closed securely, the buzzer sounds for 10 seconds.*** To stop the buzzer, close all the doors securely or push the "UNLOCK" button. If the key is in the ignition switch, locking cannot be done.

Make sure all the doors are locked when you leave the vehicle. Push the "LOCK" button once again. If they were already locked, one beep sounds and the emergency flashers will flash.

*NOTE: *The beep sound can be set not to sound. **The emergency flasher can be set not to flash. ***The buzzer can be set not to sound if a door is not closed securely. Ask your Lexus dealer for details.*

NOTICE

Do not push the "LOCK" button any longer than 2 to 3 seconds. Pushing the button longer activates an alarm. For details, see page 14.

When you push the "UNLOCK" button, the driver's door is unlocked. Pushing that button once again within 3 seconds from the first push, all other doors are also unlocked.*

*NOTE: *The 2-step unlocking function can be changed. Ask your Lexus dealer for details.*

At this time, two beeps sound* and the emergency flashers flash twice.** Together with the activation of unlocking, the interior light comes on for 15 seconds if the interior light switch is in "DOOR" position.*** However, this function does not work when the ignition key is in the "ON" position. For further information, see "Interior lights" on page 49.

You have 30 seconds to open a door after using the wireless remote unlock feature.**** If a door is not opened by then, all the doors will be automatically locked again.

Even if the "LOCK" or "UNLOCK" switch is kept pressed in, the locking or unlocking operation is not repeated. Release the button and then push again.

*NOTE: *The beep sound can be set not to sound. **The emergency flashers can be set not to flash. ***The interior light can be set not to come on or the duration of lighting can be changed. ****The time before automatic re-locking can be changed. Ask your Lexus dealer for details.*

Unlocking the trunk lid




When you keep the button pushed for about 1 second, you can unlock the trunk lid.* One beep sounds.

This function does not work when the key is in the ignition switch.

*NOTE: *The operation method can be changed. Ask your Lexus dealer for details.*

KEYS AND DOORS

Sounding an alarm*

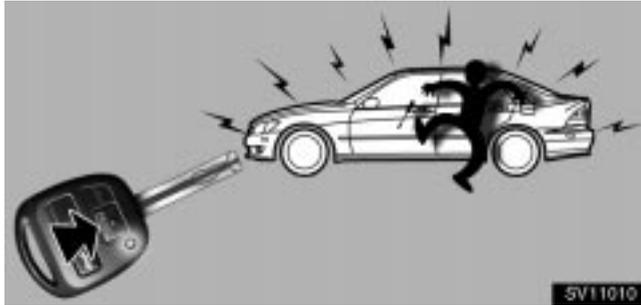

When you push the "PANIC" button for about 2 to 3 seconds, an alarm sounds to deter any person trying to break into or damage your vehicle.

If you want to stop the alarm, push any button.

This function does not work when the ignition key is in the "ON" position.

*NOTE: *The alarm can be set not to sound. Ask your Lexus dealer for details.*

For vehicles sold in U.S.A.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

FCC WARNING:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For vehicles sold in Canada

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Replacing the battery

When you replace the battery, prepare a lithium battery CR1616 and a special screwdriver.



CAUTION

Special care should be taken that small children do not swallow the removed battery or components.

NOTICE

- *When replacing the battery, be careful not to lose the components, screws and O-ring.*
- *Replace only with the same or equivalent type recommended by the manufacturer.*
- *Dispose of used battery according to the local laws.*




1. Remove the screw, and then the cover while pushing it in the arrow direction.

KEYS AND DOORS



2. Remove the module from the key frame.

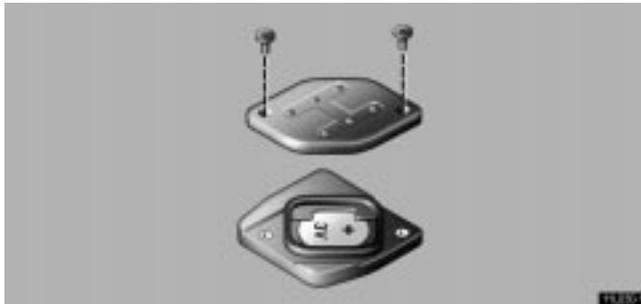

3. Remove the 2 screws to take out the lid of the module.

4. Take out the discharged battery and put a new battery with the positive side up.

NOTICE

- *Make sure the positive side and negative side of the battery should be faced correctly.*
- *Do not replace the battery with wet hands. Water may cause unexpected rust.*
- *Do not touch or move any components inside of the transmitter, or it may interfere with proper operation.*
- *Be careful not to bend the electrode of the battery insertion and that dust or oils do not adhere to the inside of the module.*
- *Take care not to lose the screws and O-ring.*

5. Install the lid with the 2 screws.

NOTICE


Take care not to damage or bend the O-ring when installing.

6. Install the module into the key frame and secure the cover with the screw.

7. When pushing any switch on the wireless key, make sure the indicator light comes on.

DOORS

Locking with key

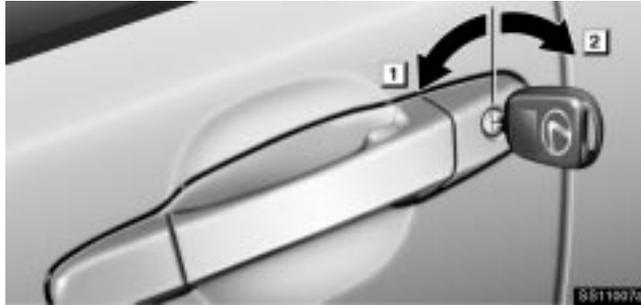

► **1** Lock **2** Unlock


Turn the key towards the front of the vehicle to lock and towards the back to unlock.

Locking (or unlocking) the driver's door will lock (or unlock) all the other doors simultaneously. In the driver's door lock, turning the key once will unlock the driver's door and twice in succession will unlock all doors simultaneously.*

Together with the activation of unlocking, the interior light will turn on for 15 seconds if the interior light switch is in the "DOOR" position.** However, this function does not work when the ignition key is in the "ON" position. For further information, see "Interior light" on page 49.

*NOTE: *The 2-step unlocking function can be changed.
**The interior light can be set not to come on or the duration of lighting can be changed. Ask your Lexus dealer for details.*

Locking with inside lock button

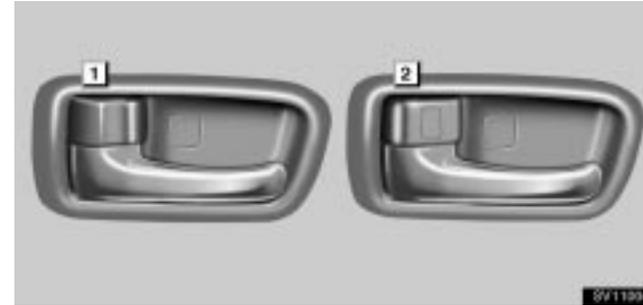

► **1** Lock **2** Unlock

Push in the lock button to lock and unlock the door.

When locked, the door cannot be opened with either the outside or inside door handle.

Closing the door with the lock button pushed in will also lock the door. Be careful not to lock your keys in the vehicle. The door will not lock if the key is left in the ignition switch when closing the front doors.

KEYS AND DOORS

CAUTION

Before driving, make sure the doors are closed and locked, especially when small children are in the vehicle. Along with the proper use of seat belts, locking the doors helps prevent the driver and passengers from being thrown out from the vehicle during an accident. It also helps prevent the doors from being opened unintentionally.

Locking with power door lock switch



► **1** Lock **2** Unlock

To lock all the doors simultaneously, push the power door lock switch on the front side. Pushing on the rear side will unlock them.

The same switch is also located on the front passenger's side.

Locking with rear door child-protector



► **1** Lock **2** Unlock

Whenever small children are in the vehicle, lock the rear door so that it does not open from the inside. To do this, turn the knob to the "LOCK" position as shown and then close the door.

SECTION 1-2

INSTRUMENTS AND CONTROLS

Switches

Headlight switch	22
Headlight dimmer and turn signal switch	24
Fog light switch	25
Windshield wiper and washer switch	25
Headlight cleaner switch	26
Rear window defogger switch	27
Power window switches	28
Emergency flasher switch	30
Seat heater switches	30

SWITCHES

HEADLIGHT SWITCH



To turn the lights on, twist the knob on the end of the lever.

FIRST CLICKSTOP: Only the parking, tail, license plate, side marker and instrument panel lights turn on.

SECOND CLICKSTOP: Headlights also turn on.

THIRD CLICKSTOP ("AUTO"): The headlights and all other lights automatically turn on depending on the darkness of the surroundings.*

Manually twist the knob to the second clickstop to turn on the headlights if they are needed immediately when entering a dark tunnel, parking structure, etc.

When the headlight switch is turned to the first or second clickstop, the brightness of the instrument cluster will be reduced slightly unless the instrument panel light control knob is turned fully on.

*NOTE: *The operating condition or sensitivity can be changed. Ask your Lexus dealer for details.*



The automatic light control sensor is on top of the driver's side instrument panel.

Do not place anything on the instrument panel, and/or do not affix anything on the windshield to block this sensor.

When the headlights come on, the lights automatically turn off about 30 seconds after any of the doors is opened and closed with the ignition key turned to the "ACC" or "LOCK" position.*

When only the taillights come on: The lights automatically turn off with the driver's door opened and the ignition key turned to the "ACC" or "LOCK" position.

To turn them on again, turn the ignition key to the "ON" position, or turn the headlight switch off and then twist the knob until the first or second clickstop. If you are going to park for over one week, make sure the headlight switch is off.

*NOTE: *The time before turning off the lights can be changed. Ask your Lexus dealer for details.*

Daytime Running Light System

The headlights turn on at reduced intensity when the parking brake is released with the engine started, even with the light switch in the "OFF" position. They will not go off until the ignition switch is turned off.

To turn on the other exterior lights and instrument panel lights, twist the knob to the first clickstop.

Twist the knob to the second clickstop to turn on the headlights to full intensity for driving at night.

When setting the knob to the third clickstop ("AUTO"), the headlights will automatically adjust to full intensity and/or turn on the other lights depending on the darkness of the surroundings. Likewise, as the surroundings become brighter, the headlights will turn to reduced intensity, ultimately turning off the other lights.

NOTICE

To prevent the battery from being discharged, do not leave the lights on longer than necessary when the engine is not running.

Automatic headlight leveling system

As the headlight beam level is always maintained automatically at the proper level in all loading conditions, your headlights do not dazzle other road users.

If this system fails, the warning light in the instrument cluster comes on. If this occurs, have your vehicle checked by Lexus dealer.

SWITCHES

HEADLIGHT DIMMER AND TURN SIGNAL SWITCH



For high beam, push the lever forward. Pull it back for low beam. For the headlight flasher, pull it further back.

A blue light in the instrument cluster indicates high beam or headlight flasher is on.

The headlight flasher works even when the headlight switch is off.




For signaling turns, move the lever up or down in the conventional manner.

The ignition key must be in the "ON" position.

The turn signal is self-cancelling after a turn, but after a lane change, you may have to cancel it by hand. You can also signal a lane change by moving the turn signal lever partway and holding it there.

If the green light in the instrument cluster flashes faster than normal, it indicates that the front or rear turn signal bulb has burned out. If this indicator light does not come on, the fuse or the indicator light itself has probably failed.

FOG LIGHT SWITCH

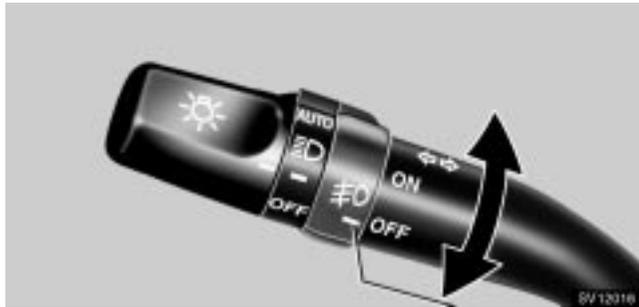

To turn on the fog lights, turn the switch to the "ON" position. The fog lights come on only when the headlights are on low beam.

WINDSHIELD WIPER AND WASHER SWITCH



► **1** Interval adjuster **2** Washer on

To turn the wipers on, move the lever down until you reach the desired speed setting.

The ignition key must be in the "ON" position.

There are 3 settings:

"INT" position: Intermittent operation

"LO" position: Low speed operation

"HI" position: High speed operation

Twist the interval adjuster upward to increase the wiping time interval between sweeps, and downward to decrease it.

The wiper lever must be in the "INT" position.

SWITCHES

For mist wiper operations (a single wipe), pull the lever toward you and release it.

To make the washer squirt, push the button on the end of the lever.

For information on adding washer fluid, see "Adding washer fluid" on page 274.

In cold weather, warm the windshield with the defroster before using the washer. This will help prevent icing, which could block your vision.

NOTICE

Do not operate the wipers if the windshield is dry. It may scratch the glass.

HEADLIGHT CLEANER SWITCH



To spray fluid on the headlights, push the switch with the headlights on.

The ignition key must be in the "ON" position.

Check the fluid level frequently as headlight cleaner uses fluid a lot. For information on adding washer fluid, see "Adding washer fluid" on page 274.

NOTICE

Do not turn the headlight cleaner on with the washer fluid tank empty. It may cause the cleaner motor to overheat.

REAR WINDOW DEFOGGER SWITCH



To turn the electric rear window defogger on, push the switch.

The ignition key must be in the "ON" position.

The thin heater wires on the inside of the rear window will quickly clear the surface. An indicator light is on when the defogger is operating.

The system will automatically shut off when the defogger has operated about 15 minutes.

If further defrosting or defogging is desired, simply actuate the switch again. When the surface has cleared, push the switch once again to turn the defogger off. Continuous use may cause the battery to discharge, especially during stop-and-go driving. The defogger is not designed to dry rain water or to melt snow.

NOTICE

- *When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires or connectors.*
- *To prevent the battery from being discharged, do not operate the defogger continuously longer than necessary.*

SWITCHES

POWER WINDOW SWITCHES




- ▶ **1** For driver's window
- 2** For front passenger's window
- 3** For left rear window
- 4** For right rear window

To raise or lower the windows, use the switch on each door. The passengers' windows can also be controlled by the switches on the driver's door.

The power windows work when the ignition key is in the "ON" position.

Key off operation (driver's window only): Even if the ignition key is turned to the "ACC" or "LOCK" position, the window can be operated until either of the front doors is opened (or for about 45 seconds).

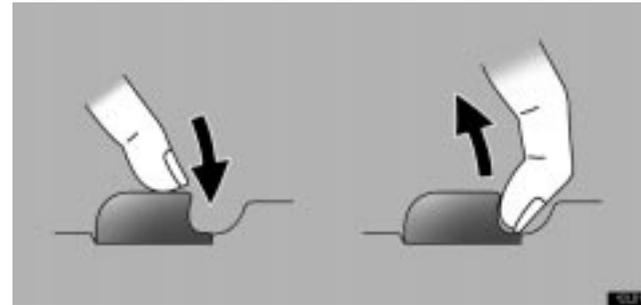

Operating the driver's window

To raise or lower the window, pull the switch halfway up or push it halfway down.

Automatic operation: To fully raise or lower the window automatically, pull the switch fully up or push it fully down.

To stop the window partway, lightly push or pull the switch in the opposite direction and then release it.

Operating the passengers' windows

To lower the window, push the switch down. Pull it up to raise the window. The window moves as long as the switch is operated.

Operating the window lock switch



With the window lock switch pressed in, only the driver's window can be raised or lowered.

Jam protection function

(Driver's window only)

During automatic raising operation or key off raising operation, the window stops and is lowered if something gets caught between the window and window frame.

If the window receives a strong impact, this function may work even if nothing is caught.

CAUTION

To avoid serious personal injury, you must do the following.

- Always make sure the heads, hands and other parts of the bodies of all occupants are kept completely inside the vehicle before you close the power windows. If someone's neck, head or hands gets caught in a closing window, it could result in a serious injury. When anyone closes the power windows, make sure that he/she operates the windows safely.
- When small children are in the vehicle, never let them use the power window switches without supervision. Use the window lock switch to prevent them from making unexpected use of the switches.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the power window switches and get trapped in a window. Unattended children can be involved in serious accidents.
- Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work if something gets caught just before the window fully closed.

SWITCHES

EMERGENCY FLASHER SWITCH



To turn on the emergency flashers, push the switch.

All the turn signal lights will flash. The emergency flashers will work with the engine running or off and with or without the ignition key.

Turn on the emergency flashers to warn other drivers if you must stop your vehicle where it might be a traffic hazard.


Always pull your vehicle as far off the road as possible.

The turn signal light switch will not work when the emergency flashers are in operation.

NOTICE

To prevent the battery from being discharged, do not leave the switch on longer than necessary when the engine is not running.

SEAT HEATER SWITCHES

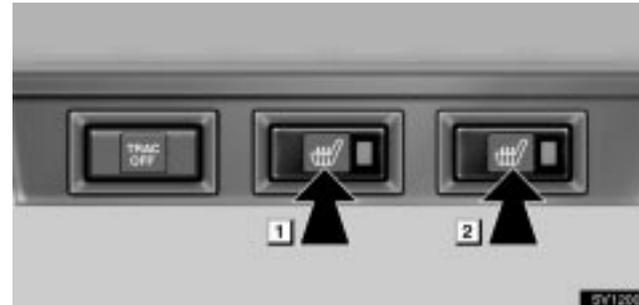

► **1** For driver's seat **2** For front passenger's seat

There is a heater switch for each front seat. Push these switches to turn the respective seat heater on, and push the switches again to turn them off.

The ignition key must be in the "ON" position.

When the seat heater switch is on, the indicator on the right side of the switch will come on.

 **CAUTION**

Occupants must use caution when operating the seat heater because they may experience minor burns even at low temperatures. Use extra caution for;

- Babies, small children, elderly persons, sick persons or handicapped persons
- Persons who have delicate skin
- Persons who are exhausted
- Persons who have taken alcohol or drugs which induce sleep (sleeping drug, cold remedy, etc.).

To prevent the seat from overheating, do not use the seat heater with a blanket, cushion, or other insulating objects which cover the seat.

NOTICE

- *Do not put unevenly weighted objects on the seat and do not stick sharp objects (needles, nails, etc.) into the seat.*
- *When cleaning the seats, do not use organic substances (paint thinner, benzine, alcohol, gasoline, etc.). They may damage the heater and seat surface.*
- *To prevent the battery from being discharged, turn the switches on when the engine is running.*

SECTION 1 - 3

INSTRUMENTS AND CONTROLS

Gauges, meters and service reminder indicators

Fuel gauge	34
Engine coolant temperature gauge	35
Voltmeter	36
Momentary fuel consumption meter	36
Tachometer	37
Odometer and trip meter	38
Service reminder indicators and warning buzzers	38
Instrument panel light control	46

GAUGES, METERS AND SERVICE REMINDER INDICATORS

FUEL GAUGE



► *Low fuel level warning light*

The gauge is displayed when the ignition switch is on and indicates the approximate quantity of fuel remaining in the tank.

It is a good idea to keep the tank over 1/4 full.

If the fuel level approaches "E" or the low fuel level warning light comes on, fill the fuel tank as soon as possible.


On inclines or curves, due to the movement of fuel in the tank, the fuel gauge needle may fluctuate or the low fuel level warning light may come on earlier than usual.

If the fuel tank is completely empty, the malfunction indicator lamp comes on. Fill the fuel tank immediately.

The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.

See the inner back cover for fuel capacity and recommended fuel selection.

ENGINE COOLANT TEMPERATURE GAUGE

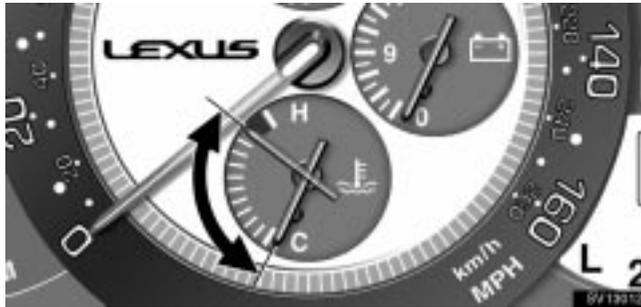

► Normal range

The gauge indicates the engine coolant temperature when the ignition switch is on. The engine operating temperature will vary with changes in weather and engine load.

If the needle points to the red zone or higher, stop your vehicle and allow the engine to cool.

Your vehicle may overheat during severe operating conditions, such as:


- Driving up a long hill on a hot day.
- Reducing speed or stopping after high speed driving.
- Idling for a long period with the air conditioning on in stop-and-go traffic.

NOTICE

- *Do not remove the thermostat in the engine cooling system as this may cause the engine to overheat. The thermostat is designed to control the flow of coolant to keep the temperature of the engine within the specified operating range.*
- *Do not continue driving with an overheated engine. See "If your vehicle overheats" on page 204.*

GAUGES, METERS AND SERVICE REMINDER INDICATORS

VOLTMETER

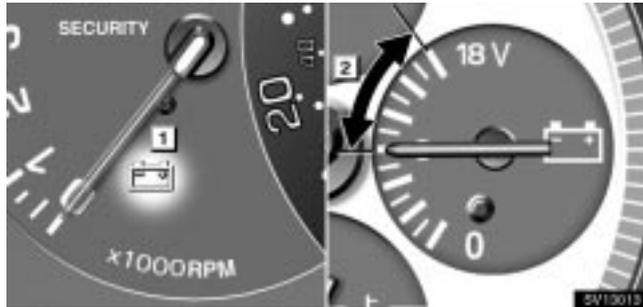

► **1** Discharge warning light **2** Normal range

The voltmeter tells whether the battery is charged or discharged. Check it while the engine is running – the needle should always indicate as shown above.

If the needle reads below or above the normal range while the engine is running, it indicates that the charging system needs immediate repair.

However, it is normal for the needle to drop below the normal range during engine starting.

MOMENTARY FUEL CONSUMPTION METER



► Vehicles sold in U.S.A.



► Vehicles sold in Canada

GAUGES, METERS AND SERVICE REMINDER INDICATORS

The momentary fuel consumption is calculated and indicated based on the driving distance and the fuel consumption with the engine running.

If you are driving at low speeds just before stopping, the accurate figure may not be shown.

TACHOMETER



The tachometer indicates engine speed in thousands of rpm (revolutions per minute). Use it while driving to prevent engine over-revving.


Driving with the engine running too fast causes excessive engine wear and poor fuel economy. Remember, in most cases the slower the engine speed, the greater the fuel economy.

NOTICE

Do not let the indicator needle get into the red zone. This may cause severe engine damage.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

ODOMETER AND TRIP METER

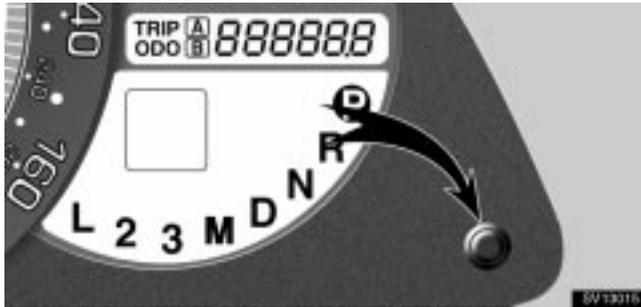

This meter displays the odometer and two trip meters. To change the mode indication, push the "ODO/TRIP" knob briefly. Each time you push the knob, the mode changes in order from the odometer to trip meter A to trip meter B, then back to the odometer, etc.

The odometer records the total distance the vehicle has been driven. The twin trip meter records two different distances independently.

For example, you can use one meter to calculate the fuel economy and the other to measure the distance on each trip.

To set A trip meter to zero, display the A meter reading, push the knob and hold it. The same applies for the B trip meter.

The data of trip meters will be cancelled if the electrical power source is disconnected.

SERVICE REMINDER INDICATORS AND WARNING BUZZERS



- (a) **BRAKE** or  If parking brake is off, stop immediately and contact Lexus dealer.
- (b)  Fasten driver's seat belt.
(Indicator and buzzer)
- (c)  Fasten front passenger's seat belt.
- (d)  Take vehicle to Lexus dealer immediately.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(e)		Stop and check.	(l)	Low fuel level warning light	Fill up tank.
(f)		Stop and check.	(m)		Take vehicle to Lexus dealer.
(g)		Add engine oil.	(n)		Take vehicle to Lexus dealer.
(h)	 or 	Take vehicle to Lexus dealer.	(o)	Key reminder buzzer	Remove key.
(i)	 or 	Take vehicle to Lexus dealer. If brake system warning light is also on, stop immediately and contact Lexus dealer.	<p>(a) Brake System Warning Light and Buzzer</p> <p>This light comes on in the following cases when the ignition key is in the "ON" position.</p> <ul style="list-style-type: none"> ● When the parking brake is applied ... <p>This light comes on for a few seconds when the ignition key is turned to the "ON" position even after the parking brake is released.</p> <p>The buzzer beeps once if the vehicle is driven with its parking brake applied.</p> <ul style="list-style-type: none"> ● When the brake fluid level is low ... <div style="border: 2px solid black; background-color: #f08080; padding: 5px; margin-top: 10px;"> <p style="text-align: center;"> CAUTION</p> <p style="text-align: center;">It is dangerous to continue driving normally when the brake fluid level is low.</p> </div>		
(j)		Close all doors.			
(k)		Replace bulb.			

GAUGES, METERS AND SERVICE REMINDER INDICATORS

Have your vehicle checked at your Lexus dealer in the following cases:

- The light does not come on even if the parking brake is applied when the ignition key is in the "ON" position.
- The light does not come on even if the ignition key is turned on with the parking brake released.

A warning light turning on briefly during operation does not indicate a problem.

 **CAUTION**

If either of the following conditions occurs, immediately stop your vehicle at a safe place and contact your Lexus dealer.

- **The light does not turn off even after the parking brake is released while the engine is running. In the case, the brakes may not work properly and your stopping distance will become longer. Depress the brake pedal firmly and bring the vehicle to an immediate stop.**
- **The brake system warning light remains on together with the "ABS" warning light. In this case, not only the anti-lock brake system will fail but also the vehicle will become extremely unstable during braking.**

(b) Driver's Seat Belt Reminder Light and Buzzer

This light and buzzer remind you to buckle up the driver's seat belt.

Once the ignition key is turned to "ON" or "START", the reminder light flashes and buzzer sounds if the driver's seat belt is not fastened. Unless the driver fastens the belt, the light stays flashing and the buzzer stops after about 4 to 8 seconds.

(c) Front Passenger's Seat Belt Reminder Light

This light reminds you to buckle up the front passenger's seat belt.

Once the ignition key is turned to "ON" or "START", the reminder light flashes if a passenger sits in the front passenger seat and does not fasten the seat belt. Unless the front passenger fastens the belt, the light stays flashing. However, if a front passenger uses an additional seat cushion, the light may not flash even when the seat belt is not buckled up.

If luggage load is placed on the front passenger seat, depending on its weight and how it is placed on the seat, built-in sensors in the seat cushion may detect the pressure, causing the reminder light to come on.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(d) SRS Warning Light

The indicator comes on when the ignition key is turned to the "ACC" or "ON" position. It goes off after about 6 seconds. This means the SRS airbags and front seat belt pretensioners are operating properly.

The SRS warning light system monitors the airbag sensor assembly, front airbag sensors, side airbag sensors, front seat belt pretensioner assemblies, inflators, warning light, interconnecting wiring and power sources.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- When the ignition key is turned to the "ACC" or "ON" position, the light does not come on, remains on or flashes.
- The light comes on or starts flashing while driving.

If the light stays on, it indicates that the driver and front passenger airbags fail. If the light flashes, the side airbags and/or seat belt pretensioners fail.

(e) Discharge Warning Light

This light warns that the battery is being discharged.

If it comes on while you are driving, stop the vehicle, turn off the engine, and check for the cause. Look first at the engine drive belt.

- If it is loose or broken, the generator will not charge the battery properly.
- If the belt is O.K., there is a problem somewhere in the charging system.

The engine ignition will continue to operate, however, until the battery is discharged. Turn off the air conditioning, blower, radio, etc., and drive directly to the nearest Lexus dealer or repair shop.

NOTICE

Do not continue driving if the engine drive belt is broken or loose.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(f) Low Engine Oil Pressure Warning Light

This light warns that the engine oil pressure is too low.

If it flickers or stays on while you are driving, pull off the road to a safe place and stop the engine immediately. Call a Lexus dealer or qualified repair shop for assistance.

The light may occasionally flicker when the engine is idling or it may come on briefly after a hard stop. There is no cause for concern if it then goes out when the engine is accelerated slightly.

The light may come on when the oil level is extremely low. It is not designed to indicate low oil level, and the oil level must be checked using the oil level dipstick.

NOTICE

Do not drive the vehicle with the warning light on – even for one block. It may ruin the engine.

(g) Low Engine Oil Level Warning Light

This light warns that the engine oil level is too low. Add oil as soon as possible. (For instructions, see "Checking the engine oil level" on page 242.)

While driving on steep inclines or rough roads which causes the vehicle to substantially sway or on curves, this light may come on due to the movement of engine oil in the engine.

NOTICE

Continued engine operation with low engine oil will damage the engine.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

(h) Malfunction Indicator Lamp

This lamp comes on in the following cases.

- a. The fuel tank is completely empty. (See "Fuel gauge" on page 34 for instructions.)
- b. The fuel tank cap is not tightened securely. (See "Fuel tank cap" on page 67 for instructions.)
- c. There is a problem somewhere in your engine electrical system, automatic transmission electrical system or electronic throttle control system.

If it comes on while you are driving in case "c", have your vehicle checked/repared by your Lexus dealer as soon as possible.

If this lamp comes on and the engine speed does not increase with the accelerator pedal depressed down to about the middle position, there may be a problem somewhere in your electronic throttle control system.

At this time, if you depress the accelerator pedal more firmly and slowly, you can drive your vehicle at low speeds. Have your Lexus checked by your Lexus dealer as soon as possible.

Even if the abnormality of the electronic throttle control system is corrected during low speed driving, the system may not be recovered until the engine is stopped and the ignition key is turned to "ACC" or "LOCK" position.

(i) "ABS" Warning Light

The light comes on when the ignition key is turned to the "ON" position. If the anti-lock brake system works properly, the light turns off after a few seconds. Thereafter, if the system malfunctions, the light comes on again.

When the "ABS" warning light is on (and the brake system warning light is off), the anti-lock brake system and/or the traction control system do/does not operate, but the brake system still operates conventionally.

When the "ABS" warning light is on (and the brake system warning light is off), the anti-lock brake system and/or the traction control system do/does not operate so that the wheels could lock up during a sudden braking or braking on slippery road surfaces.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the "ON" position, or remains on.
- The light comes on while you are driving.

A warning light turning on briefly during operation does not indicate a problem.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

 CAUTION
If the "ABS" warning light remains on together with the brake system warning light, immediately stop your vehicle at a safe place and contact your Lexus dealer.
In this case, not only the anti-lock brake system will fail but also the vehicle will become extremely unstable during braking.

(j) Open Door Warning Light and Buzzer

This light and buzzer remain on until all the doors are completely closed.

(k) Rear Light Failure Warning Light

If this light comes on when the headlight switch is turned on (at the first or second clickstop), it indicates that one or more of the tail lights are burned out.

If it comes on when the brake pedal is depressed, one or more stop lights are burned out.

Have defective bulbs replaced as soon as possible.

(l) Low Fuel Level Warning Light

This light comes on when the fuel level in the tank becomes nearly empty. Fill the tank as soon as possible.

On inclines or curves, due to the movement of fuel in the tank, the low fuel level warning light may come on earlier than usual.

(m) "TRAC OFF" Indicator / Warning Lights

This light comes on when the ignition key is turned to "ON", and will go off after a few seconds. This means that the system is operating properly.

If the light flashes, this indicates a malfunction in the traction control system. Contact your Lexus dealer as soon as possible to service the vehicle.

(n) Automatic Headlight Leveling System Warning Light

This light warns that when there is a problem somewhere in the automatic headlight leveling system.

If it comes on, have your vehicle checked by your Lexus dealer.

(o) Key Reminder Buzzer

This buzzer reminds you to remove the key when you open the driver's door with the ignition key in the "ACC" or "LOCK" position.

GAUGES, METERS AND SERVICE REMINDER INDICATORS

How to check all the service reminder indicators

(except the low fuel level warning light):

1. Apply the parking brake.
2. Open the door.

The following service reminder indicator should come on. It goes off when you close the door completely.



3. Turn the ignition key to "ACC".

The following service reminder indicator should come on. It goes off after 6 seconds.



4. Turn the ignition key to "ON".

The following service reminder indicators should come on.



The following service reminder indicators go off after a few seconds.



The lights other than the slip indicator light may stay on for about 60 seconds after the engine is started. It is normal if they go out after a while.

If any service reminder indicator or warning buzzer does not function, have it checked by your Lexus dealer as soon as possible.

**INSTRUMENT PANEL LIGHT
CONTROL**



To adjust the brightness of the instrument panel lights, turn the knob.

SECTION 1 - 4

INSTRUMENTS AND CONTROLS

Interior equipment

Vanity mirrors	48
Interior lights	49
Personal lights	49
Ignition switch light	50
Clock	50
Outside temperature display	51
Cigarette lighter and ashtray	52
Power outlet	53
Glove box	53
Garage door opener	54
Cup holders	57
Warning reflector holder	58
Tie-down hooks	59
Floor mat	59
First-aid kit holder	60
Luggage stowage precautions	61

INTERIOR EQUIPMENT


VANITY MIRRORS



To use the vanity mirrors, swing the sun visor down and open the cover.


The vanity light comes on when you open the cover.

Sun visors

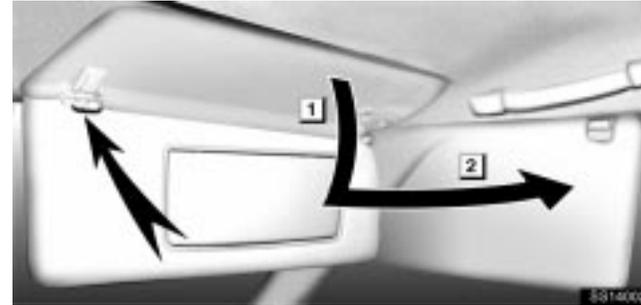

- 1 To block out glare from the front , swing the sun visor down.
- 2 To block out glare from the side, remove the sun visor from the hook and swing it to the side.

INTERIOR LIGHTS

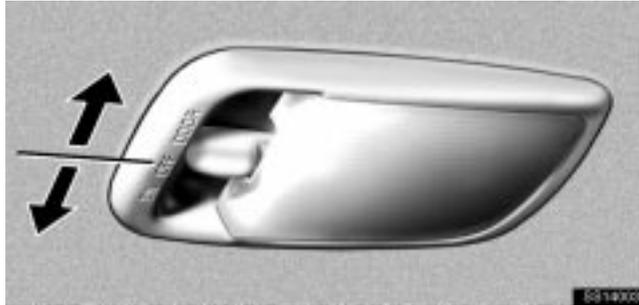

To turn on the interior light, slide the switch.

With the switch in the "DOOR" position, the light comes on when any of the doors are opened. After all the doors are closed, the light remains on for about 15 seconds and then goes out.


However, in the following cases, the light goes out immediately:

1. All the doors are closed when the ignition key is in "ACC" or "ON" position.
2. The ignition key is turned to "ACC" or "ON" when the light is still on.
3. All the doors are locked when the light is still on.
4. One door is closed with the lock button pushed in while the other doors are locked.

PERSONAL LIGHTS



► **With moon roof**

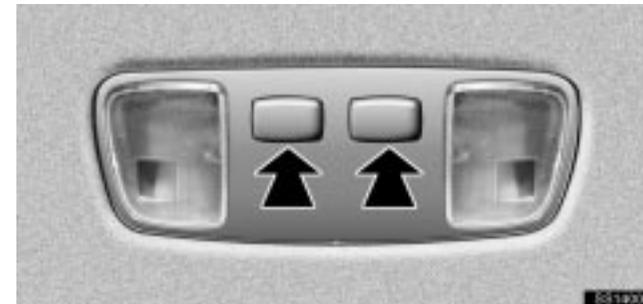

► **Without moon roof**

To turn on the personal light, push the switch. To turn it off, push the switch again.

INTERIOR EQUIPMENT


IGNITION SWITCH LIGHT



For easy access to the ignition switch, the ignition switch light comes on when any of the doors are opened.

The light remains on for about 15 seconds and goes out after all the doors are closed. However, the light goes out immediately when all the doors are locked or the ignition key is in the "ACC" or "ON" position.

CLOCK

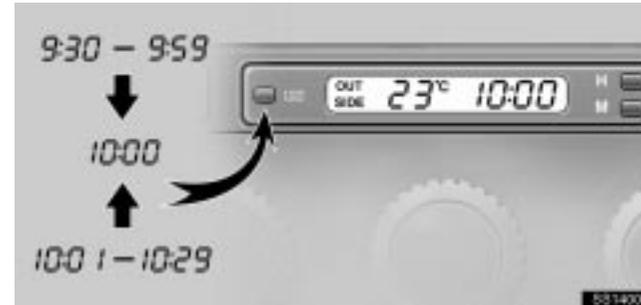

The digital clock indicates the time with the ignition key at the "ACC" or "ON" position. To reset the hour, press the "H" button. To reset the minutes, press the "M" button. To adjust the time to the nearest hour, press the ":00" button.

For example, if the ":00" button is pressed when the time is between 9:30 – 9:59 or between 10:01 – 10:29, the time will change to 10:00.

If the electrical power source has been disconnected from the clock, the time display will automatically be set to 1:00 (one o'clock).

When the headlight switch is in the first or second click stop, you can also adjust the brightness of the display using the instrument panel light control dial.

OUTSIDE TEMPERATURE DISPLAY



► *Vehicles sold in U.S.A.*



► *Vehicles sold in Canada*

This display shows the outside temperature when the ignition switch is on.

The displayed temperature ranges from -30°C (-22°F) up to 50°C (122°F). The display flashes for 10 seconds when the outside temperature goes down below 3°C (37°F) or less and informs you that the outside temperature is low. The warning is repeated whenever the temperature rises to at least $+5^{\circ}\text{C}$ ($+41^{\circ}\text{F}$) and then sinks again to $+3^{\circ}\text{C}$ (37°F). If the temperature does not appear on the display or it shows “-”, take your vehicle to your Lexus dealer.



CAUTION

The outside air temperature indicator is designed to inform you when the air temperature is near freezing. This indicator does not detect the presence of ice on the road. Drivers must exercise great caution in driving on roads which are wet, slippery or icy.

INTERIOR EQUIPMENT

CIGARETTE LIGHTER AND ASHTRAY



► *Cigarette lighter and front ashtray*



► *Rear ashtray*

Cigarette Lighter

To use the cigarette lighter, press it in. After it finishes heating up, it automatically pops out ready for use.

Do not hold the cigarette lighter pressed in.

If the engine is not running, the ignition key must be in the "ACC" position to use the lighter.

Use a Lexus genuine cigarette lighter or equivalent for replacement.

Ashtray

To use the ashtray, open the cover.


When finished with your cigarette, thoroughly extinguish it in the ashtray to prevent other cigarette butts from catching fire. After using the ashtray, close the ashtray cover completely.

To remove the ashtray, open the ashtray cover and pull it out.

CAUTION

To reduce the chance of injury in case of an accident or sudden stop while driving, always completely close the ashtray after use.

POWER OUTLET

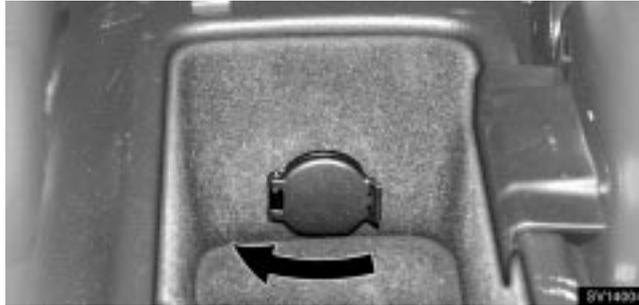


The power outlet is designed for power supply for car accessories.

The ignition key must be in the "ACC" or "ON" position for the power outlet to be used.

NOTICE

- To prevent the fuse from being blown, do not use the electricity over the total vehicle capacity of 12V 3.5A.
- To prevent the battery from being discharged, do not use the power outlet longer than necessary when the engine is not running.
- Close the power outlet lid when the power outlet is not in use. Inserting a foreign object other than the appropriate plug that fits the outlet, or allowing any liquid into the outlet may cause electrical failure or short circuits.

GLOVE BOX

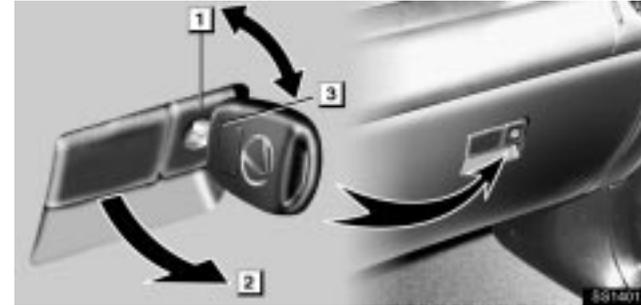

► 1 Unlock 2 Open 3 Lock

To open the glove box door, pull the lever. To lock the glove box door, insert the master key and turn it clockwise.

With the tail lights on, the glove box light will come on when the glove box door is open.

CAUTION


To reduce the chance of injury in case of an accident or a sudden stop, always keep the glove box door closed while driving.

INTERIOR EQUIPMENT

GARAGE DOOR OPENER

The garage door opener (**HomeLink® Universal Transceiver**) is manufactured under license from HomeLink® and can be programmed to operate garage doors, gates, entry doors, door locks, home lighting systems, and security systems, etc.

(a) Programming the HomeLink®

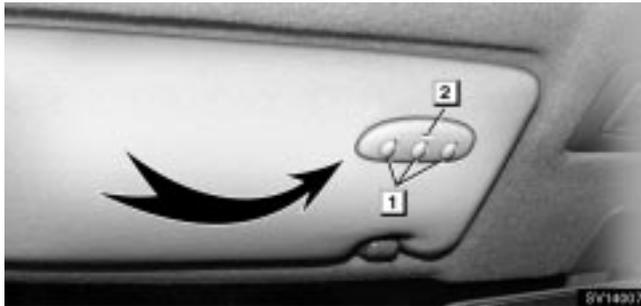

► **1 Buttons** **2 Indicator light**

The HomeLink® in your vehicle has 3 buttons and you can store one program for each button.

To ensure correct programming into the HomeLink®, install a new battery in the hand-held transmitter prior to programming.

The battery side of the hand-held transmitter must be pointed away from the HomeLink® during the programming process.

For Canadian users, follow the procedure in “Programming an entrance gate/Programming all devices in the Canadian market”.

1. Decide which of 3 HomeLink® buttons you want to program.
2. Place your hand-held garage transmitter 25 to 75 mm (1 to 3 in.) away from the surface of the HomeLink®.

Keep the indicator light on the HomeLink® in view while programming.

3. Simultaneously press and hold the hand-held garage transmitter button along with the selected HomeLink® button.

4. When the indicator light on the HomeLink® changes from a slow to a rapid flash after 20 seconds, you can release both buttons.

5. Test the operation of the HomeLink® by pressing the newly programmed button. If programming a garage door opener, check to see if the garage door opens and closes.

If the garage door does not operate, identify if your garage transmitter is of the “Rolling Code” type. Press and hold the programmed HomeLink® button. The garage door has the rolling code feature if the indicator light (on the HomeLink®) flashes rapidly and then remains lit after 2 seconds. If your garage transmitter is the “Rolling Code” type, proceed to the heading “Programming a rolling code system”.

6. Repeat steps 2 through 5 for each remaining HomeLink® button to program another device.

Programming a rolling code system

If your device is “Rolling Code” equipped, it is necessary to follow steps 1 through 4 under the heading “Programming the HomeLink®” before proceeding with the steps listed below.

1. Locate the “training” button on the ceiling mounted garage door opener motor. The exact location and color of the button may vary by brand of garage door opener. Refer to the owner’s guide supplied by the garage door opener manufacturer for the location of this “training” button.

2. Press the “training” button on the ceiling mounted garage door opener motor.

Following this step, you have 30 seconds in which to initiate step 3 below.

3. Press and release the vehicle’s programmed HomeLink® button twice. The garage door may open. If the door does open, the programming process is complete. If the door does not open, press and release the button a third time. This third press and release will complete the programming process by opening the garage door.

The ceiling mounted garage door opener motor should now recognize the HomeLink® unit and be able to activate the garage door up/down.

4. Repeat steps 1 through 3 for each remaining HomeLink® button to program another rolling code system.

Programming an entrance gate / Programming all devices in the Canadian market

1. Decide which of the 3 HomeLink® buttons you want to program.

2. Place your hand– held gate/device transmitter 25 to 75 mm (1 to 3 in.) away from the surface of the HomeLink®.

Keep the indicator light on the HomeLink® in view while programming.

3. Press and hold the selected HomeLink® button.

4. Continuously press and release (cycle) the hand– held gate/device transmitter button every two seconds until step 5 is complete.

5. When the indicator light on the HomeLink® changes from a slow to a rapid flash after 20 seconds, you can release both buttons.

6. Test the operation of the HomeLink® by pressing the newly programmed button. Check to see if the gate/device operates correctly.

7. Repeat steps 1 through 6 for each remaining HomeLink® button to program another device.

Programming other devices

To program other devices such as home security systems, home door locks or lighting, contact your authorized Lexus dealer for assistance.

INTERIOR EQUIPMENT

Reprogramming a button

Individual HomeLink[®] buttons cannot be erased, however, to reprogram a single button, follow the procedure “Programming the HomeLink[®]”.

(b) Operating the HomeLink[®]

To operate the HomeLink[®], press the appropriate HomeLink[®] button to activate the programmed device. The HomeLink[®] indicator light should come on. The HomeLink[®] continues to send the signal for up to 20 seconds as long as the button is pressed.

(c) Erasing the entire HomeLink[®] memory (all three programs)

To erase all previously programmed codes at one time, press and hold down the 2 outside buttons for 20 seconds until the indicator light flashes.

If you sell your vehicle, be sure to erase the programs stored in the HomeLink[®] memory.


CAUTION

- When programming the HomeLink[®] Universal Transceiver, you may be operating a garage door or other device. Make sure people and objects are out of the way of the garage door or other device to prevent potential harm or damage.
- Do not use this HomeLink[®] Universal Transceiver with any garage door opener that lacks the safety stop and reverse feature as required by federal safety standards. (This includes any garage door opener model manufactured before April 1, 1982.) A garage door opener which cannot detect an object (signaling the door to stop and reverse), does not meet current federal safety standards. Using a garage door opener without these features increases risk of serious injury or death.

FCC ID: CB2V94800
CANADA: 1763 102 264

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference that may be received, including interference that may cause undesired operation. **WARNING: This transmitter has been tested and complies with FCC and DOC/MDC rules. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.**

CUP HOLDERS

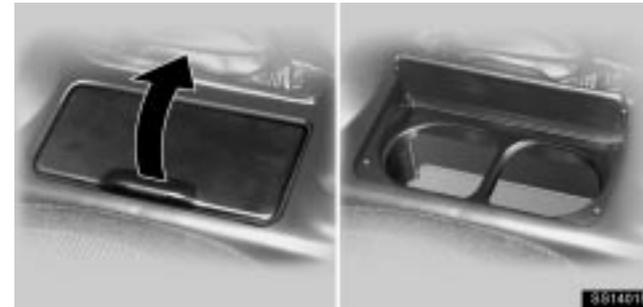


► *Front*

To use the cup holder, open the cup holder lid.

You can use it as an accessory box by removing the holder inside.

INTERIOR EQUIPMENT

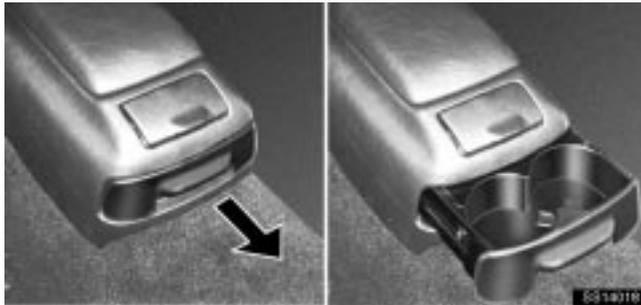

► Rear

To use the cup holder, push the cup holder portion of the center console box.

The cup holder is designed for holding cups or drink-cans securely in its holes.



CAUTION

- Do not place anything else other than cups or drink-cans in the cup holder, as such items may be thrown about in the compartment and possibly injure people in the vehicle during sudden braking or in an accident.
- Rear only: To reduce the chance of injury in case of an accident or sudden stop while driving, keep the cup holder closed when not in use.

WARNING REFLECTOR HOLDER



- **1 To loosen** **2 To tighten**

This belt is designed to hold the warning reflector.


To loosen: Pull the buckle forward.

To tighten: Pull on the belt.

Although the warning reflector itself is not included as an original equipment, this belt can be used to store the warning reflector.

Make sure the warning reflector is securely held.

TIE-DOWN HOOKS

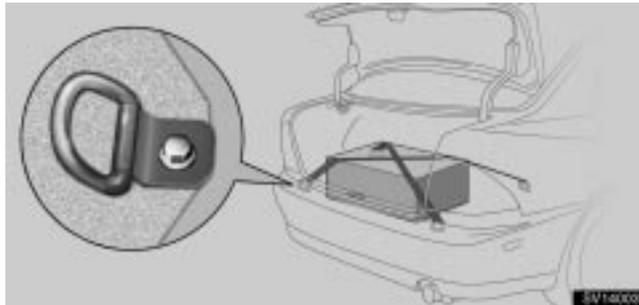


To secure your luggage, use the tie-down hooks as shown above.

See "Luggage stowage precautions" on page 61 for precautions to observe for loading luggage.

 **CAUTION**

To avoid personal injury, keep the tie-down hooks stored under the carpet when not in use.


FLOOR MAT

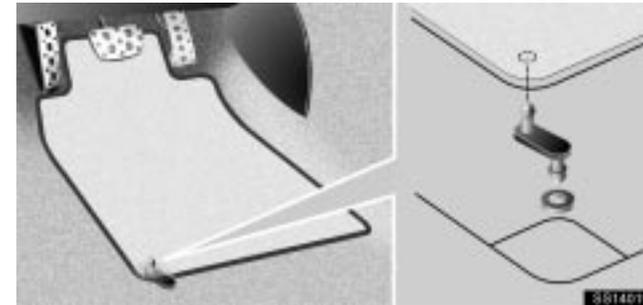

Use a floor mat of the correct size.

If the floor carpet and floor mat have a hole, then it is designed for use with a locking clip. Fix the floor mat with locking clip into the hole in the floor carpet.


INTERIOR EQUIPMENT

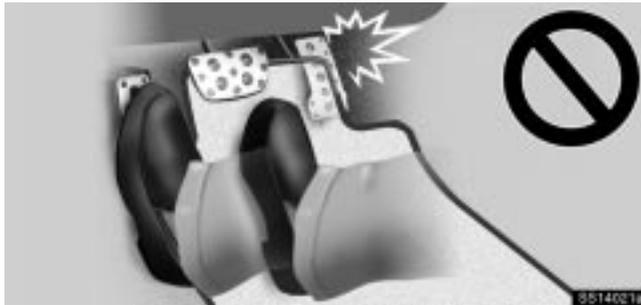

CAUTION

Make sure the floor mat is properly placed on the floor carpet. If the floor mat slips and interferes with the movement of the pedals during driving, it may cause an accident.

FIRST-AID KIT HOLDER

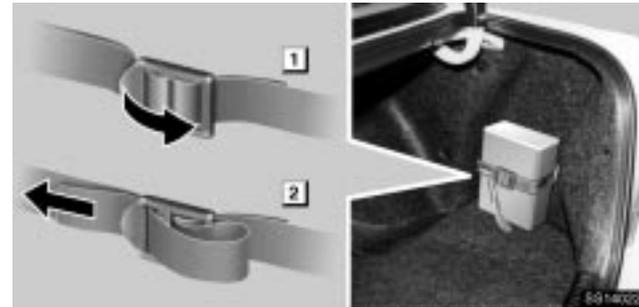

► **1 To loosen** **2 To tighten**

This belt is designed to hold the first-aid kit.

To loosen: Pull the buckle forward.

To tighten: Pull on the belt.

Make sure the first-aid kit is securely held.

LUGGAGE STOWAGE PRECAUTIONS

When stowing luggage or cargo in the vehicle, observe the following:

- Put luggage or cargo in the trunk when at all possible. Be sure all items are secured in place.
- Be careful to keep the vehicle level. Placing the weight as far forward as possible helps maintain vehicle balance.
- For better fuel economy, do not carry unnecessary weight.

CAUTION

- Do not place anything on the package tray behind the rear seatback. Such items may be thrown about and possibly injure people in the vehicle during sudden braking or in an accident.
- Do not drive with objects left on top of the instrument panel. They may interfere with the driver's field of view. Or they may move during sharp vehicle acceleration or turning, and impair the driver's control of the vehicle. In an accident they may injure the vehicle occupants.

NOTICE

Do not load the vehicle beyond the vehicle capacity weight specified on the tire pressure label.

SECTION 1 - 5

INSTRUMENTS AND CONTROLS

Exterior equipment


Hood	64
Trunk lid	65
Fuel tank cap	67
Moon roof	69

EXTERIOR EQUIPMENT

HOOD



1. To open the hood, pull the hood lock release lever under the instrument panel. The hood will spring up slightly.

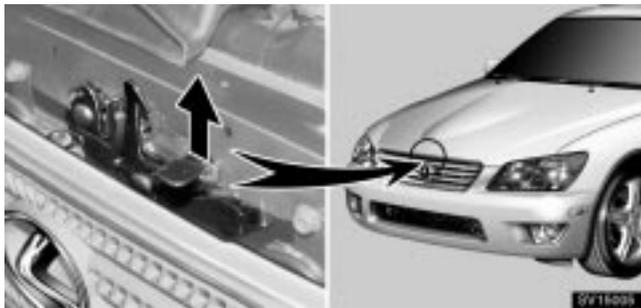

2. Insert your fingers under the hood, push up the auxiliary catch lever and lift the hood.



3. Hold the hood open by inserting the support rod into the slot.

CAUTION

After inserting the support rod into the slot, make sure the rod supports the hood securely from falling down on to your head or body.

NOTICE

Be sure to return the support rod to its clip before closing the hood. Closing the hood with the support rod up could cause the hood to bend.



In case of unlocking the support rod, lift up the hood a little, move the support rod and unlock it as shown by the arrow marks in the illustration.

Before closing the hood, check to see that you have not forgotten any tools, rags, etc. and return the support rod to its clips—this prevents rattles. Then lower the hood and make sure it locks into place. If necessary, press down gently on the front edge to lock it.

⚠ CAUTION

Before driving, be sure that the hood is securely locked. Otherwise, the hood may open unexpectedly while driving and an accident may occur.

TRUNK LID



To unlock the trunk lid, insert the master key and turn it clockwise.

To close the trunk lid, lower it and press down on it. After closing the trunk lid, try pulling it up to make sure it is securely closed.

The trunk lid can be unlocked using the wireless remote control key. For details, see page 13.

If the theft deterrent system is set, unlock the trunk lid with the wireless remote control. (For details, see page 120.)

EXTERIOR EQUIPMENT

CAUTION


- Keep the trunk lid closed while driving. This not only keeps the luggage from being thrown out, but also prevents exhaust gases from entering the vehicle.
- Always lock the trunk lid and all doors, and keep away the vehicle keys out of children's reaches.
- Never leave children unattended in the vehicle. Unsupervised children may lock themselves in the vehicle or trunk and suffer serious injuries or death.

Lock release lever



To open the trunk lid from the driver's seat, pull up on the lock release lever.

Internal trunk release handle

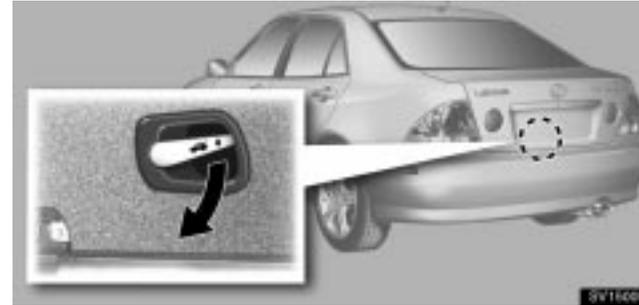

If a person is locked in the trunk, he or she can pull down the phosphorescent handle on the inside of trunk lid in case of emergency to open the trunk lid.

The phosphorescent (glow-in-the-dark) handle will continue to glow for a time after the trunk lid is closed. Exposing the handle to stronger light will cause it to glow longer.

Luggage security system



After closing the trunk lid, insert the master key and turn it counterclockwise to deactivate the lock release lever.

At this time, the trunk lid can be opened only by the phosphorescent handle lever inside the trunk.

FUEL TANK CAP




1. To open the fuel filler door, pull the lever up.

When refueling, turn off the engine.

 **CAUTION**

- Do not smoke, cause sparks or allow open flames when refueling. The fumes are flammable.
- When opening the cap, do not remove the cap quickly. In hot weather, fuel under pressure could cause injury by spraying out of the filler neck if the cap is suddenly removed.

EXTERIOR EQUIPMENT

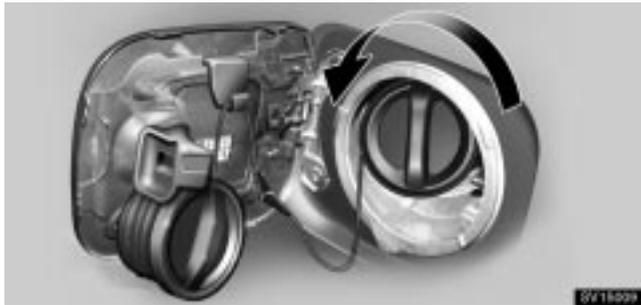

2. To remove the fuel tank cap, turn the cap slowly counterclockwise, then pause slightly before removing it. After removing the cap, hang the tether as shown in the illustration.

It is not unusual to hear a slight swoosh when the cap is opened. When installing the cap, turn the cap clockwise until you hear a click.

If the cap is not tightened securely, the malfunction indicator lamp comes on. Make sure the cap is tightened securely.

The indicator lamp goes off after driving several times. If the indicator lamp does not go off, contact your Lexus dealer as soon as possible.

CAUTION

- Make sure the cap is tightened securely to prevent fuel spillage in case of an accident.
- Use only a genuine Lexus fuel tank cap for replacement. It is designed to regulate fuel tank pressure.

Refueling the vehicle

As soon as the correctly operated nozzle switches off automatically for the first time, the tank is full. Do not try to add more fuel, because fuel may spill out.

MOON ROOF



► **1** Open **2** Close

To slide open the moon roof, push the switch on the rear side briefly. The moon roof will open and stop partway 30 mm (1.2 in.) from the fully opened position. When you push the switch again, the moon roof will open fully. To stop partway, push the same switch or "TILT" switch briefly while the moon roof is moving.

As driving with the moon roof opened fully will cause wind throbs, we recommend you to drive with the moon roof partway 30 mm (1.2 in.) from the fully opened position.

To operate the moon roof, the ignition key must be in the "ON" position.

The sun shade can be opened or closed manually. However, if you open the moon roof, the sun shade will be opened with the moon roof.

To close the moon roof, push the switch on the front side. The moon roof will fully close. To stop partway, push the same switch or "TILT" switch.



► **1** Tilt up **2** Lower

To tilt up the rear end of the moon roof fully, push the switch on the rear side or on the front side to lower it.

To operate the moon roof, the ignition key must be in the "ON" position.

Key off operation: Even if the ignition key is turned to the "ACC" or "LOCK" position, the moon roof can be operated until either of the front doors is opened (or for about 45 seconds).

EXTERIOR EQUIPMENT

Jam protection function

During closing operation, the moon roof stops and is open if something gets caught into the roof opening.

If the moon roof receives a strong impact, this function may work even if nothing is caught.

- Never try jamming any part of your body to make the jam protection function work intentionally.
- The jam protection function may not work if something gets caught just before the moon roof fully closed.



CAUTION

To avoid serious personal injury, you must do the following.

- While the vehicle is moving, always keep the heads, hands and other parts of the bodies of all occupants away from the roof opening. Otherwise, they could be seriously injured if the vehicle stops suddenly or if the vehicle is involved in an accident.
- Always make sure nobody places his/her head, hands and other parts of the body in the roof opening before you close the roof. If someone's neck, head or hands gets caught in the closing roof, it could result in a serious injury. When anyone closes the roof, first make sure it is safe to do so.
- Never leave small children alone in the vehicle, especially with the ignition key still inserted. They could use the moon roof switches and get trapped in the roof opening. Unattended children can be involved in serious accidents.
- Never sit on top of the vehicle around the roof opening.

SECTION 1 – 6

INSTRUMENTS AND CONTROLS

Comfort adjustment

Front seats	72
Trunk storage extension	78
Head restraints	79
Tilt steering wheel	81
Outside rear view mirrors	81
Inside rear view mirror	83
Seat belts	83
SRS airbags	92
Child restraint	104

COMFORT ADJUSTMENT

FRONT SEATS (MANUAL TYPE)

Front seat precautions

 **CAUTION**

The side airbags are installed in the driver and front passenger seats. Observe the following precautions.

- Do not lean over the front door when the vehicle is in use. The side airbag inflates with considerable speed and force; you may be killed or severely injured.
- Do not modify or replace the seats or the upholstery of the seats with side airbags. Such changes may disable the system, or cause the side airbags to inflate accidentally, resulting in death or serious injury. Consult your Lexus dealer if you insist on modifications of this kind.
- Do not use accessories for the seats which cover the parts where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or serious injury.

Seat adjustment precautions

Adjust the driver's seat so that the foot pedals, steering wheel and instrument panel controls are within easy reach of the driver.

 **CAUTION**


- Do not adjust the seat while the vehicle is moving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Be careful that the seat does not hit a passenger, luggage or the rear seat.
- After adjusting the seat position, try sliding it forward and backward to make sure it is locked in position.
- After adjusting the seatback, exert body pressure to make sure it is locked in position.
- Do not put objects under the seats. The objects may interfere with the seat-lock mechanism or unexpectedly push up the seat position adjusting lever; the seat may suddenly move, causing the driver to lose control of the vehicle.
- While adjusting the seat, do not put your hands under the seat or near the moving parts. You may catch and injure your hands or fingers.

Adjusting front seats



- ▶ **1** *Seat position lock release lever*
- 2** *Seat cushion front edge angle adjusting knob*
- 3** *Seat cushion height adjusting knob*
- 4** *Seatback angle lock release lever*

Adjusting seat position

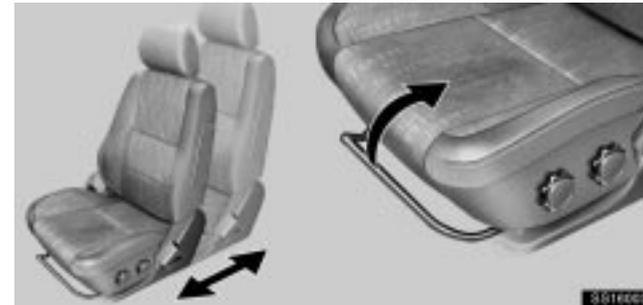

Hold the center of the lever and pull it up. Then slide the seat to the desired position with slight body pressure and release the lever.

COMFORT ADJUSTMENT

Adjusting seatback angle



Lean forward and pull the lever up. Then lean back to the desired angle and release the lever.

Adjusting seat cushion height



Turn the knob either way.

CAUTION

To reduce the risk of sliding under the lap belt during a collision, avoid reclining the seatback any more than needed. The seat belts provide maximum protection in a frontal or rear collision when the driver and the passenger are sitting up straight and well back in the seats. If you are reclined, the lap belt may slide past your hips and apply restraint forces directly to the abdomen. Therefore, in the event of a frontal collision, the risk of personal injury may increase with increasing recline of the seatback.

Adjusting seat cushion front edge angle



Turn the knob either way.

**FRONT SEATS
(POWER TYPE)**

Front seat precautions

⚠ CAUTION

The side airbags are installed in the driver and front passenger seats. Observe the following precautions.

- Do not lean over the front door when the vehicle is in use. The side airbag inflates with considerable speed and force; you may be killed or severely injured.
- Do not modify or replace the seats or the upholstery of the seats with side airbags. Such changes may disable the system, or cause the side airbags to inflate accidentally, resulting in death or serious injury. Consult your Lexus dealer if you insist on modifications of this kind.
- Do not use accessories for the seats which cover the parts where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or serious injury.

COMFORT ADJUSTMENT

Seat adjustment precautions

Adjust the driver's seat so that the foot pedals, steering wheel and instrument panel controls are within easy reach of the driver.



CAUTION

- Do not adjust the seat while the vehicle is moving as the seat may unexpectedly move and cause the driver to lose control of the vehicle.
- Be careful that the seat does not hit a passenger, luggage or the rear seat.

NOTICE


Do not operate the control switch in more than one dimension at a time. It may cause electrical overload.

Adjusting front seats



- ▶ **1** Seat position control switch, seat cushion angle and height control switch
- 2** Seatback angle control switch


Adjusting seat position

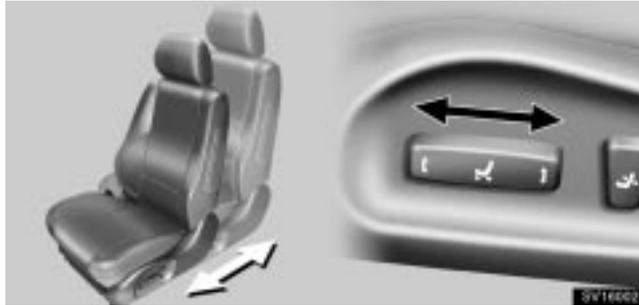

Move the control switch in the desired direction.

Releasing the switch will stop the seat in that position. Do not place anything under the seat, as this might interfere with the seat movement.

Adjusting seatback angle

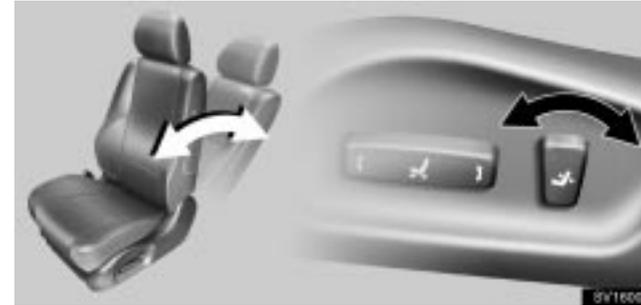

Move the control switch in the desired direction.

Releasing the switch will stop the seatback in that position.




CAUTION

To reduce the risk of sliding under the lap belt during a collision, avoid reclining the seatback any more than needed. The seat belts provide maximum protection in a frontal or rear collision when the driver and the passenger are sitting up straight and well back in the seats. If you are reclined, the lap belt may slide past your hips and apply restraint forces directly to the abdomen. In the event of a frontal collision, the more the seat is reclined, the greater the risk of personal injury.

COMFORT ADJUSTMENT

Adjusting seat cushion angle and height

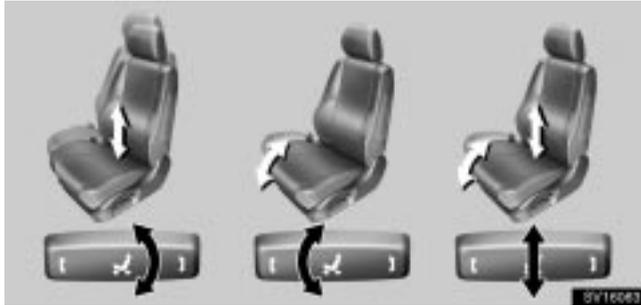

Move the control switch in the desired direction.


Releasing the switch will stop the seat cushion in that position.

TRUNK STORAGE EXTENSION



1. Pull down the center armrest in the rear seat.

Open the cover (a) by removing the strap and unzipping the fastener of the cover (a).

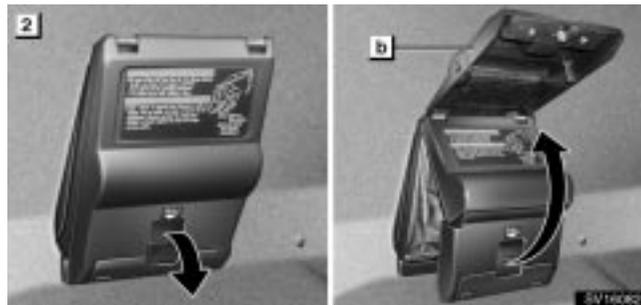

2. Pull the lever, lift the cover (a) up and fix it to the upper part of the trunk using the magnet attached on the cover (a).

Be sure to use "LEXUS Genuine Sports Gear, Bag" for carrying long objects (ski board, poles, etc.) properly.

For installation and handling of the "LEXUS Genuine Sports Gear", follow the instructions provided with goods.

⚠ CAUTION

Be sure to close the cover (a) and (b) when the trunk storage extension is not in use. Goods in the luggage compartment may be thrown into the passenger compartment in a sudden stop or crash resulting in injury.

HEAD RESTRAINTS

Front seats



To raise the head restraint, pull it up. To lower it, press the lock release button and push the head restraint down. To move the head restraint forward or rearward, pull or push on the top.


The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.

COMFORT ADJUSTMENT

CAUTION

- Adjust the center of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

Rear seats

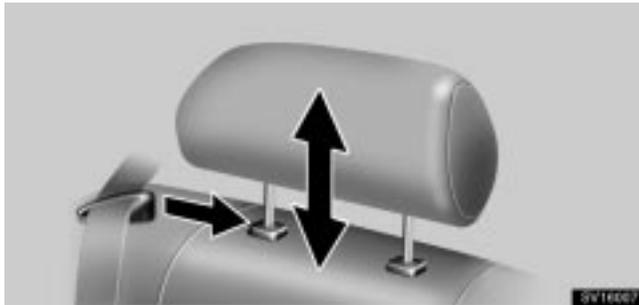

► *Outside rear seats*



► *Center rear seat*

To raise the head restraint, pull it up. To lower it, press the lock release button and push the head restraint down.

The head restraint is most effective when it is close to your head. Therefore, using a cushion on the seatback is not recommended.

CAUTION

- Adjust the center of the head restraint so that it is closest to the top of your ears.
- After adjusting the head restraint, make sure it is locked in position.
- Do not drive with the head restraints removed.

TILT STEERING WHEEL



To change the steering wheel angle, hold the steering wheel, pull the lock release lever toward you, tilt the steering wheel to the desired angle and release the lever.

When the steering wheel is in a low position, it will spring up as you release the lock release lever.

CAUTION

- Do not adjust the steering wheel while the vehicle is moving. It may cause the driver to mishandle the vehicle and an accident may occur resulting in death or injuries.
- After adjusting the steering wheel, try moving it up and down to make sure it is locked in position.

OUTSIDE REAR VIEW MIRRORS



Adjust the mirror so that you can just see the side of your vehicle in the mirror.

Be careful when judging the size or distance of any object seen in the outside rear view mirror on the passenger's side. It is a convex mirror with a curved surface. Any object seen in a convex mirror will look smaller and farther away than if seen in a normal flat mirror.

When the ignition switch is turned "ON", the heater panels in the outside rear view mirrors will quickly clear the surface.

The outside rear view mirror heater will operate while the ignition switch is "ON".

COMFORT ADJUSTMENT

CAUTION

- Do not adjust the mirror while the vehicle is moving. Doing so may cause the driver to mishandle the vehicle and an accident may occur, resulting in personal death or injuries.
- Since the mirror surfaces can get hot, keep your hands off them when the rear window and outside rear view mirror defogger switch is on.

Power rear view mirror control



► **1** Master switch **2** Control switch

To adjust the power rear view mirror, first place the master switch at "L" (left) or "R" (right), and push the control switch on the desired side.

The power rear view mirror can be adjusted when the key is in the "ACC" or "ON" position.

NOTICE

If ice should jam the mirror, do not operate the control or scrape the mirror face. Use a spray de-icer to free the mirror.

Folding rear view mirrors



To fold the rear view mirror, push backward.

The rear view mirrors can be folded backward for parking in restricted areas.

CAUTION

Do not drive with the mirrors folded backward. Both the driver and passenger side rear view mirrors must be extended and properly adjusted before driving.

INSIDE REAR VIEW MIRROR



► **1 Day 2 Night**

When driving at night, pull the lever toward you to reduce the glare from the headlights of vehicles behind you.

Before adjusting the mirror to the position with most clarity, push the day–night change lever forward (daylight driving position).

Remember that by reducing glare you also lose some rear view clarity.

CAUTION

Do not adjust the mirror while the vehicle is moving. Doing so may cause the driver to mishandle the vehicle and an accident may occur resulting in personal death or injuries.

SEAT BELTS

Seat belt precautions

Lexus strongly urges that the driver and passengers in the vehicle be properly restrained at all times with the seat belts provided. Failure to do so could increase the chance of injury and/or the severity of injury in accidents.

Child. Use a child restraint system appropriate for the child until the child becomes large enough to properly wear the vehicle's seat belts. See "Child restraint" on page 104 for details.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

If a child must sit in the front seat, the seat belts should be worn properly. Do not let the child sit on your lap. It does not provide sufficient restraint. If an accident occurs and the seat belts are not worn properly, the force of the rapid inflation of the airbag may cause severe injury to the child.

Do not allow the child to stand up or kneel on either rear or front seats. An unrestrained child could suffer serious injury or death during emergency braking or a collision.

Pregnant woman. Lexus recommends the use of a seat belt. Ask your doctor for specific recommendations. The lap belt should be worn securely and as low as possible over the hips and not on the waist.

COMFORT ADJUSTMENT

Injured person. Lexus recommends the use of a seat belt. Depending on the injury, first check with your doctor for specific recommendations.

CAUTION

Persons should ride in their seats properly wearing their seat belts whenever the vehicle is moving. Otherwise, they are much more likely to suffer serious bodily injury or death in the event of sudden braking or a collision.

When using the seat belts, observe the following:

- Use the belt for only one person at a time. Do not use a single belt for two or more people – even children.
- Avoid reclining the seatbacks too much. The seat belts provide maximum protection when the seatbacks are in the upright position. (See "Adjusting seatback angle" on page 74.)
- Be careful not to damage the belt webbing or hardware. Take care that they do not get caught or pinched in the seat or doors.
- Inspect the belt system periodically. Check for cuts, fraying, and loose parts. Damaged parts should be replaced. Do not disassemble or modify the system.

- Keep the belts clean and dry. If they need cleaning, use a mild soap solution or lukewarm water. Never use bleach, dye, or abrasive cleaners – they may severely weaken the belts. (See "Cleaning the interior" on page 284 for instructions.)
- Replace the belt assembly (including bolts) if it has been used in a severe impact. The entire assembly should be replaced even if damage is not obvious.

Fastening front and rear seat belts



Adjust the seat as needed and sit up straight and well back in the seat. To fasten your belt, pull it out of the retractor and insert the tab into the buckle.

You will hear a click when the tab locks into the buckle.

The seat belt length automatically adjusts to your size and the seat position.

COMFORT ADJUSTMENT

The retractor will lock the belt during a sudden stop or on impact. It also may lock if you lean forward too quickly. A slow, easy motion will allow the belt to extend, and you can move around freely.

When a passenger's shoulder belt is completely extended and is then retracted even slightly, the belt is locked in that position and cannot be extended. This feature is used to hold the child restraint system securely. (For details, see "Child restraint" on page 104.) To free the belt again, fully retract the belt and then pull the belt out once more.

If the seat belt cannot be pulled out of the retractor, firmly pull the belt and release it. You will then be able to smoothly pull the belt out of the retractor.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.




Adjust the position of the lap and shoulder belts.

- 1 Position the lap belt as low as possible on your hips – not on your waist.
- 2 Adjust it to a snug fit by pulling the shoulder portion upward through the latch plate.

CAUTION

- Both high-positioned lap belts and loose-fitting belts could cause serious injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on hips as possible.
- For your safety, do not place the shoulder belt under your arm.

COMFORT ADJUSTMENT

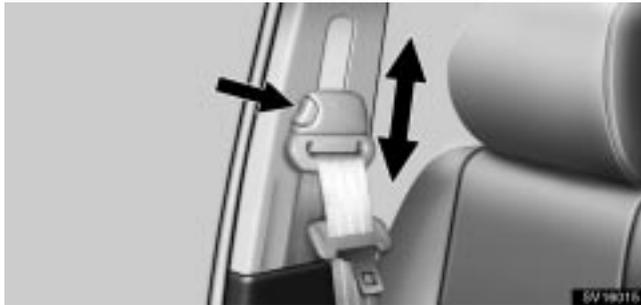

Adjust the shoulder anchor position to your size.

To raise the anchor position, push the anchor up. To lower the anchor position, support the anchor while you push the lock release button then slide the anchor down. After adjustment, make sure the anchor is locked in position.



To release the belt, press the buckle release button and allow the belt to retract.

If the belt does not retract smoothly, pull it out and check for kinks or twists. Then make sure it remains untwisted as it retracts.



CAUTION

Always make sure the shoulder belt is positioned across the center of your shoulder. The belt should be kept away from your neck, but not falling off your shoulder. Failure to do so could reduce the amount of protection in an accident and cause severe injuries in a collision.

Seat belt extender

If your seat belts cannot be fastened securely because they are not long enough, a personalized seat belt extender is available from your Lexus dealer free of charge.

Please contact your local Lexus dealer to order the proper required length for the extender. Bring the heaviest coat you expect to wear for proper measurement and selection of length. Additional ordering information is available at your Lexus dealer.

CAUTION

When using the seat belt extender, observe the following precautions. Failure to follow these instructions could reduce the effectiveness of the seat belt restraint system in case of vehicle accident, increasing the chance of personal injury.

- Never use the seat belt extender if you can fasten the seat belt without it.
- Remember that the extender provided for you may not be safe when used on a different vehicle, for another person or at a different seating position than the one originally intended.



To connect the extender to the seat belt, insert the tab into the seat belt buckle so that the "PRESS" signs on the buckle release buttons of the extender and the seat belt are both facing outward as shown.

You will hear a click when the tab locks into the buckle.

When releasing the seat belt, press on the buckle release button on the extender, not on the seat belt. This helps prevent damage to the vehicle interior and extender itself.

When not in use, remove the extender and store in the vehicle for future use.

COMFORT ADJUSTMENT

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the belt is not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the seat until the seat belt is fixed. It cannot protect an adult occupant or your child from injury.

Front seat belt pretensioners




The driver and front passenger's seat belt pretensioners are designed to be activated in response to a severe frontal impact.

When the airbag sensor detects the shock of a severe frontal impact, the front seat belts are quickly drawn back by the retractor so that the belts snugly restrain the front seat occupants.


The front seat belt pretensioners are activated even with no passenger in the front seat.

Collisions occurring at certain speeds and angles may cause the seat belt pretensioners and SRS airbags not to operate all together.

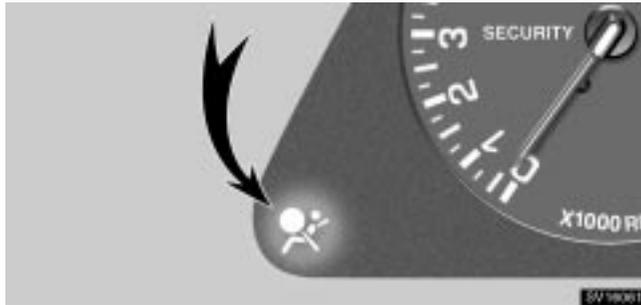

This indicator comes on when the ignition key is turned to the "ACC" or "ON" position. It goes off after about 6 seconds. This means the front seat belt pretensioners are operating properly.

The warning light system monitors the airbag sensor assembly, front airbag sensors, side airbag sensors, front seat belt pretensioner assemblies, inflators, warning light, interconnecting wiring and power sources. (For details, see "Service reminder indicators and warning buzzers" on page 38.)

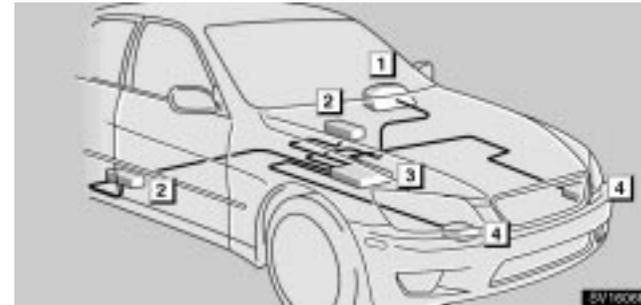

- ▶ **1** *Front airbag sensors*
- 2** *Front seat belt pretensioner assemblies*
- 3** *SRS warning light*
- 4** *Airbag sensor assembly*

The front seat belt pretensioner system consists mainly of the above components and their locations are shown in the illustration.

The front seat belt pretensioners are controlled by the airbag sensor assembly. The airbag sensor assembly consists of a safing sensor and airbag sensor.

When the front seat belt pretensioners are activated, an operating noise may be heard and a small amount of smoke-like gas may be released. This gas is harmless and does not indicate that a fire is occurring.

Once the front seat belt pretensioners have been activated, the seat belt retractors remain locked.

COMFORT ADJUSTMENT



CAUTION

Do not modify, remove, strike or open the front seat belt pretensioner assemblies, airbag sensor or surrounding area or wiring. Doing any of these may cause sudden operation of the front seat belt pretensioners or disable the system, which could result in death or serious injury.


Failure to follow these instruction can result in death or serious injury.

NOTICE

Do not perform any of the following changes without consulting your Lexus dealer. Such changes can interfere with proper operation of the front seat belt pretensioners in some cases.


- *Installation of electronic devices such as a mobile two-way radio, cassette tape player or compact disc player.*
- *Repairs on or near the front seat belt retractor assemblies.*
- *Modification of the suspension system.*
- *Modification of the front end structure.*
- *Attachment of a grille guard (bull bar, kangaroo bar, etc.), snowplow, winches or any other equipment to the front end.*
- *Repairs made on or near the front fenders, front end structure or console.*

COMFORT ADJUSTMENT

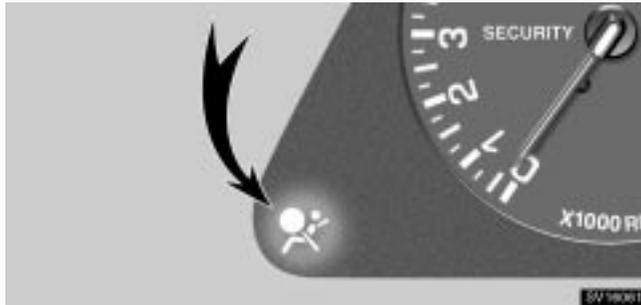

This front seat belt pretensioner system has a service reminder indicator to inform the driver of operating problems. If any of the following conditions occurs, this indicates a malfunction of the airbags or pretensioners. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the "ACC" or "ON" position, or remains on.
- The light comes on or flashes while driving.
- If either front seat belt does not retract or cannot be pulled out due to a malfunction or activation of the relevant front seat belt pretensioner.

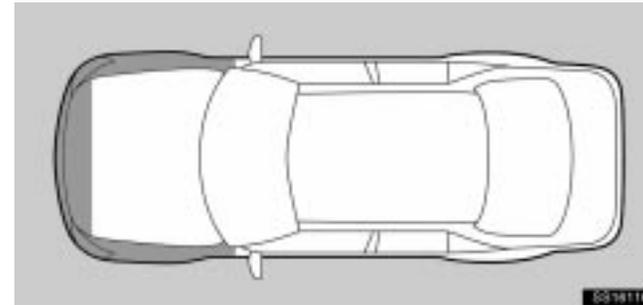

In the following cases, contact your Lexus dealer as soon as possible.

- The front part of the vehicle (shaded in the illustration) was involved in an accident that was not severe enough to cause the front seat belt pretensioners to operate.
- Either front seat belt pretensioner assembly or surrounding area is scratched, cracked, or otherwise damaged.

COMFORT ADJUSTMENT

SRS AIRBAGS

The SRS (Supplemental Restraint System) front airbags are designed to provide further protection for the driver and front passenger in addition to the primary safety protection provided by the seat belts.



► *Driver and front passenger airbags*

In response to a severe frontal impact, the driver and front passenger airbags work together with the seat belts to help reduce injury by inflating. The driver and front passenger airbags help to reduce injuries mainly to the driver's or front passenger's head or chest caused by directly hitting the steering wheel or dashboard.

The front passenger airbag is activated even with no passenger in the front seat.


Be sure to wear your seat belt properly.

Your vehicle is equipped with a crash sensing and diagnostic module, which will record the use of the seat belt restraint system by the driver and front passenger when the SRS airbags are inflated.

CAUTION

The driver or front passenger who is too close to the steering wheel or dashboard during airbag deployment can be killed or seriously injured. Lexus strongly recommends that:

- The driver sit as far back as possible from the steering wheel while still maintaining control of the vehicle.
- The front passenger sit as far back as possible from the dashboard.
- All vehicle occupants be properly restrained using the available seat belts.

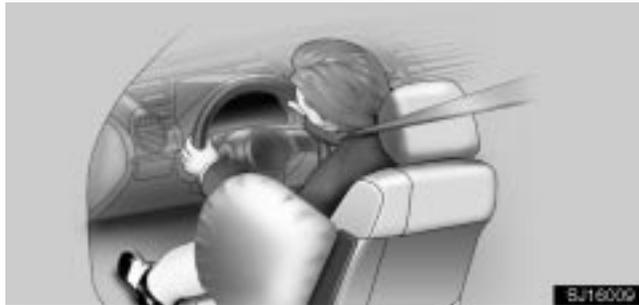

► **Side airbags**

In response to a severe side impact, the side airbags for the driver or front passenger work together with the seat belts to help reduce injury by inflating. The side airbags help to reduce injuries mainly to the driver or front passenger's chest.


The side airbag on the passenger seat is activated even with no passenger in the front seat.

Be sure to wear your seat belt.

! CAUTION

The side airbags inflate with considerable force. To avoid potential death or serious injury when they inflate, the driver and front passenger must:


- Wear their seat belts properly.
- Remain properly seated with their back upright and against the seat at all times.

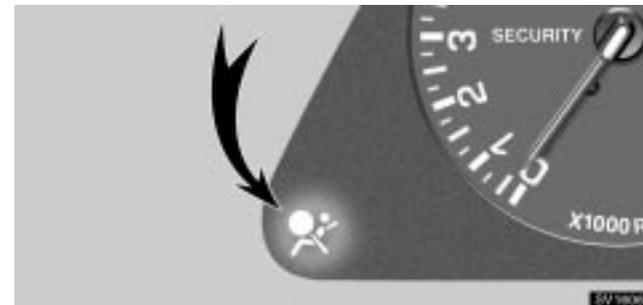

The indicator comes on when the ignition key is turned to the "ACC" or "ON" position. It goes off after about 6 seconds. This means the SRS airbags are operating properly.

The SRS warning light system monitors the airbag sensor assembly, front airbag sensors, side airbag sensors, door side airbag sensors, front seat belt pretensioner assemblies, inflators, warning light, interconnecting wiring and power sources. (For details, see "Service reminder indicators and warning buzzers" on page 38.)

COMFORT ADJUSTMENT

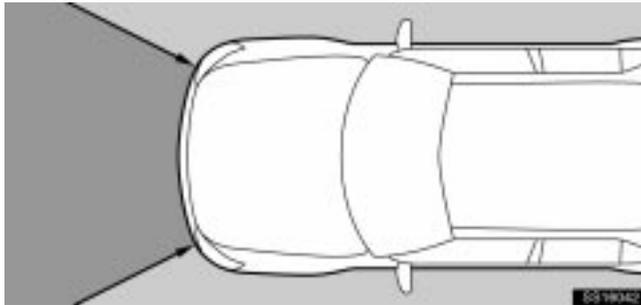

The SRS front airbag system is designed to activate in response to a severe frontal impact within the shaded area between the arrows in the illustration.


The SRS front airbags will work if the severity of the impact is above the designed threshold level, comparable to an approximate 25 km/h (15 mph) collision when impacting straight into a fixed barrier that does not move or deform.

If the severity of the impact is below the above threshold level, the SRS front airbags may not work.

However, this threshold velocity will be considerably higher if the vehicle strikes an object, such as a parked vehicle or sign pole, which can move or deform on impact, or if it is involved in an underride collision (e.g. a collision in which the nose of the vehicle "underrides", or goes under, the bed of a truck, etc.).

It is possible that in some collisions at the lower zone of airbag sensor detection and activation, the SRS airbags and seat belt pretensioners will not operate all together.


For the safety of all occupants, always wear your seat belts properly.

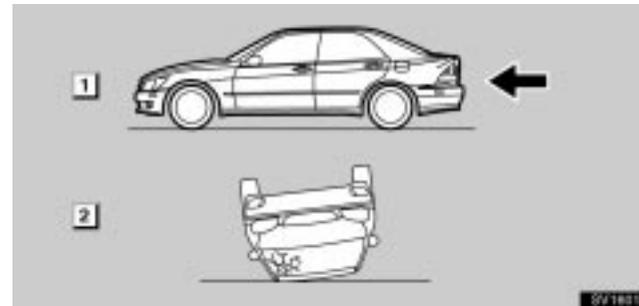

- ▶ **1** *Collision from the rear*
- 2** *Vehicle rollover*


The SRS front airbags are not designed to inflate if the vehicle is involved in a rear collision, if it rolls over, or if it is involved in a low-speed frontal collision.

The side airbags are designed to inflate when the passenger compartment area suffers a severe impact from the side.

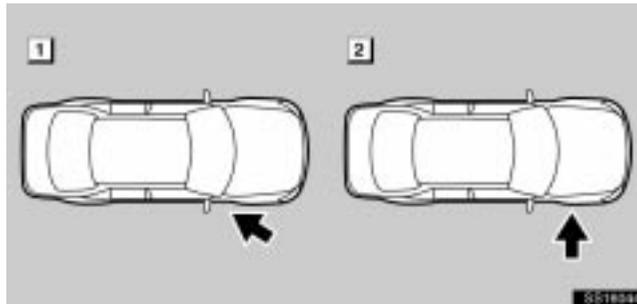

- ▶ **1** *Collision from the side at an angle*
- ▶ **2** *Collision from the side to the vehicle body other than the passenger compartment*


The side airbags may not inflate if the vehicle is subjected to a collision from the side at certain angles, or a collision to the side of the vehicle body other than the passenger compartment as shown in the illustration.

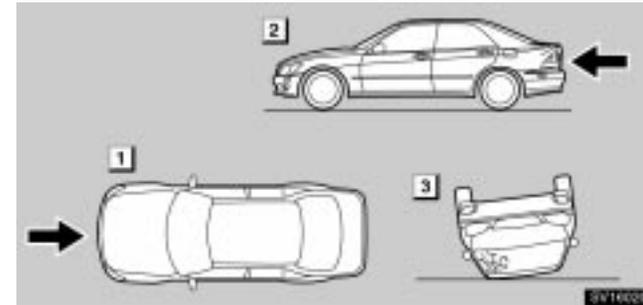

- ▶ **1** *Collision from the front*
- ▶ **2** *Collision from the rear*
- ▶ **3** *Vehicle rollover*


The side airbags are not designed to inflate if the vehicle is involved in a front or rear collision, if it rolls over, or if it is involved in a low-speed side collision.

COMFORT ADJUSTMENT

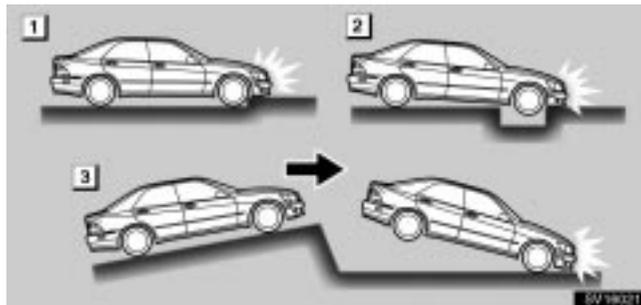

- ▶ **1** *Hitting a curb, edge of pavement or hard material*
- ▶ **2** *Falling into or jumping over a deep hole*
- ▶ **3** *Landing hard or vehicle falling*

The SRS front airbags may deploy if a serious impact occurs to the underside of your vehicle. Some examples are shown in the illustration.

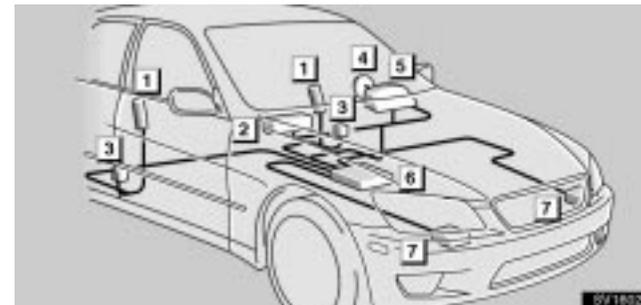

- ▶ **1** *Side airbag modules (airbag and inflator)*
- ▶ **2** *Airbag module for front passenger (airbag and inflator)*
- ▶ **3** *Side airbag sensors*
- ▶ **4** *Airbag module for driver (airbag and inflator)*
- ▶ **5** *SRS warning light*
- ▶ **6** *Airbag sensor assembly*
- ▶ **7** *Front airbag sensors*

The SRS airbag system consists mainly of the above components, and their locations are shown in the illustration.

The airbag sensor assembly consists of a safing sensor and airbag sensors.

In a severe frontal impact, the driver and front passenger airbag sensors detect deceleration and the system triggers the front airbag inflators. In a severe side impact, the side airbag sensor triggers the side airbag inflator. At this time a chemical reaction in the inflators quickly fills the airbags with non-toxic gas to help restrain the forward or lateral motion of the occupants.

When the SRS operates, it produces a fairly loud noise and release some smoke and residue along with non-toxic gas. This does not indicate a fire. This gas is normally harmless; however, for those who have delicate skin, it may cause a minor skin irritation. Be sure to wash off any residue as soon as possible to prevent any potential skin irritation.

Deployment of the airbags happens in a fraction of a second, so the airbags must inflate with considerable force. While the system is designed to reduce serious injuries, it may also cause minor burns or abrasions and swelling.

Parts of the airbag module (steering wheel hub, dashboard, front seats) may be hot for several minutes, but the airbags themselves will not be hot. The airbags are designed to inflate only once.


A crash severe enough to inflate the driver and front passenger airbags may break the windshield as the vehicle buckles. In vehicles with a front passenger airbag, the windshield may also be damaged by absorbing some of the force of the inflating airbag.



CAUTION

- **The SRS airbag system is designed only as a supplement to the primary protection of the driver side and front passenger side seat belt systems. The front seat occupants can be killed or seriously injured by the inflating airbags if they do not wear the available seat belts properly. During sudden braking just before a collision, an unrestrained driver or front passenger can move forward into direct contact with or close proximity to the airbag which may then deploy during the collision. To ensure maximum protection in an accident, the driver and all passengers in the vehicle must wear their seat belts properly. Wearing a seat belt properly during an accident reduces the chances of death or serious injury or being thrown out of the vehicle. For instructions and precautions concerning the seat belt system, see "Seat belts" on page 83.**
- **Improperly seated and/or restrained infants and children can be killed or seriously injured by the deploying front airbags. An infant or child who is too small to use a seat belt should be properly secured using a child restraint system. Lexus strongly recommends that all infants and children be placed in the rear seat of the vehicle and properly restrained. The rear seat is the safest for infants and children. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 104 .**

COMFORT ADJUSTMENT

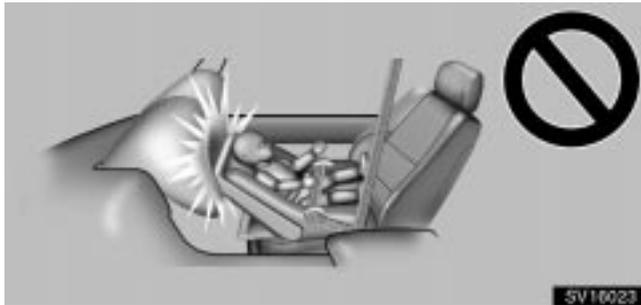

- Never put a rear-facing child restraint system on the front passenger seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.



► *Move seat fully back*

- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- Do not allow the child to lean against the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, because the impact could cause death or serious injury to the child.
- For instructions concerning the installation of a child restraint system, see "Child restraint" on page 104.

COMFORT ADJUSTMENT




- Do not sit on the edge of the seat or lean over the dashboard when the vehicle is in use. The front airbags inflate with considerable speed and force; you may be killed or seriously injured. Sit up straight and well back in the seat, and always use your seat belt properly.




- Do not lean against the front door when the vehicle is in use. The side airbag inflates with considerable speed and force; you may be killed or seriously injured.
- Sit up straight and well back in the seat, distributing your weight evenly in the seat. Do not apply excessive weight to the outer side of the front seats on vehicles with side airbags.

COMFORT ADJUSTMENT

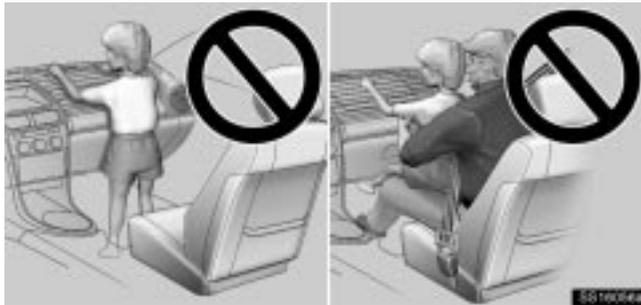

- Do not allow a child to stand up or to kneel on the front passenger seat. The front airbag inflates with considerable speed and force; the child may be killed or seriously injured.
- Do not hold a child on your lap or in your arms. Use a child restraint system in the rear seat. For instructions concerning the installation of a child restraint system, see "Child restraint" on page 104.

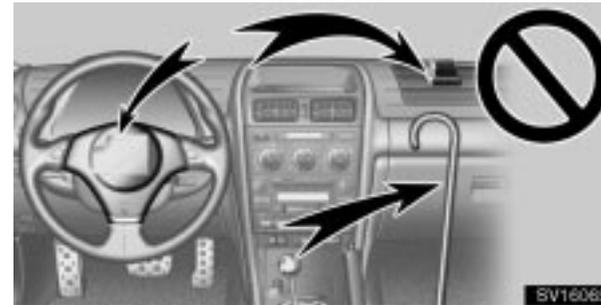

- Do not put objects or your pets on or in front of the dashboard or steering wheel pad that houses the driver and front passenger airbag system. They might restrict inflation or cause death or serious injury as they are projected rearward by the force of the deploying airbags. Likewise, the driver and front passenger should not hold objects in their arms or on their knees.

COMFORT ADJUSTMENT



- Do not attach a cup holder or any other device or object on or around the door. When the side airbag inflates, the cup holder or any other device or object will be thrown with great force, or the side airbag may not activate correctly, resulting in death or serious injury. Likewise, the driver and front passenger should not hold objects in their arms or on their knees.

- Do not use seat accessories which cover the parts where the side airbags inflate. Such accessories may prevent the side airbags from activating correctly, causing death or serious injury.
- Do not modify or remove any wiring. Do not modify, remove, strike or open any components, such as the steering wheel pad, steering wheel, column cover, front passenger airbag cover, front seats or airbag sensor assembly. Doing so may cause sudden SRS front airbag inflation or disable the system, which could result in death or serious injury.
- Do not modify or replace the seats or the upholstery of front seats with side airbags. Such changes may disable the system or cause the side airbags to inflate accidentally, resulting in death or serious injury.


Failure to follow these instructions can result in death or serious injury. Consult your Lexus dealer if you insist on modifications of this kind.

COMFORT ADJUSTMENT

NOTICE

Do not perform any of the following changes without consulting your Lexus dealer. Such changes can interfere with proper operation of the SRS airbag system in some cases.

- *Installation of electronic devices such as a mobile two-way radio, cassette tape player or compact disc player.*
- *Modification of the suspension system.*
- *Modification of the front end structure and side structure of the passenger compartment.*
- *Attachment of a grille guard (bull bar, kangaroo bar, etc.), snowplow, winches or any other equipment to the front end.*
- *Repairs made on or near the front fenders, front end structure, console, steering column, steering wheel, dashboard near the front passenger airbag or front seats.*

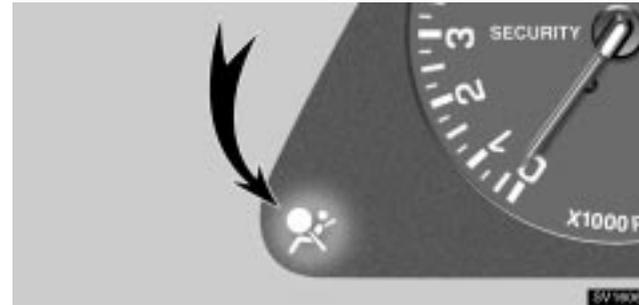

This SRS front airbag system has an indicator to inform the driver of operating problems. If either of the following conditions occurs, this indicates a malfunction of the airbags. Contact your Lexus dealer as soon as possible to service the vehicle.

- When the ignition key is turned to the "ACC" or "ON" position, the light does not come on, stays on or flashes.
- The light comes on or starts flashing while driving.

If the light stays on, it indicates that the driver and front passenger airbags fail. If the light flashes, the side airbags fail.

COMFORT ADJUSTMENT



- The surface of the seats with the side airbags or the pad section of the steering wheel or front passenger airbag cover (shaded in the illustration) is scratched, cracked, or otherwise damaged.

NOTICE

Do not disconnect the battery cables before contacting your Lexus dealer.

In the following cases, contact your Lexus dealer as soon as possible:

- Any of the SRS airbags have been inflated.
- The front of the vehicle and portion of the doors (shaded in the illustration) were involved in an accident that was not severe enough to cause the SRS airbags to inflate.

COMFORT ADJUSTMENT

CHILD RESTRAINT

Child restraint precautions

Lexus strongly urges the use of child restraint systems for children small enough to use them.

The laws of all fifty states in the U.S.A. and Canada now require the use of a child restraint system.

Your vehicle conforms to SAE J1819.

If a child is too large for a child restraint system, the child should sit in the rear seat and must be restrained using the vehicle's seat belt. See "Seat belts" on page 83 for details.



CAUTION

- For effective protection in automobile accidents and sudden stops, a child must be properly restrained, using a seat belt or child restraint system depending on age and size. Holding a child in your arms is not a substitute for a child restraint system. In an accident, the child can be crushed against the windshield, or between you and the vehicle's interior if you are unrestrained.
- Lexus strongly urges use of a proper child restraint system which conforms to the size of the child, installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.

- Never put a rear-facing child restraint system on the front seat. In the event of an accident, the force of the rapid inflation of the airbag can cause death or serious injury if a rear-facing child restraint system is put on the front seat.
- Unless it is unavoidable, do not put a forward-facing child restraint system on the front seat.
- A forward-facing child restraint system should be allowed to be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying airbag could cause death or serious injury to the child. Do not allow the child to lean over the front door or around the front door even if the child is seated in the child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.
- Make sure you have complied with all installation instructions provided by the child restraint manufacturer and that the system is properly secured. On vehicles with side airbags, do not allow the child to lean over the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.

Child restraint system

A child restraint system for a small child or baby must itself be properly restrained on the seat with the lap portion of the lap/shoulder belt. You must carefully consult the manufacturer's instructions which accompany the child restraint system.

To provide proper restraint, use a child restraint system following the manufacturer's instructions about the appropriate age and size of the child for the restraint system.

Install the child restraint system correctly following the instructions provided by its manufacturer of the system. General directions are also provided under the following illustrations.

The child restraint system should be installed on the rear seat. According to accident statistics, the child is safer when properly restrained in the rear seat than in the front seat.



CAUTION

- Never put a rear-facing child restraint system on the front seat. In the event of an accident, the force of the rapid inflation of the airbag can cause death or serious injury if a rear-facing child restraint system is put on the front seat.
- Unless it is unavoidable, do not put a forward-facing child restraint system on the front seat.
- A forward-facing child restraint system should be allowed to be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of a deploying airbag could cause death or serious injury to the child.
- On vehicles with side airbags, do not allow the child to lean over the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.
- After installing the child restraint system, make sure it is secured in place according to the manufacturer's instructions. If it is not restrained securely, it may cause death or serious injury to the child in the event of a sudden stop or accident.

COMFORT ADJUSTMENT

When not using the child restraint system, keep it secured with the seat belt or place it in the trunk or somewhere other than in the passenger compartment. This will prevent it from injuring passengers in the event of a sudden stop or accident.

Your vehicle has anchor brackets for securing the top strap of a child restraint system.

For instructions about how to use the anchor bracket, see "Using a top strap" on page 117.


Types of child restraint system

Child restraint systems are classified into the following 3 types depending on the child's age and size.

- (A) Infant seat
- (B) Convertible seat
- (C) Booster seat

Install the child restraint system following the instructions provided by its manufacturer.

(A) Infant seat

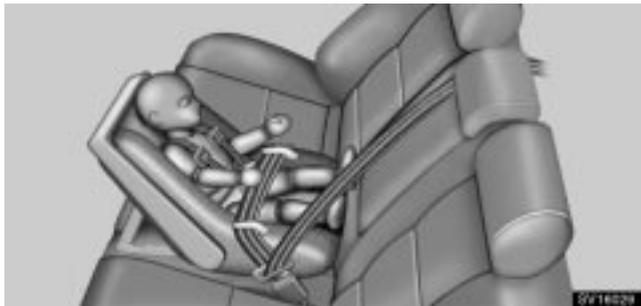

(B) Convertible seat




(C) Booster seat




INSTALLATION WITH 3-POINT TYPE SEAT BELT

(A) Infant seat installation

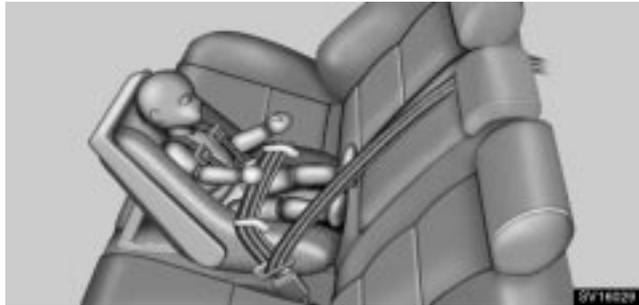


An infant seat is used in rear-facing position only.

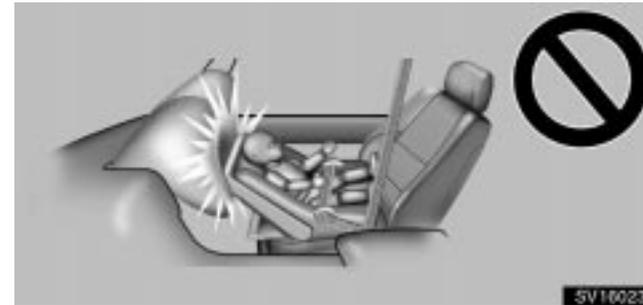


 **CAUTION**

Never put a rear-facing child restraint system on the front passenger seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.

COMFORT ADJUSTMENT

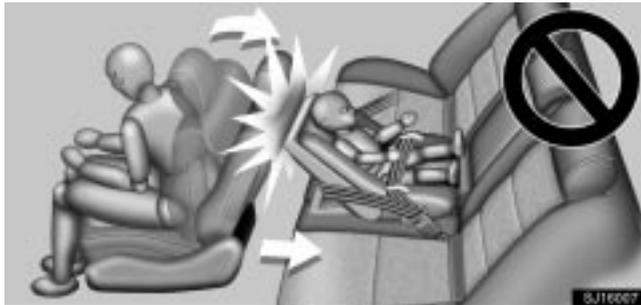

- If the driver's seat position does not allow sufficient space for safe installation, install the child restraint system on the rear right seat.

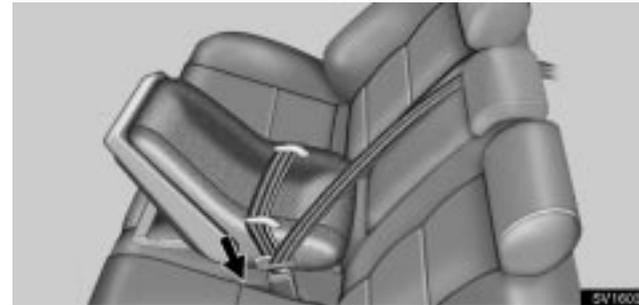


1. Run the lap and shoulder belt through or around the infant seat following the instructions provided by its manufacturer and inserting the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.

CAUTION


- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the child restraint seat until the seat belt is fixed. It cannot protect your child from injury.

COMFORT ADJUSTMENT

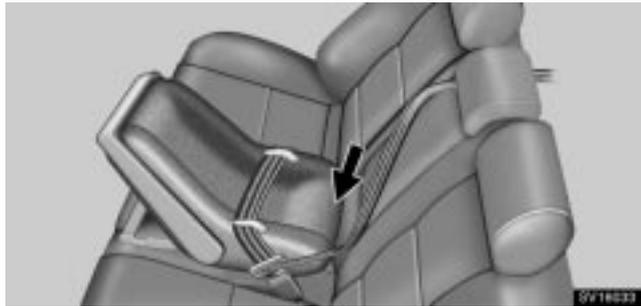


2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted even slightly, it cannot be extended.

To hold the infant seat securely, make sure the belt is in the lock mode before letting the belt retract.

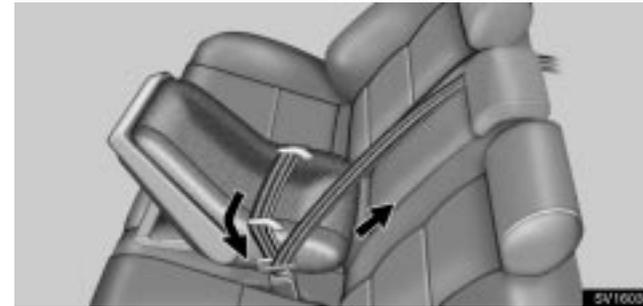


3. While pressing the infant seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the infant seat securely.

COMFORT ADJUSTMENT

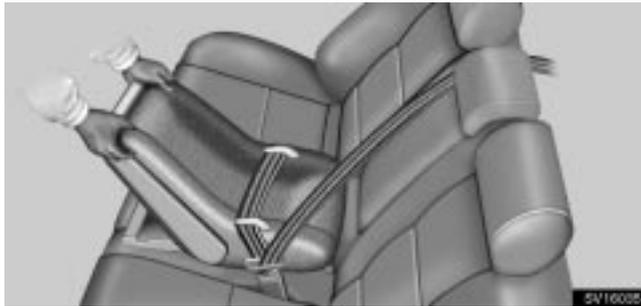

CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

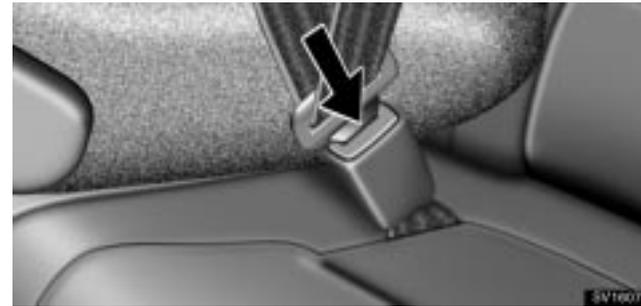


4. To remove the infant seat, press the buckle-release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger.

(B) Convertible seat installation




A convertible seat is used in forward-facing or rear-facing position depending on the age and size of the child. When installing, follow the manufacturer's instructions about the appropriate age and size of the child as well as directions for installing the child restraint system.

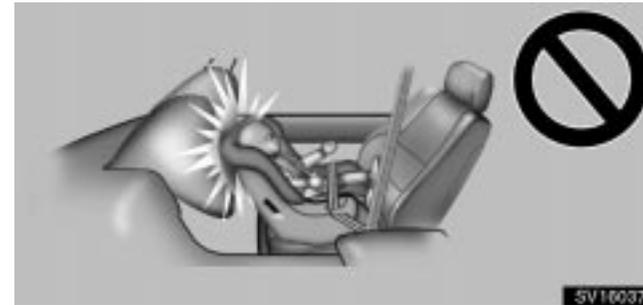

⚠ CAUTION

- **Never put a rear-facing child restraint system on the front passenger seat because the force of the rapid inflation of the front passenger airbag can cause death or serious injury to the child.**

COMFORT ADJUSTMENT

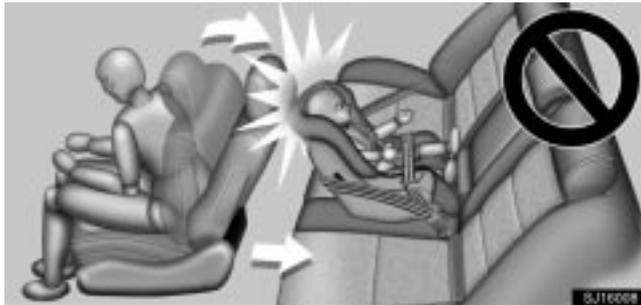

- If the driver's seat position does not allow sufficient space for installation, install the child restraint system on the rear right seat.



► *Move seat fully back*

- A forward-facing child restraint system should be allowed to be put on the front passenger seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- On vehicles with side airbags, do not allow the child to lean over the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, and the impact could cause death or serious injury to the child.

COMFORT ADJUSTMENT



1. Run the lap and shoulder belt through or around the convertible seat following the instructions provided by its manufacturer and inserting the tab into the buckle taking care not to twist the belt. Keep the lap portion of the belt tight.



2. Fully extend the shoulder belt to put it in the lock mode. When the belt is then retracted slightly, it cannot be extended.

To hold the convertible seat securely, make sure the belt is in the lock mode before letting the belt retract.

CAUTION

- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent you from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the child restraint seat until the seat belt is fixed. It cannot protect your child from injury.




3. While pressing the convertible seat firmly against the seat cushion and seatback, let the shoulder belt retract as far as it will go to hold the convertible seat securely.

COMFORT ADJUSTMENT



CAUTION

Push and pull the child restraint system in different directions to be sure it is secure. Follow all the installation instructions provided by its manufacturer.

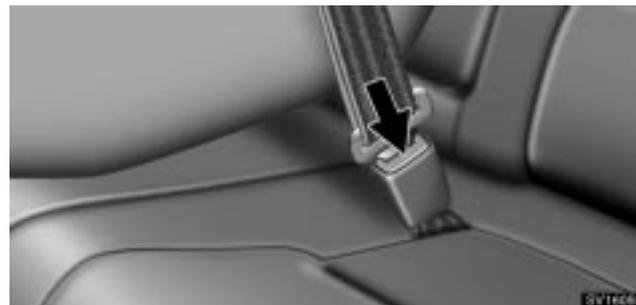

4. To remove the convertible seat, press the buckle-release button and allow the belt to retract completely. The belt will move freely again and be ready to work for an adult or older child passenger.

(C) Booster seat installation



A booster seat is used in forward-facing position only.



► Move seat fully back

 CAUTION

- A forward-facing child restraint system should be allowed to be put on the front seat only when it is unavoidable. Always move the seat as far back as possible, because the force of the deploying front passenger airbag could cause death or serious injury to the child.
- On vehicles with side airbags, do not allow the child to lean over the front door or around the front door even if the child is seated in a child restraint system. It is dangerous if the side airbag inflates, because the impact could cause death or serious injury to the child.

COMFORT ADJUSTMENT



1. Sit the child on a booster seat. Run the lap and shoulder belt through or around the booster seat and child following the instructions provided by its manufacturer and insert the tab into the buckle.

Make sure the shoulder belt is correctly across the child's shoulder and that the lap belt is positioned as low as possible on child's hips. See "Seat belts" on page 83 for details.




CAUTION

- Always make sure the shoulder belt is positioned across the center of child's shoulder. The belt should be kept away from child's neck, but not falling off child's shoulder. Failure to do so could reduce the amount of protection in an accident and cause serious injuries in a collision.


- Both high-positioned lap belts and loose-fitting belts could cause serious injuries due to sliding under the lap belt during a collision or other unintended result. Keep the lap belt positioned as low on a child's hip as possible.
- For child's safety, do not place the shoulder belt under child's arm.
- After inserting the tab, make sure the tab and buckle are locked and that the lap and shoulder portions of the belt are not twisted.
- Do not insert coins, clips, etc. in the buckle as this may prevent your child from properly latching the tab and buckle.
- If the seat belt does not function normally, immediately contact your Lexus dealer. Do not use the child restraint seat until the seat belt is fixed. It cannot protect your child from injury.

COMFORT ADJUSTMENT

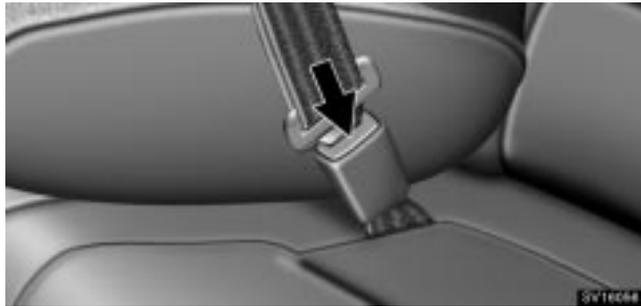

2. To remove the child restraint system, press the buckle-release button and allow the belt to retract.

Using a top strap

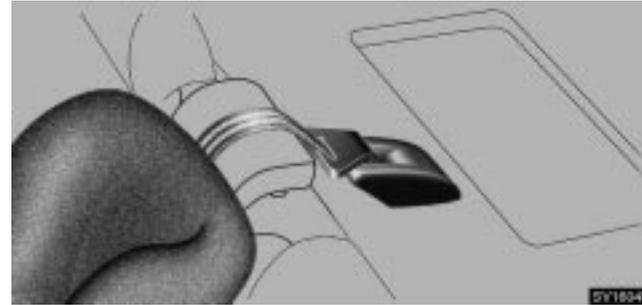

Follow the procedure below for a child restraint system that requires the use of a top strap.

COMFORT ADJUSTMENT




► Anchor brackets

Use the anchor bracket on the filler panel behind the rear seat to attach the top strap.

Anchor brackets are installed for each rear seating position.



► Center seat position

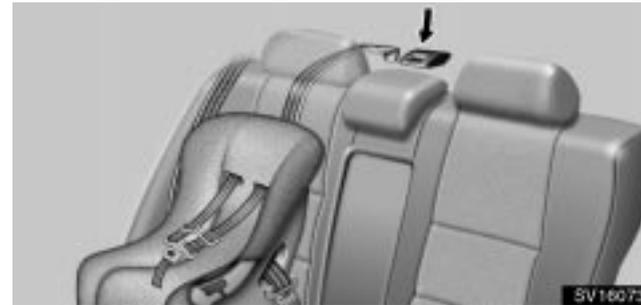

► Side seat position

1. Fix the child restraint system with the seat belt.
2. Latch the hook onto the anchor bracket and tighten the top strap.

For instructions to install the child restraint system, see "Type of child restraint system" on page 106.

CAUTION

- Make sure the top strap is securely latched, and check that the child restraint system is secure by pushing and pulling it in different directions.
- Follow all the installation instructions provided by its manufacturer.

SECTION 1 - 7

INSTRUMENTS AND CONTROLS

Theft deterrent

Theft deterrent system	120
Theft prevention labels	121

THEFT DETERRENT

THEFT DETERRENT SYSTEM

To deter theft of the vehicle, this system is designed to sound an alarm if any of the doors, trunk or hood is forcibly unlocked or the battery terminal is disconnected and then reconnected while the vehicle is locked.*

*NOTE: *The system operating condition can be changed. Ask your Lexus dealer for details.*

The alarm blows the horn intermittently and flashes the headlights, tail lights and other exterior lights.



Setting the system

1. Turn the ignition key to the "LOCK" position and remove it.

The engine immobiliser system causes the indicator light to flash.

2. Close and lock all the doors, trunk and hood using an ignition key or wireless remote control.

The flashing indicator light will remain on when all the doors, trunk and hood are closed and locked.

3. After 30 seconds, the indicator starts flashing and the system is set.

Cancelling the system

When you unlock any door or trunk using an ignition key or wireless remote control, the system is cancelled.

Activating the system

The alarm sounds for 60 seconds if any of the following are operated:

- Unlocking any door or trunk without using an ignition key or wireless remote control.
- Opening the hood forcibly.
- Reconnecting the battery.

If any door is unlocked and the ignition key is not in the ignition switch during the alarm sounding, its door is automatically locked.

To stop the alarm: Use either of the following methods.

- Unlock the door or trunk using an ignition key or wireless remote control.
- Turn the ignition switch on.

Testing the system

1. Open all the windows.
2. Set the system as described above.

The front doors should be locked with the ignition key or wireless remote control. Be sure to wait until the indicator light starts flashing.

3. Unlock one of the doors from the inside.

The system should activate the alarm.

4. Unlock any of the doors with a key or the wireless remote control to cancel the system.

5. Repeat this operation for the other doors and hood.

When testing the hood, also check that the system is activated when the battery terminal is disconnected and then reconnected.

If the system does not work properly, have it checked by your Lexus dealer.

NOTICE

Disconnecting the battery may result in the erasure of information you have set in the computer memory. After reconnecting the battery, check that the memorized data has been retained. If it has been erased, input it into the computer once more.

THEFT PREVENTION LABELS



Your new vehicle carries theft prevention labels which are approximately 56 mm (2.20 in.) by 16 mm (0.63 in.).

The purpose of these labels is to reduce the incidence of vehicle thefts by facilitating the tracing and recovery of parts from stolen vehicles. The label is designed so that once it is applied to a surface, any attempt to remove it will result in destroying the integrity of the label. Transferring these labels intact from one part to another will be impossible.

NOTICE

You should not attempt to remove the theft prevention labels as it may violate certain state or federal laws.

SECTION 2 - 1

AIR CONDITIONING AND AUDIO

Air conditioning

Automatic air conditioning controls 124

AIR CONDITIONING

AUTOMATIC AIR CONDITIONING CONTROLS



► **You can adjust the brightness of the display. See "Instrument panel light control" on page 46 for details.**

The automatic air conditioning automatically maintains the set temperature.

In the automatic operation mode, the air conditioning selects the most suitable fan speed, air flow, air intake and on-off of the air conditioning according to the temperature.


The ignition key must be in the "ON" position.

NOTICE

To prevent the battery from being discharged, do not leave the air conditioning on longer than necessary when the engine is not running.

- 1** *Automatic air flow control position*
- 2** *Air flow control dial*
- 3** *Air intake control button*
- 4** *Temperature control dial*
- 5** *Automatic fan speed control position*
- 6** *Air conditioning on-off button*
- 7** *Fan speed control dial*

AIR CONDITIONING

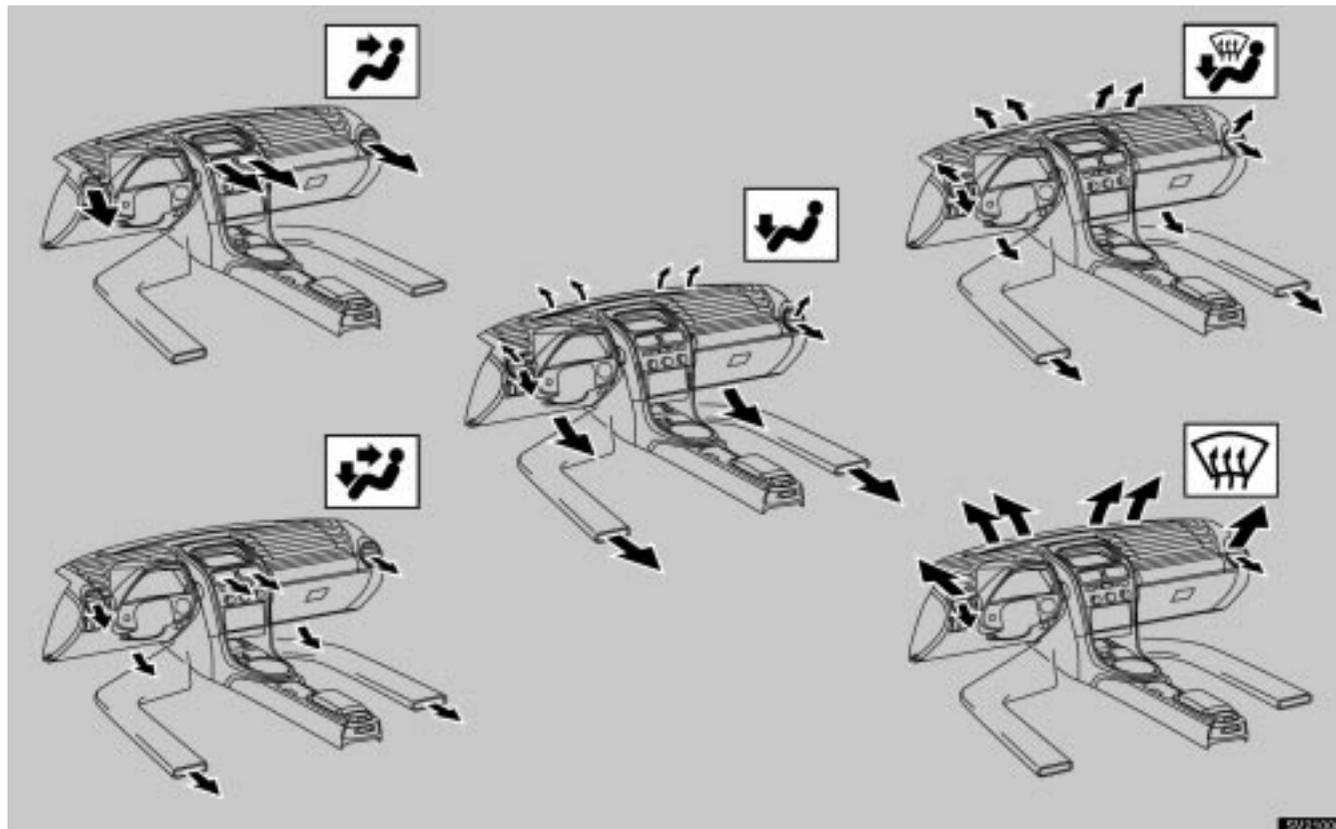

► *Air flow selection*

(a) Climate control

SETTING OPERATION – automatic control



1. Set the air flow control dial and the fan speed control dial to "AUTO" positions.

An indicator light will illuminate to show that the automatic operation mode has been selected.

Air flow quantity and switching of the diffusers are automatically adjusted.

When one of the manual control dials is turned while operating in automatic mode, the operation corresponding to the dial turned is set. Other conditions continue to be adjusted automatically.

When the fan speed control dial is turned to "OFF", the fan is turned off.

If the "A/C" button indicator flashes, there is a problem in the air conditioning system and the air conditioning automatically shuts off. If this happens, take your vehicle to your Lexus dealer for service.



2. Turn the temperature control dial to set the desired temperature.

The temperature control dial is used to set the desired passenger compartment temperature. The temperature of air delivered to the passenger compartment will be controlled automatically according to the setting. The figures on the panel indicate degrees Fahrenheit.

When you adjust the temperature control dial to maximum cooling, the air intake mode will be automatically changed to RECIRCULATED AIR.

AIR CONDITIONING

SETTING OPERATION – manual control

If manual air flow selection is desired –



The outlets from which air is delivered can be selected manually by pushing the button. The function of each mode is as follows:

- 1 Panel** – Air flows mainly from the instrument panel vents.
- 2 Bi-level** – Air flows from both the floor vents and the instrument panel vents.
- 3 Floor** – Air flows mainly from the floor vents.
- 4 Floor/Windshield** – Air flows mainly from the floor vents and windshield vents.

Set the air flow control dial to the floor/windshield position turns on the defogging function with the purpose of clearing the front view.

Use with the air intake control positioned in fresh.

Press the "A/C" button for dehumidified heating or cooling. This setting clears the front view more quickly.

- 5 Windshield** – Air flows mainly from the windshield vents.

Set the air flow control dial to the windshield position turns on the defogging function with the purpose of clearing the front view.

This position allows the air intake to select FRESH automatically. This is to clean up the front view more quickly.

If you want to return the setting to RECIRCULATE mode, press the air intake selector button one again.

Press "A/C" button for dehumidified heating or cooling. This setting clears the front view more quickly.

If quick heating or cooling is desired –

Turn the temperature control dial fully to the right (max. hot) or fully to the left (max. cold).

If manual fan speed control is desired –



► **1** Fan speed at low **2** Fan speed at high

The fan speed can be set to your desired speed by turning the fan speed control dial. The higher the fan speed is, the more air is delivered. Turning the dial to "OFF" turns off the fan.

To remove exterior windshield frost, use the high speed setting.

If manual switching of air intake is desired –



The air intake control button is used to switch the air intake between the OUTSIDE AIR mode and RECIRCULATED AIR mode.

With the button in the OUTSIDE AIR mode, the OUTSIDE AIR mode indicator light will come on and the system will take fresh outside air into the vehicle.

If quick circulation of cooled air is desired, push the air intake control button for RECIRCULATED AIR. The RECIRCULATED AIR mode indicator light will come on.

For normal use, it is best to keep the air intake control button set to OUTSIDE AIR mode. If recirculated air is used during heating, the windows will fog up more easily.

AIR CONDITIONING

If manual on-off of the air conditioning is desired –

Push the "A/C" button to turn the air conditioning on and push it again to turn the air conditioning off.

The air conditioning does not work if the outside temperature is lowered down to around 0°C (32°F).

If the system is used for ventilation, heating in dry weather or removing frost or exterior fog on the windshield, turn the air conditioning off once it is no longer required. This will improve fuel economy. The air conditioning can be used for year-round automatic temperature control including cooling and dehumidifying operation.

If the air conditioning compressor does not operate, the indicator of the "A/C" button will blink. If the indicator of the "A/C" button blinks even when the "A/C" button is pushed again, have the compressor checked by your nearest Lexus dealer.

(b) Windshield defogging and defrosting



To remove interior fog on the windshield –

1. Turn the air flow control dial to "WINDSHIELD".
2. Set the "OUTSIDE AIR" mode.

To remove frost or exterior fog on the windshield –

1. Turn the temperature control dial to the maximum temperature.
2. Turn the air flow control dial to "WINDSHIELD".
3. Turn the fan speed control dial to "HI".
4. Leave the air conditioning on-off button off.

⚠ CAUTION


Do not use the "FRONT WINDSHIELD" button during cooled air operation in extremely humid weather. The difference between the temperature of the outside air and that of the windshield could cause the outer surface of the windshield to fog up blocking your vision.

(c) Air filter

The air filter may clog after long use which will reduce the air flow. However, you can inspect the filter easily.

The air conditioning filter may clog after long use. The filter may need to be replaced if the air flow of the air conditioner and heater experiences extreme reductions in operating efficiency, or if the windows become to fog up easily.

When you inspect and replace the air filter, be sure to turn off the fan.

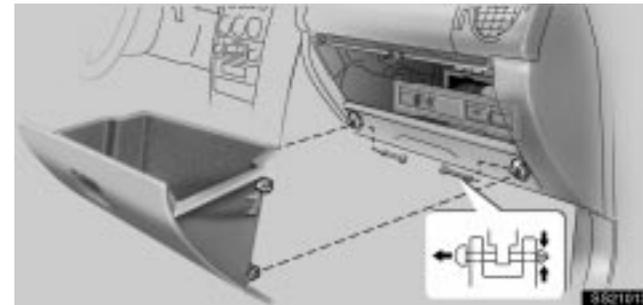


1. Remove the glove box.

Remove belongings stored in the glove box, and remove the two pins installed on the lower part of the glove box, and remove the glove box.

2. Remove the cover.

AIR CONDITIONING

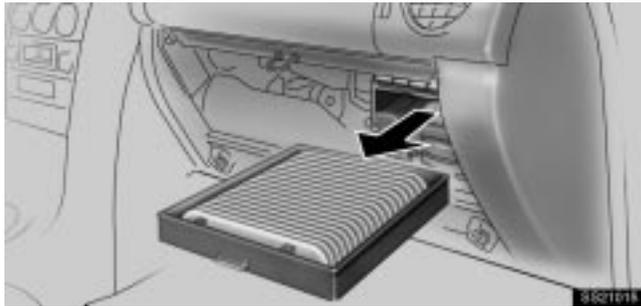

3. Take out the air filter.

If it is dirty, it should be replaced. To maintain the air conditioning efficiency, replace the air filter according to the maintenance schedule. (For scheduled maintenance information, please refer to the "Owner's Manual Supplement / Maintenance Schedule".)

INFORMATION

The air filter should be installed properly in position. The use of air conditioning with the air filter removed may cause deteriorated dustproof performance and then affect air conditioning performance.

(d) Operating tips

- To help cool down the interior after parking in the hot sun, drive for the first few minutes with the windows open. After the excess heat has blown away, close the windows.
- Make sure the air inlet grilles in front of the windshield are not blocked by leaves or other obstructions.
- If air flow control is not satisfactory, check the dashboard vents. (See "Center vents" and "Side vents".)
- On humid days, do not blow cold air on the windshield. The windshield could fog up because of the difference in air temperature on the inside and outside of the windshield.
- Keep the area under the front seats clear to allow air to circulate throughout the vehicle.
- On cold days, set the fan speed selector to adjust the fan speed high for a minute to help clear the intake ducts of snow or moisture. This can reduce the amount of fogging on the windows.
- When driving on dusty roads, close all windows. If dust thrown up by the vehicle is still drawn into the vehicle after closing the windows, it is recommended that the air intake control button be left to the OUTSIDE AIR mode and the fan speed control dial be turned to anywhere except the "OFF" button.
- If following another vehicle on a dusty road, or driving in windy and dusty conditions, it is recommended that the air intake control button be temporarily pressed in to the RECIRCULATED AIR mode, which will close off the outside passage and prevent outside air and dust from entering the vehicle interior.

Heating

For best results, set controls to:

For automatic operation –

Set the air flow control dial and the fan speed control dial to "AUTO" position.
Temperature – To the desired temperature
Air intake – **OUTSIDE AIR**

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **WARM** (to the right)
Air intake – **OUTSIDE AIR**
Air flow – **FLOOR**

- For quick heating, select RECIRCULATED AIR for a few minutes. To keep the windows from fogging, select OUTSIDE AIR after the vehicle interior has been warmed.
- Push the "A/C" button on for dehumidified heating.
- Choose floor/windshield air flow to heat the vehicle interior while defrosting or defogging the windshield.

Air conditioning

For best results, set controls to:

For automatic operation –

Set the air flow control dial and the fan speed control dial to "AUTO" position.
Temperature – To the desired temperature
Air intake – **OUTSIDE AIR**

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **COLD** (to the left)
Air intake – **OUTSIDE AIR**
Air flow – **PANEL**

- For quick cooling, select RECIRCULATED AIR for a few minutes.

Ventilation

For best results, set controls to:

For automatic operation –

Set the air flow control dial and the fan speed control dial to "AUTO" position.
Temperature – Towards low temperature
Air intake – **OUTSIDE AIR**

AIR CONDITIONING

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **COLD** (to the left)
Air intake – **OUTSIDE AIR**
Air flow – **PANEL**

Defogging and defrosting

– The inside of the windshield

For best results, set controls to:

For automatic operation –

Temperature – Towards high temperature to heat;
low temperature to cool
Air intake – **OUTSIDE AIR**
AIR FLOW – **WINDSHIELD**

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **WARM** (to the right) to heat;
COLD (to the left) to cool
Air intake – **OUTSIDE AIR**
Air flow – **WINDSHIELD**

Set the air flow control dial to the windshield or floor/windshield position turns on the defogging function with the purpose of clearing the front view.

When turning the air flow selector to windshield position, the air intake selects FRESH automatically. This is to clean up the front view more quickly.

If you want to return the setting to RECIRCULATE mode, press the air intake selector button once again.

Press the "A/C" button for dehumidified heating or cooling. This setting clears the front view more quickly.

- On humid days, do not blow cold air on the windshield – the difference between the outside and inside temperatures could make the fogging worse.

– The outside of the windshield

For best results, set controls to:

For automatic operation –

Temperature – Towards high temperature
Air intake – **OUTSIDE AIR**
Air flow – **WINDSHIELD**

For manual operation –

Fan speed – To the desired fan speed
Temperature – Towards **WARM** (to the right)
Air intake – **OUTSIDE AIR**
Air flow – **WINDSHIELD**

Set the air flow control dial to the windshield or floor/windshield position turns on the defrosting function with the purpose of clearing the front view.

When turning the air flow selector to windshield position, the air intake selects FRESH automatically. This is to clean up the front view more quickly.

If you want to return the setting to RECIRCULATE mode, press the air intake selector button once again.

Press the "A/C" button for dehumidified heating or cooling. This setting clears the front view more quickly.

- To heat the vehicle interior while defrosting the windshield, choose floor/windshield air flow.

Center vents



The center vents may be opened or closed as shown.

Side vents



The side vents may be opened or closed as shown.

SECTION 2 - 2

AIR CONDITIONING AND AUDIO


Audio

Audio system	138
--------------------	-----

AUDIO

AUDIO SYSTEM

Quick reference for your audio system

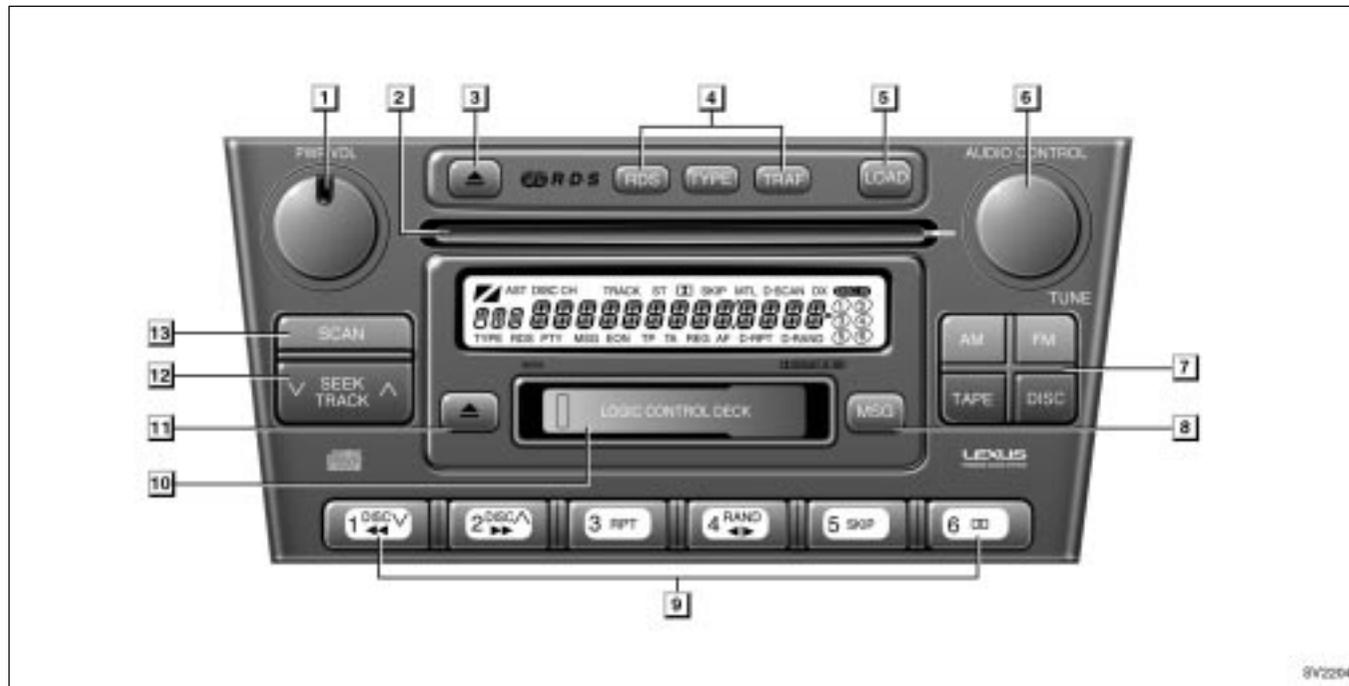

► You can adjust the brightness of the display. See "Instrument panel light control" on page 46 for details.

- | | |
|---|---|
| <p>1 Turning the system on and adjusting the volume
(See page 140 for details.)</p> <p>2 Compact disc slot
(See page 153 for details.)</p> <p>3 Ejecting a compact disc
(See page 153 for details.)</p> <p>4 Radio data system/Traffic announcement/
Program type
(See page 146 for details.)</p> <p>5 Compact disc pre-load button
(See page 153 for details.)</p> <p>6 Audio control knob/Frequency tuning
(See page 141 for details.)</p> <p>7 Mode selectors
(See page 140 for details.)</p> <p>8 Message
(See page 149 for details.)</p> <p>9 Function buttons</p> <p>1 – 6: Station selector buttons
(See page 144 for details.)</p> <p>v Λ : Disc selection
(See page 155 for details.)</p> <p>RPT: Automatic repeat
(See page 152 or 157 for details.)</p> | <p>RAND: Random access
(See page 157 for details.)</p> <p>SKIP: Automatic skip of blank portions of tape
(See page 152 for details.)</p> <p>◀◀: Rewinding or reversing
(See page 151 or 156 for details.)</p> <p>▶▶: Fast forwarding
(See page 151 or 156 for details.)</p> <p>◀▶: Side change
(See page 151 for details.)</p> <p>DOLBY NR button
(See page 151 for details.)</p> <p>10 Cassette tape slot
(See page 150 for details.)</p> <p>11 Ejecting a cassette tape
(See page 150 for details.)</p> <p>12 Radio mode: Frequency tuning
(See page 143 for details.)</p> <p>TAPE mode: Direct access to a desired program
(See page 152 for details.)</p> <p>CD mode: Direct access to a desired program
(See page 156 for details.)</p> <p>13 Scan tuning button
(See page 145 for details.)</p> |
|---|---|

AUDIO

Using your audio system: some basics

This section describes some of the basic features of the Lexus audio system. Some information may not pertain to your system.

Your audio system works when the ignition key is in the "ACC" or "ON" position.

NOTICE

To prevent the battery from being discharged, do not leave the car audio on longer than necessary when the engine is not running.

(a) Turning the system on and off



Push this knob to turn the audio system on and off. Turn this knob to adjust the volume.

The system turns on in the last mode used.



Push "AM", "FM", "TAPE" or "DISC" to turn on that mode. The selected mode turns on directly.

Push these buttons if you want to switch from one mode to another.

If the tape or disc is not set, the cassette player or compact disc player does not turn on.

You can turn off the cassette player by ejecting the cassette tape. If the audio system was previously off, then the entire audio system will be turned off when you eject the cassette tape. If another function was previously playing, it will come on again.



In the "TAPE" or "CD" mode, the applicable functions are shown in the lowest part of the display. Push the switch just below to turn on each function.

(b) Tone and balance

How good an audio program sounds to you is largely determined by the mix of the treble, mid-range, and bass levels. In fact, different kinds of music and vocal programs usually sound better with different mixes of treble, mid-range, and bass.

A good balance of the left and right stereo channels and of the front and rear sound levels is also important.

Keep in mind that if you are listening to a stereo recording or broadcast, changing the right/left balance will increase the volume of one group of sounds while decreasing the volume of another.



Each time you push the "AUDIO CONTROL" knob, the display changes as in the following. To adjust the tone and balance, turn the knob.

BAS: Adjusts low-pitched tones.

MID: Adjusts mid-pitched tones.

TRE: Adjusts high-pitched tones.

FADE: Adjusts the sound balance between the front and rear speakers.

BAL: Adjusts the sound balance between the right and left speakers.

AUDIO

(c) Your radio antenna

To remove an antenna, carefully turn it counterclockwise.

NOTICE

To prevent damage to the antenna, make sure it is removed before driving your vehicle through an automatic car wash.

(d) Your cassette player

When you insert a cassette, the exposed tape should be to the right.

NOTICE

Do not oil any part of the cassette player, and do not insert anything except a cassette tape into the slot.

(e) Your automatic changer



Your automatic changer can store up to 6 discs and play selected discs or continuously play all the discs set in the player.

When you set discs into the player, make sure their labels face up. If not, the player will display "ERR 1" and the disc number.

NOTICE

- *Never try to disassemble or oil any part of the compact disc player. Do not insert anything except a compact disc into the slot.*
- *Do not insert a disc upon another one.*

The player is intended for use with 12 cm (4.7 in.) discs only.


Radio operation

(a) Listening to the radio



Push these buttons to choose either an AM or FM station.

"AM", "FM1" or "FM2" appears on the display.

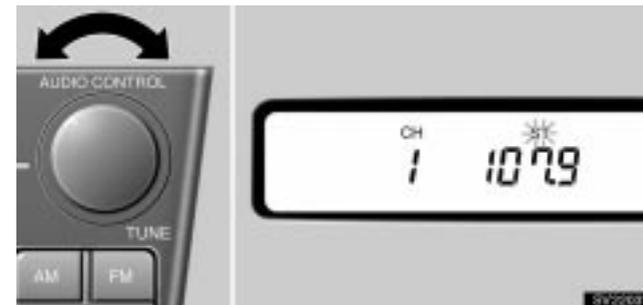

Turn the knob clockwise to step up the frequency. Turn the knob counterclockwise to step down the frequency.

Your radio automatically changes to stereo reception when a stereo broadcast is received. "ST" appears on the display. If the signal becomes weak, the radio reduces the amount of channel separation to prevent the weak signal from creating noise. If the signal becomes extremely weak, the radio switches from stereo to mono reception. In this case, "ST" disappears from the display.

AUDIO

(b) Presetting a station



1. Tune in the desired station.
2. Push one of the station selector buttons (1–6) and hold it until a beep is heard. This sets the station to the button and the button number (1–6) appears on the display.

Each button can store one AM station and two FM stations. To change the preset station to a different one, follow the same procedure.

The preset station memory is cancelled when the power source is interrupted by battery disconnection or a blown fuse.

(c) Selecting a station

Your Lexus has an electronic tuning radio (ETR). Tune in the desired station using one of the following methods.



Preset tuning: Push the button (1–6) for the station you want. The button number (1–6) and station frequency appear on the display.

Manual tuning: Turn the "AUDIO CONTROL" knob clockwise to step up the frequency. Turn the knob counterclockwise to step down the frequency. (See page 143.)

Seek tuning: Push the "SEEK" button. The radio will begin seeking up or down for a station of the nearest frequency and will stop on reception. Each time you push the button, the stations will be searched out one after another.



To scan all the frequencies: Push the "SCAN" button briefly. "SCAN" appears on the display. The radio will find the next station up the band, stay there for a few seconds, and then scan again. To select a station, push the "SCAN" button a second time.



To scan the preset stations: Push the "SCAN" button until you hear a beep. "SCAN" appears on the display. The radio will tune in the next preset station up the band, stay there for a few seconds, and then move to the next preset station. To select a station, push the "SCAN" button a second time.

AUDIO

(d) RDS (Radio Data System)

AF (Alternative Frequency) function: A station providing good reception is automatically selected if current reception worsens.



When you push the RDS button briefly, "RDS SEARCH" is displayed and all the FM frequencies are searched. If no RDS station is found, "NOTHING" is displayed for 2 seconds and then disappears. If the appropriate stations are found, "FOUND XXST" is displayed and began the reception of one of these stations. (The band is FM type in that case.) If you want to cancel the RDS function, push the RDS button until you hear a beep sound. Then, "RDS" disappears. (RDS is set up ON initially. In order to turn the RDS on after canceling, push the button to search appropriate stations. After the RDS stations are found, RDS will be set up ON.) AF function is ON when "RDS" is displayed. REG is fixed to ON mode. ("REG" never be displayed.)

TRAF (Traffic Announcement) function: A station that regularly broadcasts traffic information is automatically located and broadcast when the program starts.



"TA" is displayed while receiving a station broadcasting traffic information.

"TP" blinks when the TP mode (Traffic Program standby mode) is ON and the TP (Traffic Program) station is not received. "TP" is displayed when the TP station is received.

1. When you push the TRAF button, "TP" blinks. Also "TRAF SEEK" is displayed and a station broadcasting traffic information is sought. ("TP" is lit on the display.) When the station broadcasting traffic information began to be received, "TRAF ANNOUNCE" is displayed. If the reception ends, the display disappears. If any station is not found after circulating a search, "NO TRAF INFO" is displayed for 2 seconds and "TP" disappears.

2. To cancel the TA mode, push the "TRAF" button until "TP" disappears from the display.

3. When the "TRAF" button is pushed in the "TAPE" or "CD" mode, a station broadcasting traffic information is sought and "TA" appears on the display.

When the traffic information program starts, the "TAPE" or "CD" mode is interrupted and the traffic information is automatically broadcast. During a traffic announcement, "Traf Announce" will appear on the display. When the program ends, the initial operation resumes.

Traffic announcement can be canceled by turning RDS off, or pressing the "TRAF" button again.

(e) TYPE (Program Types)


This button is used for program type (PTY) search of RDS stations. 8 program types are available as listed here.

When the RDS search (program type search) is not performed, the TYPE button is unavailable. It become available in the FM type-band after RDS search is performed.

If a program type search has previously been performed in FM1 or FM2, the radio will return to the last active program type.

If you are already in FM type mode and a program type is not already being displayed, pushing this button will recall the display for the current program type.

After a program type is being displayed, subsequent pushes within 6 seconds will toggle through the available program types. Pushing the "TYPE" button repeatedly will increment or decrement the display through the available program types in the following order.

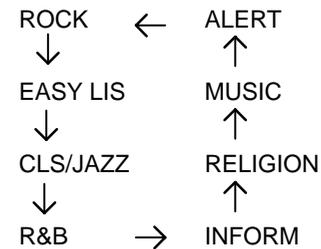

AUDIO

If a type search was started, it can be canceled as described in "RDS".

The following program type names are available. After a program type search, the radio will display one of the following program types for 6 seconds, then the program type name for 6 seconds (if available). After that, it will display the program service name of the current station. The following table lists each display and its program type.

Display	Program type (PTY)
MISC	0
INFORM	1
INFORM	2
INFORM	3
INFORM	4
ROCK	5
ROCK	6
EASY LIS	7
EASY LIS	8
EASY LIS	9
ROCK	10
ROCK	11
ROCK	12
CLS/JAZZ	13
CLS/JAZZ	14
CLS/JAZZ	15
R&B	16
R&B	17
MISC	18
RELIGION	19

RELIGION	20
MISC	21
MISC	22
MISC	23
MISC	24
MISC	25
MISC	26
MISC	27
MISC	28
MISC	29
MISC	30
ALERT	31

(f) MSG (Message)

This button is used to display a radio text message. It is also used to store and recall radio text messages.

To receive radio text, turn RDS on (see "RDS"), and tune to an RDS station that broadcasts radio text messages. When the radio receives a radio TEXT message, "MSG" will appear on the display. Push this button at this time to display the radio text message. The message display will be canceled if you activate any function that affects the display. After the entire message has been displayed, the message will disappear. To view the message again, push this button a second time.

To store a radio text message, push and hold this button for more than 1.7 seconds while the message is being displayed. A beep will sound, indicating that the message has been stored. At this time "MSG STORED" appears on the display. Up to three 64-character message can be stored. If 3 messages are already in storage, the oldest message will be removed to make room for a new message.

To recall a radio text message, push this button for less than 1.7 seconds. The most recently received stored message will appear on the display, even if it has already been displayed. Pushing this button for less than 1.7 seconds while the most recent message is being displayed will recall the newest stored message. If 2 or more message have been stored, the other stored messages will be toggled through each time you push this button (while a stored message is on display).

AUDIO

If no messages have been stored, or if there are no more messages to be recalled, "NO MSG STORED" will appear on the display, and the message display will be canceled. The display then returns to show the program service name. The message display will be canceled if you activate any function that affects the display.

Message display can be canceled by pressing any of the following buttons: "AM", "FM", "CD", "TAPE", "LOAD", "SEEK", "TUNE", any preset, "SCAN", any audio control, "RDS", or "<TYPE>". If the current station is not a traffic program and traffic announcements is off, pushing "TRAF" will cancel the display. The message will be canceled after the entire message has been displayed.

(g) "ALERT" display

The alert program type sends emergency alert messages. The radio will receive alert messages if it is on and tuned to an RDS station, or if the previous station was an RDS station. If the radio receives an alert announcement, it will interrupt the previous mode, display "ALERT".

Cassette tape player operation

(a) Playing a cassette tape



When you insert a cassette tape, the exposed tape should face to the right.

The player will automatically start when you insert a cassette tape. At this time, "PLAY" appears on the display.

If a metal or chrome equivalent cassette tape is put in the cassette player, the player will automatically adapt to it and "MTL" appears on the display.

To stop or eject the cassette tape, push the "EJECT" button.

Auto-reverse feature: After the cassette player reaches the end of a tape, it automatically reverses and begins to play the other side, regardless of whether the cassette was playing or fast forwarding.



If a cassette is already in the slot, push the "TAPES" button.

Dolby® DD B Noise Reduction* feature: If you are listening to a tape that was recorded with Dolby® B Noise Reduction, push the button marked with the double-D symbol. The double-D symbol will appear on the display. Push the button again to turn off Dolby® B NR.

The Dolby NR mode reduces tape noise by about 10 dB. For best sound reproduction, play your tapes with this button on or off according to the mode used for recording the tape.

To play a tape recorded without Dolby NR, push the button until the symbol disappears from the display.

*: Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation. "DOLBY" and the double D symbol DD are trademarks of Dolby Laboratories Licensing Corporation.

(b) Manual program selection



"Program" button: Push the "◀▶" button to select the other side of a cassette tape. The display indicates which side is currently selected (▲ indicates top side, ▼ indicates bottom side).

"Rewind" button: Push the "◀◀" button to rewind a tape. "REW" appears on the display.

To stop rewinding, push the same button or "TAPES" button.

"Fast forward" button: Push the "▶▶" button to fast forward a cassette tape. "FF" appears on the display.

To stop fast forwarding, push the same button or "TAPES" button.

AUDIO

(c) Automatic program selection



"RPT" button: The repeat feature automatically replays the current program.

Push the "RPT" button while the program is playing. When the program ends, it will automatically be rewound and replayed. Push the button again to turn off the repeat feature.

There must be at least 5 seconds of blank space between programs for the repeat feature to work correctly.

"SKIP" button: The skip feature allows you to fast forward past long stretches of blank tape. This is especially useful at the end of cassettes.

Push the "SKIP" button. The player will automatically skip any blank portions of 15 seconds or more and play the next program. To cancel it, push the button once again.



"Automatic program selection" button: The automatic program selection feature allows you to program your cassette player to skip forward or backward to locate the song you want to hear. You can skip up to nine programs at a time.

Push this button on the upper side to skip forward. "FF" and the number will appear on the display. Push the button until the number you want to skip appears on the display. After that, the player will automatically skip forward.

When the end of the tape is reached, the player automatically reverses sides and resumes normal play.

Push this button on the lower side to skip backward. Push the button until "REW" and the number you want to skip appear on the display.

- If you set "REW 1", the player will rewind to the beginning of the current program.
- When counting the number of programs you want to rewind, remember to count the current program as well. For example, if you want to rewind to a song that is two before the song you are listening to, push this button until "REW 3" appears on the display.

When the beginning of the tape is reached, the player automatically resumes normal play.

There must be at least 5 seconds of blank space between programs for this feature to work correctly.

"RPT", "SKIP" or "Automatic program selection" features: These features may not work well with some spoken word, live or classical recordings.

Compact disc player operation

This compact disc player can store 6 discs in the player. The discs can be inserted or ejected while the ignition switch is at "ACC" or "ON".

(a) How to insert and eject the compact discs



1. Push the "LOAD" button. Push the button briefly for one disc, and when inserting more than one disc, push and hold the button until a beep sounds.

2. Insert the disc into the compact disc slot. A maximum of 6 discs can be inserted into the player.

If the indicator blinking in amber at the next to the compact disc slot turns into the green light, you can insert the disc into the slot. The "LOAD DISC 4" is displayed at that time. (If you push LOAD, the indicator blinks in amber. "WAIT DISC 4" is displayed while the system is being under preparation for inserting disc.

AUDIO

When the display shows "DISC IN" with all the indicators (1–6) on, the player already has 6 discs inside, so you can not insert any more.

If you do not insert the discs within 15 seconds after pushing the "LOAD" button and "LOAD" is displayed, the operation will be canceled automatically.



3. When ejecting one disc, select the disc you want to eject by the function button "DISC 1" or "DISC 2", and push the "EJECT" button briefly. When ejecting more than one disc, push and hold the "EJECT" button until a beep sounds and take out the disc ejected from the slot.

(b) Playing a compact disc



Push the "DISC" button if the discs are already loaded in the player.

The discs set in the player are played continuously, starting with disc number 1. The disc number of the disc currently being played, the track number and the time from the beginning of the program appear on the display.

When play of one disc ends, the first track of the following disc starts. When play of the final disc ends, play of the first disc starts again.

The player will skip any empty disc trays.

(c) Selecting a desired disc



Push the "DISC ∇ " or "DISC \wedge " button to select the disc number.

Push the button several times until the desired disc number appears on the display. When you release the button, the player will start playing the selected disc from the first track.

(d) Searching for a desired track



Push the "SCAN" button briefly.

"SCAN" will appear on the display. The compact disc player will play the next track for 10 seconds, then scan again. To select a track, push the "SCAN" button a second time. If the player reaches the end of the disc, it will continue scanning at track 1.

After all the tracks are scanned in one pass, normal play resumes.

AUDIO

(e) Searching for a desired disc



Push the "SCAN" button until you hear a beep.

With "D-SCAN" on the display, the program at the beginning of each disc will be played for 10 seconds. To continue listening to the program of your choice, push the "SCAN" button a second time.

After all the discs in the player are scanned in one pass, the scan function is cancelled.

(f) Selecting a desired track



"TRACK" button: Use for direct access to a desired track.

Push either side of the "TRACK" button several times until the desired track number appears on the display. As you release the button, the player will start playing the selected track from the beginning.

"Fast forward" button.

Push the "▶▶" button and hold it to fast forward the disc. When you release the button, the compact disc player will resume playing from that position.

"Reverse" button.

Push the "◀◀" button and hold it to reverse the disc. When you release the button, the compact disc player will resume playing.

(g) Other compact disc player functions

"RPT" button: Use it for automatic repeat of the track you are currently listening to.

In order to repeat the track you are currently listening to, push the button briefly while the track is playing. "RPT" will appear on the display. When the track is finished, the player will automatically go back to the beginning of the track and play the track again. To cancel it, push the button briefly once again.

In order to repeat the disc you are currently listening to, push the button until you hear a beep. "D[RPT]" will appear on the display. When the last track of the disc you are listening to is finished, the player will automatically go back to the first track on the disc and play the disc again. To cancel it, push the button once again.

"RAND" button: Use it for automatic track selection and play by the system.

When the button is pushed briefly, the system selects a track in the disc which are set and plays it and "RAND" will appear on the display. To cancel it, push the button briefly once again.

When the button is pushed until you hear a beep, the system selects a track in the all discs which are set and plays it and "D[RAND]" will appear on the display. To cancel it, push the button once again.

When a track is skipped or the system is inoperative, push the button to reset.

AUDIO

(h) If the player malfunctions

If the player or another unit equipped with the player malfunctions, your audio system will display one of the four following error messages.

If "ERR 1" appears on the display: It indicates that the disc is dirty, damaged, or it was inserted up-side down. Clean the disc or insert it correctly.

If "ERR 3" or "ERR 4" appears on the display: It indicates there is a trouble inside the system. Eject the disc.

If the malfunction is not rectified: Take your vehicle to your Lexus dealer.

Car audio system operating hints

NOTICE

To ensure correct audio system operations:

- ***Be careful not to spill beverages over the audio system.***
- ***Do not put anything other than a cassette tape or compact disc into the cassette tape slot or compact disc slot.***
- ***The use of a cellular phone inside or near the vehicle may cause a noise from the speakers of the audio system which you are listening to. However, this does not indicate a malfunction.***

Radio reception

Usually, the problem with radio reception does not mean there is a problem with your radio – it is just the normal result of conditions outside the vehicle.

For example, nearby buildings and terrain can interfere with FM reception. Power lines or telephone wires can interfere with AM signals. And of course, radio signals have a limited range. The farther you are from a station, the weaker its signal will be. In addition, reception conditions change constantly as your vehicle moves.

Here are some common reception problems that probably do not indicate a problem with your radio:

FM

Fading and drifting stations – Generally, the effective range of FM is about 40 km (25 miles). Once outside this range, you may notice fading and drifting, which increase with the distance from the radio transmitter. They are often accompanied by distortion.

Multi-path – FM signals are reflective, making it possible for two signals to reach your antenna at the same time. If this happens, the signals will cancel each other out, causing a momentary flutter or loss of reception.

Static and fluttering – These occur when signals are blocked by buildings, trees, or other large objects. Increasing the bass level may reduce static and fluttering.

Station swapping – If the FM signal you are listening to is interrupted or weakened, and there is another strong station nearby on the FM band, your radio may tune in the second station until the original signal can be picked up again.

AM

Fading – AM broadcasts are reflected by the upper atmosphere – especially at night. These reflected signals can interfere with those received directly from the radio station, causing the radio station to sound alternately strong and weak.

Station interference – When a reflected signal and a signal received directly from a radio station are very nearly the same frequency, they can interfere with each other, making it difficult to hear the broadcast.

Static – AM is easily affected by external sources of electrical noise, such as high tension power lines, lightening, or electrical motors. This results in static.

AUDIO

Caring for your cassette player and tapes

For the best performance for your cassette player and tapes:

Clean the tape head and other parts regularly.


- A dirty tape head or tape path can decrease sound quality and tangle your cassette tapes. The easiest way to clean them is by using a cleaning tape. (A wet type is recommended.)

Use high-quality cassettes:

- Low-quality cassette tapes can cause many problems, including poor sound, inconsistent playing speed, and constant auto-reversing. They can also get stuck or tangled in the cassette player.
- Do not use a cassette if it has been damaged or tangled or if its label is peeling off.
- Do not leave a cassette in the player if you are not listening to it, especially if it is hot outside.
- Store cassettes in their cases and out of direct sunlight.
- Avoid using cassettes with a total playing time longer than 100 minutes (50 minutes per side). The tape used in these cassettes is thin and could get stuck or tangled in the cassette player.


Caring for your compact disc player and discs

- Use only compact discs labeled as shown above. CD-R (CD-Recordable), CD-RW (CD-Re-writable) and personal computer use CD-ROMs may not be playable on your compact disc player.
- Your compact disc player is intended for use with 12 cm (4.7 in.) discs only.
- Extremely high temperature can keep your compact disc player from working. On hot days, use air conditioning to cool the vehicle interior before you listen to a disc.
- Bumpy roads or other vibrations may make your compact disc player skip.
- If moisture gets into your compact disc player, you may not hear any sound even though your compact disc player appears to be working. Eject all discs from the player and wait until it dries.

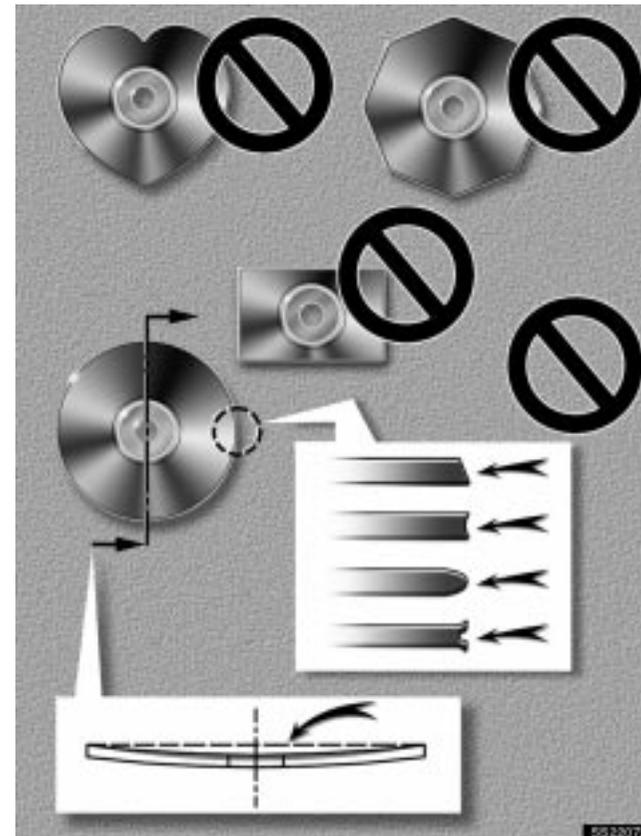

AUDIO

Your automatic changer cannot play special shaped or low-quality compact discs such as those shown here. Do not use them as the changer could be damaged.

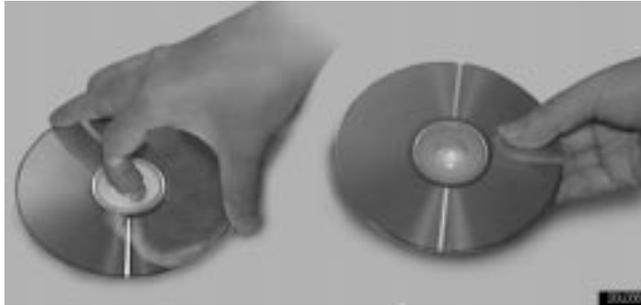

► **Correct**

► **Wrong**

- Handle compact discs carefully, especially when you set them into the player. Hold them on the edge and do not bend them. Avoid getting fingerprints on them, particularly on the shiny side.
- Dirt, scrapes, warping, pin holes, or other disc damage could cause the player to skip or to repeat a section of a track. (To see a pin hole, hold the disc up to the light.)



To clean a compact disc: Wipe it with a soft, lint-free cloth that has been dampened with water. Wipe in a straight line from the center to the edge of the disc (not in a circle). Do not use a conventional record cleaner or anti-static device.

 **CAUTION**

Compact disc players use an invisible laser beam which could cause hazardous radiation exposure if directed outside the unit. Be sure to operate the player correctly.

SECTION 3-1

STARTING AND DRIVING

Starting and driving

Three-way catalytic converter	164
Engine exhaust caution	165
Before starting the engine	166
Ignition switch with steering lock	167
Parking brake	168
How to start the engine	168
Automatic transmission	169
Electronic throttle control system	179
Cruise control	180
Traction control system	183
Brake system	184
Brake pad wear indicators	188
Types of tires	188
Limited-slip differential	189

THREE-WAY CATALYTIC CONVERTER



Three-way catalytic converters are emission control devices installed in the exhaust system.

It looks somewhat like a muffler, but its purpose is to reduce pollutants in the exhaust gas.



CAUTION

- Keep people and combustible materials away from the exhaust pipe while the engine is running. The exhaust gas is very hot.
- Do not drive, idle or park your vehicle over anything that might burn easily such as grass, leaves, paper or rags.

NOTICE

A large amount of unburned gases flowing into the three-way catalytic converter may cause it to overheat and create a fire hazard. To prevent this and other damage, observe the following precautions:

- *Use only unleaded gasoline.*
- *Do not drive with an extremely low fuel level; running out of fuel could cause the engine to misfire, creating an excessive load on the three-way catalytic converter.*
- *Do not allow the engine to run at idle speed for more than 20 minutes.*
- *Avoid racing the engine.*
- *Do not push-start or pull-start your vehicle.*
- *Do not turn off the ignition while the vehicle is moving.*
- *Keep your engine in good running order. Malfunctions in the engine electrical system, electronic ignition system or fuel system could cause an extremely high three-way catalytic converter temperature.*
- *If the engine becomes difficult to start or stalls frequently, take your vehicle in for a check-up as soon as possible. Remember, your Lexus dealer knows your vehicle and its three-way catalytic converter system best.*

- *To ensure that the three-way catalytic converter and the entire emission control system operate properly, your vehicle must receive the periodic inspections required by the Lexus Maintenance Schedule. For scheduled maintenance information, refer to the "Owner's Manual Supplement/Scheduled Maintenance".*

ENGINE EXHAUST CAUTION

 CAUTION

- Avoid inhaling the engine exhaust. It contains carbon monoxide, which is a colorless and odorless gas. It can cause unconsciousness or even death.
- Make sure the exhaust system has no holes or loose connections. The system should be checked from time to time. If you hit something, or notice a change in the sound of the exhaust, have the system checked immediately.
- Do not run the engine in a garage or enclosed area except for the time needed to drive the vehicle in or out. The exhaust gases cannot escape, making this a particularly dangerous situation.
- Do not remain for a long time in a parked vehicle with the engine running. If it is unavoidable, however, do so only in an unconfined area and adjust the heating or cooling system to force outside air into the vehicle.
- Keep the trunk lid closed while driving. An open or unsealed trunk lid may cause exhaust gases to be drawn into the vehicle.

STARTING AND DRIVING


- To allow proper operation of your vehicle's ventilation system, keep the inlet grilles in front of the windshield clear of snow, leaves, or other obstructions.
- If you smell exhaust fumes in the vehicle, drive with the windows open and the trunk lid closed. Have the cause immediately located and corrected.

BEFORE STARTING THE ENGINE

1. Check the area around the vehicle before entering it.
2. Adjust seat position, seatback angle, head restraint height and steering wheel angle.
3. Adjust the inside and outside rear view mirrors.
4. Lock all doors.
5. Fasten seat belts.

Remember to check that the service reminder indicators function when turning the key to "ON", and check the fuel gauge to see that you have sufficient fuel.

IGNITION SWITCH WITH STEERING LOCK

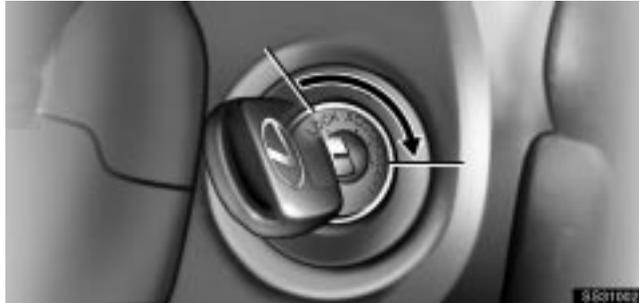

"START" – Starter motor on. The key will return to the "ON" position when released.

For starting tips, see page 168.

"ON" – Engine on and all accessories on.

This is the normal driving position.

NOTICE

Do not leave the key in the "ON" position if the engine is not running. The battery will discharge and the electronic ignition system could be damaged.

"ACC" – Accessories such as the radio operate, but the engine is off.

If you leave the key in the "ACC" or "LOCK" position and open the driver's door, a buzzer will remind you to remove the key.*

*NOTE: *The volume or interval of beep sound can be changed. Ask your Lexus dealer for details.*



"LOCK" – Engine is off and the steering wheel is locked. The ignition key can be removed only at this position.

To turn the key from "ACC" to the "LOCK" position you must put the transmission selector lever in the "P" position and you must push in the key.


Once you remove the key, the engine immobiliser system is automatically set. See "Engine immobiliser system" on page 10.

When starting the engine, the key may seem stuck at the "LOCK" position. To free it, first be sure the key is pushed all the way in, and then rock the steering wheel slightly while turning the key gently.

If, in an emergency, you must turn the engine off while the vehicle is moving, turn the key only to "ACC".

STARTING AND DRIVING

PARKING BRAKE

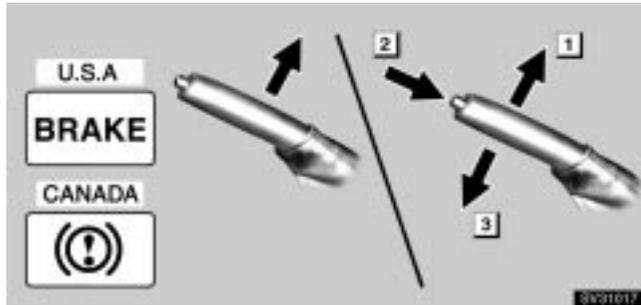

To set: Pull up the lever. For better holding power, first depress the brake pedal and hold it while setting the parking brake.

To release: Pull up the lever slightly (1), press the lock release button (2), and lower (3).

To remind you that the parking brake is set, the parking brake reminder light in the instrument panel remains on until you release the parking brake.

CAUTION

Before driving, make sure the parking brake is fully released and that the parking brake reminder light is off.

HOW TO START THE ENGINE

Before cranking

1. Apply the parking brake firmly.
2. Turn off unnecessary lights and accessories.
3. Put the selector lever in "P". If you need to restart the engine while the vehicle is moving, put the selector lever in "N". A starter safety device will prevent the starter from operating if the selector lever is in any drive position.
4. Depress the brake pedal and hold it to the floor until driving off.

Starting the engine

Before starting the engine, be sure to follow the instructions in "Before cranking".

Normal starting procedure

The multiport fuel injection system/sequential multiport fuel injection system in your engine automatically controls the proper air-fuel mixture for starting. You can start a cold or hot engine as follows:

1. With your foot off the accelerator pedal, crank the engine by turning the key to "START". Release it when the engine starts.
2. After the engine runs for about 10 seconds, you are ready to drive.

If the weather is below freezing, let the engine warm up for a few minutes before driving. Do not leave the vehicle while the engine is warming up.

If the engine stalls ...

Simply restart it , using the correct procedure given in normal starting.

If the engine will not start


See "If your vehicle will not start" on page 200.

NOTICE

- *Do not crank for more than 30 seconds at a time. This may overheat the starter and wiring systems.*
- *Do not race a cold engine.*
- *If the engine becomes difficult to start or stalls frequently, have the engine checked immediately.*

AUTOMATIC TRANSMISSION

Your automatic transmission has a shift lock system to minimize the possibility of incorrect operation. This means you can only shift out of "P" position when the brake pedal is depressed with the ignition switch in "ON" position. (★)

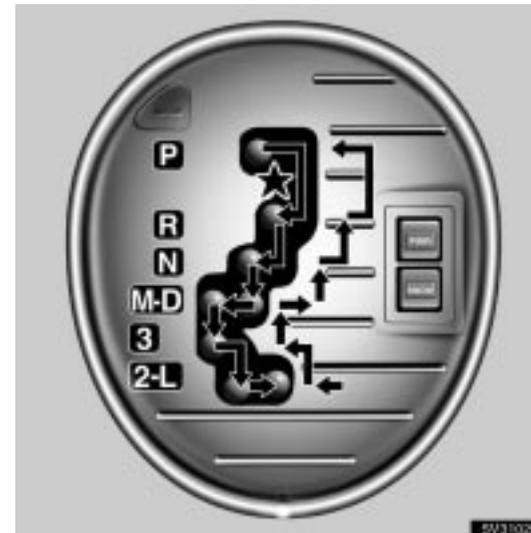

STARTING AND DRIVING

► ***The shift position is displayed on the instrument cluster.***

P: Parking, engine starting and key removal position

R: Reverse position

N: Neutral position

D: Normal driving position (Shifting into overdrive possible)

M: Position for manual shifting up or downshifting

When the cruise control is being used, even if you downshift from "D" to "M", engine braking will not be enabled because the cruise control is not cancelled. For the operation to decrease the vehicle speed, see page 182.

3, 2: Position for more powerful engine braking

L: Position for maximum engine braking

Correct use of the automatic transmission is explained in the following parts.

(a) Normal driving

(b) Driving in M mode

(c) Using engine braking

(d) Using the "3", "2" and "L" positions

(e) Backing up

(f) Parking

(g) Good driving practice

(h) Rocking your vehicle if stuck

(i) If you cannot shift the selector lever

(j) If the "ECT PWR" indicator light flashes


(a) Normal driving



► **1** "P" (Park) position **2** "N" (Neutral) position

1. Start the engine as instructed in "How to start the engine" on page 168.

The transmission must be in "P" or "N". The engine will not start in any drive position even if the ignition key is turned to "START".

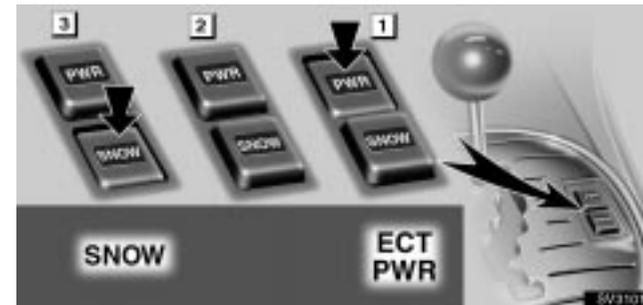

► **1** Power position **2** Normal position
3 Snow position

2. Set the driving pattern selector switch to the "Normal" position.

Your transmission has a driving pattern selector switch which allows you to select "Power", "Normal" or "Snow" mode to suit your driving condition. For ordinary driving, Lexus recommends that you use the "Normal" position to improve fuel economy.

3. For more powerful acceleration and sporty driving, use the "Power" position.

In the "Power" position, the "ECT PWR" light in the instrument cluster is on and the transmission is shifted up at higher vehicle speeds and shifted down more responsively than in the "Normal" position.

For "Snow" mode, see "Electronic Throttle Control System" on page 179.

STARTING AND DRIVING



► **1** Brake pedal **2** "D" (Drive) position

4. With your foot holding down the brake pedal, shift the selector lever to "D".

Always use the "D" position to improve fuel economy and quiet driving. Only in this position, shifting into the overdrive gear is possible. However, while the engine coolant temperature is low, the transmission will not shift into the overdrive gear even in the "D" position. (See "(c) Using engine braking" and "(g) Good driving practice" for exceptions.)

 **CAUTION**

Never put your foot on the accelerator pedal while shifting.

5. Release the parking brake and brake pedal. Depress the accelerator pedal slowly for smooth starting.

In normal cruising, the vehicle will start in the first gear and automatically shift up to the most suitable gear. On inclines, declines or winding roads, etc., the vehicle shifts up and down automatically according to the running conditions to obtain the suitable driving power and engine braking.

When the lever is in "3" position, the automatic transmission system will select the most suitable gear for the running conditions such as hill climbing, hard towing, etc.

If you need to accelerate rapidly while driving, depress the accelerator pedal to the full throttle position. This provides more acceleration by automatically downshifting the transmission to the next lower gear or beyond, depending on the vehicle speed.

If engine braking is needed, such as in descending a long hill, see "(b) Using engine braking".

(b) Driving in M mode

If the change lever is shifted to M position, the shift range position can be switched over between D and 2 using the shift switch on the steering wheel instead of operating the change lever. The first shift range position is on D when the change lever is shifted to M position.



► **1 "M" position**

When the selector lever is put in the "M" position, the M MODE indicator is shown on the instrument cluster.



► **2 Downshifting on the front, Upshifting on the rear**

5: Fifth range

The most suitable gear is selected automatically between first and fifth gears according to the vehicle speed or the running condition.

4: Forth range

The most suitable gear is selected automatically between first and fourth gears according to the vehicle speed or the running condition.

STARTING AND DRIVING

3: Third range

The most suitable gear is selected automatically between first and third gears according to the vehicle speed or the running condition.

Slight engine braking will be obtained on a downhill road.

Smooth running with less shifting will be obtained on an uphill.

2: Second range

First or second gear will be selected automatically according to the vehicle speed or the running condition.

This range is used in the case that the engine braking is necessary.

The gear position being used is shown on the instrument cluster.

Each time you push the switch located on the front of the steering wheel, the transmission downshifts (from "5") to "4", "3" and then "2".

When you push the switch located on the back of the steering wheel, the transmission upshifts to "3", "4" and then "5".

For the precautions on each position, see the description on the next page.

Warning tone sounds twice in any of the following cases:

- You attempt to downshift the transmission when it is not possible to downshift due to the high vehicle speed.
- You attempt to downshift from "2" position.
- You attempt to upshift from "5" position.

If the "M" indicator flashes, there is a problem somewhere in the system. In this case, it should be noted that you cannot downshift or upshift the transmission using the switches on the steering wheel. Consult with your Lexus dealer as soon as possible. The transmission works exactly in the same way as when you put the selector lever in the "D" position.



Be careful when downshifting on a slippery surface. The abrupt change in engine speed could cause the vehicle to spin or skid.

(c) Using engine braking



To use the braking power of the engine, downshift the transmission in the way described below:

- 1 Shift into the "M" position, and you push the transmission down shift switch. The transmission will downshift to fourth gear and engine braking will be obtained. This is effective only when you are driving in the "D" position or in fifth gear ("M" position).

When the cruise control is being used, even if you downshift from "D" to "M", engine braking will not be enabled because the cruise control is not cancelled. If you need to decrease the vehicle speed, see page 182.

- 2 Shift into the "3" position. The transmission will downshift to third gear when the vehicle speed is or becomes lower than the speed listed below and stronger engine braking will be obtained.

- 3 Shift into the "2" position. The transmission will downshift to second gear when the vehicle speed is or becomes lower than the speed listed below and stronger engine braking than that of "3" position will be obtained.

- 4 Shift into the "L" position. The transmission will downshift to first gear when the vehicle speed is or becomes lower than the speed listed below and maximum engine braking will be enabled.

"4"	168 km/h	(104 mph)
"3"	122 km/h	(76 mph)
"2"	82 km/h	(51 mph)
"L"	17 km/h	(11 mph)

! CAUTION

Be careful when downshifting on a slippery surface. The abrupt change in engine speed could cause the vehicle to spin or skid.

STARTING AND DRIVING

(d) Using the "3", "2" and "L" positions

The "3", "2" and "L" positions are used for strong engine braking as described previously.

With the selector lever in "3", "2" or "L", you can start the vehicle in motion as with the lever in "D".

With the selector lever in "3" or "2", the vehicle will start in first gear and automatically shift to the third or second gear.

With the selector lever in "L", the transmission is engaged in the first gear.

NOTICE

- **Be careful not to over-rev the engine. Watch the tachometer to keep engine rpm from going into the red zone. The approximate maximum allowable speed for each position is given below for your reference:**

"3"	124 km/h (78 mph)
"2"	81 km/h (51 mph)
"L"	52 km/h (33 mph)

- **Do not continue hill climbing or hard towing for a long time in the "3", "2" or "L" position. This may cause severe automatic transmission damage from overheating. To prevent such damage, "4" position should be used in hill climbing or hard towing.**

(e) Backing up




- **1** Brake pedal **2** "R" (Reverse) position

1. Bring the vehicle to a complete stop.
2. With the brake pedal held down with your foot, shift the selector lever to the "R" position.

NOTICE

Never shift into reverse while the vehicle is moving.

(f) Parking

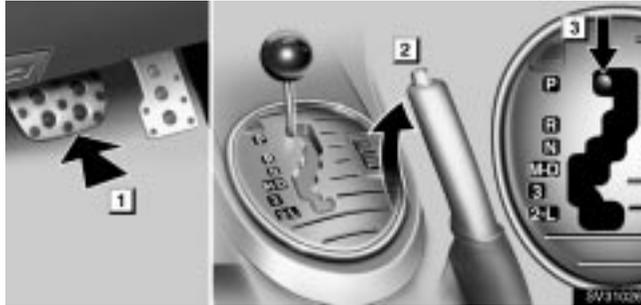

- ▶ **1** Brake pedal
- ▶ **2** Parking brake lever
- ▶ **3** "P" (Park) position

1. Bring the vehicle to a complete stop.
2. Pull the parking brake lever up fully to securely apply the parking brake.
3. With the brake pedal held down with your foot, shift the selector lever to the "P" position.

CAUTION

Never attempt to move the selector lever into "P" under any circumstances while the vehicle is moving. Serious mechanical damage and loss of vehicle control may result.

(g) Good driving practice

If the transmission repeatedly shifts up and down between the fourth and overdrive gears when climbing a gentle slope, shift the selector lever to the "M" position and select the forth gear by pushing the transmission switch. Be sure to shift the selector lever to the "D" position after climbing the slope.

CAUTION

Always keep your foot on the brake pedal while stopped with the engine running. This prevents the vehicle from creeping.

NOTICE

Do not hold the vehicle on an upgrade with the accelerator pedal. This can cause the transmission to overheat. Always use the brake pedal or parking brake.

STARTING AND DRIVING

(h) Rocking your vehicle if stuck



CAUTION

If your vehicle becomes stuck in snow, mud, sand, etc., then you may attempt to rock the vehicle free by moving it forward and backward. Do not attempt this procedure if people or objects are anywhere near the vehicle. During the rocking operation the vehicle may suddenly move forward or backward as it becomes un-stuck, causing injury or damage to nearby people or objects.

NOTICE

If you rock your vehicle, observe the following precautions to prevent damage to the transmission and other parts.

- *Do not depress the accelerator pedal while shifting the selector lever or before the transmission is completely shifted to forward or reverse gear.*
- *Do not race the engine and avoid spinning the wheels.*
- *If your vehicle remains stuck after rocking the vehicle several times, consider other ways such as towing.*

(i) If you cannot shift the selector


If you cannot shift the selector lever even though the brake pedal is depressed, use the shift lock override button. For instructions, see "If you cannot shift automatic transmission selector lever" on page 218.

(j) If the "ECT PWR" indicator light flashes

If the "ECT PWR" indicator light flashes, contact your Lexus dealer as soon as possible. There may be trouble in the transmission system.

ELECTRONIC THROTTLE CONTROL SYSTEM

The electronic throttle control system always maintains appropriate engine output in relation to the accelerator opening in all driving conditions.

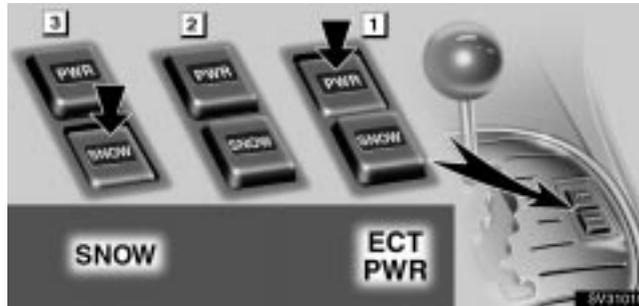

- ▶ **1** Power position
- ▶ **2** Normal position
- ▶ **3** Snow position

The electronic throttle control system has 3 modes: Normal, Power and Snow modes.

Normal mode: For ordinary driving, Lexus recommends that you use the normal mode to improve fuel economy.

Power mode: For more powerful acceleration and sporty driving.

In the power mode, the "ECT PWR" light in the instrument cluster is on and the transmission is shifted up at higher vehicle speeds and shifted down more responsively than in the normal mode.

To return to the normal mode, push the "PWR" switch again.

Snow mode: Decreases the engine output to minimize rear wheel spinning on snowcovered or slippery roads.

When you push "SNOW" switch, the snow mode is turned on and the "SNOW" light in the instrument cluster comes on.

To return to the normal mode, push the "SNOW" switch again. The "SNOW" indicator light will go off.

When you turn the ignition switch off in the snow mode, the mode automatically changes to the normal mode.

STARTING AND DRIVING

CRUISE CONTROL

The cruise control allows you to cruise the vehicle at a desired speed over 40 km/h (25 mph) with your foot off the accelerator pedal.

Your cruising speed can be maintained although a slight speed change may occur when driving up or down a gradient, within the limits of engine performance. On steeper hills, a great speed change will occur so it is better to drive without the cruise control.


When the cruise control is on, the driving pattern of the automatic transmission is fixed in the normal position, regardless of the position of the selector switch.



CAUTION

- To help maintain maximum control of your vehicle, do not use the cruise control when driving in heavy or varying traffic, or on slippery (rainy, icy or snow-covered) or winding roads.
- Avoid vehicle speed increases when driving downhill. If the vehicle speed is too fast in relation to the cruise control set speed, cancel the cruise control then downshift the transmission to use engine braking to slow down.

Turning on the system

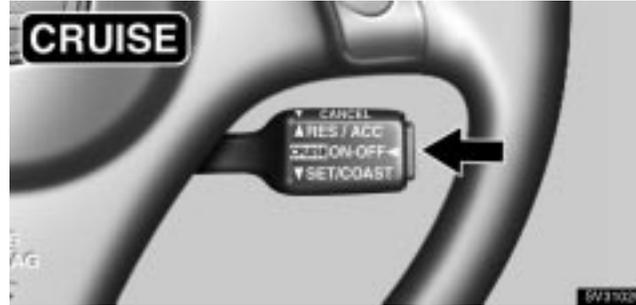

To operate the cruise control, push the main switch. This turns the system on. The indicator light in the instrument cluster shows that you can now set your desired cruising speed. Another push on the switch will turn the system completely off.


When the ignition key is turned off, the main switch is also automatically turned off. To use the cruise control again, push the main switch again to turn it on.



CAUTION

To avoid accidental cruise control engagement, keep the main switch off when not using the cruise control.

Setting operation

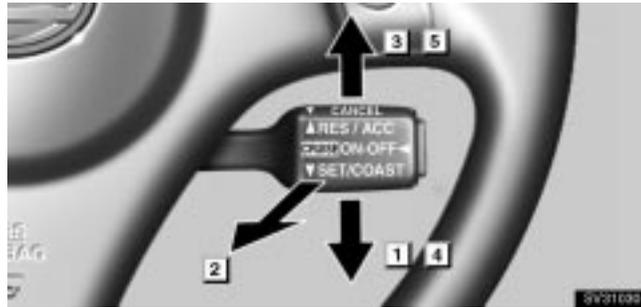

► Each function is described below.

1 Setting at a desired speed.

The transmission must be in the "D" position or the gear position must be "4" or "5" in M mode before you set the cruise control speed.

Bring the vehicle to the desired speed, press the control lever downward in the "SET/COAST" direction and release it. This sets the vehicle at that speed. Now you may take your foot off the accelerator pedal. If you need acceleration – for example, when passing – depress the accelerator pedal enough for the vehicle to exceed the set speed. When you release the accelerator pedal, the vehicle will return to the speed set prior to the acceleration.

2 Cancelling the preset speed

You can cancel the preset speed by either of the following:

- a. Pulling the control lever in the "CANCEL" direction.
- b. Depressing the brake pedal.

If the vehicle speed falls below about 40 km/h (25 mph), the preset speed will be automatically cancelled.

If the vehicle speed drops 16 km/h (10 mph) below the preset speed, the preset speed will also automatically be cancelled.

If the preset speed automatically cancels out for other than these reasons, have your vehicle checked by your Lexus dealer at the earliest opportunity.

3 Resetting to a faster speed

Press the control lever upward in the "RES/ACC" direction and hold it. Release the lever when the desired speed is attained. While the lever is held upward, the vehicle will gradually gain speed.

When the difference between the actual vehicle speed and the set speed is less than 5 km/h (3 mph), the set speed can be increased 1.6 km/h (1 mph) each time by pressing the control lever upward in the "RES/ACC" direction quickly within 0.6 seconds.

However, a quicker way to reset is to accelerate the vehicle and then press the control lever downward in the "SET/COAST" direction.

STARTING AND DRIVING

4 Resetting to a slower speed

Press the control lever downward in the "SET/COAST" direction and hold it. Release the lever when the desired speed is attained. While the lever is held downward, the vehicle speed will gradually decrease.

When the difference between the actual vehicle speed and the set speed is less than 5 km/h (3 mph), the set speed can be lowered 1.6 km/h (1 mph) each time by pressing the control lever downward in the "SET/COAST" direction quickly within 0.6 seconds.

However, a quicker way to reset is to depress the brake pedal and then press the control lever downward in the "SET/COAST" direction.

Even if you downshift the transmission from the "D" position to "M" with the cruise control on, engine braking will not be applied because the cruise control is not cancelled. To decrease the vehicle speed, reset to a slower speed with the cruise control lever or depress the brake pedal. If you use the brake pedal, cruise control is cancelled.

5 Resuming the preset speed


If the preset speed is cancelled by pulling the control lever or by depressing the brake pedal, pushing the lever up in the "RES/ACC" direction will restore the speed set prior to cancellation. However, once the vehicle speed falls below about 40 km/h (25 mph), the preset speed will not be resumed.

Cruise control failure warning

If the "CRUISE" indicator light in the instrument cluster flashes five times and then goes out when using the cruise control, it means that there is trouble in the cruise control system. Contact your Lexus dealer.

TRACTION CONTROL SYSTEM


The traction control system automatically help control the spinning of the rear wheels which may occur when accelerating on slippery road surfaces, thus assisting driver control the driving power of the rear wheels. When you turn the ignition switch on, the traction control system always turns on automatically, and the slip indicator light will come on. The indicator lights will go off after a few seconds.

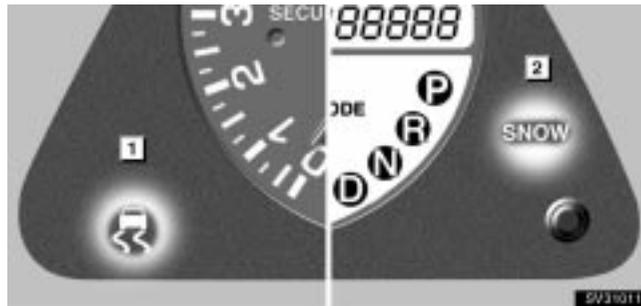

- ▶ 1 Slip indicator light
- ▶ 2 "SNOW" indicator light

Leave the system on during ordinary driving so that it can operate when needed. When traction control is applied, the slip indicator light blinks. If your vehicle still skids even though traction control is applied, more powerful traction control is applied and the "SNOW" indicator light comes on.

If the light flashes, this indicates a malfunction in the traction control system. Contact your Lexus dealer as soon as possible to service the vehicle.

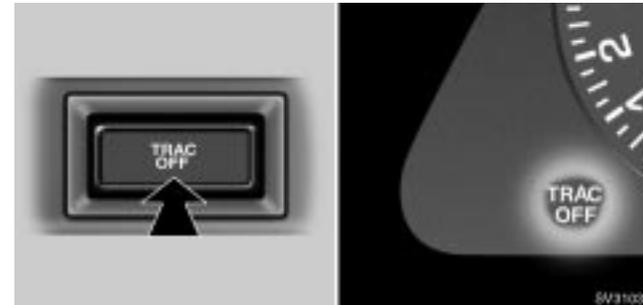

You can turn off the traction control system by pushing the "TRAC OFF" switch. The "TRAC OFF" indicator/warning light will then come on. Pushing the "TRAC OFF" switch a second time turns the system back on and extinguishes the "TRAC OFF" indicator/warning light.

You may hear a sound in the engine compartment for a few seconds when the engine is started or just after the vehicle is started. This means that the traction control system is in the self-check mode, and does not indicate malfunction.

When the traction control system is operating, you may feel vibration of your vehicle, caused by operation of the brakes. This indicates the system is functioning properly.

STARTING AND DRIVING

When getting the vehicle out of mud or new snow, etc. the traction control system will help operate to prevent the wheels from spinning.



CAUTION

Under certain slippery road conditions, full traction of the vehicle and power to the rear wheels cannot be maintained, even though the traction control system is in operation. Do not drive the vehicle under any speed or maneuvering conditions which will cause the vehicle to lose traction. In situations where the road surface is covered with ice or snow, your vehicle should be fitted with snow tires or tire chains. Always drive at an appropriate and cautious pace.

BRAKE SYSTEM

The tandem master cylinder brake system is a hydraulic system with two separate sub-systems. If either sub-system should fail, the other will still work. However, the pedal will be harder to press, and your stopping distance will be longer. Also, the brake system warning light may come on.



CAUTION

Do not drive your vehicle with only a single brake system. Have your brakes fixed immediately.

Brake booster

The brake booster uses engine vacuum to power-assist the brakes. If the engine should quit while you are driving, you can bring the vehicle to a stop with normal pedal pressure. There is enough reserved vacuum for one or two stops but no more!



CAUTION

- Do not pump the brake pedal if the engine stalls. Each push on the pedal uses up your reserved vacuum.
- Even if the power assist is completely lost, the brakes will still work. But you will have to push the pedal hard, much harder than normal. And your braking distance will be longer.

Anti-lock brake system

The anti-lock brake system is designed to automatically help prevent lock-up of the wheels during a sudden braking or braking on slippery road surfaces. This assists in providing directional stability and steering performance of the vehicle under these circumstances.

Effective way to press the ABS brake pedal: When the anti-lock brake system function is in action, you may feel the brake pedal pulsating and hear a noise. In this situation, to let the anti-lock brake system work for you, just hold the brake pedal down more firmly. Do not pump the brake in a panic stop. This will result in reduced braking performance.

The anti-lock brake system becomes operative after the vehicle has accelerated to a speed in excess of approximately 10 km/h (6 mph). It stops operating when the vehicle decelerates to a speed below approximately 5 km/h (3 mph).

Depressing the brake pedal on slippery road surfaces such as on the manhole cover, the steel plate under the construction, joints in the bridge, etc. on a rainy day tends to activate the anti-lock brake system.

You may hear a click or motor sound in the engine compartment for a few seconds when the engine is started or just after the vehicle is started. This means that the anti-lock brake system is in the self-check mode, and does not indicate a malfunction.

When the anti-lock brake system is activated, the following conditions may occur. They do not indicate a malfunction of the system:

- You may hear the anti-lock brake system operating and feel the brake pedal pulsating and the vibrations of the vehicle body and steering wheel. You may also hear the motor sound in the engine compartment even after the vehicle is stopped.
- At the end of the anti-lock brake system activation, the brake pedal may move a little forward.

 **CAUTION**

Do not overestimate the anti-lock brake system: Although the anti-lock brake system assists in providing vehicle control, it is still important to drive with all due care and maintain a moderate speed and safe distance from the vehicle in front of you, because there are limits to the vehicle stability and effectiveness of steering wheel operation even with the anti-lock brake system on.

If tires grip performance exceeds its capability, or if hydroplaning occurs during high speed driving in the rain, the anti-lock brake system does not provide vehicle control.


Anti-lock brake system is not designed to shorten the stopping distance: Always drive at the moderate speed and maintain a safe distance from the vehicle in front of you. Compared with vehicles without an anti-lock brake system, your vehicle may require a longer stopping distance in the following cases:

STARTING AND DRIVING

- Driving on rough, gravel or snow-covered roads.
- Driving with tire chains installed.
- Driving over the steps such as the joints on the road.
- Driving on roads where the road surface is pitted or has other differences in surface height.

Install all 4 tires of specified size at appropriate pressure: The anti-lock brake system detects vehicle speeds using the speed sensors for respective wheels' turning speeds. The use of tires other than specified may fail to detect the accurate turning speed resulting in a longer stopping distance.

"ABS" warning light

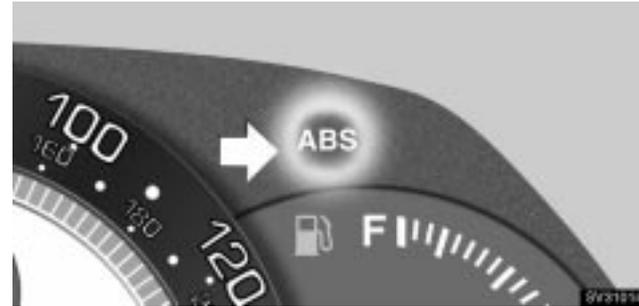

► U.S.A.



► CANADA

The light comes on when the ignition key is turned to the "ON" position. If the anti-lock brake system works properly, the light turns off after a few seconds. Thereafter, if the system malfunctions, the light comes on again.

When the "ABS" warning light is on (and the brake system warning light is off), the anti-lock brake system and/or the traction control system do/does not operate, but the brake system still operates conventionally.

When the "ABS" warning light is on (and the brake system warning light is off), the anti-lock brake system and/or the traction control system do/does not operate so that the wheels could lock up during a sudden braking or braking on slippery road surfaces.

If either of the following conditions occurs, this indicates a malfunction somewhere in the parts monitored by the warning light system. Contact your Lexus dealer as soon as possible to service the vehicle.

- The light does not come on when the ignition key is turned to the "ON" position, or remains on.
- The light comes on while you are driving.

A warning light turning on briefly during operation does not indicate a problem.

 **CAUTION**

If the "ABS" warning light remains on together with the brake system warning light, immediately stop your vehicle at a safe place and contact your Lexus dealer.

In this case, not only the anti-lock brake system will fail but also the vehicle will become extremely unstable during braking.

Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drums are replaced.

Have your Lexus dealer perform the bedding-down.

BRAKE PAD WEAR INDICATORS



The brake pad wear limit indicators on your disc brakes give a warning noise when the brake pads are worn to the extent that replacement is required.

If you hear a squealing or scraping noise while driving, have the brake pads checked and replaced by your nearest Lexus dealer immediately.

Avoid continuous driving with the warning noise.

Continuous driving without replacing the brake pads will cause expensive rotor damage and increasing brake pedal effort to get the same stopping distance.

TYPES OF TIRES

Determine what kind of tires your vehicle is originally equipped with.

1. Summer tires

Summer tires are high-speed capability tires best suited to highway driving under dry conditions.

Since summer tires do not have the same traction performance as snow tires, summer tires are inadequate for driving on snow-covered or icy roads. For driving on snow-covered or icy roads, we recommend using snow tires. If installing snow tires, be sure to replace all four tires.

2. All season tires

All season tires are designed to provide better traction in snow and to be adequate for driving in most winter conditions, as well as for use all year round.

All season tires, however, do not have adequate traction performance compared with snow tires in heavy or loose snow. Also, all season tires fall short in acceleration and handling performance compared with summer tires in highway driving.

 CAUTION

- Do not mix summer and all season tires on your vehicle as this can cause dangerous handling characteristics, resulting in loss of control.
- Do not use tires other than the manufacturer's designated tires, and never mix tires or wheels of the sizes different from the originals.

LIMITED-SLIP DIFFERENTIAL

Some vehicles are equipped with a limited-slip differential. If one rear wheel begins to spin, the limited-slip differential is designed to aid traction by automatically transmitting driving force to the other rear wheel. If you are not sure whether your vehicle is equipped with one, you can ask your Lexus dealer.

 CAUTION

Do not start or run the engine while your vehicle is supported by a jack. The vehicle could be driven off the jack and could pose a danger or result in serious injury.

NOTICE

Use only a spare tire of the same size, construction and load capacity as the original tires on your Lexus because damage to the limited-slip differential could possibly occur with another tire type.

SECTION 3 - 2

STARTING AND DRIVING

Driving tips

Break-in period	192
Operation in foreign countries	192
Tips for driving in various conditionss	193
Winter driving tips	194
Dinghy towing	195
Trailer towing	196
How to save fuel and make your vehicle last longer	196

DRIVING TIPS

BREAK-IN PERIOD

Drive gently and avoid high speeds.

You need not follow a break-in schedule with your new Lexus. But following a few simple tips for the first 1600 km (1000 miles) can add to the future economy and long life of your vehicle:

- Do not drive over 88 km/h (55 mph).
- Avoid overrevving. Maintain engine speed between 2000 and 4000 rpm.
- Avoid full-throttle starts.
- Try to avoid hard stops during the first 300 km (200 miles).
- Do not drive for a long time at any single speed, either fast or slow.

OPERATION IN FOREIGN COUNTRIES

If you plan to drive your Lexus in another country ...

First, comply with the vehicle registration laws.

Second, confirm the availability of the correct fuel (unleaded and minimum octane rating).

TIPS FOR DRIVING IN VARIOUS CONDITIONS

- Always slow down in gusty crosswinds. This will allow you much better control.
- Drive slowly onto curbs and, if possible, at a right angle. Avoid driving onto high, sharp-edged objects and other road hazards. Failure to do so can lead to severe tire damage resulting in tire bursts.
- When parking on a hill, turn the front wheels until they touch the curb so that the vehicle will not roll. Apply the parking brake, and place the transmission in "P". If necessary, block the wheels.
- Washing your vehicle or driving through deep water may get the brakes wet. To see whether they are wet, check that there is no traffic near you and then press the pedal lightly. If you do not feel a normal braking force, the brakes are probably wet. To dry them, drive the vehicle cautiously while lightly pressing the brake pedal with the parking brake applied. If they still do not work safely, pull to the side of the road and call a Lexus dealer for assistance.

CAUTION

- Before driving off, make sure the parking brake is fully released and that the parking brake reminder light is off.
- Do not leave your vehicle unattended while the engine is running.

- Do not rest your foot on the brake pedal while driving. It can cause dangerous overheating, needless wear, and poor fuel economy.
- To drive down a long or steep hill, reduce your speed and downshift. Remember, if you ride the brakes excessively, they may overheat and not work properly. See page 175.
- Be careful when accelerating, upshifting, downshifting or braking on a slippery surface. The abrupt change in engine speed, such as sudden acceleration or engine braking, could cause the vehicle to spin or skid.
- Do not drive in excess of the speed limit. Even if the legal speed limit permits it, do not drive over 140 km/h (85 mph) unless your vehicle has high-speed capability tires. Driving over 140 km/h (85 mph) may result in tire failure, loss of control and possible injury. Be sure to consult a tire dealer to determine whether the tires on your vehicle are high-speed capability tires or not before driving at such speeds.
- Do not continue normal driving when the brakes are wet. If they are wet, your vehicle will require a longer stopping distance, and it may pull to one side when the brakes are applied. Also, the parking brake will not hold the vehicle securely.

DRIVING TIPS

WINTER DRIVING TIPS

Make sure you have a proper freeze protection of engine coolant.

Your coolant must contain ethylene–glycol type coolant for a proper corrosion protection of aluminum components. Use "Toyota Long Life Coolant" or equivalent. See "Checking the engine coolant level" on page 245 for instructions.

NOTICE

Do not use alcohol type antifreeze or plain water alone.

When it is extremely cold, we recommend to use 60% solution for your Lexus, to provide protection down to about -50°C (-58°F). Do not use more than 70% solution for better coolant performance.

Check the condition of the battery and cables.

Cold temperatures reduce the capacity of any battery, so it must be in top shape to provide enough power for winter starting. Page 268 tells you how to visually inspect the battery. Your Lexus dealer and most service stations will be pleased to check the battery charge level.

Make sure the engine oil viscosity is suitable for the cold weather.

See page 244 for recommended viscosity. Leaving a heavy summer oil in your vehicle during winter months may cause harder starting. If you are not sure about which oil to use, call your Lexus dealer – they will be pleased to help.

Check the electronic ignition system for loose connections or obvious damage.

Keep the door locks from freezing.

Squirt lock de–icer or glycerine into the locks to keep them from freezing.

Use a washer fluid containing an antifreeze solution.

This product is available at your Lexus dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

Do not use your parking brake when there is a possibility it could freeze.

When parking, put the transmission into "P" and block the front wheels. Do not use the parking brake, or snow or water accumulated in and around the parking brake mechanism may freeze the parking brake, making it hard to release.


Keep ice and snow from accumulating under the fenders.

Ice and snow built up under your fenders can make steering difficult. During bad winter driving, stop and check under the fenders occasionally.

Depending on where you are driving, we recommend you carry some emergency equipment.

Some of the things you might put in the vehicle are tire chains, window scraper, bag of sand or salt, flares, small shovel, jumper cables, etc.

DINGHY TOWING

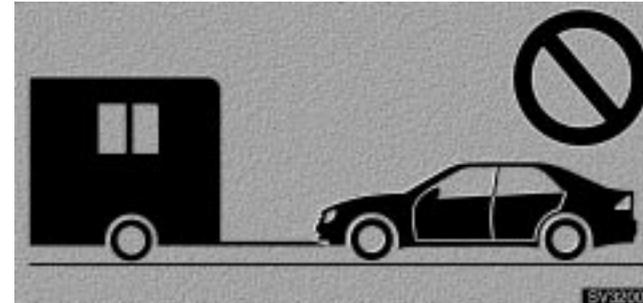


Your vehicle is not designed to be dinghy towed (with four wheels on the ground) behind a motorhome.

NOTICE

Do not tow your vehicle with four wheels on the ground. This may cause serious damage to your vehicle.

TRAILER TOWING

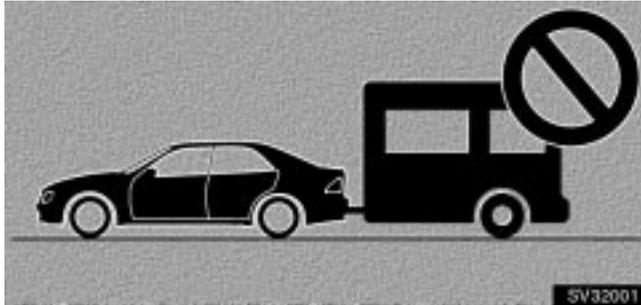

Lexus does not recommend towing a trailer with your vehicle. It is not designed for trailer towing.

HOW TO SAVE FUEL AND MAKE YOUR VEHICLE LAST LONGER

Improving fuel economy is easy – just take it easy. It will help make your vehicle last longer, too. Here are some specific tips on how to save money on both fuel and repairs:

- **Keep your tires inflated at the correct pressure.** Check the pressure every two weeks, or at least once a month. Underinflation causes tire wear and wastes fuel.
- **Do not carry unneeded weight in your vehicle.** Excess weight puts a heavier load on the engine, causing greater fuel consumption.
- **Avoid lengthy warm-up idling.** Once the engine is running smoothly, begin driving – but gently. Remember, however, that on cold winter days this may take a little longer.
- **Accelerate slowly and smoothly.** Avoid jackrabbit starts.
- **Avoid long engine idling.** If you have a long wait and you are not in traffic, it is better to turn off the engine and start again later.
- **Avoid engine over-revving.** Use a gear position suitable for the road on which you are traveling.
- **Avoid continuous speeding up and slowing down.** Stop-and-go driving wastes fuel.

DRIVING TIPS

- **Avoid unnecessary stopping and braking.** Maintain a steady pace. Try to time the traffic signals so you only need to stop as little as possible or take advantage of through streets to avoid traffic lights. Keep a proper distance from other vehicles to avoid sudden braking. This will also reduce wear on your brakes.
- **Avoid heavy traffic or traffic jams whenever possible.**
- **Do not rest your foot on the brake pedal.** This causes premature wear, overheating and poor fuel economy.
- **Maintain a moderate speed on highways.** The faster you drive, the greater the fuel consumption. By reducing your speed, you will cut down on fuel consumption.
- **Keep the front wheels in proper alignment.** Avoid hitting the curb and slow down on rough roads. Improper alignment not only causes faster tire wear but also puts an extra load on the engine, which, in turn, wastes fuel.
- **Keep the bottom of your vehicle free from mud, etc.** This not only lessens weight but also helps prevent corrosion.
- **Keep your vehicle tuned-up and in top shape.** A dirty air cleaner, improper valve clearance, dirty plugs, dirty oil and grease, brakes not adjusted, etc. all lower engine performance and contribute to poor fuel economy. For longer life of all parts and lower operating costs, keep all maintenance work on schedule, and if you often drive under severe conditions, see that your vehicle receives more frequent maintenance (For scheduled maintenance information, please refer to the "Owner's Manual Supplement / Maintenance Schedule".)

**CAUTION**

Never turn off the engine to coast down hills. Your power steering and brake booster will not function without the engine running. Also, the emission control system operates properly only when the engine is running.

SECTION 4

IN CASE OF AN EMERGENCY

If your engine stalls while driving	200
If your vehicle will not start	200
If your vehicle overheats	204
If you have a flat tire	205
If your vehicle needs to be towed	214
If you cannot shift automatic transmission selector lever	218
If you lose your keys or lock yourself out	219

IN CASE OF AN EMERGENCY

IF YOUR ENGINE STALLS WHILE DRIVING

If your engine stalls while driving

1. Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place.
2. Turn on your emergency flashers.
3. Try starting the engine again.

If the engine will not start, see "If your vehicle will not start".



CAUTION

If the engine is not running, the power assist for the brakes and steering will not work, so steering and braking will be much harder than usual.

IF YOUR VEHICLE WILL NOT START

(a) Simple checks

Before making these checks, make sure you have followed the correct starting procedure instructions in "How to start the engine" on page 168 and that you have sufficient fuel. Since your vehicle is equipped with the engine immobiliser system, also check whether the other keys will start the engine. If they work, your key may be broken. Have the key checked at your Lexus dealer. If none of your keys work, the system is possibly broken. Call your Lexus dealer. See "Keys" on page 8.

If the engine is not turning over or is turning over too slowly –

1. Check that the battery terminals are tight and clean.
2. If the battery terminals are O.K., switch on the interior light.
3. If the light is out, dim or goes out when the starter is cranked, the battery is discharged. You may try jump starting. See "(c) Jump starting" for further instruction.

If the light is O.K., but the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

NOTICE

Do not pull- or push-start the vehicle. It may damage the vehicle or cause a collision when the engine starts. Also the three-way catalytic converter may overheat and become a fire hazard.

If the engine turns over at its normal speed but will not start –

1. The engine may be flooded because of repeated cranking. See "(b) Starting a flooded engine" for further instructions.
2. If the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

(b) Starting a flooded engine

If the engine will not start, your engine may be flooded because of repeated cranking.

If this happens, turn the key to "START" with the accelerator pedal held down. Continue this operation for 30 seconds and then stop cranking. Then try starting the engine with your foot off the accelerator pedal.

If the engine does not start after 30 seconds of cranking, release the key, wait a few minutes and try again.

If the engine still will not start, it needs adjustment or repair. Call a Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)

NOTICE

Do not crank for more than 30 seconds at a time. This may overheat the starter and wiring systems.

IN CASE OF AN EMERGENCY

(c) Jump starting

To avoid serious personal injury and damage to your vehicle which might result from battery explosion, acid burns, electrical burns, or damaged electronic components, these instructions must be followed precisely.

If you are unsure about how to follow this procedure, we strongly recommend that you seek help from your Lexus dealer, Roadside Assistance or Customer Service Assistance. (See "Foreword".)



CAUTION


- Batteries contain sulfuric acid which is poisonous and corrosive. Wear protective safety glasses when jump starting, and avoid spilling acid on your skin, clothing, or vehicle.
- If you should accidentally get acid on yourself or in your eyes, remove any contaminated clothing and flush the affected area with water immediately. Then get immediate medical attention. If possible, continue to apply water with a sponge or cloth while en route to the medical office.
- The gas normally produced by a battery will explode if a flame or spark is brought near. Use only standardized jumper cables and do not smoke or light a match while jump starting.

Warning: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

NOTICE

The battery used for boosting must be 12 V. Do not jump start unless you are sure that the booster battery is correct.

IN CASE OF AN EMERGENCY

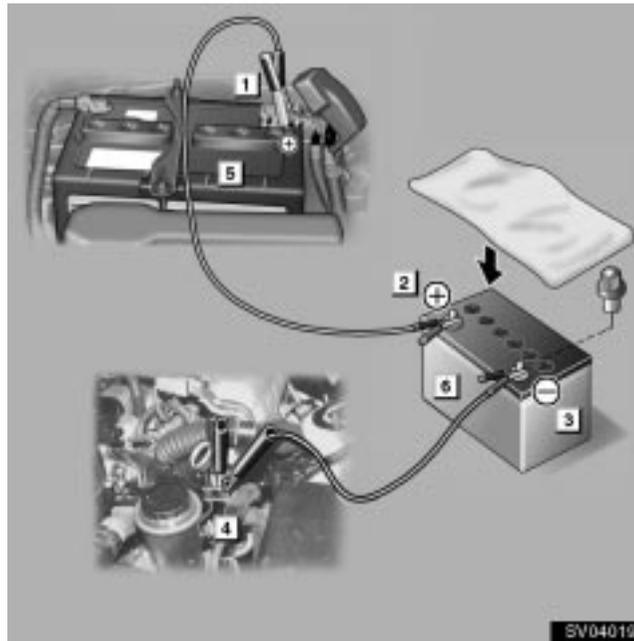

► **5** Discharged battery **6** Booster battery

JUMP STARTING PROCEDURE

1. If the booster battery is installed in another vehicle, make sure the vehicles are not touching. Turn off all unnecessary lights and accessories.

2. If required, remove all the vent plugs from the booster battery. Lay a cloth over the open vents on the booster battery. (This helps reduce the explosion hazard, personal injuries and burns.)

If the booster battery is an extended maintenance interval battery, it is not necessary to remove the vent plugs.

3. If the engine in the vehicle with the booster battery is not running, start it and let it run for about 5 minutes. During jump starting, run the engine at about 2000 rpm with the accelerator pedal lightly depressed.

4. Locate positive (+) and negative (-) terminals of each battery. Connect the jumper cables in the exact order (**1** **2** **3** **4**) shown in the illustration.

1 Connect a positive (red) jumper cable clamp to the positive (+) terminal of the discharged battery.

2 Connect the clamp at the other end of the positive (red) cable to the positive (+) terminal of the booster battery.

3 Connect a negative (black) cable clamp to the negative (-) terminal of the booster battery.

4 Connect the clamp at the other end of the negative (black) cable to a solid, stationary, unpainted metallic point (such as shown in the illustration) away from the battery. Do not connect it to or near any part that moves when the engine is cranked.

IN CASE OF AN EMERGENCY

CAUTION

When making the connections, to avoid serious injury, do not lean over the battery or accidentally let the jumper cables or clamps touch anything except the correct battery terminals or the ground.

5. Start your engine in the normal way. After starting, run it at about 2000 rpm for several minutes with the accelerator pedal lightly depressed.
6. Carefully disconnect the cables in the exact reverse order: the negative cable and then the positive cable.
7. Carefully dispose of the battery cover cloths which may now contain sulfuric acid.
8. If removed, replace all the battery vent plugs.

If the cause of your battery discharging is not apparent (for example, lights left on), you should have it checked.

IF YOUR VEHICLE OVERHEATS

If your engine coolant temperature gauge indicates overheating, if you experience a loss of power, or if you hear a loud knocking or pinging noise, the engine has probably overheated.

When the engine overheats

Pull safely off the road, stop the vehicle and turn on your emergency flashers. Put the transmission in "P" and apply the parking brake.

A: If steam is coming from your engine:

Turn off the engine. Leave the hood closed until there is no sign of steam or coolant. Your engine could have been seriously damaged already. Call your Lexus dealer for assistance.

CAUTION

To help avoid personal injury, keep the hood closed until there is no steam. Escaping steam or coolant is sign of very high pressure.

B: If no steam is coming from your engine:

Leave the engine running and turn off the air conditioning. Check the following.

- Is the cooling fan operating?
- Is the coolant in the acceptable range?
- Is the engine drive belt O.K.?

 CAUTION
<ul style="list-style-type: none">• When the engine is running, keep hands and clothing away from the moving fan and engine drive belt.• Do not attempt to remove the radiator cap when the engine and radiator are hot. Serious injury could result from scalding hot fluid and steam blown out under pressure.

If the cooling fan is not operating or the coolant is not in the acceptable range, turn off the engine and call your Lexus dealer.

If both conditions are O.K., after the engine coolant temperature has cooled to normal, continue driving your vehicle.

If the engine coolant temperature does not cool down, or your vehicle overheats again, have it checked as soon as possible by your Lexus dealer.

IF YOU HAVE A FLAT TIRE

1. Reduce your speed gradually, keeping a straight line. Move cautiously off the road to a safe place – well away from the traffic. Avoid stopping on the center divider of a highway. Park on a level spot with firm ground.
2. Stop the engine and turn on your emergency flashers.
3. Firmly set the parking brake and put the transmission in "P".
4. Have everyone get out of the vehicle on the side away from traffic.
5. Read the following instructions thoroughly.

 CAUTION
<p>When jacking, be sure to observe the following to reduce the possibility of personal injury:</p> <ul style="list-style-type: none">• Follow jacking instructions.• Do not put any part of your body under a vehicle supported by a jack. Personal injury may occur.• Do not start or run the engine while your vehicle is supported by the jack.

IN CASE OF AN EMERGENCY

- Stop the vehicle on a level firm ground, firmly set the parking brake and put the transmission in "P". Block the wheel diagonally opposite to the one being changed if necessary.
- Make sure to set the jack properly in the jack point. Raising the vehicle with jack improperly positioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone.
- Use the jack only for lifting your vehicle during wheel changing.
- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not put an object on or under the jack.
- Raise the vehicle only high enough to remove and change the tire.

NOTICE

Do not continue driving with a deflated tire. Driving even a short distance can damage a tire and wheel beyond repair.

Spare tire with turning direction indicators (Some models)



The spare tire with turning direction indicators is of a uni-directional type and is intended for use on the passenger side of the vehicle.

Installing the wheel on the driver side of the vehicle will not affect tire performance. If the spare tire is used on the driver side of the vehicle, it should be used only temporarily and then replaced with the correct one.


Changing procedure



- **1 Jack 2 Spare tire 3 Wrench 4 Jack handle**

1. Get the jack, wrench and spare tire.

To prepare yourself for an emergency, you should familiarize yourself with the use of the jack and each tool, and their storage locations.

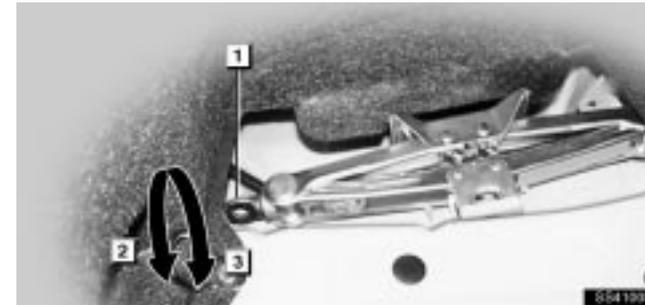

► **1 Joint**

- 2** When removing the jack, turn the joint by hand in the "contract" direction until the jack is free.
- 3** When storing, turn the joint by hand in the "expand" direction until the jack is firmly secured to prevent it from flying forward during a collision or sudden braking.

IN CASE OF AN EMERGENCY



To remove the spare tire:

- 1 Remove the tool tray.
- 2 Remove the spare tire cover.
- 3 Loosen the bolt and remove it.

When storing the spare tire, place it with the inner side of the wheel facing up. Then bolt the tire in place and install the spare tire cover to prevent the tire from flying forward during a collision or sudden braking.



2. Block the wheel diagonally opposite the flat tire to keep the vehicle from rolling when it is jacked up.

When blocking the wheel, place a wheel block in front of the front wheels or behind the rear wheels.

IN CASE OF AN EMERGENCY



► *Paper for protecting surface*

**3. Remove the wheel ornament.
(Only for vehicles equipped with P205/55R16 tires.)**

Pry off the wheel ornament, using the screwdriver as shown.

⚠ CAUTION

Do not try to pull off the ornament by hand. Take due care in handling the ornament to avoid unexpected personal injury.




4. Loosen all the wheel nuts.

Always loosen the wheel nuts before raising the vehicle.

Turn the wheel nuts counterclockwise to loosen them. To get maximum leverage, fit the wrench to the nut so that the handle is on the right side, as shown above. Grab the wrench near the end of the handle and pull up on the handle. Be careful that the wrench does not slip off the nut.

Do not remove the nuts yet – just unscrew them about one-half turn.

IN CASE OF AN EMERGENCY

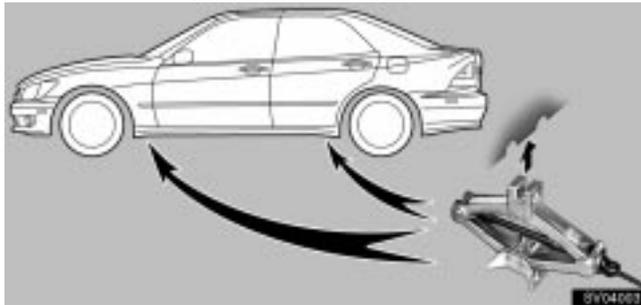

5. Position the jack at the jack points as shown.

Make sure the jack is positioned on a level and solid surface.



6. After making sure no one is in the vehicle, raise it high enough so that the spare tire can be installed.

Allow for the fact that you need more ground clearance when putting on the spare tire than when removing the flat tire.

To raise the vehicle, insert the jack handle into the jack (it is a loose fit) and turn it clockwise. As the jack touches the vehicle and begins to lift, double-check that it is properly positioned.

 **CAUTION**

Never get under the vehicle when the vehicle is supported by the jack alone.

IN CASE OF AN EMERGENCY




7. Remove the wheel nuts and remove the flat tire.

Lift the flat tire straight off and put it aside.



(Only for vehicles equipped with 215/45R17 tires)

When installing the alloy wheels, at this point, remove the wheel ornament from the flat tire and replace it on the newly installed tire.

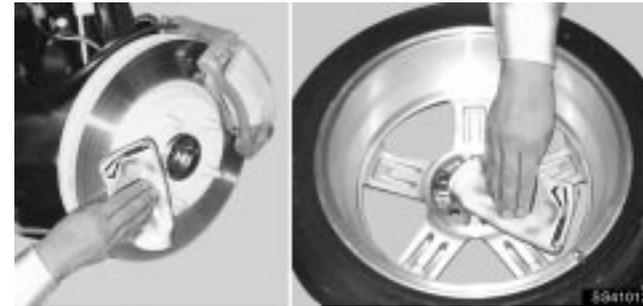

Before putting on the wheel, remove any corrosion on the mounting surfaces with a wire brush or such. Installation of wheels without good metal-to-metal contact at the mounting surface can cause wheel nuts to loosen and eventually cause a wheel to come off while driving.

IN CASE OF AN EMERGENCY



8. Reinstall all the wheel nuts finger tight.

Align the holes in the wheel with the bolts. Then lift up the wheel and get at least the top bolt started through its hole. Wiggle the tire and press it back over the other bolts.

Reinstall the wheel nuts and tighten them as much as you can by hand. Press the tire back and see if you can tighten them more.



9. Lower the vehicle completely and tighten the wheel nuts.

Turn the jack handle counterclockwise to lower the vehicle.

Use only the wheel nut wrench to tighten the nuts. Do not use other tools or any additional leverage other than your hands, such as a hammer, pipe or your foot. Make sure the wrench is securely engaged over the nut.

Tighten each nut a little at a time in the order shown. Repeat the process until all the nuts are tight.

CAUTION

- When lowering the vehicle, make sure all portions of your body and all other persons around will not be injured as the vehicle is lowered to the ground.
- As soon as possible after changing wheels, have the wheel nuts tightened by torque wrench at 103 N·m (10.5 kgf·m, 76 ft-lbf.).

IN CASE OF AN EMERGENCY



10. Reinstall the wheel ornament. (Only for vehicles equipped with P205/55R16 tires.)

Put the wheel ornament into position and then tap it firmly with the side or heel of your hand to snap it into place.

CAUTION

Take due care in handling the ornament to avoid unexpected personal injury.

11. After changing the wheel, check the air pressure of the replaced tire. Stow all the tools, jack and flat tire securely.

If the pressure of the replaced tire is low, drive slowly to the nearest service station and fill to the correct pressure.

Do not forget to reinstall the tire valve cap as dirt and moisture could get into the valve core and possible cause air leakage. If the cap is missing, put a new one on as soon as possible.

This is the same procedure for changing or rotating your tires.

CAUTION

- When reinstalling a standard tire, take due care in handling the ornament to avoid unexpected personal injury.
- Before driving, make sure all the tools, jack and flat tire are securely in place in their storage location to reduce the possibility of personal injury during a collision or sudden braking.

IN CASE OF AN EMERGENCY

IF YOUR VEHICLE NEEDS TO BE TOWED

If towing is necessary, we recommend you to have it done by your Lexus dealer or a commercial tow truck service. In consultation with them, have your vehicle towed using either (a) or (b).

- (a) Towing with a wheel lift type truck
- (b) Using a flat bed truck
- (c) Never tow with a sling type truck

Only when you cannot receive a towing service from a Lexus dealer or commercial tow truck service, tow your vehicle carefully in accordance with the instructions given in "(d) Emergency towing" on page 217.

Proper equipment will help ensure that your vehicle is not damaged while being towed. Commercial operators are generally aware of the state/provincial and local laws pertaining to towing.


Your vehicle can be damaged if it is towed incorrectly. Although most operators know the correct procedure, it is possible to make a mistake. To avoid damage to your vehicle, make sure the following precautions are observed. If necessary, show this page to the tow truck driver.

TOWING PRECAUTIONS:

Use a safety chain system for all towing, and abide by the state/provincial and local laws. The wheels and axle on the ground must be in good condition. If they are damaged, use a towing dolly.

(a) Towing with a wheel lift type truck

- From front

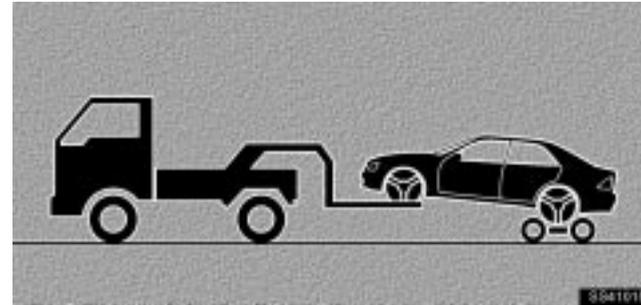


Use a towing dolly under the rear wheels.

NOTICE

Never tow a vehicle with an automatic transmission from the front with rear wheels on the ground, as this may cause serious damage to the transmission.

- From rear

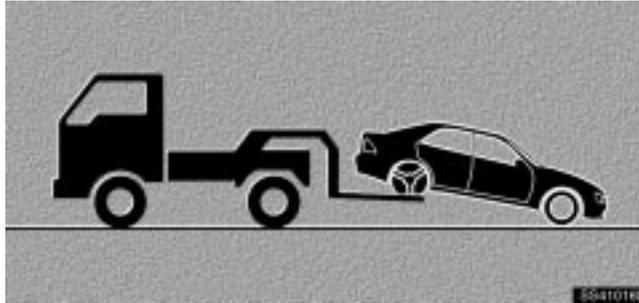


Place the ignition key in the "ACC" position.


NOTICE

- *Do not tow with the key removed or in the "LOCK" position, as the steering lock mechanism is not strong enough to hold the front wheels straight.*
- *When lifting wheels, take care to ensure adequate ground clearance for towing at the opposite end of the raised vehicle. Otherwise, the bumper and/or underbody of the towed vehicle will be damaged during towing.*


- (b) Using a flat bed truck

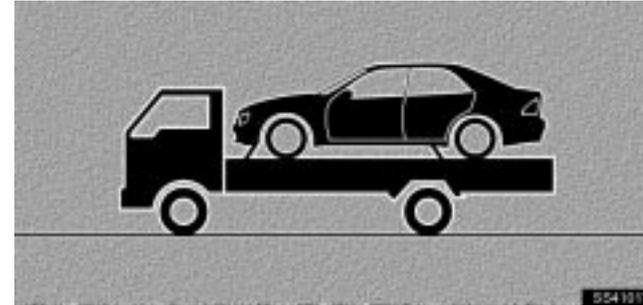

- Tie down points

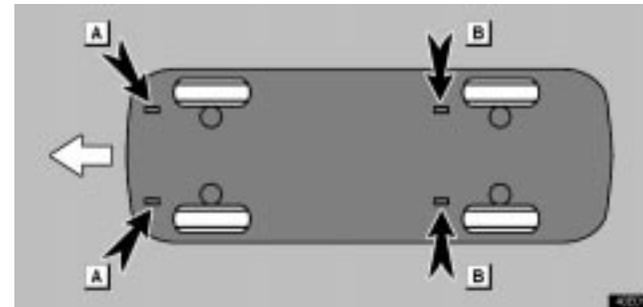

IN CASE OF AN EMERGENCY

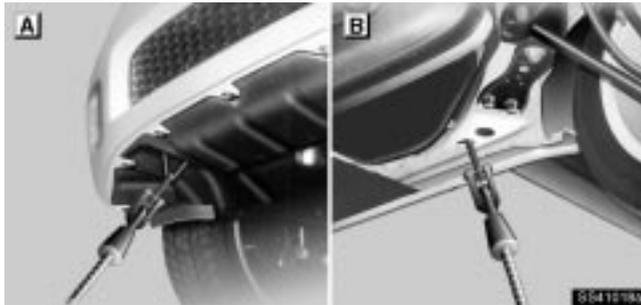

If your Lexus is transported by a flat bed, it should be tied down at locations A and B as shown above.




► *Rear emergency towing eyelets*

NOTICE


Do not use the rear emergency towing eyelets.

- **Tie down angle**

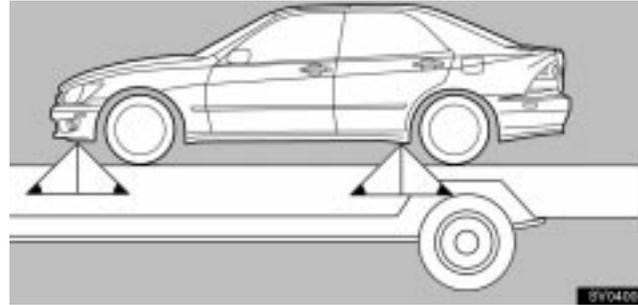

If you use chains or wires to tie down your vehicle, the angles shaded black must be at 45°.

(c) Towing with a sling type truck

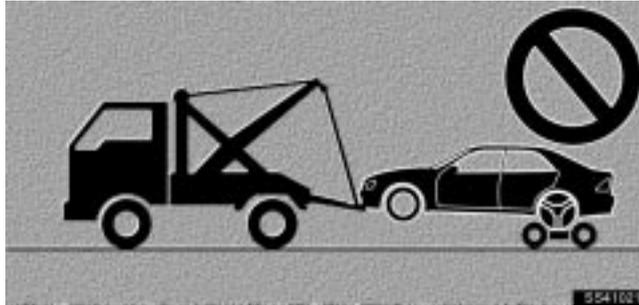

NOTICE

Do not tow with a sling type truck, either from the front or rear. This may cause body damage.

(d) Emergency towing



If towing is necessary, we recommend you to have it done by your Lexus dealer or a commercial tow truck service.

If towing service is not available in an emergency, your vehicle may be temporarily towed by a cable or chain secured to the emergency towing eyelet. Use extreme caution when towing the vehicle.

NOTICE

Only use specified towing eyelet; otherwise your vehicle may be damaged.

A driver must be in the vehicle to steer it and operate the brakes.

IN CASE OF AN EMERGENCY

Towing in this manner may be done only on hard-surfaced roads for a short distance and at low speeds. Also, the wheels, axles, drive train, steering and brakes must all be in good condition.

CAUTION

Use extreme caution when towing the vehicle. Avoid sudden starts or erratic driving maneuvers which would place excessive stress on the emergency towing eyelet and towing cable or chain. The eyelet and towing cable or chain may break and cause serious injury or damage.

NOTICE

Use only a cable or chain specifically intended for use in towing vehicles. Securely fasten the cable or chain to the towing eyelet provided.

Before towing, release the parking brake and put the transmission in "N". The ignition key must be in "ACC" (engine off) or "ON" (engine running).

CAUTION


If the engine is not running, the power assist for the brakes and steering will not work so steering and braking will be much harder than usual.

IF YOU CANNOT SHIFT AUTOMATIC TRANSMISSION SELECTOR LEVER



If you cannot shift the selector lever, use the shift lock button as follows:

- 1 Turn the ignition key to "LOCK" or "ACC". Make sure the parking brake is applied. Pry up the cover with a flat-bladed screwdriver or equivalent.

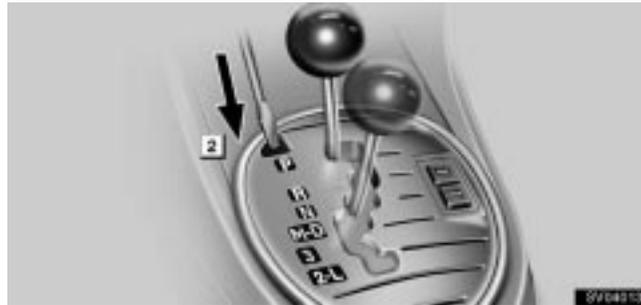

- 2 Insert your finger, the screwdriver or equivalent into the hole to push down the shift lock override button. You can shift the selector lever while pushing the button.

For your safety, keep the brake pedal depressed.

Be sure to have the system checked by your Lexus dealer as soon as possible.

IF YOU LOSE YOUR KEYS OR LOCK YOURSELF OUT

You can purchase a new key at your Lexus dealer if you can give them the key number and master key.

Even if you lose only one key, contact your Lexus dealer to make a new key. If you lose all your master keys, you cannot make new keys; the whole engine immobiliser system must be replaced.

See the suggestion given in "Keys" on page 8.

You can use the wireless remote control system with the new key. Contact your Lexus dealer for detailed information.

If your keys are locked in the vehicle and you cannot get a duplicate, many Lexus dealers can still open the door for you, using their special tools. If you must break a window to get in, we suggest breaking the smallest side window because it is the least expensive to replace. Be extremely cautious to avoid cuts from the glass.

SECTION 5

MAINTENANCE

Maintenance requirements	222
General maintenance	223
Does your vehicle need repairing?	226

For scheduled maintenance information, please refer to the "Owner's Manual Supplement/Scheduled Maintenance".

MAINTENANCE

MAINTENANCE REQUIREMENTS

Your Lexus vehicle has been designed for fewer maintenance requirements with longer service intervals to save both your time and money. However, each regular maintenance as well as day-to-day care is more important than ever before to ensure smooth, trouble-free, safe, and economical driving.

It is the owner's responsibility to make sure the specified maintenance, including general maintenance services, is performed. Note that both the new vehicle and emission control system warranties specify that proper maintenance and care must be performed. See "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet" for complete warranty information.

General maintenance

General maintenance items are those day-to-day care practices that are important to your vehicle for proper operation. It is the owner's responsibility to ensure that the general maintenance items are performed regularly.

These checks or inspections can be done either by yourself or your Lexus dealer.

Scheduled maintenance

The scheduled maintenance items listed in the "Owner's Manual Supplement/Scheduled Maintenance" are those required to be serviced at regular intervals.

For details of your maintenance schedule, read the "Owner's Manual Supplement/Scheduled Maintenance".

It is recommended that only genuine Lexus parts be used for maintenance.

The owner may elect to use non-Lexus supplied parts for replacement purposes without invalidating the emission control system warranty. However, use of replacement parts which are not of equivalent quality may impair the effectiveness of the emission control systems.

You may also elect to have maintenance, replacement, or repair of the emission control devices and system performed by any automotive repair establishment or individual without invalidating this warranty. See "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet" for complete warranty information.

Where to go for service?

Lexus technicians are well-trained specialists and are kept up to date with the latest service information through technical bulletins, service tips, and in-dealership training programs. They are well informed about the operation of all the systems on your vehicle.

You can be confident that your Lexus dealer's service department performs the best job to meet the maintenance requirements of your vehicle.

Your copy of the repair order is proof that all required maintenance has been performed for warranty coverage. And if any problems should arise with your vehicle while under warranty, your Lexus dealer will promptly take care of it. Again, be sure to keep a copy of the repair order for any service performed on your Lexus.

What about do-it-yourself maintenance?

Many of the maintenance items are easy to do yourself, if you have a little mechanical ability and a few basic automotive tools. Simple instructions for how to perform them are presented in Section 6.

If you are a skilled do-it-yourself mechanic, the Lexus service manuals are recommended. Please be aware that do-it-yourself maintenance can affect your warranty coverage. See "Owner's Guide", "Owner's Manual Supplement" or "Warranty Booklet" for the details.

GENERAL MAINTENANCE

Listed below are the general maintenance items that should be performed at the intervals specified. It is recommended that any problem you notice be brought to the attention of your Lexus dealer or qualified service shop for their advice.



CAUTION

Make these checks only where adequate ventilation can be obtained if you run the engine.

Vehicle exterior

Items listed below should be performed from time to time, unless otherwise specified.

Tire pressure

Check the pressure with a gauge every two weeks, or at least once a month and adjust as shown on the tire pressure label. See page 254 for additional information.

Tire surface

Check the tires carefully for cuts, damage or excessive wear. See page 256 for additional information.

Wheel nuts

When checking the tires, make sure to check the nuts for looseness. Tighten them if necessary.

MAINTENANCE

Tire rotation

Rotate the tires according to the maintenance schedule. (For scheduled maintenance information, please refer to the "Owner's Manual Supplement" or "Scheduled Maintenance".) See page 255 for additional information.

Fluid leaks

Check underneath for leaking fuel, oil, water or other fluid after the vehicle has been parked for a while. If you smell fuel fumes or notice any leak, have the cause found and corrected immediately.

Doors and engine hood

Check that all doors, including trunk lid, operate smoothly and all latches lock securely. Make sure the engine hood secondary latch secures the hood when the primary latch is released.

Vehicle interior

Items listed below should be checked regularly, e.g. while performing periodic services, cleaning the vehicle, etc.

Lights

Make sure the headlight, stop lights, tail lights, turn signal lights, and other lights are working. Check headlight aim.

Service reminder indicators and warning buzzers

Check that all service reminder indicators and warning buzzers function properly.

Steering wheel

Check that it has the specified free play. Be alert for changes in steering condition, such as hard steering, excessive free play or strange noise.

Seats

Check that all front seat controls such as seat adjusters, seatback recliner, etc. operate smoothly. Check that the head restraints move up and down smoothly and that the locks hold securely in any latched position.

Seat belts

Check that the seat belt system such as buckles, retractors and anchors operate properly and smoothly. Make sure the belt webbing is not cut, frayed, worn or damaged.

Accelerator pedal

Check the pedal for smooth operation and uneven pedal effort or catching.

Brake pedal

Check the pedal for smooth operation and the proper clearance and free play. Check the brake booster function.

Brakes

At a safe place, check that the brakes do not pull to one side when applied.

Parking brake

Check that the lever has the proper travel and that, on a safe incline, your vehicle is held securely with only the parking brake applied.

Automatic transmission "Park" mechanism

On a safe incline, check that your vehicle is held securely with the selector lever in "P" position and all brakes released.

Engine compartment

Items listed below should be checked from time to time, e.g. each time when refueling.

Washer fluid

Make sure there is sufficient fluid in the tank. See page 274 for additional information.

Engine coolant level

Make sure the coolant level is between the Upper and Lower lines on the see-through reservoir when the engine is cold. See page 245 for additional information.

Battery

Your Lexus has a maintenance free battery. You do not have to add distilled water. For longer life of the battery, however, see page 268 for additional information.

Brake fluid level

Make sure the brake fluid level is correct. See page 252 for additional information.

Engine oil level

Check the level on the dipstick with the engine turned off and the vehicle parked on a level spot. See page 242 for additional information.

Power steering fluid level

Check the level on the dipstick. The level should be in the "HOT" or "COLD" range depending on the fluid temperature. See page 253 for additional information.

Exhaust system

If you notice any change in the sound of the exhaust or smell exhaust fumes, have the cause located and corrected immediately. (See "Engine exhaust cautions" on page 165 in Section 3-1.)

MAINTENANCE

DOES YOUR VEHICLE NEED REPAIRING?

Be on the alert for changes in performance and sounds, and visual tip-offs that indicate service is needed. Some important clues are:

- Engine missing, stumbling, or pinging
- Appreciable loss of power
- Strange engine noises
- A fluid leak under the vehicle (however, water dripping from the air conditioning after use is normal.)
- Change in exhaust sound (This may indicate a dangerous carbon monoxide leak. Drive with the windows open and have the exhaust system checked immediately.)
- Flat-looking tires, excessive tire squeal when cornering, uneven tire wear
- Vehicle pulls to one side when driving straight on a level road
- Strange noises related to suspension movement
- Loss of brake effectiveness, spongy feeling brake pedal, pedal almost touches floors, vehicle pulls to one side when braking
- Engine coolant temperature continually higher than normal

If you notice any of these clues, take your vehicle to your Lexus dealer as soon as possible. It probably needs adjustment or repair.



Do not continue driving with the vehicle unchecked. It could result in serious vehicle damage and possibly personal injury.

SECTION 6-1

SERVICE PROCEDURES AND SPECIFICATIONS

Introduction

Vehicle identification	228
Engine compartment overview	229
Do-it-yourself service precautions	230
Parts and tools	231
Positioning the jack	233

INTRODUCTION

VEHICLE IDENTIFICATION




The vehicle identification number (VIN) is the legal identifier for your vehicle. This number is on the left top of the instrument panel and can be seen through the windshield from outside.

This is the primary identification number for your Lexus. It is used in registering the ownership of your vehicle.




The vehicle identification number (VIN) is also on the Certification Label.

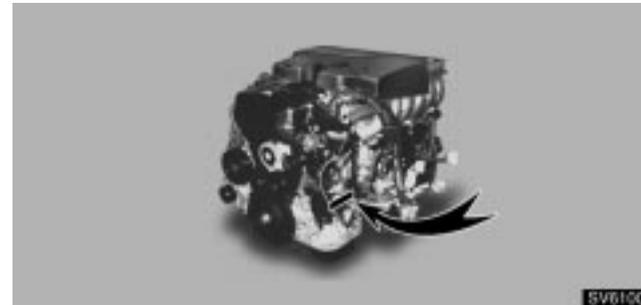

The engine number is stamped on the engine block as shown.

ENGINE COMPARTMENT OVERVIEW

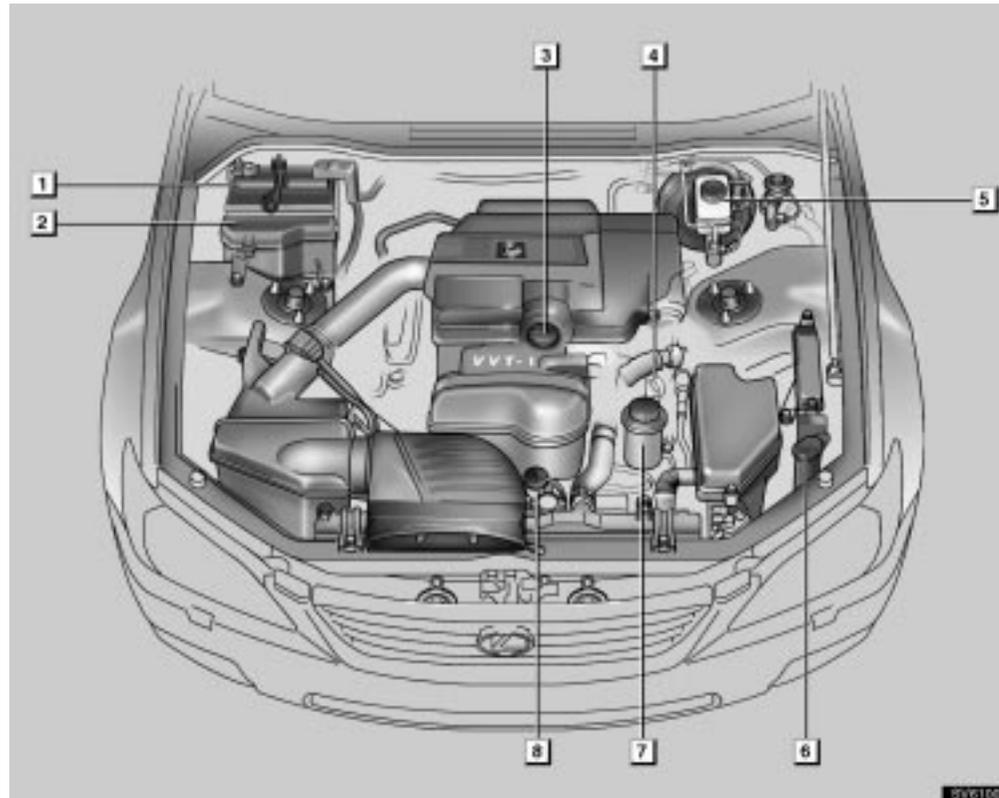

- 1 *Battery*
- 2 *Fuse box*
- 3 *Engine oil filler cap*
- 4 *Engine oil level dipstick*
- 5 *Brake fluid reservoir*
- 6 *Washer fluid tank*
- 7 *Power steering fluid reservoir*
- 8 *Engine coolant reservoir*

INTRODUCTION

DO-IT-YOURSELF SERVICE PRECAUTIONS

If you perform maintenance yourself, be sure to follow the correct procedure given in this Section.

You should be aware that improper or incomplete servicing may result in operating problems.

Performing do-it-yourself maintenance during the warranty period may affect your warranty coverage. Read the separate Lexus Warranty statement for details and suggestions.

This Section gives instructions only for those items that are relatively easy for an owner to perform. As explained in Section 5, there are still a number of items that must be performed by a qualified technician with special tools.

For information on tools and parts for do-it-yourself maintenance, see "Parts and tools" on page 231.

Utmost care should be taken when working on your vehicle to prevent accidental injury. Here are a few precautions that you should be especially careful to observe:

CAUTION

- When the engine is running, keep hands, clothing, and tools away from the moving fan and engine drive belt. (Removing rings, watches, and ties is advisable.)

- Right after driving, the engine compartment – the engine, radiator, exhaust manifold and power steering fluid reservoir, etc. – will be hot. So be careful not to touch them. Oil and other fluids may also be hot.
- Do not smoke, cause sparks or allow open flames around fuel or the battery. Their fumes are flammable.
- Do not get under your vehicle with just the body jack supporting it. Always use automotive jack stands or other solid supports.
- Be sure the ignition is off if you work near the electric cooling fan or radiator grille. With the ignition on, the electric cooling fan may automatically start to run if the air conditioning is on and/or if the coolant temperature is high.
- Use eye protection whenever you work on or under your vehicle where you may be exposed to flying or falling material, fluid spray, etc.
- Be extremely cautious when working on the battery. It contains poisonous and corrosive sulfuric acid.
- Warning: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

NOTICE

- *Remember that battery and ignition cables carry high currents or voltages. Be careful of accidentally causing a short circuit.*
- *Before closing the engine hood, check to see that you have not forgotten any tools, rags, etc.*
- *Do not drive with the air cleaner removed, or excessive engine wear could result. Also backfiring could cause a fire in the engine compartment.*
- *Do not overfill automatic transmission fluid, or the transmission could be damaged.*
- *Be careful not to scratch the glass surface with the wiper frame.*

PARTS AND TOOLS

Here is a list of parts and tools you will need to perform do-it-yourself maintenance. Remember all Lexus parts are designed in metric sizes, so your tools must be metric.

Checking the engine oil level**Parts (if level is low):**

- Use API grade SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil. For recommended oil viscosity, see page 244.

Tools:

- Rag or paper towel
- Funnel (only for adding oil)

Checking the engine coolant level**Parts (if level is low):**

- "Toyota Long Life Coolant" or equivalent
See "Checking the engine coolant level" on page 245 for instructions.

- Demineralized or distilled water

Tools:

- Funnel (only for adding coolant)

INTRODUCTION

Checking brake fluid

Parts (if level is low):

- FMVSS No. 116 DOT 3 or SAE J1703 brake fluid

Tools:

- Funnel (only for adding fluid)

Checking power steering fluid

Parts (if level is low):

- Automatic transmission fluid DEXRON® II or III

Tools:

- Rag or paper towel
- Funnel (only for adding fluid)

Checking battery condition

Tools:

- Warm water
- Baking soda
- Grease
- Conventional wrench (for terminal clamp bolts)

Checking and replacing the blade type fuses

Parts (if replacement is necessary):

- Fuse with same amperage rating as original

Checking the cartridge type fuses

Parts (if replacement is necessary):

- Genuine Lexus fuse or equivalent with same amperage rating as original

Adding washer fluid


Parts:

- Water
- Washer fluid containing antifreeze (for winter use)

Tools:

- Funnel

POSITIONING THE JACK

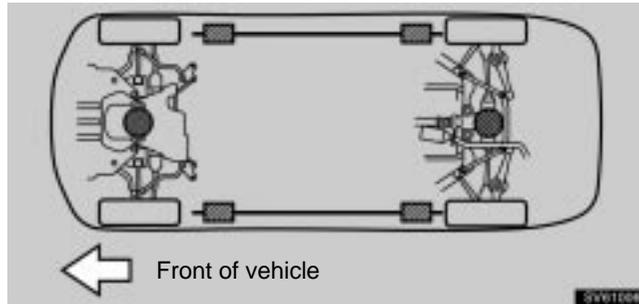

When jacking up your vehicle with the jack, position the jack correctly as shown in the illustration.

- Jack position 
- Front– Front crossmember
- Rear– Rear engine mounting bracket
- Support position and Pantograph jack position 

CAUTION

When jacking, be sure to observe the following to reduce the possibility of personal injury:

- Follow jacking instructions.
- Do not put any part of your body under the vehicle supported by a jack. Personal injury may occur.
- Do not start or run the engine while your vehicle is supported by the jack.
- Stop the vehicle on a level firm ground, firmly set the parking brake and put the transmission in reverse. Block the wheel diagonally opposite to the one being changed if necessary.
- Make sure to set the jack properly in the jack point. Raising the vehicle with jack improperly positioned will damage the vehicle or may allow the vehicle to fall off the jack and cause personal injury.
- Never get under the vehicle when the vehicle is supported by the jack alone; use vehicle support stands.
- Do not raise the vehicle with someone in the vehicle.
- When raising the vehicle, do not put an object on or under the jack.

INTRODUCTION

NOTICE

Make sure to place the jack correctly, or your vehicle may be damaged.

SECTION 6-2

SERVICE PROCEDURES AND SPECIFICATIONS

Engine

Specifications	236
Fuel	238
Facts about engine oil consumption	240
Used engine oil	242
Checking the engine oil level	242
Checking the engine coolant level	245
Spark plugs	246

ENGINE

SPECIFICATIONS

– GENERAL

Model	2JZ-GE
Type	6 cylinder in line, 4 cycle, gasoline
Bore and stroke	86.0 X 86.0 mm (3.39 X 3.39 in.)
Displacement	2997 cm ³ (182.9 cu.in.)
Valve clearance (engine cold)	
Intake	0.15 – 0.25 mm (0.006 – 0.010 in.)
Exhaust	0.25 – 0.35 mm (0.010 – 0.014 in.)
Drive belt tension	Automatic adjustment

– LUBRICATION SYSTEM

Oil capacity	
Drain and refill	
with filter	5.4 L (5.7 qt., 4.8 Imp.qt.)
without filter	5.1 L (5.4 qt., 4.5 Imp.qt.)
Oil grade	API SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil
Recommended oil viscosity (SAE):	

The chart shows two horizontal arrows representing temperature ranges. The top arrow is labeled '5W-30 Preferred' and spans from -20°F (-29°C) to 100°F (38°C). The bottom arrow is labeled '10W-30' and spans from 0°F (-18°C) to 100°F (38°C). The x-axis is labeled with Fahrenheit and Celsius temperatures.

Temperature range anticipated before next oil change

ENGINE

– COOLING SYSTEM

Capacity Coolant type	7.5 L (7.9 qt., 6.6 Imp.qt.) "Toyota Long Life Coolant" or equivalent With ethylene–glycol type coolant for a proper corrosion protection of aluminum components Do not use alcohol type antifreeze or plain water alone.
--------------------------	--

– FUEL

Fuel type Octane rating	Only UNLEADED 91 (Research octane number 96) or higher
----------------------------	---

– IGNITION SYSTEM

Spark plug – Make – Gap	DENSO SK16R–P11 1.1 mm (0.043 in.)
----------------------------	--

– ELECTRICAL SYSTEM

Battery – Open voltage at 20°C (68°F): Charging rates	12.7V Fully charged 12.3V Half charged 11.9V Discharged [Voltage that is checked 20 minutes after the key is removed with all the lights turned off] 5A max.
--	--

ENGINE

FUEL

Fuel type

Your vehicle must use only unleaded gasoline.

To help prevent gas station mixups, your Lexus has a smaller fuel tank opening. The special nozzle on pumps with unleaded fuel will fit it, but the larger standard nozzle on pumps with leaded gas will not.

At a minimum, the gasoline you use should meet the specifications of ASTM D4814 in the U.S.A. and CGSB 3.5-M93 in Canada.

NOTICE

Do not use leaded gasoline. Use of leaded gasoline will cause the three-way catalytic converter to lose its effectiveness and the emission control system to function improperly. Also, this can increase maintenance costs.

Octane rating

Select premium unleaded gasoline with an Octane Rating of 91 (Research Octane Number 96) or higher for optimum engine performance. However, if such premium type cannot be obtained, you may temporarily use unleaded gasoline with an Octane Rating as low as 87 (Research Octane Number 91).

Use of unleaded fuel with an octane number or rating lower than stated above will cause persistent heavy knocking. If severe, this will lead to engine damage.

If your engine knocks ...

If you detect heavy knocking even when using the recommended fuel, or if you hear steady knocking while holding a steady speed on level roads, consult your Lexus dealer.

However, now and then, you may notice light knocking for a short time while accelerating or driving up hills. This is no cause for concern.

Gasoline containing detergent additives

Lexus recommends the use of gasoline that contains detergent additives to avoid build-up of engine deposits.

However, all gasoline sold in the U.S. contains detergent additives to keep clean and/or clean intake systems.

Quality gasoline

Automotive manufacturers in the U.S., Europe and Japan have developed a specification for quality fuel named World-Wide Fuel Charter (WWFC) that is expected to be applied world wide. The WWFC consists of three categories that depend on required emission levels. In the U.S., category 3 has been adopted. The WWFC improves air quality by providing for better emissions in vehicle fleets, and customer satisfaction through better vehicle performance.

Cleaner burning gasoline

Cleaner burning gasoline, including reformulated gasoline that contains oxygenates such as ethanol or MTBE is available in many areas.

Lexus recommends the use of cleaner burning gasoline and appropriately blended reformulated gasoline. These types of gasoline provide excellent vehicle performance, reduce vehicle emissions, and improve air quality.

Oxygenates in gasoline

Lexus allows the use of oxygenate blended gasoline where the oxygenate content is up to 10% ethanol or 15% MTBE. If you use gasohol in your Lexus, be sure that it has an octane rating no lower than 87.

Lexus does not recommend the use of gasoline containing methanol.

Sulfur in gasoline

If your vehicle is certified to California Emission Regulations, the vehicle is designed to operate on California cleaner burning gasoline (CBG) that contains lower sulfur. If you cannot use California CBG, your emission control system may suffer damage and turn on the Malfunction Indicator Lamp.

If the malfunction is caused by the type of fuel used, repairs may not be covered by your warranty.

Gasoline containing MMT

Some gasoline contain an octane enhancing additive called MMT (Methylcyclopentadienyl Manganese Tricarbonyl).

Lexus does not recommend the use of gasoline that contains MMT. If fuel containing MMT is used, your emission control system may be adversely affected. The Malfunction Indicator Lamp on the instrument cluster may come on. If this happens, contact your Lexus dealer for service.

Gasoline quality

In a very few cases, you may experience driveability problems caused by the particular gasoline that you are using. If you continue to have unacceptable driveability, try changing gasoline brands. If this does not rectify your problem, then consult your Lexus dealer.

ENGINE

NOTICE

- *Do not use gasohol other than stated above. It will cause fuel system damage or vehicle performance problems.*
- *If driveability problems are encountered (poor hot starting, vaporizing, engine knock, etc.), discontinue its use.*
- *Take care not to spill gasohol during refueling. Gasohol may cause paint damage.*

Fuel tank capacity

66 L (17.5 gal., 14.5 Imp.gal.)

FACTS ABOUT ENGINE OIL CONSUMPTION

Functions of engine oil

Engine oil has the primary function of lubricating and cooling the inside of the engine, and plays a major role in maintaining the engine in proper working order.

Engine oil consumption

It is normal that an engine should consume some engine oil during normal engine operation. The causes of oil consumption in a normal engine are as follows.

- Oil is used to lubricate pistons, piston rings and cylinders. A thin film of oil is left on the cylinder wall when a piston moves downwards in the cylinder. High negative pressure generated when the vehicle is decelerating sucks some of this oil into the combustion chamber. This oil as well as some part of the oil film left on the cylinder wall is burned by the high temperature combustion gases during the combustion process.
- Oil is also used to lubricate the stems of the intake valves. Some of this oil is sucked into the combustion chamber together with the intake air and is burned along with the fuel. High temperature exhaust gases also burn the oil used to lubricate the exhaust valve stems.

The amount of engine oil consumed depends on the viscosity of the oil, the quality of the oil and the way the vehicle is driven.

More oil is consumed under driving conditions such as high speeds and frequent acceleration and deceleration.

A new engine consumes more oil, since its pistons, piston rings and cylinder walls have not become conditioned.

When judging the amount of oil consumption, keep in mind that the oil may have become diluted, making it difficult to judge the true level accurately.

For example, if a vehicle is used for repeated short trips and consumes a normal amount of oil, the dipstick may not show any drop in the oil level at all, even after 1000 km (600 miles) or more. This is because the oil is gradually becoming diluted with fuel or moisture, making it appear that the oil level has not changed.

The diluting ingredients evaporate out when the vehicle is then driven at high speeds, as on an expressway, making it appear that oil is excessively consumed after driving at high speeds.

Importance of engine oil level check

One of the most important points in proper vehicle maintenance is to keep the engine oil at the optimum level so that oil function will not be impaired. Therefore, it is essential that the oil level be checked regularly. Lexus recommends that the oil level be checked every time you refuel the vehicle.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

For detailed information on oil level check, see "Checking the engine oil level" on page 242.

ENGINE

USED ENGINE OIL

CAUTION


- Used engine oil contains potentially harmful contaminants which may cause skin disorders such as inflammation or skin cancer, so care should be taken to avoid prolonged and repeated contact with it. To remove used engine oil from your skin, wash thoroughly with soap and water.
- Do not leave used oil within the reach of children.
- Dispose of used oil and used oil filters only in a safe and acceptable manner. Do not dispose of used oil and used oil filters in household trash, in sewers or onto the ground. Call your Lexus dealer or a service station for information concerning recycling or disposal.

CHECKING THE ENGINE OIL LEVEL



With the engine at operating temperature and turned off, check the oil level on the dipstick.

1. To get a true reading, the vehicle should be on a level spot. After turning off the engine, wait a few minutes for the oil to drain back into the bottom of the engine.
2. Pull out the dipstick, and wipe it clean with a rag.
3. Reinsert the dipstick and push it in as far as it will go, or the reading will not be correct.

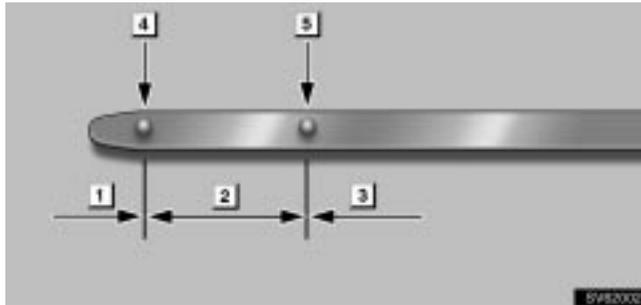

► **1 Add oil** **2 O.K.** **3 Too full**

4. Pull the dipstick out and look at the oil level on the end. If it is between the low level mark (**4**) and the full level mark (**5**), it is O.K.



If the oil level is below or only slightly above the low level mark, add engine oil of the same type as already in the engine.

Remove the oil filler cap and add engine oil a little at a time, checking the dipstick. The approximate quantity of oil needed to fill between the low level mark and the full level mark on the dipstick is indicated below for reference.

When the level reaches within the correct range, return the filler cap and turn the cap clockwise until you hear a click.

Oil quantity. L (qt., Imp. qt.) 1.5 (1.6, 1.3)

NOTICE


Avoid overfilling, or the engine could be damaged. Check the oil level on the dipstick once again after adding the oil.

ENGINE

Engine oil selection

Use API SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil.

Recommended viscosity (SAE):

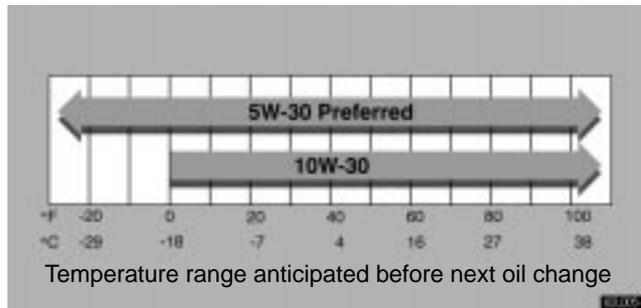

SAE 5W-30 is the best choice for your vehicle, for good fuel economy and good starting in cold weather.

If you use SAE 10W-30 engine oil in extremely low temperatures, the engine may become difficult to start, so SAE 5W-30 engine oil is recommended.

Oil identification marks



► **API Service Symbol**

► **ILSAC Certification Mark**


Either or both API registered marks are added to some oil containers to help you select the oil you should use.

- The API Service Symbol is located anywhere on the outside of the container.

The top portion of the label shows the oil quality by API (American Petroleum Institute) designation such as SJ. The center portion of the label shows the SAE viscosity grade such as SAE 5W-30. "Energy-Conserving", shown in the lower portion, indicates that the oil has fuel-saving capabilities.

- The ILSAC (International Lubricant Standardization and Approval Committee) Certification Mark is displayed on the front of the container.

CHECKING THE ENGINE COOLANT LEVEL

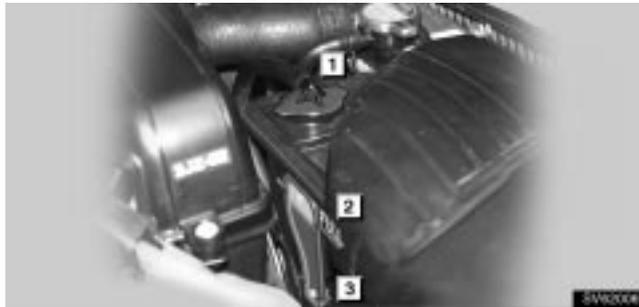

► **1** Reservoir cap **2** Upper line **3** Lower line

Look at the see-through coolant reservoir when the engine is cold. The coolant level is satisfactory if it is between the "FULL" and "L" lines on the reservoir. If the level is low, add ethylene-glycol type coolant for a proper corrosion protection of aluminum components.

The coolant level in the reservoir will vary with engine temperature. However, if the level is on or below the "L" line, add coolant. Bring the level up to the "FULL" line.

Always use ethylene-glycol type coolant for a proper corrosion protection of aluminum components. See information in the next column.

If the coolant level drops within a short time after replenishing, there may be a leak in the system. Visually check the radiator, hoses, engine coolant filler cap, radiator cap and drain cock and water pump.

If you can find no leak, have your Lexus dealer test the cap pressure and check for leaks in the cooling system.



CAUTION

To prevent burning yourself, do not remove the radiator cap when the engine is hot.

ENGINE

Coolant type selection

Use of improper coolants may damage your engine cooling system. Your coolant must contain ethylene-glycol type coolant for a proper corrosion protection of your engine that contains aluminum components. Use "Toyota Long Life Coolant" or equivalent.

In addition to preventing freezing and subsequent damage to the engine, this type of coolant will also prevent corrosion. Further supplemental inhibitors or additives are neither needed nor recommended.

Read the coolant container for information on freeze protection. Follow the manufacturer's directions for how much to mix with plain water (preferably demineralized water or distilled water). The total capacity of the cooling system is given on page 237.

We recommend to use 50% solution for your Lexus, to provide protection down to about -35°C (-31°F). When it is extremely cold, to provide protection down to about -50°C (-58°F), 60% solution is recommended. Do not use more than 70% solution for better coolant performance.

NOTICE

Do not use alcohol type antifreeze or plain water alone.

SPARK PLUGS



Your engine is fitted with designated iridium-tipped spark plugs.

NOTICE

Use only designated iridium-tipped spark plugs and do not adjust gaps for your engine performance and smooth drivability.

SECTION 6-3

SERVICE PROCEDURES AND SPECIFICATIONS

Chassis

Specifications	248
Checking brake fluid	252
Checking power steering fluid	253
Checking tire pressure	254
Rotating tires	255
Checking and replacing tires	256
Installing snow tires and chains	259
Replacing wheels	260
Aluminum wheel precautions	261
Suspension and chassis	261

CHASSIS

SPECIFICATIONS

– AUTOMATIC TRANSMISSION

Fluid capacity Drain and refill Fluid type	2.4 L (2.5 qt., 2.1 Imp.qt.) Automatic transmission fluid Type T – IV*
--	--

– DIFFERENTIAL

Oil capacity Oil type Oil viscosity	1.15 L (1.22 qt., 1.01 Imp.qt.) Hypoid gear oil API GL–5 Above –18°C (0°F): SAE 90 Below –18°C (0°F): SAE 80W or SAE 80W–90
---	--

*Change automatic transmission fluid only as necessary. Generally, it is necessary to change automatic transmission fluid only if your vehicle is driven under one of the Special Operating Conditions listed in your "Owner's Manual Supplement / Maintenance Schedule". When changing the automatic transmission fluid, use only Toyota Genuine ATF Type T–IV (ATF JWS3309 or NWS6500) to aid in assuring optimum transmission performance.

NOTICE

Using automatic transmission fluid other than Toyota Genuine ATF Type T–IV may cause deterioration in shift quality, locking up of your transmission accompanied by vibration, and ultimately damage the automatic transmission of your vehicle.

CHASSIS

- BRAKES

Pedal clearance * ¹	99 mm (3.9 in.) Min.
Pedal free play	1 – 6 mm (0.04 –0.24 in.)
Brake pad wear limit	1.0 mm (0.04 in.)
Parking brake lining wear limit	1.0 mm (0.04 in.)
Parking brake adjustment * ²	5 – 8 clicks
Fluid type	SAE J1703 or FMVSS No. 116 DOT 3

*¹Minimum pedal clearance when depressed with the force of 490 N (49 kgf, 110 lbf.) with the engine running

*²Parking brake adjustment when pulled with the force of 196 N (20 kgf, 44 lbf.)

- STEERING

Free play	Less than 30 mm (1.2 in.)
Power steering fluid	Automatic transmission fluid DEXRON® II or III

CHASSIS

– TIRES AND WHEELS (Type A)

Tire size	215/45ZR17
Tire inflation pressure	
Recommended cold tire inflation pressure	Front 230 kPa (2.3 kgf/cm ² or bar, 33 psi) Rear 230 kPa (2.3 kgf/cm ² or bar, 33 psi)
	For sustained high speeds above 160 km/h (100 mph), in countries where such speeds are permitted by law, add 70 kPa (0.8 kgf/cm ² , 0.7 bar, 10 psi) to the front tires and rear tires, but never exceed the maximum cold tire pressure molded on the tire sidewall.
Wheel size	17 x 7 JJ
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf.)

NOTE: For complete information on tires (e.g. replacing tires or replacing wheels), see "Checking tire pressure" through "Aluminum wheel precautions" on page 254 through 261.

- TIRES AND WHEELS (Type B)

Tire size	P205/55R16 89V
Tire inflation pressure	
Recommended cold tire inflation pressure	Front 230 kPa (2.3 kgf/cm ² or bar, 33 psi) Rear 230 kPa (2.3 kgf/cm ² or bar, 33 psi)
	For sustained high speeds above 160 km/h (100 mph), in countries where such speeds are permitted by law, add 70 kPa (0.8 kgf/cm ² , 0.7 bar, 10 psi) to the front tires and rear tires, but never exceed the maximum cold tire pressure molded on the tire sidewall.
Wheel size	16 x 6 1/2JJ
Wheel nut torque	103 N·m (10.5 kgf·m, 76 ft·lbf.)

NOTE: For complete information on tires (e.g. replacing tires or replacing wheels), see "Checking tire pressure" through "Aluminum wheel precautions" on page 254 through 261.

CHASSIS

CHECKING BRAKE FLUID



To check the fluid level, simply look at the see-through reservoir. The level should be between the "MAX" and "MIN" lines on the tank.

It is normal for the brake fluid level to go down slightly as the brake pads wear or when the fluid level in the accumulator is high.

If the reservoir needs frequent refilling, it may indicate a serious mechanical problem.

If the level is low, add FMVSS No.116 DOT 3 or SAE J1703 brake fluid to the brake reservoir.

Refilling brake fluid:

1. Turn the ignition switch off.
2. Depress the brake pedal more than 40 times.
3. Remove the reservoir cap by hand. Add brake fluid up to the "MAX" line.

If you do not follow the procedure above, the reservoir may overflow.

Use only newly opened brake fluid. Once opened, brake fluid absorbs moisture from the air, and excess moisture can cause a dangerous loss of braking efficiency.

CAUTION

Take care when filling the reservoir because brake fluid can harm your hands or eyes and damage painted surfaces. If fluid gets in your eyes, flush your eyes with clean water immediately. If you still feel uncomfortable with your eyes, go to the doctor.

NOTICE

If you spill some of the fluid, be sure to wipe it off to prevent it from damaging the parts or paintwork.

CHECKING POWER STEERING FLUID



Check the fluid level on the dipstick. If necessary, add automatic transmission fluid DEXRON® II or III.

If the vehicle has been driven around 80 km/h (50 mph) for 20 minutes (a little more in frigid temperatures), the fluid is hot (60°C – 80°C or 140°F – 175°F). You may also check the level when the fluid is cold (about room temperature, 10°C – 30°C or 50°F – 85°F) if the engine has not been run for about five hours.



► **1** If cold O.K. **2** If hot O.K. **3** Add fluid

1. Clean all dirt off the reservoir.
2. Remove the reservoir cap by turning it counterclockwise and wipe the dipstick clean.
3. Reinstall the reservoir cap.
4. Remove the reservoir cap again and look at the fluid level. If the fluid is cold, the level should be in the "COLD" range on the dipstick. Similarly, if it is hot, the fluid level should be in the "HOT" range. If the level is at the low side of either range, add automatic transmission fluid DEXRON® II or III to bring the level within the range.
5. After replacing the reservoir cap, visually check the steering box case, vane pump and hose connections for leaks or damage.

CHASSIS


CAUTION

The reservoir may be hot so be careful not to burn yourself.

NOTICE

- *Avoid overfilling, or the power steering could be damaged.*
- *When adding the power steering fluid, avoid spilling it. The generator under the power steering reservoir could be damaged if fluid is spilled on it.*

CHECKING TIRE PRESSURE

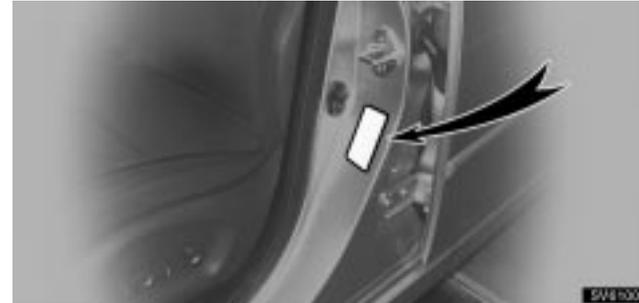

The recommended cold tire pressures, tire size and the vehicle capacity weight are given on the label.

You should check the tire pressures every two weeks, or at least once a month. And don't forget the spare! The pressure for the spare tire should be the same with that for the standard tire. (See page 250.) Incorrect tire pressure can reduce tire life and make your vehicle less safe to drive.


Low tire pressure results in excessive wear, poor handling, reduced fuel economy, and the possibility of blowouts from overheated tires. Also, low tire pressure can cause poor sealing of the tire bead. If the tire pressure is excessively low, there is the possibility of wheel deformation and/or tire separation. So keep your tire pressures at the proper level. If a tire needs frequent refilling, have it checked by your Lexus dealer.

High tire pressure produces a harsh ride, handling problems, excessive wear at the center of the tire tread, and a greater possibility of tire damage from road hazards.

The following instructions for checking tire pressure should be observed:

- **The pressure should be checked only when the tires are cold.** If your vehicle has been parked for at least 3 hours and has not been driven for more than 1.5 km or 1 mile since, you will get an accurate cold tire pressure reading.
- **Always use a tire pressure gauge.** The appearance of the tire can be misleading. Besides, tire pressures that are even just a few pounds off can degrade ride and handling.
- **Do not bleed or reduce tire pressure after driving.** It is normal for the tire pressure to be higher after driving.
- **Never exceed the vehicle capacity weight.** The passengers and luggage weight should be located so that the vehicle is balanced.
- **Be sure to reinstall the tire valve caps.** Without the valve caps, dirt or moisture could get into the valve core and cause air leakage. If the caps have been lost, have new ones put on as soon as possible.

ROTATING TIRES

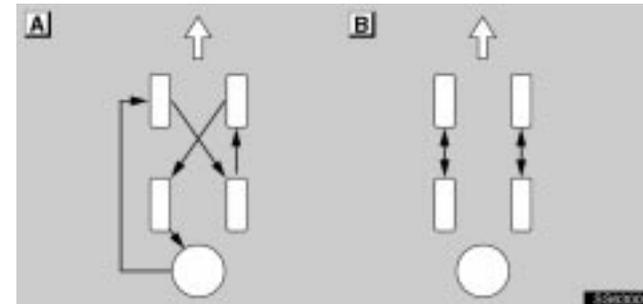

To equalize tire wear and help extend tire life, Lexus recommends that you rotate your tires according to the maintenance schedule. (For scheduled maintenance information, please refer to the "Owner's Manual Supplement/Scheduled Maintenance".) However, the most appropriate timing for tire rotation may vary according to your driving habits and road surface conditions.

The wheel assemblies must be rotated as illustrated above.

Pattern A: For tire without turning direction indicators.

Pattern B: For tire with turning direction indicators.

When rotating tires, check for uneven wear and damage. Abnormal wear is usually caused by incorrect tire pressure, improper wheel alignment, out-of-balance wheels, or severe braking.

CHASSIS

Before storing radial, snow or studded tires, mark the direction of rotation and be sure to install them in the same direction when using them again. Tires should be stored in a cool dry place.

CHECKING AND REPLACING TIRES

When to replace your tires



- ▶ **1** New tread
- 2** Tread wear indicator
- 3** Worn tread

Replace the tires when the tread wear indicators show. The location of the tread wear indicators is shown by the "TWI" or "△" marks molded on the sidewall of each tire.

The tires on your Lexus have built-in tread wear indicators to help you know when the tires need replacement. When the tread depth wears to 1.6 mm (0.06 in.) or less, the indicators will appear. If you can see the indicators in two or more adjacent grooves, the tire should be replaced.

Vehicles equipped with 215/45ZR17 tires: Your Lexus has been fitted with specially developed tires which provide exceptional dynamic performance under general road conditions. However your riding comfort may worsen a little and road noise may increase during driving. You may also notice that your tires will wear more rapidly and tire grip performance will be reduced on the snowy and/or icy roads when compared to standard tires. Be sure to have snow tires or tire chains on the snowy and/or icy roads and drive carefully with the speed appropriate for road conditions.

The effectiveness of snow tires is lost if the tread wears down below 4 mm (0.16 in.).

If you have tire damage such as cuts, splits, cracks deep enough to expose the fabric, or bulges indicating internal damage, the tire should be replaced.

If a tire often goes flat or cannot be properly repaired due to the size or location of a cut or other damage, it should be replaced. If you are not sure, consult with your Lexus dealer.

If an air loss occurs while driving, do not continue driving with a deflated tire. Driving even a short distance can damage a tire beyond repair.

Any tires which are over 6 years old must be checked by a qualified technician even if damage is not obvious.

Tires deteriorate with age even if they have never or seldom been used.

This also applies to the spare tire and tires stored for future use.

Uniform tire quality grading

This information has been prepared in accordance with regulations issued by the National Highway Traffic Safety Administration of the U.S. Department of Transportation. It provides the purchasers and/or prospective purchasers of Lexus vehicles with information on uniform tire quality grading.

Your Lexus dealer will help answer any questions you may have as you read this information.

DOT quality grades – All passenger vehicle tires must conform to Federal Safety Requirements in addition to these grades. Quality grades can be found where applicable on the tire sidewall between tread shoulder and maximum section width. For example: Treadwear 200 Traction AA Temperature A

Treadwear – The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and a half (1 – 1/2) times as well on the government course as a tire graded 100. The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction AA, A, B, C – The traction grades, from highest to lowest, are AA, A, B and C, and they represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

CHASSIS

Warning: The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include cornering (turning) traction.

Temperature A, B, C – The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

Warning: The temperature grades for this tire are established for a tire that is properly inflated and not overloaded. Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause heat buildup and possible tire failure.

Tire selection

When replacing a tire, use only the same size and construction as originally installed and with the same or greater load capacity.

Using any other size or type of tire may seriously affect handling, ride, speedometer/odometer calibration, ground clearance, and clearance between the body and tires or snow chains.

Do not mix radial, belted, or conventional tires on your vehicle.

Do not use tires or wheels other than the manufacturer's recommended size.

It can cause dangerous handling characteristics, resulting in loss of control. If you need to change from conventional tires to radial tires or vice versa, replace them as a set.

INSTALLING SNOW TIRES AND CHAINS

When to use snow tires or chains

Snow tires or chains are recommended when driving on snow or ice.

On wet or dry roads, conventional or radial tires provide better traction than snow or studded tires.

Snow tire selection

If you need snow tires, select the same size, construction and load capacity as the original tires on your Lexus.

Do not use tires other than stated above. Since your vehicle has radial tires as original equipment, make sure your snow tires also have radial construction. Do not install studded tires without first checking local regulations for possible restrictions.

Snow tire installation

Snow tires should be installed on all wheels.

Installing snow tires on the rear wheels only can lead to an excessive difference in road grip capability between the front and rear tires which could cause loss of vehicle control.



CAUTION

- Do not drive with the snow tires incorrectly inflated.
- Never drive over 120 km/h (75 mph) with any type of snow tires.

Tire chain selection

Regulations regarding the use of tire chains vary according to location or type of road. Always check the local regulations before installing chains.

Use SAE Class "S" type radial tire chains, with the exception of radial cable chains or V-bar type chains.

CHASSIS

Chain installation

Install the chains on the rear tires as tightly as possible. Do not use tire chains on the front tires. Retighten chains after driving 0.5 – 1.0 km (1/4 – 1/2 mile).

When installing chains on your tires, carefully follow the instructions of the chain manufacturer.

 CAUTION
<ul style="list-style-type: none">• Do not exceed 50 km/h (30 mph) or the chain manufacturer's recommended speed limit, whichever is lower.• Drive carefully avoiding bumps, holes, and sharp turns, which may cause the vehicle to bounce.• Avoid sharp turns or locked-wheel braking, as use of chains may adversely affect vehicle handling.• When driving with chains installed, be sure to drive carefully. slow down before entering the curves to avoid losing control of the vehicle, it may cause an accident.

REPLACING WHEELS

When to replace your wheels

If you have wheel damage such as bends, cracks or heavy corrosion, the wheel should be replaced.

If you fail to replace damaged wheels, the tire may slip off the wheel or cause loss of handling control.

Replacement with used wheels is not recommended as they may have been subjected to rough treatment or high mileage and could fail without warning. Also, bent wheels which have been straightened may have hidden structural damage and therefore should not be used. Never use an inner tube in a leaking wheel which is designed for a tubeless tire.

Wheel selection

When replacing wheels, care should be taken to ensure that they are equivalent to those removed in load capacity, diameter, rim width, and offset.

Correct replacement wheels are available at your Lexus dealer.

A wheel of a different size or type may adversely affect handling, wheel and bearing life, brake cooling, speedometer/odometer calibration, stopping ability, headlight aim, bumper height, vehicle ground clearance, and tire or snow chain clearance to the body and chassis.

ALUMINUM WHEEL PRECAUTIONS

- When installing aluminum wheels, check that the wheel nuts are tight after driving your vehicle the first 1600 km (1000 miles).
- If you have rotated, repaired, or changed your tires, check that the wheel nuts are still tight after driving 1600 km (1000 miles).
- When using tire chains, be careful not to damage the aluminum wheels.
- Use only the Lexus wheel nuts and wrench designed for your aluminum wheels.
- When balancing your wheels, use only Lexus balance weights or equivalent and a plastic or rubber hammer.
- As with any wheel, periodically check your aluminum wheels for damage. If damaged, replace immediately.

SUSPENSION AND CHASSIS



CAUTION

Do not modify the suspension/chassis with lift kits, spacers, springs, etc. It can cause dangerous handling characteristics, resulting in loss of control.

SECTION 6-4

SERVICE PROCEDURES AND SPECIFICATIONS

Electrical components

Specifications	264
Checking battery condition	268
Battery recharging precautions	270
Checking and replacing the blade type fuses	271
Checking the cartridge type fuses	273
Adding washer fluid	274
Checking the headlight aim	275
Replacing light bulbs	276

ELECTRICAL COMPONENTS


SPECIFICATIONS

– FUSE LOCATION




- ▶ **1** *Engine compartment*
- ▶ **2** *Passenger's side kick panel*
- ▶ **3** *Driver's side kick panel*

– FUSES

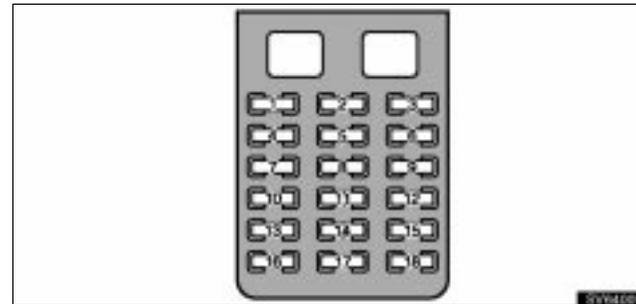


▶ *Driver's side kick panel*

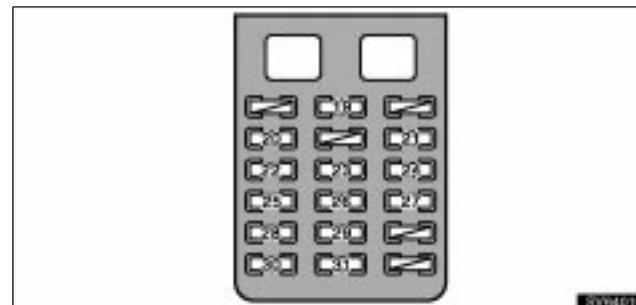

▶ *Passenger's side kick panel*

ELECTRICAL COMPONENTS

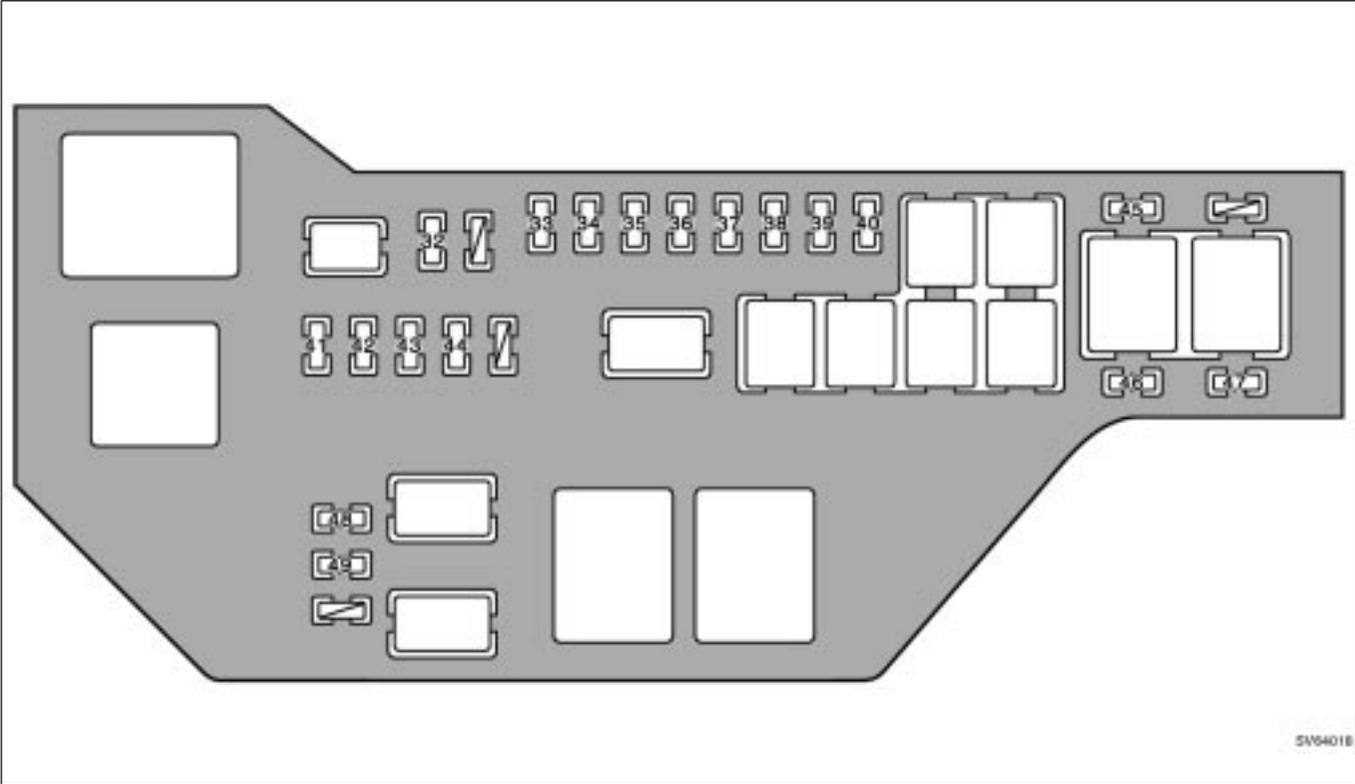

► *Engine compartment*

ELECTRICAL COMPONENTS

No.	FUSE	AMPERE	CIRCUIT
1	D FR P/W	20	Power window system
2	TAIL	10	Tail lights, Side marker lights, License plate lights, Parking lights
3	GAUGE	10	Back-up lights, Power window, Gauges and meters, Service reminder indicators and buzzers, Emergency flashers, Windshield defogger, Outside rear view mirror defogger
4	DOOR	20	Door lock system
5	PANEL	7.5	Instrument panel lights, Seat heater, Cigarette lighter, Automatic transmission system, Traction control system, Rear fog light, Ashtray light
6	WASHER	15	Windshield washer, Headlight cleaner
7	STARTER	7.5	Starting system
8	FR DEF	20	No circuit
9	A/C	10	Air conditioning system
10	SEAT HTR	15	Seat heater
11	CIG	15	Cigarette lighter, Power outlet
12	S/ROOF	30	Moon roof

No.	FUSE	AMPERE	CIRCUIT
13	ECU-IG	10	Radiator fan, Anti-lock brake system, Moon roof, Shift lock system, Air conditioning system, Door lock system, Headlight beam level control, Theft deterrent system
14	SRS-ACC	10	SRS system
15	STOP	15	Stop lights, Shift lock system, Anti-lock brake system
16	WIPER	25	Windshield wipers
17	RADIO NO.2	10	Audio, Air conditioning, Outside rear view mirror, Shift lock system
18	D P/SEAT	30	Power seat system
19	DOME	7.5	Interior lights, Trunk light, Vanity lights, Ignition switch light, Map light, Door courtesy lights
20	FR FOG	15	Fog lights
21	P FR P/W	20	Power window system
22	TV	7.5	Television
23	ECU-B2	7.5	Theft deterrent system, Door lock system
24	D RR P/W	20	Power window system
25	MIR HTR	15	Outside rear view mirror

ELECTRICAL COMPONENTS

No.	FUSE	AMPERE	CIRCUIT
26	MPX-B	10	Power window system, Air conditioning, Gauges and meters, Theft deterrent system
27	P RR P/W	20	Power window system
28	SRS-B	7.5	SRS system, Door lock system
29	P P/SEAT	30	Power seat system
30	OBD	7.5	On-board diagnosis system
31	IGN	7.5	SRS system, Multiport fuel injection system/sequential multiport fuel injection system, Cruise control system
32	ECU-B1	20	Theft deterrent system, Door lock system, Interior light, Trunk light, Vanity light, Ignition switch light, Map light, Door courtesy lights, Power window system, Air conditioning, Gauges and meters
33	ALT-S	7.5	Charging system
34	ETCS	15	Electronic throttle control system
35	AM2	20	Starting system, SRS system, Multiport fuel injection system/sequential multiport fuel injection system, Cruise control system
36	HORN	10	Horn

No.	FUSE	AMPERE	CIRCUIT
37	TEL	7.5	Telephone
38	RADIO NO.1	20	Audio
39	TURN-HAZ	15	Turn signal lights
40	EFI	25	Multiport fuel injection system/sequential multiport fuel injection system, Emission control system, Engine immobiliser system
41	DRL NO.2	30	Daytime running light system
42	DRL NO.1	7.5	Daytime running light system
43	H-LP L LWR	15	Left-hand headlight (low beam), Fog lights
44	H-LP R LWR	15	Right-hand headlight (low beam)
45	SPARE		Spare fuse
46	SPARE		Spare fuse
47	SPARE		Spare fuse
48	H-LP L UPR	10	Left-hand headlight (high beam)
49	H-LP R UPR	10	Right-hand headlight (high beam), Service reminder indicators and buzzers

ELECTRICAL COMPONENTS

CHECKING BATTERY CONDITION

Precautions

 **CAUTION**

BATTERY PRECAUTIONS

The battery produces flammable and explosive hydrogen gas.

- Do not cause a spark by contacting the battery terminals with tools.
- Do not smoke or light a match near the battery.

The electrolyte contains poisonous and corrosive sulfuric acid.

- Avoid contact with eyes, skin or clothes.
- Never inhale or swallow electrolyte.
- Wear protective safety glasses when working near the battery.
- Keep children away from the battery.

EMERGENCY MEASURES

- If electrolyte gets in your eyes, flush your eyes with clean water for at least 15 minutes and get immediate medical attention. If possible, continue to apply water with a sponge or cloth while traveling to the medical office.

- If electrolyte gets on your skin, thoroughly wash the contacted area. If you feel a pain or burn, get medical attention immediately.
- If electrolyte gets on your clothes, there is a possibility of its soaking through to your skin, so immediately take off the exposed clothing and follow the procedure above, if necessary.
- If you accidentally swallow electrolyte, drink a large quantity of water or milk. Follow with milk of magnesia, beaten raw egg or vegetable oil. Then go immediately for emergency help.

Warning: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. Wash hands after handling.

Checking battery exterior



► **1** Terminals **2** Hold-down clamp

Check the battery for corroded or loose connections, cracks, or loose hold-down clamps.

1. If the battery is corroded, wash it off with a solution of warm water and baking soda. Coat the terminals with grease to prevent further corrosion.
2. If the connections are loose, tighten the clamp bolts – but do not overtighten.
3. Tighten the hold-down clamp only enough to keep the battery firmly in place. Overtightening may damage the battery case.

NOTICE

- *Make sure the engine and all accessories are turned off before performing maintenance.*
- *When checking the battery, remove the ground cable first and reinstall it last.*
- *Be careful not to cause a short circuit with tools.*
- *Take care no solution gets into the battery when washing it.*

ELECTRICAL COMPONENTS

Checking battery fluid

Checking by hydrometer



Check the battery condition by the hydrometer color.

- 1 BLUE – Good condition.
- 2 WHITE – Charging necessary. Have the battery checked by your Lexus dealer.
- 3 RED – Have the battery checked by your Lexus dealer.

NOTICE

Do not refill the battery with water.

BATTERY RECHARGING PRECAUTIONS

During recharging, the battery is producing hydrogen gas.

Therefore, before recharging:

1. If recharging with the battery installed on the vehicle, be sure to disconnect the ground cable.
2. Make sure the power switch on the recharger is off when connecting the charger cables to the battery and when disconnecting them.

CAUTION

- Always charge the battery in an unconfined area. Do not charge the battery in a garage or closed room where there is not sufficient ventilation.
- Only do a slow charge (5 A or less). Charging at a quicker rate is dangerous. The battery may explode causing personal injuries.


NOTICE

Never recharge the battery while the engine is running. Also, be sure all accessories are turned off.

CHECKING AND REPLACING THE BLADE TYPE FUSES



► *Driver's side kick panel*

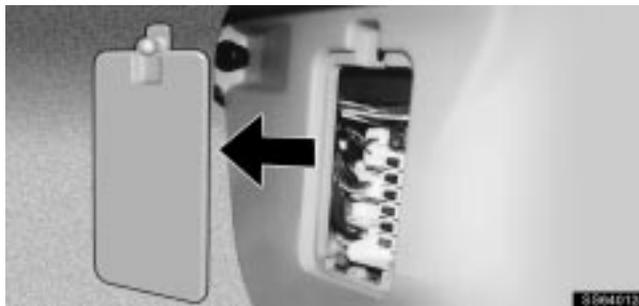

► *Passenger's side kick panel*




► *Engine compartment* **1** *Spare fuses* **2** *Pull-out tool*

1. Turn the ignition switch off and open the fuse box lid.

Determine which fuse may be causing the problem. The lid of the fuse box shows the name of the circuit for each fuse.

ELECTRICAL COMPONENTS

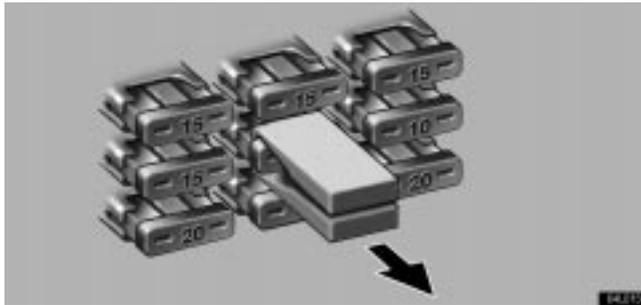

2. Make sure the inoperative component is turned off. Pull the suspected fuse straight out with the pull-out tool and check it. If it has blown, push a new fuse into the clips.



► **Good**

► **Blown**

a. Look carefully at the fuse. If the thin wire is broken, the fuse has blown. If you are not sure or if it is too dark to see, try replacing the suspected fuse with one of the same value that you know is good.

b. Install only a fuse with the amperage rating designated on the fuse box lid.

If you do not have a spare fuse, in an emergency you can pull out the "CIG", "RADIO NO.1" or "OBD" fuse, which may be dispensable for normal driving, and use it if its amperage rating is the same.

If you cannot use one of the same amperage, use one lower than, but as close as possible to, the amperage. If the amperage is lower than that specified, the fuse might blow out again but this does not indicate anything wrong. Be sure to get the correct fuse as soon as possible and return the substitute to its original clips.


It is a good idea to purchase a set of spare fuses and keep them in your vehicle for emergencies.

If the new fuse immediately blows out, there is a problem with the electrical system. Have your Lexus dealer correct it as soon as possible.

 **CAUTION**

Never use a fuse with a higher amperage rating, or any other object, in place of a fuse. This may cause extensive damage and possibly a fire.

CHECKING THE CARTRIDGE TYPE FUSES

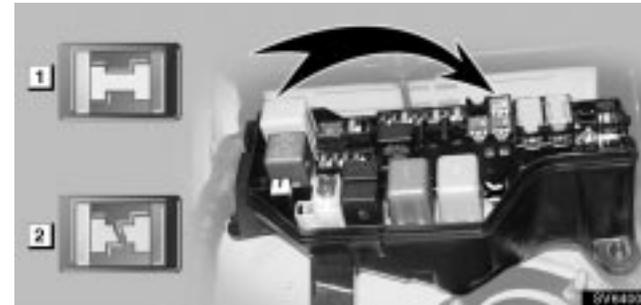

► **1** Good **2** Melted

If the headlights or other electrical components do not work and the blade type fuses are O.K., check the cartridge type fuses. If any of the cartridge type fuses are blown, they must be replaced.

If there is an overload in the circuits from the battery, the fuses are designed to blow before the entire wiring harness is damaged.

ELECTRICAL COMPONENTS

CAUTION

Always use a genuine Lexus fuse or equivalent for replacement. Never install an ordinary wire – even for a temporary fix. This may cause extensive damage and possibly a fire.

NOTICE

Before replacing the fuses, have the cause of electrical overload determined and repaired by your Lexus dealer.

ADDING WASHER FLUID




If the washer tank becomes nearly empty, add washer fluid.

You may use plain water as washer fluid. However, in cold areas where temperatures range below the freezing point, use washer fluid containing antifreeze. This product is available at your Lexus dealer and most auto parts stores. Follow the manufacturer's directions for how much to mix with water.

NOTICE

Do not use engine antifreeze or any other substitute because it may damage your vehicle's paint.

CHECKING THE HEADLIGHT AIM

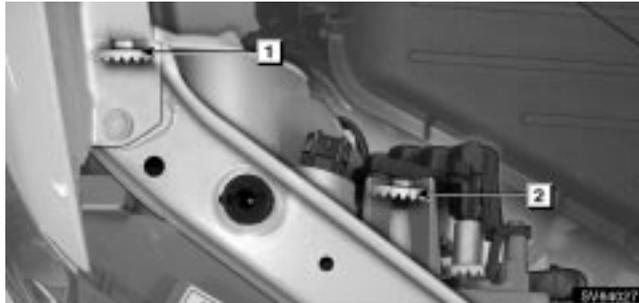

- ▶ **1** *Vertical movement adjusting bolt 1*
- ▶ **2** *Vertical movement adjusting bolt 2*

Before checking the headlight aim:

1. Be sure that the body around the headlight is not deformed.
2. Park the vehicle on a level spot.
3. The driver gets into the driver's seat and puts the vehicle in a state readying for a driving (with a full tank).
4. Bounce the vehicle several times.

Adjusting the vertical aiming



1. Turn the vertical movement adjusting bolt 1 in either direction. At this time, keep the turning direction and number of turns in mind.

ELECTRICAL COMPONENTS



2. Turn the vertical movement adjusting bolt 2 the same number of turns and in the same direction at step 1.

REPLACING LIGHT BULBS

The illustration on the following pages show the locations of light bulbs. If it is necessary to replace a bulb, take your vehicle to your Lexus dealer as soon as possible. Use bulbs with the bulb numbers and wattage ratings given in the table.

CAUTION

- To prevent yourself from burning, do not replace the light bulbs while they are hot.
- Do not disassemble, repair or take apart the low beam headlight bulbs, connector, power supply circuits and rotated components. Or you may be injured by electric shocks. Call your dealer when the headlights fail to work or have to be replaced or disposed of.
- Halogen bulbs have pressurized gas inside and require special handling. They can burst or shatter if scratched or dropped. Hold a bulb only by its plastic or metal case. Do not touch the glass part of a bulb with bare hands.


NOTICE

Only use a bulb of the listed type.

ELECTRICAL COMPONENTS


The inside of the lens of exterior lights such as headlights may temporarily fog up when the lens becomes wet in the rain or in a car wash. This is not a problem because the fogging is caused by the temperature difference between the outside and inside of the lens, just like the windshield fogged up in the rain. However, if there is a large drop of water on the inside of the lens, or if there is water pooled inside the light, contact your Lexus dealer.

LIGHT LOCATION

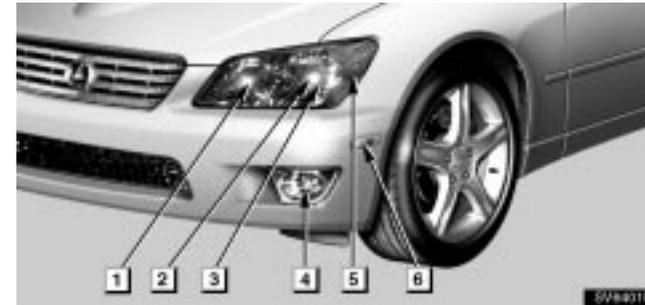


	Light Bulbs	Bulb No.	W	Type
1	Headlights (High beam)	HB3	60	A
2	Parking lights	168	5	D
3	Headlights (Low beam)	D2R	35	B
4	Fog lights	HB4	51	C
5	Front turn signal lights	—	21	F
6	Front side marker lights	168	3.8	D

ELECTRICAL COMPONENTS

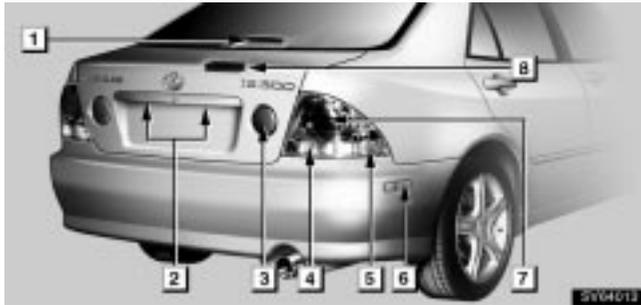

Light Bulbs	Bulb No.	W	Type
1 High mounted stop light	921	16	F
2 License plate lights	168	5	D
3 Tail/stop lights	7443	5/21	E
4 Back-up lights	7440	21	F
5 Rear turn signal lights	—	21	F
6 Rear side marker lights	168	3.8	D
7 Tail/stop lights	7443	5/21	E
8 Trunk light	194	3.8	D

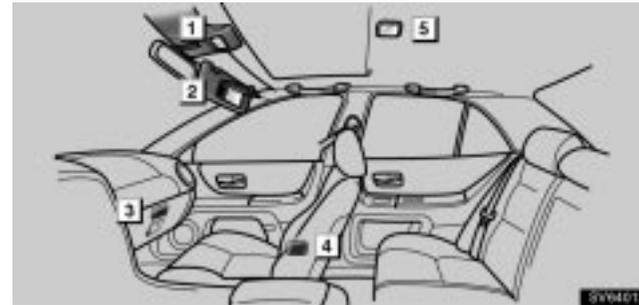

Light Bulbs	Bulb No.	W	Type
1 Front personal lights with moon roof	—	10	F
without moon roof	—	8	F
2 Vanity lights	—	3	E
3 Glove box light	—	1.2	F
4 Door courtesy lights	194	3.8	D
5 Interior light	—	8	E

- A: HB3 halogen bulbs
- B: D2R discharge bulbs
- C: HB4 halogen bulbs
- D: Wedge base bulbs
- E: Double end bulbs
- F: Single end bulbs

SECTION 6-5

SERVICE PROCEDURES AND SPECIFICATIONS

Body

Specifications	280
Protecting your vehicle from corrosion	281
Washing and waxing	282
Cleaning the interior	284
Rain clearing mirrors	286

BODY

SPECIFICATIONS

– DIMENSIONS AND WEIGHT

Overall length	4485 mm (176.6 in.)
Overall width	1720 mm (67.7 in.)
Overall height	1410 mm (55.5 in.)*
Wheelbase	2670 mm (105.1 in.)
Tread – Front	1495 mm (58.9 in.)
– Rear	1485 mm (58.5 in.)
Vehicle capacity weight (occupants + luggage)	390 kg (860 lb.)

*Unladen vehicle

– FUEL TANK

Capacity	66 L (17.5 gal., 14.5 Imp.gal.)
----------	---------------------------------

PROTECTING YOUR VEHICLE FROM CORROSION

Proper care of your Lexus can help ensure long-term corrosion prevention.

The most common causes of corrosion to your vehicle are:

- The accumulation of road salt, dirt and moisture in hard-to-reach areas under the vehicle.
- Chipping of paint or undercoating caused by minor accidents or by stones and gravel.

The following conditions will cause or accelerate corrosion of your vehicle, so it is important to keep your vehicle, particularly the underside, as clean as possible and to repair any damage to paint or protective coatings as soon as possible.

- The presence of road salt or dust control chemicals, salt in the air near the sea coast, industrial air pollution.
- High humidity, especially at temperatures just above freezing point.
- Certain parts of your vehicle are wet or damp for an extended period of time, even though other parts of the vehicle are dry.
- Components of the vehicle which are prevented from quick-drying due to lack of proper ventilation are exposed to high ambient temperature.

To help prevent corrosion on your Lexus, follow these guidelines:

Keep your vehicle clean by regular washing. In addition, observe the following points.

- If you drive on salted roads in the winter or if you live near the ocean, you should hose off the undercarriage at least once a month to minimize corrosion.
- High pressure water or steam is effective for cleaning the vehicle's underside and wheel housings. Pay particular attention to these areas as it is difficult to see all the mud and dirt. It will do more harm than good to simply wet the mud and debris without removing them. The lower edge of doors, rocker panels and frame members have drain holes which should not be allowed to clog with dirt as trapped water in these areas can cause corrosion.
- Wash the underside of the vehicle thoroughly when winter is over.

See "Washing and waxing" on page 282 for more tips.

Check the condition of your vehicle's paint and trim. If you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through the bare metal, have a qualified body shop make the repair.

BODY

Check the interior of your vehicle. Water and dirt can accumulate under the floor mats and could cause corrosion. Occasionally check under the mats to make sure the area is dry. Be particularly careful when transporting chemicals, cleansers, fertilizers, salt, etc. These should be transported in proper containers. If a spill or leak should occur, immediately clean and dry the area.

Keep your vehicle in a well ventilated garage or a roofed place. Do not park your vehicle in a damp, poorly ventilated garage. If you wash your vehicle in the garage, or if you drive it in covered with water or snow, your garage may be so damp it will cause corrosion. Even if your garage is heated, a wet vehicle can corrode if the ventilation is poor.

WASHING AND WAXING

Washing your Lexus

Keep your vehicle clean by regular washing.

The following cases may cause weakness to the paint or corrosion to the body and parts. Wash your vehicle as soon as possible.

- When driving in a coastal area
- When driving on a road sprinkled with antifreeze
- When having coal tar, tree sap, bird droppings and carcass of an insect
- When driving in the areas where there is a lot of smoke, soot, dust, iron dust and chemical substance
- When the vehicle becomes remarkably dirty with dust and mud

Hand-washing your Lexus

Work in the shade and wait until the vehicle body is not hot to the touch.

1. Rinse off loose dirt with a hose. Remove any mud or road salt from the underside of the vehicle or in the wheel wells.
2. Wash with a mild car-wash soap, mixed according to the manufacturer's instructions. Use a soft cotton mitt and keep it wet by dipping it frequently into the wash water. Do not rub hard – let the soap and water remove the dirt.

Plastic wheel ornaments: The plastic wheel ornaments are damaged easily by organic substances. If any organic substance splashes an ornament, be sure to wash it off with water and check if the ornament is damaged.

 **CAUTION**

Do not attach the heavily damaged plastic wheel ornament. It may fly off the wheel and cause accidents while the vehicle is moving.

Aluminum wheels: Use only a mild soap or neutral detergent.

Urethane bumpers and side moldings: Wash carefully. Do not scrub with abrasive cleaners. The bumper and side molding faces are soft.

Road tar: Remove with turpentine or cleaners that are marked safe for painted surfaces.

NOTICE

Do not use organic substances (gasoline, kerosene, benzine or strong solvents), which may be toxic or cause damage.

3. Rinse thoroughly – dried soap can cause streaking. In hot weather you may need to rinse each section right after you wash it.

4. To prevent water spots, dry the vehicle using a clean soft cotton towel. Do not rub or press hard – you might scratch the paint.

Automatic car wash

NOTICE

To prevent damage to the antenna, make sure it is removed before driving your vehicle through an automatic car wash.

Your vehicle may be washed in an automatic car wash, but remember that the paint can be scratched by some type of brushes, unfiltered washing water, or the washing process itself. Scratching reduces paint durability and gloss, especially on darker colors. The manager of the car wash should be able to advise you whether the process is safe for the paint on your vehicle.

BODY

Waxing your Lexus

Polishing and waxing is recommended to maintain the original beauty of your Lexus' finish.

Once a month or if the vehicle surface does not repel water well, apply wax.

1. Always wash and dry the vehicle surface before you begin waxing, even if you are using a combined cleaner and wax.
2. Use a good quality polish and wax. If the finish has become extremely weathered, use a car-cleaning polish, followed by a separate wax. Carefully follow the manufacturer's instructions and precautions. Be sure to polish and wax the chrome trim as well as the paint.
3. Wax the vehicle again when water does not bead but remains on the surface in large patches.

CLEANING THE INTERIOR

CAUTION

- **Be careful not to splash water or spill liquid on the floor. This may prevent the side airbags from activating correctly, resulting in serious injury.**
- **Do not wash the vehicle floor with water, or allow water to get onto the floor when cleaning the vehicle interior or exterior. Water may get into audio components or other electrical components above or under the floor carpet (or mat) and cause a malfunction; and it may cause body corrosion.**

Leather Interior

The leather upholstery may be cleaned with neutral detergent for wool

Remove dirt using a soft cloth dampened with 5% solution of neutral detergent for wool. Then thoroughly wipe off all traces of detergent with a clean damp cloth.

After cleaning or whenever any part of the leather gets wet, dry with a soft clean cloth. Allow the leather to dry in a ventilated shaded area.

NOTICE

- *If a stain should fail to come out with a neutral detergent, apply a cleaner that does not contain an organic solvent.*
- *Never use organic substances such as benzine, alcohol or gasoline, or alkaline or acid solutions for cleaning the leather as these could cause discoloring.*
- *Use of a nylon brush or synthetic fiber cloth, etc. may scratch the fine grained surface of the leather.*
- *Mildew may develop on soiled leather upholstery. Be especially careful to avoid oil spots. Try to keep your upholstery always clean.*
- *Long exposure to direct sunlight may cause the leather surface to harden and shrink. Keep your vehicle in a shaded area, especially in the summer.*
- *The interior of your vehicle is apt to heat up on hot summer days, so avoid placing on the upholstery items made of vinyl or plastic or containing wax as these tend to stick to leather when warm.*
- *Improper cleaning of the leather upholstery could result in discoloration or staining.*

If you have any questions about the cleaning of your Lexus, your local Lexus dealer will be pleased to answer them.

Carpets, Windows and Seat Belts

Begin by vacuuming thoroughly to remove as much dirt as possible. Several types of foam cleaners are available; some are in aerosol cans and others are powders or liquids which you mix with water to produce a foam. To shampoo the carpets, use a sponge or brush to apply the foam. Rub in overlapping circles. Do not apply water – the best results are obtained by keeping the carpet as dry as possible. Read the shampoo instructions and follow them closely.

The seat belts may be cleaned with mild soap and water or with lukewarm water.

Use a cloth or sponge. As you are cleaning, check the belts for excessive wear, fraying or cuts.

NOTICE

- *Use a good foam-type shampoo to clean the carpets.*
- *Do not use dye or bleach on the belts – it may weaken them.*
- *Do not use the belts until they become dry.*
- *The windows may be cleaned with any household window cleaner.*
- *When cleaning the inside of the rear window, be careful not to scratch or damage the heater wires or connectors.*

BODY

Air Conditioning Control Panel, Car Audio, Instrument Panel, Console Panel, and Switches

Use a soft damp cloth for cleaning.

Soak a clean soft cloth in water or lukewarm water then lightly wipe off any dirt.

NOTICE

- ***Do not use organic substances (solvents, kerosene, alcohol, gasoline, etc.) or alkaline or acidic solutions. These chemicals can cause discoloring, staining or peeling of the surface.***
- ***If you use cleaners or polishing agents, make sure their ingredients do not include the substances mentioned above.***
- ***If you use a liquid car freshener, do not spill the liquid onto the vehicle's interior surfaces. It may contain the ingredients mentioned above. Immediately clean any spill using the method mentioned above.***

If you have any questions about the cleaning of your Lexus, your local Lexus dealer will be pleased to answer them.

RAIN CLEARING MIRRORS

The rear view mirrors have been coated to produce a "rain clearing" effect. This coating causes the raindrops to spread, clearing the driver's rear view when it rains.

It is sufficient to wash the mirrors with water for day to day care.

The rain clearing effect is reduced in drizzle and light rain.

In the following cases, the rain clearing effect will be reduced temporarily, but will gradually recover.

- After wiping dirt off the mirrors
- When the mirrors fog up
- After waxing your vehicle in an automatic car wash
- After your vehicle has been parked for a long period in underground parking lots, etc. where there is no direct sunlight.

If you would like to restore the rain clearing effect to its normal level immediately in the above cases, wash the mirrors with neutral detergent, then rinse thoroughly.

NOTICE

To maintain the rain clearing ability, and prevent the mirrors from being scratched, observe the following precautions.

- *Do not use any glass cleaners that contain compounds.*
- *If ice should jam the mirror, do not scrape the mirror. Use a spray deicer to free the mirror.*
- *Wash off any wax stuck to the mirrors with neutral detergent and rinse thoroughly as any wax on the surface of the mirrors can cause the rain clearing effect to be lost.*
- *Do not use any water repellents as they can destroy the rain clearing effect. If any repellent gets stuck on the surface of the mirrors, wash it off with neutral detergent, then rinse thoroughly.*

SECTION 7

REPORTING SAFETY DEFECTS FOR U.S. OWNERS

Reporting safety defects for U.S. owners 290

REPORTING SAFETY DEFECTS

REPORTING SAFETY DEFECTS FOR U.S. OWNERS

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Toyota Motor Sales, U.S.A., Inc. (Toll-free: 1-800-25-LEXUS).

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Toyota Motor Sales, U.S.A., Inc.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

GAS STATION INFORMATION

- Fuel selection:**
 Select premium unleaded gasoline with an Octane Rating of 91 (Research Octane Number 96) or higher for optimum engine performance. However, if such premium type cannot be obtained, you may temporarily use unleaded gasoline with an Octane Rating as low as 87 (Research Octane Number 91).
- Fuel tank capacity:**
 66 L (17.5 gal., 14.5 Imp.gal.)
- Engine oil:**
 API SJ, "Energy-Conserving" multigrade engine oil or ILSAC multigrade engine oil.

 Recommend oil viscosity – SAE 5W-30 if normal temperatures are below 38°C (100°F)

 Oil capacity: L (qt., Imp.qt.)
 Drain and refill
 with filter 5.4 (5.7, 4.8)
 without filter 5.1 (5.4, 4.5)

 See page 242 for detailed information.
- Engine coolant:**
 Capacity: 7.5 L (7.9 qt., 6.6 Imp.qt.)

 Coolant type – "Toyota Long Life Coolant" or equivalent

 With ethylene-glycol type coolant for a proper corrosion protection of aluminum components

For checking the engine coolant, see page 245.

Do not use alcohol type antifreeze or plain water alone.

- Automatic transmission:**
 Fluid type – **Automatic transmission fluid Type T-IV**

See page 248 for detailed information.

- Tire information:**
 See page 254 through 260 for detailed information.

- Tire pressure:**
 Tire size: 215/45ZR17 or P205/55R16 89V

Tire pressure: cold tires
kPa (kgf/cm² or bar, psi)

<u>Tire size</u>	<u>Front</u>	<u>Rear</u>
215/45ZR17	230 (2.3, 33)	230 (2.3, 33)
P205/55R16 89V	230 (2.3, 33)	230 (2.3, 33)

For sustained high speeds above 160 km/h (100 mph), in countries where such speeds are permitted by law, add the tire pressure given below to the front tires and rear tires, but never exceed the maximum cold tire pressure molded on the tire sidewall.

215/45ZR17	70kPa (0.8 kgf/cm ² , 0.7 bar, 10 psi)
P205/55R16 89V	70kPa (0.8 kgf/cm ² , 0.7 bar, 10 psi)


WE REALLY CARE ABOUT YOU - PLEASE BUCKLE UP

Lexus has made a special effort to encourage use of seat belts.

Lexus belts are:

- **Comfortable**
- **Easy to use**
- **Convenient**

We encourage you to use your belts every time you drive.

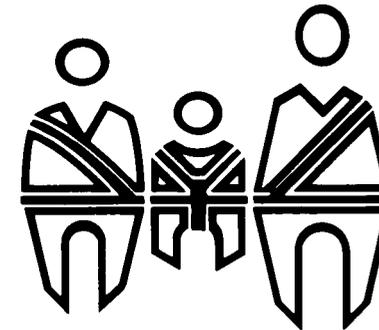

You should know as much about the quality and importance of proper maintenance of your new vehicle as the people who built it.

The Lexus authorized Repair Manual tells you how to maintain your vehicle and enables you to correctly perform your own maintenance.



The best way to keep your new vehicle in top running order is to maintain it properly from the moment you drive it off the showroom floor.

The Lexus authorized Repair Manual is packed with literally everything you need to know to perform your own maintenance in virtually every area of your new vehicle.

Maintenance procedures for the engine, chassis, body, electrical system, and more, are clearly explained and illustrated.

Periodic maintenance and tune-up

Periodic maintenance and tune-up helps to prevent small problems from growing into larger ones later on. The repair manual outlines exactly what maintenance is required and clearly explains how to do the work yourself step-by-step.

Areas covered include such things as spark plug replacement, valve clearance adjustment and engine oil and filter replacement.

**Where to obtain the
Repair Manual**

The repair manual for IS300 written in English, may be purchased as applicable from any Lexus dealer.

Pub. Name: 2001 IS300 Repair Manual

Pub. No.: Vol.1 RM779U1

Vol.2 RM779U2