

Regular maintenance is essential to obtaining the highest level of performance, safety and reliability from your Lexus. It can also enhance your vehicle's resale value. This section of the *Owner's Manual Supplement* is designed to help you make sure your vehicle receives proper and timely maintenance. It includes factory-recommended maintenance guidelines as well as logs in which to document your vehicle's maintenance history.

In addition to scheduled maintenance, your Lexus requires ongoing general maintenance such as fluid checks and visual inspections. These procedures are described in the "Maintenance" section of the *Owner's Manual*.

With proper maintenance and care, your vehicle will last longer and deliver more dependable, economical performance. Follow this booklet's recommendations and you'll enjoy maximum reliability and peace of mind from your Lexus for many years to come.



Maintaining your vehicle according to the recommendations in this booklet is required to ensure that your warranty coverage remains intact. You should keep detailed records of vehicle maintenance, including date of service, mileage at time of service and a description of service and/or parts installation performed. The maintenance logs in this booklet are a good place to record this information. If you sell your vehicle, be sure to give your maintenance records to the new owner.

Lexus will not deny a warranty claim solely because you do not have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance and repair services may be performed by you or by any automotive service provider you choose. Lexus will not deny a warranty claim solely because you used a service provider other than a Lexus dealership for maintenance and repairs. However, damage

or failures caused by improper maintenance or repairs are not covered under warranty.

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. These additional services are not required to maintain your warranty coverage. Ask your dealer for an explanation of any recommended maintenance not included in the scheduled maintenance log.

For a complete description of Lexus warranty coverages, see pages 16–33 of this booklet.

To ensure that your vehicle receives first-quality service and factory-authorized parts, Lexus recommends having maintenance performed by an authorized Lexus dealership.

Lexus dealership technicians are experts in the maintenance and repair of Lexus vehicles. They stay current on the latest service information through Lexus technical bulletins, service publications and training courses. Many are also certified through the Lexus Commitment to Perfection Certification Program, which requires specialized, state-of-the-art training as well as rigorous exams through both Lexus and the National Institute for Automotive Service Excellence.

Additionally, when you have your vehicle serviced at a Lexus dealership, your service information is recorded in the Lexus National Service History database. This is the first database of its kind in the automotive industry. It can be accessed by any Lexus dealership in the U.S. — a great convenience if you relocate or need to have your vehicle serviced while traveling.

You can be confident you're getting the best possible service for your vehicle when you take it to a Lexus dealership. Don't trust your investment to anything less than a team of Lexus specialists.

### **Following the Charts**

The scheduled maintenance log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of approximately 833 miles per month. If you drive more than 833 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

### **Complimentary Feature Customization**

Your vehicle includes a variety of electronic features that can be customized to your preferences. Programming of these features is performed at no charge, provided you obtain this service within 12 months of the vehicle's in-service date. (You may also have the service performed at the time of vehicle delivery.) The service requires specialized equipment and may be performed only by an authorized Lexus dealership.

To obtain this complimentary feature customization, contact your Lexus dealership. The dealership may verify performance of the service in the box on the next page.

### **Complimentary First Scheduled Maintenance Service**

Lexus also provides your first scheduled maintenance service at no charge. The service is performed at 5,000 miles or 6 months, whichever occurs first, and includes the service items listed on page 102. To obtain this complimentary scheduled maintenance service, contact your Lexus dealership.

**Complimentary Feature Customization**

Must be obtained within 12 months of vehicle's in-service date.

*Dealer Service Verification*

In-service date: \_\_\_\_\_

Date of feature customization: \_\_\_\_\_

## SCHEDULED MAINTENANCE LOG

### 5,000 Miles or 6 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Ball joints and dust covers	___Nuts and bolts on chassis
___Drive shaft boots	___Steering linkage and boots
___Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 10,000 Miles or 12 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Ball joints and dust covers	___Nuts and bolts on chassis
___Drive shaft boots	___Steering linkage and boots
___Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 15,000 Miles or 18 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine air filter<sup>3</sup>
- Inspect nuts and bolts on chassis<sup>3</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:
 

___ Ball joints and dust covers	___ Engine coolant <sup>4</sup>
___ Body	___ Exhaust pipes and mountings
___ Brake lines and hoses	___ Rack and pinion assembly
___ Differential oil (IS 300, GS 300, GS 430, LS 430)	___ Steering linkage and boots
___ Drive shaft boots	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>4</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 20,000 Miles or 24 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>
  - Ball joints and dust covers
  - Nuts and bolts on chassis
  - Drive shaft boots
  - Steering linkage and boots
  - Engine air filter

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 25,000 Miles or 30 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>
  - Ball joints and dust covers
  - Nuts and bolts on chassis
  - Drive shaft boots
  - Steering linkage and boots
  - Engine air filter

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 30,000 Miles or 36 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect nuts and bolts on chassis<sup>3</sup>
- Measure brake pad thickness and rotor runout
- Replace air conditioner filter
- Replace brake fluid
- Replace engine air filter
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Road-test vehicle
- Inspect the following:
 

<ul style="list-style-type: none"> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Differential oil</li> <li>___ Drive shaft boots</li> <li>___ Engine coolant<sup>4</sup></li> <li>___ Exhaust pipes and mountings</li> </ul>	<ul style="list-style-type: none"> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 300)</li> <li>___ Rack and pinion assembly</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (IS 300, ES 330, GS 300, GS 430)</li> </ul>
--	---

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>4</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 35,000 Miles or 42 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Ball joints and dust covers	___Nuts and bolts on chassis
___Drive shaft boots	___Steering linkage and boots
___Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 40,000 Miles or 48 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___Ball joints and dust covers	___Nuts and bolts on chassis
___Drive shaft boots	___Steering linkage and boots
___Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 45,000 Miles or 54 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine air filter<sup>3</sup>
- Inspect nuts and bolts on chassis<sup>3</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Engine coolant <sup>4</sup>
<input type="checkbox"/> Body	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Differential oil (IS 300, GS 300, GS 430, LS 430)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive shaft boots	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>4</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 50,000 Miles or 60 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 55,000 Miles or 66 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 60,000 Miles or 72 Months

- |   |  |   |   |
|---|--|---|---|
| <ul style="list-style-type: none"> <li><input type="checkbox"/> Replace engine oil and oil filter<sup>1</sup></li> <li><input type="checkbox"/> Measure brake pad thickness and rotor runout</li> <li><input type="checkbox"/> Replace brake fluid</li> <li><input type="checkbox"/> Replace engine air filter</li> <li><input type="checkbox"/> Replace spark plugs (GS 300, IS 300)<sup>6</sup></li> <li><input type="checkbox"/> Replace transmission fluid (ES 330, LS 430)<sup>4</sup></li> <li><input type="checkbox"/> Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)</li> <li><input type="checkbox"/> Rotate tires (all models except IS 300 Sportcross)</li> <li><input type="checkbox"/> Road-test vehicle</li> <li><input type="checkbox"/> Inspect the following:             <table border="0" style="width: 100%; margin-left: 20px;"> <tr> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li><input type="checkbox"/> Ball joints and dust covers</li> <li><input type="checkbox"/> Body</li> <li><input type="checkbox"/> Brake lines and hoses</li> <li><input type="checkbox"/> Differential oil</li> <li><input type="checkbox"/> Drive belts</li> <li><input type="checkbox"/> Drive shaft boots</li> <li><input type="checkbox"/> Engine coolant<sup>7</sup></li> <li><input type="checkbox"/> Engine valve clearance</li> <li><input type="checkbox"/> Exhaust pipes and mountings</li> </ul> </td> <td style="width: 50%; vertical-align: top;"> <ul style="list-style-type: none"> <li><input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li><input type="checkbox"/> Fuel tank cap gasket</li> <li><input type="checkbox"/> Manual transmission oil (IS 300)</li> <li><input type="checkbox"/> Rack and pinion assembly</li> <li><input type="checkbox"/> Steering linkage and boots</li> <li><input type="checkbox"/> Transmission fluid (IS 300, ES 330, GS 300, GS 430)</li> </ul> </td> </tr> </table> </li> </ul> | <ul style="list-style-type: none"> <li><input type="checkbox"/> Ball joints and dust covers</li> <li><input type="checkbox"/> Body</li> <li><input type="checkbox"/> Brake lines and hoses</li> <li><input type="checkbox"/> Differential oil</li> <li><input type="checkbox"/> Drive belts</li> <li><input type="checkbox"/> Drive shaft boots</li> <li><input type="checkbox"/> Engine coolant<sup>7</sup></li> <li><input type="checkbox"/> Engine valve clearance</li> <li><input type="checkbox"/> Exhaust pipes and mountings</li> </ul> | <ul style="list-style-type: none"> <li><input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li><input type="checkbox"/> Fuel tank cap gasket</li> <li><input type="checkbox"/> Manual transmission oil (IS 300)</li> <li><input type="checkbox"/> Rack and pinion assembly</li> <li><input type="checkbox"/> Steering linkage and boots</li> <li><input type="checkbox"/> Transmission fluid (IS 300, ES 330, GS 300, GS 430)</li> </ul> | <ul style="list-style-type: none"> <li><input type="checkbox"/> Inspect nuts and bolts on chassis<sup>3</sup></li> <li><input type="checkbox"/> Replace air conditioner filter</li> <li><input type="checkbox"/> Replace differential oil (ES 330<sup>4</sup>, IS 300<sup>5</sup>)</li> </ul> |
| <ul style="list-style-type: none"> <li><input type="checkbox"/> Ball joints and dust covers</li> <li><input type="checkbox"/> Body</li> <li><input type="checkbox"/> Brake lines and hoses</li> <li><input type="checkbox"/> Differential oil</li> <li><input type="checkbox"/> Drive belts</li> <li><input type="checkbox"/> Drive shaft boots</li> <li><input type="checkbox"/> Engine coolant<sup>7</sup></li> <li><input type="checkbox"/> Engine valve clearance</li> <li><input type="checkbox"/> Exhaust pipes and mountings</li> </ul>  | <ul style="list-style-type: none"> <li><input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li><input type="checkbox"/> Fuel tank cap gasket</li> <li><input type="checkbox"/> Manual transmission oil (IS 300)</li> <li><input type="checkbox"/> Rack and pinion assembly</li> <li><input type="checkbox"/> Steering linkage and boots</li> <li><input type="checkbox"/> Transmission fluid (IS 300, ES 330, GS 300, GS 430)</li> </ul>  |   |   |

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>4</sup> Required only if vehicle is operated primarily while towing.
- <sup>5</sup> If equipped with limited-slip differential.
- <sup>6</sup> Required under the terms of the Emission Control Warranty.
- <sup>7</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 65,000 Miles or 78 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 70,000 Miles or 84 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 75,000 Miles or 90 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine air filter<sup>3</sup>
- Inspect nuts and bolts on chassis<sup>3</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Drive shaft boots
<input type="checkbox"/> Body	<input type="checkbox"/> Engine coolant <sup>4</sup>
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Differential oil (IS 300, GS 300, GS 430, LS 430)	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Steering linkage and boots

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>4</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 80,000 Miles or 96 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 85,000 Miles or 102 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 90,000 Miles or 108 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect nuts and bolts on chassis<sup>3</sup>
- Measure brake pad thickness and rotor runout
- Replace air conditioner filter
- Replace brake fluid
- Replace engine air filter
- Replace timing belt
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Road-test vehicle
- Inspect the following:
 

<ul style="list-style-type: none"> <li>___ Ball joints and dust covers</li> <li>___ Body</li> <li>___ Brake lines and hoses</li> <li>___ Differential oil</li> <li>___ Drive belts</li> <li>___ Drive shaft boots</li> <li>___ Engine coolant<sup>4</sup></li> <li>___ Exhaust pipes and mountings</li> </ul>	<ul style="list-style-type: none"> <li>___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses</li> <li>___ Fuel tank cap gasket</li> <li>___ Manual transmission oil (IS 300)</li> <li>___ Rack and pinion assembly</li> <li>___ Steering linkage and boots</li> <li>___ Transmission fluid (IS 300, ES 330, GS 300, GS 430)</li> </ul>
---	---

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>4</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

## SCHEDULED MAINTENANCE LOG

### 95,000 Miles or 114 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 100,000 Miles or 120 Months

- Replace engine oil and oil filter<sup>1</sup>       Replace engine coolant<sup>3</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 105,000 Miles or 126 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine air filter<sup>4</sup>
- Inspect nuts and bolts on chassis<sup>4</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Drive shaft boots
<input type="checkbox"/> Body	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Differential oil (IS 300, GS 300, GS 430, LS 430)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- <sup>4</sup> Required only if vehicle is operated primarily on dirt roads.

## SCHEDULED MAINTENANCE LOG

### 110,000 Miles or 132 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 115,000 Miles or 138 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine coolant<sup>3</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 120,000 Miles or 144 Months

- |  |  |
|--|--|
| <input type="checkbox"/> Replace engine oil and oil filter <sup>1</sup>                      | <input type="checkbox"/> Inspect nuts and bolts on chassis <sup>4</sup>                        |
| <input type="checkbox"/> Measure brake pad thickness and rotor runout                        | <input type="checkbox"/> Replace air conditioner filter  |
| <input type="checkbox"/> Replace brake fluid   | <input type="checkbox"/> Replace differential oil (ES 330 <sup>5</sup> , IS 300 <sup>6</sup> ) |
| <input type="checkbox"/> Replace engine air filter   |  |
| <input type="checkbox"/> Replace spark plugs <sup>7</sup>                                    |  |
| <input type="checkbox"/> Replace transmission fluid (ES 330, LS 430) <sup>5</sup>            |  |
| <input type="checkbox"/> Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430) |  |
| <input type="checkbox"/> Rotate tires (all models except IS 300 Sportcross)                  |  |
| <input type="checkbox"/> Road-test vehicle   |  |
| <input type="checkbox"/> Inspect the following:  |  |
| ___ Ball joints and dust covers  | ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses           |
| ___ Body   | ___ Fuel tank cap gasket   |
| ___ Brake lines and hoses  | ___ Manual transmission oil (IS 300)   |
| ___ Differential oil   | ___ Rack and pinion assembly   |
| ___ Drive belts  | ___ Steering linkage and boots   |
| ___ Drive shaft boots  | ___ Transmission fluid (IS 300, ES 330, GS 300, GS 430)  |
| ___ Engine valve clearance   |  |
| ___ Exhaust pipes and mountings  |  |

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- <sup>4</sup> Required only if vehicle is operated primarily on dirt roads.
- <sup>5</sup> Required only if vehicle is operated primarily while towing.
- <sup>6</sup> If equipped with limited-slip differential.
- <sup>7</sup> Required under the terms of the Emission Control Warranty.

## SCHEDULED MAINTENANCE LOG

### 125,000 Miles or 150 Months

- Replace engine oil and oil filter<sup>1</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 130,000 Miles or 156 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine coolant<sup>3</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 135,000 Miles or 162 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine air filter<sup>4</sup>
- Inspect nuts and bolts on chassis<sup>4</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Drive shaft boots
<input type="checkbox"/> Body	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Differential oil (IS 300, GS 300, GS 430, LS 430)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- <sup>4</sup> Required only if vehicle is operated primarily on dirt roads.

## SCHEDULED MAINTENANCE LOG

### 140,000 Miles or 168 Months

- Replace engine oil and oil filter<sup>1</sup>
- Replace air conditioner filter (ES 330, GS 300, GS 430, LS 430)
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

### 145,000 Miles or 174 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect engine coolant<sup>3</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)<sup>2</sup>
- Rotate tires (all models except IS 300 Sportcross)
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:<sup>2</sup>

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

## 150,000 Miles or 180 Months

- Replace engine oil and oil filter<sup>1</sup>
- Inspect nuts and bolts on chassis<sup>4</sup>
- Measure brake pad thickness and rotor runout
- Replace air conditioner filter
- Replace brake fluid
- Replace engine air filter
- Replace engine coolant<sup>3</sup>
- Re-torque drive shaft flange bolts (IS 300, GS 300, GS 430, LS 430)
- Rotate tires (all models except IS 300 Sportcross)
- Road-test vehicle
- Inspect the following:
 

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
<input type="checkbox"/> Body	<input type="checkbox"/> Fuel tank cap gasket
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Manual transmission oil (IS 300)
<input type="checkbox"/> Differential oil	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Transmission fluid (IS 300, ES 330, GS 300, GS 430)
<input type="checkbox"/> Exhaust pipes and mountings	

*Dealer Service Verification*

Date: \_\_\_\_\_

Mileage: \_\_\_\_\_

- <sup>1</sup> Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- <sup>2</sup> Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- <sup>3</sup> Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- <sup>4</sup> Required only if vehicle is operated primarily on dirt roads.

## EXPLANATION OF MAINTENANCE ITEMS

The following descriptions are provided to give you a better understanding of the maintenance services that should be performed on your vehicle. The scheduled maintenance log indicates at which mileage/time intervals each service should be performed. Please note that many maintenance services should be performed only by a qualified technician.

For further information on maintenance services that you can perform yourself, see the “Service Procedures and Specifications” section of your *Owner’s Manual*.

**Air Conditioner Filter**

Replace as directed at the maintenance interval you choose. Refer to your *Owner’s Manual* for service details.

**Ball Joints and Dust Covers**

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. A qualified technician should perform these inspections.

**Body Inspection**

Visually check for corrosion, scratches and other damage. Check outer body panels, inner panels of the hood and doors, and underneath the vehicle. Apply touch-up paint to any chips and scratches or have them repaired by a qualified technician.

**Brake Fluid**

Replace using fluid type specified in your *Owner’s Manual*. A qualified technician should perform this operation.

**Brake Lines and Hoses**

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

**Brake Linings/Drums and Brake Pads/Discs**

Check the parking brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check brake pads for excessive wear and brake discs for runout, excessive wear and fluid leakage. A qualified technician should perform these inspections.

**Charcoal Canister**

Check for internal damage and clogging. If necessary, clean with compressed air or replace. A qualified technician should perform these operations.

**Differential Oil**

Check for correct oil level and inspect each differential component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

**Drive Belts**

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

**Drive Shaft Boots**

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any damaged parts and, if necessary, repack the grease. Re-torque the drive shaft flange bolts at the indicated intervals. A qualified technician should perform these operations.

**Engine Air Filter**

Check for damage, excessive wear and oiliness. Replace if necessary.

**Engine Coolant**

Drain and flush the cooling system and refill with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids). A qualified technician should perform this operation.

**Engine Oil and Oil Filter**

Replace the oil filter and drain and refill the engine oil at specified intervals. For recommended oil grade and viscosity, refer to your *Owner's Manual*.

**Engine Valve Clearance**

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

**Exhaust Pipes and Mountings**

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

**Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses**

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

**Fuel Tank Cap Gasket**

Visually inspect for cracks, deterioration and damage and replace if necessary.

**Nuts and Bolts on Chassis**

Re-tighten the seat mounting bolts and front/rear suspension member retaining bolts to specified torque.

**Rack and Pinion Assembly**

Inspect the rack and pinion assembly or steering gear box for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

**Road Test**

While driving the vehicle, check for proper operation of engine, transmission, brakes and steering. Also check for abnormal noise or vibration from any part of the vehicle.

**Spark Plugs**

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

**Steering Linkage and Boots**

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration,

cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

**Timing Belt**

Replace every 90,000 miles or 108 months. A qualified technician should perform this operation.

**Tire Rotation**

Tires should be rotated according to the instructions in your *Owner's Manual*. When rotating tires, check for damage and uneven wear.

**Transmission Fluid**

Check for correct fluid level and inspect each transmission component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

**Note:** On the LS 430, the transmission and transmission fluid are a completely sealed unit. Therefore, periodic checks and replacement of the transmission fluid are not required, and there is no dipstick on this transmission.

## VEHICLE IDENTIFICATION

Model \_\_\_\_\_

Body style \_\_\_\_\_

In-service date \_\_\_\_\_

Mileage at delivery \_\_\_\_\_

Selling dealership \_\_\_\_\_

Selling dealership phone number \_\_\_\_\_

Key number \_\_\_\_\_

Vehicle identification number \_\_\_\_\_



