

Regular maintenance is essential to obtaining the highest level of performance, safety and reliability from your Lexus. It can also enhance your vehicle's resale value. This section of the *Owner's Manual Supplement* is designed to help you make sure your vehicle receives proper and timely maintenance. It includes factory-recommended maintenance guidelines as well as logs in which to document your vehicle's maintenance history.

In addition to scheduled maintenance, your Lexus requires ongoing general maintenance such as fluid checks and visual inspections. These procedures are described in the "Maintenance" section of the *Owner's Manual*.

With proper maintenance and care, your vehicle will last longer and deliver more dependable, economical performance. Follow this booklet's recommendations and you'll enjoy maximum reliability and peace of mind from your Lexus for many years to come.



Maintaining your vehicle according to the recommendations in this booklet is required to ensure that your warranty coverage remains intact. You should keep detailed records of vehicle maintenance, including date of service, mileage at time of service and a description of service and/or parts installation performed. The maintenance logs in this booklet are a good place to record this information. If you sell your vehicle, be sure to give your maintenance records to the new owner.

Lexus will not deny a warranty claim solely because you do not have records to show that you maintained your vehicle. However, damage or failures caused by lack of proper maintenance are not covered under warranty.

Maintenance and repair services may be performed by you or by any automotive service provider you choose. Lexus will not deny a warranty claim solely because you used a service provider other than a Lexus dealership for maintenance and repairs. However, damage

or failures caused by improper maintenance or repairs are not covered under warranty.

Your dealer may recommend more frequent maintenance intervals or more maintenance services than those listed in the scheduled maintenance log. These additional services are not required to maintain your warranty coverage. Ask your dealer for an explanation of any recommended maintenance not included in the scheduled maintenance log.

For a complete description of Lexus warranty coverages, see pages 16–33 of this booklet.

To ensure that your vehicle receives first-quality service and factory-authorized parts, Lexus recommends having maintenance performed by an authorized Lexus dealership.

Lexus dealership technicians are experts in the maintenance and repair of Lexus vehicles. They stay current on the latest service information through Lexus technical bulletins, service publications and training courses. Many are also certified through the Lexus Commitment to Perfection Certification Program, which requires specialized, state-of-the-art training as well as rigorous exams through both Lexus and the National Institute for Automotive Service Excellence.

Additionally, when you have your vehicle serviced at a Lexus dealership, your service information is recorded in the Lexus National Service History database. This is the first database of its kind in the automotive industry. It can be accessed by any Lexus dealership in the U.S. — a great convenience if you relocate or need to have your vehicle serviced while traveling.

You can be confident you're getting the best possible service for your vehicle when you take it to a Lexus dealership. Don't trust your investment to anything less than a team of Lexus specialists.

Following the Charts

The scheduled maintenance log identifies the maintenance required at each mileage interval and corresponding time interval based on mileage of approximately 833 miles per month. If you drive more than 833 miles per month, you should obtain maintenance at the indicated mileage interval rather than the indicated time interval.

Complimentary Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be customized to your preferences. Programming of these features is performed at no charge, provided you obtain this service within 12 months of the vehicle's in-service date. (You may also have the service performed at the time of vehicle delivery.) The service requires specialized equipment and may be performed only by an authorized Lexus dealership.

To obtain your Lexus Personalized Settings, contact your Lexus dealership. The dealership may verify performance of the service in the box on the next page.

Complimentary First Scheduled Maintenance Service

Lexus also provides your first scheduled maintenance service at no charge. The service is performed at 5,000 miles or 6 months, whichever occurs first, and includes the service items listed on page 88. To obtain this complimentary scheduled maintenance service, contact your Lexus dealership.

Lexus Personalized Settings*

Must be obtained within 12 months of vehicle's in-service date.

Dealer Service Verification

In-service date: _____

Date personalized settings programmed: _____

 *This service is complimentary when performed by an authorized
 Lexus dealership.

SCHEDULED MAINTENANCE LOG

5,000 Miles or 6 Months*

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

10,000 Miles or 12 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

*This service is complimentary when performed by an authorized Lexus dealership.

15,000 Miles or 18 Months

- Replace engine oil and oil filter¹
- Inspect engine air filter³
- Inspect nuts and bolts on chassis³
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)
- Replace air conditioner filter (LX 470)
- Replace differential oil (GX 470, LX 470)²
- Replace rear differential oil (RX 330 AWD)²
- Replace transfer case oil (RX 330 AWD)²
- Re-torque drive shaft flange bolts (GX 470)
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rear differential oil (RX 330 AWD)
<input type="checkbox"/> Differential oil (GX 470, LX 470)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Transfer case oil (RX 330 AWD)
<input type="checkbox"/> Engine coolant ⁴	

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Required only if vehicle is operated primarily on dirt roads.
- ⁴ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

SCHEDULED MAINTENANCE LOG

20,000 Miles or 24 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

25,000 Miles or 30 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

30,000 Miles or 36 Months

- | | |
|--|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil and oil filter¹ <input type="checkbox"/> Lubricate front drive shaft bushings (GX 470, LX 470) <input type="checkbox"/> Measure brake pad thickness and rotor runout <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace differential oil (GX 470, LX 470)² <input type="checkbox"/> Replace rear differential oil (RX 330 AWD)² <input type="checkbox"/> Replace transfer case oil (GX 470, LX 470, RX 330 AWD)² <input type="checkbox"/> Re-torque drive shaft flange bolts (GX 470) <input type="checkbox"/> Rotate tires <input type="checkbox"/> Road-test vehicle <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Active height control system (LX 470) ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Differential oil (GX 470, LX 470) ___ Drive shaft boots ___ Engine coolant⁴ ___ Exhaust pipes and mountings | <ul style="list-style-type: none"> <input type="checkbox"/> Inspect nuts and bolts on chassis³ <input type="checkbox"/> Lubricate propeller shaft, re-torque bolts (GX 470, LX 470) <input type="checkbox"/> Repack front wheel bearings (LX 470) <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter
<ul style="list-style-type: none"> ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses ___ Fuel tank cap gasket ___ Rack and pinion assembly ___ Rear differential oil (RX 330 AWD) ___ Steering linkage and boots ___ Transfer case oil ___ Transmission fluid |
|--|--|

Dealer Service Verification

Date: _____

Mileage: _____

- 1 Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 2 Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- 3 Required only if vehicle is operated primarily on dirt roads.
- 4 Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

SCHEDULED MAINTENANCE LOG

35,000 Miles or 42 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

40,000 Miles or 48 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

45,000 Miles or 54 Months

- Replace engine oil and oil filter¹
- Inspect engine air filter³
- Inspect nuts and bolts on chassis³
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)
- Replace air conditioner filter (LX 470)
- Replace differential oil (GX 470, LX 470)²
- Replace rear differential oil (RX 330 AWD)²
- Replace transfer case oil (RX 330 AWD)²
- Re-torque drive shaft flange bolts (GX 470)
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Active height control system (LX 470)	<input type="checkbox"/> Engine coolant ⁴
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rear differential oil (RX 330 AWD)
<input type="checkbox"/> Differential oil (GX 470, LX 470)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive shaft boots	<input type="checkbox"/> Transfer case oil (RX 330 AWD)

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Required only if vehicle is operated primarily on dirt roads.
- ⁴ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

SCHEDULED MAINTENANCE LOG

50,000 Miles or 60 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___Ball joints and dust covers	___Nuts and bolts on chassis
___Drive shaft boots	___Steering linkage and boots
___Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

55,000 Miles or 66 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___Ball joints and dust covers	___Nuts and bolts on chassis
___Drive shaft boots	___Steering linkage and boots
___Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

60,000 Miles or 72 Months

- | | |
|--|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil and oil filter¹ <input type="checkbox"/> Lubricate front drive shaft bushings (GX 470, LX 470) <input type="checkbox"/> Measure brake pad thickness and rotor runout <input type="checkbox"/> Replace active height control system fluid (LX 470) <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace transmission fluid² <input type="checkbox"/> Re-torque drive shaft flange bolts (GX 470) <input type="checkbox"/> Rotate tires <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Active height control system (LX 470) ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Charcoal canister (GX 470, LX 470)⁴ ___ Differential oil (GX 470, LX 470) ___ Drive belts ___ Drive shaft boots ___ Engine coolant⁵ ___ Engine valve clearance | <ul style="list-style-type: none"> <input type="checkbox"/> Inspect nuts and bolts on chassis³ <input type="checkbox"/> Lubricate propeller shaft, re-torque bolts (GX 470, LX 470) <input type="checkbox"/> Repack front wheel bearings (LX 470) <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace differential oil (GX 470, LX 470)² <input type="checkbox"/> Replace rear differential oil (RX 330 AWD)² <input type="checkbox"/> Replace transfer case oil (GX 470, LX 470, RX 330 AWD)² <input type="checkbox"/> Road-test vehicle <ul style="list-style-type: none"> ___ Exhaust pipes and mountings ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses ___ Fuel tank cap gasket ___ Rack and pinion assembly ___ Rear differential oil (RX 330 AWD) ___ Steering linkage and boots ___ Transfer case oil ___ Transmission fluid |
|--|---|

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Required only if vehicle is operated primarily on dirt roads.
- ⁴ Required only for vehicles registered in California, Massachusetts and New York.
- ⁵ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

SCHEDULED MAINTENANCE LOG

65,000 Miles or 78 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

70,000 Miles or 84 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

75,000 Miles or 90 Months

- Replace engine oil and oil filter¹
- Inspect engine air filter³
- Inspect nuts and bolts on chassis³
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)
- Replace air conditioner filter (LX 470)
- Replace differential oil (GX 470, LX 470)²
- Replace rear differential oil (RX 330 AWD)²
- Replace transfer case oil (RX 330 AWD)²
- Re-torque drive shaft flange bolts (GX 470)
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Active height control system (LX 470)	<input type="checkbox"/> Engine coolant ⁴
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rear differential oil (RX 330 AWD)
<input type="checkbox"/> Differential oil (GX 470, LX 470)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Transfer case oil (RX 330 AWD)
<input type="checkbox"/> Drive shaft boots	

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Required only if vehicle is operated primarily on dirt roads.
- ⁴ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

SCHEDULED MAINTENANCE LOG

80,000 Miles or 96 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

85,000 Miles or 102 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

90,000 Miles or 108 Months

- | | |
|---|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil and oil filter¹ <input type="checkbox"/> Lubricate front drive shaft bushings (GX 470, LX 470) <input type="checkbox"/> Measure brake pad thickness and rotor runout <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace differential oil (GX 470, LX 470)² <input type="checkbox"/> Replace rear differential oil (RX 330 AWD)² <input type="checkbox"/> Replace transfer case oil (GX 470, LX 470, RX 330 AWD)² <input type="checkbox"/> Rotate tires <input type="checkbox"/> Road-test vehicle <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Active height control system (LX 470) ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Differential oil (GX 470, LX 470) ___ Drive belts ___ Drive shaft boots ___ Engine coolant⁴ ___ Exhaust pipes and mountings | <ul style="list-style-type: none"> <input type="checkbox"/> Inspect nuts and bolts on chassis³ <input type="checkbox"/> Lubricate propeller shaft, re-torque bolts (GX 470, LX 470) <input type="checkbox"/> Repack front wheel bearings (LX 470) <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace timing belt <input type="checkbox"/> Re-torque drive shaft flange bolts (GX 470) <ul style="list-style-type: none"> ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses ___ Fuel tank cap gasket ___ Rack and pinion assembly ___ Rear differential oil (RX 330 AWD) ___ Steering linkage and boots ___ Transfer case oil ___ Transmission fluid |
|---|---|

Dealer Service Verification

Date: _____

Mileage: _____

- 1 Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 2 Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- 3 Required only if vehicle is operated primarily on dirt roads.
- 4 Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).

SCHEDULED MAINTENANCE LOG

95,000 Miles or 114 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

100,000 Miles or 120 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Replace engine coolant³
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

105,000 Miles or 126 Months

- Replace engine oil and oil filter¹
- Inspect engine air filter⁴
- Inspect nuts and bolts on chassis⁴
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)
- Replace air conditioner filter (LX 470)
- Replace differential oil (GX 470, LX 470)²
- Replace rear differential oil (RX 330 AWD)²
- Replace transfer case oil (RX 330 AWD)²
- Re-torque drive shaft flange bolts (GX 470)
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Active height control system (LX 470)	<input type="checkbox"/> Drive shaft boots
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rear differential oil (RX 330 AWD)
<input type="checkbox"/> Differential oil (GX 470, LX 470)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Transfer case oil (RX 330 AWD)

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- ⁴ Required only if vehicle is operated primarily on dirt roads.

SCHEDULED MAINTENANCE LOG

110,000 Miles or 132 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

115,000 Miles or 138 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Inspect engine coolant³
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

120,000 Miles or 144 Months

- | | |
|---|---|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil and oil filter¹ <input type="checkbox"/> Lubricate front drive shaft bushings (GX 470, LX 470) <input type="checkbox"/> Measure brake pad thickness and rotor runout <input type="checkbox"/> Replace active height control system fluid (LX 470) <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace transfer case oil (GX 470, LX 470, RX 330 AWD)² <input type="checkbox"/> Re-torque drive shaft flange bolts (GX 470) <input type="checkbox"/> Rotate tires <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Active height control system (LX 470) ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Charcoal canister (GX 470, LX 470)⁶ ___ Differential oil (GX 470, LX 470) ___ Drive belts ___ Drive shaft boots ___ Engine valve clearance ___ Exhaust pipes and mountings | <ul style="list-style-type: none"> <input type="checkbox"/> Inspect nuts and bolts on chassis⁴ <input type="checkbox"/> Lubricate propeller shaft, re-torque bolts (GX 470, LX 470) <input type="checkbox"/> Repack front wheel bearings (LX 470) <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace differential oil (GX 470, LX 470)² <input type="checkbox"/> Replace rear differential oil (RX 330 AWD)² <input type="checkbox"/> Replace spark plugs⁵ <input type="checkbox"/> Replace transmission fluid² <input type="checkbox"/> Road-test vehicle ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses ___ Fuel tank cap gasket ___ Rack and pinion assembly ___ Rear differential oil (RX 330 AWD) ___ Steering linkage and boots ___ Transfer case oil ___ Transmission fluid |
|---|---|

Dealer Service Verification

Date: _____

Mileage: _____

- 1 Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 2 Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- 3 Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- 4 Required only if vehicle is operated primarily on dirt roads.
- 5 Required under the terms of the Emission Control Warranty.
- 6 Required only for vehicles registered in California, Massachusetts and New York.

SCHEDULED MAINTENANCE LOG

125,000 Miles or 150 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

130,000 Miles or 156 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Inspect engine coolant³
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

135,000 Miles or 162 Months

- Replace engine oil and oil filter¹
- Inspect engine air filter⁴
- Inspect nuts and bolts on chassis⁴
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)
- Replace air conditioner filter (LX 470)
- Replace differential oil (GX 470, LX 470)²
- Replace rear differential oil (RX 330 AWD)²
- Replace transfer case oil (RX 330 AWD)²
- Re-torque drive shaft flange bolts (GX 470)
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:

<input type="checkbox"/> Active height control system (LX 470)	<input type="checkbox"/> Drive shaft boots
<input type="checkbox"/> Ball joints and dust covers	<input type="checkbox"/> Exhaust pipes and mountings
<input type="checkbox"/> Body	<input type="checkbox"/> Rack and pinion assembly
<input type="checkbox"/> Brake lines and hoses	<input type="checkbox"/> Rear differential oil (RX 330 AWD)
<input type="checkbox"/> Differential oil (GX 470, LX 470)	<input type="checkbox"/> Steering linkage and boots
<input type="checkbox"/> Drive belts	<input type="checkbox"/> Transfer case oil (RX 330 AWD)

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- ⁴ Required only if vehicle is operated primarily on dirt roads.

SCHEDULED MAINTENANCE LOG

140,000 Miles or 168 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Replace air conditioner filter (GX 470)
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

145,000 Miles or 174 Months

- Replace engine oil and oil filter¹
- Clean air conditioner filter (LX 470)
- Inspect engine coolant³
- Lubricate propeller shaft, re-torque bolts (GX 470, LX 470)²
- Re-torque drive shaft flange bolts (GX 470)²
- Rotate tires
- Visually inspect brake pads/discs
- Road-test vehicle
- Inspect the following:²

___ Ball joints and dust covers	___ Nuts and bolts on chassis
___ Drive shaft boots	___ Steering linkage and boots
___ Engine air filter	

Dealer Service Verification

Date: _____

Mileage: _____

150,000 Miles or 180 Months

- | | |
|---|--|
| <ul style="list-style-type: none"> <input type="checkbox"/> Replace engine oil and oil filter¹ <input type="checkbox"/> Lubricate front drive shaft bushings (GX 470, LX 470) <input type="checkbox"/> Measure brake pad thickness and rotor runout <input type="checkbox"/> Replace air conditioner filter <input type="checkbox"/> Replace differential oil (GX 470, LX 470)² <input type="checkbox"/> Replace engine coolant³ <input type="checkbox"/> Replace transfer case oil (GX 470, LX 470, RX 330 AWD)² <input type="checkbox"/> Rotate tires <input type="checkbox"/> Road-test vehicle <input type="checkbox"/> Inspect the following: <ul style="list-style-type: none"> ___ Active height control system (LX 470) ___ Ball joints and dust covers ___ Body ___ Brake lines and hoses ___ Differential oil (GX 470, LX 470) ___ Drive belts ___ Drive shaft boots ___ Exhaust pipes and mountings | <ul style="list-style-type: none"> <input type="checkbox"/> Inspect nuts and bolts on chassis⁴ <input type="checkbox"/> Lubricate propeller shaft, re-torque bolts (GX 470, LX 470) <input type="checkbox"/> Repack front wheel bearings (LX 470) <input type="checkbox"/> Replace brake fluid <input type="checkbox"/> Replace engine air filter <input type="checkbox"/> Replace rear differential oil (RX 330 AWD)² <input type="checkbox"/> Re-torque drive shaft flange bolts (GX 470) |
|---|--|

Dealer Service Verification

Date: _____

Mileage: _____

- ¹ Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- ² Required only if vehicle is operated primarily in desert, on dirt roads or while towing.
- ³ Replace only with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids).
- ⁴ Required only if vehicle is operated primarily on dirt roads.

EXPLANATION OF MAINTENANCE ITEMS

The following descriptions are provided to give you a better understanding of the maintenance services that should be performed on your vehicle. The scheduled maintenance log indicates at which mileage/time intervals each service should be performed. Please note that many maintenance services should be performed only by a qualified technician.

For further information on maintenance services that you can perform yourself, see the “Service Procedures and Specifications” section of your *Owner’s Manual*.

Active Height Control System

Inspect the lines, accumulators and pump and replace the system fluid when specified. For recommended fluid, refer to your *Owner’s Manual*.

Air Conditioner Filter

Replace as directed at the maintenance interval you choose. Refer to your *Owner’s Manual* for service details.

Ball Joints and Dust Covers

Check the suspension and steering linkage ball joints for looseness and damage. Check all dust covers for deterioration and damage. A qualified technician should perform these inspections.

Body Inspection

Visually check for corrosion, scratches and other damage. Check outer body panels, inner panels of the hood and doors, and underneath the vehicle. Apply touch-up paint to any chips and scratches or have them repaired by a qualified technician.

Brake Fluid

Replace using fluid type specified in your *Owner's Manual*. A qualified technician should perform this operation.

Brake Lines and Hoses

Visually inspect for proper installation. Check for chafing, cracks, deterioration and signs of leakage. Replace any deteriorated or damaged parts. A qualified technician should perform these operations.

Brake Linings/Drums and Brake Pads/Discs

Check the parking brake linings (shoes) and drums for scoring, burning, fluid leakage, broken parts and excessive wear. Check brake pads for excessive wear and brake discs for runout, excessive wear and fluid leakage. A qualified technician should perform these inspections.

Charcoal Canister

Check for internal damage and clogging. If necessary, clean with compressed air or replace. A qualified technician should perform these operations.

Differential Oil

Check for correct oil level and inspect each differential component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Drive Belts

Inspect for cracks, excessive wear and oiliness. Check the belt tension and adjust if necessary. Replace the belts if they are damaged.

Drive Shaft Boots

Check the drive shaft boots and clamps for cracks, deterioration and damage. Replace any damaged parts and, if necessary, repack the grease. Re-torque the drive shaft flange bolts at the indicated intervals. A qualified technician should perform these operations.

Engine Air Filter

Check for damage, excessive wear and oiliness. Replace if necessary.

Engine Coolant

Drain and flush the cooling system and refill with Genuine Toyota Super Long-Life Coolant or similar high-quality non-silicate, non-amine, non-borate ethylene-glycol coolant with long-life hybrid organic acid technology (i.e., a combination of low phosphates and organic acids). A qualified technician should perform this operation.

Engine Oil and Oil Filter

Replace the oil filter and drain and refill the engine oil at specified intervals. For recommended oil grade and viscosity, refer to your *Owner's Manual*.

Engine Valve Clearance

Inspect for excessive lifter noise and engine vibration and adjust if necessary. A qualified technician should perform this operation.

Exhaust Pipes and Mountings

Visually inspect the exhaust pipes, muffler and hangers for cracks, deterioration and damage. Start the engine and listen carefully for any exhaust gas leakage. Tighten connections or replace parts as necessary.

Fuel Lines and Connections, Fuel Tank Band and Fuel Tank Vapor Vent System Hoses

Visually inspect for corrosion, damage, cracks and loose or leaking connections. Tighten connections or replace parts as necessary.

Fuel Tank Cap Gasket

Visually inspect for cracks, deterioration and damage and replace if necessary.

Nuts and Bolts on Chassis

Re-tighten the seat mounting bolts and front/rear suspension member retaining bolts to specified torque.

Propeller Shaft

Lubricate the propeller shaft spiders and slide yokes with lithium-base chassis grease and the double cardan joint with molybdenum-disulfide lithium-base chassis grease, and re-torque the flange bolts. Only a qualified technician should re-torque the flange bolts. If vehicle is submerged, lubricate within 24 hours, regardless of maintenance interval.

Rack and Pinion Assembly

Inspect the rack and pinion assembly or steering gear box for signs of leakage. If you discover any leakage, have it repaired immediately by a qualified technician.

Road Test

While driving the vehicle, check for proper operation of engine, transmission, brakes and steering. Also check for abnormal noise or vibration from any part of the vehicle.

Spark Plugs

Install new plugs of the same type as originally equipped. A qualified technician should perform this operation.

Steering Linkage and Boots

With the vehicle stopped, check for excessive freeplay in the steering wheel. Inspect the linkage for bending and damage and the dust boots for deterioration, cracks and damage. Replace any damaged parts. A qualified technician should perform these operations.

Timing Belt

Replace every 90,000 miles or 108 months. A qualified technician should perform this operation.

Tire Rotation

Tires should be rotated according to the instructions in your *Owner's Manual*. When rotating tires, check for damage and uneven wear.

Transfer Case Oil

Check for correct oil level and inspect each component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately. For correct oil, refer to your *Owner's Manual*.

Transmission Fluid

Check for correct fluid level and inspect each transmission component for signs of leakage. If you discover any leakage, have it repaired by a qualified technician immediately.

Wheel Bearing and Drive Shaft Bushing Grease

Repack the wheel bearings with wheel bearing grease and the front drive shaft bushings with molybdenum-disulfide lithium-base chassis grease. A qualified technician should perform these operations.

VEHICLE IDENTIFICATION

Model _____

Body style _____

In-service date _____

Mileage at delivery _____

Selling dealership _____

Selling dealership phone number _____

Key number _____

Vehicle identification number _____

