

2006 4Runner 5,000 Miles - 6 Months

- q Clean cabin air filter
- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 10,000 Miles - 12 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 15,000 Miles - 18 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁵
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 5) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 20,000 Miles - 24 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 25,000 Miles - 30 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 30,000 Miles - 36 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace limited-slip differential oil, if equipped
- q Replace spark plugs⁶
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁷
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁸
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 6) Applies to 4Runner with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 7) Inspect thickness measurement and disc runout.
- 8) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 35,000 Miles - 42 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 40,000 Miles - 48 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 45,000 Miles - 54 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁵
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the "fresh" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 5) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 50,000 Miles - 60 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 55,000 Miles - 66 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 60,000 Miles - 72 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace spark plugs⁶
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁷
 - ___ Charcoal canister⁸
 - ___ Drive belts⁹
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant¹⁰
 - ___ Engine valve clearance
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace automatic transmission fluid
- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 6) Applies to 4Runner with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 7) Inspect thickness measurement and disc runout.
- 8) Applies to 4Runner with 2UZ-FE. Required only for vehicles in California, Massachusetts and New York.
- 9) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.
- 10) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 65,000 Miles - 78 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 70,000 Miles - 84 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 75,000 Miles - 90 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁵
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the ""fresh"" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 5) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 80,000 Miles - 96 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 85,000 Miles - 102 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 90,000 Miles - 108 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace spark plugs⁶
- q Replace timing belt⁷
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Inspect the following:
 - ___ Automatic transmission fluid
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Brake linings/drums and brake pads/discs⁸
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁹
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - ___ Fuel tank cap gasket
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots
 - ___ Transfer case oil (4WD)

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 6) Applies to 4Runner with 1GR-FE. Required under the terms of the Emission Control Warranty.
- 7) Applies to 4Runner with 2UZ-FE.
- 8) Inspect thickness measurement and disc runout.
- 9) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 95,000 Miles - 114 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 100,000 Miles - 120 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Replace engine coolant⁵
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

5) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 105,000 Miles - 126 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
 - ___ Ball joints and dust covers
 - ___ Brake lines and hoses
 - ___ Drive belts
 - ___ Drive shaft boots (4WD)
 - ___ Engine coolant⁶
 - ___ Exhaust pipes and mountings
 - ___ Front differential oil (4WD)
 - ___ Radiator core and condenser
 - ___ Rear differential oil
 - ___ Steering gear box
 - ___ Steering linkage and boots

Note: Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced air flow from the air conditioner and heater or if the windows fog easily when you use the ""fresh"" mode. Consult your dealer if any of these conditions occur.

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

6) See Maintenance Definitions (Engine Coolant) for details.

2006 4Runner 110,000 Miles - 132 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 115,000 Miles - 138 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

Additional Maintenance Items for Special Operating Conditions:

Driving on Salt-Covered Roads

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt

Driving While Towing

- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots (4WD)
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Lubricate propeller shaft (4WD)
- q Re-torque propeller shaft bolt
- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

2006 4Runner 120,000 Miles - 144 Months

- q Replace engine oil and oil filter¹
- q Rotate tires
- q Lubricate propeller shaft (4WD)
- q Replace spark plugs⁶
- q Re-torque propeller shaft bolt
- q Replace engine air filter
- q Replace cabin air filter (if equipped)
- q Inspect the following:
 - __ Automatic transmission fluid
 - __ Ball joints and dust covers
 - __ Brake lines and hoses
 - __ Brake linings/drums and brake pads/discs⁷
 - __ Charcoal canister⁸
 - __ Drive belts
 - __ Drive shaft boots (4WD)
 - __ Engine coolant⁹
 - __ Engine valve clearance
 - __ Exhaust pipes and mountings
 - __ Front differential oil (4WD)
 - __ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
 - __ Fuel tank cap gasket
 - __ Radiator core and condenser
 - __ Rear differential oil
 - __ Steering gear box
 - __ Steering linkage and boots
 - __ Transfer case oil (4WD)

Additional Maintenance Items for Special Operating Conditions:

Driving While Towing

- q Replace automatic transmission fluid
- q Replace front differential oil (4WD)
- q Replace rear differential oil, including limited-slip
- q Replace transfer case oil (4WD)
- q Tighten nuts and bolts on chassis

Driving in Desert or On Dirt Roads

- q Tighten nuts and bolts on chassis

Applicable Footnotes:

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 6) Required under the terms of the Emission Control Warranty.
- 7) Inspect thickness measurement and disc runout.
- 8) Applies to 4Runner with 2UZ-FE. Inspect at 60,000 miles or 72 months, whichever comes first. Required only for vehicles in California, Massachusetts and New York.
- 9) See Maintenance Definitions (Engine Coolant) for details.