

## 2006 Avalon 5,000 Miles - 6 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 10,000 Miles - 12 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 15,000 Miles - 18 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) See page 21 for details.

## 2006 Avalon 20,000 Miles - 24 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 25,000 Miles - 30 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 30,000 Miles - 36 Months

- Q Replace engine oil and oil filter<sup>1</sup>
- Q Rotate tires
- Q Replace cabin air filter
- Q Replace engine air filter
- Q Inspect the following:
  - Ball joints and dust covers
  - Brake lines and hoses
  - Brake linings/drums and brake pads/discs<sup>3</sup>
  - Drive shaft boots
  - Engine coolant<sup>4</sup>
  - Exhaust pipes and mountings
  - Front differential oil
  - Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - Fuel tank cap gasket
  - Radiator core and condenser
  - Steering gear box
  - Steering linkage and boots
  - Transmission fluid

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Inspect thickness measurement and disc runout.
- 4) See page 21 for details.

## 2006 Avalon 35,000 Miles - 42 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 40,000 Miles - 48 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 45,000 Miles - 54 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Clean cabin air filter
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) See page 21 for details.

## 2006 Avalon 50,000 Miles - 60 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 55,000 Miles - 66 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 60,000 Miles - 72 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>3</sup>
  - \_\_\_ Drive belts<sup>4</sup>
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>5</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Replace front differential oil
- Replace transmission fluid
- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Inspect thickness measurement and disc runout.
- 4) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.
- 5) See page 21 for details.

## 2006 Avalon 65,000 Miles - 78 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 70,000 Miles - 84 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 75,000 Miles - 90 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine coolant<sup>3</sup>
  - \_\_ Exhaust pipes and mountings
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) See page 21 for details.

## 2006 Avalon 80,000 Miles - 96 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 85,000 Miles - 102 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 90,000 Miles - 108 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>3</sup>
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>4</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.
- 3) Inspect thickness measurement and disc runout.
- 4) See page 21 for details.

## 2006 Avalon 95,000 Miles - 114 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 100,000 Miles - 120 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Replace engine coolant<sup>3</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

3) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance Definitions (Engine Coolant) for details.

## 2006 Avalon 105,000 Miles - 126 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Clean cabin air filter
- q Visually inspect brake linings/drums and brake pads/discs
- q Inspect the following:
  - \_\_ Ball joints and dust covers
  - \_\_ Brake lines and hoses
  - \_\_ Drive belts
  - \_\_ Drive shaft boots
  - \_\_ Engine coolant<sup>4</sup>
  - \_\_ Exhaust pipes and mountings
  - \_\_ Steering gear box
  - \_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect engine air filter
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

4) See page 21 for details.

## 2006 Avalon 110,000 Miles - 132 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 115,000 Miles - 138 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Visually inspect brake linings/drums and brake pads/discs

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Inspect ball joints and dust covers
- q Inspect drive shaft boots
- q Inspect engine air filter
- q Inspect steering linkage and boots
- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil.

## 2006 Avalon 120,000 Miles - 144 Months

- q Replace engine oil and oil filter<sup>1</sup>
- q Rotate tires
- q Replace cabin air filter
- q Replace engine air filter
- q Replace spark plugs<sup>3</sup>
- q Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine coolant<sup>5</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Front differential oil
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator core and condenser
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots
  - \_\_\_ Transmission fluid

### **Additional Maintenance Items for Special Operating Conditions:**

#### **Driving While Towing**

- q Replace front differential oil
- q Replace transmission fluid
- q Tighten nuts and bolts on chassis

#### **Driving in Desert or On Dirt Roads**

- q Tighten nuts and bolts on chassis

### **Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) Required under the terms of the Emission Control Warranty.
- 4) Inspect thickness measurement and disc runout.
- 5) See page 21 for details.